

30134000000

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77

Rotary Lawn Mower Exploded View Diagram

The diagram illustrates the assembly of a rotary lawn mower, showing the main body, engine, deck, wheels, and various adjustment components. Key parts include:

- Main Body (52):** The central housing for the mower.
- Engine (26):** The power source, featuring a flywheel and various internal components.
- Deck (40):** The cutting platform, shown with a grass collection bag (50) attached.
- Wheels (37, 49):** The main wheels, including the front wheel (37) and rear wheels (49).
- Adjustment Components:** Various levers, pins, and bolts (e.g., 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77) used for adjusting the cutting height and other functions.
- Accessories:** A grass collection bag (50) and a side panel (31).

DESCRIPTION
Housing Assembly (Includes Key Number 46)
Hex Head Screw
3/8-24 x 1-3/8 Grade 8
Helical Lockwasher
Hardened Washer
21" Blade
Blade Adapter
Spring, Hinge
Engine, Briggs & Stratton, Model Number 10T502

Locknut, Hex, Flanged
 Locknut, Hex 1/4-20
 Washer, Flat
 O-Ring
 Clip, Cable
 Washer, Curved
 Washer, Special, Engine
 Kit, Rear Baffle
 (Includes 3 Screws)
 Baffle, Rear
 Screw, Rear Baffle
 Warning Decal (not shown)
 Operator's Manual, English
 Operator's Manual, Spanish
 Repair Parts Manual

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm.

IMPORTANT: Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.