



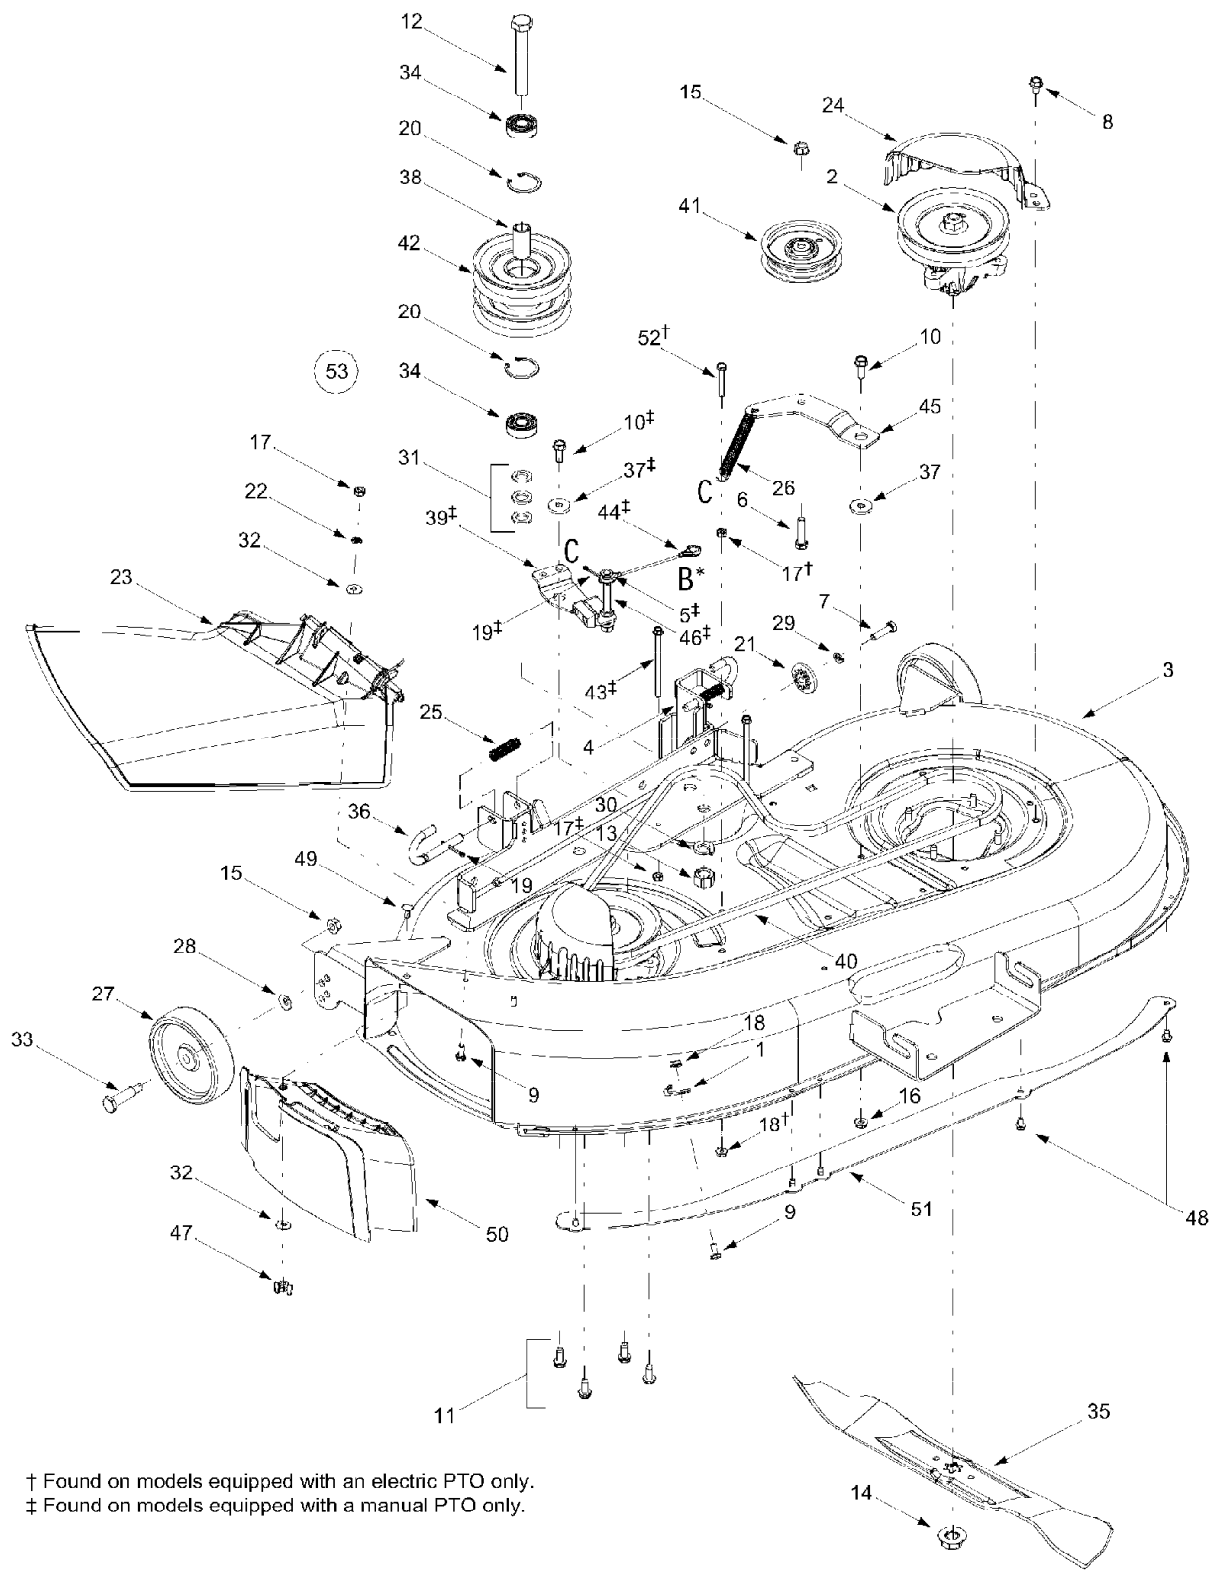


Ref #	Part Number	Qty	Description
1	16606		Retainer Hook
2	618-0565		Spindle Assembly, 5.75 Dia.
	756-0980		Pulley Only
3	683-0198D		42-inch Deck Shell
4	683-0254		Deck Adjustment Bracket w/ Weld Nut
5	736-0140		Flat Washer, .385 x .62 x .063
6	710-0520		Hex Cap Screw, 1/4-20 x 1.5
7	710-0528		Hex Cap Screw, 5/16-18 x 1.25
8	710-0604A		Self-tapping Screw, 5/16-18 x .625
9	710-0751		Hex Cap Screw, 1/4-20 x .62
10	710-1238		Hex Head Washer Screw, 5/16-18 x .875
11	710-1260A		Self-tapping Screw, 5/16-18 x .75
12	710-3151		Hex Cap Screw, 5/8-18 x .875
13	712-0337		Hex Nut, 5/8-18
14	712-0417A		Hex Flange Nut, 5/8-18
15	712-0431		Flange Lock Nut, 3/8-16
16	712-3004A		Flange Lock Nut, 5/16-18
17	712-3006		Hex Nut, 1/4-20
18	712-3027		Hex Flange Lock Nut, 1/4-20
19	714-0470		Cotter Pin, 1/8 x 1.25
20	716-3020		Internal Snap Ring
21	717-1553A		Deck Adjustment Gear
22	726-0233		Push Nut, .25 x .5
23	731-1032B		Side Discharge Chute Assembly
24	731-2486		Belt Cover
25	732-0306		Compression Spring, .406 x .531 x 1.75
26	732-0470A		Extension Spring, .50 x 4.74
27	734-0973		Deck Wheel, 5 x 1.38
28	736-0105		Bell Washer, .401 x .87 x .063
29	736-0119		Lock Washer, 5/16
30	736-0158		Lock Washer, 5/8
31	736-0162		Flat Washer, .64 x 1.0 x .12
32	736-0270		Bell Washer, .265 x .75 x .062
33	738-0373		Shoulder Screw, .498 x 1.53
34	741-0524		Bearing, .625 x 1.574 x .470
35	742-0616		Three-in-one Blade, Star Center, 21.23"
36	747-1116		Deck Release Pin
37	748-0331		Shoulder Spacer, .625 x .324
38	750-0932A		Spacer, .635 x .88 x 1.72
39	683-0440		Deck Brake Assembly
40	754-0498		Deck Belt
41	756-0627B		Idler Pulley, 3.5
42	756-1202		Double Pulley, 5.0
43	710-1830		Self-tapping Screw, 1/4-20 x 4.0
44	746-0970		Brake Cable, 5.05
45	783-1291		Idler Bracket
46	711-1534		Pin, 3/8-16, 3/8 x 3.27
47	712-3087		Wing Nut, 1/4-20
48	710-0599		Self-tapping Screw, 1/4-20 x .5
49	710-0134		Carriage Screw, , 1/4-20 x .62
50	731-2363		Mulch Plug
51	783-1146A		Deck Skirt
52	710-0136		Hex Cap Screw, 1/4-20 x 1.75
53	753-0894		Deck Assembly Complete, Manual PTO (w/o Mulch Kit)
	753-0896		Deck Assembly Complete, Electric PTO (w/o Mulch Kit)

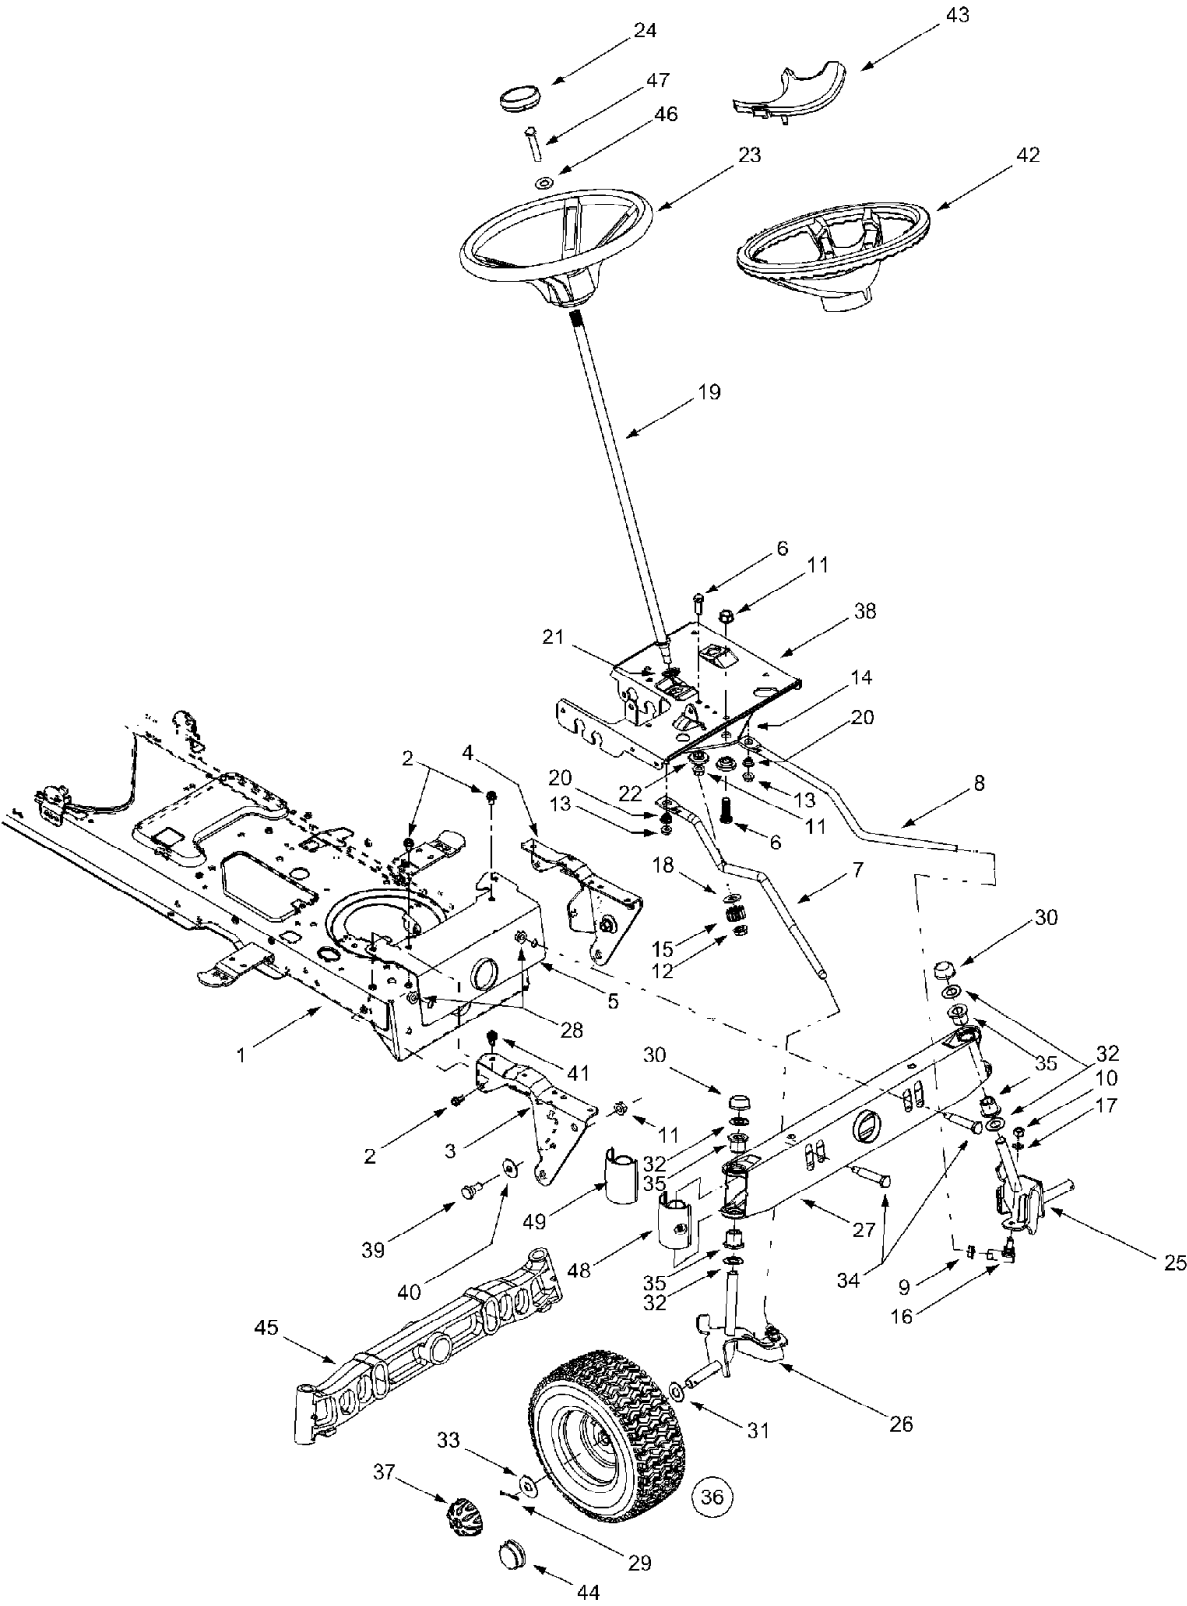


Ref #	Part Number	Qty	Description
1	683-0304		Lower Frame Assembly
2	710-0604A		Self-tapping Screw, 16-18 x .625
3	783-0726A		RH Pivot Support Bracket
4	783-0727		LH Pivot Support Bracket
5	783-0728		Pivot Bar Bracket
6	710-0723		Hex Cap Screw, 3/8-16 x 1.25 (Grade 5)
7	711-1408		RH Drag Link
8	711-1409A		LH Drag Link
9	712-0240		Jam Nut, 7/16-20 (Grade 2)
10	712-0241		Hex Nut, 3/8-24 (Grade 2)
11	712-0431		Flange Lock Nut, 3/8-16
12	712-0459		Flange Lock Nut, 7/16-20
13	712-3004A		Flange Lock Nut, 5/16-18
14	717-1550D		Steering Gear, 11/90 Ratio
15	717-1554		Steering Pinion Gear
16	723-0448A		Ball Joint, 7/16-20
17	736-0169		Lock Washer, 3/8
18	736-3084		Flat Washer, .51 x 1.12 x .06
19	738-1001A		Steering Shaft, .625 OD x 24.4
20	741-0475		Plastic Bushing, .38 ID
21	741-0656		Hex Flange Bearing, 5/8
22	738-0372B		Shoulder Spacer, .38 ID
23	631-0027		Standard Steering Wheel, 13.25
24	731-0220		Steering Wheel Cap, Round
25	638-0019		LH Axle Assembly, .625 Diameter
25	638-0021		LH Axle Assembly, .625/.750 Diameter
26	638-0020		RH Axle Assembly, .625 Diameter
26	638-0022		RH Axle Assembly, .625/.750 Diameter
27	683-0128A		Steel Pivot Bar
28	712-0431		Flange Lock Nut, 3/8-16
29	714-0470		Cotter Pin
30	726-0214		Push Cap, .625 Dia.
30	726-0341		Push Cap, .750 Dia.
31	736-0162		Flat Washer, .64 x 1.0 x .12
32	736-0187		Flat Washer, .64 x 1.24 x .06
32	736-0316		Flat Washer, .78 x 1.589 x .06
33	736-0285		Flat Washer, .635 x 1.589 x .06
34	738-1011		Shoulder Screw, .5 x 2.2, 3/8-16
35	741-0659		Flange Bearing, .632 ID x .937 OD
35	741-0660		Flange Bearing, .76 ID x .937 OD
36	634-0105A		Wheel Assembly, 15 x 6 x 6 Square Shoulder
36	634-0056A		Wheel Assembly, 15 x 6 x 6 Round Shoulder
36	634-0172		Rim Assembly Only
36	734-0255		Air Valve
36	734-1731		Tire Only, Square Shoulder
36	734-0864		Tire Only, Round Shoulder
37	731-2290A		Deluxe Hub Cap
38	783-0653E		Steering Support Bracket
39	738-0143		Shoulder Screw, 3/8-16
40	736-0331		Bell Washer, .39 x 1.13 x .062
41	710-1260A		Self-tapping Screw, 5/16-18 x .75
42	731-1869		Deluxe Steering Wheel
43	731-1904		Steering Wheel Cap, w/ Icon
44	731-0484A		Standard Hub Cap
45	719-0399B		Cast Iron Pivot Bar
45	719-0525B		Cast Iron Pivot Bar
46	736-0242		Bell Washer, .34 x .872
47	710-0643		Hex Bolt, 5/16-18 X 1
48	731-1291A		Pivot Bar End Cap w/ Fitting
49	731-1649		Pivot Bar End Cap w/o Fitting

Ref #	Part Number	Qty	Description
49	731-1649		Pivot Bar End Cap w/o Fitting

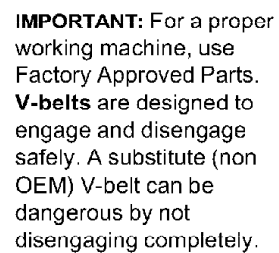


Ref #	Part Number	Qty	Description
1	783-1015		Shift Lever Support
2	17840		Transaxle Mounting Bracket
3	618-0551		Single-speed Transmission Assembly
4	631-0009A		Shifter Knob
5	647-0045		Shift Lever
6	656-0048		Variable-speed Pulley Assembly
7	656-0051A		Transmission Pulley, 8.5 x .5-36
8	683-0251		Double-idler Bracket
9	710-0176		Hex Cap Screw, 5/16-18 x 2.75
10	710-0227		Self-tapping Screw, #8-18 x .5
11	710-0347		Hex Cap Screw, 3/8-16 x 1.75
12	736-0272		Flat Washer, .51 x 1.0 x .060
13	710-0604A		Self-tapping Screw, 5/16-18 x .625
14	710-0642		Self-tapping Screw, 1/4-20 x .75
15	710-3011		Hex Cap Screw, 3/8-16 x 2.25
16	711-0677		Ferrule, 5/16-18
17	712-0241		Hex Nut, 3/8-24
18	712-0378		Hex Nut, 7/16-20
19	712-0431		Flange Lock Nut, 3/8-16
20	712-3017		Hex Nut, 3/8-16
21	712-3004A		Flange Lock Nut, 5/16-18
22	712-3008		Jam Nut, 3/8-16
23	714-0111		Cotter Pin
24	714-0149B		Internal Cotter Pin
25	723-3018		Ball Joint
26	725-1644		Short Spring Switch
27	726-0320		Insulator Nut Plate
28	732-0384		Extension Spring, .62 Dia. x 6.12
29	732-0525		Compression Spring Clip
30	732-0716		Extension Spring, .59 OD x 4
31	732-0963		Extension Spring, .50 Dia. x 6.37
32	736-0105		Bell Washer, .401 x .87 x .063
33	736-0140		Flat Washer, .385 x .62 x .063
34	736-0169		Lock Washer, 3/8
35	736-3008		Flat Washer, .344 x .750 x .120
36	736-0407		Bell Washer, .45 x 1.0 x .602
37	736-3010		Flat Washer, .407 x .812 x .135
38	738-0322		Shoulder Screw, .625 x .217
39	747-1122		Brake Rod
40	747-1123A		Belt Guard
41	747-1127		Idler Adjustment Rod, 3/8
42	747-1285		Shift Rod
43	711-0736		Adjustment Ferrule, 1/4-20 x 1.0
44	738-0372A		Shoulder Spacer, .38 ID
45	754-0467		Lower Drive Belt
46	754-0468		Upper Drive Belt
47	756-0981A		Flat Idler, 2.75 OD
48	783-1016B		Speed Control Rod Bracket
49	783-0667B		Transmission Torque Bracket
50	783-0669		Idler Bracket
51	736-0430		Flat Washer, .350 x 1.59 x .062
52	647-0031		Brake Control Assembly
53	647-0032		Speed Control Assembly
54	683-0266		Drive Pedal Assembly
55	714-0470		Cotter Pin, 1/8 x 1.25
56	711-0736		Ferrule, 1/4-20
57	711-1363		Pin, 3/8-16 x 2.43
58	714-0104		Cotter Pin
59	732-0437		Compression Spring, .34 OD x 1.0
60	732-0955		Extension Spring, .50 OD x 1.41


Ref #	Part Number	Qty	Description
60	732-0955		Extension Spring, .50 OD x 1.41
61	735-0662		Drive Pedal Pad
62	735-3049		Brake Pedal Pad
63	736-0142		Flat Washer, .281 x .5 x .063
64	736-0187		Flat Washer, .64 x 1.24 x .06
65	736-0204		Flat Washer, .344 x .062 x .03
66	738-0155		Shoulder Screw, .437 x 1.62
67	738-0507B		Shoulder Screw, .5 x .434
68	741-0225		Hex Flange Bearing
69	741-3065A		Split Hex Flange Bearing
70	747-1137		Cruise Control Rod
71	747-1138		Brake Lock Control Rod
72	748-0413		Cruise Latch
73	736-0275		Flat Washer, .344 x .688 x .065
74	783-0653E		Steering Support Bracket
75	783-0732		Drive Lockout Bracket
76	783-0773		Brake Pedal
77	710-1260A		Self-tapping Screw, 5/16-18 x .75
78	683-0304		Lower Frame Assembly
79	783-1031A		Hitch Plate
80	736-0242		Bell Washer, .34 x .872
81	710-0627		Hex Cap Screw, 5/16-24 x .75
82	634-0177		Wheel Assembly Complete 20 x 10 x 8 Square Shoulder
82	634-0104		Wheel Assembly Complete 20 x 8 x 8 Square Shoulder
82	734-1675		Wheel Assembly Complete 20 x 8 x 8 Round Shoulder
82	634-0070		Rim Assembly Only
82	734-0255		Air Valve
82	734-1873		Tire Only, 20 x 10 x 8, Square Shoulder
82	734-1730		Tire Only, 20 x 8 x 8, Square Shoulder
82	734-1596		Tire Only, 20 x 8 x 8, Round Shoulder
83	731-2290A		Deluxe Hub Cap
84	710-0809		Self-tapping Screw, 1/4-20 x 1.25
85	750-0566A		Spacer
86	710-0650		Self-tapping Screw, 5/16-18 x .875
88	710-0604A		Self Tapping Screw, 5/16-18 x .625

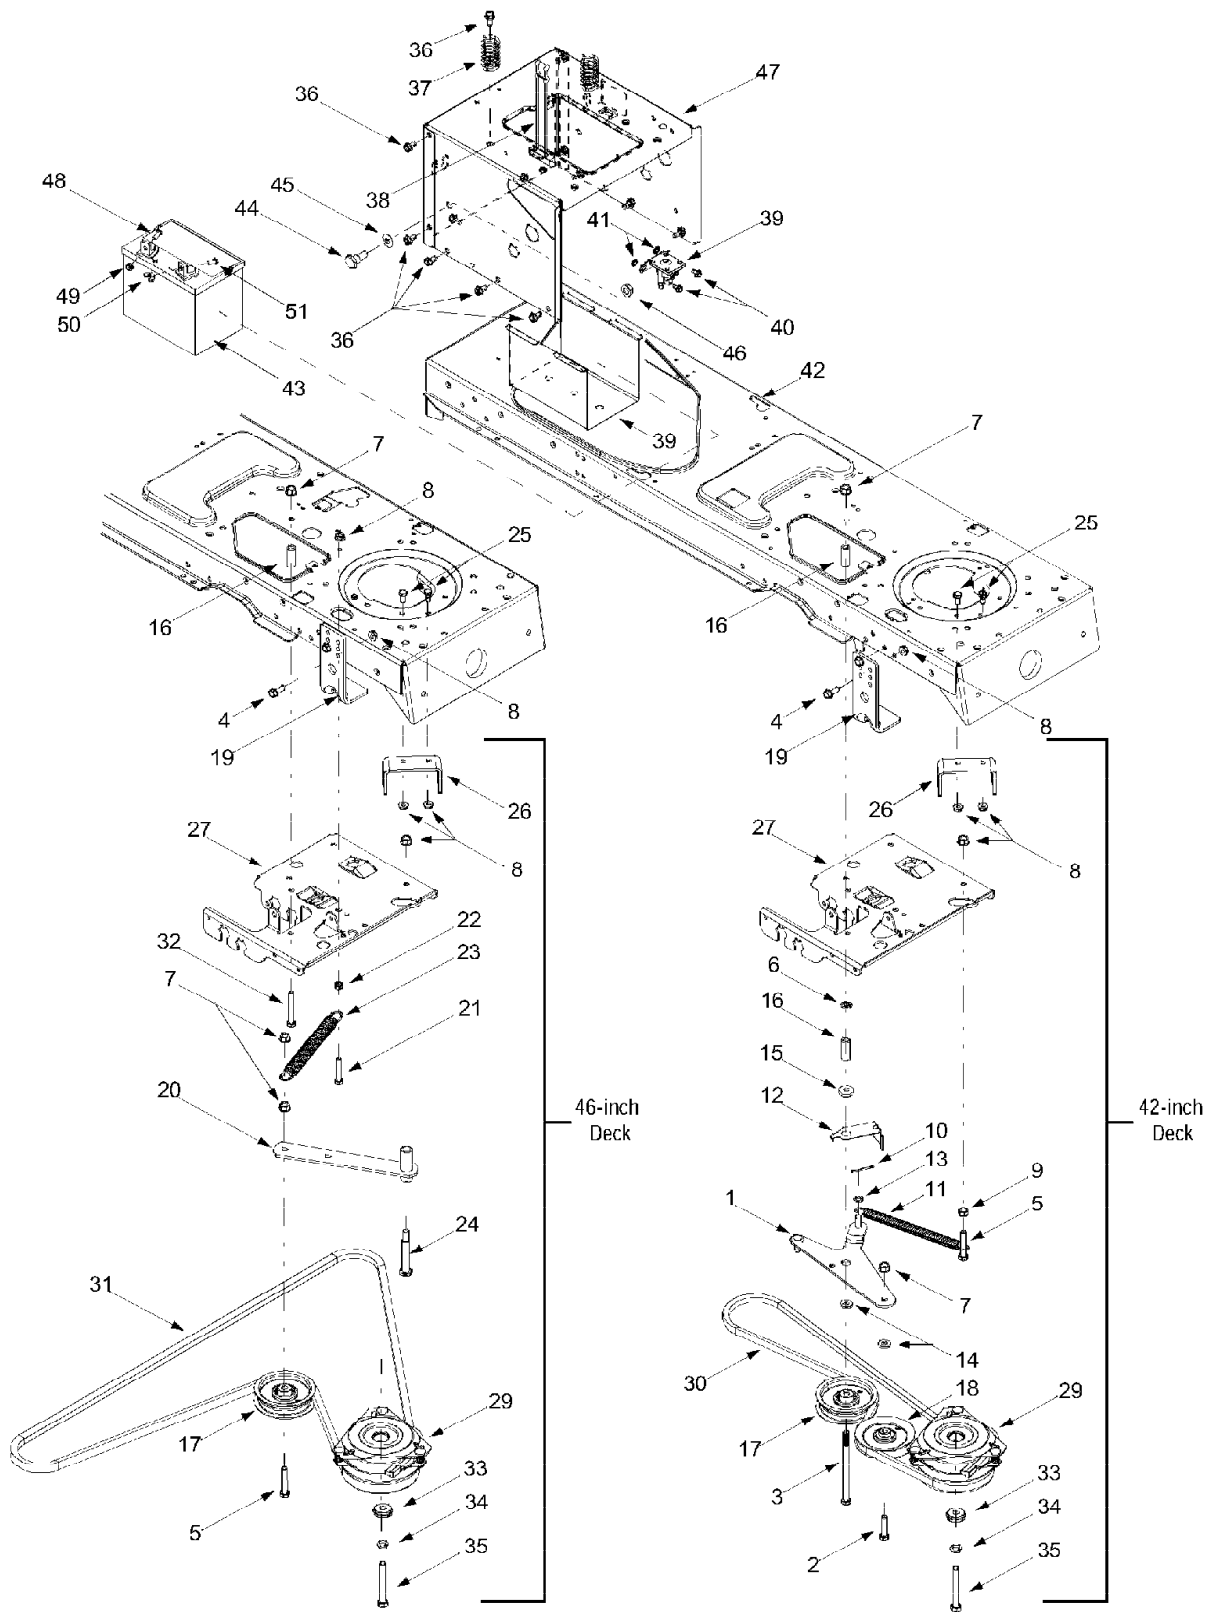

Ref #	Part Number	Qty	Description
1	683-0450		Engagement Plate Assembly
2	710-0520		Hex Cap Screw, 3/8-16 x 1.5
3	710-0831		Hex Cap Screw, 3/8-16 x 5.5
4	710-1238		Hex Head Washer Screw, 5/16-18 x .875
5	710-3144		Hex Cap Screw, 3/8-16 x 2.0
6	712-0229		Push Nut, 3/8
7	712-0431		Flange Lock Nut, 3/8-16
8	712-3004A		Flange Lock Nut, 5/16-18
9	712-3017		Hex Nut, 3/8-16
10	714-0470		Cotter Pin, 1/8 x 1.25
11	732-0384		Extension Spring, .62 x 6.12
12	732-0991A		Belt Guard
13	736-0140		Flat Washer, .385 x .62 x .063
14	736-3010		Flat Washer, .407 x .812 x .135
15	738-0372A		Shoulder Spacer, .380
16	748-0415A		Spacer, 3/8 x 1.54
17	756-0627B		Idler Pulley, 3.5
18	756-1208		Idler Pulley, 4.0
19	783-0891B		Deck Stop
20	683-0297		Idler Bracket Assembly
21	710-3180		Hex Cap Screw, 5/16-18 x 1.75
22	712-3010		Hex Nut, 5/16-18
23	732-0978		Extension Spring, .62 x 5.62
24	738-3056		Shoulder Screw, 1/2 x 2.5
25	710-3025		Hex Cap Screw, 5/16-18 x .625
26	783-1003		Electric Clutch Anti-rotation Bracket
27	783-0653D		Steering Support Bracket
28	683-0314		Frame Assembly
29	717-1708		Electric PTO Clutch
30	754-0497		PTO Belt (Models w/ 42-inch deck)
31	754-0474		PTO Belt (Models w/ 46-inch deck)
32	710-0859		Hex Cap Screw, 3/8-16 x 2.5
33	738-0785		Shoulder Spacer, 1.38 x .445 x .36
34	736-0171		Lock Washer, 7/16
35	710-3157		Hex Cap Screw, 7/16-20 x 3.25 (Grade 5)
36	710-0604A		Self Tapping Screw, 5/16-18 x .625
37	732-3080		Compression Spring, 1.28 x 3.5
38	723-0444		Battery Strap
39	725-1426		Solenoid, 12-Volt, 100 Amp
40	710-0599		Self Tapping Screw, 1/4-20 x .5
41	736-0222		Lock Washer, 1/4
42	683-0304		Lower Frame Assembly
43	725-1706		12-volt Battery, 270 CCA
44	738-1020		Shoulder Screw, .625 x .5, 7/16-20
45	736-0407		Bell Washer, .45 x 1.0 x .062
46	712-0459		Flange Lock Nut, 7/16-20
47	783-1031A		Hitch Plate
48	710-0703		Hex Cap Screw, 1/4-20 x .75
49	712-0271		Hex Sems Nut, 1/4-20
50	712-3087		Wing Nut, 1/4-20
51	738-1132		Shoulder Screw, 1/4-20, .25 x .15

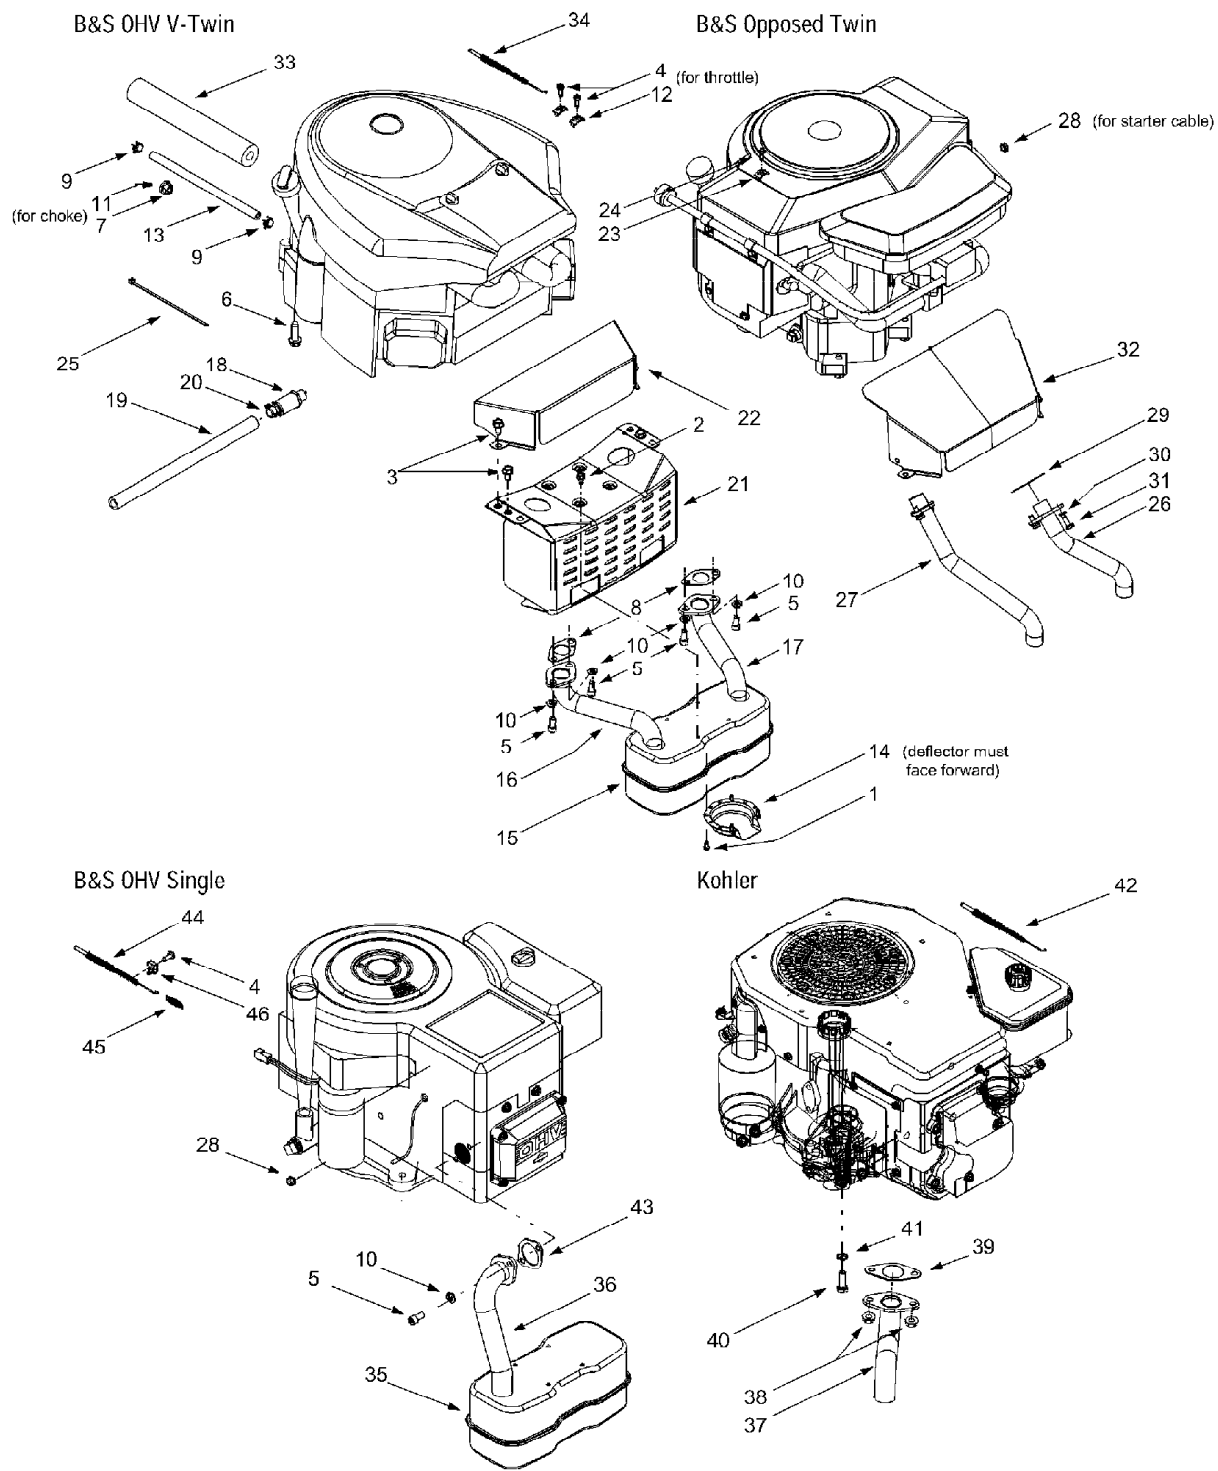


Ref #	Part Number	Qty	Description
1	710-0227		Self-tapping Screw, #8-18 x .50
2	710-0599		Self-tapping Screw, 1/4-20 x .50
3	710-0604A		Self-tapping Screw, 5/16-18 x .625
4	710-1237		Screw, #10-32 x .625 (B&S OHV V-Twin)
5	710-1314A		Socket Cap Screw, 5/16-18 x .625
6	710-1315		Self-tapping Screw, 3/8-16 x 1.25
7	712-3017		Hex Nut, 3/8-16
8	721-0460		Exhaust Gasket (B&S OHV V-Twin)
9	726-0205		Hose Clamp
10	736-0119		Lock Washer, 5/16
11	736-0300		Lock Washer, .406 x .875 x .059
12	751B221535		Casing Clamp (B&S OHV V-Twin)
13	751-0535		Fuel Line Hose
14	751-0564		Muffler Deflector
15	751-0616		Muffler, Twin Inlet (B&S Opposed Twin & OHV V-Twin)
16	751-0650		RH Exhaust Pipe (B&S OHV V-Twin)
17	751-0651		LH Exhaust Pipe (B&S OHV V-Twin)
18	751-3140		Oil Drain Valve
19	751-3141		Oil Drain Hose
20	751-3142		Oil Drain Cap
21	783-0615B		Muffler Heat Shield
22	783-0625C		Engine Heat Shield (B&S OHV V-Twin)
23	726-0272		Clamp, 9/16 (B&S Opposed Twin)
24	712-0779A		Screw, #10-16 x .5 (B&S Opposed Twin)
25	725-0157		Cable Tie
26	751-0623		LH Exhaust Pipe (B&S Opposed Twin)
27	751-0624		RH Exhaust Pipe (B&S Opposed Twin)
28	712-0271		Hex Sems Nut, 1/4-20 (B&S Opposed Twin & OHV Single)
29	721-0346		Exhaust Gasket (B&S Opposed Twin)
30	736-0329		Lock Washer, 1/4 (B&S Opposed Twin)
31	710-3015		Hex Screw, 1/4-20 x .750 (B&S Opposed Twin)
32	783-0357B		Heat Shield (B&S Opposed Twin)
33	722-0263		Foam, .625 x 1.5 x 10 (fits over fuel line)
34	746-1086		Throttle Cable (B&S Opposed Twin & OHV V-Twin)
35	751-0617		Muffler, Single Inlet (B&S OHV Single & Kohler)
36	751-0619		Exhaust Pipe (B&S OHV Single)
37	751-0621		Exhaust Pipe (Kohler)
38	712-3086		Flange Nut, 8mm (Kohler)
39	721-0375		Exhaust Gasket (Kohler)
40	710-3206A		Hex Cap Screw, 8mm (Kohler)
41	736-0607		External Lock Washer (Kohler)
42	746-1087		Throttle Cable (Kohler)
43	721-0208		Exhaust Gasket (B&S OHV Single)
44	746-1084		Throttle Cable (B&S OHV Single)
45	732-0966		Extension Spring, .275 x 1.25 (B&S OHV Single)
46	751B213146		Casing Clamp (B&S OHV Single)

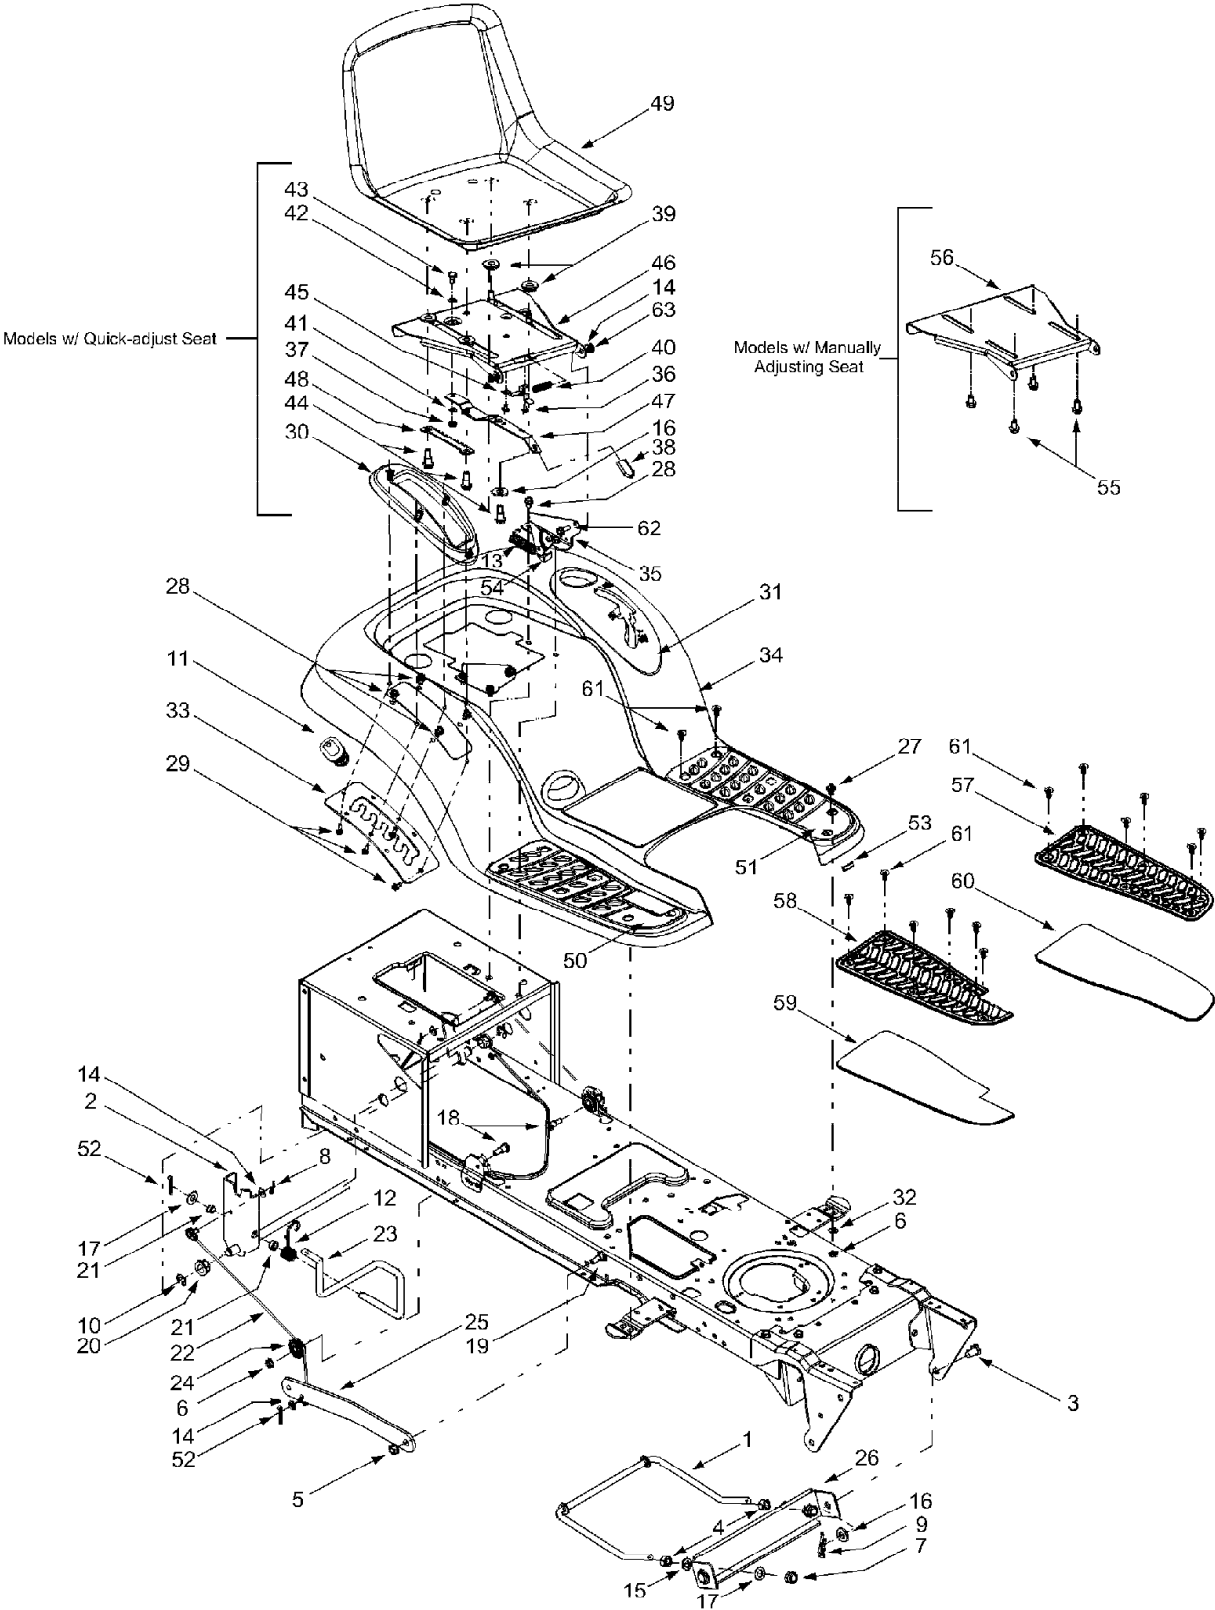


Ref #	Part Number	Qty	Description
1	747-1130B		Deck Stabilizer Rod
2	683-0197B		Lift Shaft Assembly
3	711-0332		Clevis Pin, .5 x .78
4	712-0206		Hex Nut, 1/2-13
5	712-0431		Flange Lock Nut, 3/8-16
6	712-3004A		Flange Lock Nut, 5/16-18
7	712-3083		Hex Nut, 1/2-13
8	714-0104		Internal Cotter Pin
9	714-0145		Internal Cotter Pin
10	716-0106		E-ring
11	720-0311		Handle Grip
12	732-0874		Torsion Spring
13	732-1184		Extension Spring, .84 x 4.6
14	736-0275		Flat Washer, 5/16
15	736-0921		Lock Washer, 1/2
16	736-3019		Flat Washer, .31 x 1.062 x .134
17	736-3084		Flat Washer, .51 x 1.12 x .06
18	738-0138A		Hex Cap Screw, 5/16-18 x .62
19	738-0143		Shoulder Screw, 3/8-16
20	741-0225		Hex Flange Bearing
21	741-0715		Snap Flange Bearing
22	746-0968		Lift Cable, 16.16
23	747-1111A		Lift Handle
24	756-1154		Roller Pulley
25	783-0678A		Arm Lift
26	783-0720A		Deck Stabilizer Bracket
27	710-0260A		Carriage Bolt, 5/16 x .62
28	710-0604A		Self-tapping Screw, 5/16-18 x .625
29	710-0895		Self-tapping Screw, 1/4-15 x .75
30	731-1990		Lift Lever Cover
31	731-2104A		Shift Lever Cover w/ Cup Holder
32	736-3078		Flat Washer, .349 x 1.0 x .063
33	783-0677		Lift Adjustment Bracket
34	783-1279		Fender, 4-Style
	783-0839B		Fender, 7-Style
35	783-1489		Seat Mounting Bracket
36	710-1268		Screw, #10-16 x .375
37	712-3027		Hex Flange Lock Nut, 1/4-20
38	720-0309A		Seat Adjuster Grip
39	731-1989		Spacer
40	732-0499		Compression Spring, .41 x 1.5
41	736-0175		Spring Washer, .265 x .562 x .025
42	736-0204		Flat Washer, .344 x .62 x .03
43	738-0137A		Shoulder Screw, .340 x .285, 1/4-20
44	738-1007		Shoulder Screw, .50 x .50, 3/8-16
45	783-0611		Seat Stop
46	783-0738		Seat Pivot Bracket
47	783-0739		Seat Adjustment Lever
48	783-0753		Seat Adjustment Selector
49	757-0348A		High Back Seat, Black
	757-0350		High Back Seat w/ Drain Holes, Black
	757-0360A		Medium Back Seat, Black
50	735-0656		RH Foot Pad, Rubber (4-Style Fender)
51	735-0657		LH Foot Pad, Rubber (4-Style Fender)
52	714-0111		Cotter Pin
53	731-0511		Trim Strip
54	783-0209A		Seat Lift Bracket
55	710-0870		Hex Head Washer Screw, 3/8-16 x .625
56	783-0740		Seat Pivot Bracket, Manually Adjusted
57	735-0672		RH Foot Pad, Rubber (7-Style Fender)

Ref #	Part Number	Qty	Description
57	735-0672		RH Foot Pad, Rubber (7-Style Fender)
58	735-0673		LH Foot Pad, Rubber (7-Style Fender)
59	723-0484		RH Foot Pad, Grit (7-Style Fender)
60	735-0483		LH Foot Pad, Grit (7-Style Fender)
61	726-3046		Ratchet Clip
62	738-0296		Shoulder Screw, .437 x .286
63	726-0201		Speed Nut, .3125

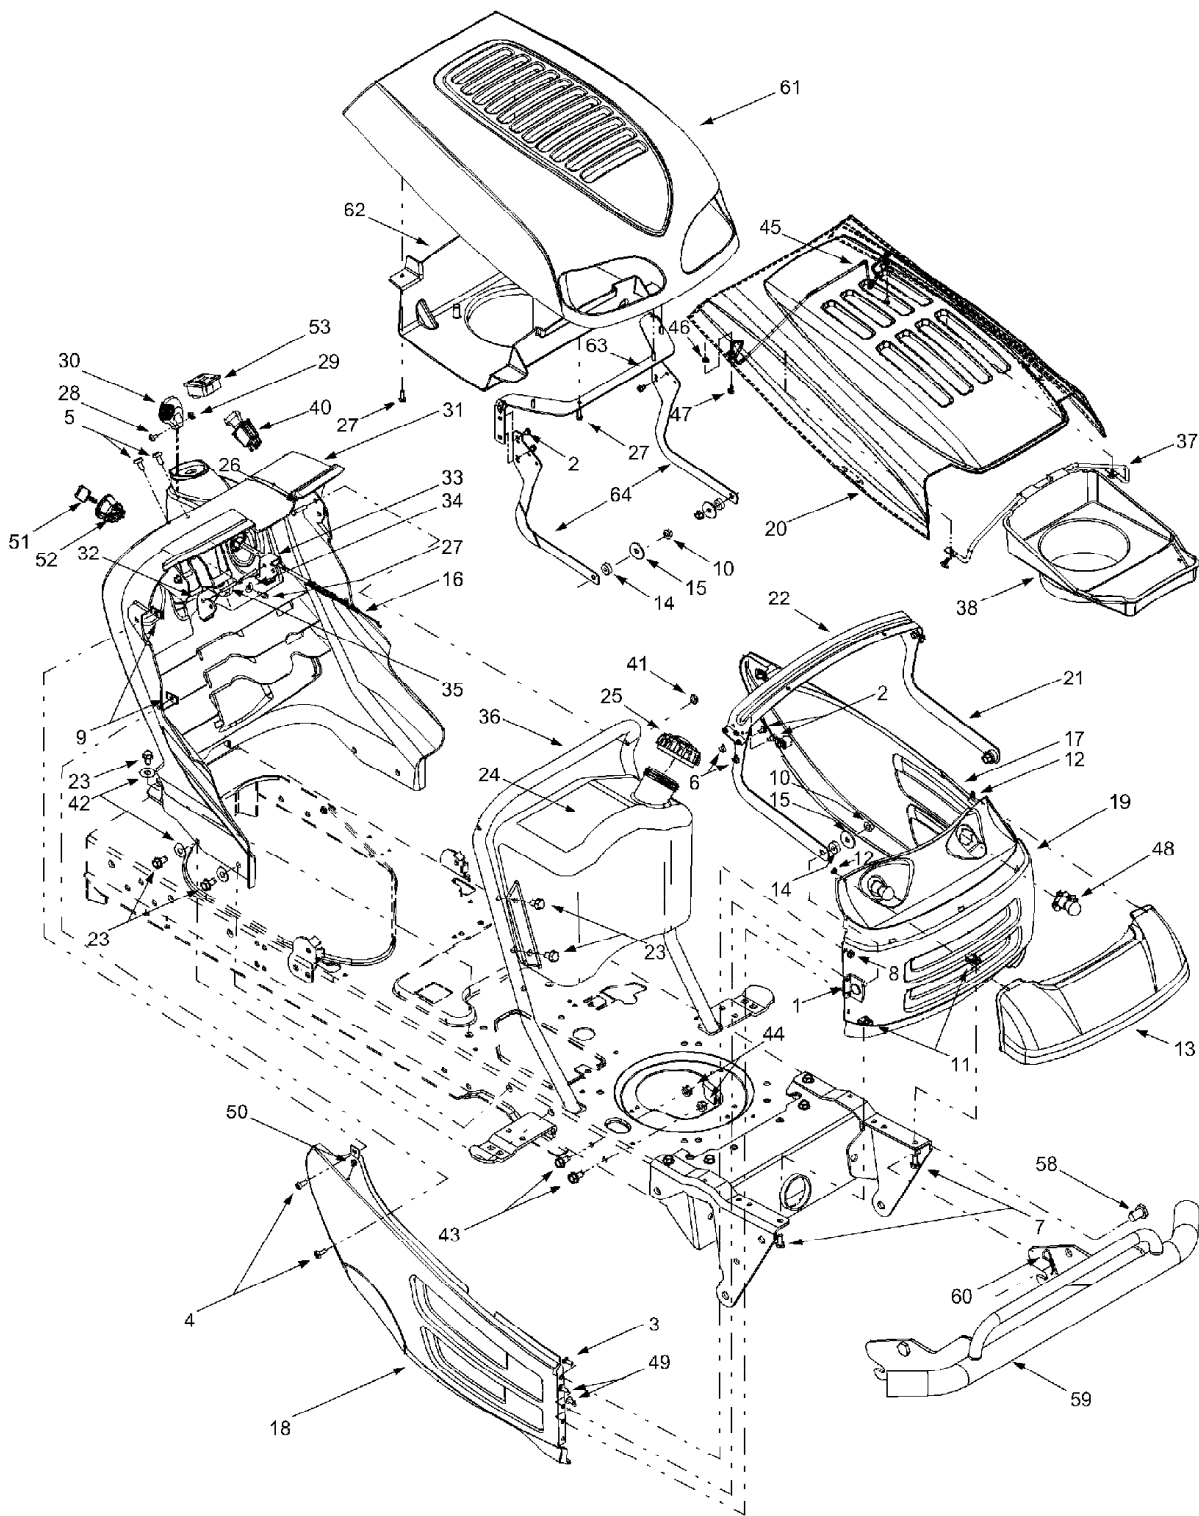


Ref #	Part Number	Qty	Description
1	683-0195		Bracket Assembly (8-style)
2	710-0599		Self-tapping Screw, 1/4-20 x .5
3	710-0751		Hex Cap Screw, 1/4-20 x .62
4	710-0924		Phillips Pan Screw, 1/4-20 x .75
5	710-1017		Truss Phillips Screw, 1/4-20 x .625
6	710-1268		Screw, #10-16 x .375
7	710-0376		Hex Cap Screw, 5/16-18 x 1.0
8	712-0271		Hex Sems Nut, 1/4-20
9	712-0292		U-type Speed Nut, 1/4-20
10	712-0431		Flange Lock Nut, 3/8-16
11	726-0211		U-nut, 5/16-18
12	726-0293		Retainer Nut, 3/8
13	731-1854A		Headlight Lens (8-style)
14	735-0126		Rubber Washer, .87 x .33
15	736-3036		Flat Washer, .406 x 1.5 x 11GA
16	746-1085		Choke Knob/Cable
	746-1088		Choke Knob/Cable
17	783-0475A		LH Side Panel (8-style)
18	783-0476B		RH Side Panel (8-style)
19	783-0477A		Grill (8-style)
20	783-0478A		Hood (8-style)
21	783-1309		Hood Hinge Bracket
22	783-0553A		Hood Support Bracket
23	710-0604A		Self-tapping Screw, 5/16-18 x .625
24	751-0658B		Fuel Tank, Three Gallon
	751-0659A		Fuel Tank, Two Gallon
25	751-0603		Fuel Cap (Fits Either Tank)
26	710-0809		Self-tapping Screw, 1/4-20 x 1.25
27	710-0895		Self-tapping Screw, 1/4-15 x .75
28	710-3217		Truss Phillips Screw, #8-32 x .375
29	712-0142		Hex Nut, #8-32
30	731-1857		Throttle Control Knob
31	731-2225C		Dash Panel
	731-2122C		Dash Panel
32	731-2226		Cruise Control Button
	731-2228		Cruise Cover
33	731-2227		Parking Brake Button
34	736-0142		Flat Washer, 9/32 x 1/2 x 1/16
35	747-1196		Brake/Cruise Pivot Rod
36	749-1087A		Dash Support Tube
37	747-1184		Hood Plenum Support Rod
38	731-2247A		Hood Plenum
	731-2248		Hood Plenum
			Hood Plenum
39	726-3046		Ratchet Clip
40	725-1752		Electric PTO Switch
41	712-3027		Hex Flange Lock Nut, 1/4-20
42	736-3078		Flat Washer, .349 x 1.0 x .063
43	710-1238		Screw, 5/16-18 x .875 (Grade 5)
44	712-3004A		Hex Nut, 5/16-18
45	747-1215A		Hood Latch
46	712-0272		Hex Sems Nut, #10-32
47	710-0473		Machine Screw, #10-24
48	625-0051		Headlight Assembly
49	710-0896		Hex Index Washer Screw, 1/4-14 x .0625
50	735-0199A		Rubber Bumper
51	725-1745		Ignition Key w/ plastic cover
	725-1744		Ignition Key w/o plastic cover
52	725-1741		Ignition Switch
53	725-1976		Systems Indicator Monitor w/ Hour Meter

Ref #	Part Number	Qty	Description
53	725-1976		Systems Indicator Monitor w/ Hour Meter
	725-1758		Systems Indicator Monitor w/ Ammeter
58	711-0332		Clevis Pin, .50 x .78
59	768-0010		Bumper Assembly
60	714-0145		Internal Cotter Pin
61	731-2300		Hood, Red (7-Style)
	731-2301		Hood, Green (7-Style)
	731-2302		Hood, Black (7-Style)
	731-2303		Hood, Charcoal Grey (7-Style)
62	731-2306		Hood Plenum
63	783-1034		Hood Bracket (7-Style)
64	783-1495		Hood Side Bracket (7-Style)
	629-0309		Headlight Wire Harness
	629-1067		Tractor Wire Harness
	629-1068		Tractor Wire Harness (Kohler)
	629-1071		Tractor Wire Harness
	629-1072		Tractor Wire Harness

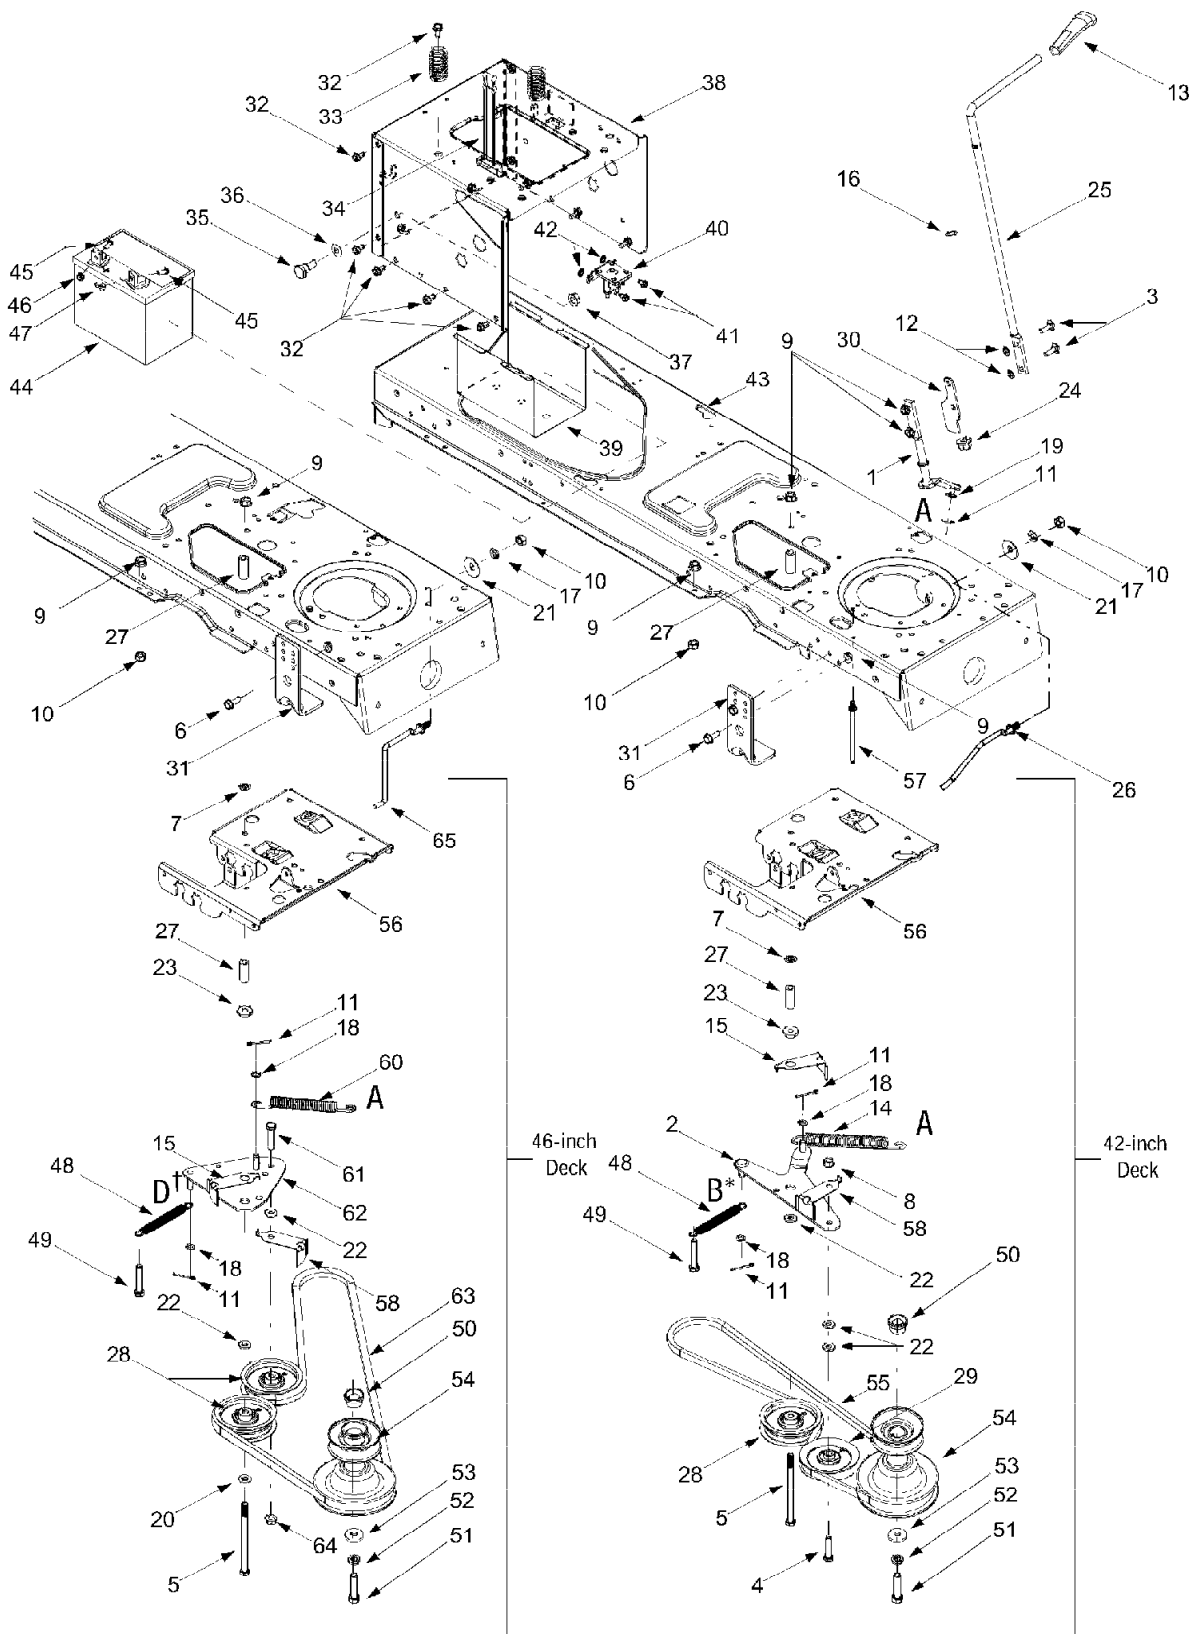

Ref #	Part Number	Qty	Description
1	647-0064		PTO Engage Lever Assembly
2	683-0450		PTO Engage Plate Assembly
3	710-0276		Carriage Screw, 5/16-18 x 1.00
4	710-0520		Hex Cap Screw, 3/8-16 x 1.5
5	710-0831		Hex Cap Screw, 3/8-16 x 5.5
6	710-1238		Hex Head Washer Screw, 5/16-18 x .875
7	712-0229		Push Nut, 3/8
8	712-0431		Flange Lock Nut, 3/8-16
9	712-3004A		Flange Lock Nut, 5/16-18
10	712-3010		Hex Nut, 5/16-18
11	714-0470		Cotter Pin, 1/8 x 1.25
12	726-0201		Speed Nut, .3125
13	731-2111A		PTO Knob
14	732-0944		Extension Spring, .75 x 6.75
15	732-0991A		Belt Guard
16	736-0108		Flat Washer, .510 x .750 x .033
17	736-0119		Lock Washer, 5/16
18	736-0140		Flat Washer, .385 x .62 x .063
19	736-0275		Flat Washer, 5/16
20	736-0300		Flat Washer, .406 x .875 x .059
21	736-0331		Bell Washer, .39 x 1.13 x .062
22	736-3010		Flat Washer, .407 x .812 x .135
23	738-0372A		Shoulder Spacer, .380
24	741-0708		Hex Split Flange Bearing, .5
25	747-1112D		PTO Engagement Handle
26	747-1286		Belt Keeper Rod
27	748-0415B		Spacer, 3/8 x 1.54
28	756-0627B		Idler Pulley, 3.5
29	756-1208		Idler Pulley, 4.0
30	783-0744A		Engagement Stop
31	783-0891B		Deck Stop
32	710-0604A		Self Tapping Screw, 5/16-18 x .625
33	732-3080		Compression Spring, 1.28 x 3.5
34	723-0444		Battery Strap
35	738-1020		Shoulder Screw, .625 x .5, 7/16-20
36	736-0407		Bell Washer, .45 x 1.0 x .062
37	712-0459		Flange Lock Nut, 7/16-20
38	783-1031A		Hitch Plate
39	783-0349		Battery Tray
40	725-1426		Solenoid, 12-Volt, 100 Amp
41	710-0599		Self Tapping Screw, 1/4-20 x .5
42	736-0222		Lock Washer, 1/4
43	683-0304A		Lower Frame Assembly
44	725-1706		12-volt Battery, 270 CCA
45	710-0751		Hex Cap Screw, 1/4-20 x .62
46	712-0271		Hex Sems Nut, 1/4-20
47	712-3044		Wing Nut, 1/4-20
48	732-1165		Extension Spring, .50 x 5.0
49	710-3180		Hex Cap Screw, 5/16-18 x 1.75
50	750-0956		Spacer Cup
51	710-3029		Hex Head Cap Screw, 7/16-20 x 1.25
52	736-0171		Lock Washer, 7/16
53	736-0322		Flat Washer, .450 x 1.25
54	756-0982B		Engine Pulley, 3.56 OD x 5.56
55	754-0497		PTO Belt
56	783-0653E		Steering Support Bracket
57	711-1044		Keeper Pin, 5/16 x 4.75
58	732-1013		Belt Guard
59	710-3025		Hex Cap Screw, 5/16-18 x .625
60	732-0944		Extension Spring, .75 x 6.75

Ref #	Part Number	Qty	Description
60	732-0944		Extension Spring, .75 x 6.75
61	710-0347		Hex Cap Screw, 3/8-16 x 1.75
62	683-0302		PTO Engagement Plate Assembly
63	754-0486A		PTO Belt
64	712-0431		Flange Lock Nut, 3/8-16
65	747-1243		Belt Keeper Rod

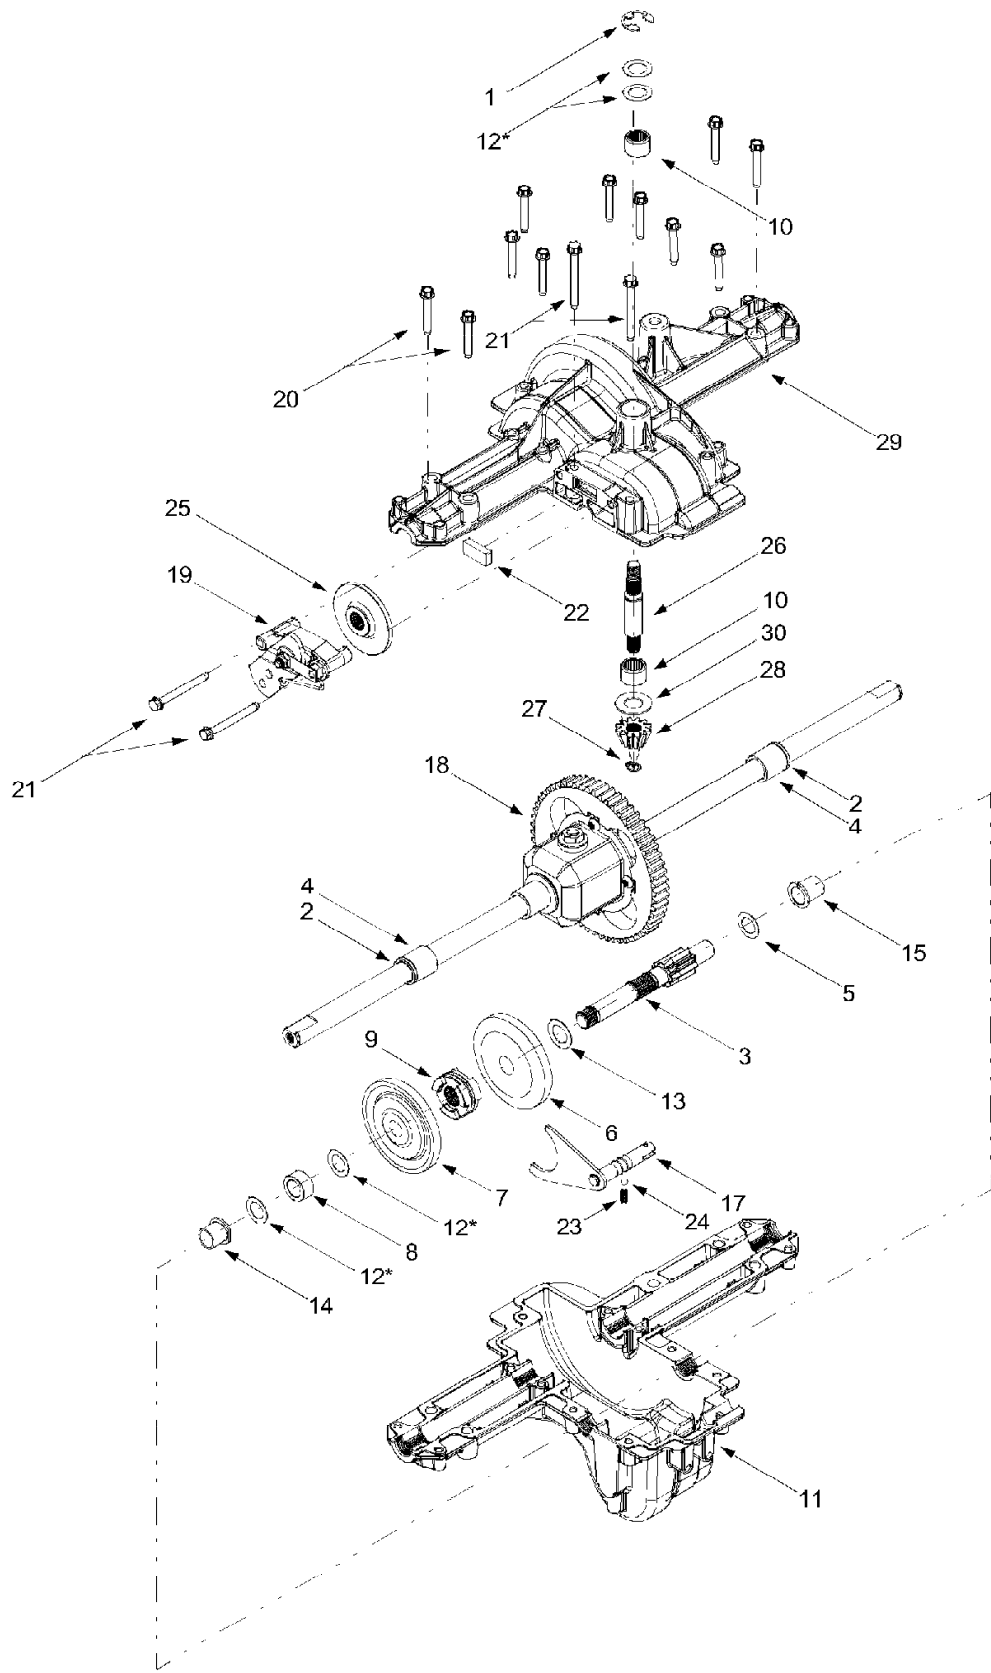

Ref #	Part Number	Qty	Description
1	716-0231		E-ring, .75
2	721-0338		Seal, .75 x 1.0 x .125
3	711-1431		Drive Shaft
4	741-0340		Sleeve Bearing, .75 x 1.0 x 1.0
5	736-0495		Thrust Washer, 1.0 x .632 x .0
6	717-1363		42-tooth Bevel Gear
7	717-1362		42-tooth Bevel Gear
8	750-1234		Spacer, .633 x 1.0 x .513
9	718-0228		Clutch Collar
10	741-0525		Needle Bearing, .625 x .875
11	719-0394		Lower Housing
12			UNKNOWN
?12A	736-0336		Flat Washer, 5/8 x 1.0 x .030
?12B	736-0337		Flat Washer, 5/8 x 1.0 x .040
?12C	736-0349		Flat Washer, 5/8 x 1.0 x .020
13	736-0519		Flat Washer, .70 x 1.125 x .031
14	741-0336		Flange Bearing, 5/8 x 3/4 x 3/4
15	741-0337		Flange Bearing, 5/8 x 3/4 x 15/16
?16	750-1238		Spacer, .635 x 1.0 x .27
17	611-0133		Detent Shaft Assembly
18	618-0424		Differential Assembly
19	661-0006		Brake Assembly
20	710-1325		Self-tapping Screw, 1/4-20 x 1.625
21	710-1206		Self-tapping Screw, 1/4-20 x 2.375
22	717-0678		Brake Pad
23	732-0863		Compression Spring
24	741-0862		Detent Ball
25	761-0202		Brake Disc
26	711-1430		Input Shaft
27	716-0108		Retaining Ring, .437
28	717-1464		14-tooth Bevel Pinion
29	719-0391A		Upper Housing
30	736-0723		Thrust Washer, .635 x 1.25 x .042
	618-0551		Transmission Assembly