



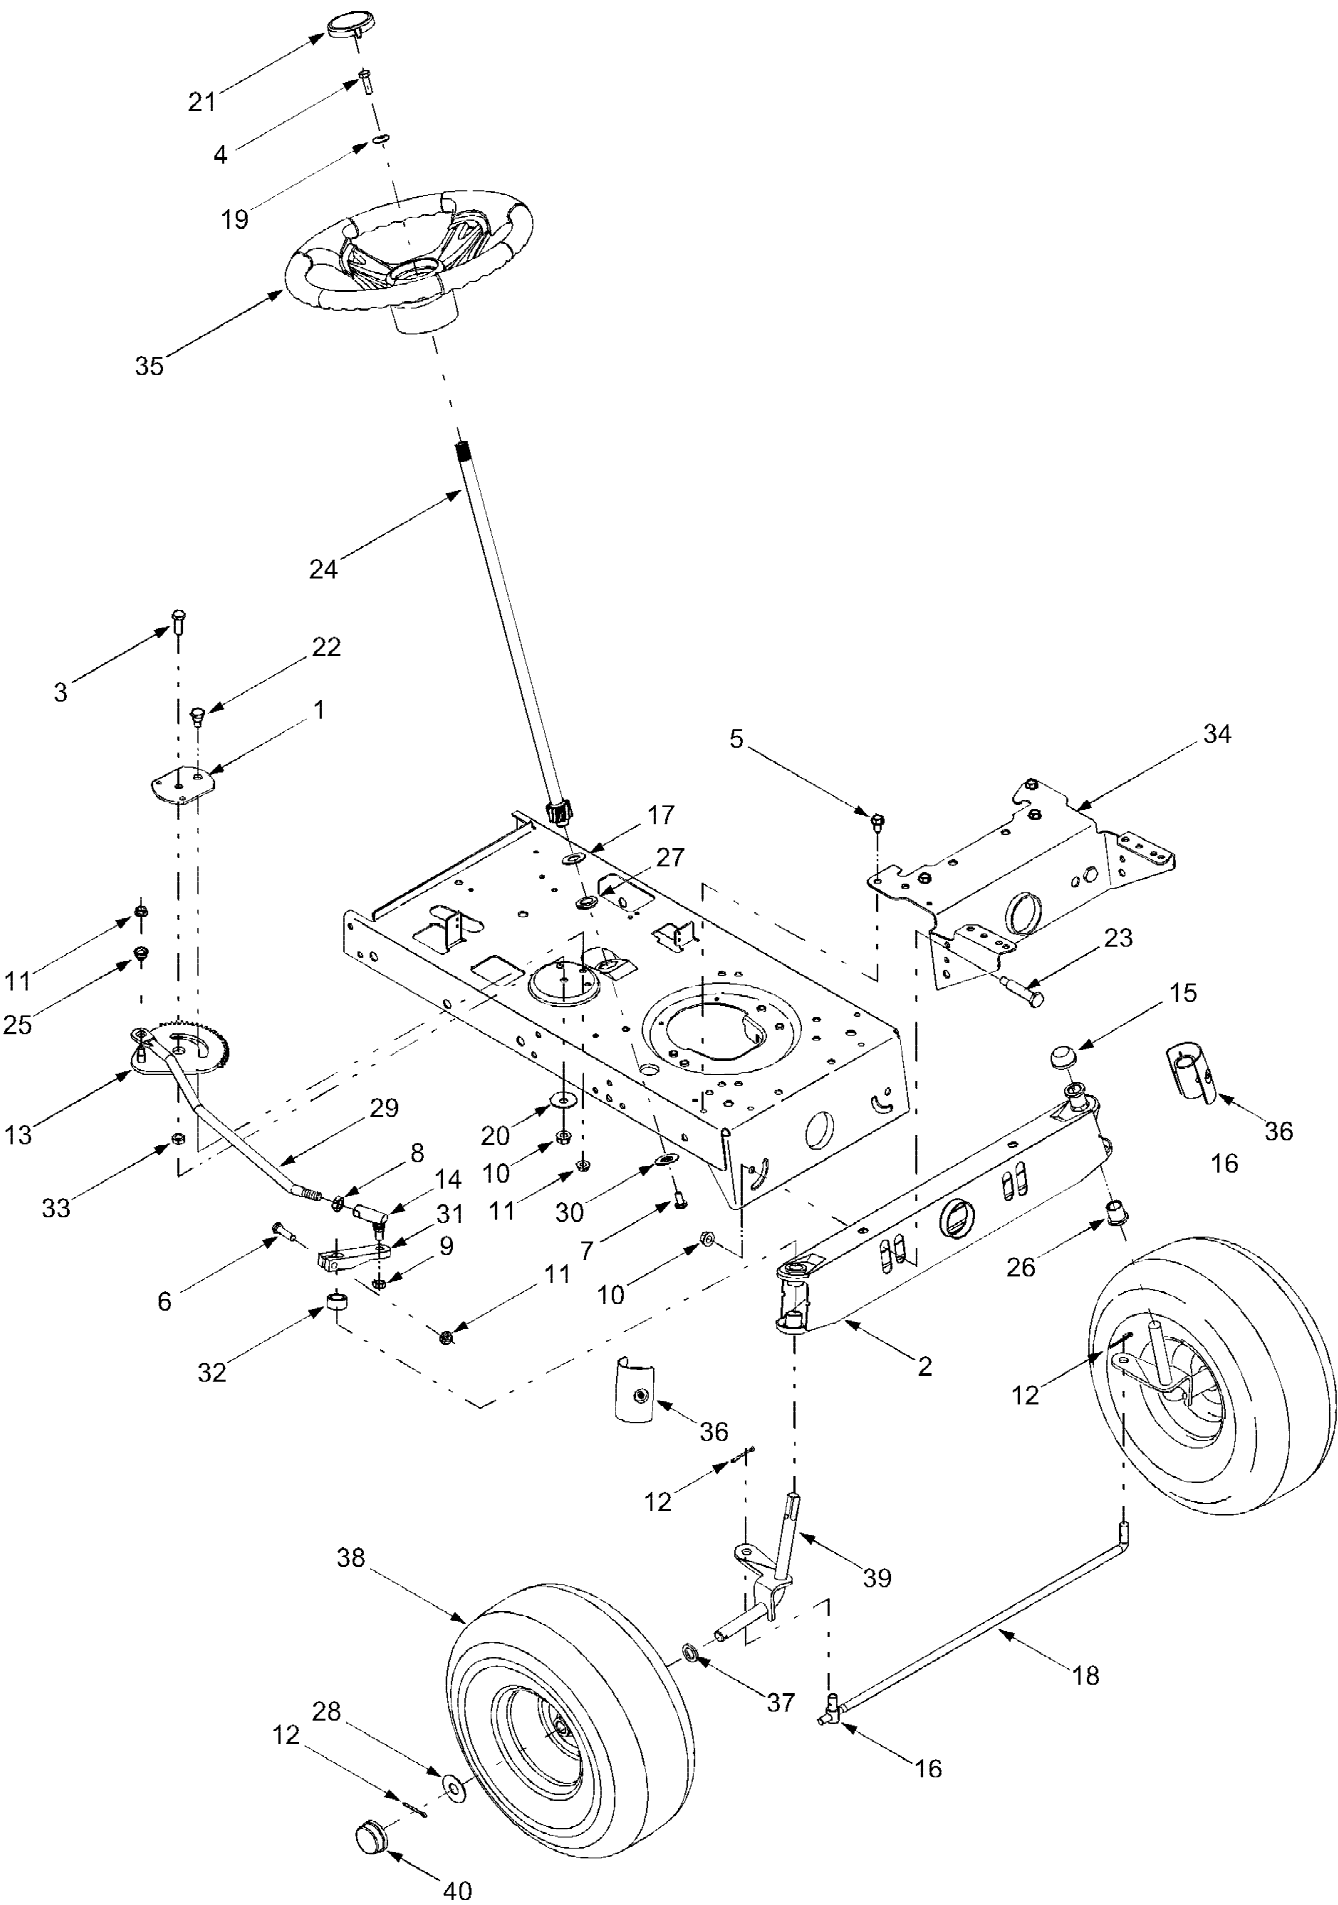


Ref #	Part Number	Qty	S/P/F	Description
1	17198A	1	S	Retainer Gear Segment Plate
2	683-0002A	1	S	Pivot Bar, .625
3	710-0514	1	/P	Hex Cap Screw, 3/8-16 x 1.0
4	710-0643	1	/P	Hex Cap Screw, 5/16-18 x 1.0
5	710-0726	1	/P	Self-tapping Screw, 5/16-12 x .75
6	710-0805	1	/P	Hex Cap Screw, 5/16-18 x 1.5
7	710-1309	1	/P	Machine Screw, 5/16-18 x .75
8	712-0240	1	S	Jam Nut, 7/16-20 (Grade 2)
9	712-0262	1	/P	Jam Nut, 3/8-24
10	712-0431	1	S	Flange Lock Nut, 3/8-16
11	712-3004A	1	/P	Flange Lock Nut, 5/16-18
12	714-0470	1	S	Cotter Pin, 1/8 x 1.25
13	717-1757A	1	/P	Steering Segment Gear
14	723-0448A	1	S	Ball Joint, 7/16 -20
15	726-0214	1	/P	Push Cap, .625
16	711-04059	1	S	Ferrule, 3/8-24 x .437 Dia
17	736-0187	1	/P	Flat Washer, .64 x 1.24 x .060
18	747-04057	1		Tie Rod, Adjustable
19	736-0242	1	/P	Bell Washer, .34 x .872 x .060
20	736-0356	1	S	Bell Washer, .391 x .380 x .062
21	731-04040	1		Steering Wheel Cap w/ Spring, Small
22	738-0141	1	S	Shoulder Screw, .435 x .350, 5/16-18
23	738-0527	1	S	Shoulder Screw, .498 x 2.045
24	738-0919	1	S	Steering Shaft, 21.86
25	741-0475	1	S	Plastic Bushing, .38 ID
26	741-0487A	1	S	Flange Bushing, .632 ID
27	741-0656A	1	S	Hex Flange Bearing, 5/8
28	736-0285	1	/P	Flat Washer, .635 x 1.589 x .06
29	747-1268B	1	/P	Steering Drag Link, 7/16-20
30	748-0389	1	S	Cap, 1.25 x .16
31	748-04014B	1	S	Steering Arm
32	748-04020	1	S	Spacer, 1.0 x .645 x .56
33	750-0535	1	S	Spacer, .380 x .625 x .21
34	783-0041D	1		Pivot Bar Bracket
35	631-04028	1		Steering Wheel, Three Spoke
36	731-04058	1		Axle End Cap, w/ Fitting
37	736-0162	1	/P	Flat Washer, .64 x 1.0 x .12
38	634-0105A	1	S	Square Shoulder Wheel Ass'y Complete
	634-0172	1		Rim Assembly
	741-0706	1	S	Inner Bearing (Flange w/ Fitting)
	741-0487A	1	S	Outer Bearing (Plastic Flange)
	734-1731	1		Tire Only (15 x 6 x 6)
	734-0255	1	S	Air Valve
39	683-04016	1	S	RH Axle Assembly
	683-04015	1	S	LH Axle Assembly
40	731-0484A	1	S	Hub Cap

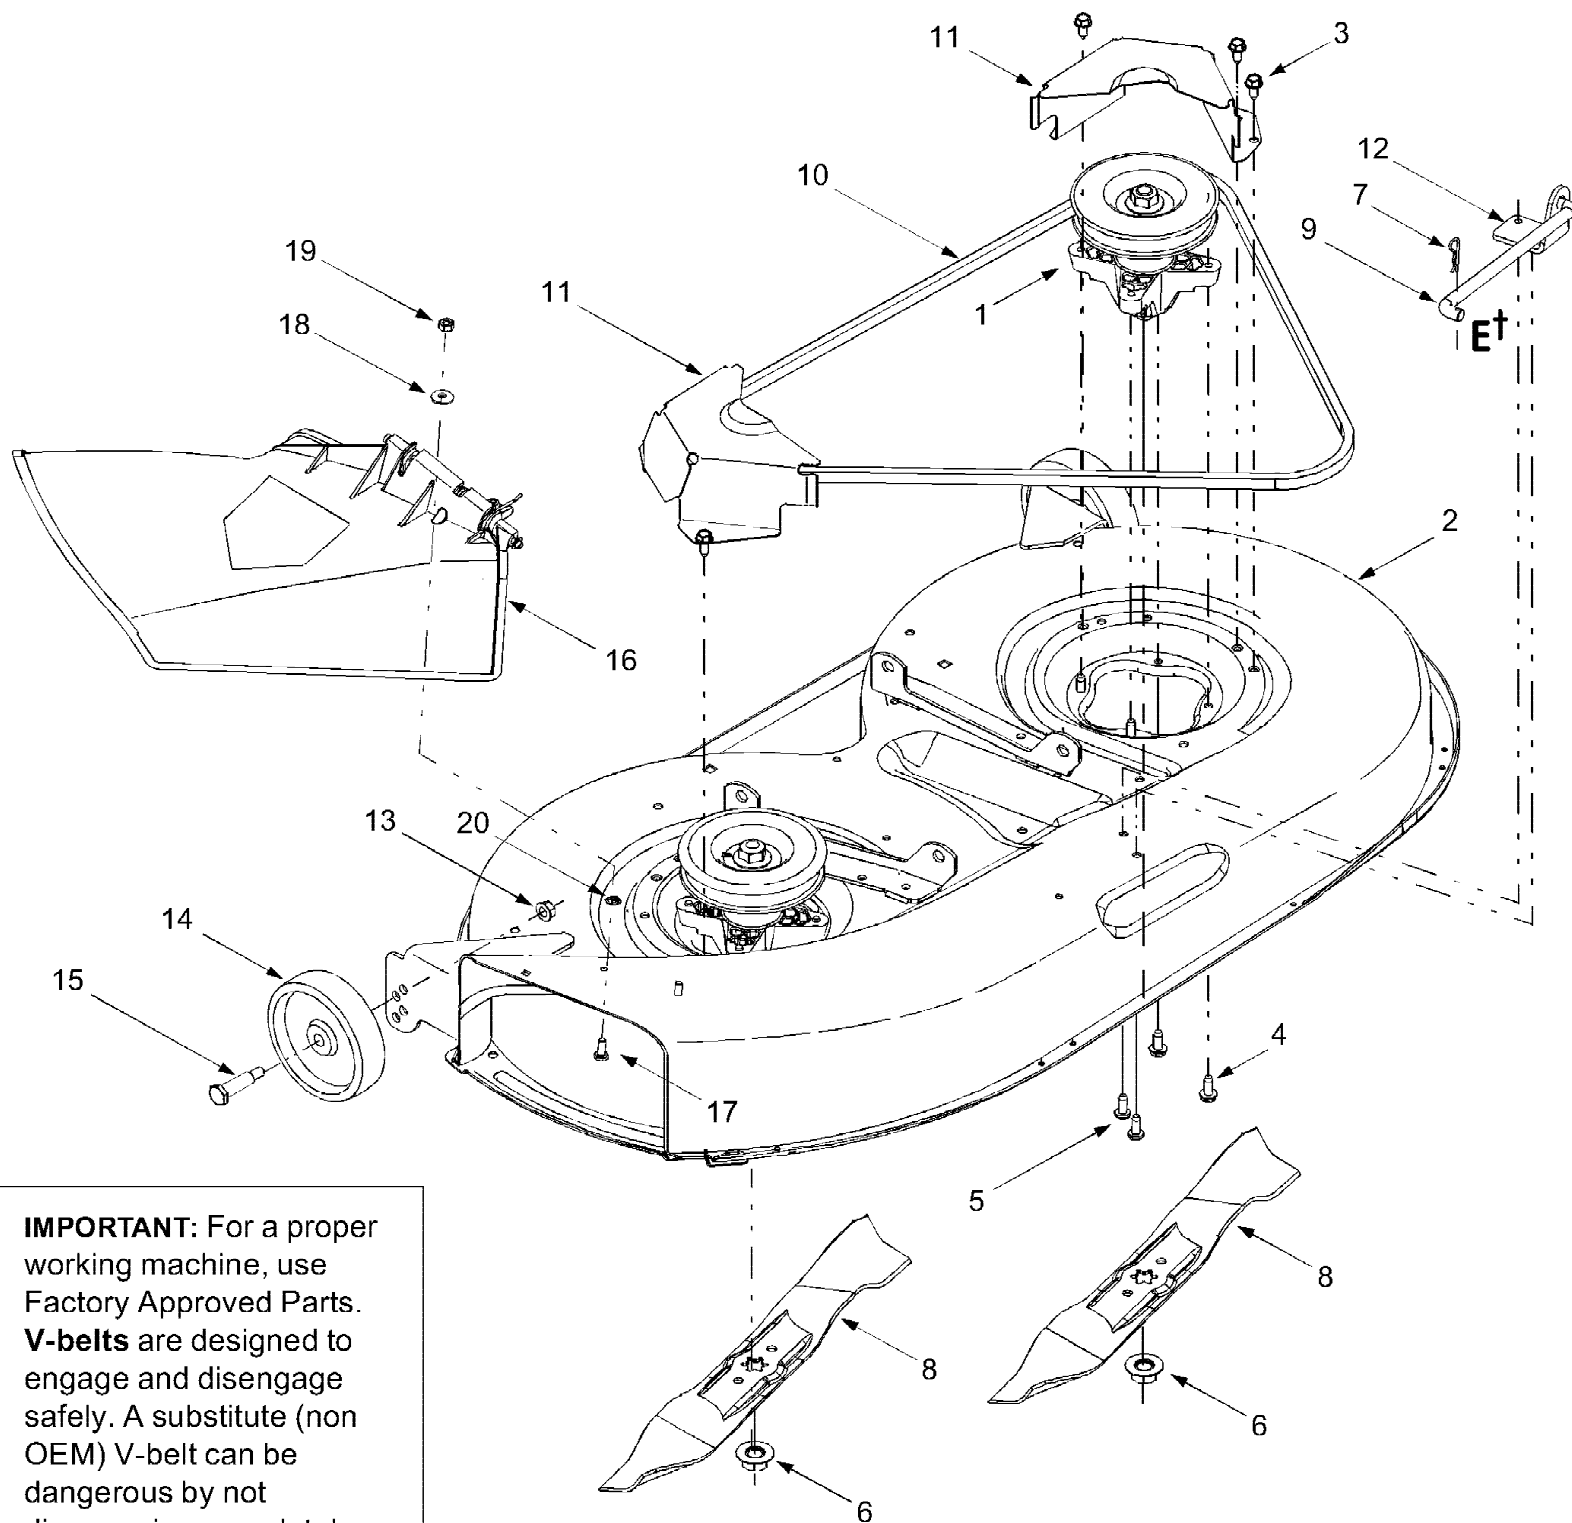



IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Ref #	Part Number	Qty	S/P/F	Description
1	618-0142A	1	S	Spindle Assembly
2	683-04035A	1		Deck Shell
3	710-0726	1	/P	Self-tapping Screw, 5/16-12 x .75
4	710-1260A	1	/P	Screw, 5/16-18 x .75
5	710-1616A	1		Self-tapping Screw, 5/16-18 x .75
6	712-0417A	1	/P	Hex Flange Nut, 5/8-18
7	714-04023	1	S	Internal Cotter Pin, .080 x 1.56
8	742-0616A	1	S	Blade, 21.23"
9	747-04018A	1	S	Deck Hanger Link/Anti-sway Rod
10	754-0371A	1	S	Deck Belt
11	783-04149B	1		Belt Cover
12	783-04211	1	S	Anti-sway Stabilizer Bracket
13	712-0431	1	S	Flange Lock Nut, 3/8-16
14	734-0973	1	/P	Deck Wheel, 5 x 1.38
15	738-0373	1	S	Shoulder Screw, .498 x 1.53
16	731-1032B	1	S	Discharge Chute Assembly
17	710-0751	1	/P	Hex Cap Screw:1/4-20 x .620
18	736-0270	1	/P	Bell Washer, .265 x .75 x .062
19	712-3006	1	/P	Hex Nut, 1/4-20
20	726-0233	1	/P	Push Nut, 1/4

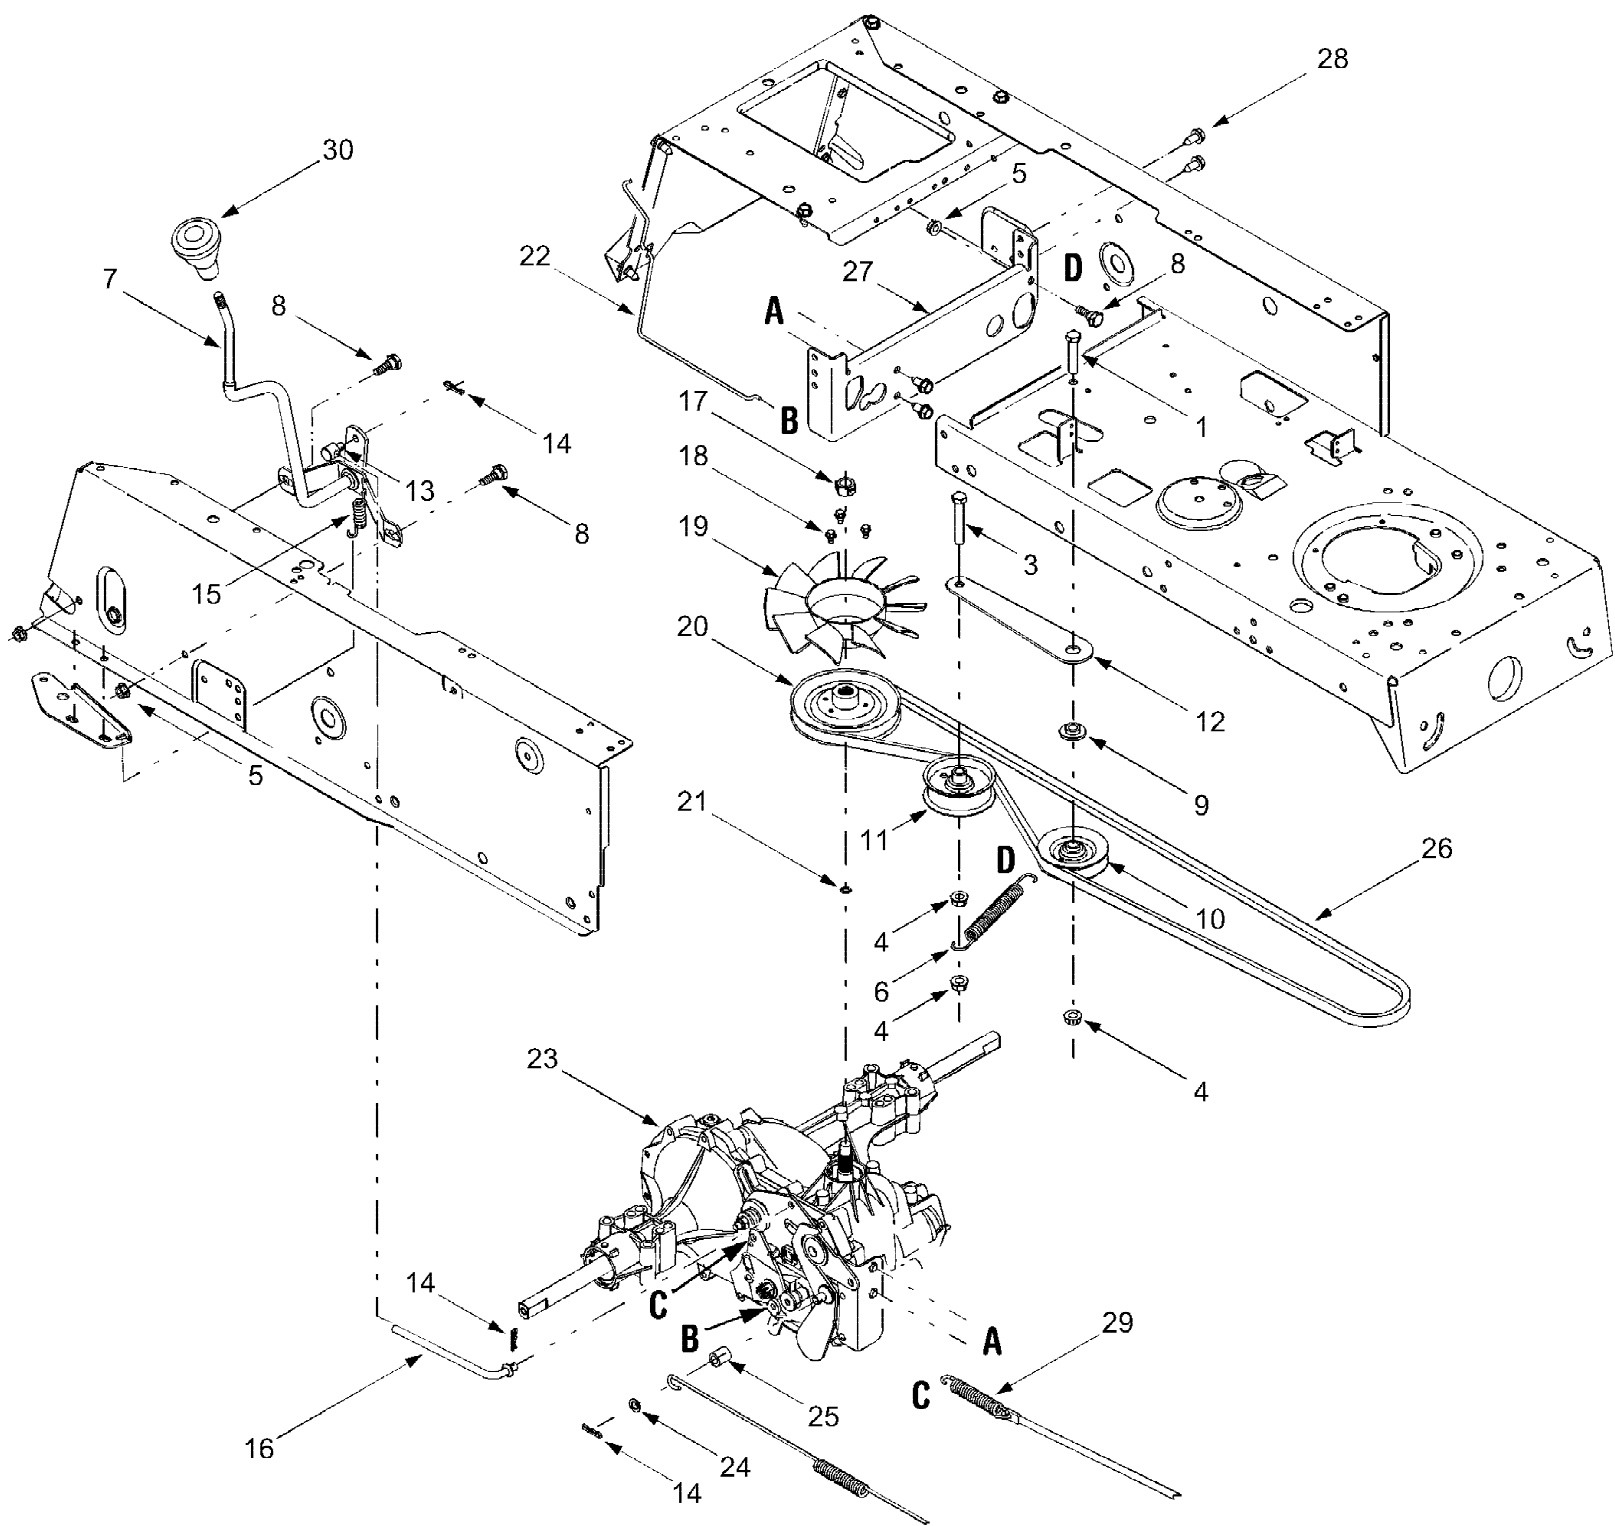


Ref #	Part Number	Qty	S/P/F	Description
1	710-0347	1	/P	Hex Screw, 3/8-16 x 1.75
2	710-3008	1	/P	Hex Screw, 5/16-18 x .75
3	710-3011	1	/P	Hex Screw, 3/8-16 x 2.25
4	712-0431	1	S	Flange Lock Nut, 3/8-16
5	712-0429	1	S	Lock Nut, 5/16-18
6	732-04053	1	S	Extension Spring, .62 x 6.38
7	647-04007	1		Hydro Speed Selector
8	738-0296	1	S	Shoulder Screw, .437 x .286
9	738-0347	1	S	Shoulder Spacer, .625 x 1.16
10	756-0116	1	S	V-Type Idler Pulley, 3.06
11	756-0981A	1	S	Flat Idler Pulley, 2.75
12	783-04165	1	S	Idler Bracket
13	711-0677	1	S	Ferrule, 5/16-18 x .312
14	714-0104	1	S	Cotter Pin
15	732-0568	1	S	Extension Spring, .50 x 2.54
16	747-04052	1		Hydrostatic Control Rod
17	712-0239	1	S	Hex Lock Nut, 1/2-20
18	710-3007	1	/P	Screw, #12-24 x .375
19	731-1449A	1	S	Fan Blade, 10
20	756-1166	1		Transmission Pulley, 5.0
21	732-0729	1	/P	Ring Wire
22	747-1277B	1	/P	Hydrostatic Bypass Rod
23	618-04027	1	S	Hydrostatic Transmission
24	736-0140	1	S	Flat Washer, .385 x .62 x .063
25	750-0807	1		Spacer, .385 x .625 x .700
26	754-0338	1	S	Belt
27	783-0810B	1	S	Transmission Torque Bracket
28	710-0726	1	/P	Self-tapping Screw, 5/16-12 x .75
29	732-0716	1	S	Extension Spring, .59 x 4.0
30	720-0218	1	/P	Knob

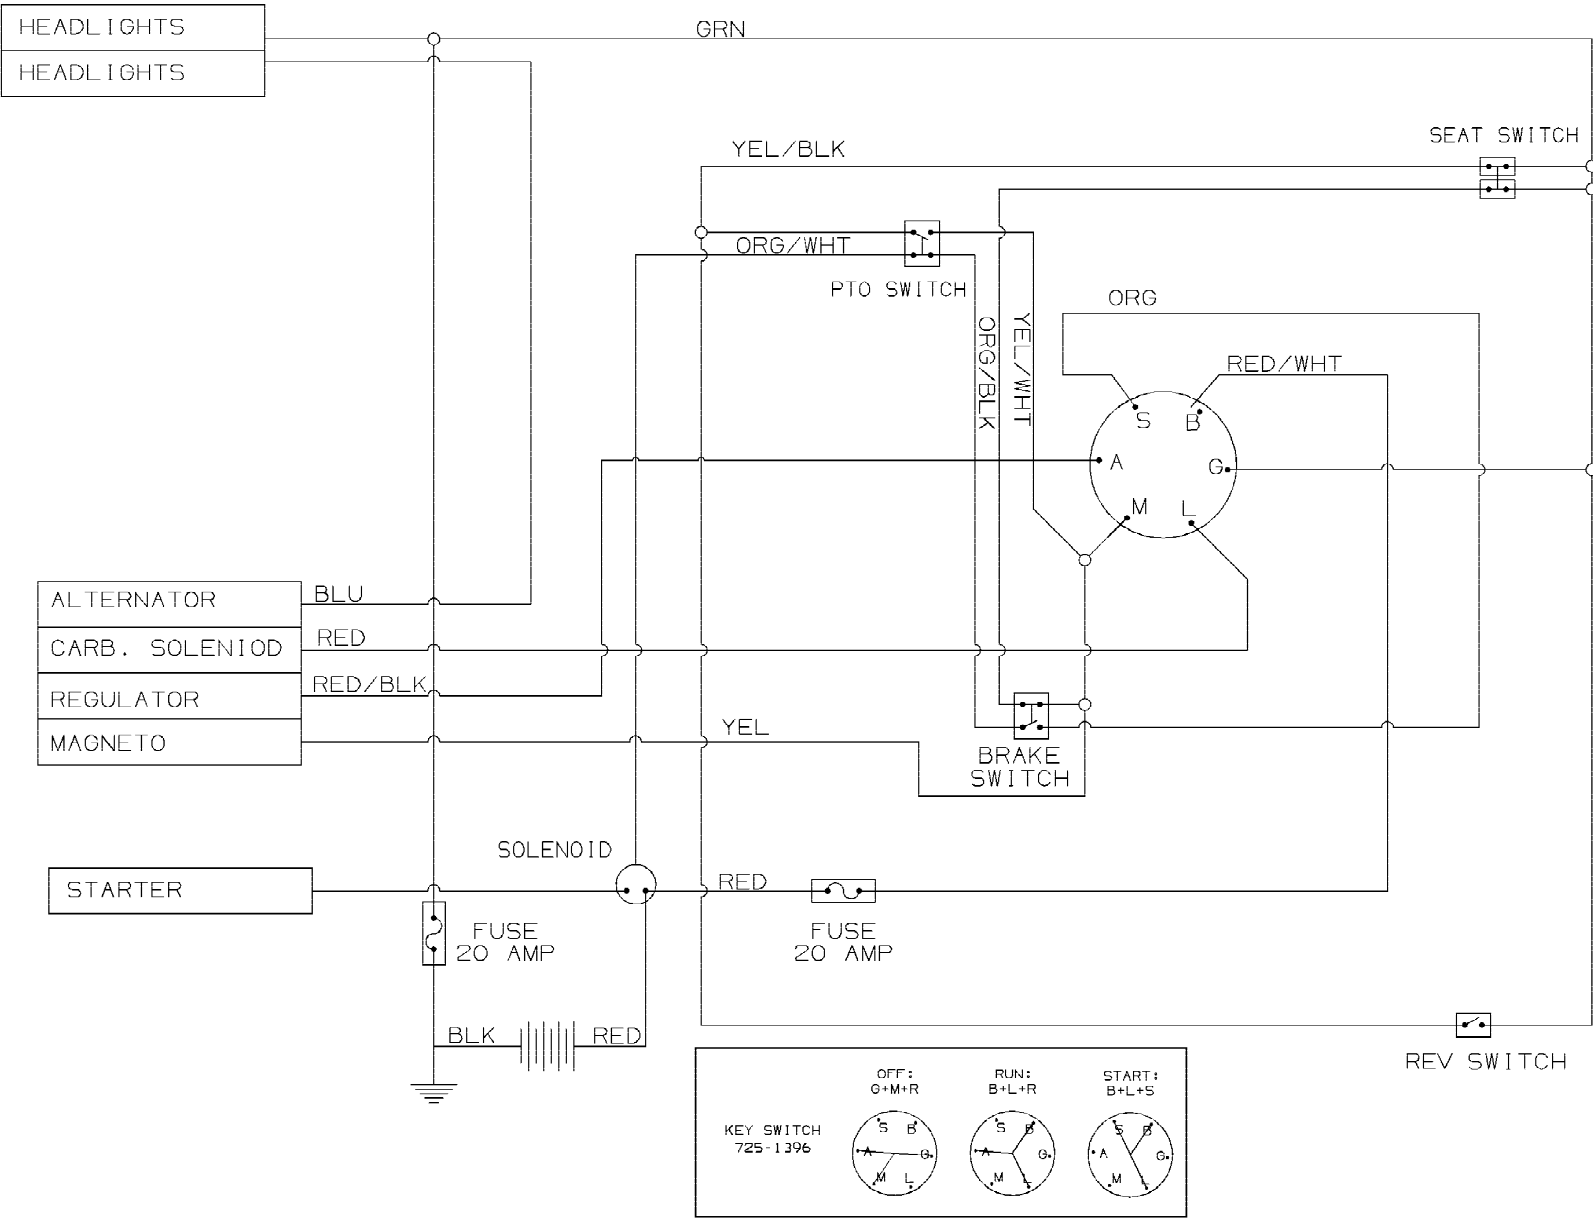

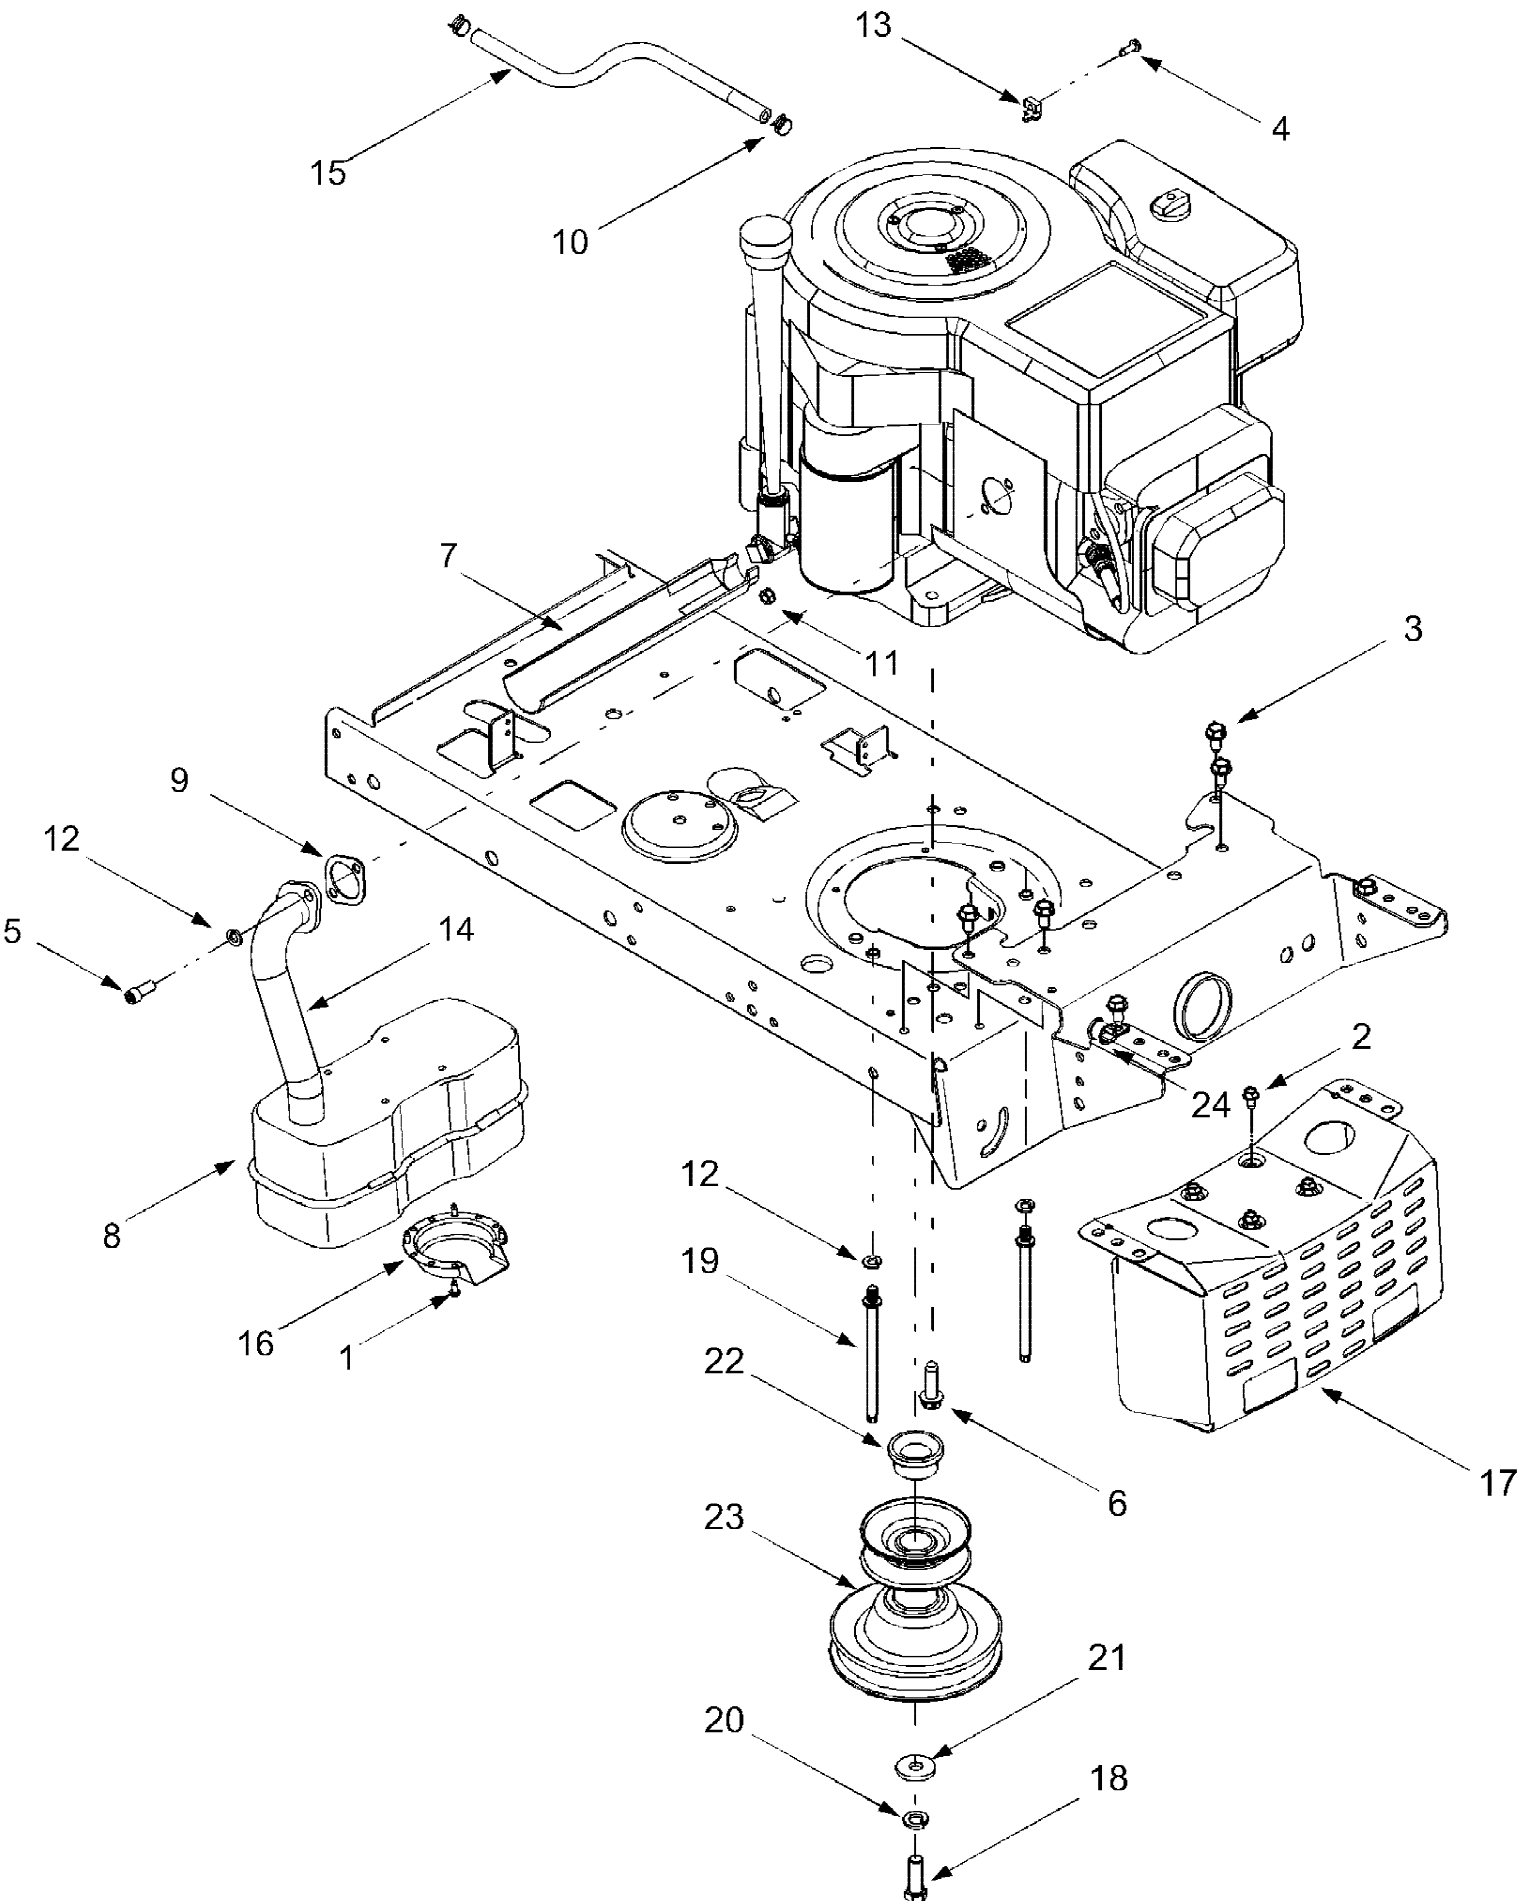


Ref #	Part Number	Qty	S/P/F	Description
1	710-0148	1	/P	Screw, #8-32 x .375
2	710-0599	1	/P	Self-tapping Screw, 1/4-20 x .5
3	710-0726	1	/P	Self-tapping Screw, 5/16-12 x .75
4	710-1237	1		Screw, #10-32 x .625
5	710-1314A	1	/P	Socket Cap Screw, 5/16-18 x .625
6	710-1315	1	/P	Self-tapping Screw, 3/8-16 x 1.25
7	731-1682A	1	/P	Oil Drain Sleeve
8	751-0617A	1	S	Muffer, Single Inlet
9	721-0208	1	S	Exhaust Gasket
10	726-0205	1	/P	Hose Clamp, .490
11	712-0271	1	/P	Hex Sems Nut, 1/4-20
12	736-0119	1	S	Lock Washer, 5/16
13	751B213146	1	/P	Casing Clamp
14	751-0619A	1	/P	Exhaust Pipe
15	751-0535	1		Fuel Line Hose
16	751-0564A	1	S	Muffler Deflector
17	783-0615C	1	S	Muffler Heat Shield
18	710-3029	1	/P	Hex Screw, 7/16-20 x 1.25
19	711-1044	1	S	Belt Keeper Pin, 5/16 x 4.75
20	736-0171	1	S	Lock Washer, 7/16
21	736-0322	1	/P	Flat Washer, .450 x 1.25 x .164
22	750-0956	1		Spacer, 1.0 x 1.4 x .825
23	756-04011	1	S	Engine Pulley, 3.56 x 5.56
24	726-0272	1	/P	Clamp

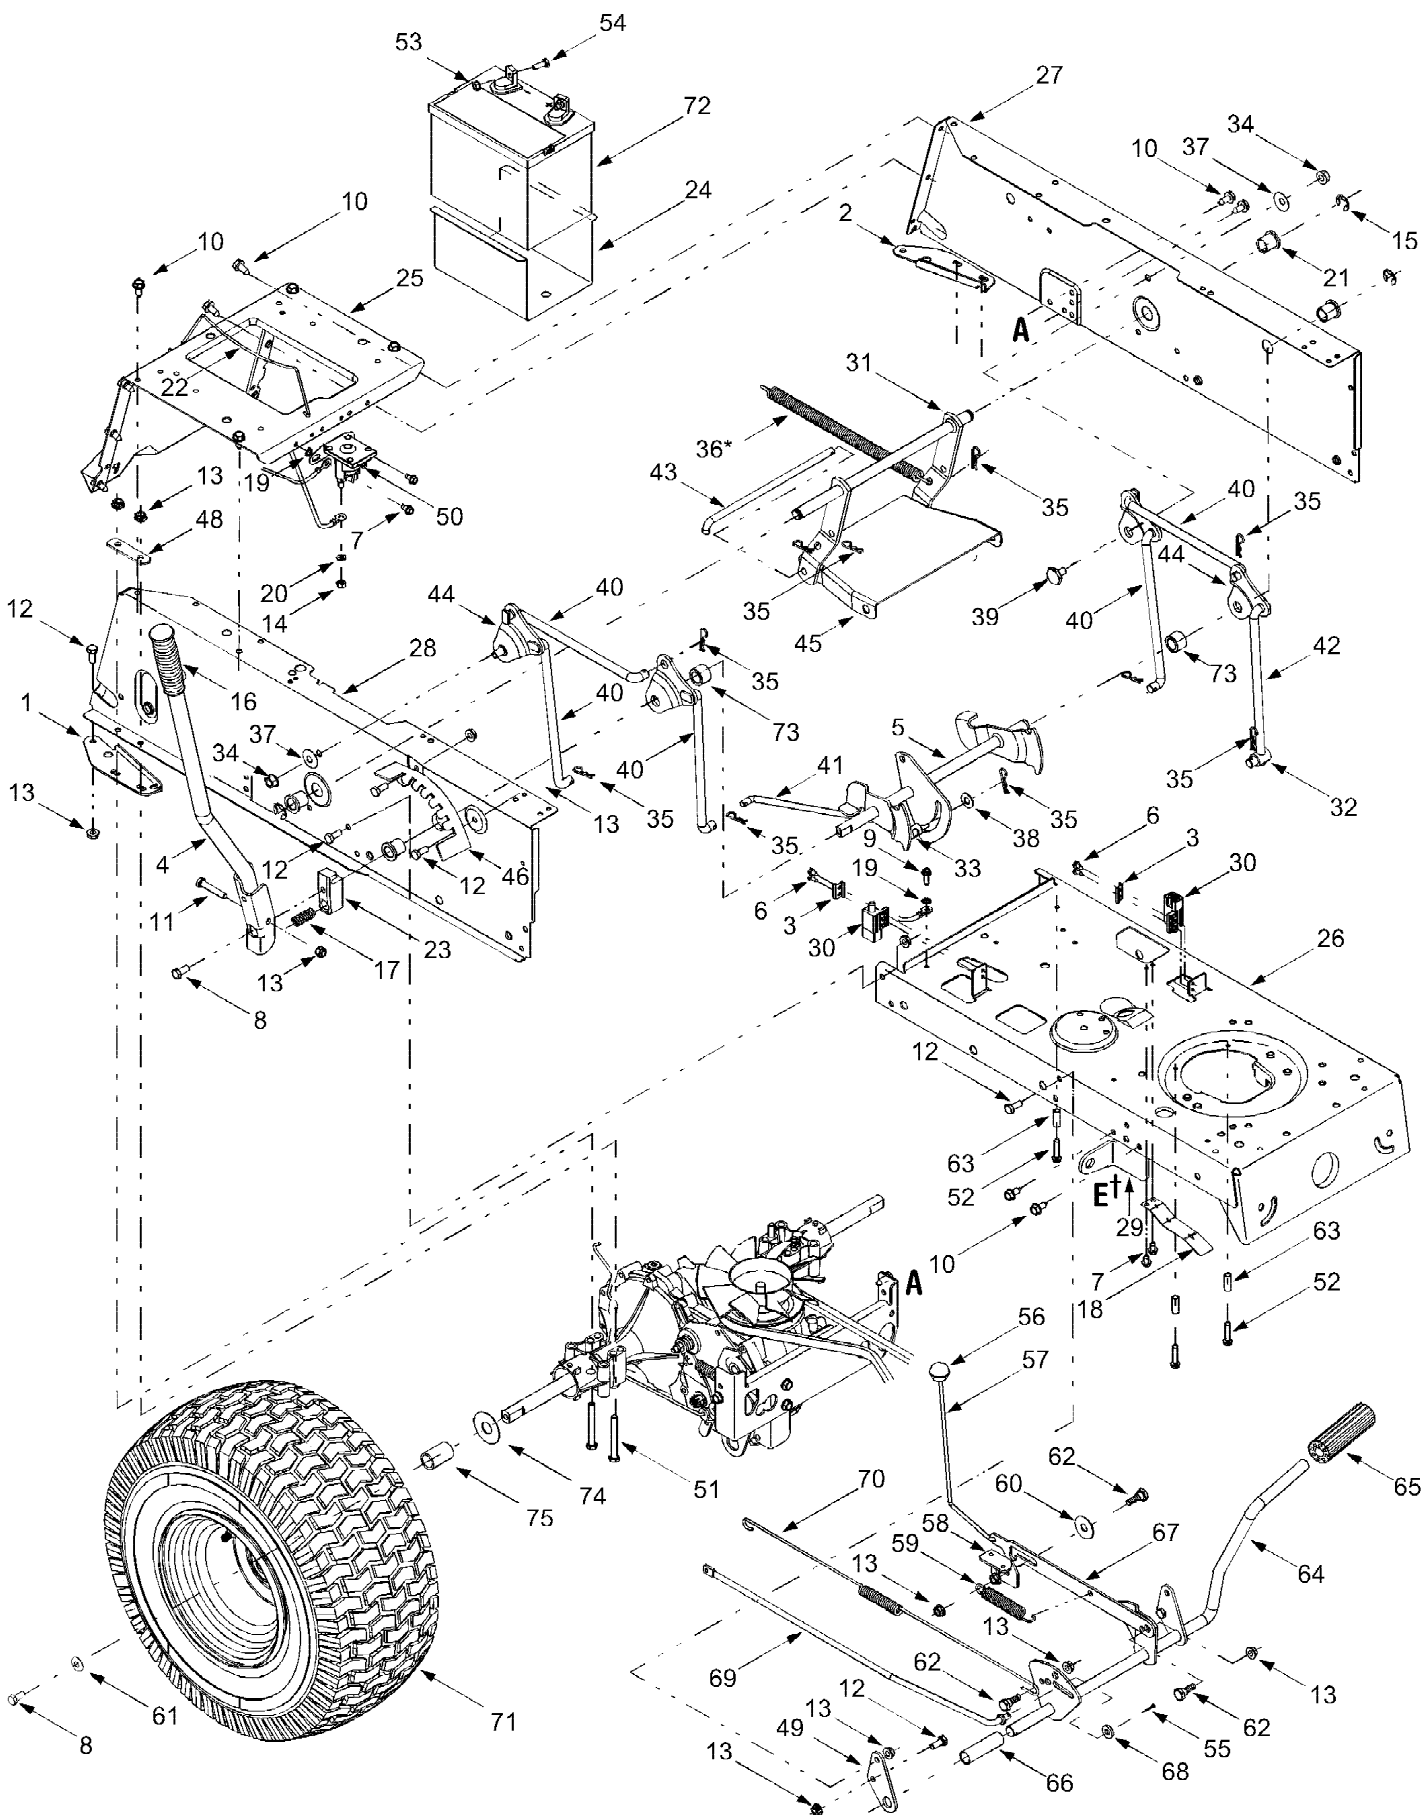


* Attach the rear end of spring (Ref. 36)
to the notch opening in the rear of Ref. 25.

Ref #	Part Number	Qty	S/P/F	Description
1	17668A	1	S	RH Axle Support Bracket
2	17669A	1	S	LH Axle Support Bracket
3	17962	1		Switch Plate
4	683-04025	1		Lift Handle Assembly
5	683-04049A	1	S	Lift Shaft Assembly
6	710-0224	1	S	Self-tapping Screw, #10-16 x .5
7	710-0599	1	/P	Self-tapping Screw, 1/4-20 x .5
8	710-0627	1	/P	Hex Cap Screw, 5/16-24 x .75
9	710-0642	1	/P	Self-tapping Screw, 1/4-20 x .75
10	710-0726	1	/P	Self-tapping Screw, 5/16-12 x .75
11	710-3180	1	/P	Hex Cap Screw, 5/16-18 x 1.75
12	710-3008	1	/P	Hex Screw, 5/16-18 x .75
13	712-0429	1	S	Lock Nut, 5/16-18
14	712-3006	1	/P	Hex Nut, 1/4-20
15	716-0106A	1		E-Ring, .625 Dia Shaft
16	720-0233	1	S	Handle Grip
17	732-0369	1	S	Compression Spring, .55 x 1.37
18	732-0750A	1	S	Switch Actuator Spring
19	736-0222	1	S	External Lock Washer, 1/4
20	736-0329	1	S	Lock Washer, 1/4
21	741-0487A	1	S	Flange Bearing, .632 ID
22	747-04031	1		Battery Hold-down Rod
23	748-04011A	1	S	Lift Shaft Connector
24	783-0345	1	S	Battery Tray
25	783-0355D	1		Hitch Plate
26	783-04011	1		Lower Frame
27	783-04031	1	S	LH Upper Frame Side Panel
28	783-04032	1		RH Upper Frame Side Panel
29	783-04213	1	S	Deck Anti-sway Bracket
30	725-04039	1	S	Screw-mount Interlock Switch
31	683-04048A	1	S	Stabilizer Shaft Assembly
32	711-04036	1	S	Ferrule, 1/2-20 x .50
33	711-04075A	1	S	Ferrule, 3/8-24 x .375
34	712-0431	1	S	Flange Lock Nut, 3/8-16
35	714-04023	1	S	Internal Cotter Pin, .080 x 1.56
36	732-04097A	1		Extension Spring, .730 x 13.0
37	736-0219	1	S	Bell Washer, .389 x 1.12 x .030
38	736-0267	1	S	Flat Washer, .385 x .87 x .060
39	738-0322	1	/P	Shoulder Bolt, .625 x .217
40	747-04018A	1	S	Deck Hanger Link
41	747-04040A	1		Deck Disengagement Rod
42	747-04069A	1	/P	Deck Hanger Link
43	747-04157	1		Stabilizer Rod
44	748-04010	1	S	Lift Link
45	783-04294	1	S	Stabilizer Bracket
46	783-04113	1	S	Deck Lift Index Bracket
47	17630A	1	S	Shift Lever Retainer
48	17840A	1		Transaxle Mounting Bracket
49	17860	1	S	Pedal Mounting Bracket
50	725-1426	1	S	Solenoid
51	710-0176	1	/P	Hex Cap Screw, 5/16-18 x 2.75
52	710-0809	1		Self-tapping Screw, 1/4-20 x 1.25
53	712-0271	1	/P	Hex Sems Nut, 1/4-20

Ref #	Part Number	Qty	S/P/F	Description
54	710-3015	1	/P	Hex Screw,1/4-20 x .75
55	714-0111	1	S	Cotter Pin, 1.0
56	720-0166	1	/P	Ball Knob
57	747-0608C	1	/P	Brake Lockout Rod
58	17755A	1		Bracket
59	732-0728	1		Extension Spring, 4.31
60	736-0406	1	S	Flat Washer, .442 x 1.38 x .060
61	736-0242	1	/P	Bell Washer, .34 x .872 x .060
62	738-0296	1	S	Shoulder Screw, .437 x .286
63	750-0566A	1	/P	Spacer, .260 x .372 x 1.030
64	683-04005A	1		Clutch / Brake Pedal Assembly
65	735-0196	1	S	Foot Pad, 4.6
66	750-0802	1		Spacer, .640 x .76 x 2.63
67	783-04164	1		Brake Lockout Bracket
68	736-3008	1	S	Flat Washer, .344 x .750 x .120
69	732-04032A	1		Extension Spring, 22.16
70	747-04082	1		Brake Rod
71	634-0104	1		Wheel Assembly Complete
	634-0070	1	/P	Rim Assembly
	734-1730	1		Tire Only (20 x 8 x 8)
	734-0255	1	S	Air Valve
72	725-1737A	1	S	Battery, 190 CCA
73	748-04037A	1	/P	Spacer, .635 x 1.0 x .696
74	736-0866	1		Flat Washer, .755 x 1.92 x .060
75	731-04682	1		Plastic Sleeve

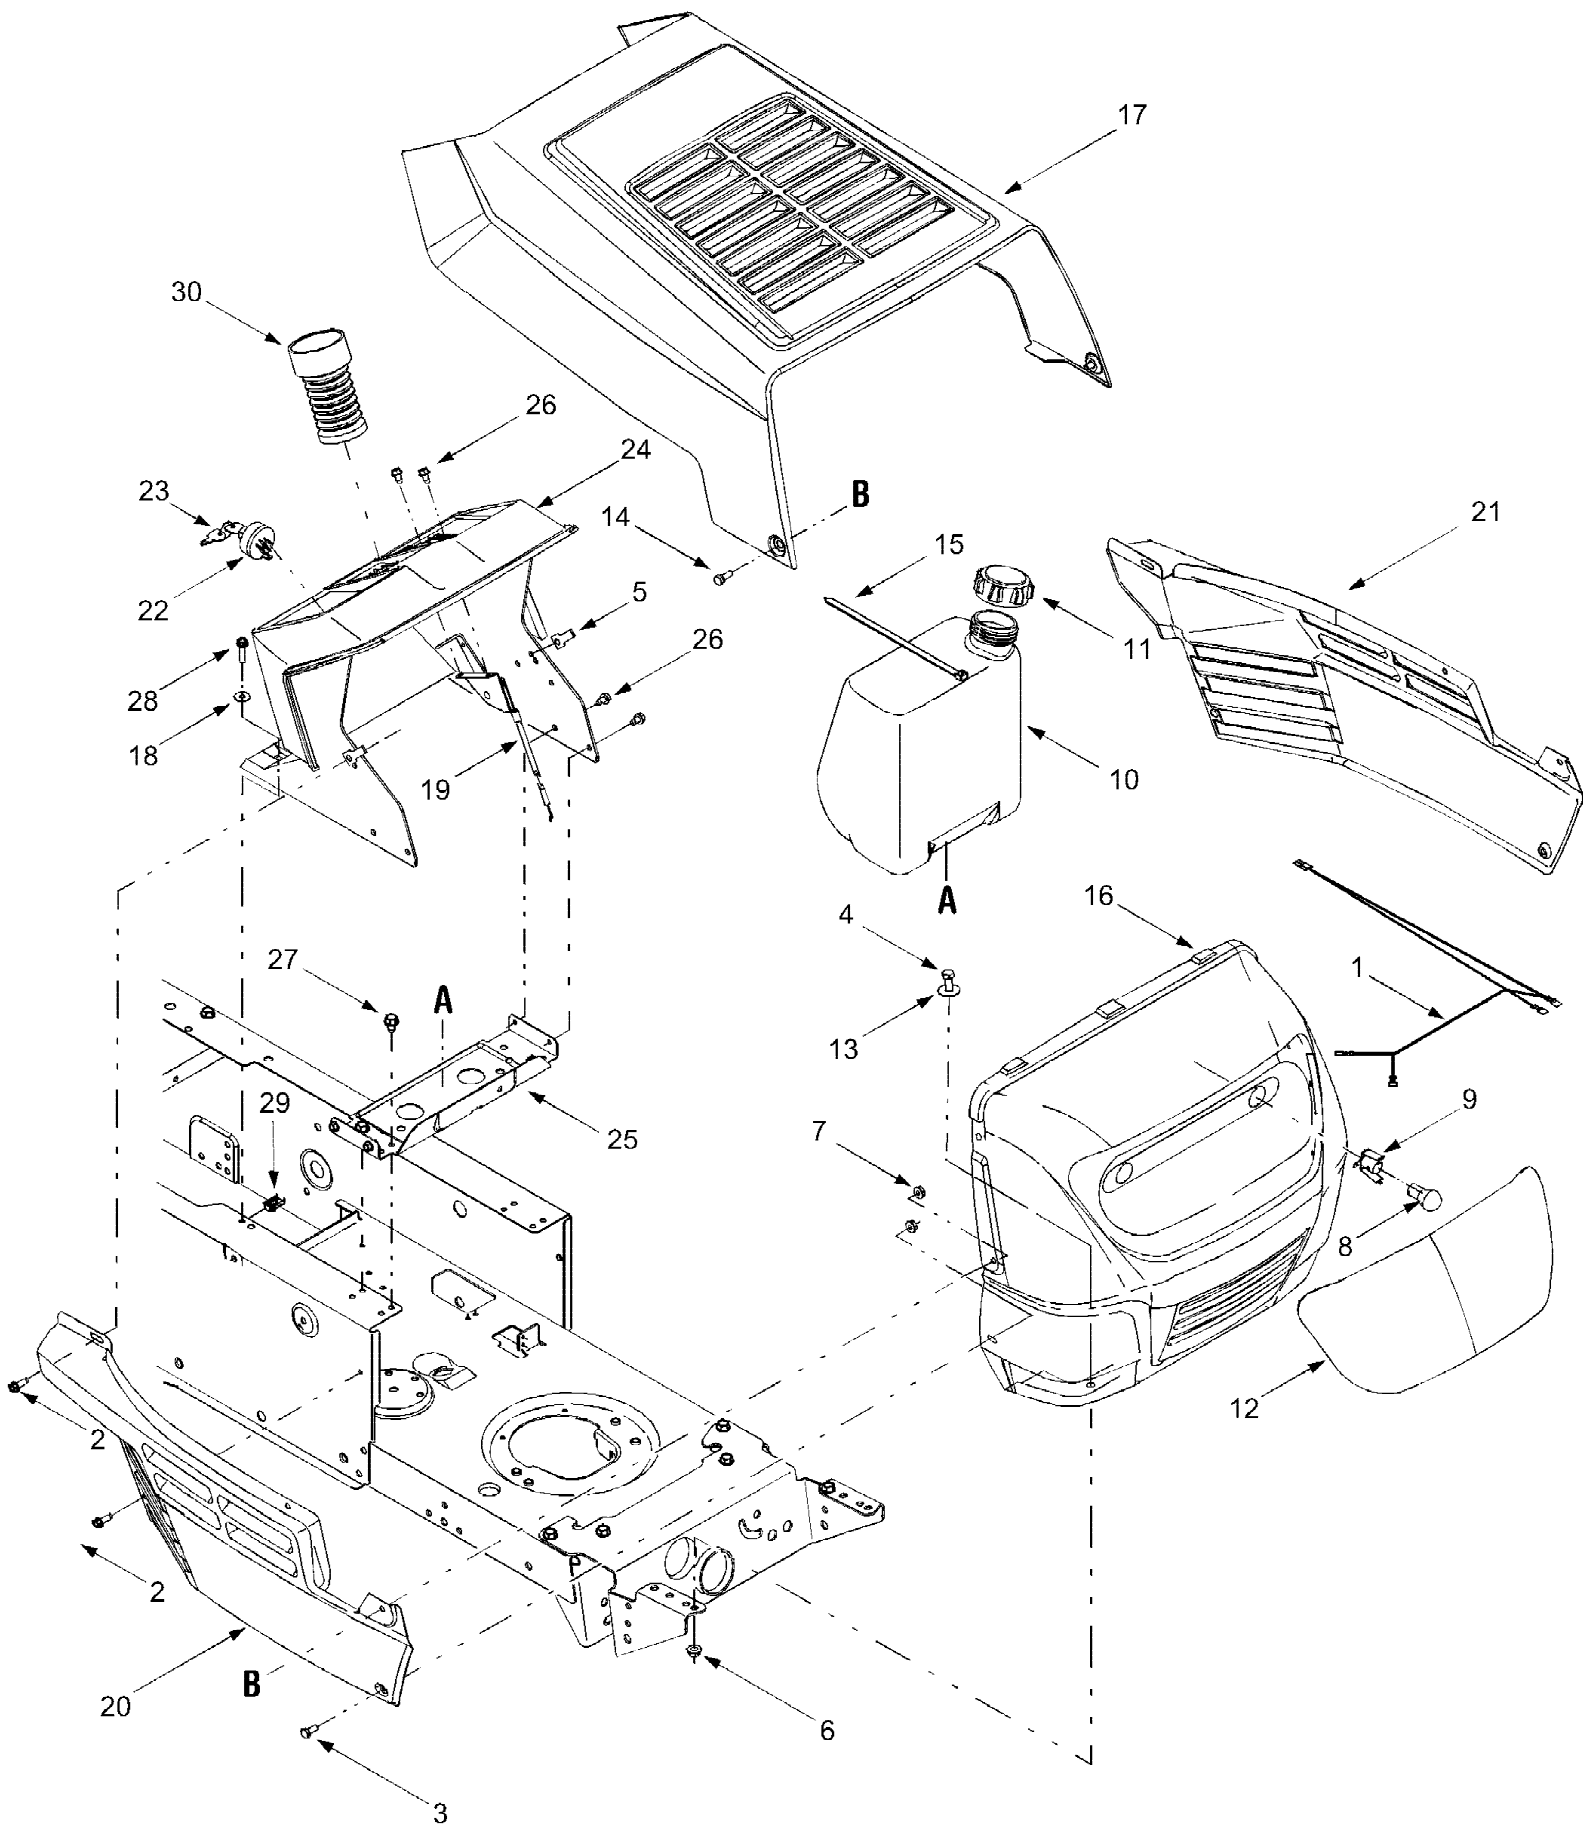

Ref #	Part Number	Qty	S/P/F	Description
1	629-0469B	1	S	Headlamp Harness Assembly
2	710-0642	1	/P	Self-tapping Screw, 1/4-20 x .75
3	710-0751	1	/P	Hex Screw, 1/4-20 x .620
4	710-3008	1	/P	Hex Screw, 5/16-18 x .75
5	712-0185	1		U-type Speed Nut, 1/4-20
6	712-3004A	1	/P	Flange Lock Nut, 5/16-18
7	712-3027	1	S	Flange Lock Nut, 1/4-20
8	725-0963	1	S	Headlamp, 12V
9	725-1651	1	S	Headlamp Socket
10	751-0555B	1	/P	Fuel Tank, 1.5 gal.
11	751-0603	1	S	Fuel Tank Cap
12	731-1503A	1	S	Lens
13	736-3078	1	/P	Flat Washer, .344 x 1.0 x .063
14	738-0952A	1	S	Shoulder Screw, 1/4-20 x .375 /.125
15	726-0209	1	/P	Cable Tie, 30.66
16	783-0156B	1	/P	Grille
17	783-0250A	1		Hood w/ Louvers
18	736-3090	1	/P	Flat Washer, .260 x .720 x .060
19	746-04020	1		Throttle / Choke Control, 18.5"
20	783-0150B	1	/P	RH Side Panel
21	783-0367	1		LH Side Panel
22	725-1396A	1	S	Ignition Switch, 6-pin
23	725-0201	1	S	Keys (pair)
24	731-04179	1	S	Dash Panel
25	17632C	1	S	Battery Support Bracket
26	710-0599	1	/P	Self-tapping Screw, 1/4-20 x .5
27	710-0607	1	/P	Self-tapping Screw, 5/16-18 x .5
28	710-0788	1	/P	Self-tapping Screw, 1/4-20 x 1.0
29	726-3054	1		U-type Speed Nut, 1/4-20
30	731-04387	1		Steering Bellow, 4.75"
	629-04015	1	S	Tractor Harness Assembly (not shown)

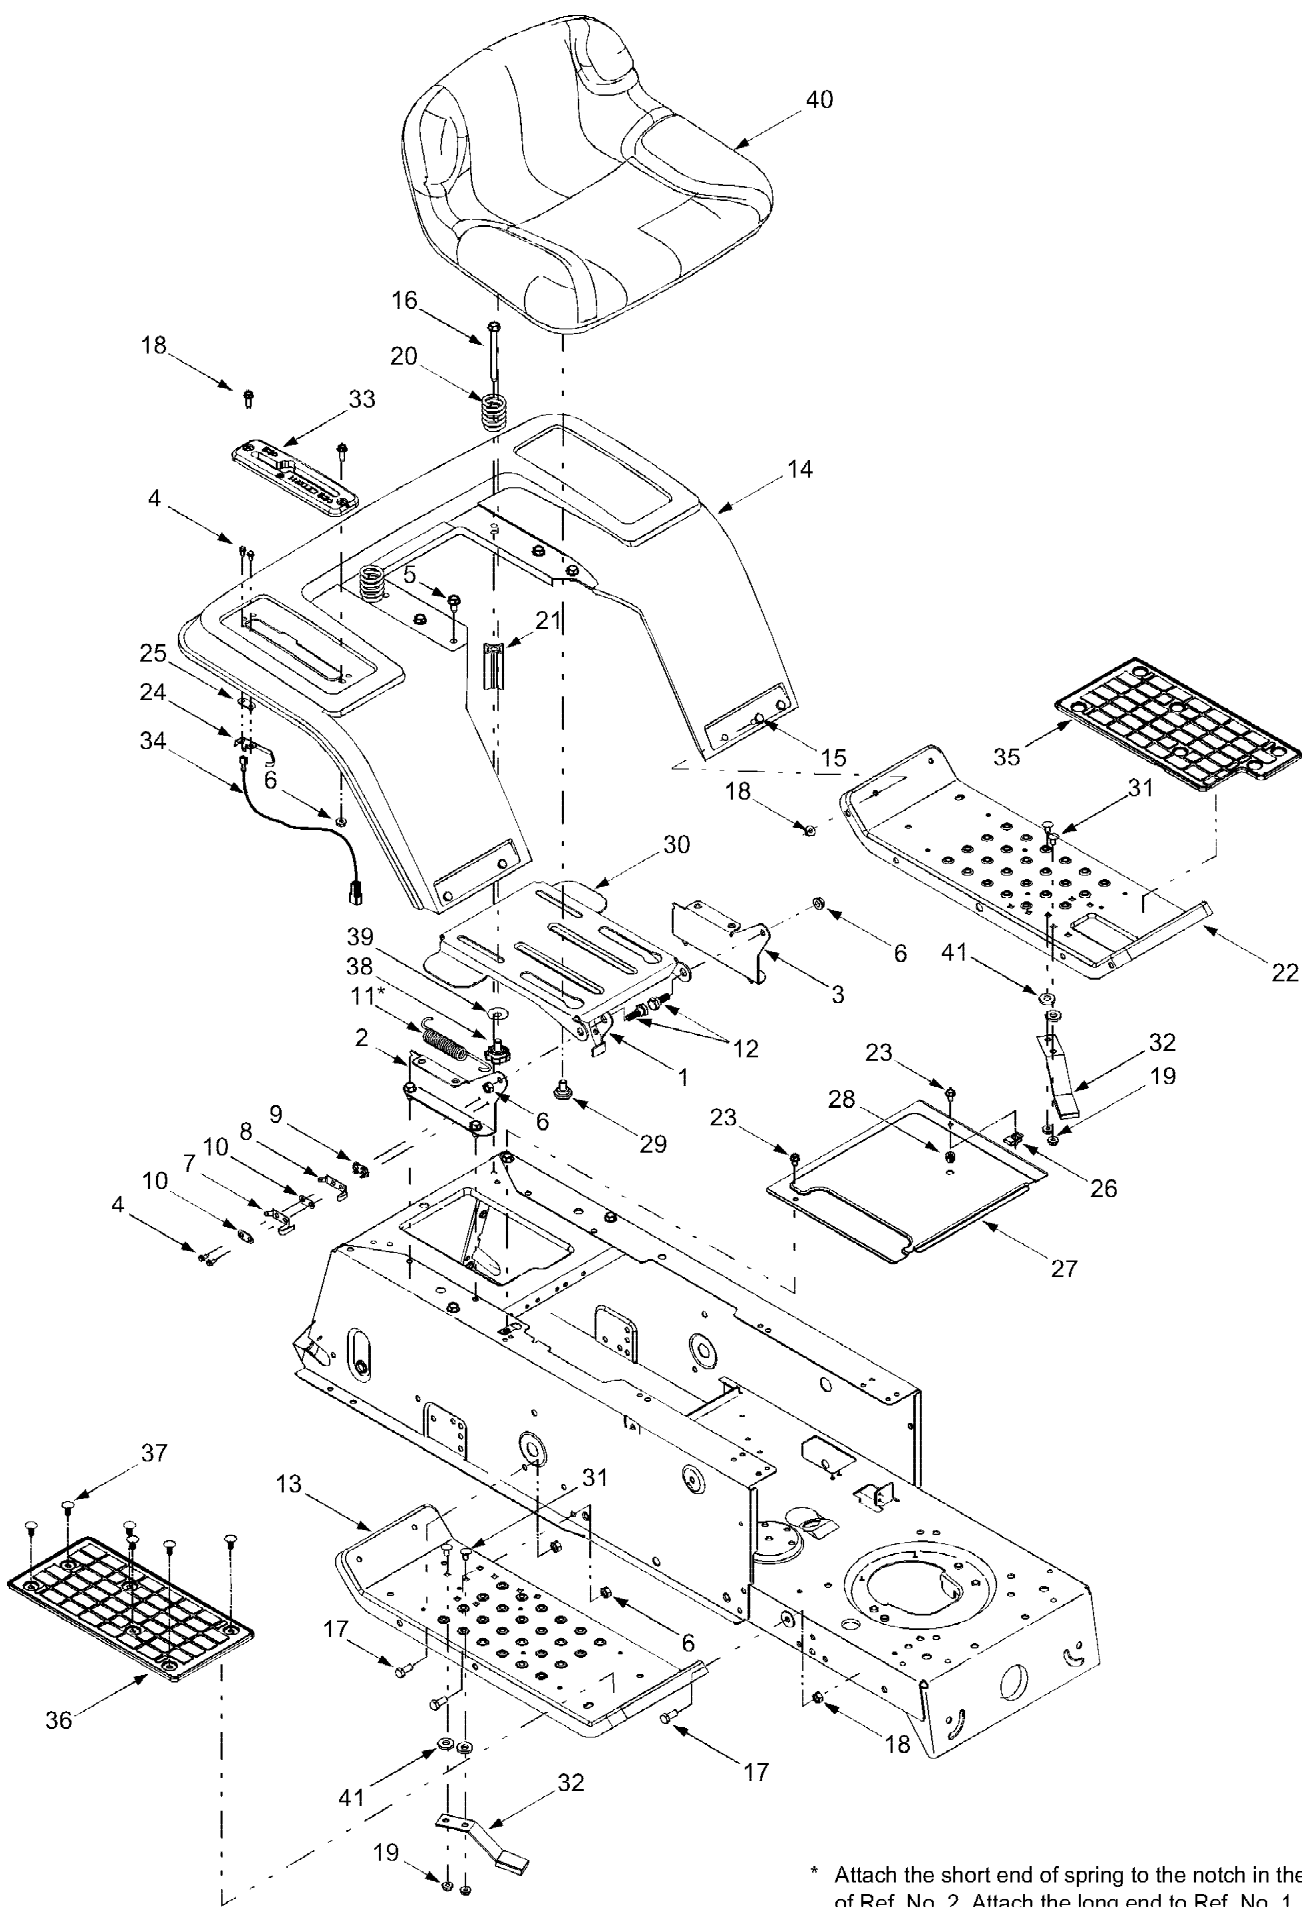

* Attach the short end of spring to the notch in the rear of Ref. No. 2. Attach the long end to Ref. No. 1.

Ref #	Part Number	Qty	S/P/F	Description
1	17239C	1	/P	Seat Lift Bracket
2	17950A	1	S	RH Pivot Support Bracket, Seat
3	17951A	1	S	LH Pivot Support Bracket, Seat
4	710-0227	1	/P	Self-tapping Screw, #8-18 x .50
5	710-0726	1	/P	Self-tapping Screw, 5/16-12 x .75
6	712-0429	1	S	Lock Nut, 5/16-18
7	725-1303	1	S	Outer Seat Spring Switch
8	725-1439	1		Inner Seat Spring Switch
9	726-0278	1		Insulator Plate Boss
10	726-0279	1		Insulator Plate
11	732-0581B	1	S	Extension Spring, .75 x 5.31
12	738-0296	1	S	Shoulder Screw, .437 x .286
13	17770H	1	/P	Running Board
14	17871D	1		Fender
15	710-0751	1	/P	Hex Screw, 1/4-20 x .620
16	710-1208	1	/P	Self-tapping Screw, 5/16-18 x 3.5
17	710-3008	1	/P	Hex Screw, 5/16-18 x .75
18	710-0642	1	/P	Self-tapping Screw, 1/4-20 x .75
19	712-0324	1	/P	Lock Nut, 1/4-20
20	732-04038	1	S	Compression Spring, 1.314 x 1.8
21	750-04212	1		Spacer
22	783-04139A	1		LH Running Board
23	710-0599	1	/P	Self-tapping Screw, 1/4-20 x .5
24	725-1713	1		Spring Switch, Long
25	726-0320	1	S	Insulator Nut Plate
26	726-3054	1		U-Clip Nut, 1/4-20
27	783-04094A	1		Cover Panel
28	731-0405	1		Snap Bushing
29	738-04012	1	S	Shoulder Screw, .625 x .175, 3/8-16
30	783-04081A	1		Seat Pivot Bracket, Manual Adjust
31	710-0167	1	/P	Carriage Screw, 1/4-20 x .50
32	761-0168B	1	S	Blade Spindle Brake Assembly
33	731-1734	1	S	Speed Index Bracket
34	725-1399	1		Wire Extension, Reverse
35	735-04009	1		LH Rubber Foot Pad
36	735-0689A	1	/P	RH Rubber Foot Pad
37	726-3046	1	/P	Ratchet Clip, .250 Dia
38	720-04009	1	S	Knob, 3/8-16 x .625
39	736-0219	1	S	Bell Washer, .389 x 1.120 x .030
40	757-04011B	1	S	Medium Back Seat, Yellow
41	736-3008	1	S	Flat Washer, .344 x .750 x .120