


Model Series 620

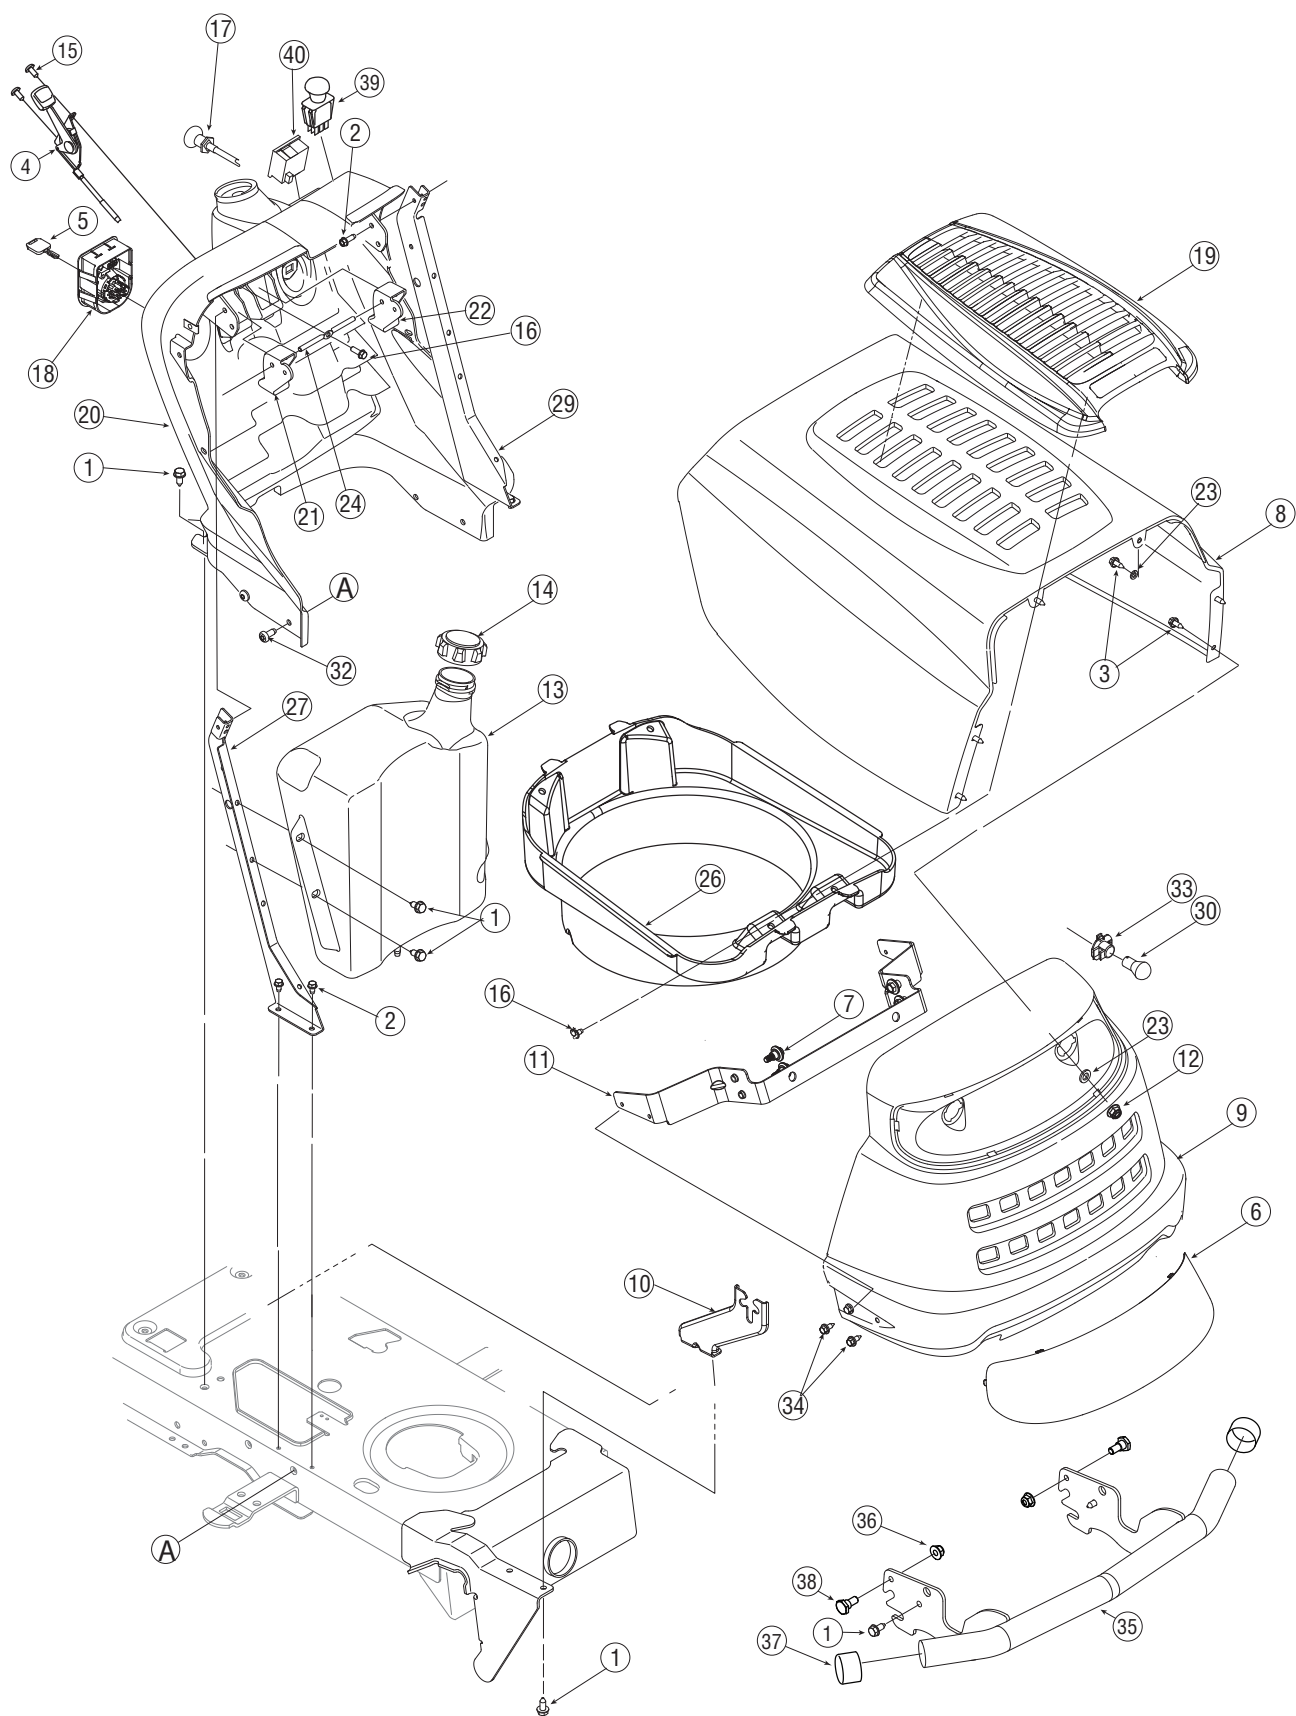


Ref. No.	Part No.	Description
1	710-0726	Screw, 5/16-12 x .750
2	710-0599	Self-tapping Screw, 1/4-20 x.5
3	710-0751	Hex Cap Screw, 1/4-20 x.62
4	746-04365	Throttle Control/Cable
5	725-1745	Ignition Key w/ plastic cover
	725-1744	Ignition Key w/o plastic cover
6	731-04949	Headlight Lens
7	738-04091	Shoulder Screw,.43 x.29
8	783-04551	Hood, 1 Style
9	783-04552	Grill, 1 Style
10	783-04578	Pivot Bracket - RH
	783-04577*	Pivot Bracket - LH
11	783-04621	Grill Pivot Bracket
12	712-04064	Flange Lock Nut, 1/4-20
13	751-0658E	Fuel Tank, Three Gallon
14	751-0603	Fuel Cap
15	710-1017	Screw, 1/4-14 x.625
16	710-0895	Self-tapping Screw, 1/4-15 x.75
17	746-1085A	Choke Control Cable
18	725-04227B	Ignition Switch
19	731-05522	Hood Cover, 5 Style
20	731-05005B	Dash Panel
21	731-04215	Cruise Control Button
22	731-04217	Parking Brake Button

Ref. No.	Part No.	Description
23	736-0176	Flat Washer, .265 x .938 x 1.20
24	747-1196	Brake/Cruise Pivot Rod
25	629-04083A*	Headlight Wire Harness
26	731-05165A	Plenum
27	783-04285E	RH Dash Support Plate
28	710-0607	Screw, 5/16-18 x .500
29	783-04323D	LH Dash Support Plate
30	725-0963	Lamp
31	736-0270	Bell Washer,.265 x.75 x.062
32	710-1611B	Screw, 5/16-18 x.75
33	725-1649	Headlight Socket
34	710-1652	Hex Index Screw, 1/4-20 x.625
35	683-04219A	Bumper Assembly
36	712-04065	Flange Lock Nut, 3/8-16
37	731-05674	Cap
38	738-0143	Shoulder Bolt, 3/8-16
39	725-1752	Electric PTO Switch
40	725-04036C	Systems Ind. Monitor w/Hr. Mtr.
	725-04156	Systems Ind. Monitor w/ Amtr.
—	725-04403*	Wire Harness (w/Hour Meter)
—	725-04404*	Wire Harness (w/Hour Meter & Electric PTO)
—	725-04411*	Wire Harness (w/Ammeter)
—	777X41984	Headlight Reflective Insert

* Not Shown

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Model Series 620

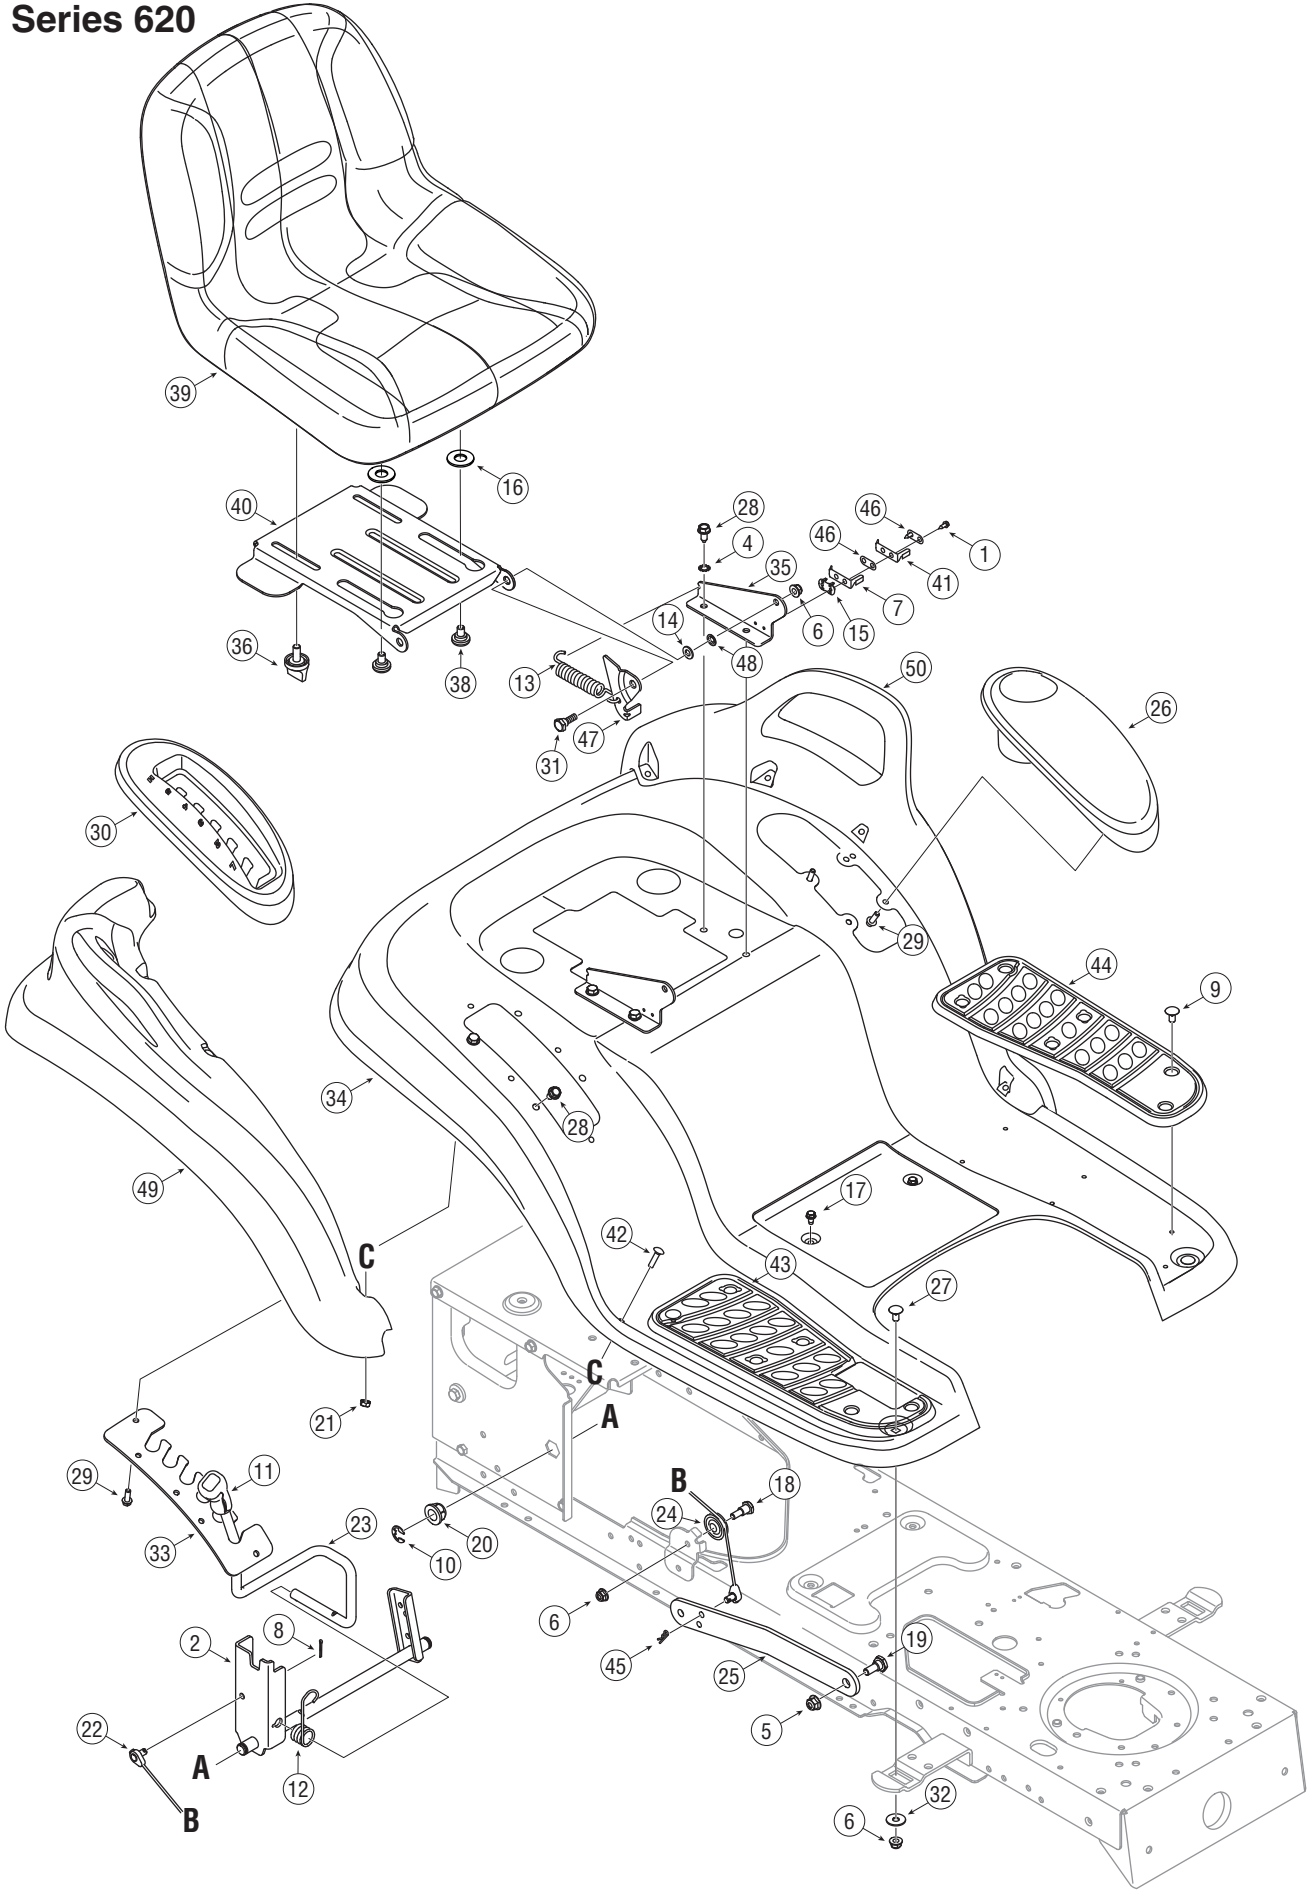

Ref. No.	Part No.	Description
1	710-0227	Screw, #8-18 x.500
2	683-04301	Lift Shaft Assembly
3	736-0204	Washer, Flat, .344 x .62 x .033
4	736-0607	Lock Washer, 5/16
5	712-04065	Flange Lock Nut, 3/8-16
6	712-04063	Flange Lock Nut, 5/16-18
7	725-1439	Inner Seat Spring Switch
8	714-0104	Hairpin Clip
9	726-3046	Foot Pad Clips
10	716-0106A	E-Ring
11	720-0311	Handle Grip
12	732-0874	Torsion Spring
13	732-1184	Extension Spring,.84 x 4.6
14	736-0242	Flat Washer
15	726-0278	Insulator Boss Plate
16	736-0300	Flat Washer, .406 x .875 x .059
17	710-0599	Screw, 1/4-20 x.500
18	738-0138A	Hex Cap Screw, 5/16-18 x.62
19	738-0380	Shoulder Screw, 3/8-16
20	741-0225	Hex Flange Bearing
21	712-0271	Sems Nut 1/4-20
22	746-0968	Lift Cable, 16.16
23	747-04447	Lift Handle
24	756-1154	Roller Pulley
25	783-0678B	Arm Lift

Ref. No.	Part No.	Description
26	731-1993A	Cover w/ Cup Holder
27	710-0451	Carriage Bolt, 5/16-18 x.750
28	710-0604A	Self-tapping Screw, 5/16-18 x.625
29	710-0895	Self-tapping Screw, 1/4-15 x.75
30	731-1990	Lift Lever Cover
31	738-0296	Shoulder Screw,.437 x.286
32	736-3078	Flat Washer,.349 x 1.0 x.063
33	783-0677B	Lift Adjustment Bracket
34	783-04459A	Fender 4 Sty Hydro w/ Flares
35	783-1489C	Seat Mounting Bracket
36	720-04061	Knob, 3/8-16 x .875
37	712-04064	Flange Lock Nut, 1/4-20
38	738-04012A	Shoulder Screw, 3/8-16 .625 x .145
39	757-04003A	High Back Seat, Black
40	783-04081B	Seat Pivot Bracket
41	725-1303	Outer Seat Spring Switch
42	710-0932	Carriage Screw 1/4-20 x 1.00
43	735-0656	RH Foot Pad
44	735-0657	LH Foot Pad
45	714-0111	Cotter Pin
46	726-0279	Insulator Plate
47	783-0209D	Seat Lift Bracket
48	726-0201	Speed Clip
49	731-2618	RH Fender Flare
50	731-2619	LH Fender Flare

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

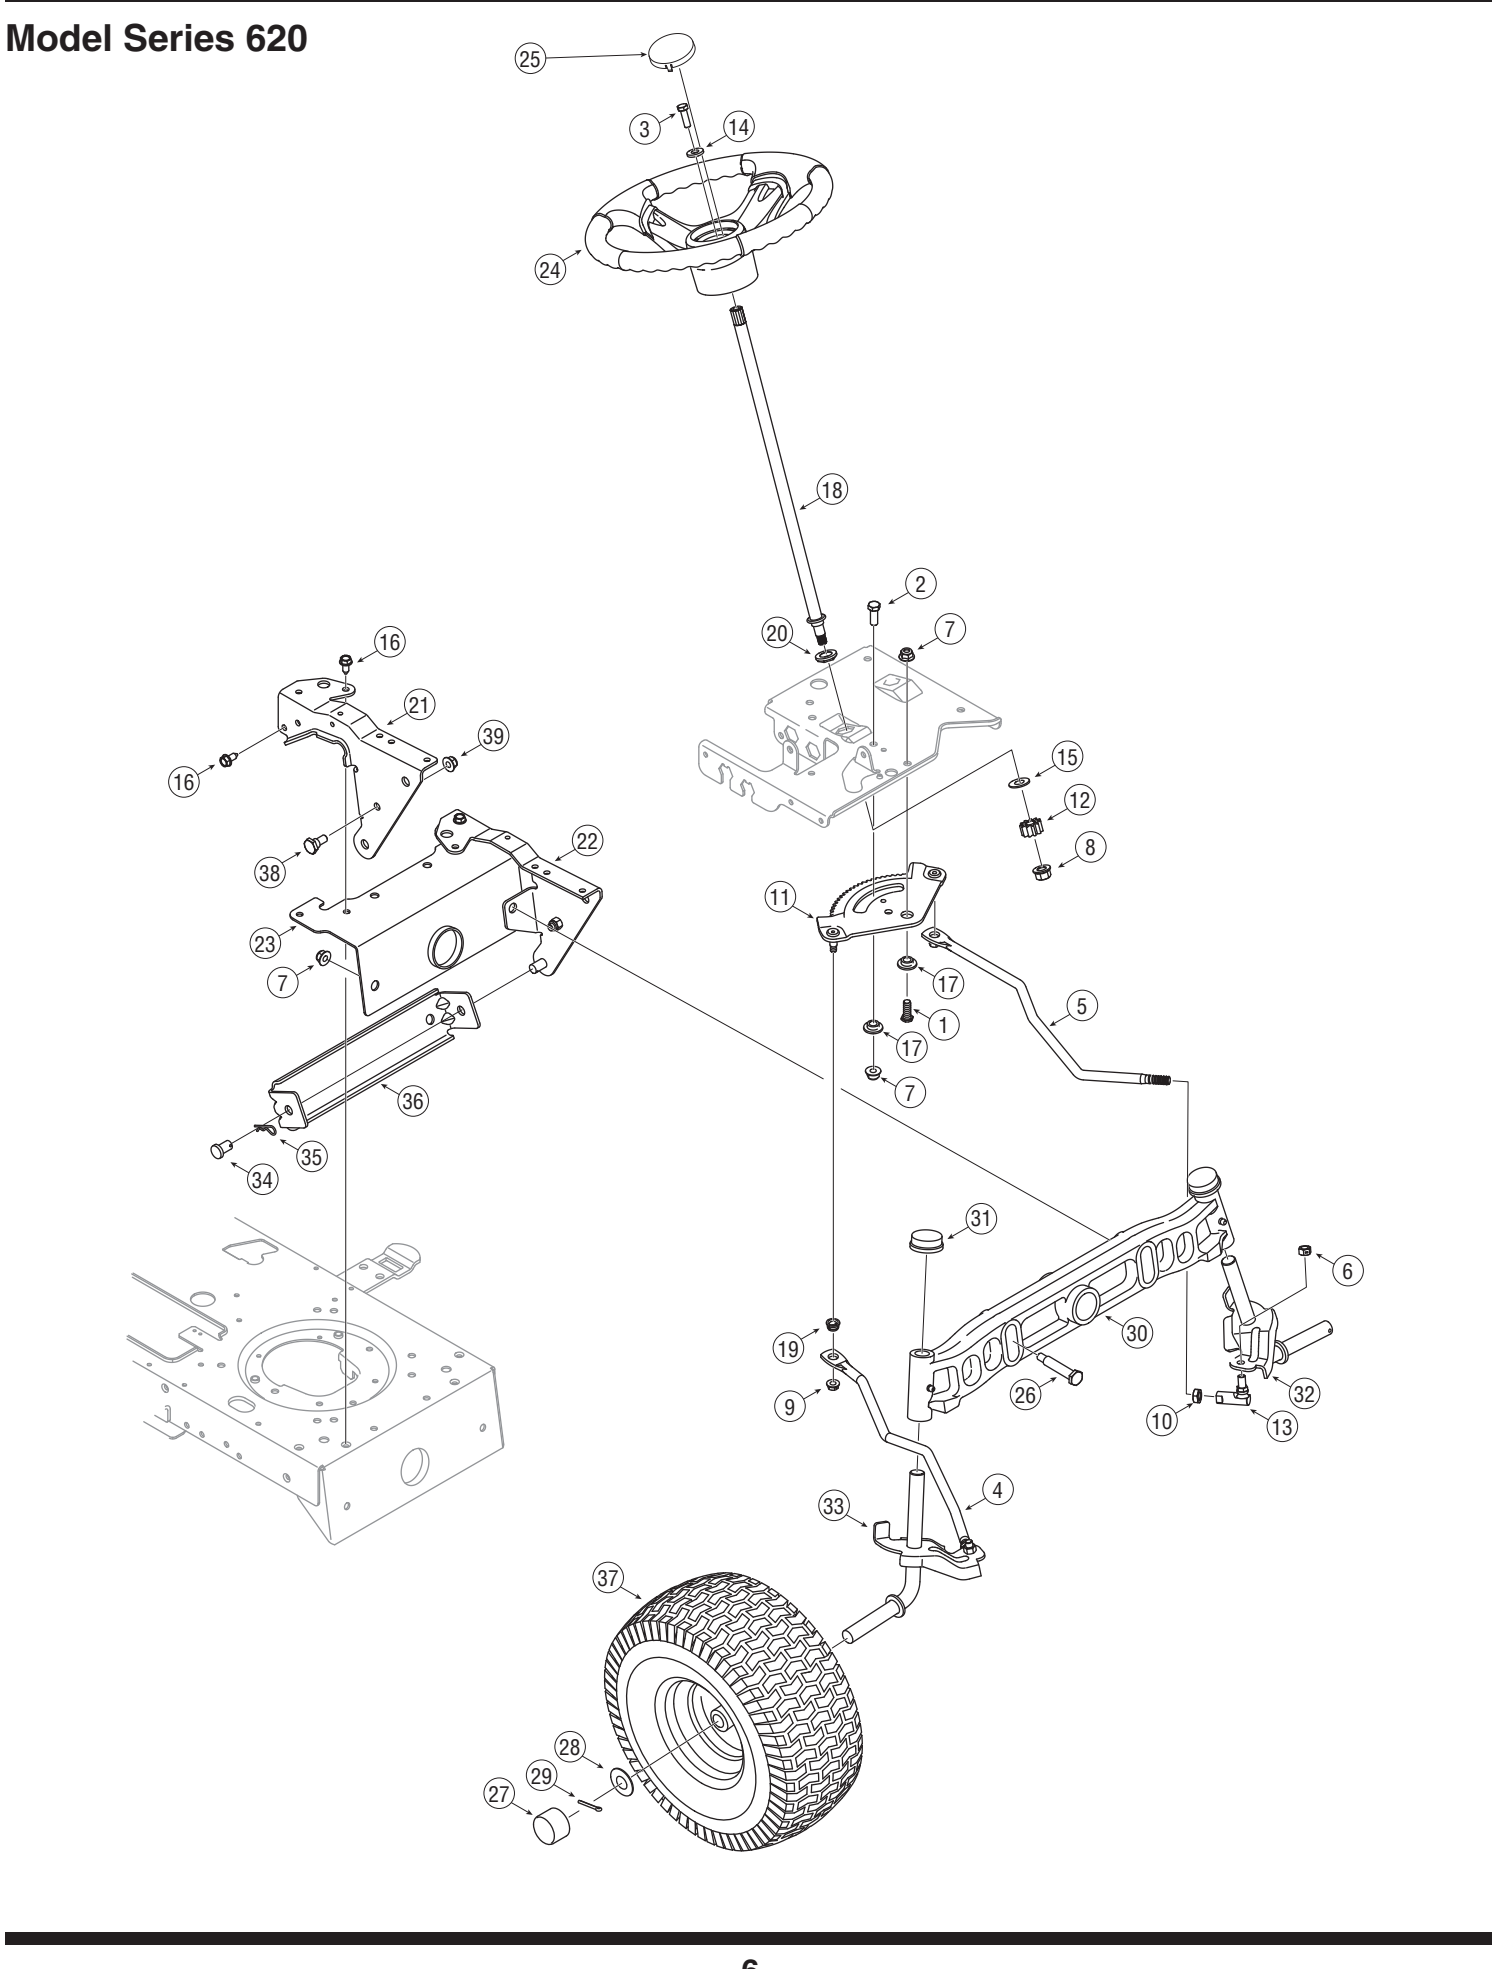

Ref. No.	Part No.	Description
1	710-04095	Hex Screw, 3/8-16, 1.00, Gr5
2	710-0514	Hex Screw, 3/8-16, 1.00, Gr5
3	710-0643	Hex Screw, 5/16-18, 1.00, Gr5
4	711-1408	Link, Drag, RH
5	711-1409A	Link, Drag, LH
6	712-0214	Nut, Hex Lock, 3/8-24
7	712-04065	Nut, Flange Lock, 3/8-16
8	712-0459	Nut, Flange Lock, 7/16-20
9	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
10	712-0240	Nut, Jam, 7/16-20, Gr2
11	717-1550E	Gear, Steering, 11/90 Ratio
12	717-1554	Gear, Pinion, Steering
13	723-0448A	Ball Joint, 7/16-20, Lock
14	736-3004	Washer, Flat,.406 x.875 x.105
15	736-3084	Washer, Flat,.51 x 1.12 x.06
16	710-1260A	Screw, 5/16-18, 0.750
17	738-04154	Spacer, Shoulder,.38 x 1.00 x.31
18	738-1001A	Shaft, Steering,.625 OD x 24.25
19	741-0475	Plastic Bushing.380 ID
20	741-0656A	Hex Flange Bearing 5/8 PM
21	783-0726E	Pivot Bracket, Support RH

Ref. No.	Part No.	Description
22	783-0727D	Pivot Bracket, Support LH
23	783-0728B	Pivot Bracket, Bar
24	631-04008A	Steering Wheel, 13.25
25	731-04039	Steering Wheel Cover
26	738-1011A	Shoulder Screw,.5 x 2.2, 3/8-16
27	731-05674	Cap
28	736-04228	Flat Washer, .781 x 1.589
29	714-04039	Cotter Pin, 5/32 x 1.25
30	719-04105	Cast Iron Pivot Bar
31	726-0341	Push Cap
32	638-04003A	LH Axle Assembly,.750
33	638-04004A	RH Axle Assembly,.750
34	711-0332	Pin, Clevis,.50 x.78
35	714-04023	Cotter Pin, Int., .080 x 1.5625
36	783-0720A	Adjustment Bracket, Front
37	634-04086	Wheel Assembly Complete,
	734-1731	Tire Only 15 x 6 x 6 Sq. Shldr.
	634-04081	Rim Only w/ Valve Stem
38	738-0143	Screw, Shldr,.498 x.340, 3/8-16
39	712-0431	Flange Lock Nut, 3/8-16

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.




REF.	PART NO.	DESCRIPTION
1	17840	Transmission Mounting Bracket
2	618-04228	Wheel Hub Assembly
3	618-04270A	Hydrostatic Transmission
4	629-04124*	Harness Assembly
5	710-0227	AB Screw #8-18 x 0.375
6	710-0502A	TT Sems Screw 3/8-16 x 1.250
7	710-0520	Hex Bolt 3/8-16 x 1.5
8	710-0627	Screw, 5/16-24 x .750
9	710-0653	TT Screw 1/4-20 x 0.5
10	710-0726	AB Screw 5/16-12 x 0.75
11	710-0778	Screw, 1/4-20 x 1.50
12	710-1007	Screw, 3/8-16 x 1.50
13	710-1266	Hex Bolt 5/16-18 x 3.5
14	710-3007	Carriage Screw
15	710-3011	Hex Bolt 3/8-16 x 2.25
16	711-0832	Ferrule
17	712-0240	Jam Nut 7/16-20
18	712-04063	Flange Lock Nut, 5/16-18
19	712-0431	Flanged Lock Nut 3/8-16
20	712-3017	Flanged Lock Nut 3/8-16
21	712-3066	Hex Nut, 1/2-20
22	714-0111	Cotter Pin
23	714-0507	Cotter Pin
24	725-0157	Cable Tie <i>(Not shown)</i>
25	725-1644	Switch
26	726-0154	Cable Tie <i>(Not shown)</i>
27	726-0320	Insulator Nut Plate
28	731-05300	Sleeve, .765 x 2.410 Lg.
29	731-1449A	Blade Fan
30	732-0209	Extension Spring
31	732-04323B	Extension Spring
32	732-0716C	Extension Spring
33	732-0729	Wire Ring
34	732-0994	Extension Spring
35	732-3118	Extension Spring
36	736-0169	Lock Washer
37	736-0242	Bell Washer,.340 x.872 x.060
38	736-0258	Flat Washer,.385 x 1.0 x .135
39	736-0300	Flat Washer
40	736-0921	Lock Washer
41	736-3010	Flat Washer
42	712-3050	Lug Nut 7/16-14
43	738-0372B	Shoulder Spacer

REF.	PART NO.	DESCRIPTION
44	747-04139	Brake Rod
45	747-1149	Bypass Rod
46	747-1151	Control Rod
47	748-0334	Transaxle Spacer
48	750-0566A	Spacer,.260 x.372 x 1.030 Lg.
49	754-0461	V Belt, A x 78" Lg
50	756-04111	Input Pulley
51	756-04209	Idler Pulley
52	756-04224	Flat Idler Pulley
53	783-04442	Idler Bracket
54	783-0810B	Torq Bracket
55	783-1019B	Actuator Bracket
56	647-0049A	Hydrostatic Control Assembly
57	647-04100	Brake Control Assembly
58	683-0267C	Pedal Assembly
59	710-1260A	LD Screw 5/16-18 x 0.75
60	711-04159B	Pin
61	712-04065	Flange Lock Nut, 3/8-16
62	712-3004A	Flange Lock Nut, 5/16-18
63	714-0104	Pin, Cotter
64	732-0335	Compression Spring
65	732-0955	Extension Spring
66	732-0963	Extension Spring
67	735-0662	Control Pedal
68	735-3049A	Brake Control Pedal
69	736-0119	Lock Washer 5/16
70	736-0187	Flat Washer,.64 x 1.24 x.06
71	736-0262	Flat Washer, .385 x .870 x .092
72	738-0155	Shoulder Screw
73	738-0380	Shoulder Screw
74	741-0225	Hex Flange Bearing
75	741-3065B	Hex Flange Bearing
76	747-04093A	Brake Lock Control Rod
77	747-04096	Cruise Control Rod
78	747-04641	Brake Pedal
79	748-04039C	Cruise Latch
80	783-04612	Steering Support Bracket
81	783-0663E	Hydro Lockout Bracket
82	634-0104	Wheel Complete, 20 x 8 x 8
	734-1730	Tire Only, 20 x 8 x 8
	634-0070	Rim Only
	734-0255	Tubeless Air Valve

*Not Shown

Model Series 620

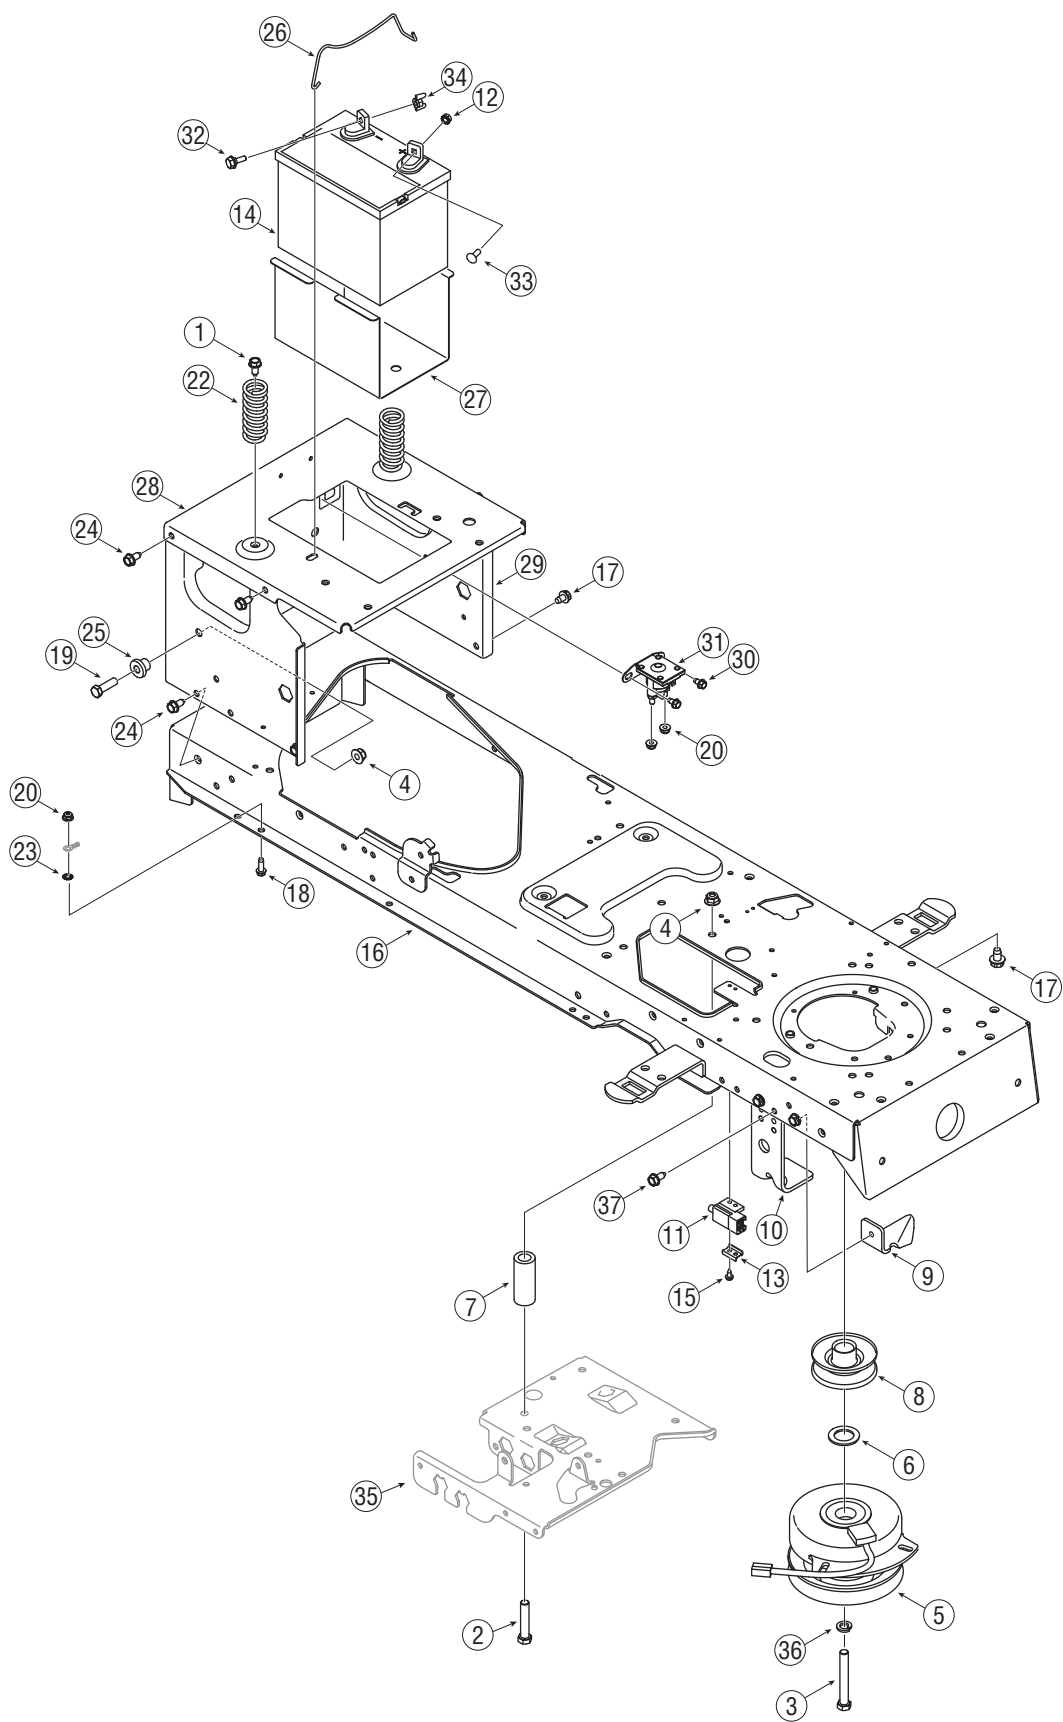


Ref. No.	Part No.	Description
1	710-1260A	Screw, 5/16-18 x 0.75
2	710-3011	Screw, 3/8-16, 2.25, Gr5
3	710-04379A	Screw, 7/16-20, 3.50, Gr5, Lock
4	712-04065	Nut, Flange Lock, 3/8-16
5	717-1774B	PTO Clutch, Electric
6	736-0277	Washer, Flat, 1.031 x 1.620 x.095
7	748-0415B	Spacer,.385 ID x.635 OD x 1.54
8	756-0978B	Pulley, Engine, 3.56 Diameter
9	783-04419B	Clutch Bracket
10	783-04467A	Deck Bracket, Up-Stop
11	725-04039	Switch
12	712-0271	Nut, Sems, 1/4-20
13	17962	Switch Plate
14	725-1750A	Battery, 235 CCA
15	710-0224	AB Screw, #10-16 x.500
16	683-04173B	Frame Assembly, Lower
17	710-0607	Screw, 5/16-18, 0.500
18	710-0642	Screw, 1/4-20, 0.750
19	710-3005	Screw, 3/8-16, 1.25, Gr5

Ref. No.	Part No.	Description
20	712-04064	Nut, Flange Lock, 1/4-20
21	783-0693	Axle Bracket
22	732-04035	Spring, Compress., 1.28 x 3.125
23	736-0222	Washer, Lock, 1/4, External
24	710-0604A	Screw, 5/16-18, 0.625
25	738-04058	Spacer, Shoulder,.38 x 1.0 x.70
26	747-04121A	Hold Rod, Battery
27	783-0349	Battery Tray
28	783-04329A	Seat Bracket, Frame
29	783-04809D	Frame, Upper
30	710-0599	Screw, 1/4-20, 0.50
31	725-04439	Solenoid, 12V, 100 Amp
32	738-1132	Screw, Shoulder,.250 x.15, 1/4-20
33	710-04666	Hex Flange Bolt, 1/4-20,.75
34	712-3087	Nut, Wing, 1/4-20
35	783-04612	Support Bracket, Steering
36	736-0171	Lock Washer, 7/16
37	710-0726	Screw, 5/16-12 x .750

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

50" Electric PTO Deck

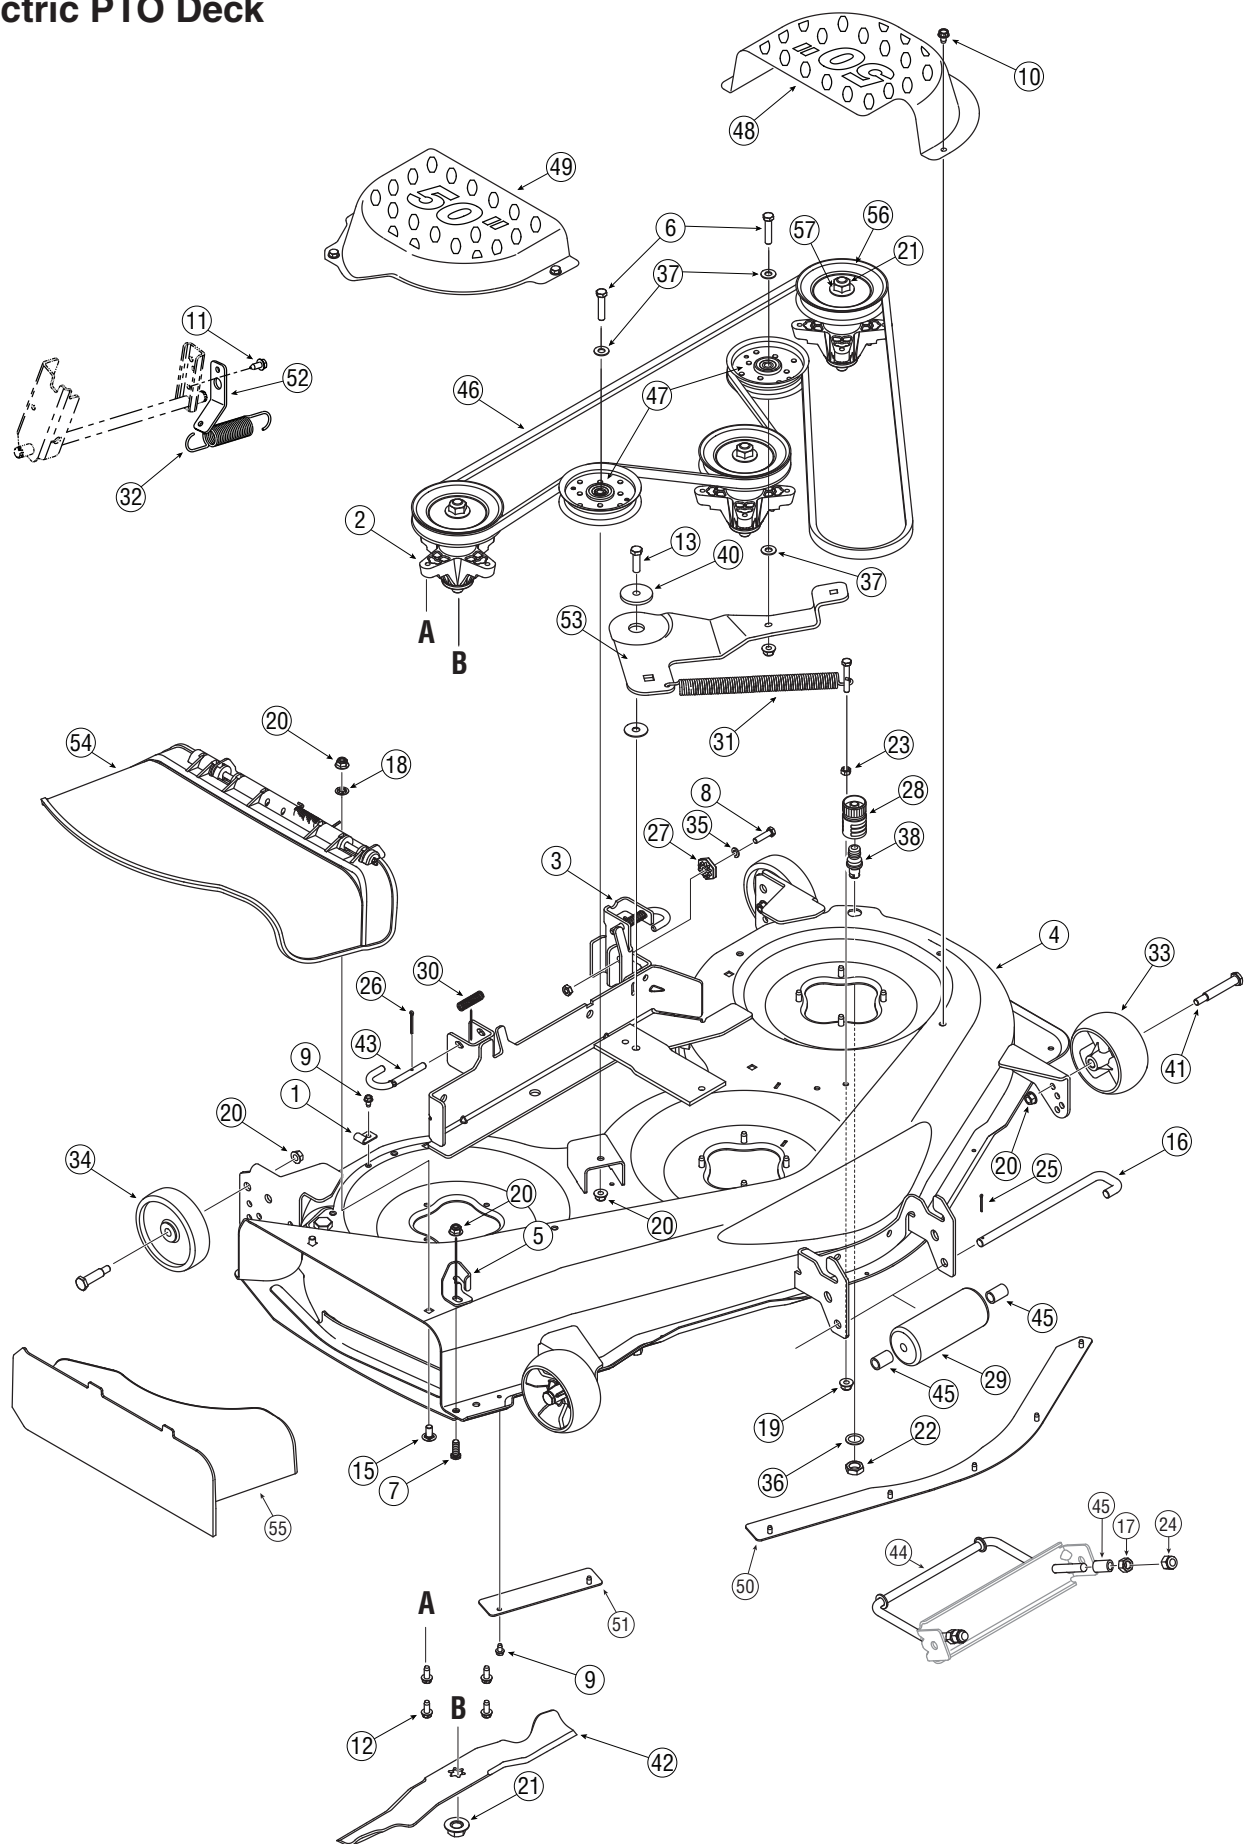


Ref. No.	Part No.	Description
1	16606	Hook, Retainer
2	618-04126A	Spindle Assembly
3	683-0254B	Hanger Bracket Assembly
4	683-04075	Weldment, 50-inch Deck
5	703-3279	Chute Stop
6	710-0347	Screw, 3/8-16, 1.75
7	710-04095	Screw, 3/8-16 x 1.0
8	710-0528	Screw, 5/16-18, 1.25, Gr5
9	710-0599	Screw, 1/4-20 x 0.5
10	710-0607	Screw, 5/16-18 x .75
11	710-0726	Screw, 5/16-12 x .750
12	710-1260A	Screw, 5/16-18 x .75
13	710-3005	Screw, 3/8-16, 1.25
14	710-3103	Screw, 5/16-18 x 2.00
15	710-3178	Screw, Carriage, 3/8-16 x .75
16	711-1737	Roller Pin
17	712-0206	Hex Nut, 1/2-13
18	712-0229	Push Nut Retainer
19	712-04063	Nut, Nylon Lock, 5/16-18
20	712-04065	Nut, Nylon Lock, 3/8-16
21	712-0417A	Nut, Hex, Flange, 5/8-18
22	712-0641	Nut, Hex, M16-1.5
23	712-3010	Nut, Hex, 5/16-18, Gr5
24	712-3083	Hex Lock Nut, 1/2-13
25	714-0111	Pin, Cotter, 3/32 x 1.00
26	714-0470	Pin, Cotter, 1/8 x 1.25
27	717-04074	Deck Adjustment Gear
28	721-04041	Coupler, Hose
29	731-3005	Roller

Ref. No.	Part No.	Description
30	732-0306A	Spring, Compression, .531 x 1.75
31	732-0459B	Spring, Extension, .94 x 6.74
32	732-0934	Spring, Extension, 1.5 x 5.99
33	734-04155	Deck Wheel, 5.0
34	734-0973	Deck Wheel, 5.0
35	736-0119	Washer, Lock, 5/16
36	736-0225	Lock Washer, 5/8"
37	736-0300	Washer, Flat, .406 x .875 x .059
38	737-04003C	Port, Water
39	738-0373	Shoulder Screw
40	738-04162A	Spacer, Shoulder, .884 x .190
41	738-3056	Shoulder Screw
42	742-04053B	Blade, 17.90
43	747-1116	Rod, Deck Release .375 Dia.
44	747-1324	Rod, Deck Adjust
45	750-0151	Spacer, .550 x .750 x 1.125
46	754-04077	Belt, V-Type, Aramid
47	756-04129	Pulley, Idler, 3.5"
48	783-04399	LH Belt Cover
49	783-04400	RH Belt Cover
50	783-04414A	Deck Skirt, Center
51	783-04415	Deck Skirt, RH
52	783-04462	Lift Bracket, 50"
53	783-05303	Idler Bracket
54	631-04070A	Chute Assembly, Side Discharge
55	731-04651	Mulch Plug
56	756-04216	Pulley, 5.39"
57	736-0315	Washer, Flat, .760 x 1.5 x .120

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

54" Electric PTO Deck

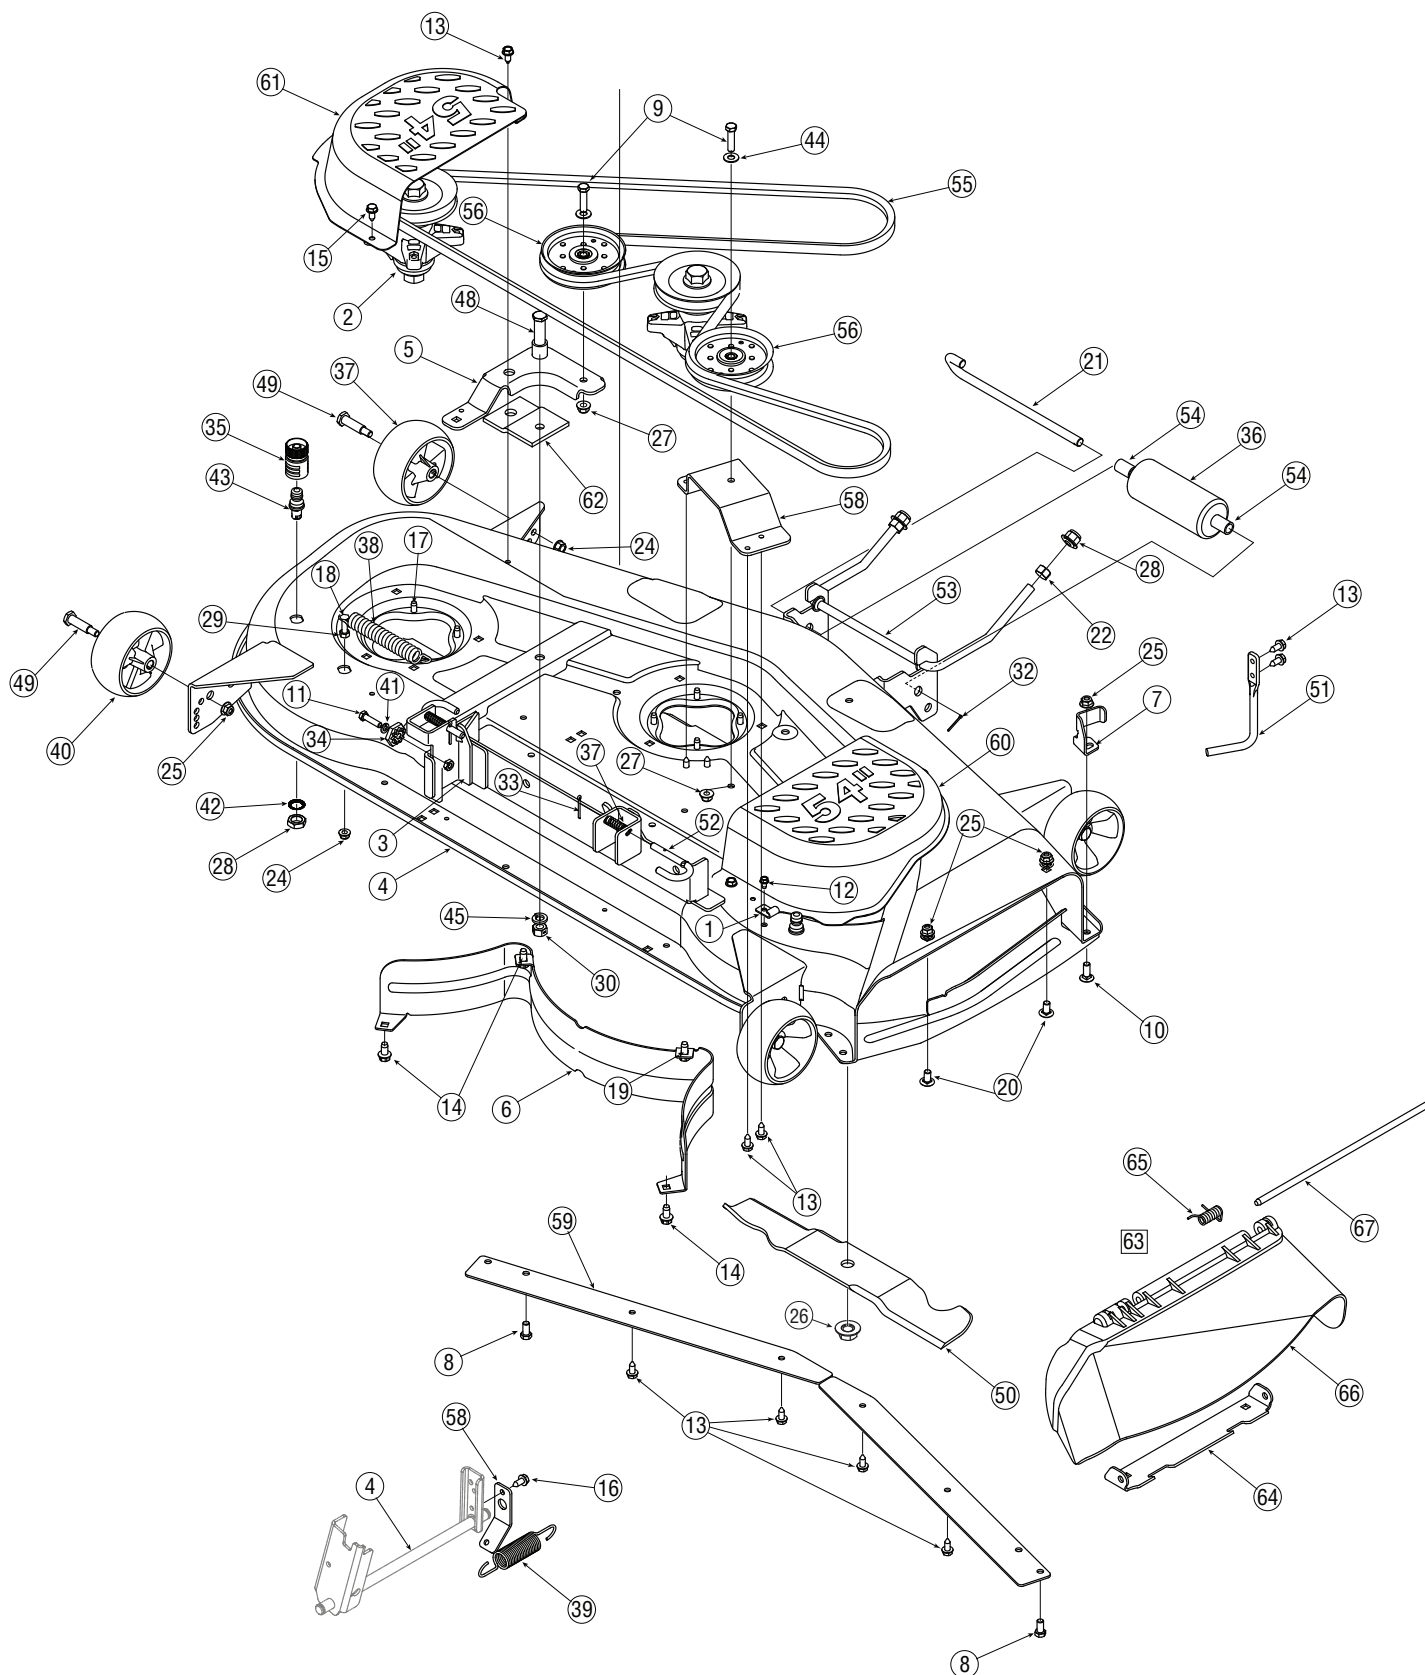


Ref. No.	Part No.	Description
1	16606	Hook, Retainer Bracket
2	618-04125A	Spindle Assembly
3	683-0254B	Hanger Bracket Assembly
4	683-04180	54" Deck Weldment
5	683-04182	Idler Arm Assembly
6	703-2093	Inner Rear Baffle
7	703-3279	Chute Deflector Stop
8	710-0216	Screw, 3/8-16 x.75
9	710-0347	Screw, 3/8-16 x 1.75
10	710-04095	Screw, 3/8-16 x 1.0
11	710-0528	Screw, 5/16-18 x 1.25
12	710-0599	Screw, 1/4-20 x.500
13	710-0607	Screw, 5/16-18 x.500
14	710-0623	Screw, 3/8-16 x.750
15	710-0650	Screw, 5/16-18 x.875
16	710-0726	Screw, 5/16-12 x.750
17	710-1260A	Screw, 5/16-18 x.750
18	710-3103	Screw, 5/16-18 x 2.00
19	710-3168	Bolt, Carriage, 3/8-16 x 1.00
20	710-3178	Bolt, Carriage, 3/8-16 x.750
21	711-1737	Pin, Roller,.5" Dia. x 10.06
22	712-0206	Nut, Hex, 1/2-13
23	712-0229	Push Nut, 3/8
24	712-04063	Nut, Flange Lock, 5/16-18
25	712-04065	Nut, Flange Lock, 3/8-16
26	712-0417A	Nut, Flange, 5/8-18
27	712-0431	Nut, Flange Lock, 3/8-16
28	712-0641	Nut, Hex, M16-1.5
29	712-3010	Nut, Hex, 5/16-18
30	712-3022	Nut, Hex Lock, 1/2-13
31	712-3083	Nut, Hex Lock, 1/2-13
32	714-0111	Pin, Cotter, 3/32 x 1.00
33	714-0470	Pin, Cotter, 1/8 x 1.25
34	717-04074	Deck Adjustment Gear

Ref. No.	Part No.	Description
35	721-04041	Hose Coupler
36	731-3005	Front Roller
37	732-0306A	Spring,.531OD x 1.75
38	732-04247	Spring, Ext.,.850 Dia. x 6.415
39	732-0934	Spring, Ext., 1.15 Dia. x 5.99
40	734-04155	Deck Wheel
41	736-0119	Washer, Lock, 5/16
42	736-0225	Washer, Lock 5/8 Int. Tooth
43	736-0275	Washer, Flat,.344 x.688 x.065
44	736-0300	Washer, Flat,.406 x.875 x.059
45	736-0921	Washer, Lock, 1/2
46	736-3010	Washer, Flat, .407 x .812 x .135
47	737-04003B	Port, Water
48	738-1229A	Screw,.625 x 2.50 x 1/2-13
49	738-3056	Bolt, Shoulder, 3/8-16; 4.96 x 2.50
50	742-0677A	Blade, 18.5"
51	747-04384	Upstop Rod
52	747-1116	Rod, Deck Release Handle
53	750-1000	Spacer, .800 x 1.10 x 1.322
54	750-0151	Spacer,.550 ID x.755 OD x 1.1
55	754-0642	V-Belt
56	756-04129	Pulley, Idler, 4.25" Dia.
57	783-04013A	Bracket, Stabilizer, Pulley
58	783-04462	Lift Bracket
59	783-04690A	Skirt, Deck
60	783-05492	Cover, Belt, RH
61	783-05493	Cover, Belt, LH
62	783-04726	Bracket, Idler, Stationary
63	631-04070A	Chute Ass'y, Side Discharge
64	783-05030	Chute Mounting Bracket
65	732-04372	Torsion Spring
66	731-05559A	Deflector Chute
67	711-04565	Hinge Pin

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Kohler Twin Cylinder Engine

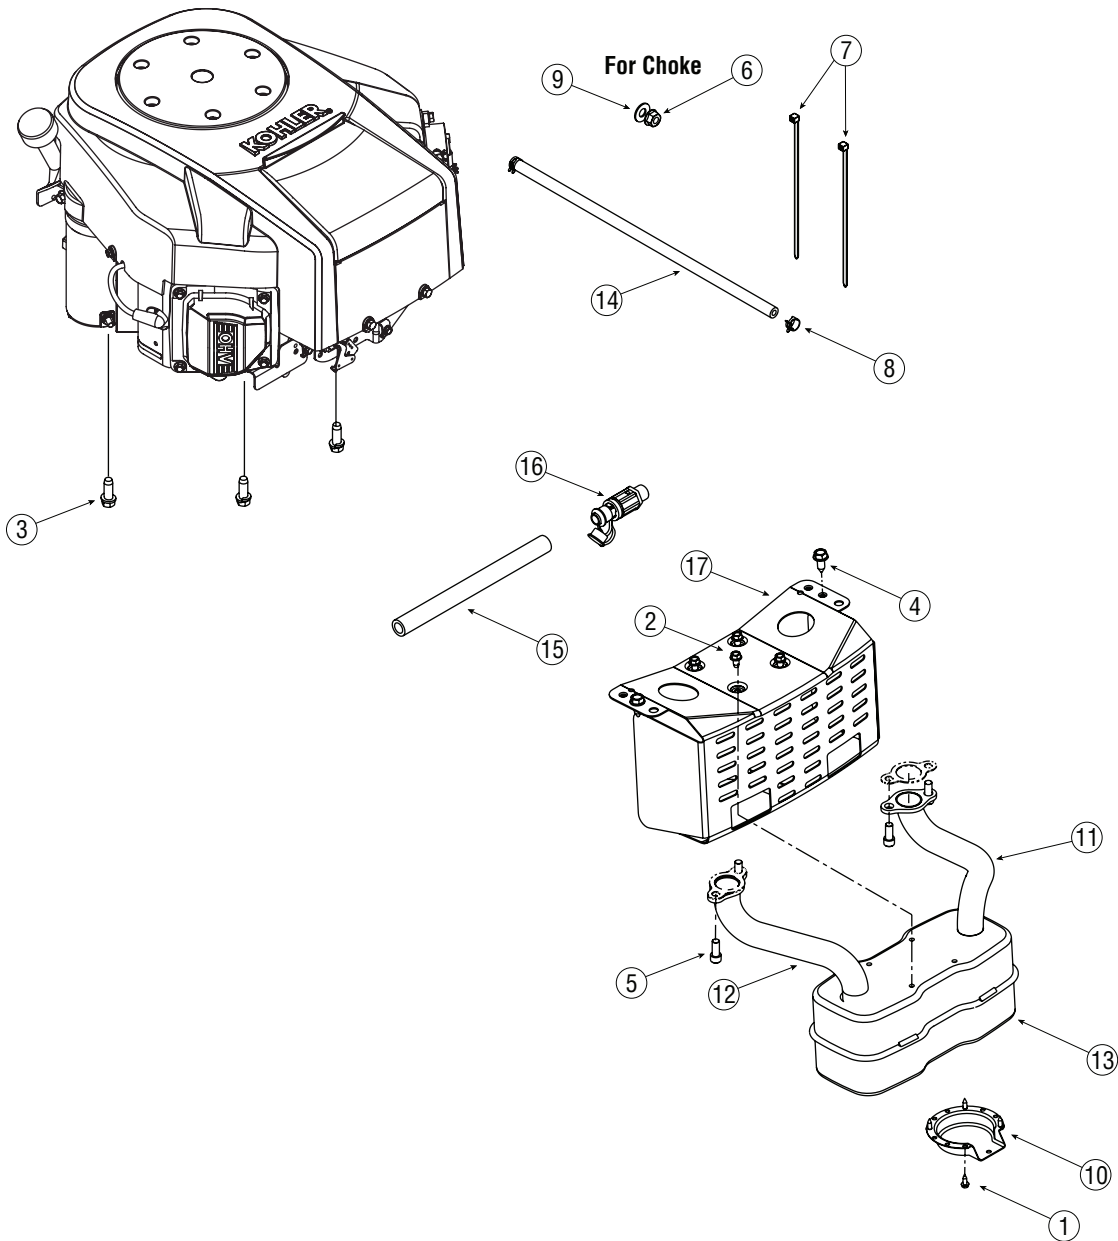

Ref. No.	Part No.	Description
1	710-0227	AB Screw #8-18 x 0.5
2	710-0599	TT Screw 1/4-20 x 0.5
3	710-0654A	TT Screw 3/8-16 x 1.00
4	710-0726	AB Screw 5/16-12 x 0.5
5	710-1314A	Screw, 5/16-18 x .750
6	712-3005	Flange Lock Nut, 3/8-16
7	725-0157	Cable Tie
8	726-0205	Hose Clamp
9	736-0300	Flat Washer, .406 x .875 x .059

Ref. No.	Part No.	Description
10	751-0564B	Muffler Deflector
11	751-0644B	LH Exhaust Pipe
12	751-0645A	RH Exhaust Pipe
13	751-0805A	Dual Inlet Muffler
14	751-10349	Fuel Line Hose
15	751-3141	Oil Drain Extension Hose
16	751-3140	Oil Drain Valve
17	783-0615D	Muffler Bracket

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

