


Model Series 600

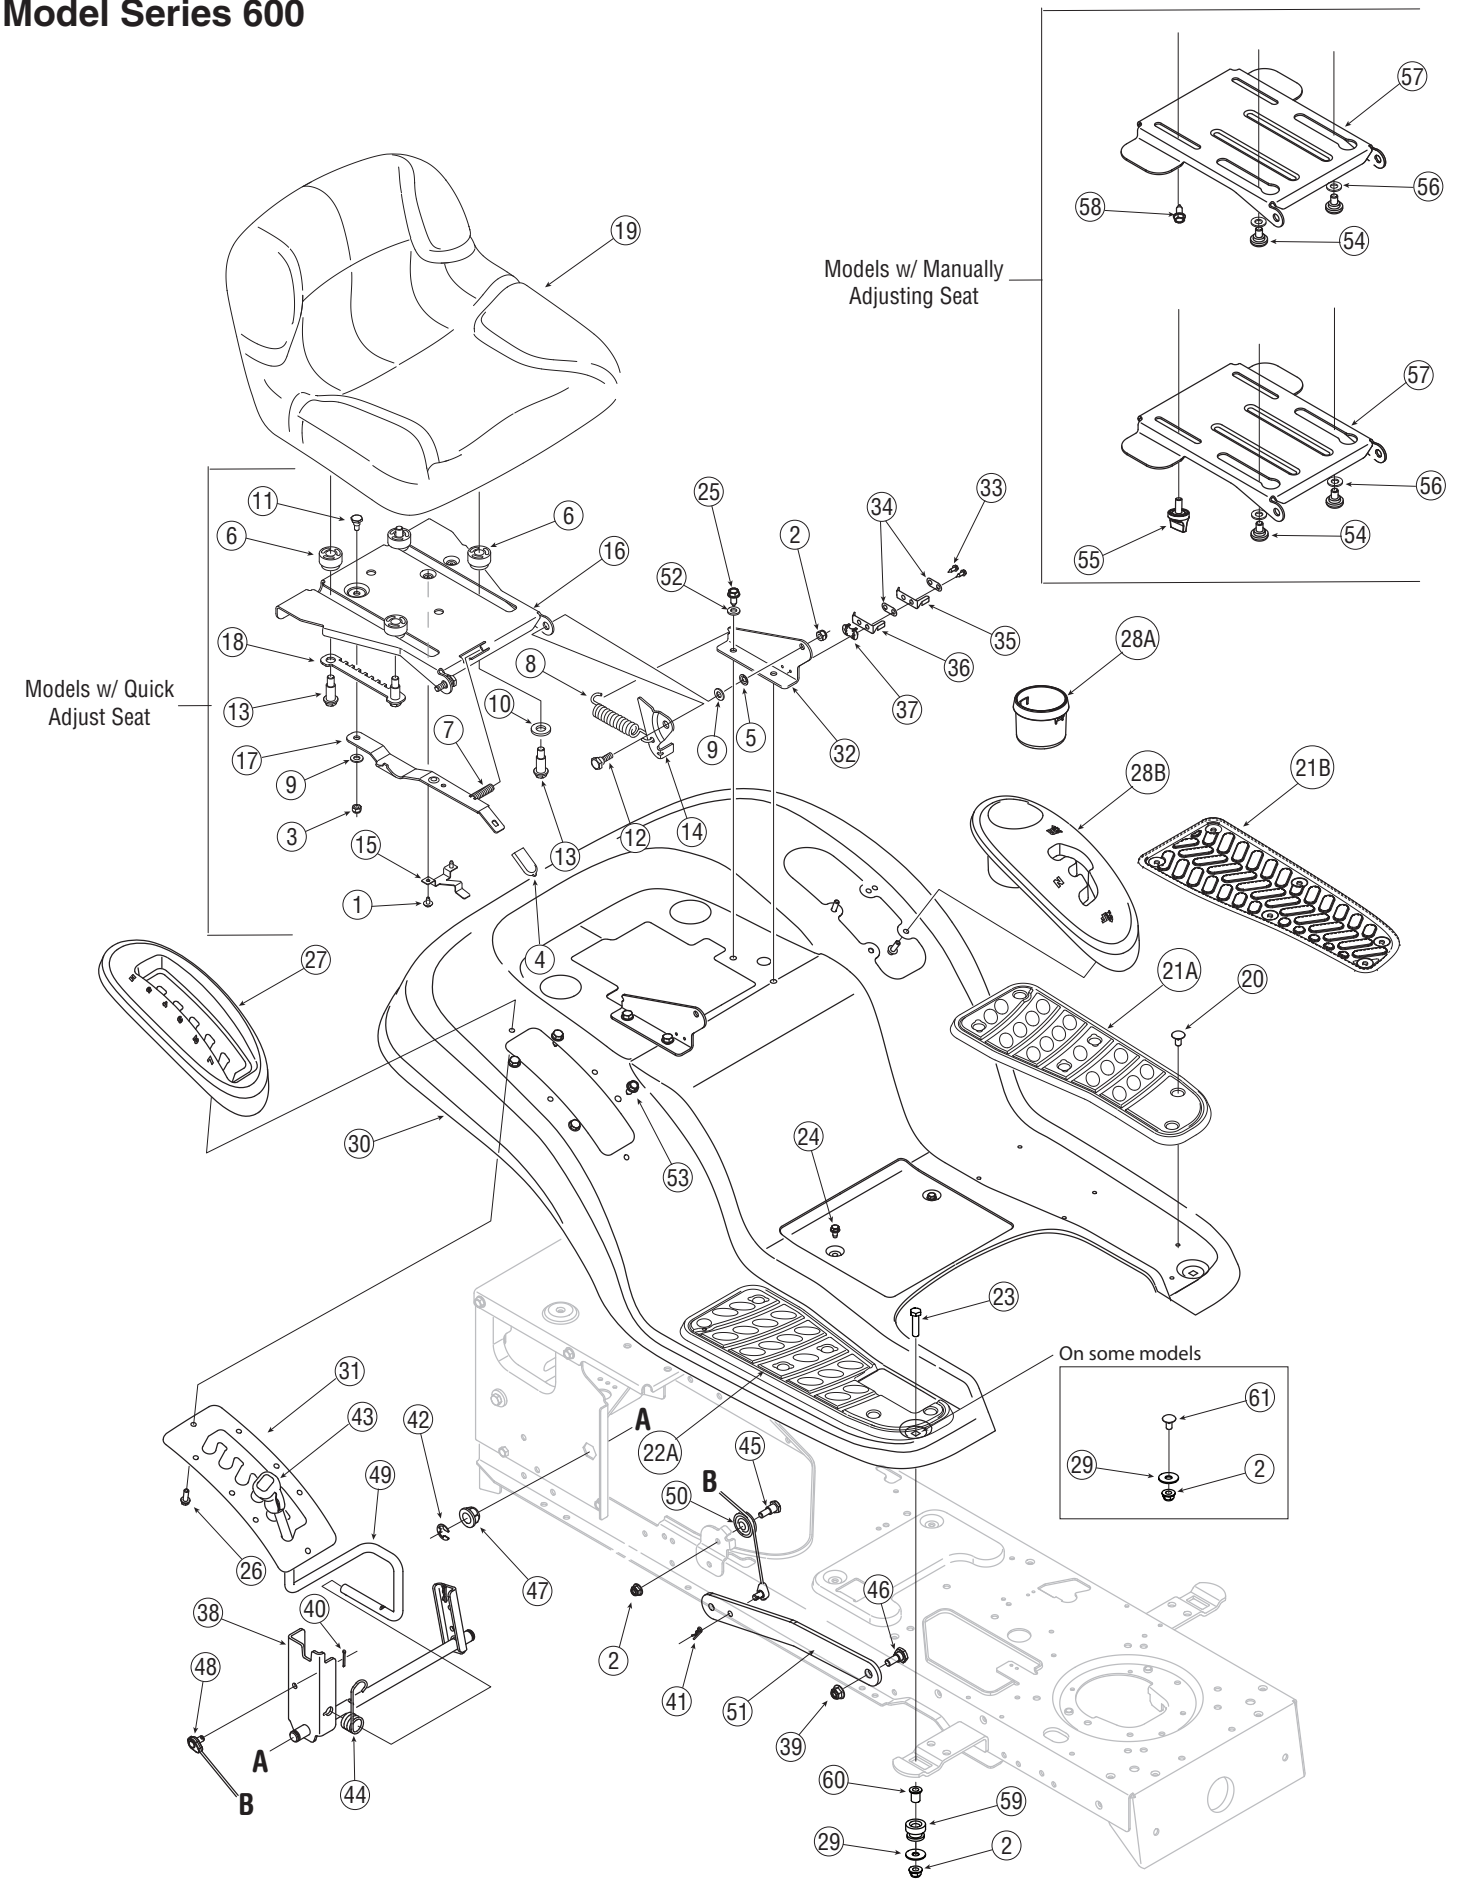


Ref. No.	Part No.	Description
1	710-1268	Screw, #10-16 x.375
2	712-04063	Nut, Flange Lock, 5/16-18, GrF
3	712-04064	Nut, Flange Lock, 1/4-20
4	720-0309A	Seat Adjuster Grip
5	726-0201	Nut, Speed,.3125 ID
6	731-04074	Spacer
7	732-0499	Compression Spring,.41 x 1.5
8	732-1184	Spring, Extension,.84 Dia. x 4.6
9	736-0242	Wash, Flat, .340 x .688 x .065
10	736-3019	Wash, Flat,.531x 1.062 x.134
11	738-0137A	Screw, Shld,.340 x.285, 1/4-20
12	738-0296	Screw, Shoulder,.437 x.268
13	738-0966A	Screw, Should,.50 x.925, 3/8-16
14	783-0209D	Seat Bracket, Lift
15	783-0611	Seat Stop
16	783-0738C	Seat Pivot Bracket
17	783-0739A	Seat Adjustment Lever
18	783-0753	Seat Adjustment Selector
19	757-04001A	Low Back Seat
	757-04037	Medium Back Seat
20	726-3046	Ratchet Clip
21a	735-0657	LH Foot Pad, Rubber
21b	735-0673	LH Foot Pad, Rubber
22a	735-0656	RH Foot Pad,Rubber
22b	735-0672	RH Foot Pad,Rubber(not shown)
23	710-0528	Hex Screw, 5/16-18 x 1.25
24	710-0599	Screw, 1/4-20, 0.500
25	710-0604A	Screw, 5/16-18, 0.625
26	710-0895	Screw, 1/4-15, 0.750
27	731-1990	Cover, Lift Lever
28a	731-04591A	Cup Holder
28b	731-2104C	Cover, w/ Cup Holder
29	736-3078	Washer, Flat,.344 x 1.0 x.063
30	783-04314A	Fender (7-Style) <i>not shown</i>
	783-04333A	Fender (4-Style) <i>shown</i>
31	783-1010A	Adjust. Brkt, Lift (7-Style) <i>shown</i>

Ref. No.	Part No.	Description
	783-0677B	Adjust. Brkt., Lift (4-Style)
32	783-1489C	Mounting Bracket, Seat
33	710-0227	Screw, #8-18 x.50
34	726-0279	Plate, Insulator
35	725-1303	Spring Switch, Outer
36	725-1439	Spring Switch, Inner
37	726-0278	Plate, Insulator Boss
38	683-04223	Deck Lift Shaft Assembly
39	712-04065	Nut, Flange Lock, 3/8-16, GrF
40	714-0104	Pin, Cotter,.072 Dia. x 1.13
41	714-0111	Pin, Cotter, 3/32, 1.0
42	716-0106A	Ring, E Type,.625 Dia.
43	720-0311	Grip, Handle, 1/2
44	732-0874	Spring, Torsion
45	738-0138A	Screw, 5/16-18 x.620 Gr2
46	738-04130	Scr.,Shldr, .625 x.165,(42" Deck)
	738-0380	Screw, Shld,.50 x.27, (46" Deck)
47	741-0225	Bearing, Hex Flange
48	746-0968	Cable, Lift, 16.16
49	747-04447	Handle, Lift
50	756-1154	Pulley, Roller
51	783-04711	Arm, Lift - LH (42" Deck)
	783-04494	Arm, Lift - RH (42" Deck)
	783-04963A	Arm, Lift (46" Deck) <i>shown</i>
52	736-0607	Lock Washer, 5/16
53	710-1611B	Scr5/16-18 x.750 (7-Style)
	710-0604A	Screw, 5/16-18, 0.625
54	738-04012A	Shoulder Screw
55	720-04061	Knob, 3/8-16
56	736-0300	Flat Washer, .406 x .875 x .059
57	783-04081B	Seat Pivot Bracket, Manual Adj.
58	710-0870	Hex Head Washer Screw, 3/8-16
59	735-0690	Grommet, .4375 x .750
60	750-3310	Flanged Spacer
61	710-0451	Carriage Bolt, 5/16-18 x .750

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model Series 600

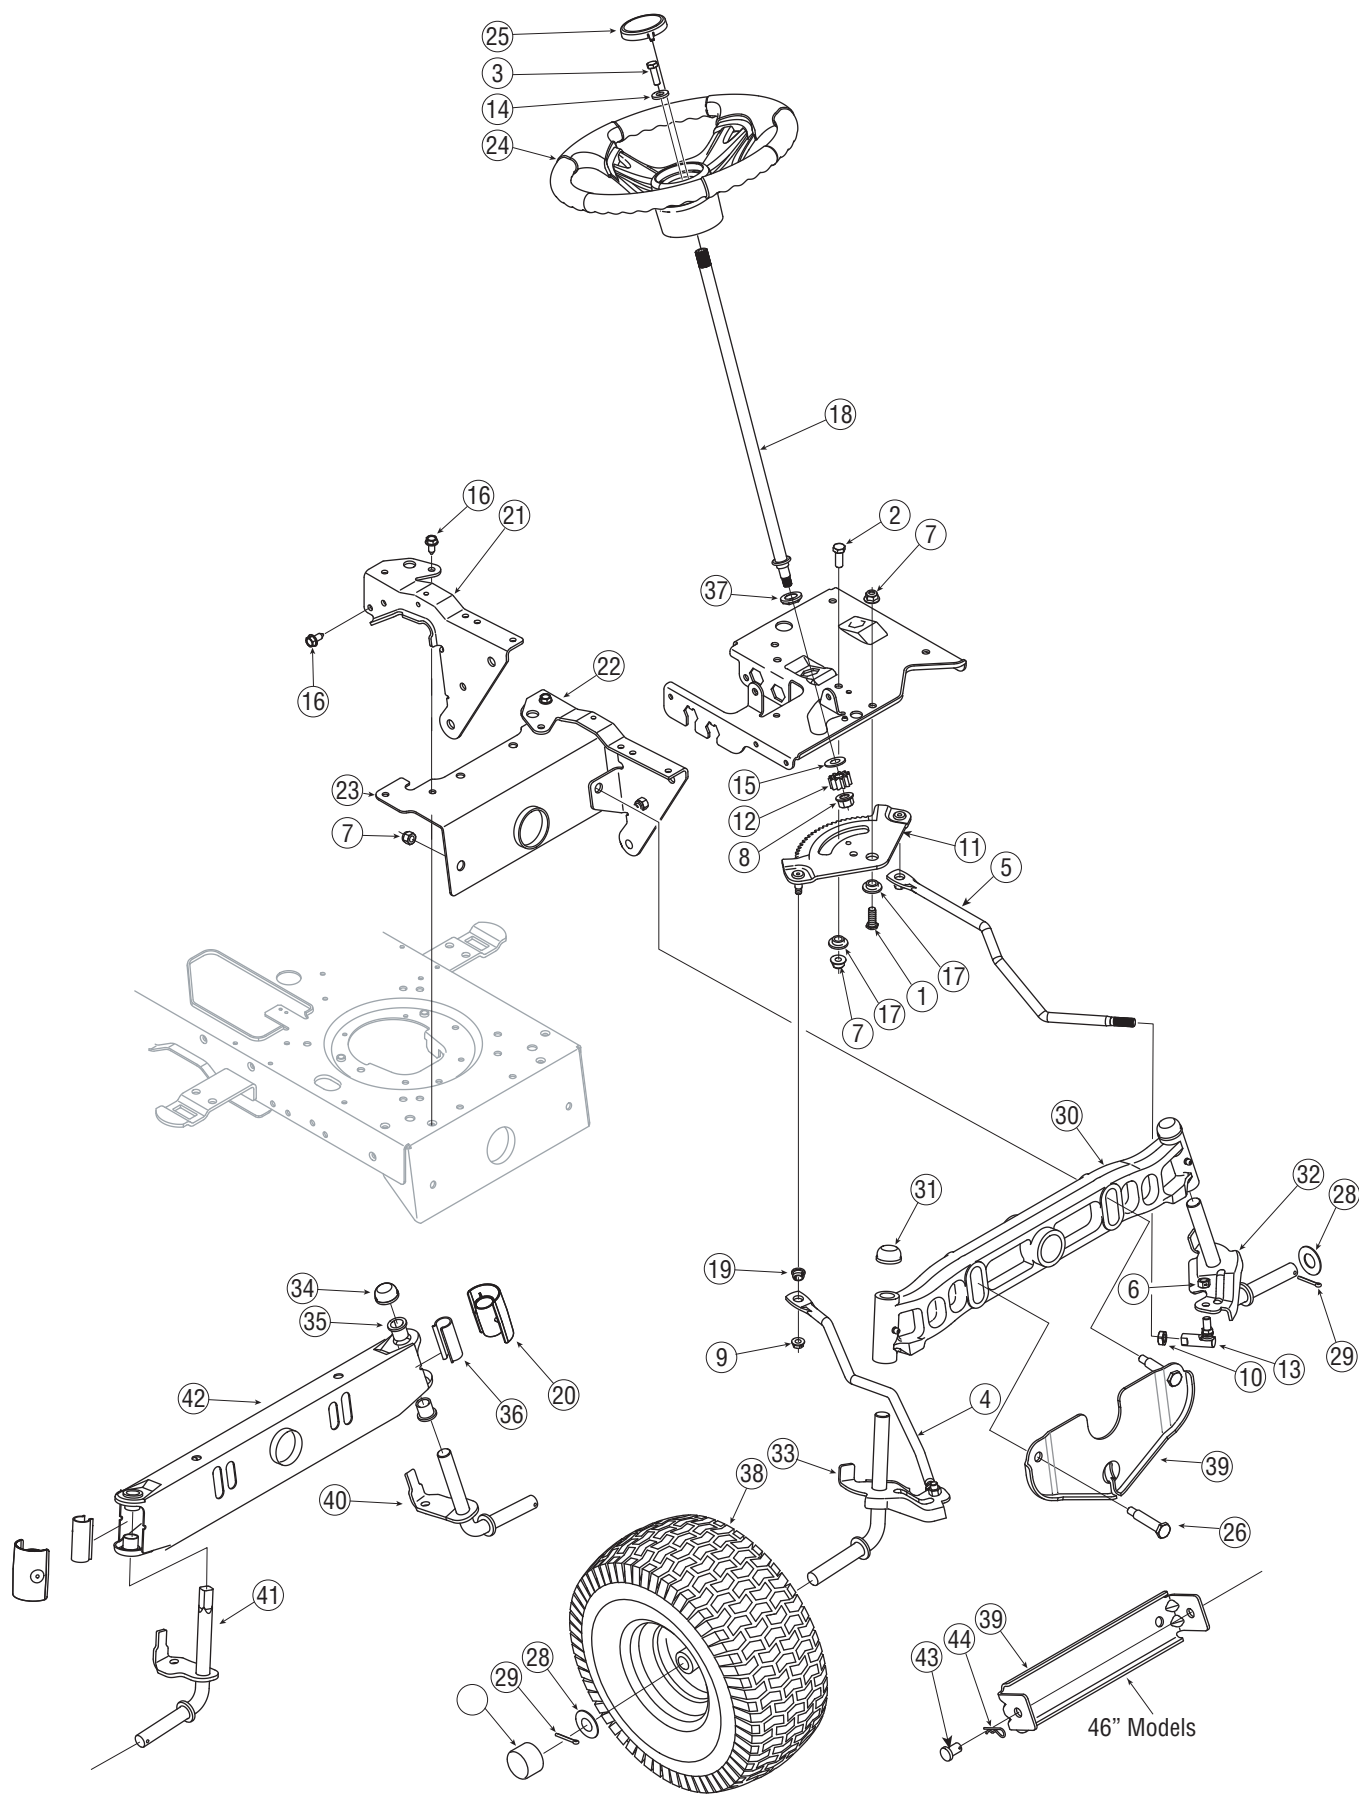


Ref. No.	Part No.	Description
1	710-04095	Hex Screw, 3/8-16, 1.00, Gr5
2	710-0514	Hex Screw, 3/8-16, 1.00, Gr5
3	710-0643	Hex Screw, 5/16-18, 1.00, Gr5
4	711-1408	Link, Drag, RH
5	711-1409A	Link, Drag, LH
6	712-0214	Nut, Hex Lock, 3/8-24
7	712-04065	Nut, Flange Lock, 3/8-16, Grf
8	712-0459	Nut, Flange Lock, 7/16-20
9	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
10	712-0240	Nut, Jam, 7/16-20, Gr2
11	717-1550E	Gear, Steering, 11/90 Ratio
12	717-1554	Gear, Pinion, Steering
13	723-0448A	Ball Joint, 7/16-20, Lock
14	736-3004	Washer, Flat, .406 x .875 x .105
15	736-3084	Washer, Flat, .51 x 1.12 x .06
16	710-1260A	Screw, 5/16-18, 0.750
17	738-04154	Spacer, Shoulder, .38 x 1.00 x .31
18	738-1001A	Shaft, Steering, .625 OD x 24.25
19	741-0475	Plastic Bushing .380 ID
20	731-1291A	Pivot Bar End Cap
21	783-0726E	Pivot Bracket, Support RH
22	783-0727D	Pivot Bracket, Support LH
23	783-0728B	Pivot Bracket, Bar
24	631-04028	Steering Wheel

Ref. No.	Part No.	Description
25	731-04039	Steering Wheel Cap
	731-04040	Steering Wheel Cap, Sprig Logo
	731-04681	Steering Wheel Cap, Tine Logo
26	738-04128	Shoulder Bolt, .5 x 2.38, 3/8-16
27	731-05674	Hub Cap, Standard
28	736-04228	Flat Washer, .781 x 1.59
29	714-04039	Cotter Pin, 5/32 x 1.25
30	719-04105	Cast Iron Pivot Bar
31	726-0341	Push Cap
32	638-04003A	LH Axle Assembly, .750
33	638-04004A	RH Axle Assembly, .750
34	726-0341	Push Cap, 3/4
35	741-0660A	Flange Bearing
36	731-04057A	Axle End Cap, Standard
37	741-0656A	Hex Flange Bearing
38	634-04086	Wheel Assembly Complete, 15x6
	734-1731	Tire Only 15 x 6 x 6
	634-04081	Rim Only w/ Valve Stem
39	783-04568	Frnt. Deck Hang Bracket (42" Deck)
		Frnt. Deck Hang Bracket (46" Deck)
40	638-04006	LH Axle Assembly, .750
41	638-04005	RH Axle Assembly, .750
42	683-0128B	Pivot Bar Axle Assembly

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model Series 600

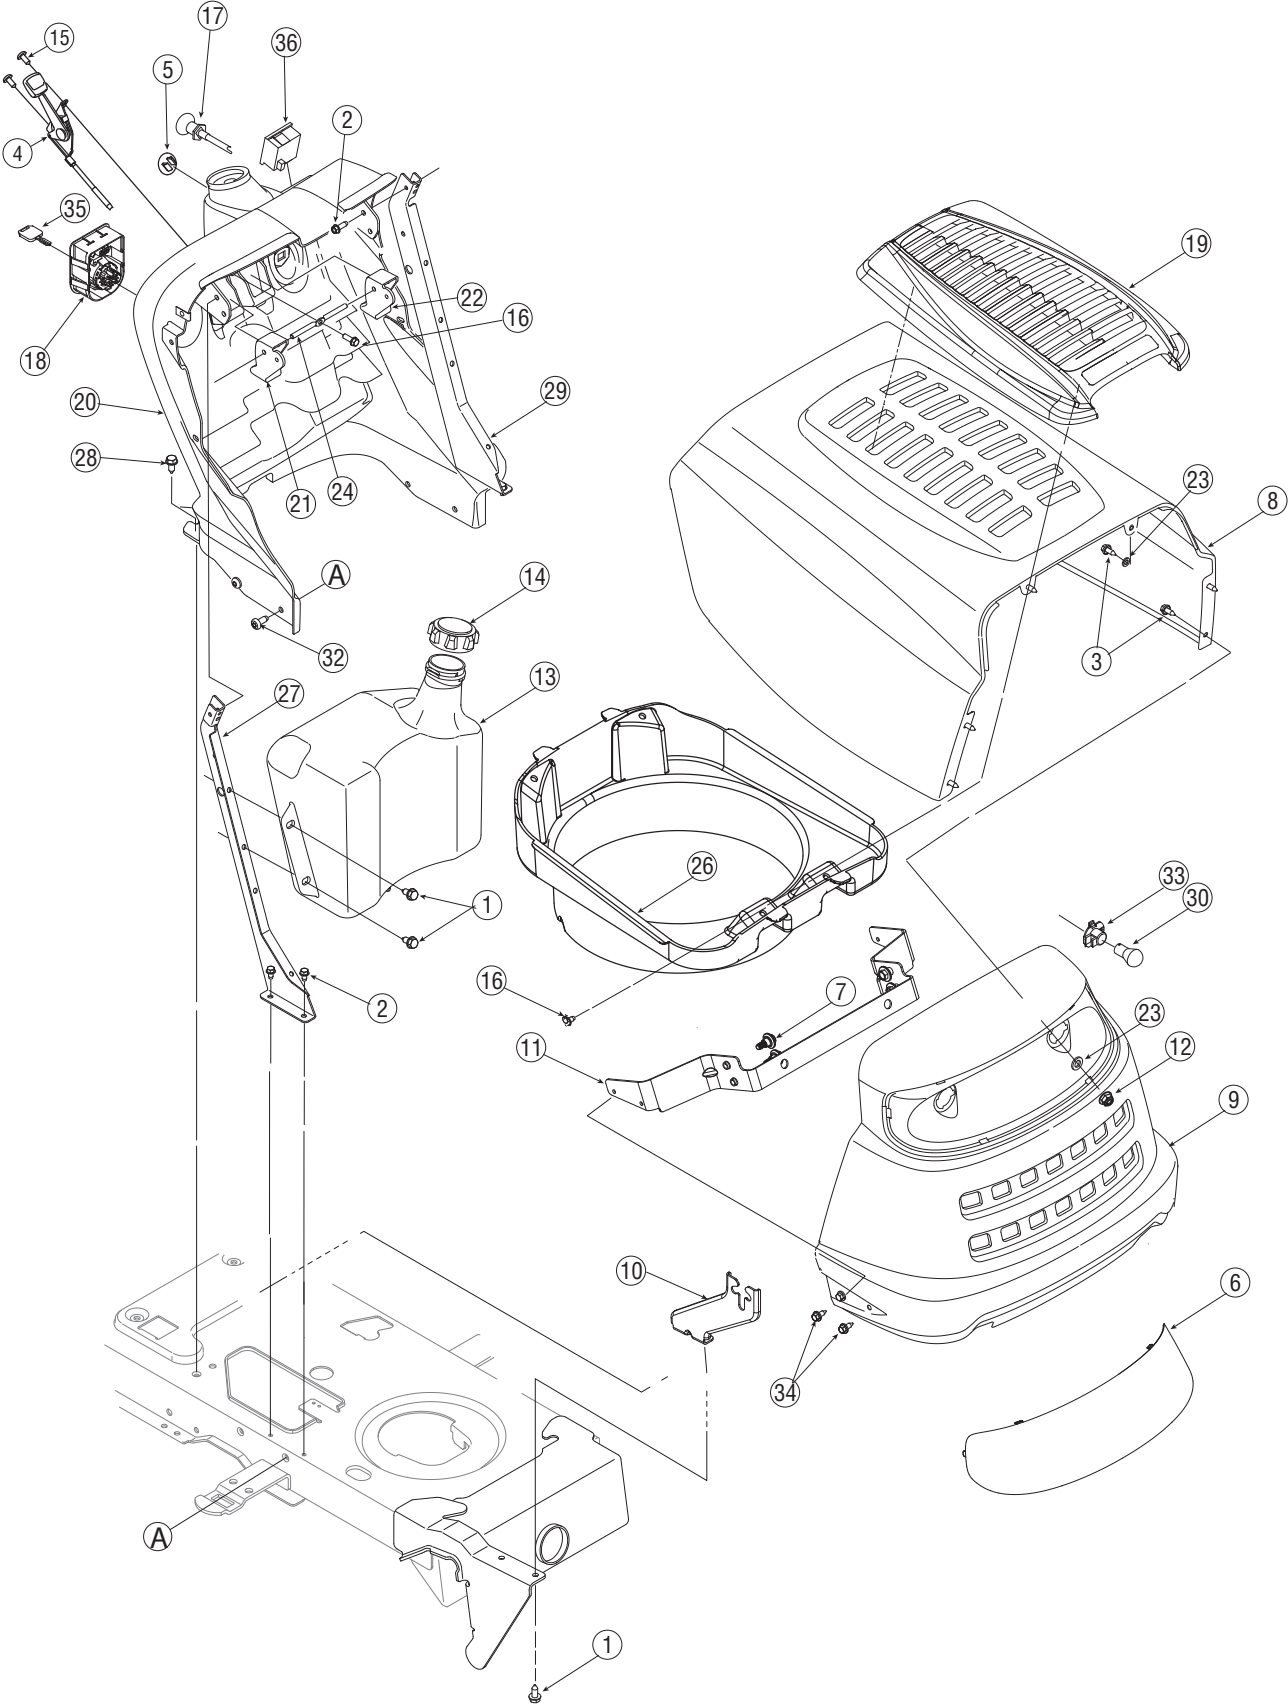


Ref. No.	Part No.	Description
1	710-0726	Screw, 5/16-12 x .750
2	710-0599	Self-tapping Screw, 1/4-20 x.5
3	710-0751	Hex Cap Screw, 1/4-20 x.62
4	746-04364	Throttle/Choke Control Cable
	746-04365	Throttle Control/Cable
5	731-1999	Choke Plug
6	731-04949	Headlight Lens
7	738-04091	Shoulder Screw,.43 x.29
8	783-04551	Hood, 1 Style
9	783-04552	Grill, 1 Style
10	783-04578	Pivot Bracket - RH
	783-04577	Pivot Bracket - LH
11	783-04621	Grill Pivot Bracket
12	712-04064	Flange Lock Nut, 1/4-20
13	751-0659D	Fuel Tank, Two Gallon
	751-0658E	Fuel Tank, Three Gallon
14	751-0603	Fuel Cap
15	710-1017	Screw, 1/4-14 x.625
16	710-0895	Self-tapping Screw, 1/4-15 x.75
17	710-3217	Truss Phillips Screw, #8-32
18	712-0142	Hex Nut, #8-32
19	731-1857	Throttle Control Knob
20	731-05001B	Dash Panel
21	731-04215	Cruise Control Button

Ref. No.	Part No.	Description
22	731-04217	Parking Brake Button
23	736-0176	Flat Washer, .265 x .938 x 1.20
24	747-1196	Brake/Cruise Pivot Rod
25	629-04083A*	Headlight Wire Harness
26	731-05165A	Plenum, Kohler Twin
	731-05566	Plenum, Kohler Courage Single
27	783-04285E	RH Dash Support Plate
28	710-0607	Screw, 5/16-18 x .500
29	783-04323D	LH Dash Support Plate
30	725-0963	Lamp
31	736-0270	Bell Washer,.265 x.75 x.062
32	710-1611B	Screw, 5/16-18 x.75
33	725-1649	Headlight Socket
34	710-1652	Hex Index Screw, 1/4-20 x.625
35	731-05522	Hood Cover, 5 Style
36	725-1745	Ignition Key w/ plastic cover
	725-1744	Ignition Key w/o plastic cover
37	725-04227B	Ignition Switch
38	725-04036C	Systems Ind. Monitor w/Hr. Mtr.
	725-04156	Systems Ind. Monitor w/ Amtr.
—	725-04403*	Harness, Man. PTO, Hr Mtr, RMC
—	725-04411*	Harness, Man. PTO, Ammtr, RMC
—	725-04484*	Harness, Man. PTO, Ammtr, No RMC
39	746-1085A	Choke Control Cable

* Not Shown

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model Series 60T

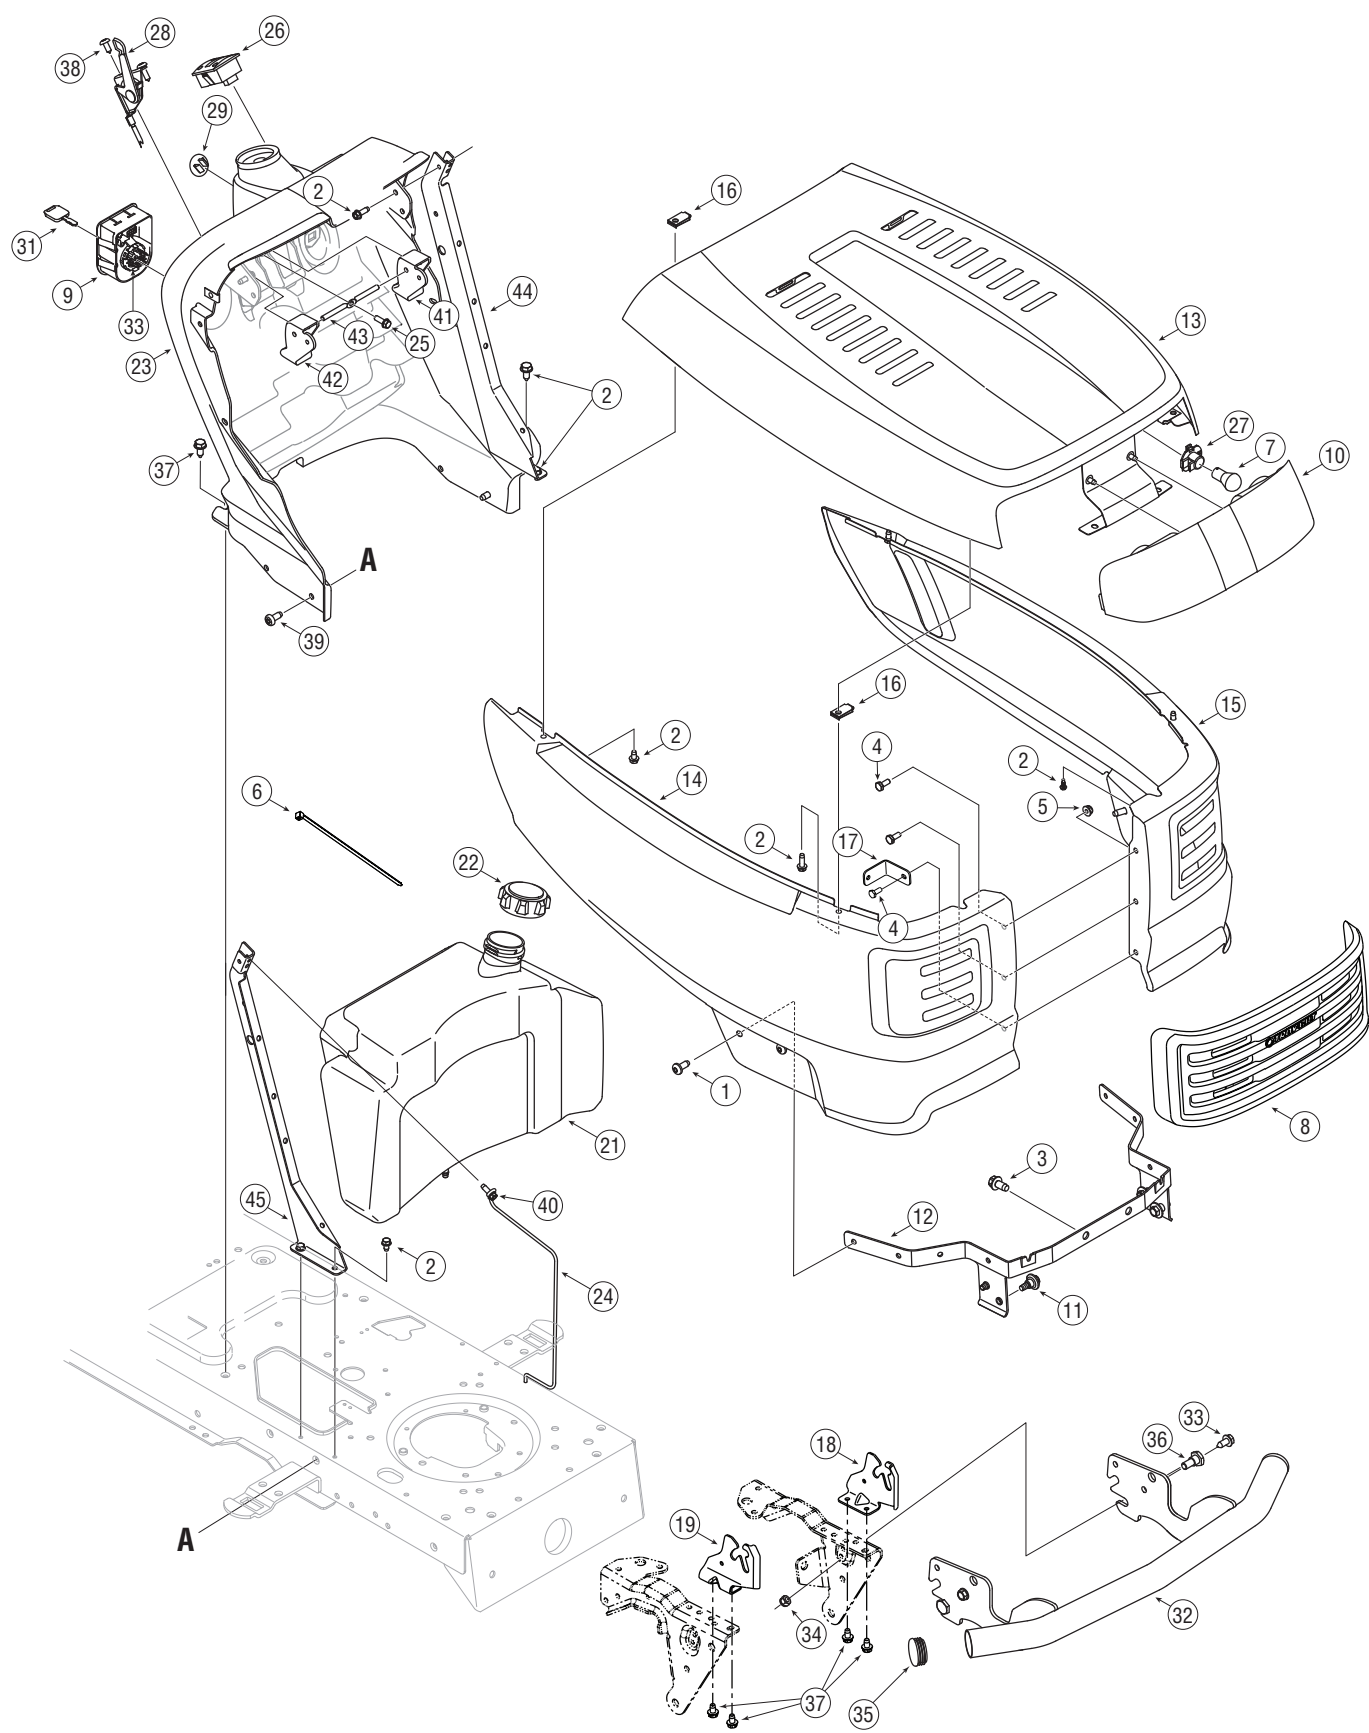


Ref. No.	Part No.	Description
1	710-04593	Screw, 5/16-18, .375
2	710-0599	Screw, 1/4-20, 0.500
3	710-0604A	Screw, 5/16-18, 0.625
4	710-0751	Screw, 1/4-20, 0.620
5	712-04064	Flange Lock Nut, 1/4-20
6	725-0157	Cable Tie, 3/16 x .05 x 7.4
7	725-0963	Headlamp, 12V
8	731-05745	Troy-Bilt Grill Insert
9	731-05241A	Switch Housing
10	731-05357	Troy-Bilt Lens
11	738-04091	Screw, Shldr, .43 x .29, 5/16-18
12	783-04606B	Pivot Bracket
13	783-04827	Troy-Bilt Hood
14	783-04828	Troy-Bilt Side Panel, RH
15	783-04829	Troy-Bilt Side Panel, LH
16	783-05223	T-Style Hood Fastener
17	783-05315	Front Hood Bracket
18	783-04841	Hood Pivot Bracket, LH
19	783-04840	Hood Pivot Bracket, RH
20	726-0230	Cable Tie, 34.75
21	751-10283A	Fuel Tank, 3 gal. TB
22	751-0603	Fuel Tank Cap
23	731-05001B	Dash Panel, 8/9 Style w/ Man PTO
24	747-04161	Gas Tank Support Rod
25	710-0895	Screw, 1/4-15, .750
26	725-04156	Ammeter Monitor Indicator

Ref. No.	Part No.	Description
27	725-1649	Lamp Socket
28	746-04364	Throttle/Choke Control, 25.0
29	731-05265	Choke Plug
30	725-1741	Module, Ign. Switch (No RMC)
	725-04227B	Module, Ignition Switch (RMC)
31	725-1744	Key
	725-1745	Key w/ Plastic Grip
32	683-04219A	Bumper Assembly
33	710-0726	Screw, 5/16-12, 0.750
34	712-04065	Flange Lock Nut, 3/8-16
35	731-05674	Bumper Cap
36	738-0143	Shoulder Bolt, 3/8-16
37	710-0607	Screw, 5/16-18, 0.500
38	710-1017	Screw, 1/4-14, 0.625
39	710-1611B	Screw, 5/16-18, 0.750
40	710-0642	Screw, 1/4-20, 0.750
41	731-04728	Dash Brake Lever
42	731-04729	Dash Cruise Lever
43	747-1196	Bent Lever Rod
44	783-04323D	Dash Support, LH
45	783-04285E	Dash Support, RH
—	725-04484	Wire Harness (No RMC*)
—	725-04432	Wire Harness (RMC*)
—	629-04083A	Headlight Wire Harness
—	777X42188	Headlight Lens Reflector RH
—	777X42187	Headlight Lens Reflector LH

* Reverse Caution Mode

Model Series 600

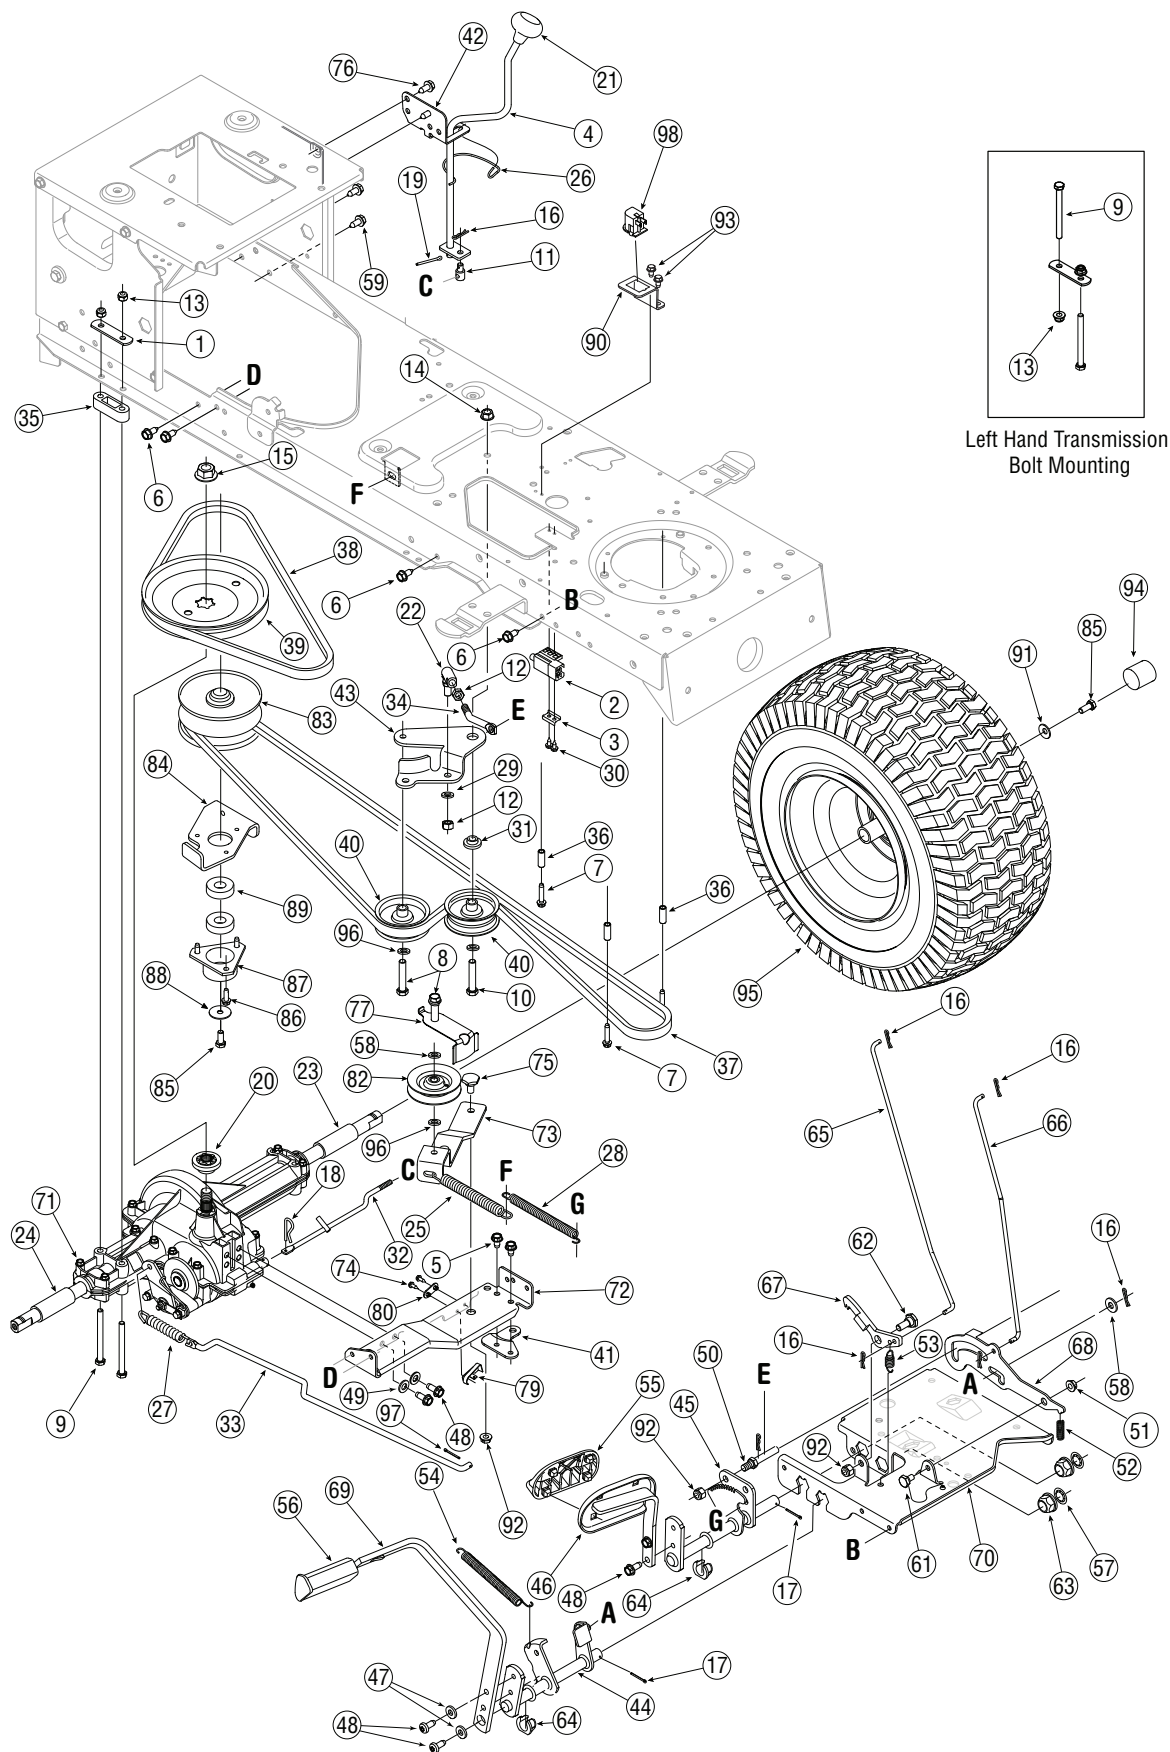

Ref. No.	Part No.	Description
1	17840	Mounting Bracket, Transaxle
2	725-04039	Switch, Interlock
3	17962	Plate, Switch
4	647-04020	Lever Assembly, Shift
5	710-0607	Screw, 5/16-18, 0.500
6	710-0726	Screw, 5/16-12, 0.750
7	710-0809	Screw, 1/4-20, 1.250
8	710-1007	Screw, Sems, 3/8-16, 1.500
9	710-1266	Screw, 5/16-18, 3.50, Gr5
10	710-3144	Screw, 3/8-16, 2.00, Gr5
11	711-0736	Adjustment Ferrule 1/4-20 x 1.
12	712-0241	Nut, Hex, 3/8-24, Gr5
13	712-04063	Nut, Flange Lock, 5/16-18, GrF
14	712-0431	Nut, Flange Lock, 3/8-16, GrF
15	712-0700	Nut, Flange, 9/16-18, Gr2
16	714-0104	Pin, Cotter,.072 Dia. x 1.13
17	714-0111	Pin, Cotter, 3/32, 1.0
18	714-0209	Cotter .Pin, Internal,.125 Dia.
19	714-0470	Pin, Cotter, 1/8 x 1.25
20	718-0758A	Pulley Hub, 5/8 Spline
21	720-04028	Knob, Shift
22	723-3018	Ball Joint
23	731-04602	Sleeve,.758 x.821 x 3.3125
24	731-04604	Sleeve,.758 x.821 x 2.4375
25	732-04370A	Spring, Extension,.62 Dia x 6.12
26	732-0525	Spring Clip, Shifter
27	732-0716C	Spring, Extension,.59 OD x 4.00
28	732-0963	Spring, Extension,.50 Dia x 6.37
29	736-0169	Washer, Lock, 3/8
30	710-0224	Screw, #10-16,.50
31	738-0372B	Spacer, Shoulder, 1.00 x.38 x.38
32	747-04146C	Rod, Shift
33	747-04164	Rod, Brake
34	747-1127	Idler Rod, Adjustable, 3/8
35	748-0334	Spacer,.68
36	750-0566A	Spacer,.260 x.372 x 1.030
37	754-0467	Belt, V-Type
38	754-0468	Belt, V-Type
39	756-04002	Pulley, V-Type, 7.25 Dia.
40	756-04224	Idler Pulley, Flat 2.75 OD
41	783-04283	Bracket, Shift

Ref. No.	Part No.	Description
42	783-04360	Bracket, Shift, F-N-R
43	783-04442	Idler Bracket, Center Double
44	647-04100	Control Assembly, Brake
45	647-0032A	Control Assembly, Speed
46	683-0266	Pedal Assembly
47	736-0119	Lock Washer, 5/16
48	710-1260A	Screw,5/16-18, 0.750
49	736-0264	Washer, Flat, .330 x .630 x .0635
50	711-04159B	Pin, 3/8-16 x 2.68
51	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
52	732-0335	Spring, Compression.,.405 x 1.17
53	732-0955	Spring, Extension,.50 OD x 1.41
54	732-0963	Spring, Extension,.50 OD x 6.37
55	735-0662	Pad
56	735-3049A	Pad, Brake
57	736-0187	Washer, Flat,.64 x 1.24 x.06, Ht
58	736-0262	Washer, Flat,.385 x.870 x.092
59	710-04598	Hex Screw
60	736-3008	Washer, Flat,.344 x.750 x.120
61	738-0155	Screw, Shoulder.437 Dia x.162
62	738-0380	Screw, Shoulder,.50 x.27 Lg,
63	741-0225	Bearing, Hex Flange
64	741-3065B	Split Bearing, Hex Flange
65	747-04093A	Rod, Brake Lock
66	747-04096	Rod, Cruise Control
67	748-04039C	Latch, Cruise Control
68	783-0732A	Bracket, Lockout
69	747-04641	Ped, Brake
70	783-04612	Bracket, Steering Support
71	618-04034	Transmission, Single Speed
72	683-04287	Bracket Assembly, Torque
73	683-04286	Bracket, Idler
74	710-0227	Screw, #8-18 x.50
75	738-0322A	Shoulder Screw, .625 x .217
76	710-0604A	Screw, 5/16-18,.625
77	732-1013	Belt Guard
78	712-0130	Nut, Lock, 3/8-16, Nylon
79	725-1644	Switch Spring, Short
80	726-0320	Plate, Insulator
81	750-04294	Spacer, Shoulder
82	756-04241	Idler Pulley, V-Type, 5L x 3.06


Continued on next page

Model Series 600 (Continued)

Ref. No.	Part No.	Description
83	656-04015	Pulley Ass'y, Variable Speed
84	683-04296	Bracket, Pulley
85	710-0627	Screw, 5/16-24,.750
86	710-0778	Screw, 1/4-20, 1.500
87	718-04261	Cup, Bearing
88	736-0362	Washer, Flat
89	741-0124	Ball Bearing
90	783-04722	Switch Bracket, Parking Brake
91	736-0242	Washer, Bell,.340 x.872 x.060
92	712-04065	Nut, Flange Lock, 3/8-16, GrF
93	710-0599	Screw, 1/4-20 x.500
94	731-2290A	Hub Cap
95	634-0104	Wheel Assy Comp, 20 x 8 x 8
	734-1730	Tire Only 20 x 8 x 8
	734-0603A	Rim Only w/ Valve Stem
96	736-3010	Flat Washer, .407 x .812 x .135
97	714-0507	Pin, Cotter, 3/32 x .750
98	725-3167	Switch

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Kohler Courage Single Cylinder Engine, T-Style Hood

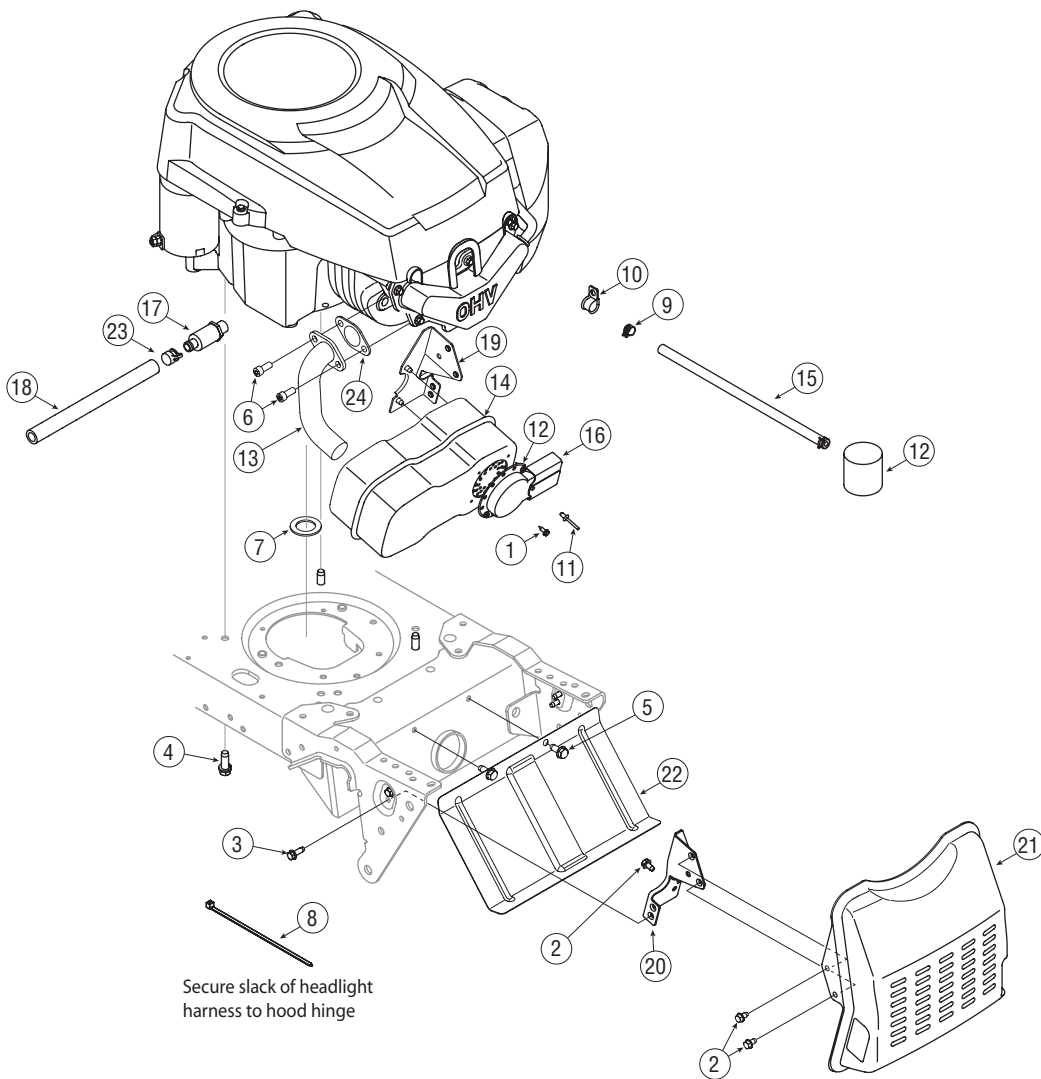


Ref. No.	Part No.	Description
1	710-0227	Screw #8-18 x 0.5
2	710-0599	Screw 1/4-20 x 0.5
3	710-0642	Screw 1/4-20 x 0.75
4	710-0654A	TT Screw 3/8-16 x 1.00
5	710-1260A	Screw, 5/16-18 x 0.750
6	710-1314A	Screw, 5/16-18 x .750
7	736-0277	Flat Washer, 1.031 x 1.620 x .095
8	725-0157	Cable Tie
9	726-0205	Hose Clamp
10	726-0272	Clamp
11	728-04000	Pop Rivet, .188 dia. x .300 L
12	751-0564A	Muffler Deflector

Ref. No.	Part No.	Description
13	751-10017	Exhaust Pipe
14	751-10162	Single Inlet Muffler
15	751-10349	Fuel Line Hose
16	751-10353	Long Muffler Deflector
17	751-3140	Oil Drain Valve
18	751-3141	Oil Drain Extension Hose
19	783-04573	Left Hand Muffler Bracket
20	783-04574	Right Hand Muffler Bracket
21	783-04576B	Muffler Shield
22	783-05410	Muffler Heat Shield
23	751-3142	Oil Drain Cap
24	KH-20-041-12	Exhaust Gasket

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Kohler Courage Single Cylinder Engine

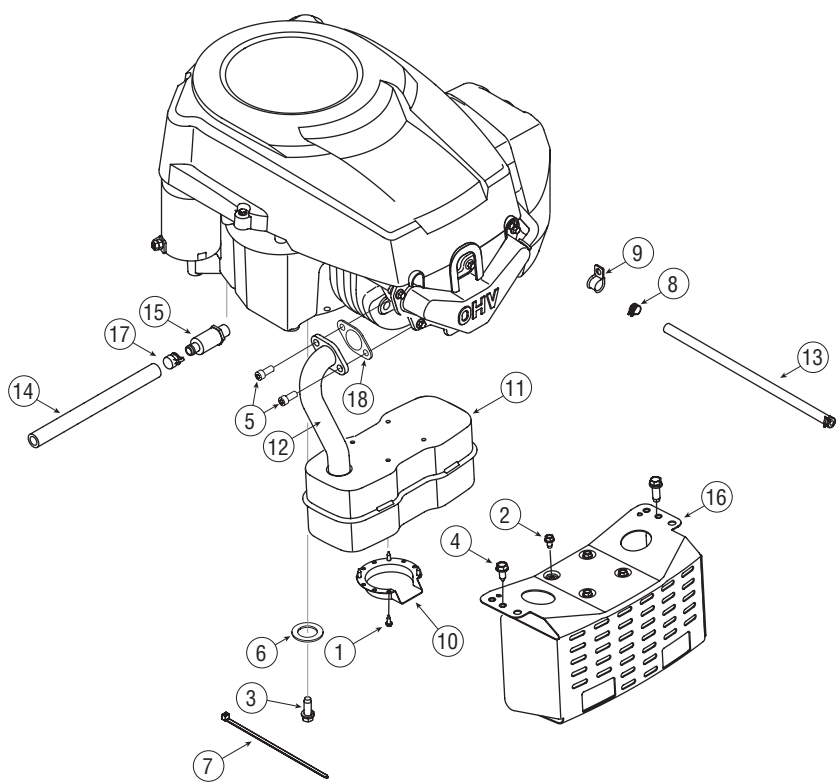


Ref. No.	Part No.	Description
1	710-0227	AB Screw #8-18 x 0.5
2	710-0599	TT Screw 1/4-20 x 0.5
3	710-0654A	TT Screw 3/8-16 x 1.00
4	710-0726	AB Screw 5/16-12 x 0.5
5	710-1314A	Screw, 5/16-18 x .750
6	736-0277	Flat Washer, 1.03 x 1.620 x .095
7	725-0157	Cable Tie
8	726-0205	Hose Clamp .490 dia.
9	726-0272	Hose Clamp 9/16

Ref. No.	Part No.	Description
10	751-0564B	Muffler Deflector
11	751-0617B	Single Inlet
12	751-10047	Exhaust Pipe
13	751-10349	Fuel Line Hose
14	751-3141	Oil Drain Extension Hose
15	751-3140	Oil Drain Valve
16	783-0615D	Muffler Bracket
17	751-3142	Oil Drain Cap
18	KH-20-041-12	Exhaust Gasket

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Kohler Twin Cylinder Engine

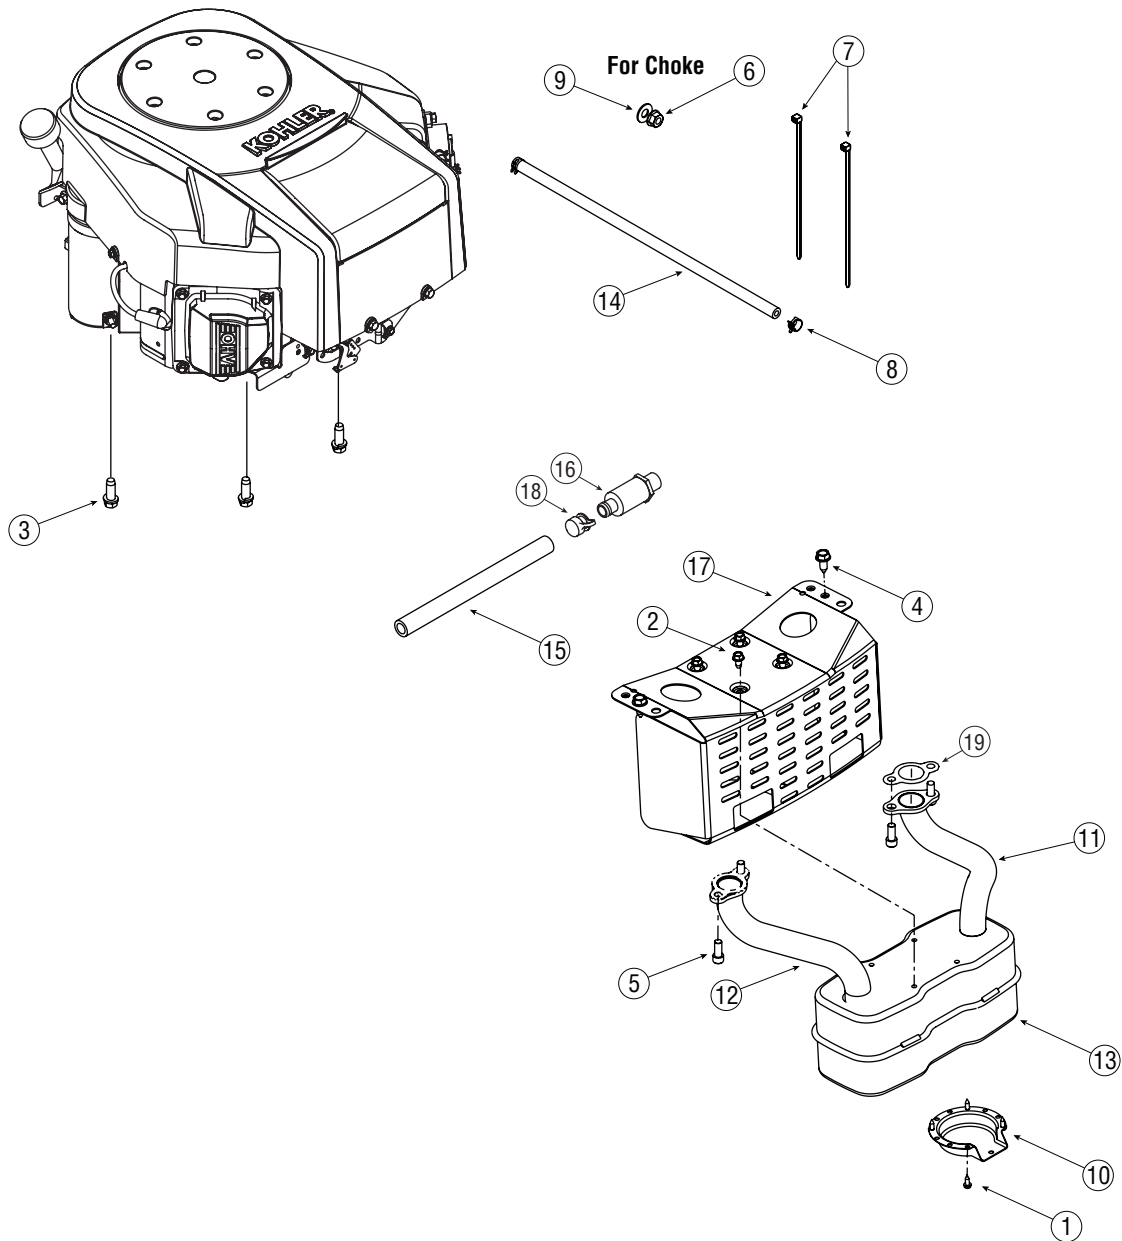


Ref. No.	Part No.	Description
1	710-0227	AB Screw #8-18 x 0.5
2	710-0599	TT Screw 1/4-20 x 0.5
3	710-0654A	TT Screw 3/8-16 x 1.00
4	710-0726	AB Screw 5/16-12 x 0.5
5	710-1314A	Screw, 5/16-18 x .750
6	712-3005	Flange Lock Nut, 3/8-16
7	725-0157	Cable Tie
8	726-0205	Hose Clamp
9	736-0300	Flat Washer, .406 x .875 x .059
10	751-0564B	Muffler Deflector

Ref. No.	Part No.	Description
11	751-0644B	LH Exhaust Pipe
12	751-0645A	RH Exhaust Pipe
13	751-0805A	Dual Inlet Muffler
14	751-10349	Fuel Line Hose
15	751-3141	Oil Drain Extension Hose
16	751-3140	Oil Drain Valve
17	783-0615D	Muffler Bracket
18	751-3142	Oil Drain Cap
19	KH-24-041-49-S	Exhaust Gasket

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model Series 600

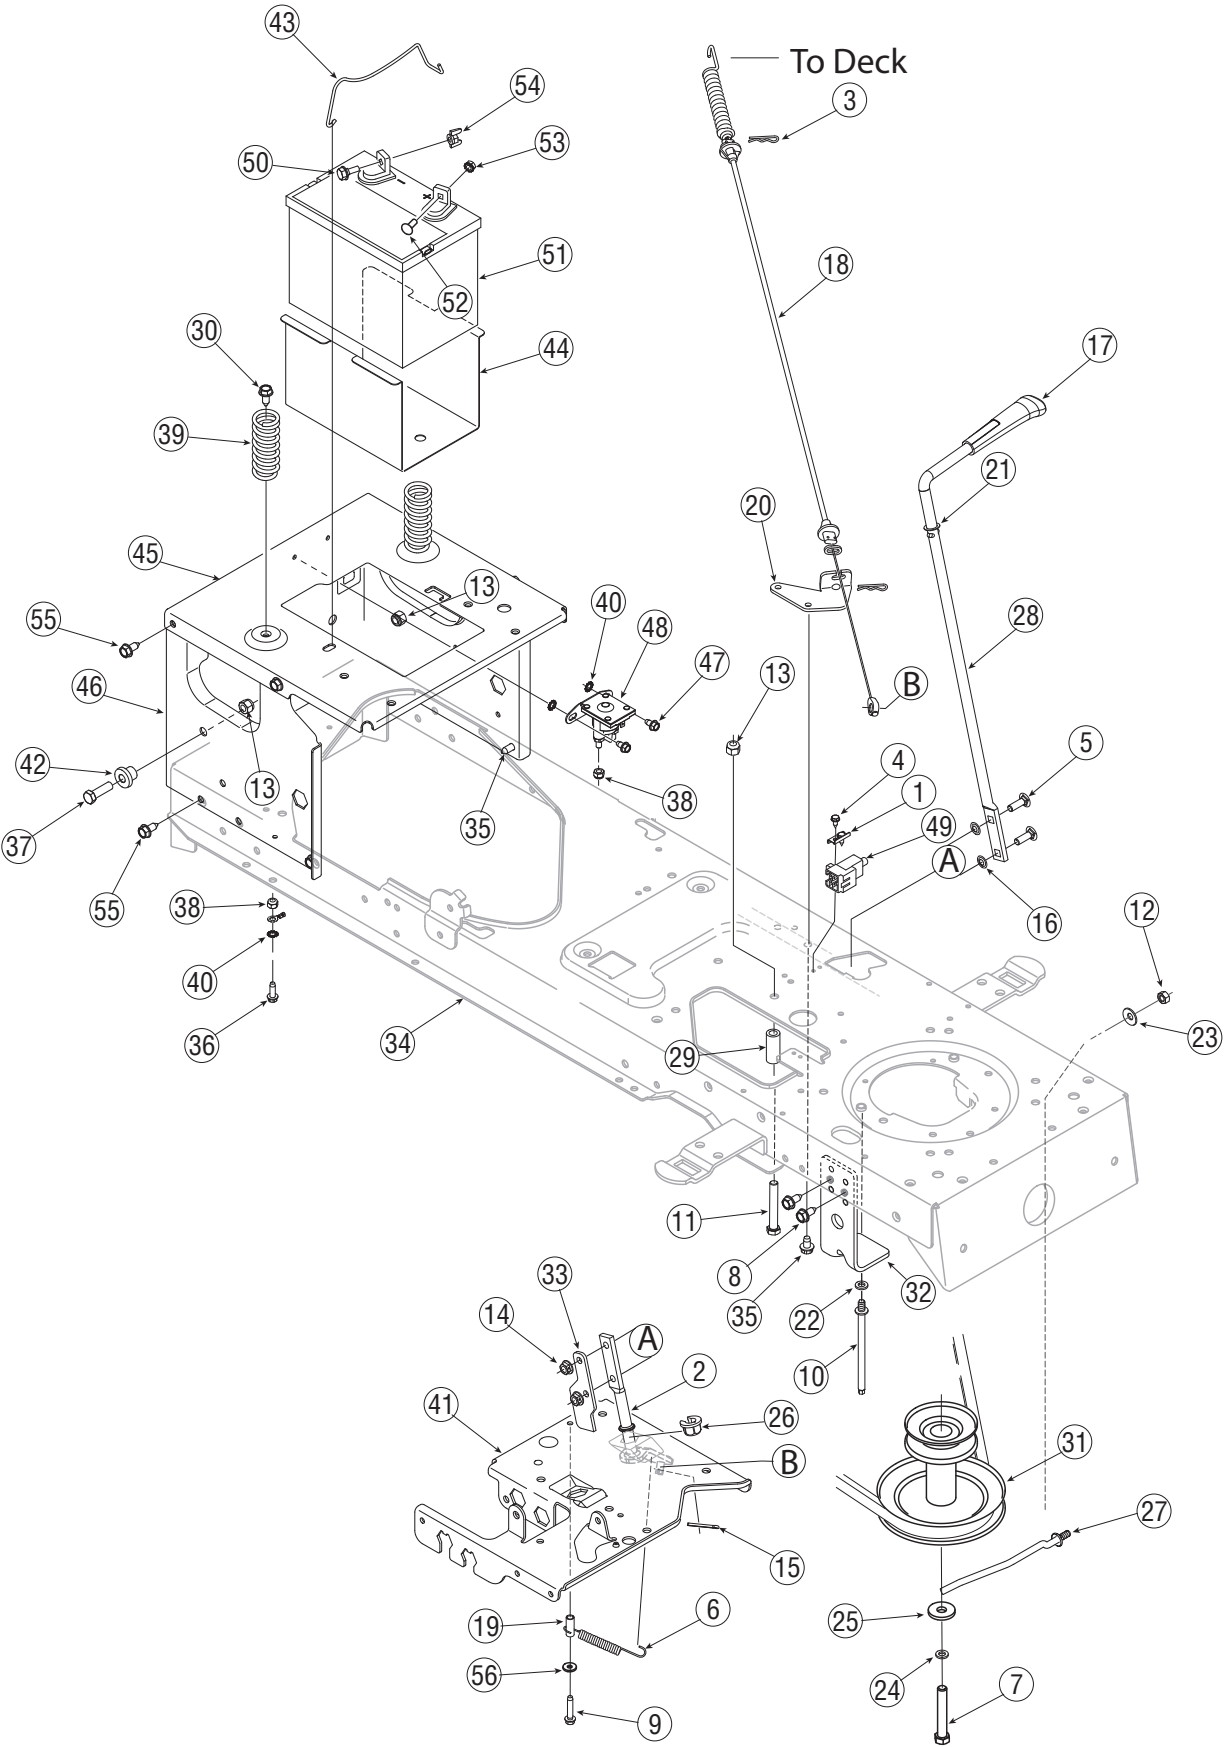


Ref. No.	Part No.	Description
1	17962	Plate, Switch
2	647-04036A	Lever Assembly, Engagement
3	714-0145	Click Pin
4	710-0224	Screw, #10-16, 0.500
5	710-0276	Screw, Carriage, 5/16-18, 1.00
6	732-04248	Extension Spring, .38 OD x 3.9 Lg
7	710-04608	Screw, 7/16-20, 2.75 46" Deck
	710-04607	Screw, 7/16-20, 3.25 42" Deck
8	710-0726	Screw, 5/16-12, 0.750
9	710-0778	Screw, 1/4-20 x 1.50
10	711-1428	Pin, Belt Guard, 5/16 x 5.80
11	710-0859	Screw, 3/8-16 x 2.50
12	712-04063	Nut, Flange Lock, 5/16-18, GrF
13	712-04065	Nut, Flange Lock, 3/8-16, GrF
14	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
15	714-0115	Pin, Cotter, 1/8 x 1.00
16	726-0201	Nut, Speed, .3125 ID
17	731-2111B	Knob, PTO
18	746-04092	Deck Engagement Cable
19	750-0566A	Spacer, .260 x .372 x 1.030 Lg.
20	783-04590B	Cable Bracket
21	736-0108	Washer, Flat, .510 x .750 x .033
22	736-0119	Washer, Lock, 5/16
23	736-0242	Washer, Bell, .340 x .872 x .060
24	736-0171	Washer, Lock, 7/16
25	736-0322	Washer, Flat, .450 x 1.250 x .164
26	741-0708	Bearing, Flange, Hex Split .500 ID
27	747-1286A	Keeper Rod, Belt
28	747-04470	Engagement Handle, Deck
29	748-0415B	Spacer, .385 ID x .635 OD x 1.54

Ref. No.	Part No.	Description
30	710-1260A	Screw, 5/16-18 x .750
31	756-04196	Pulley, Engine, 42" Deck
	756-04207	Pulley, Engine, 46" Deck
32	783-04467	Stop Bracket, Deck-Up
33	783-0744A	Stop Bracket, Engagement
34	683-04173B	Frame Assembly, Lower
35	710-0607	Screw, 5/16-18, 0.500
36	710-0642	Screw, 1/4-20, 0.750
37	710-3005	Screw, 3/8-16, 1.25, Gr5
38	712-04064	Nut, Flange Lock, 1/4-20, GrF
39	732-04035	Spring, Compr., 1.28 OD x 3.125
40	736-0222	Washer, Lock, 1/4, External
41	783-04612	Support Bracket, Steering
42	738-04058	Spacer, Shoulder, .38 x 1.0 x .70
43	747-04121A	Hold Rod, Battery
44	783-0349	Battery Tray
45	783-04329A	Seat Bracket, Frame
46	783-04809	Frame, Upper
47	710-0599	Screw, 1/4-20, 0.50
48	725-04439	Solenoid, 12V, 100 Amp
49	725-04039	Switch, Interlock
50	738-1132	Screw, Shoulder, .250 x .150
51	725-1737A	Battery, 190 CCA
	725-1750A	Battery, 235 CCA
52	710-04666	Hex Head Flange Screw
53	712-0271	Nut, Sems, 1/4-20
54	712-3087	Nut, Wing, 1/4-20
55	710-0604A	Screw, 5/16-18 x 0.625
56	736-0173	Washer, Flat, .28 x .74 x .063

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model Series 600

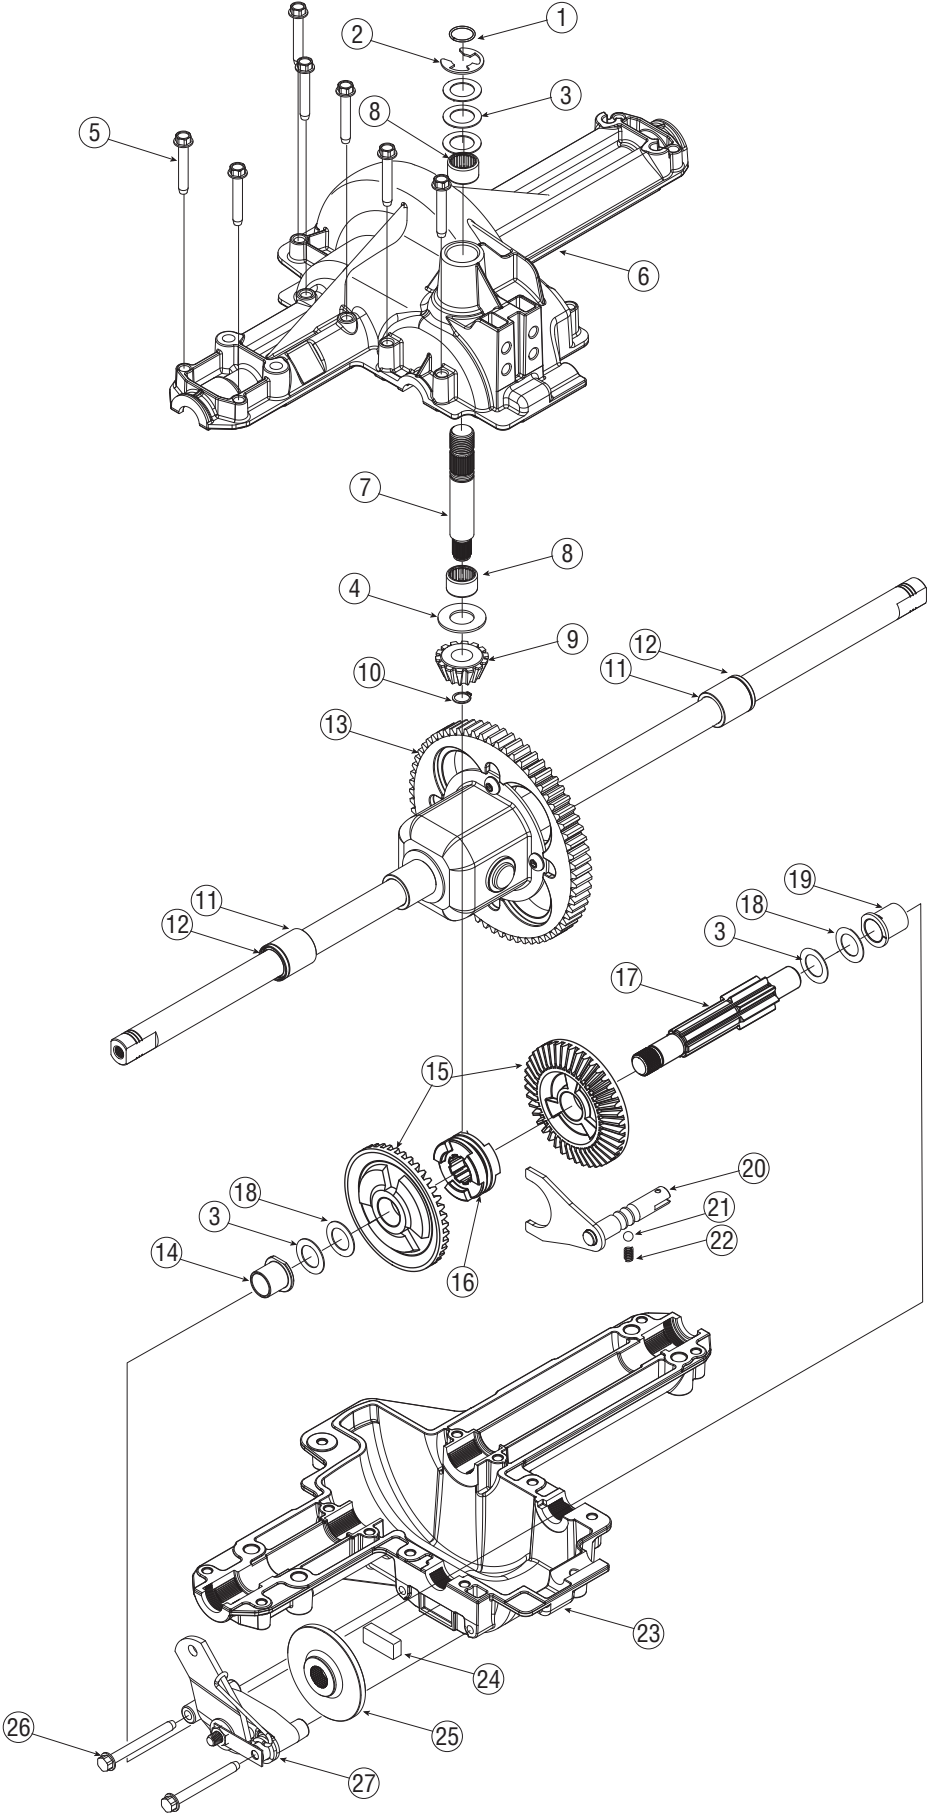


Ref. No.	Part No.	Description
1	732-0614	Ring, Wire
2	716-0231	Ring, E Type,.750
3	736-0336*	Flat Washer, 5/8 x 1.0 x.030
	736-0337*	Flat Washer, 5/8 x 1.0 x.040
	736-0349*	Flat Washer, 5/8 x 1.0 x.020
4	736-0335	Washer, Thrust.635 x 1.26 x.06
5	710-1325	Self-tapping Screw, 1/4-20 x 1.625
6	719-04277	Upper Housing
7	611-0115	Input Shaft
8	741-0335	Needle Bearing,.625 x.813 x.495
9	717-1464	14-tooth Bevel Pinion
10	716-0108	Retaining Ring,.437
11	741-0340	Sleeve Bearing,.75 x1.0 x 1.0
12	721-0338	Seal,.75 x 1.0 x.125
13	618-04041A	Differential Assembly
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	717-04056	42-tooth Bevel Gear
16	718-04045	Clutch Collar
17	711-04134	Drive Shaft
18	736-0495*	Thrust Washer, 1.0 x.632 x.0
	736-0494*	Flat Washer,.632 x 1.00 x.035
19	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
20	611-0011	Detent Shaft Assembly
21	741-0862	Detent Ball
22	732-0863	Compression Spring
23	719-04018	Lower Housing
24	717-0678	Brake Puck
25	761-0202	Brake Disc
26	710-1206	Self-tapping Screw, 1/4-20 x 2.375
27	661-0001	Brake Assembly
—	737-0148	Grease (19 oz.)

* Use applicable flat washer (ref. #'s 3 or 18) in this application allowing .0150/.0020 in. end-play

NOTE: If rebuilding the upper housing, include two ounces (2 oz.) of Unirex® N3 grease (Part No. 737-0289) in the input shaft cavity.


42" Manual PTO Deck

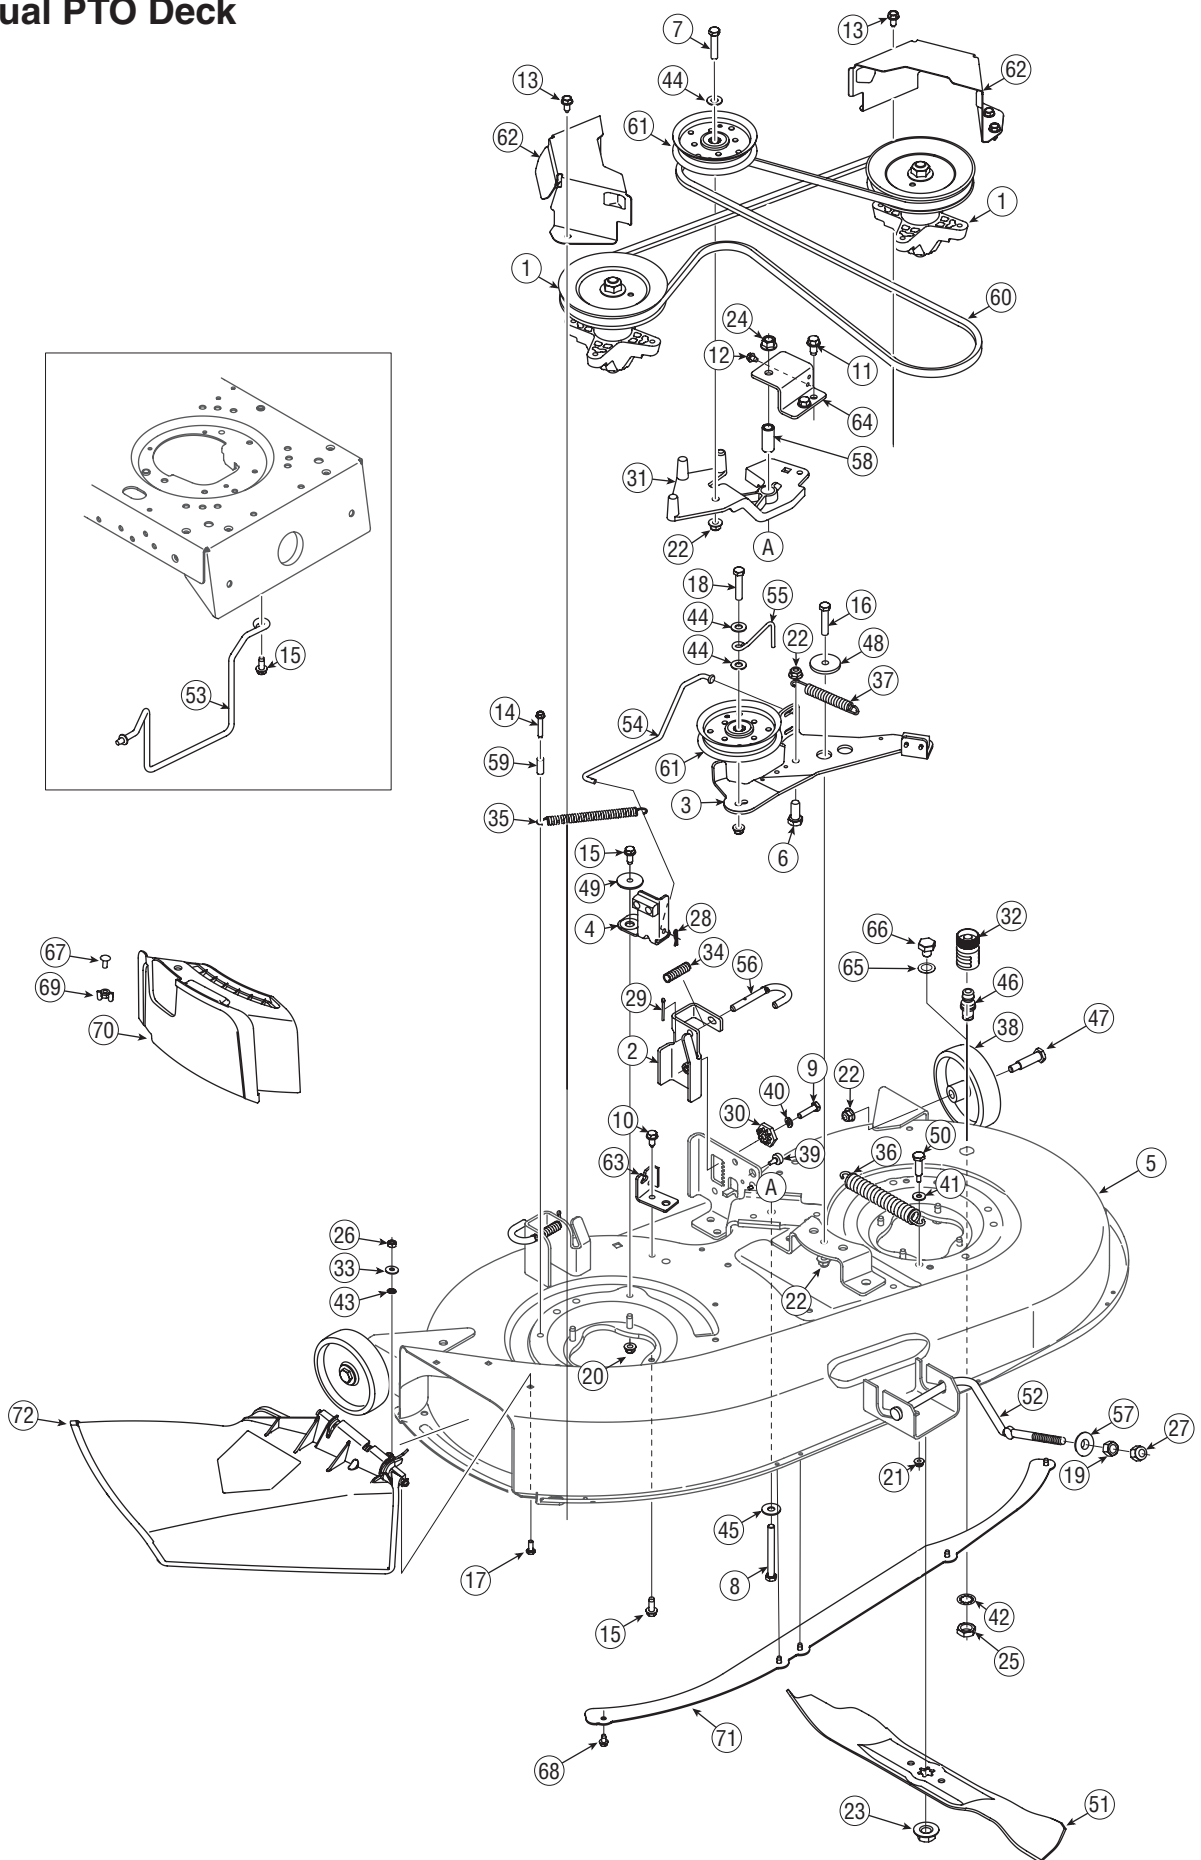

Ref. No.	Part No.	Description
1	618-04456	Spindle Assembly Pulley 6.3 Dia
2	683-0254B	Deck Hanger Bracket Assy. LH
3	683-04138B	Brake Assembly, 42" Deck
4	683-04167	Brake Assembly, 42" Deck
5	683-04261	Deck Assembly 42" W/Whl Brkt.
6	710-0216	Screw, 3/8-16 x .75 GR5 STD
7	710-0347	Screw, 3/8-16 x 1.75 GR5 STD
8	710-0510	Screw, 7/16-20 x 3.00 GR5 STD
9	710-0528	Screw, 5/16-18 x 1.25 GR5 STD
10	710-0604A	Screw, 5/16-18 x 0.625
11	710-0623	Screw, 3/8-16 x 0.750
12	710-0653	Screw, 1/4-20 x 0.375
13	710-0726	Screw, 5/16-12 x 0.750
14	710-0778	Screw, 1/4-20 x 1.500
15	710-1260A	Screw, 5/16-18 x 0.750
16	710-3005	Screw, 3/8-16 x 1.25
17	710-3015	Screw, 1/4-20 x .75
18	710-3144	Screw, 3/8-16 x 2.00
19	712-0206	Hex Nut, 1/2-13
20	712-04063	Flange Lock Nut, 5/16-18
21	712-04064	Flange Lock Nut, 1/4-20
22	712-04065	Flange Lock Nut, 3/8-16
23	712-0417A	Flange Nut, 5/8-18
24	712-0459	Flange Lock Nut, 7/16-20
25	712-0641	Hex Nut, M16-1.5 DIN 936
26	712-3006	Hex Nut, 1/4-20
27	712-3083	Hex Lock Nut, 1/2-13
28	714-0104	Cotter Pin, .072 Dia. x 1.13 Lg.
29	714-0470	Cotter Pin, 1/8 x 1.25
30	717-04074	Deck Gear Adjustment
31	719-04233	Idler Bracket, Cast 42" DECK
32	721-04041	Water Nozzle Adapter
33	726-0233	Push Nut, .25 ID x .50 OD
34	732-0306A	Compression Spring .531 x 1.75
35	732-04287	Extension Spring, .500 x 6.375
36	732-0459C	Extension Spring, .94 x 6.74

Ref. No.	Part No.	Description
37	732-0470A	Extension Spring, .53 x 4.75
38	734-0973	Deck Wheel, 5.0 x 1.38
39	735-0271A	Bumper, .62 Dia. x .3
40	736-0119	Lock Washer, 5/16
41	736-0173	Flat Washer, .28 x .74 x .063
42	736-0225	Lock Washer, 5/8
43	736-0270	Bell Washer, .265 x.75 x .062
44	736-0300	Flat Washer, .406 x .875 x .059
45	736-0322	Flat Washer, .450 x 1.250 x .164
46	737-04003C	Deck Water Nozzle
47	738-0373	Shoulder Bolt, .496 x 1.525
48	738-04162A	Shoulder Spacer, .8840 x .190
49	738-04166	Shoulder Spacer, .5000 X .1475
50	738-04272	Shoulder Screw, .374 x 1.16
51	742-0616A	3 in 1 Star Blade 21.23"LG
52	747-04269A	Adjustable Front Deck Rod,
53	747-04307	Belt-Keeper Rod, 42"
54	747-04501	Brake Control Ride, 42"
55	747-04530	Belt Keeper Rod, 42" IDLER
56	747-1116	Deck Release Handle Rod
57	748-04069	Deck Lift Pivot Cup
58	750-04637A	Spacer, .455 X .697 X 1.585
59	750-0566A	Spacer, .260 x .372 x 1.030
60	754-04045	V-Belt
61	756-04129	Idler Pulley, 4.25"DIA
62	783-04327B	Belt Covers, 6.00 DIA
63	783-04740	Cable Deck Engage Bracket
64	783-05490	Support Bracket
65	736-0187	Flat Washer, .64 x 1.24 x .06
66	738-04146	Bolt Plug, M16 x 1.5
67	710-0134	Carriage Screw, 1/4-20 x .62
68	710-0599	Screw, 1/4-20, 0.500
69	712-3087	Wing Nut, 1/4-20
70	731-2363	Mulch Plug
71	783-1146A	Deck Skirt, 42" Deck
72	731-1032B	Discharge Chute Assembly

46" Manual PTO Deck

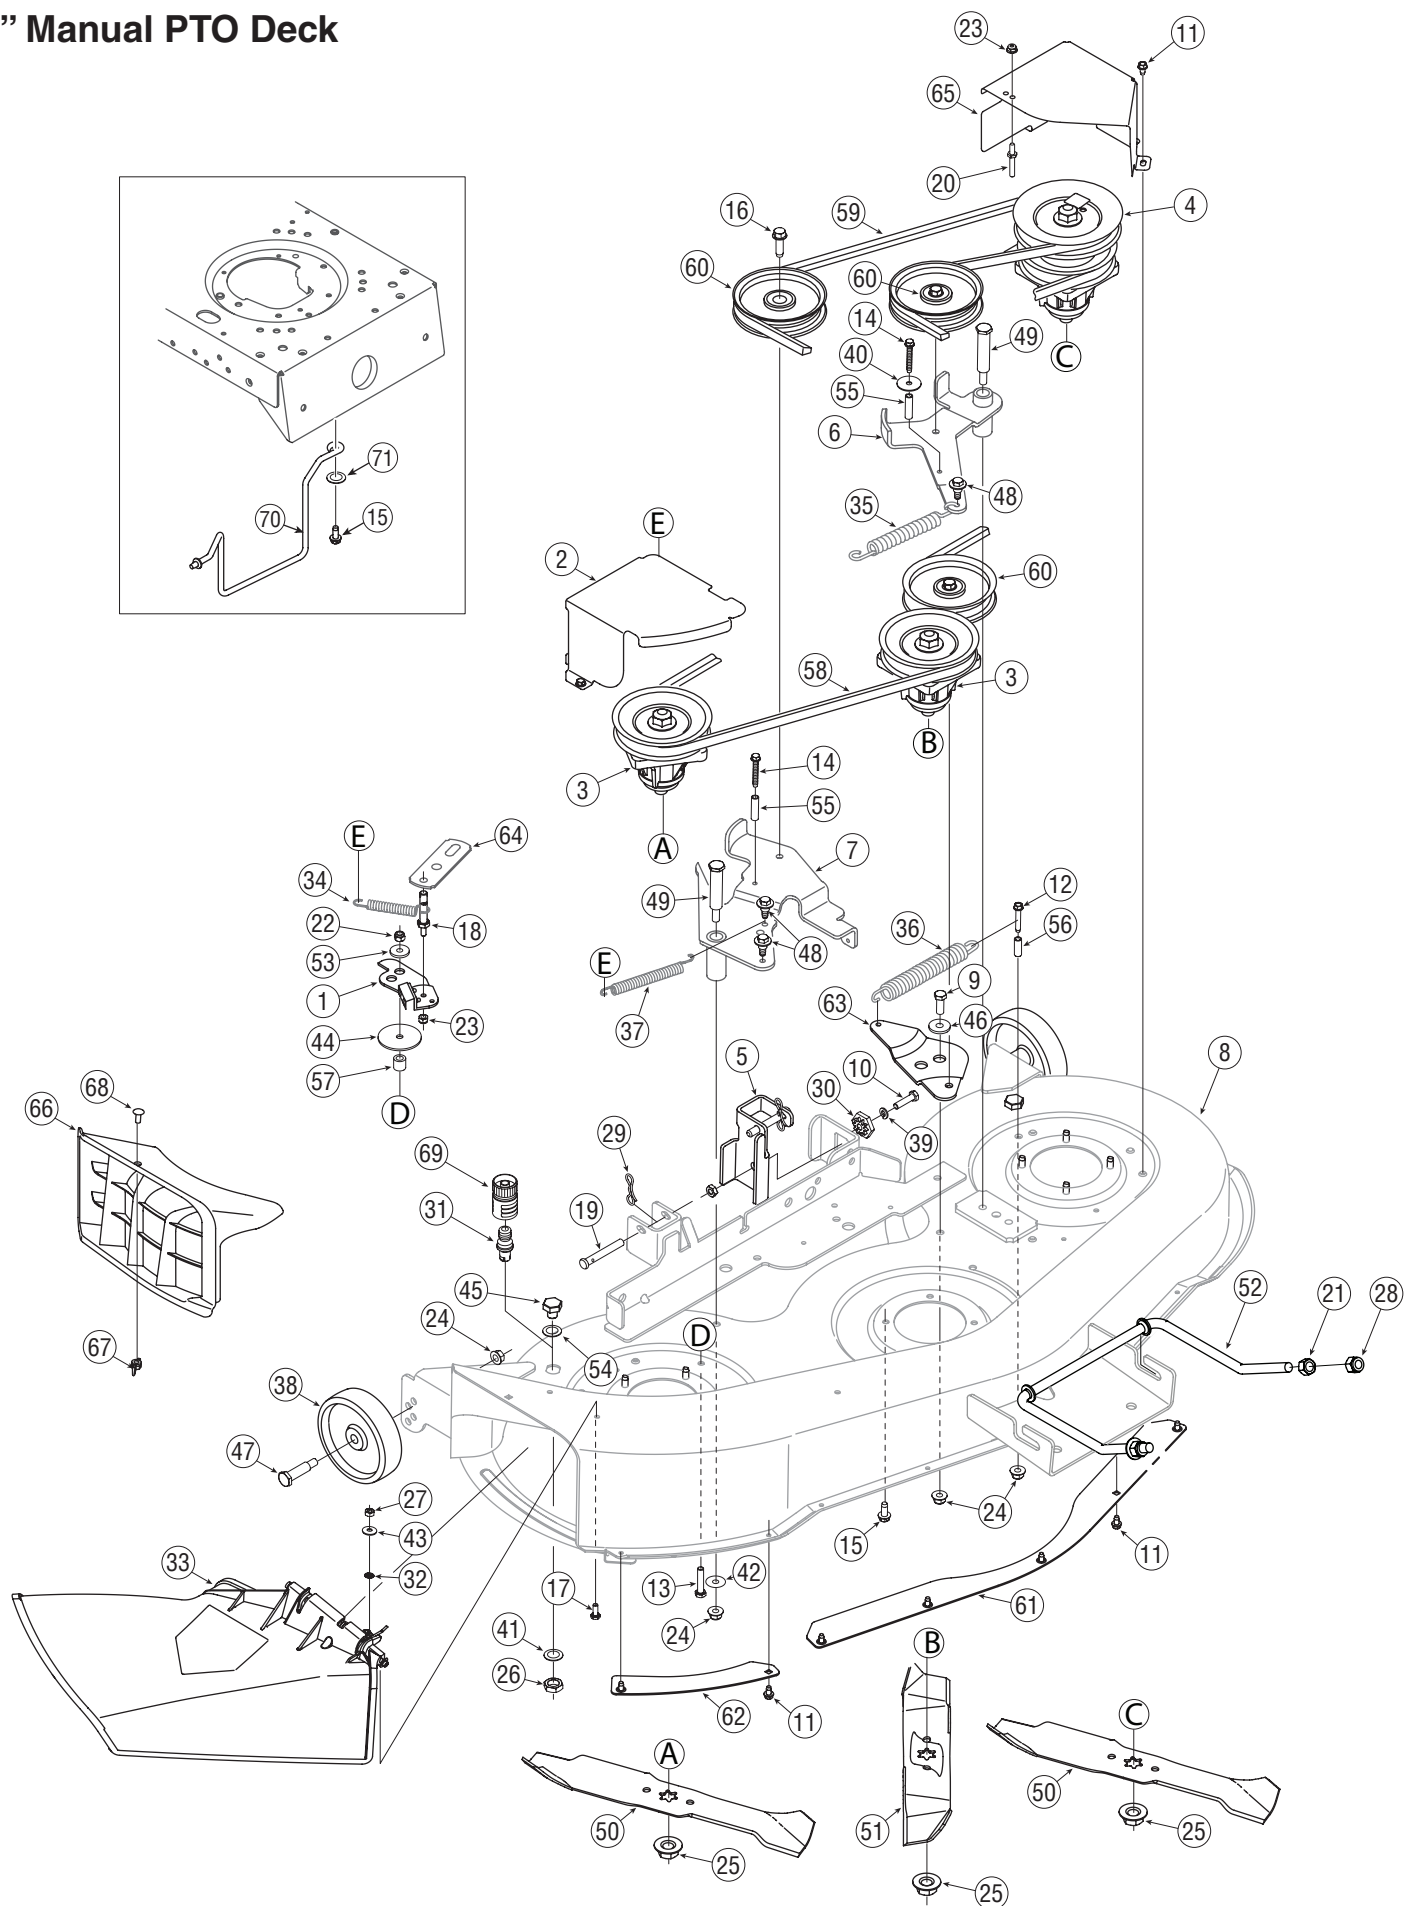

Ref. No.	Part No.	Description
1	17116	Brake Assembly, Deck
2	17258E	RH Belt Cover, Deck 46"
3	618-0240A	Spindle Assembly, 5.00 Dia.
4	618-04134B	Spindle Ass'y, Double Pulley
5	683-0254B	Hanger Bracket Assembly
6	683-04250A	Idler Bracket Assembly - LH
7	683-04251A	Idler Bracket Assembly - RH
8	683-04254	Deck Weldment
9	710-0514	Screw, 3/8-16, 1.00, Gr5
10	710-0528	Screw, 5/16-18, 1.25, Gr5
11	710-0599	Screw, 1/4-20, 0.500
12	710-0778	Screw, 1/4-20, 1.500
13	710-0805	Screw, 5/16-18, 1.50, Gr5
14	710-1026	Screw, 1/4-20 x 1.75
15	710-1260A	Screw, Ld, 5/16-18, 0.750
16	710-1315	Screw, 3/8-16 x 1.250
17	710-3015	Screw, 1/4-20, .75, Gr5
18	711-04636	Pin, 1/4-20, 3/8 x 2.0
19	711-04669	Clevis Pin, 3/8 x 2.75
20	711-0993	Belt Guard Pin 1/4 Dia x 1.43
21	712-0206	Nut, Hex, 1/2-13, Gr5
22	712-04063	Nut, Flange Lock, 5/16-18, GrF
23	712-04064	Nut, Flange Lock, 1/4-20, GrF
24	712-04065	Nut, Flange Lock, 3/8-16, GrF
25	712-0417A	Nut, Flange, 5/8-18
26	712-0641	Nut, Hex, M16-1.5
27	712-3006	Nut, Hex, 1/4-20, Gr5
28	712-3083	Nut, Hex Lock, 1/2-13
29	714-04043	Bow Tie Cotter Pin 1/8 x 1.25
30	717-04074	Adjustment Gear, Deck
31	737-04003C	Water Nozzle Adapter
32	726-0233	Nut, Push, .25 ID x .50 OD
33	731-1032B	Chute Assembly
34	732-0429A	Spring, Extension, .50 x 3.97
35	732-04400	Spring, Extension, .75 x 6.835
36	732-0594A	Spring, Extension, .91 x 7.33
37	732-0814	Spring, Extension, .56 x 5.52

Ref. No.	Part No.	Description
38	734-0973	Wheel, Deck 5.0 x 1.38
39	736-0119	Washer, Lock, 5/16
40	736-0211	Washer, Flat, .285 x 1.25 x .06
41	736-0225	Washer, Lock, 5/8
42	736-0258	Washer, Flat, .385 x 1.0 x .135
43	736-0270	Washer, Bell, .265 x .75 x .062
44	736-0418A	Washer, Flat, .34 x 2.25 x .10
45	738-04146	Plug
46	738-0347	Spacer, Shoulder, .625 ID x .169
47	738-0373	Spacer, Shoulder, .498 x 1.53
48	738-04091	Shld, Screw, .43 x .29, 5/16-18
49	738-04216A	Shld. Screw, .625 x 2.515 x .875
50	742-0611A	Blade, 16.28", Star 3-in-One
51	742-0612A	Blade, 14.88", Star 3-in-One
52	747-1130B	Rod, Deck Adjustment
53	748-0234	Shoulder Spacer
54	736-0187	Washer, Flat, .64 x 1.24 x .06
55	750-04456	Spacer, .260 x .372 x 1.420 Lg.
56	750-0566A	Spacer, .260 x .372 x 1.030
57	750-1320	Spacer, .375 x .63 x .595
58	754-0349	Belt, V-Type, Poly, A x 79.10 Lg.
59	754-04122	Belt, V-Type, A x 90.24
60	756-04129	Pulley, Idler, 4.25" Dia.
61	783-0141	Deck Skirt, Center
62	783-0142	Deck Skirt, RH
63	783-04641A	Bracket, Idler
64	783-05321	Brake Bracket, 46"
65	783-1348D	Belt Cover, LH
66	731-05264	Mulch Plug
67	712-3087	Wing Nut
68	710-0134	Carriage Screw, 1/4-20 x .62
69	721-04041	Deck Water Nozzle
70	747-04307	Belt-Keeper Rod
71	736-0300	Washer, Flat, .406 x .875 x .059
72	710-1007	Sems Screw, 3/8-16 x 1.500
73	747-04530	Idler Belt-Keeper Rod

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.