


FRAME: MODELS ZT4200 AND ZT5000

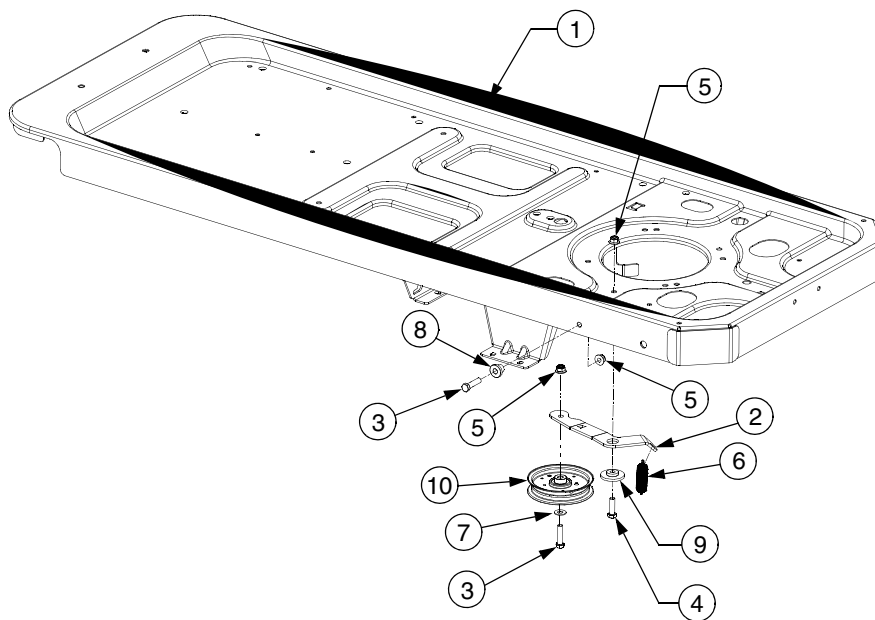


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-04303C	Frame Assembly	1
	777I22489	Graphic, Release Lever	2
	777D10797	Graphic, White Outdoor	1
2	703-05829	Idler Arm, Drive	1
3	710-0520	Screw, Hex Cap, 3/8-16 x 1.5 GR5	3
4	710-3005	Screw, Hex Cap, 3/8-16 x 1.25 GR5	1
5	712-04065	Nut, Hx Insert Flng Lck, 3/16 GrF	4
6	732-0626	Spring, Extension, .75 x 5.06	1
7	736-0300	Washer, Flat, .408 x .875 x .059	1
8	738-04058	Spacer, Shoulder, .39 x 1.0 x .7	2
9	738-04162A	Spacer, Shoulder, .884 x .19	1
10	756-04129	Pulley, Idler, 4.25 Dia.	1

NOTE: For **paint**ed parts, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part.
For instance, if a part, numbered 700-xxxx, is painted red metallic, the part number to order would be 700-xxxx-0650.


Red : 0650
Oyster Grey: 0662
Powder Black: 0637

FRONT AXLE & WHEELS: MODEL ZT4200 ONLY

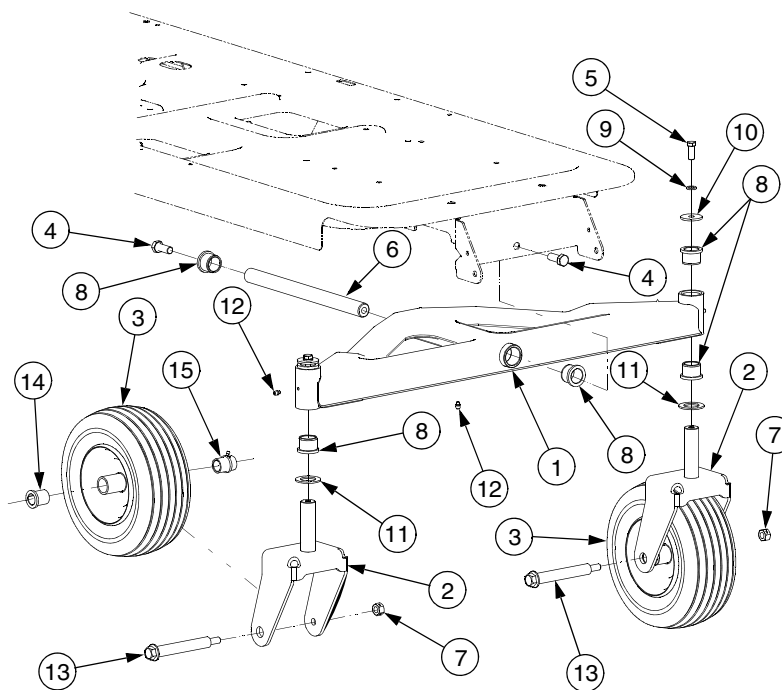


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-04148C	Axle, Front Pivot	1
2	603-04308	Bracket, Castor Wheel	2
3	634-04237A	Wheel Assembly, 11.0 x 4.0 x 5.0	2
4	710-04186	Screw, Hex Lock, 1/2-13 x 1.25 GR5	2
5	710-0514	Screw, Hex Cap, 3/8-16 x 1.0 GR5	2
6	711-04228	Shaft, Axle	1
7	712-3022	Nut, Hex Lock, 1/2-13 GRB	2
8	731-05500	Bearing, Flange, 1.0 x 1.246	6
9	736-0169	Washer, Lock, 3/8	2
10	736-0227	Washer, Flat,39 x 1.5 x .134	2
11	736-0250	Washer, Flat, 1.0 x 1.75 x .107	2
12	737-3000	Fitting, Lube, 3/16 Drive	3
13	738-04182A	Screw, Shoulder,75 x 4.75:7/16-14	2
14	741-0516B	Bearing, Flange,76 x 1.0 x 1.2	2
15	741-0990B	Bearing, Flange,76 ID w/Lube Ftg.	2

SEAT ADJUSTMENT: MODELS ZT4200 AND ZT5000

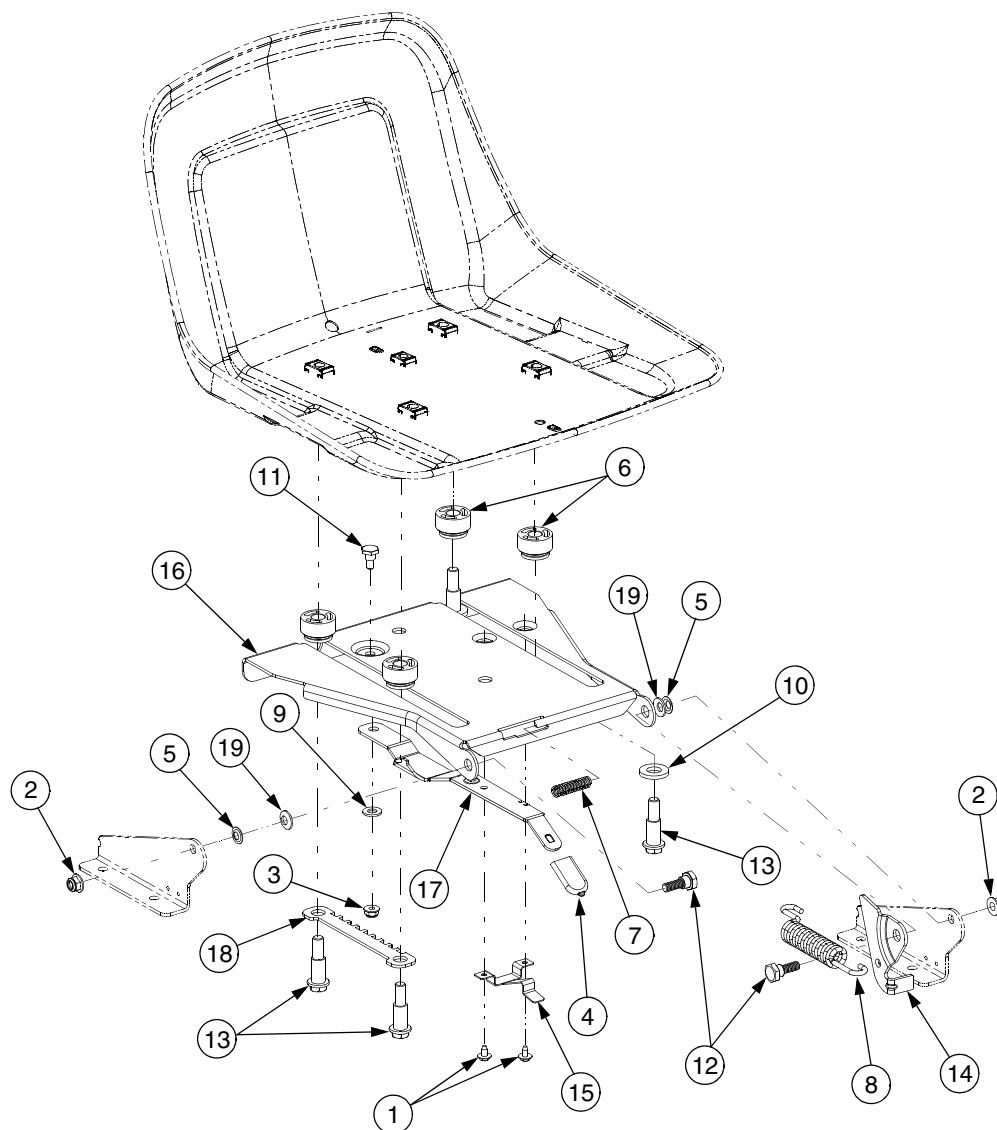

REF. NO.	PART NUMBER	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	710-1268	Screw, Hx. Wash. Hd. Tapp #10-16 x .375	2	10	736-3019	Washer, Flat, .531 x 1.062 x .134 HT	2
2	712-04063	Nut, Hx Insert Flange Lck, 5/16-18 GrF	2	11	738-0137A	Screw, Shoulder, .34 x .285:1/4-20	1
3	712-04064	Nut, Hx Insert Flng Lck, 1/4-20 GrF	1	12	738-0296	Screw, Shoulder, .437 x .268:5/16-18	2
4	720-0309A	Grip, Seat Adjustment	1	13	738-0966A	Screw, Shoulder, .5 x .925:3/8-16 ...	4
5	726-0201	Nut, Speed, .3125	2	14	783-0209D	Bracket, Seat Lift	1
6	731-04074	Spacer, Seat Adjustment	4	15	783-0611	Stop, Seat Adjustment	1
7	732-0499	Spring, Compression, .41 x 1.5	1	16	783-0738D	Bracket, Seat Pivot	1
8	732-1184	Spring, Extension, .84 Dia. x 4.6	1	17	783-0739A	Lever, Seat Adjustment	1
9	736-0204	Washer, Flat, .344 x .62 x .033	1	18	783-0753	Index Bracket, Seat Adjustment	1
				19	736-0242	Washer, Belleville, .34 x .872 x .06	2

ELECTRICAL: MODELS ZT4200 AND ZT5000

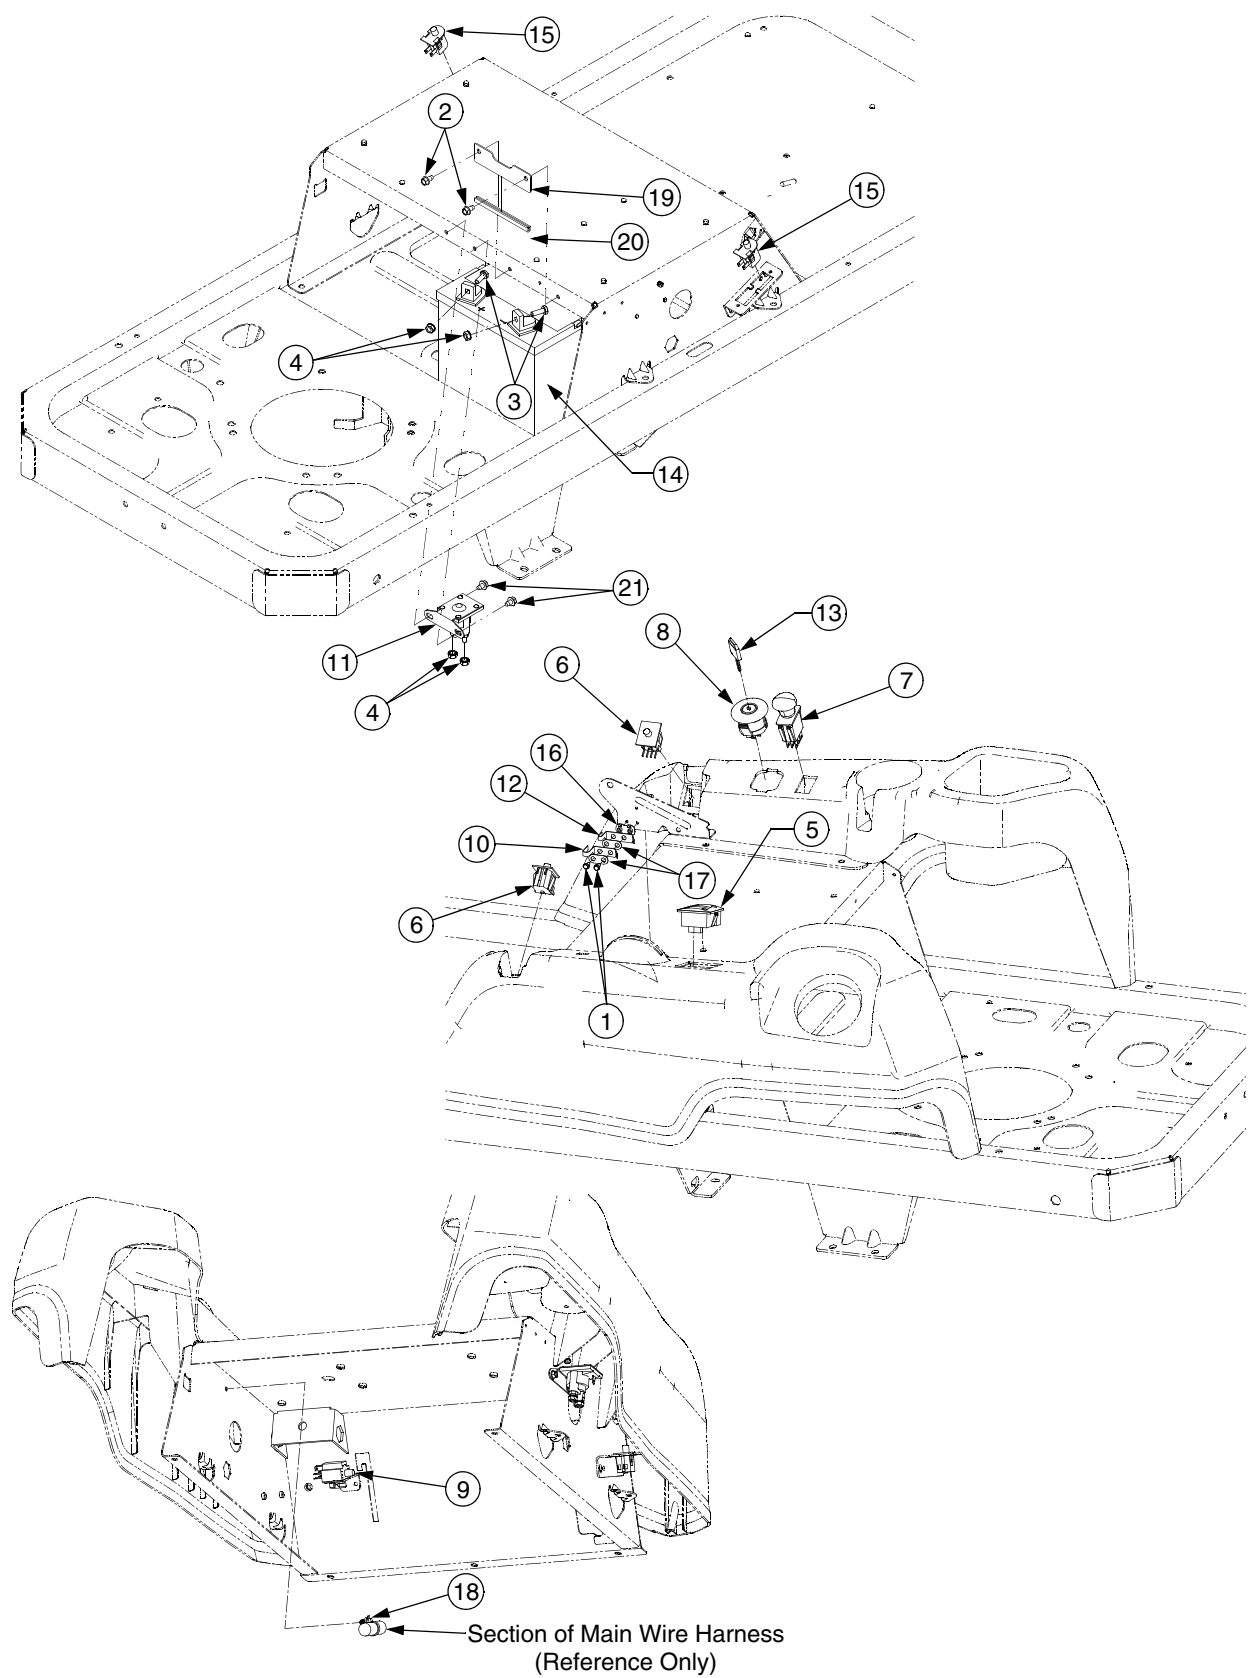


ELECTRICAL: MODELS ZT4200 AND ZT5000

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	710-0227	Screw, Hex Wash. Hd. Tapp #8-18 x .5	2
2	710-0599	Screw, Hex Wash. Hd. Tapp, 1/4-20 x .5	2
3	710-3015	Screw, Hex Cap, 1/4-20 x .75 GR5 ..	2
4	712-0271	Nut, Hex Sems, 1/4-20	4
5	725-04022B	Meter, Hour	1
6	725-04165	Switch, Dbl. Pole - Neutral	2
7	725-04174	Switch, PTO	1
8	725-04228	Switch, Ignition	1
9	725-04232	Switch, 3-Pole, (NC-NO-NO) - Brake	1
10	725-1303	Switch, Outer Seat Spring	1
11	725-1426A	Solenoid	1
12	725-1439	Switch, Inner Seat Spring	1
13	925-1745	Key	1
14	725-1707D	Battery, 235 CCA	1
15	725-3166	Switch, Snap Mount (N.C.) - Reverse	2
16	726-0278	Plate, Insulator Boss	1
17	726-0279	Plate, Insulator	2
18	726-0470	Tie, Cable	2
19	703-05894	Bracket, Battery Holddown	1
20	731-0511-5	Strip, Trim	4.5in
21	710-0653	Screw, Hex Wash. Hd. Tapp, 1/4-20 x .375	2
†	725-04434	Harness Assembly, Wire	1

† NOT SHOWN


OPERATOR'S PLATFORM: MODELS ZT4200 AND ZT5000

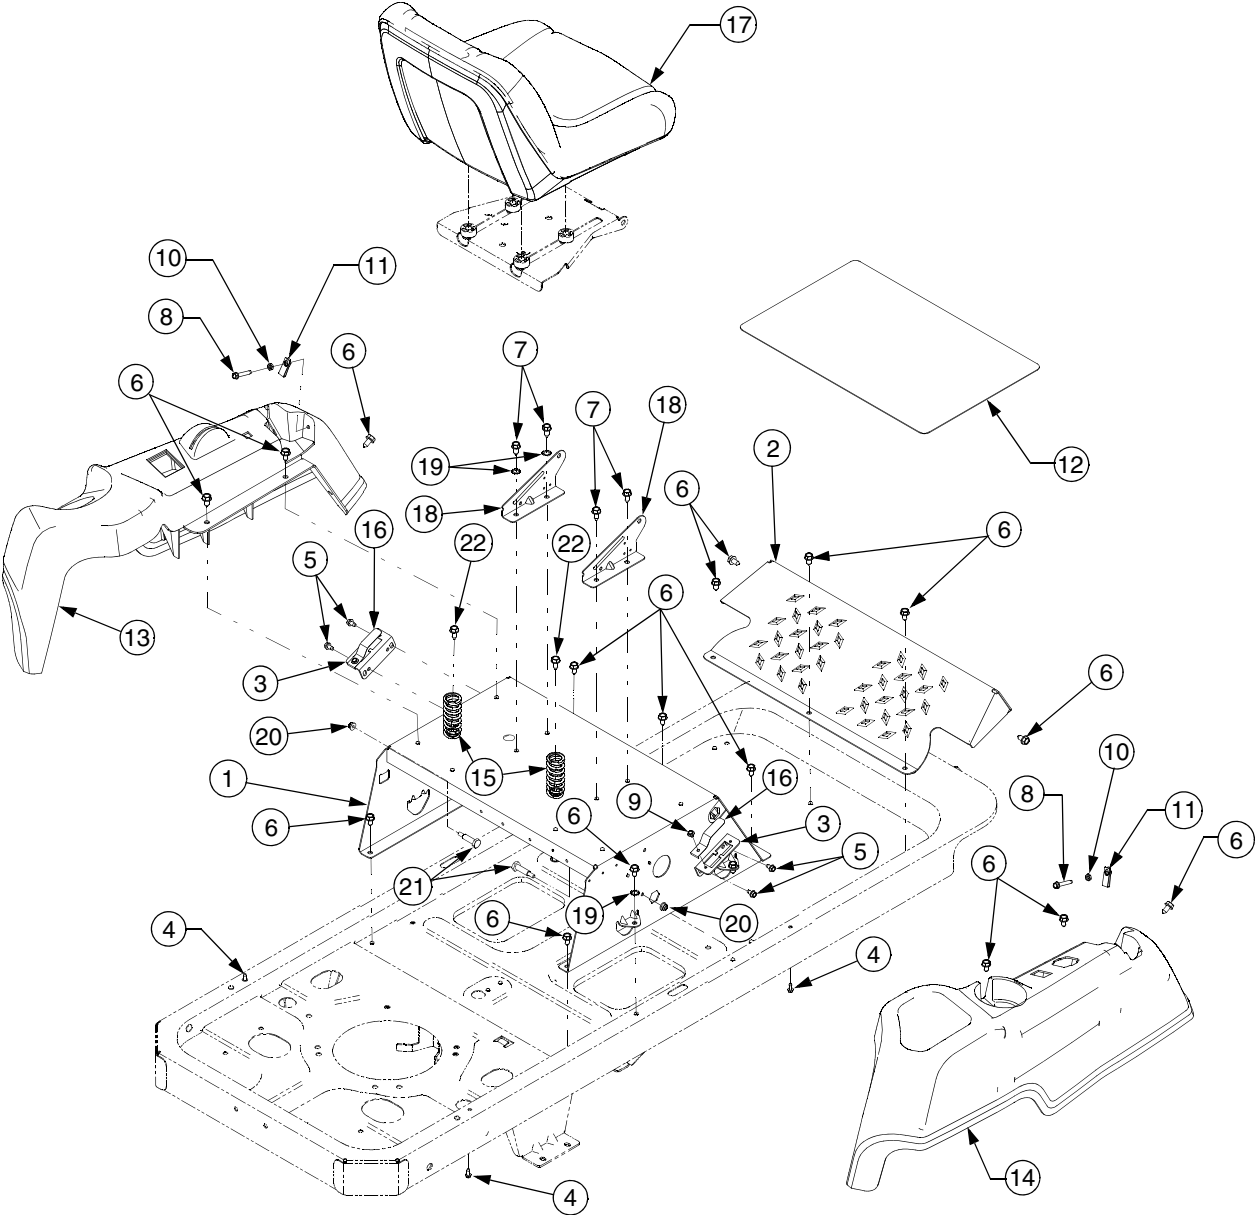

OPERATOR'S PLATFORM: MODELS ZT4200 AND ZT5000

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-04326B	Frame, Seat Box	1
	777I22769	Graphic, Park Brake	1
	777S32354	Graphic, Warning	1
	777I22770	Graphic, Deck Height	1
2	703-05373B	Bracket, Foot Rest	1
	777D10796	Graphic, Troy-Bilt	1
3	703-05467	Bracket, Switch Mounting	2
4	710-04261	Screw, Hex Wash. Hd Tapp	4
		#12-16 x .50	
5	710-0599	Screw, Hex Wash. Hd. Tapp.	4
		1/4-20 x .5	
6	710-0604A	Screw, Hex Wash. Hd. Tapp	20
		5/16-18 x .625	
7	710-0726	Screw, Hex Wash. Hd. Tapp	4
		5/16-12 x .75	
8	710-0778	Screw, Hex Wash. Hd. Tapp.	2
		1/4-20 x 1.5	
9	710-1268	Screw, Hex Wash. Hd Tapp	2
		#10-16 x .375	
10	712-0298	Nut, Hex Jam, 1/4-20 GR2	2
11	712-04092	Nut, U Type Speed, 1/4-20	2
12	723-04020	Pad, Foot	1
13	731-04662C	Console, LH	1
	777I22752	Graphic, Instruction - ZT 4200	1
	777I22751	Graphic, Instruction - ZT 5000	1
	777D10793	Graphic, White Outdoor ZT 4200 ...	1
	777D10795	Graphic, White Outdoor ZT 5000 ...	1
	777I22305	Graphic, Throttle Control ZT 4200 ..	1
	777I22309	Graphic, Throttle Control ZT5000 ..	1
14	731-04663B	Console, RH	1
	777I22754	Graphic, Instruction	1
	777D10792	Graphic, White Outdoor ZT 4200	1
	777D10794	Graphic, White Outdoor ZT 5000 ...	1
15	732-04035	Spring, Compression, 1.28 x 3.125	2
16	732-04200	Spring, Switch Actuator	2
17	757-04041	Seat	1
18	783-1489C	Bracket, Seat Pivot	2
19	736-0148	Washer, External Tooth, 3/8	3
20	712-04064	Nut, Hex Insert Lock, 1/4-20 - Model ZT 5000 ONLY	2
21	738-0572	Screw, Shoulder, .374 x 1.16:1/4-20 - Model ZT 5000 ONLY	2
22	710-1260A	Screw, Hex Wash. Hd. Tapp	2
		5/16-18 x .75	


OPERATOR'S CONTROLS: MODELS ZT4200 AND ZT5000

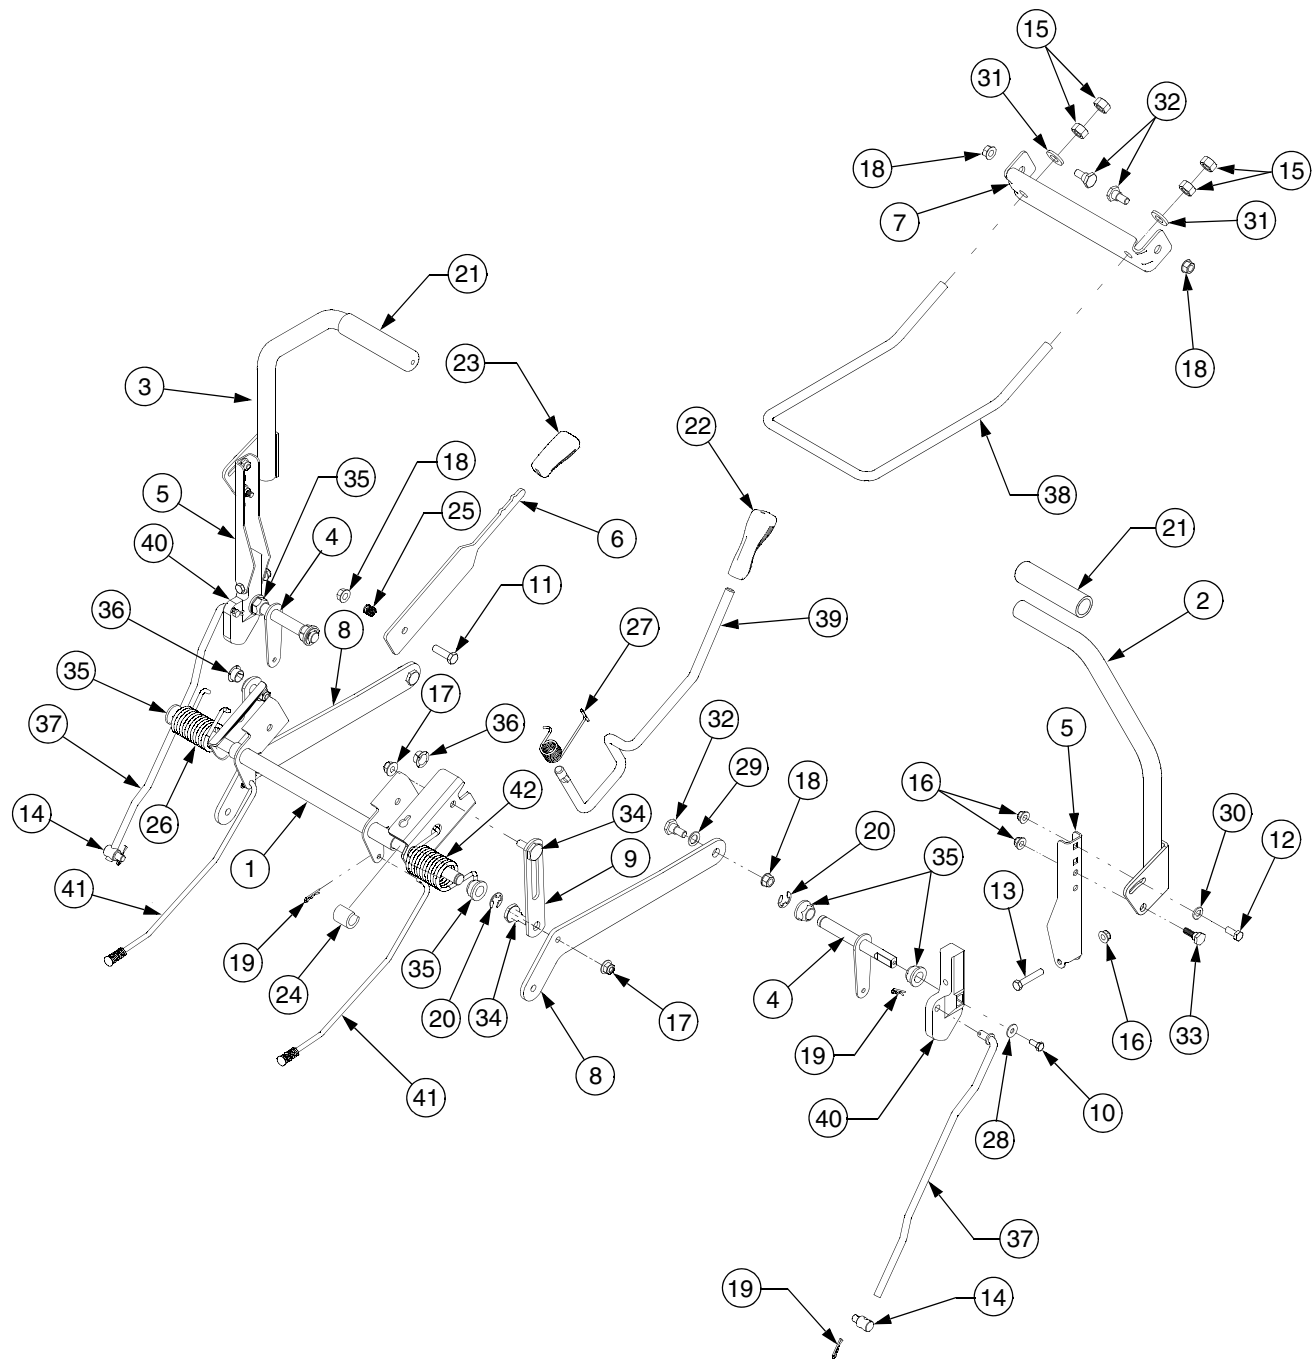

OPERATOR'S CONTROLS: MODELS ZT4200 AND ZT5000

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-04160B	Shaft Assembly, Deck Lift	1
2	603-04322	Lever, Lapbar, RH	1
3	603-04324	Lever, Lapbar, LH	1
4	647-04099	Shaft, Control	2
5	703-05387A	Bracket, Lapbar Pivot	2
6	703-05396	Handle, Brake	1
7	703-05414A	Bracket, Front Deck Hanger	1
8	703-05793A	Arm, Deck Lift	2
9	703-05907	Plate, Lift Link	2
10	710-0433	Screw, Hex Lock, 1/4-20 x .62 GR5	2
11	710-3005	Screw, Hex Cap, 3/8-16 x 1.25 GR5 ...	1
12	710-3008	Screw, Hex Cap, 5/16-18 x .75 GR5 ...	2
13	710-3180	Screw, Hex Cap, 5/16-18 x 1.75 GR5	2
14	711-0832	Ferrule, 3/8-24 x .375	2
15	712-0206	Nut, Hex, 1/2-13 GR5	4
16	712-04063	Nut, Hx Flange Insert Lck, 5/16-18 GrF	6
17	712-04065	Nut, Hx Flange Insert Lck, 3/8-16GrF	4
18	712-0431	Nut, Hex Flange Lock, 3/8-16 GRF	5
19	714-0104	Pin, Internal Cotter	6
20	716-0106	E-Ring , .625 Dia. Shaft	4
21	720-0274	Grip, Hand	2
22	720-0311	Grip, Handle	1
23	731-04735	Grip, Handle	1
24	731-05732	Spacer, .62 x 1.0	1
25	732-0334	Spring, Compression	1
26	732-04420	Spring, Torsion LH - Model ZT 5000 ONLY	1
27	732-04422	Spring, Torsion	1
28	736-0270	Washer, Bell, .265 x .75 x .062	2
29	736-0272	Washer, Flat, .51 x 1.0 x .06	2
30	736-0275	Washer, Flat, .344 x .688 x .065	2
31	736-3019	Washer, Flat, .531 x 1.062 x .134 HT ..	2
32	738-0143	Screw, Shoulder, .498 x .340:3/8-16	4
33	738-0296	Screw, Shoulder, .437 x .268:5/16-18	2
34	738-0507B	Screw, Shoulder, .5 x .434:3/8-16	4
35	741-0225	Bearing, Hex Flange	6
36	741-3074	Bearing, Flange, .626 x .938 x .344	2
37	747-04225A	Rod, Lapbar Control	2
38	747-04401A	Rod, Deck Front Hanger	1
39	747-04637	Rod, Deck Lift Handle	1
40	748-04052	Hub, Control	2
41	947-04065	Rod, Brake	2
42	732-04421	Spring, Torsion RH - Model ZT 5000 ONLY	1


MOWER DECK: MODEL ZT4200 ONLY

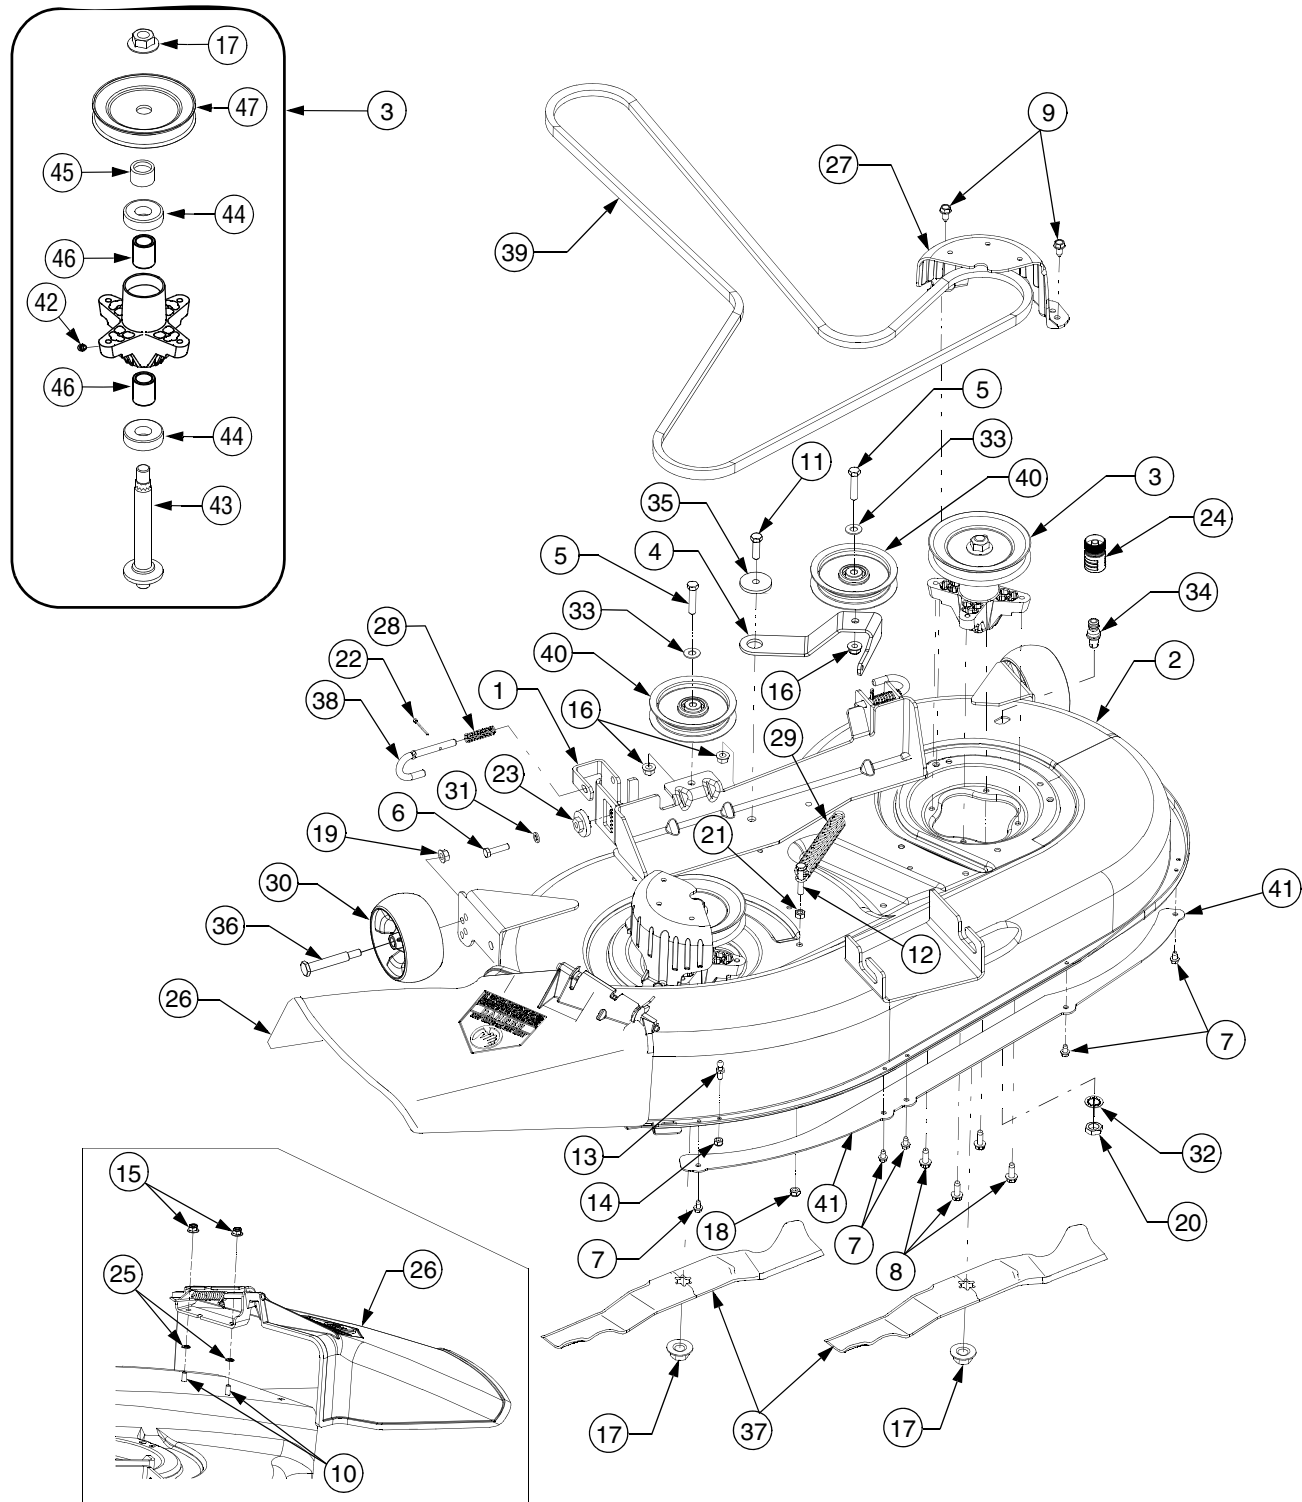

MOWER DECK: MODEL ZT4200 ONLY

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-04156	Bracket, Deck Lift	1
2	603-04335C	Housing, Deck	1
	777S32599	Graphic, Danger	1
	777S30503	Graphic, Danger	1
	777I22281	Graphic, Instruction	1
	777D09788	Graphic, Deck Wash	1
	777D10798	Graphic, 42" Wide Cut	1
3	618-0659	Spindle Assembly	1
4	703-05824A	Arm, Idler	1
5	710-0347	Screw, Hex Cap, 3/8-16 x 1.75 GR5	2
6	710-0528	Screw, Hex Cap, 5/16-18 x 1.25 GR5	1
7	710-0599	Screw, Hex Wash. Hd. Tapp	5
		1/4-20 x .5	
8	710-1260A	Screw, Hex Wash. Hd. Tapp	8
		5/16-18 x .875	
9	710-0726	Screw, Hex Wash. Hd. Tapp	4
		5/16-12 x .75	
10	710-0751	Screw, Hex Cap, 1/4-20 x .62 GR5 ..	2
11	710-3005	Screw, Hex Cap, 3/8-16 x 1.25 GR5	1
12	710-3180	Screw, Hex Cap, 5/16-18 x 1.75 GR5	1
13	711-04069	Pin, Grass Catcher, 1/4-20	1
14	712-0324	Nut, Hex Insert Lock, 1/4-20 GR8	1
15	712-04064	Nut, Hx Insert Flange Lck, 1/4-20 GR5	2
16	712-04065	Nut, Hx Insert Flange Lck, 3/8-16 GrF	3
17	712-0417A	Nut, Hex Flange, 5/8-18	4
18	712-0429	Nut, Hex Insert Lock, 5/16-18 GR5 ..	1
19	712-0431	Nut, Hex Flange Lock, 3/8-16 GrF	2
20	712-0641	Nut, Hex, M16-1.5	1
21	712-3010	Nut, Hex, 5/16-18 GR5	1
22	714-0470	Pin, Cotter, 1/8 x 1.25	2
23	717-04074	Gear, Deck Adjustment	1
24	721-04041	Adapter, Water Nozzle	1
25	726-0233	Nut, Push, .25 x .5	2
26	731-1032B	Chute Assembly, Discharge	1
	777S30284	Graphic, Danger	1
27	731-2231B	Cover, Belt	2
28	732-0306	Spring, Compression	2
29	732-0459	Spring, Extension, .94 Dia. x 6.74	1
30	734-04155	Wheel, Deck Ball, 5.0	2
31	736-0119	Washer, Lock, 5/16	1
32	736-0225	Washer, Internal Tooth Lock, 5/8	1
33	736-3072	Washer, Flat, .38 x .93 x .11 HT	2
34	737-04003C	Nozzle, Deck Water	1
35	738-04162A	Spacer, Shoulder, .884 x .19	1
36	738-3056	Screw, Shoulder, .5 x 2.5:3/8-16	2
37	942-0616A	Blade, 3 in 1, 21.23	2
38	747-1116	Rod, Deck Hanger	2
39	754-04137	Belt, V, Type A Sec x 114.1	1
40	756-04129	Pulley, Idler, 4.25 Dia.	2
41	783-1146A	Skirt, Deck	1
42	737-3000	Fitting, Lube	2
43	738-01010A	Shaft, Spindle, 5.75	1
44	741-0919	Bearing, Ball	4
45	748-0433	Spacer, .820 x 1.15 x .73	1
46	750-1000	Spacer, .8 x 1.10 x 1.322	4
47	756-1227	Pulley, Deck, 6.3 Dia	2


ENGINE CONNECTIONS: MODEL ZT4200 ONLY

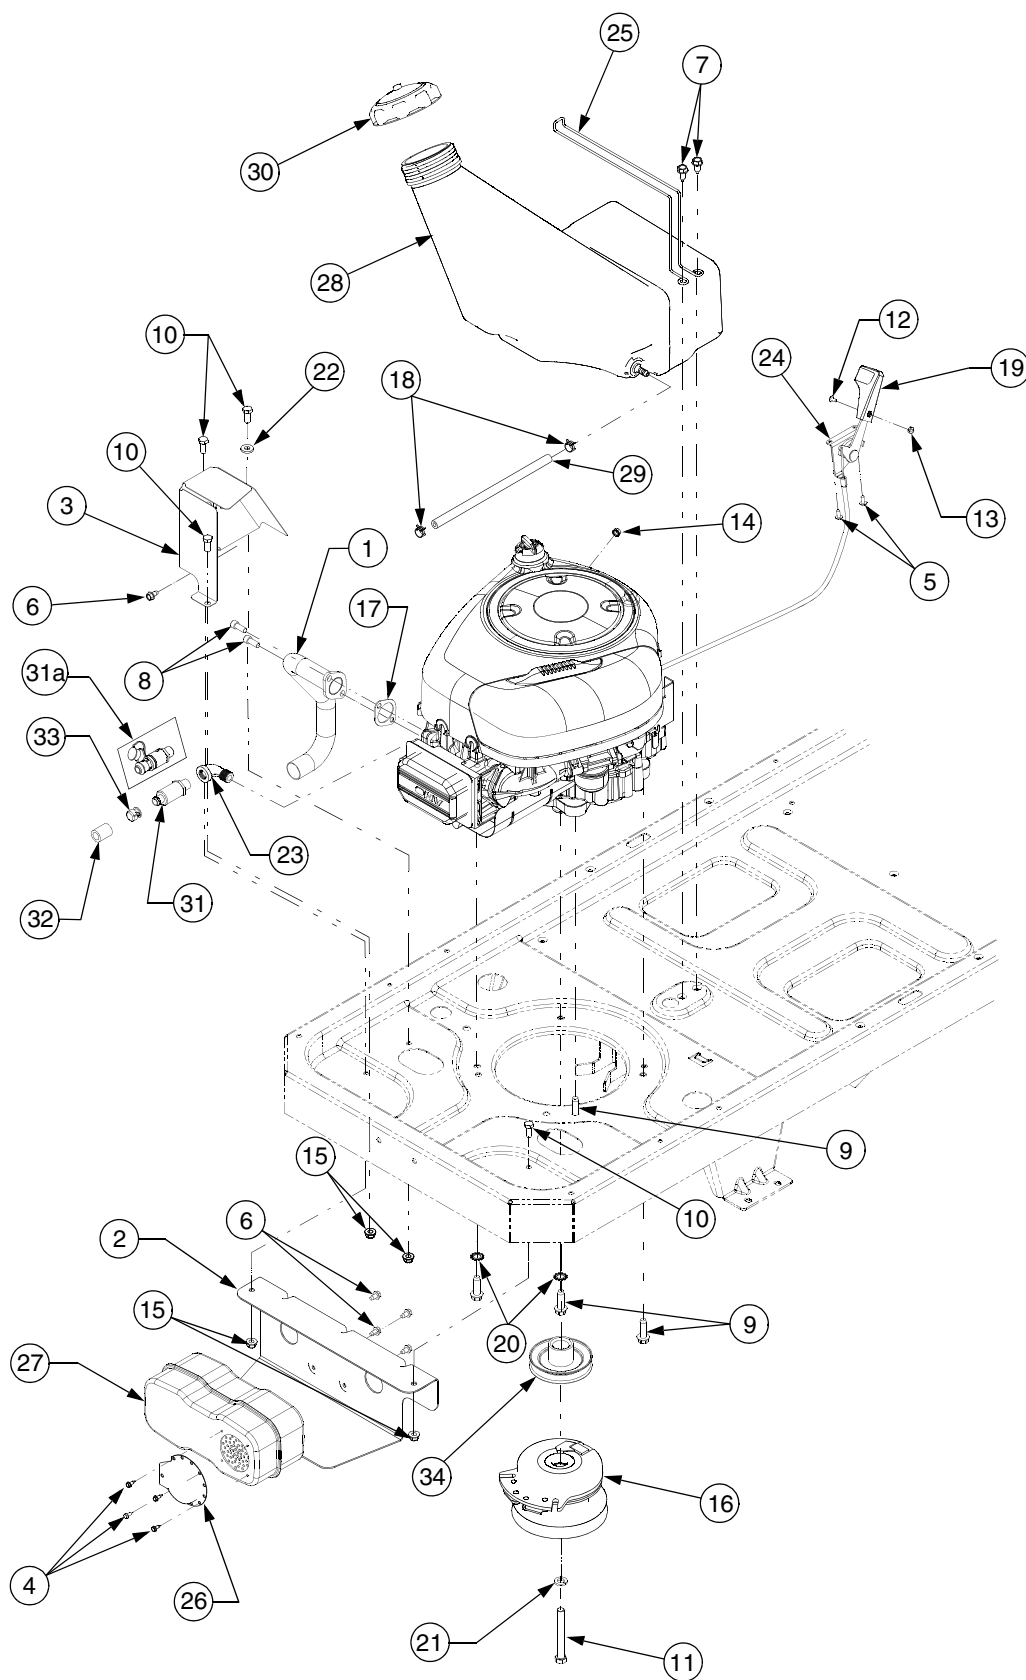

ENGINE CONNECTIONS: MODEL ZT4200 ONLY

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-04176A	Tube, Exhaust	1
2	703-05441A	Bracket, Muffler Mounting	1
3	703-05870	Shield, Muffler Tube Heat	1
4	710-0227	Screw, Hex Wash. Hd. Tapp	3
		#8-18 x .5	
5	710-04261	Screw, Hex Wash. Hd. Tapp	2
		#12-16 x .5	
6	710-0599	Screw, Hex Wash. Hd. Tapp	4
		1/4-20 x .5	
7	710-0726	Screw, Hex Wash. Hd. Tapp	2
		5/16-12 x .75	
8	710-1314A	Screw, Socket Hd. 5/16-18 x .75	2
9	710-1315	Screw, Hex Wash. Hd. Tapp	4
		3/8-16 x 1.25	
10	710-3008	Screw, Hex Cap, 5/16-18 x .75 GR5	4
11	710-3157A	Screw, Hx Cap Lk., 7/16-20 x 3.25 GR5	1
12	710-3217	Screw, Truss Hd. Mach. #8-32 x .375	1
13	712-0142	Nut, Hex, #8-32	1
14	712-0271	Nut, Hex Sems, 1/4-20	1
15	712-04063	Nut, Hx Insert Flange Lck, 5/16-18 GrF	4
16	717-04376	Clutch Assembly, Electric PTO	1
17	721-0208	Gasket, Exhaust (B&S- 272293)	1
18	726-0205	Clamp, Hose	2
19	731-04914	Knob, Throttle Control	1
20	736-0148	Washer, Ext. Tooth Lock, 3/8	2
21	736-0171	Washer, Lock, 7/16	1
22	736-3008	Washer, Flat, .344 x .75 x .12	1
23	737-0125	Fitting, Elbow	1
24	746-04161	Cable, Throttle, 39.0 Lg	1
25	747-04228A	Wire, Tank Mounting	1
26	751-0564B	Deflector, Muffler	1
27	751-0617B	Muffler	1
28	751-10057C	Tank, Fuel, 3.0 Gal.	1
29	751-10349	Hose, Fuel Line	6.5in
30	751-3124B	Cap, Fuel	1
31	751-3140	Valve, Oil Drain - Before Mfg. Code C097	1
31a	751-10517	Valve, Oil Drain - Mfg. Code C097 and After	1
32	751-3141-14	Hose, Oil Drain Extension	12 in
33	751-3142	Cap, Oil Drain Valve - Before Mfg. Code C097	1
34	756-0978B	Pulley, Drive	1

DRIVE: MODELS ZT4200 AND ZT5000

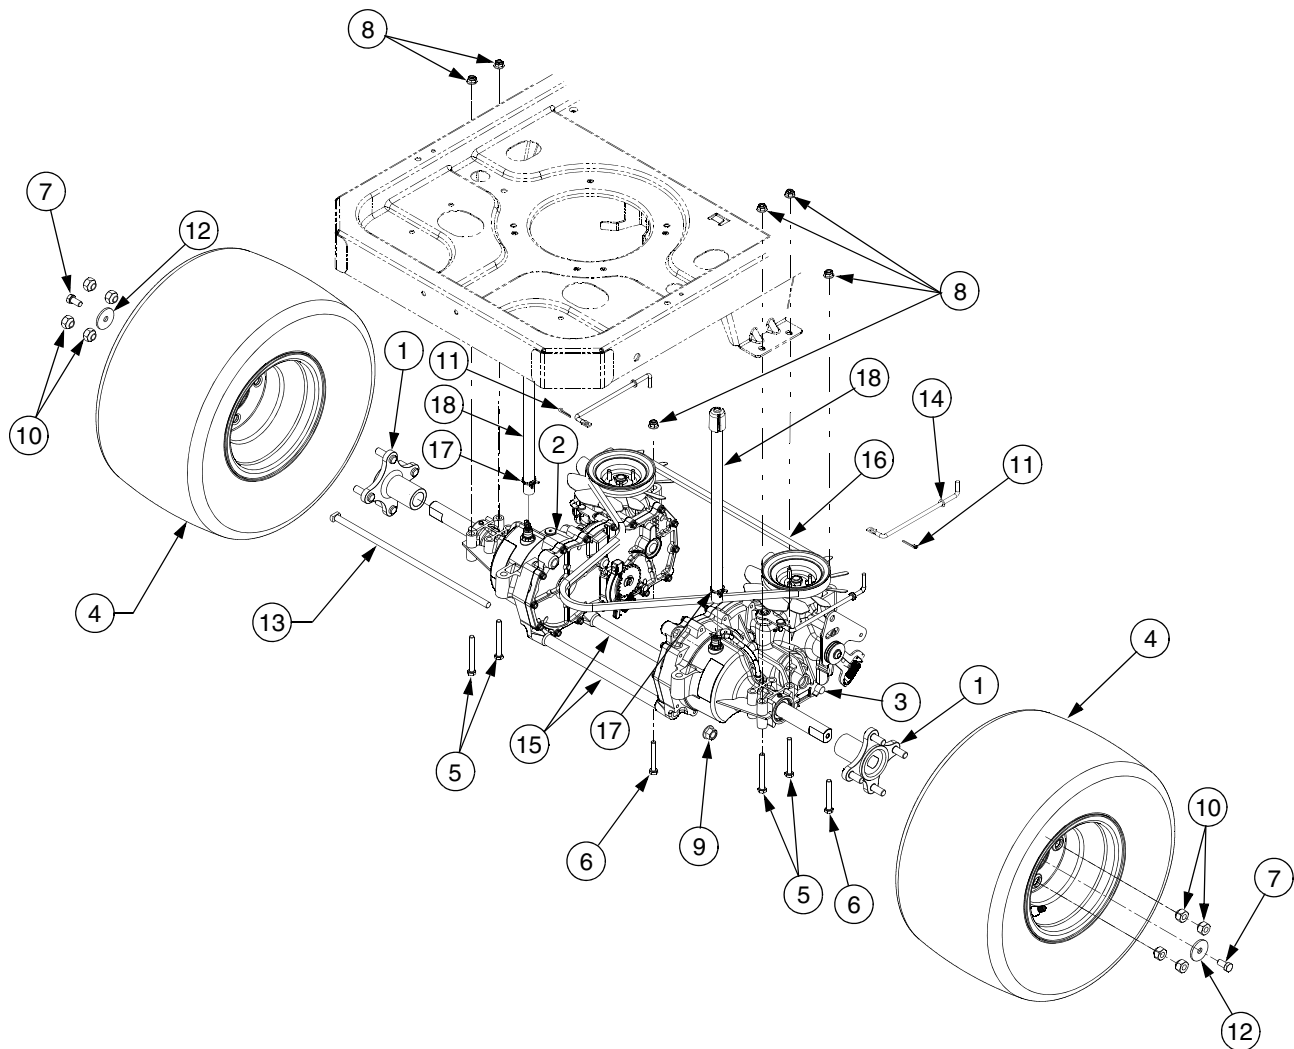

REF. NO.	PART NUMBER	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	618-04317	Hub, Wheel	2	5	710-0176	Screw, Hex Cap, 5/16-18 x 2.75 GR5	4
	710-0852	Stud, Rib Neck, 7/16-14 x 1.6	8	6	710-0395	Screw, Hex Cap, 5/16-18 x 2.25 GR5	2
2	618-04431	Transmission Assembly, RH - Before Mfg. Date A267	1	7	710-3119	Screw, Hex Cap Lock, 3/8-16 x .75 GR5	2
	618-04431A	Transmission Assembly, RH - Mfg. Date A267 & After - Replaces 618-04431		8	712-04063	Nut, Hx Flange Insert Lck, 5/16-18 GrF	6
3	618-04432	Transmission Assembly, LH - Before Mfg. Date A267	1	9	712-0459	Nut, Hex Flange Lock, 7/16-20 GrB .	2
	618-04432A	Transmission Assembly, LH - Mfg. Date A267 & After - Replaces 618-04432		10	712-3050	Nut, Lug, 7/16-14	8
4	634-04294	ZT4200 Wheel Ass'y, 18 x 6.5 x 8....	2	11	714-0507	Pin, Cotter, 3/32 x .75	2
	734-04246	ZT4200 Tire, 18 x 6.5 x 8	2	12	736-0227	Washer, Flat, .39 x 1.5 .134	2
	603-04173	ZT4200 Rim Assembly	2	13	738-04192	Rod, .405 x 14.0	2
	734-0255	Valve Assembly	2	14	747-04217C	Rod, Bypass	2
	634-04171	ZT5000 Wheel Ass'y, 18 x 9.5 x 8	2	15	750-04561	Tube, .45 x .69 x 10.2	2
	734-1729	ZT5000 Tire, 18 x 9.5 x 8	2	16	754-04043	V-Belt, Type A Sec x 57.7	1
	603-04175	ZT5000 Rim Assembly	2	17	726-04059	Clamp, Hose - Used ONLY with 618-04431 & 618-04432 Trans.	2
	734-0255	Valve Assembly	2	18	751-10474	Hose, Breather - Used ONLY with 618-04431 & 618-04432 Trans.	2