




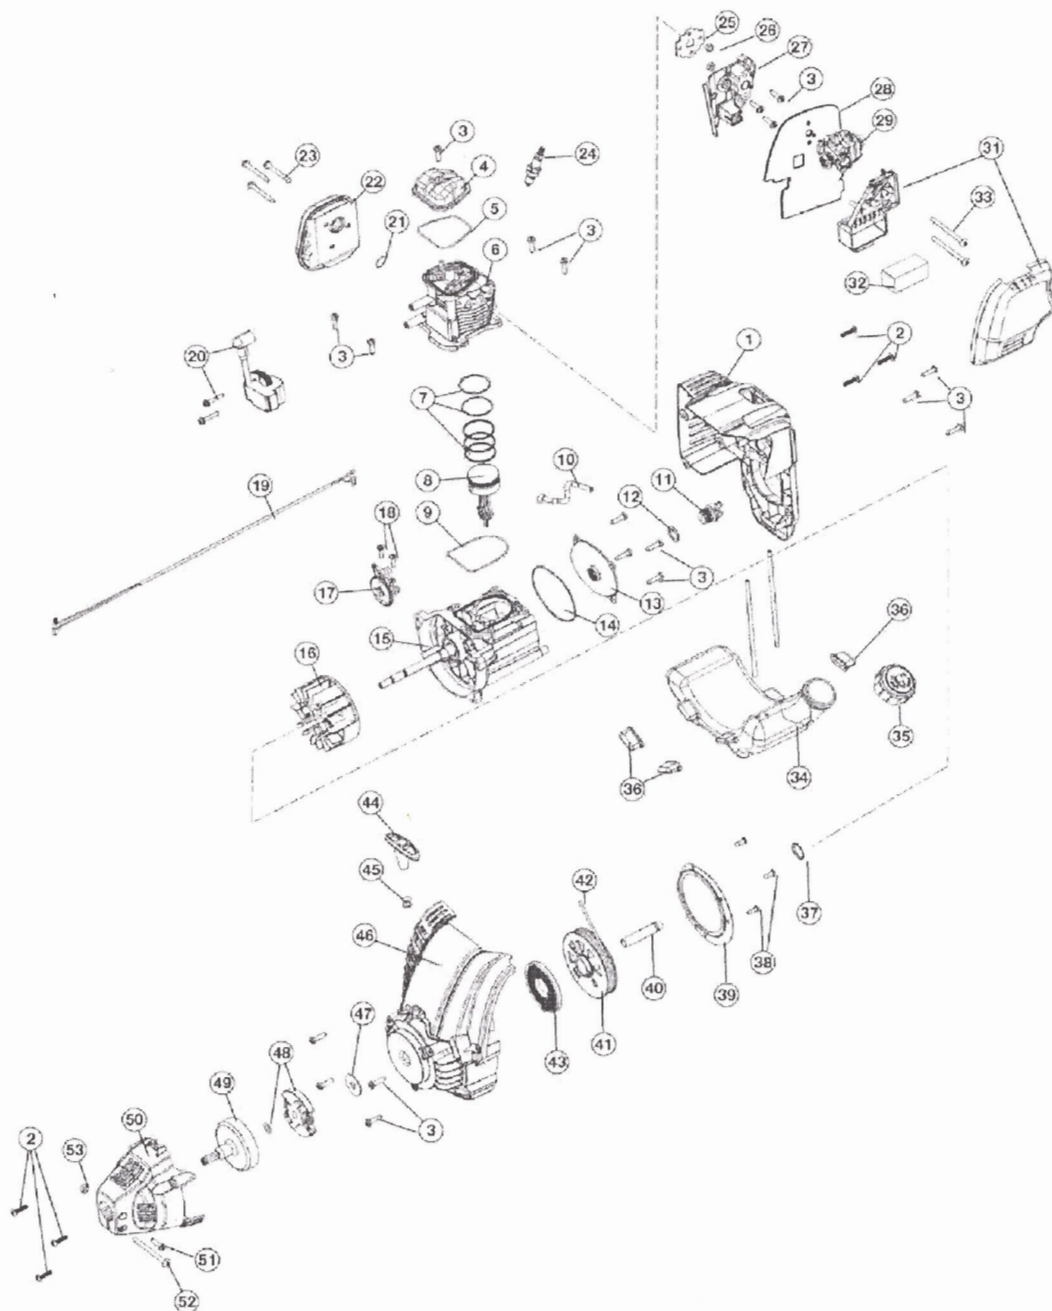

Ref #	Part Number	Qty	Description
1	753-06237		Engine Cover Assembly
2	710-04194		Cover Screw
3	791-181003		Screw
4	753-05209		Rocker Cover
5	721-04132		Rocker Cover O-Ring
6	753-05228		Cylinder Assembly
7	753-05229		Piston Ring Assembly
8	753-05230		Piston Assembly
9	753-05232		Cylinder O-Ring
10	791-182379		Breather Hose
11	753-05408		Oil Plug
12	791-182290		Oil Plug O-Ring
13	753-06111		Crank Case Cover
14	753-05238		Crank Case Cover O-Ring
15	753-06262		Crank Case Assembly
16	753-05240		Flywheel Assembly
17	753-05241		Cam Bracket Assembly
18	710-04584		Cam Bracket Screw
19	753-05785		Lead Wires
20	753-05243		Module Assembly
21	753-05244		Muffler Gasket
22	753-06238		Muffler Assembly
23	710-04487		Muffler Screw
24	753-05255		Spark Plug
25	753-05247		Insulator Gasket
26	712-04099		Nut
27	753-05249		Insulator
28	753-05366		Carburetor Gasket
29	753-05251		Carburetor w/Primer
31	753-05505		Air Cleaner Cover Assembly
32	753-05506		Air Filter
33	710-04645		Screw
34	753-06240		Fuel Tank Assembly w/ Fuel Lines
35	753-1229		Fuel Cap
36	753-05259		Fuel Tank Pads
37	753-04288		Push Nut
38	753-1202		Pressure Plate Screw
39	753-05074		Pressure Plate
40	750-04434		Spacer
41	753-06051		Starter Assembly
42	753-06076		Rope
43	753-04907		Recoil Spring
44	631-04164A		Handle
45	791-611061		Rope Guide
46	753-06239		Starter Housing Assembly
47	9162-1		Washer
48	753-1238		Clutch & Clutch Washer
49	791-153592		Clutch Drum
50	753-05263		Clutch Cover
51	791-182519		Anti-Rotation Screw
52	753-04003		Clamp Screw
53	791-180217		Nut
	753-05297		Spark Arrestor Assembly
	753-06261		Shortblock Assembly
	49M2027P953		Electric Starter
	49MESCBP953		Power Start Bit

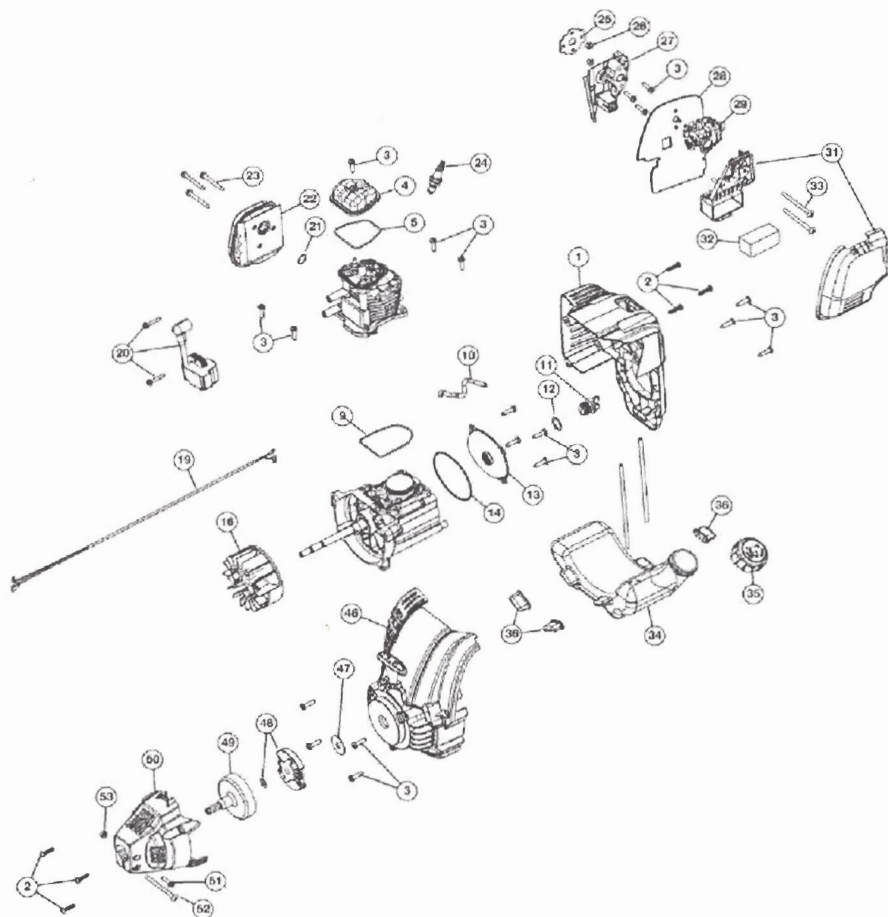

Ref #	Part Number	Qty	Description
1	753-06237		Engine Cover Assembly (includes 2 & 3)
2	710-04194		Cover Screw
3	791-181003		Starter Screw
4	753-05209		Rocker Cover
5	721-04132		Rocker Cover O-Ring
9	753-05232		Cylinder O-Ring
10	791-182379		Breather Hose
11	753-05408		Oil Plug (includes 12)
12	791-182290		Oil Plug O-Ring
13	753-06111		Crank Case Cover
14	753-05238		Crank Case Cover O-Ring
16	753-06221		Flywheel Assembly
19	753-05785		Lead Wires
20	753-05243		Module Assembly
21	753-05244		Muffler Gasket
22	753-06238		Muffler Assembly (includes 21 & 23)
23	710-04487		Muffler Screw
24	753-05255		Spark Plug
25	753-05247		Insulator Gasket
26	712-04099		Insulator Nut
27	753-05249		Insulator
28	753-05366		Carburetor Gasket
29	753-05251		Carburetor w/Primer
31	753-05505		Air Cleaner Cover Assembly (includes 32)
32	753-05506		Air Filter
33	710-04645		Air Filter Screw
34	753-06240		Fuel Tank Assembly w/Fuel Lines (includes 35)
35	753-1229		Fuel Cap
36	753-05259		Fuel Tank Pads
46	753-06239		Starter Housing Assembly (includes 3)
47	9162-1		Washer
48	753-1238		Clutch & Clutch Washer
49	791-153592		Clutch Drum
50	753-05263		Clutch Cover (includes 2)
51	791-182519		Anti-Rotation Screw
52	753-04003		Clamp Screw
53	712-0161		Clamp Nut
	753-05297		Spark Arrestor Assembly
	753-06225		Shortblock Assembly
	49M2027P953		Electric Starter
	49MESCBP953		Power Start Bit

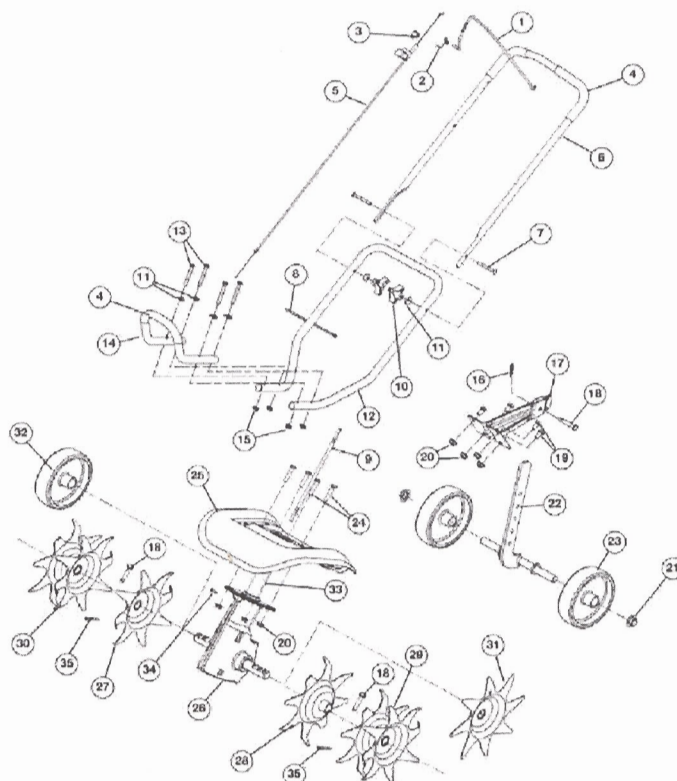

Ref #	Part Number	Qty	Description
1	753-04042		Throttle Control
2	753-05940		Torsion Spring
3	791-182673		On/Off Switch
4	720-0294		Foam Grip
5	753-06050		Throttle Cable
6	749-04080-0637		Upper Handle
7	791-182899		Bolt
8	725-0157		Cable Tie
9	753-04499		Flex Shaft
10	791-182677		Knob
11	936-0451		Shoulder Washer
12	749-1295A-0637		Lower Handle
13	710-0805		Screw
14	753-04055		Front Handle
15	712-3004A		Lock Nut
16	914-0104		Clip
17	753-04058		Tailpiece Bracket Assembly
18	711-1017		Cotter Pin
19	710-3013		Cap Screw
20	912-3027		Lock Nut
21	726-0299		Cap Push
22	753-04063		Wheel Support Bracket Assembly
23	1917754		Wheel
24	6109		Cap Screw
25	753-06010		Tine Shield
26	753-06063		Gear Box Assembly
27	753-05986		Tine (Right Inner)
28	753-05987		Tine (Left Inner)
29	753-06015		Tine (Left Outer)
30	753-06016		Tine (Right Outer)
31	753-05988		Edger Tine
32	753-04068		Edger Wheel
33	753-06242		Drive Shaft Housing
34	791-180288		Sleeve Retaining Bolt
35	753-06013		Bow Clip