


208 cc 370-SUB Engine

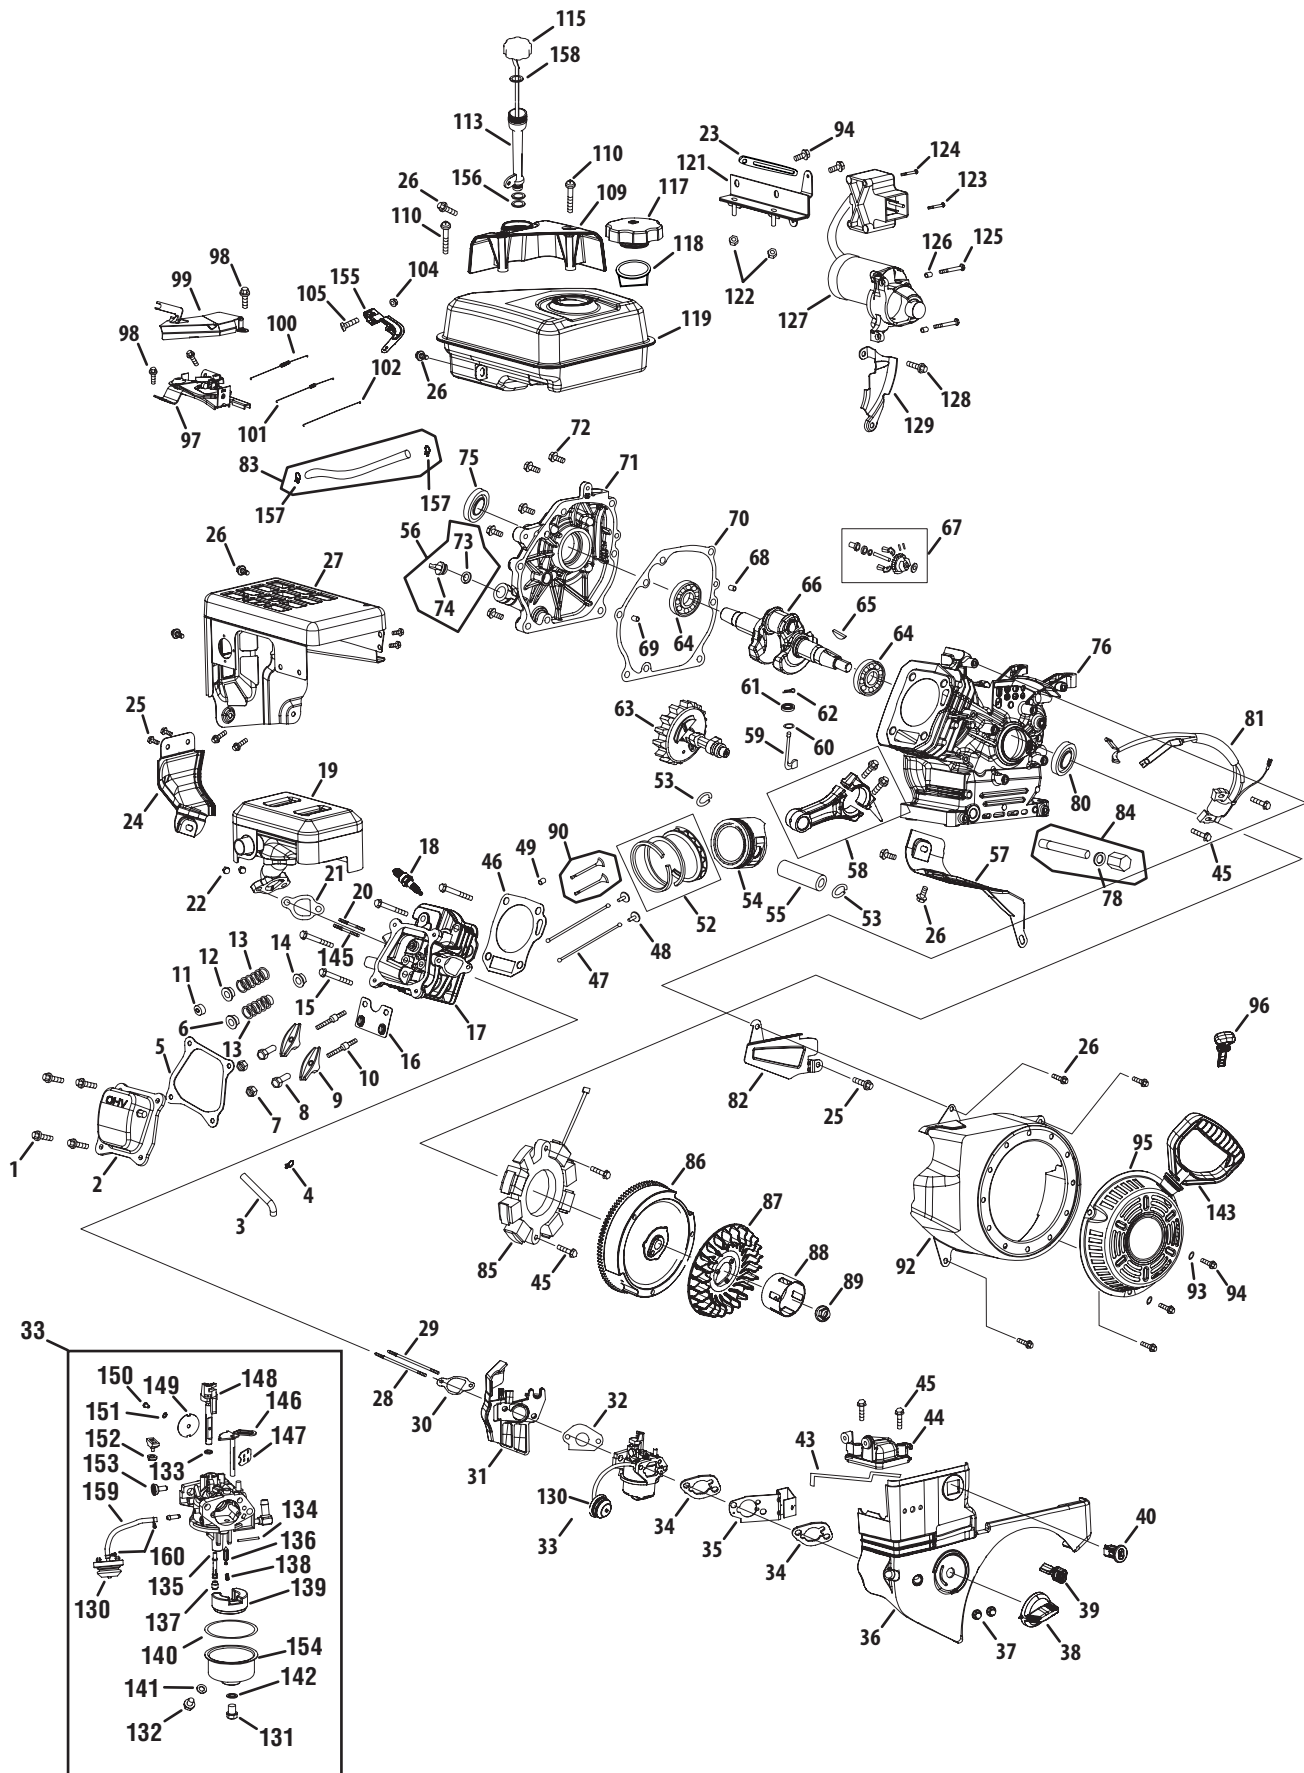

Ref. No.	Part No.	Description
1	710-04968	Bolt
2	951-11054	Valve Cover
3	731-07059	Breather Hose
4	726-04101	Hose Clamp
7	751-11124	Pivot Locking Nut
8	751-11123	Valve Adjusting Nut
10	710-04902	Pivot Bolt
15	710-04933	Bolt
18	951-10292	Spark Plug
19	951-11282	Muffler Assembly
20	710-05001	Stud
21	951-11289	Muffler Gasket
22	712-04214	Nut
23	951-11680	Wire Clip
24	951-11111	Exhaust Pipe Shield
25	710-04940	Bolt
26	710-04915	Bolt
27	951-10642A	Muffler Shroud
28	710-04939	Stud, M6 x117
29	710-04910	Stud, M6 x 105
33	951-10638A	Carburetor Assembly
35	951-11112	Choke Control Bracket
36	951-10634	Engine Shroud
37	712-04213	Nut
38	951-11284	Choke Knob
39	951-10757	Throttle Control Knob
40	951-10637	Ignition Switch
43	951-10640	Choke Push Rod
44	951-10635	Heater Box
45	710-04919	Bolt
47	951-10648	Push Rod Kit
49	715-04090	Dowel Pin
56	951-11283	Oil Fill Plug Assembly
57	951-11113	Air Shield
59	951-11356	Governor Arm Shaft
60	736-04461	Washer
62	714-04074	Cotter Pin
64	951-11369	Radial Ball Bearing
65	951-10307	Flywheel Key
68	715-04092	Dowel Pin, 7 x 14
69	715-04096	Dowel Pin, 9 x 14
70	951-11371	Crankcase Cover Gasket

Ref. No.	Part No.	Description
72	710-04932	Bolt
75	951-11368	Oil Seal
78	736-04440	Washer
80	951-11370	Oil Seal
81	951-10646	Ignition Coil
82	951-11110	Air Flow Shield
83	951-10650	Fuel Line Kit
84	951-10641	Oil Drain Assembly
85	951-12050	Stator
86	951-12051	Flywheel
87	951-10934	Cooling Fan
88	951-10911	Starter Cup
89	712-04209	Nut
90	951-10647	Valve Kit
92	951-11509	Blower Housing
93	736-04455	Washer
94	710-04914	Bolt
95	951-10658	Recoil Starter Assembly
96	731-05632	Key
97	951-10758	Throttle Control Assembly
98	710-05103	Bolt
99	951-11108	Governor Shield
100	951-11935	Governor Spring
101	951-10664	Throttle Return Spring
102	951-10665	Governor Rod
104	712-04212	Nut
105	710-04908	Bolt
109	951-10662	Engine/Dipstick Cover
110	710-04905	Bolt
113	951-11913	Dipstick Tube
115	951-11912	Dipstick
117	951-10649	Fuel Cap Assembly
118	951-11933	Fuel Level Indicator
119	951-10653B	Fuel Tank
121	951-11114	Switch Housing Mounting Bracket
122	712-04212	Nut
123	710-04965	Bolt, M4 x 55
124	710-04935	Bolt, M4 x 60
125	710-05182	Bolt
126	715-04088	Dowel Pin
127	951-10645A	Electric Starter
128	710-04979	Bolt

208 cc 370-SUB Engine

Ref. No.	Part No.	Description
129	951-11109	Blower Housing Shield
130	951-10639A	Primer (includes primer bulb)
—	951-11824	Primer Bulb
131	710-04945	Bolt
132	710-04938	Drain Bolt
143	731-05696	Starter Handle
155	951-11106	Governor Arm Bracket
156	951-11903	O-Ring
157	951-11731	Hose Clamp
158	951-11934	O-Ring
—	951-10651	Fuel Tank Nipple (Not Shown)
—	952Z370-SUB-10	Engine, Complete
145	951-10657	Muffler Stud Assembly
20	710-05001	Stud
33	951-10638A	Carburetor Assembly
130	951-10639A	Primer
131	710-04945	Bolt
132	710-04938	Drain Bolt
133	—	Gasket, Throttle Plate
134	—	Float Pin
135	—	Emulsion Tube
136	—	Needle Valve
137	—	Main Jet
138	—	Needle Valve Spring
139	—	Float
140	951-11589	Fuel Bowl Gasket
141	951-11349	Fuel Drain Plug Gasket
142	951-11348	Fuel Bowl Gasket
146	—	Choke Shaft
147	—	Choke Plate
148	—	Throttle Shaft
149	—	Throttle Plate
150	—	Screw, M3x5
151	—	Lock Washer
152	—	Idle Jet Assembly
153	—	Idle Speed Adjusting Screw
154	—	Fuel Bowl
159	951-11905	Primer Hose
160	951-11906	Hose Clamp

Ref. No.	Part No.	Description
—	951-11249	Crankcase Kit
61	951-11902	Governor Seal
64	951-11369	Radial Ball Bearing
70	951-11371	Crankcase Gasket
76	—	Crankcase
80	951-11370	Oil Seal
—	951-11060A	Short Block Assembly
5	951-11565	Head Cover Gasket
21	951-11289	Muffler Gasket
30	951-11567	Carburetor Insulator Gasket
31	951-11896	Carburetor Insulator Plate
46	951-11572	Cylinder Head Gasket
48	951-11899	Tappet
49	715-04090	Dowel Pin
52	951-11253	Piston Ring Set
53	951-11632	Piston Pin Snap Ring
54	951-12053	Piston
55	951-11633	Piston Pin
58	951-11573	Connecting Rod Assembly
59	951-11356	Governor Arm Shaft
60	736-04461	Washer
61	951-11902	Governor Seal
62	714-04074	Cotter Pin
63	951-11575	Camshaft Assembly
64	951-11369	Radial Ball Bearing
65	951-10307	Flywheel Key
66	—	Crankshaft Assembly
67	951-11576	Governor Gear/Shaft Assembly
68	715-04092	Dowel Pin, 7 x 14
69	715-04096	Dowel Pin, 9 x 14
70	951-11371	Crankcase Cover Gasket
71	—	Case Cover
72	710-04932	Bolt
73	951-11577	O-Ring
74	—	Oil Fill Plug
75	951-11368	Oil Seal
76	—	Crankcase
77	951-11350	Oil Drain Pipe
78	736-04440	Washer
79	710-04906	Oil Drain Plug Washer
80	951-11370	Oil Seal

Ref. No.	Part No.	Description
—	951-10668A	Cylinder Head Assembly
5	951-11565	Head Cover Gasket
6	951-12000	Intake Valve Spring Seat
7	751-11124	Pivot Locking Nut
8	751-11123	Valve Adjusting Nut
9	951-11893	Rocker Arm
10	710-04902	Pivot Bolt
11	951-12002	Exhaust Valve Adjuster
12	951-12003	Exhaust Valve Spring Seat
13	951-12004	Valve Spring
14	951-11894	Intake Valve Seal
16	951-11895	Push Rod Guide Plate
17	—	Cylinder Head - Complete
21	951-11289	Muffler Gasket
30	951-11567	Carburetor Insulator Gasket
31	951-11896	Carburetor Insulator Plate
46	951-11572	Cylinder Head Gasket
90	951-10647	Valve Kit
—	951-11063	Valve Cover Kit
2	951-11054	Valve Cover
5	951-11565	Head Cover Gasket
56	951-11283	Oil Fill Plug Assembly
73	951-11577	O-Ring
74	—	Oil Filler Plug
144	951-11021	Carburetor Kit, Major
133	—	Gasket, Throttle Plate
134	—	Float Pin
135	—	Emulsion Tube
136	—	Needle Valve
137	—	Main Jet
138	—	Needle Valve Spring
139	—	Float
140	951-11589	Fuel Bowl Gasket
141	951-11349	Fuel Drain Plug Gasket
142	951-11348	Fuel Bowl Gasket
—	951-11247A	Crankshaft Kit
64	951-11369	Radial Ball Bearing
65	951-10307	Flywheel Key
66	—	Crankshaft
75	951-11368	Oil Seal
80	951-11370	Oil Seal

Ref. No.	Part No.	Description
—	951-11059A	Gasket Kit, Complete
5	951-11565	Head Cover Gasket
21	951-11289	Muffler Gasket
30	951-11567	Carburetor Insulator Gasket
31	951-11896	Carburetor Insulator Plate
32	951-12005	Carburetor Gasket
34	951-11897	Carburetor Gasket Plate
46	951-11572	Cylinder Head Gasket
60	736-04461	Washer
61	951-11902	Governor Seal
62	714-04074	Cotter Pin
70	951-11371	Crankcase Cover Gasket
75	951-11368	Oil Seal
78	736-04440	Washer
80	951-11370	Oil Seal
—	951-11246	Crankcase Cover Kit
64	951-11369	Radial Ball Bearing
70	951-11371	Crankcase Cover Gasket
71	—	Case Cover
72	710-04932	Cover Bolts
73	951-11577	O-Ring
74	—	Oil Fill Plug
75	951-11368	Oil Seal
—	951-10661B	Gasket Kit, External
5	951-11565	Head Cover Gasket
21	951-11289	Muffler Gasket
30	951-11567	Carburetor Insulator Gasket
31	951-11896	Carburetor Insulator Plate
32	951-12005	Carburetor Gasket
34	951-11897	Carburetor Gasket Plate
78	736-04440	Washer