


2 Style Hood


Attachments:
 Bagger.....19A30003OEM
 Bumper Kit....OEM-190-679
 Mulch Kit.....19A30006OEM
 Snow Blade....OEM-190-833
 Snow Thrower.OEM-190-032

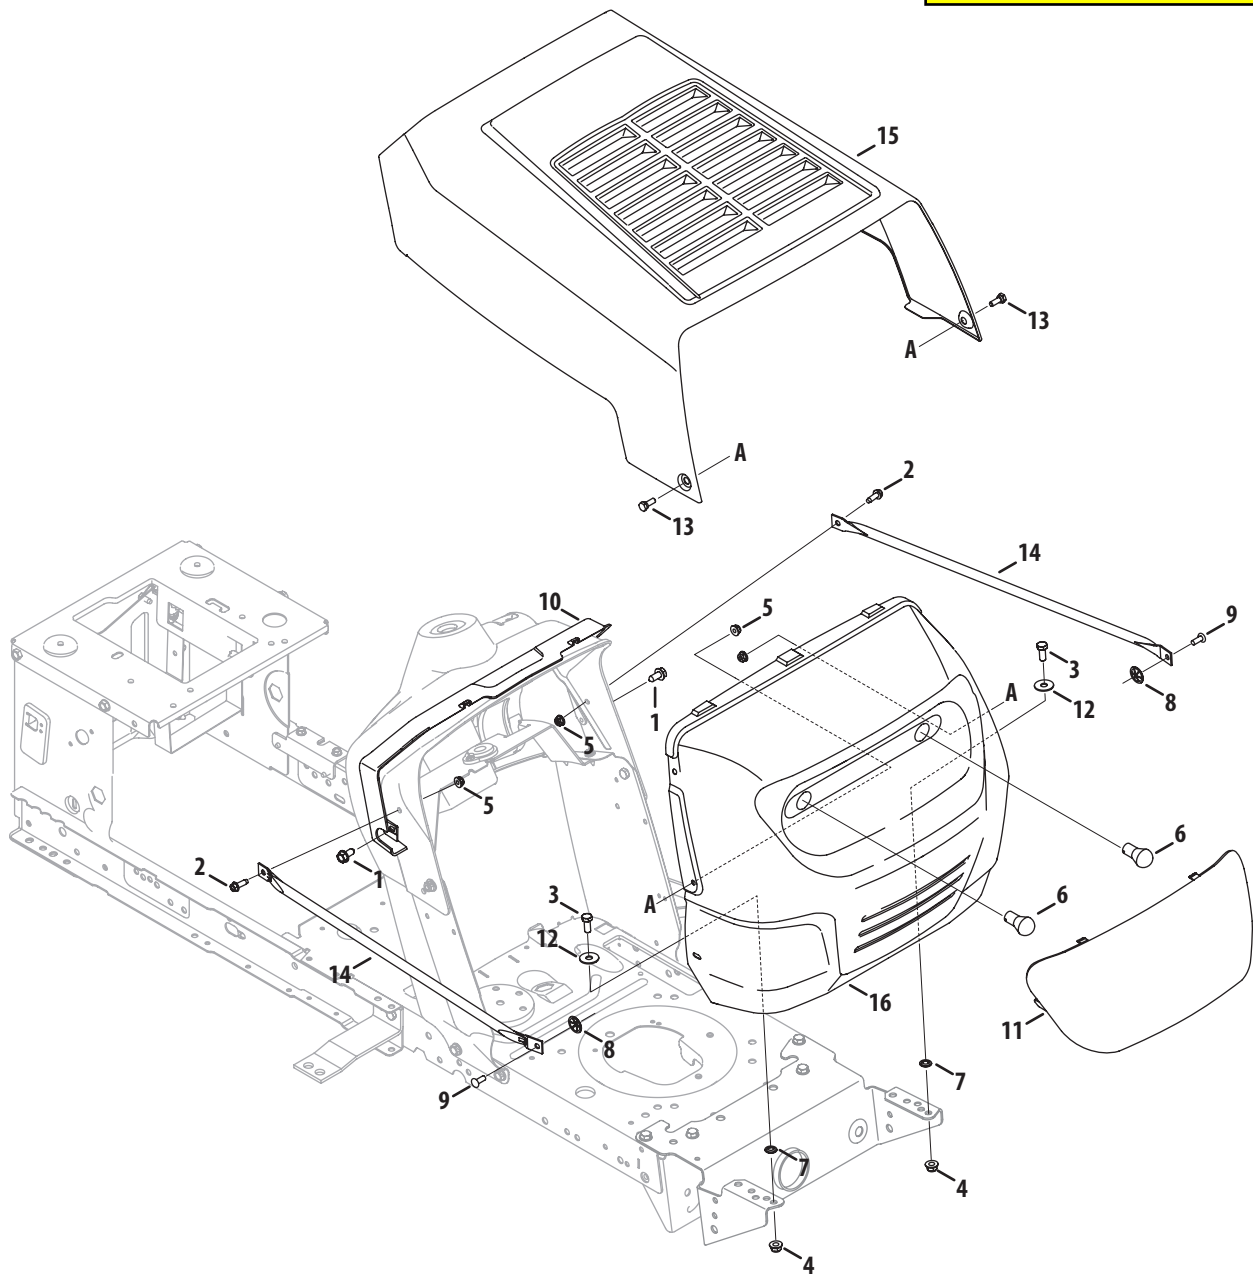

Ref.	Part Number	Description
1	710-04484	Screw, 5/16-18 x .750
2	710-0642	Screw, 1/4-20 x .750
3	710-3008	Hex Screw, 5/16-18 x .75
4	712-04063	Flangelock Nut, 5/16-18
5	712-04064	Flangelock Nut, 1/4-20
6	925-0963	Miniature Lamp 12V Socket
7	726-0201	Speed Nut, .3125
8	926-04012	Push-On Nut, .25
9	728-0162	Flat Head Rivet, 1/4"
10	731-05012B	Dash
11	731-06042	Lens
12	736-3078	Flat Washer, .344 x 1.0 x .063
13	938-0952A	Shoulder Bolt, 1/4-20 x .375 x .125
14	749-04220	Grill Support Rod
15	783-04608	Hood
16	783-05656	Grill

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


2 Style Dash

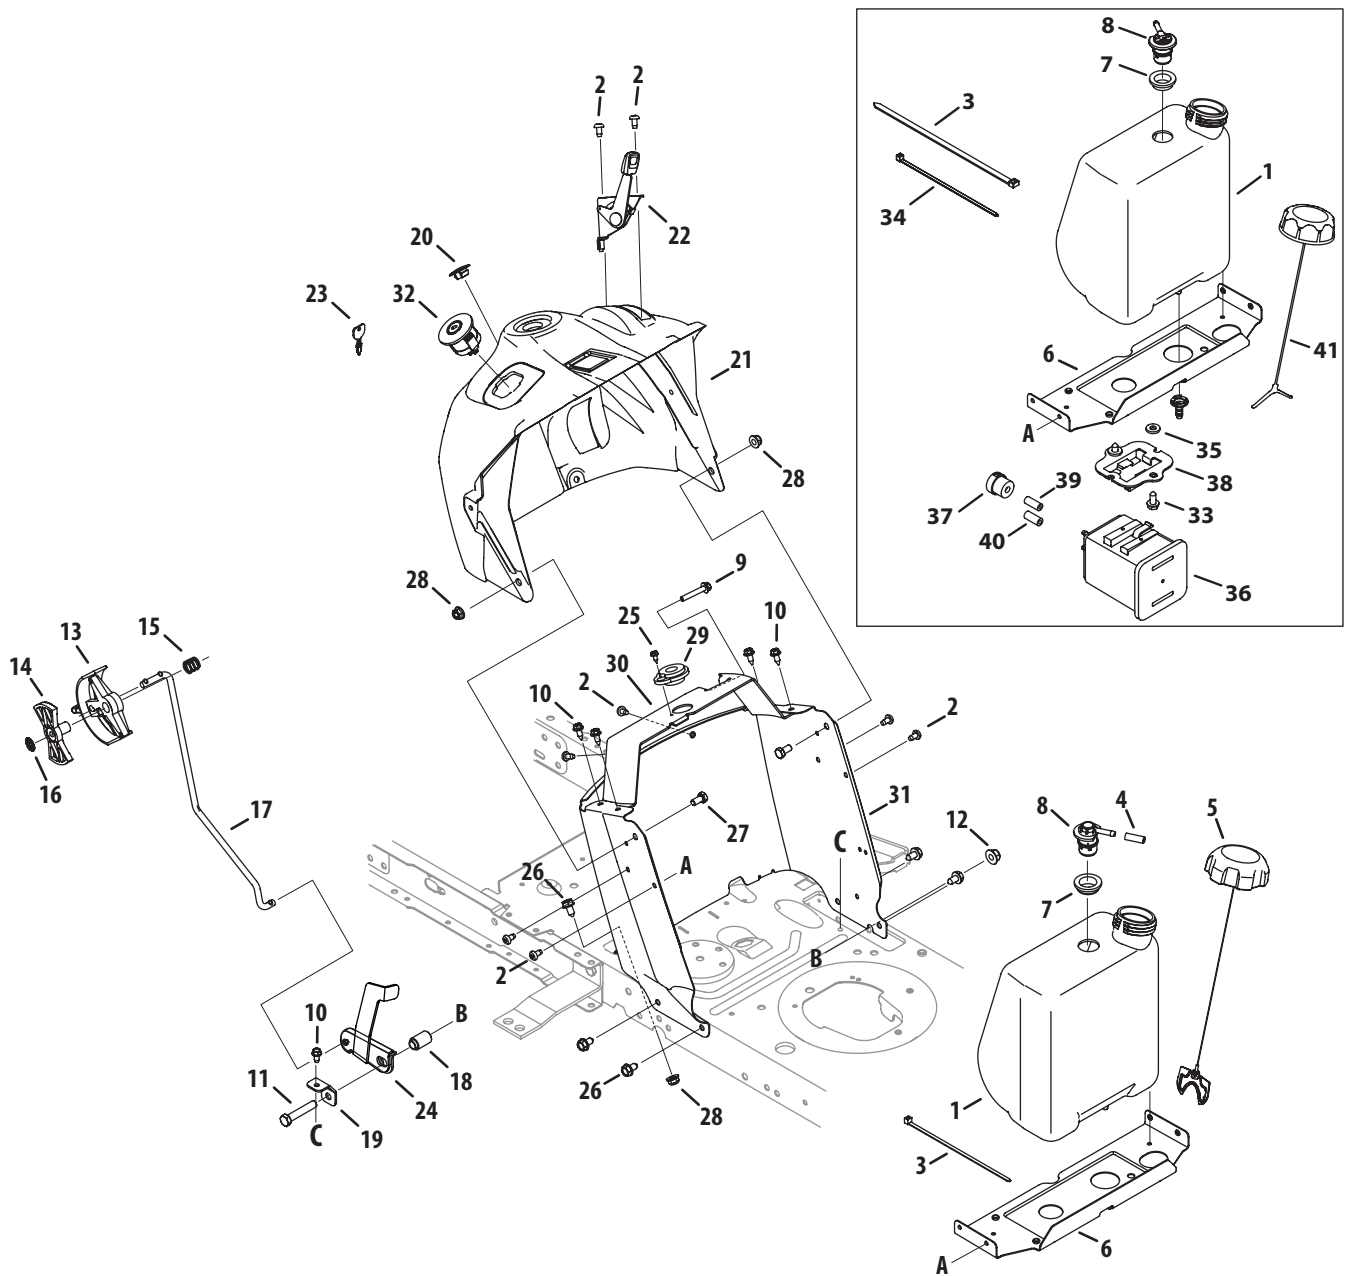

Ref.	Part Number	Description	Ref.	Part Number	Description
1	951-04304	Fuel Tank, 1.36 Gal.	22	746-04367	Throttle/Choke Cable Assembly
2	710-05070	Screw, Tap, 1/4-20, 0.500	23	925-1745A	Key
3	726-0230	Cable Tie, 36.0 Long	24	783-06991	Speed Latch - No RMC
4	751-12089-28	Hose Vent	25	910-0224	Screw, #10-16 x .500
5	951-12179A	Fuel Cap, 2.25"	26	710-0604A	Tap Screw, 5/16-18, 0.625
6	783-07083	Gas Tank Support Bracket	27	710-3025	Hex Screw, 5/16-18 x .625
7	735-04081	Rubber Grommet, 23 x 3.55	28	712-04063	Flange Lock Nut, 5/16-18
8	751-12118	Rollover Valve	29	741-0587	Bearing, .628 ID x 1.36
9	710-05237	Hex Screw, 1/4-20 x 1.50	30	783-06785A	Bracket, Steering Support
10	710-1652	Tap Screw, 1/4-20, 0.625	31	783-06811	Dash, Lower NWNDW
11	710-3144	Hex Screw, 3/8-16, 2.00, Gr5, Std	32	925-04659	Key Switch
12	712-04065	Flange Lock Nut, 3/8-16	33	710-04484	Screw, 5/16-18 x .750
13	731-07885A	Shift Lever	34	725-0157	Cable Tie
14	731-07965	Index Control	35	936-3008	Flat Washer, .344 x .750 x .120
15	732-04877	Compr. Spring, .685 OD x .63	36	951-10589	5 Gallon Carbon Canister
16	736-3006	Lock Washer, 1/4	37	951-10590	Vent Filter Canister
17	747-05398	Speed Selector Control Rod	38	951-10610	Canister Adaptor Bracket
18	750-04465C	Fling Spacer, .390 X .671 X 1.095	39	751-10749-30	Hose, Fuel, Low Perm., White
19	783-06823	Speed Latch	40	751-10750	Hose, Fuel, Low Perm., Yellow
20	731-05265	Choke Plug	41	951-12426	Fuel Cap, 2.25"
21	931-08542	Dash, Upper	—	725-04567G	Harness, LT-5, NRMC, Dual


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Frame and PTO Lift

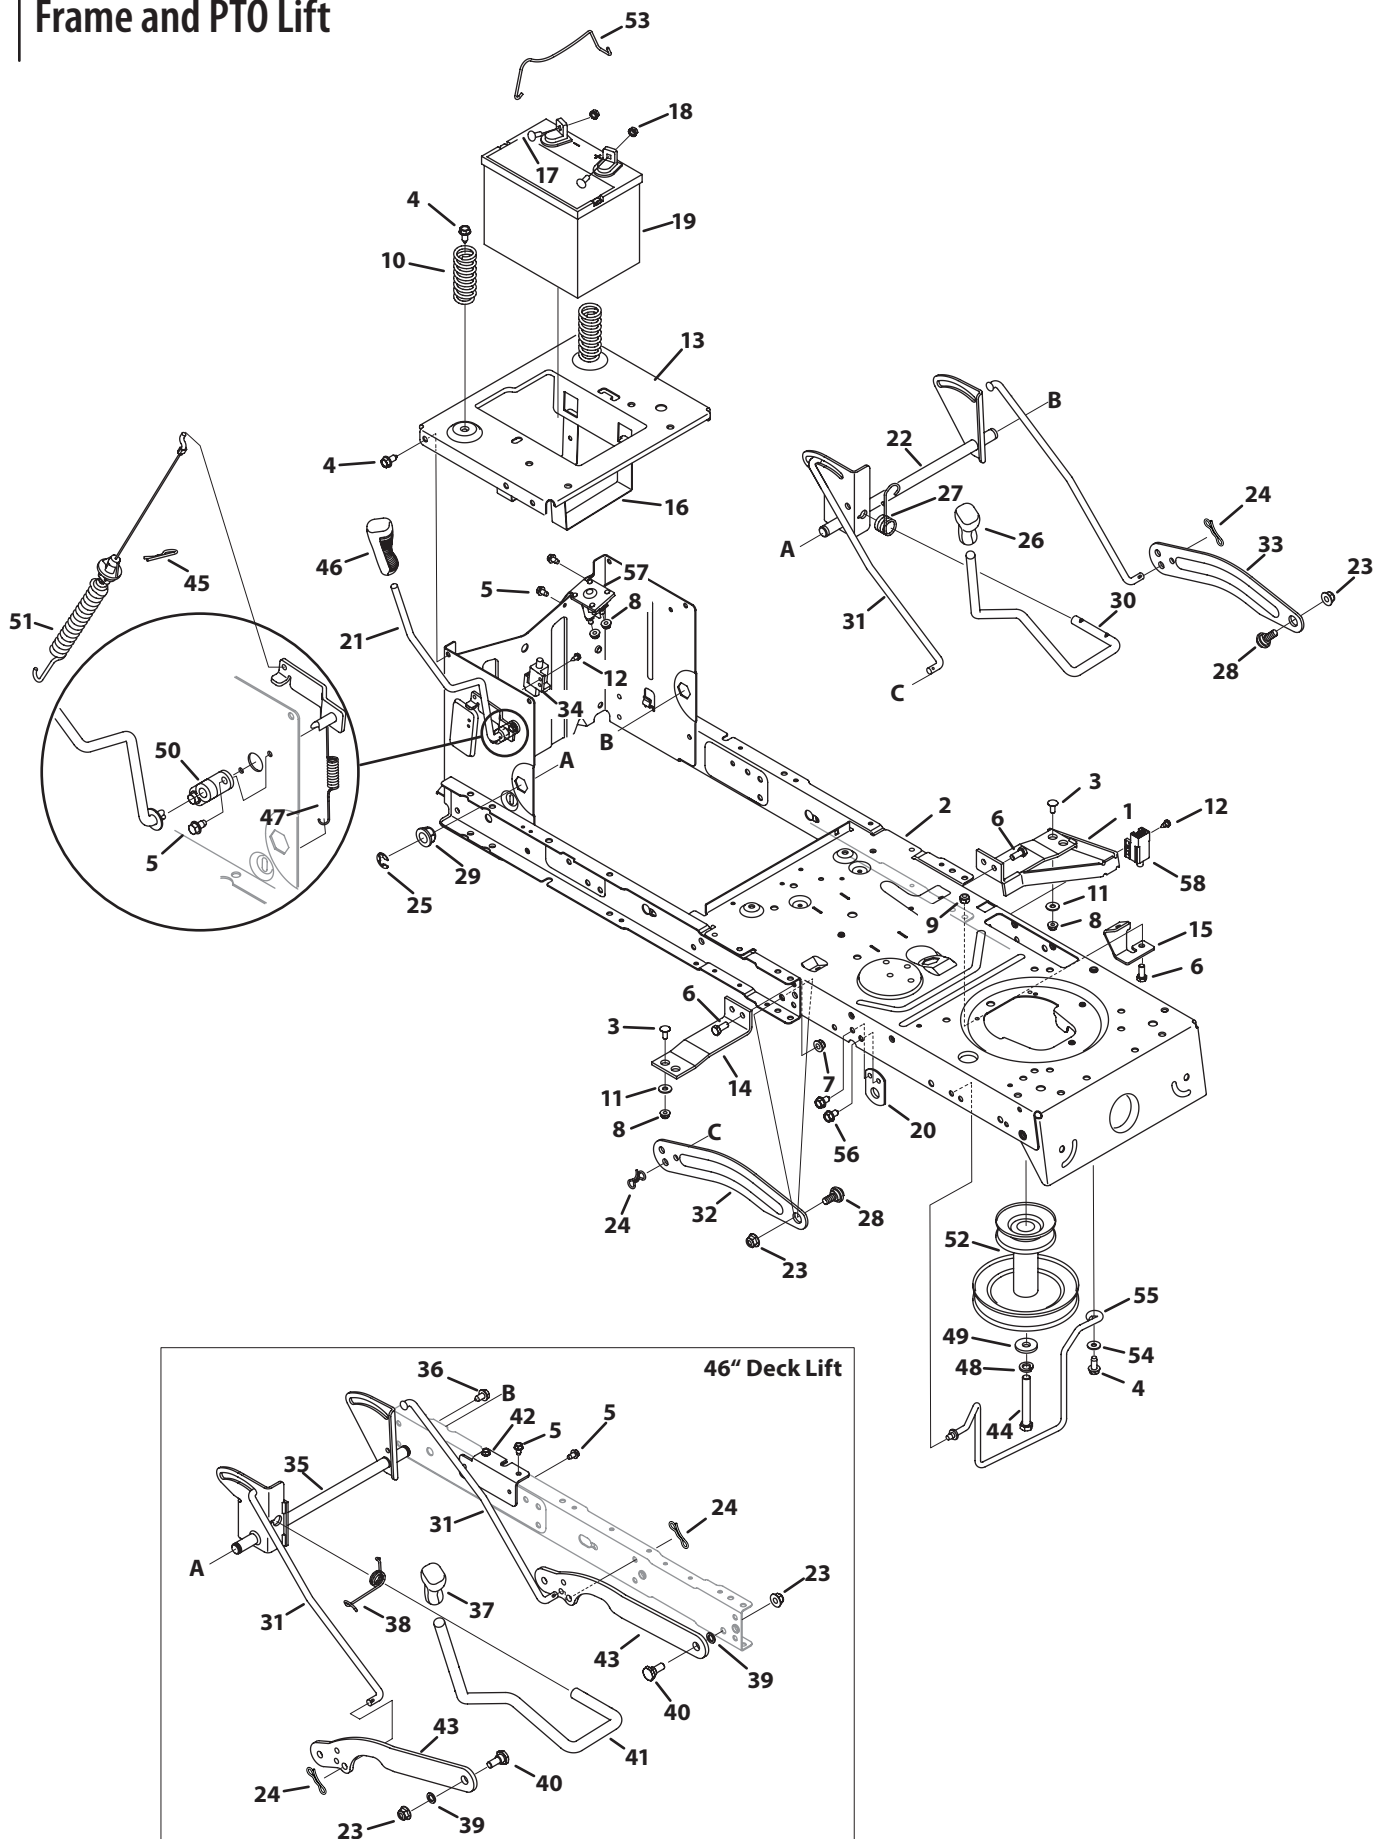

Ref.	Part Number	Description	Ref.	Part Number	Description
1	683-04195	Support Bracket	32	783-04494C	38/42" Lift Arm, RH
2	683-04649	Frame Assembly	33	783-04711C	38/42" Lift Arm, LH
3	710-0134	Screw Carriage, 1/4-20 x .62	34	725-04363	Switch Interlock
4	710-04484	Screw 5/16-18 x .750	35	683-04334	Lift Assembly, 46"
5	710-0599	Screw, 1/4-20 x .500	36	710-0604A	Screw, 5/16-18 x .625
6	710-3008	Hex Screw, 5/16-18 x .75	37	720-0298	Handle Grip, 5/8
7	712-04063	Flangelock Nut, 5/16-18	38	732-04438	Torsion Spring Handle, 46"
8	712-04064	Flangelock Nut, 1/4-20	39	936-0140	Flat Washer, .385 x .62 x .063
9	912-0429	Hexlock Nut, 5/16-18	40	938-0380	Shoulder Bolt, 3/8-16 x .500 x .270
10	732-04035	Compression Spacer, 1.28 x 3.125	41	747-04653	46" Lift Handle
11	736-0173	Flat Washer, .28 x .74 x .063	42	783-05389A	Frame Brace Bracket
12	738-04237A	Shoulder Spacer, 10-32 x .500	43	783-0678C	Lift Deck Link
13	783-04548D	Seat Frame Bracket	44	710-04607	Hex Screw, 7/16-20 x 2.75, 46"
14	783-04637	Running Board Bracket		710-04608	Hex Screw, 7/16-20 x 3.25, 38/42"
15	783-04753	Support Frame Bracket	45	914-0145	Click Pin, .092 x 1.64
16	783-04869A	Battery Bracket	46	720-04049A	Handle Grip, 3/8
17	710-04666	Hex Head Flange, 1/4-20 x .75	47	732-04276A	PTO Spring Extension
18	712-0271	Sems Nut, 1/4-20	48	936-0171	Regular Duty Washer Lock, 7/16
19	925-1707D	230 CCA Battery	49	736-0322	Flat Washer, .450 x 1.250 x .164
20	783-04536B	Support Bracket	50	741-04119A	PTO Bearing
21	647-04096	PTO Handle Assembly	51	946-04173C	Deck Engage Cable
22	683-04155A	Lift Assembly, 38/42"	52	756-04207A	Engine Pulley, 3.39 x 6.12, 46"
23	712-04065	Flangelock Nut, 3/8-16		756-04196A	Engine Pulley, 3.39 x 6.12, 38/42"
24	714-04040	Bow-tie Cotter Pin	53	683-04448	Battery Hold Down Rod
25	716-0106A	E Ring	54	936-0300	Flat Washer, .406 x .875 x .059
26	720-0311	Handle Grip, 1/2	55	747-04332A	38" Belt Keeper
27	732-04225	Torsion Spring		747-04857	42" Belt Keeper
28	738-04130	Shoulder Bolt, 3/8-16 x .625 x .175		683-04414	46" Belt Keeper
29	941-0225	Hex Flange Bearing	56	710-0604A	Screw, 5/16-18.0 x .625
30	747-04282	Deck Lift Handle 38"	57	725-04439	12V Solenoid
	747-05296	Deck Lift Handle 42"	58	925-04039	Screw Mount Interlock Switch
31	747-04393	Lift Rod			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

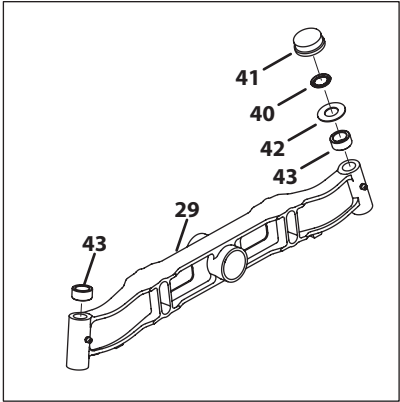


Front End Steering

Ref.	Part Number	Description
1	617-04094	Front Steering Gear Assembly
2	710-0514	Hex Screw, 3/8-16 x 1.00
3	710-0643	Hex Screw, 5/16-18 x 1.00, Lock
4	710-1309	Machine Screw, 5/16-18 x .750
5	710-3180	Hex Screw, 5/16-18 x 1.75
6	912-0240	Jam Nut, 7/16-20
7	912-0214	Jamlock Nut, 3/8-24
8	712-04063	Flangelock Nut, 5/16-18
9	638-04008P	Front RH Axle
	938-04013	46" Front RH Axle
10	923-0448A	Ball Joint, 7/16-20
11	736-0242	Bell Washer, .340 x .872 x .060
12	938-04007A	Front LH Axle
	938-04014A	46" Front LH Axle
13	738-04141	Shoulder Bolt, 5/16-18 x .435 x .350
14	738-0919A	Steering Shaft, 5/8 x 22.08
15	941-04124	Flange Bearing, 5/8
16	931-0484A	Hub Cap
17	747-05385	Steering Link
18	948-0389	Cap, 1.25 x .16
19	748-04065	Steering Block
20	748-04068	Spacer, .71 x .125 x .56
21	731-04681	Cap, Troy-Bilt
	731-04039	Cap
	731-04040	Sprig Cap
22	738-04162A	Shoulder Spacer, .884 x .190
23	736-04228A	Flat Washer, .781 x 1.590
24	783-04568	Front Deck Hanger Bracket

Ref.	Part Number	Description
25	714-04039A	Cotter Pin, 5/32 x 1.25
26	710-04484	Screw, 5/16-18 x .750
27	712-04065	Flangelock Nut, 3/8-16
28	914-0474	Cotter Pin, .125 x .75
29	919-04177A	Pivot Axle, Cast
30	631-04028	Steering Wheel
	631-04560	Steering Wheel Soft Grip
31	934-04081	Rim Asm, 6.0 x 4.5, 42/38" Deck
	634-04634	Rim Asm, 6.0 x 4.5, 46" Deck
32	934-0255	Valve, tubeless Air
33	734-1731	Tire, 15 X 6 X 6 Sq Shldr 42/46"
	734-04240A	Tire, 15 X 6 X 6 Rd Shldr, 38"
34	738-04128	Shoulder Bolt, 3/8-16 x .500 x 2.38
35	747-04299A	Fixed Rod
36	783-05326B	Pivot Bar Bracket
	783-04601C	Pivot Bar Bracket
37	726-0341	Push Cap, 3/4
38	731-04057A	Standard Axle Cap
39	741-0660A	Flange Bearing, .760 x .941 x 1.0
40	726-04035	Push Nut, 3/4
41	731-04693	Hub Cap
42	936-0316	Flat Washer, .78 x 1.59 x .060
43	748-04068	Spacer, .71 x .125 x .56
44	634-04086	Wheel Assembly, 42"
	634-04325	Wheel Assembly, 38"
	634-04639	Wheel Assembly, 46"
45	683-0128B	Pivot Axle

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Seat and Fender

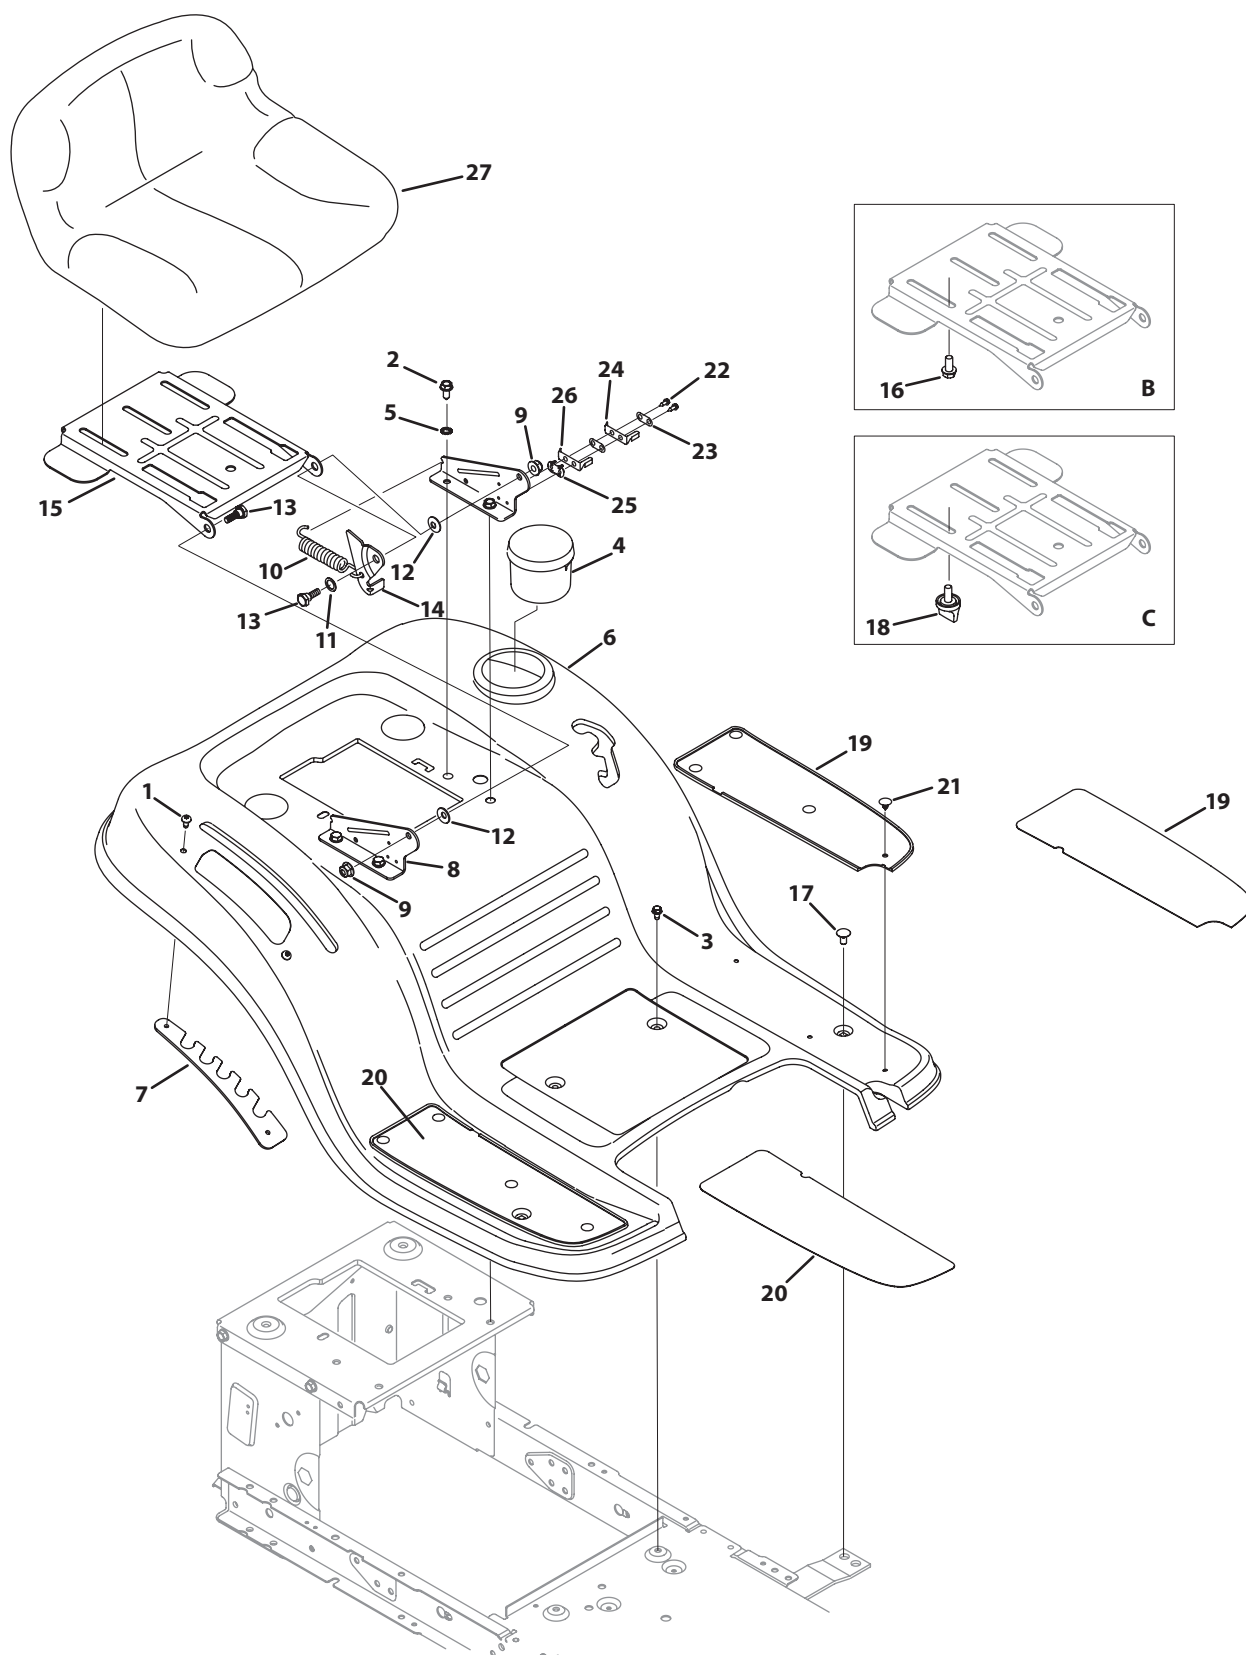

Ref.	Part Number	Description
1	710-05070	Screw, 1/4-20 x .500
2	710-04484	Screw, 5/16-18 x .750
3	710-0599	Screw Pan Torx Head, 1/4-20 x .500
4	731-04591A	Cup Holder
5	736-0607	Loack Washer, 5/16
6	783-04587D	Fender
7	783-04843	Lift Adjuster Bracket
8	783-1489D	Seat Mount Bracket
9	712-04063	Flangelock Nut, 5/16-18
10	732-1184	Extension Spring
11	936-0108	Flat Washer, .510x .750 x .033
12	736-0242	Bell Washer, .340 x .872 x .060
13	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
14	783-0209D	Lift Seat Bracket
15	783-04081D	Pivot Seat Manual Adjust Bracket
16	710-04482	Hex Head Flange, 3/8-16 x .875
17	710-0134	Screw Carriage, 1/4-20 x .62
18	720-04061	Knob, 3/8-16 x .875
19	735-04047	Foot Pad, LH
	723-04026	Foot Pad, Abrasive, LH
20	735-04048	Foot Pad, RH
	723-04025	Foot Pad, Abrasive, RH
21	726-3046	Ratchet Clip, .250 x .500
22	710-0227	Screw, 8-18 x .500
23	726-0279	Insulator Plate
24	925-1303	Outer Seat Spring
25	726-0278	Insulator Boss Plate
26	725-1439	Inner Seat Spring
27	757-04083	Medium Back Seat, Black, Set-up B
	757-04099	Low Back Seat, Black, Set-up B or C
	757-04088	High Back Seat, Set-up B

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Transmission (Auto-Drive)

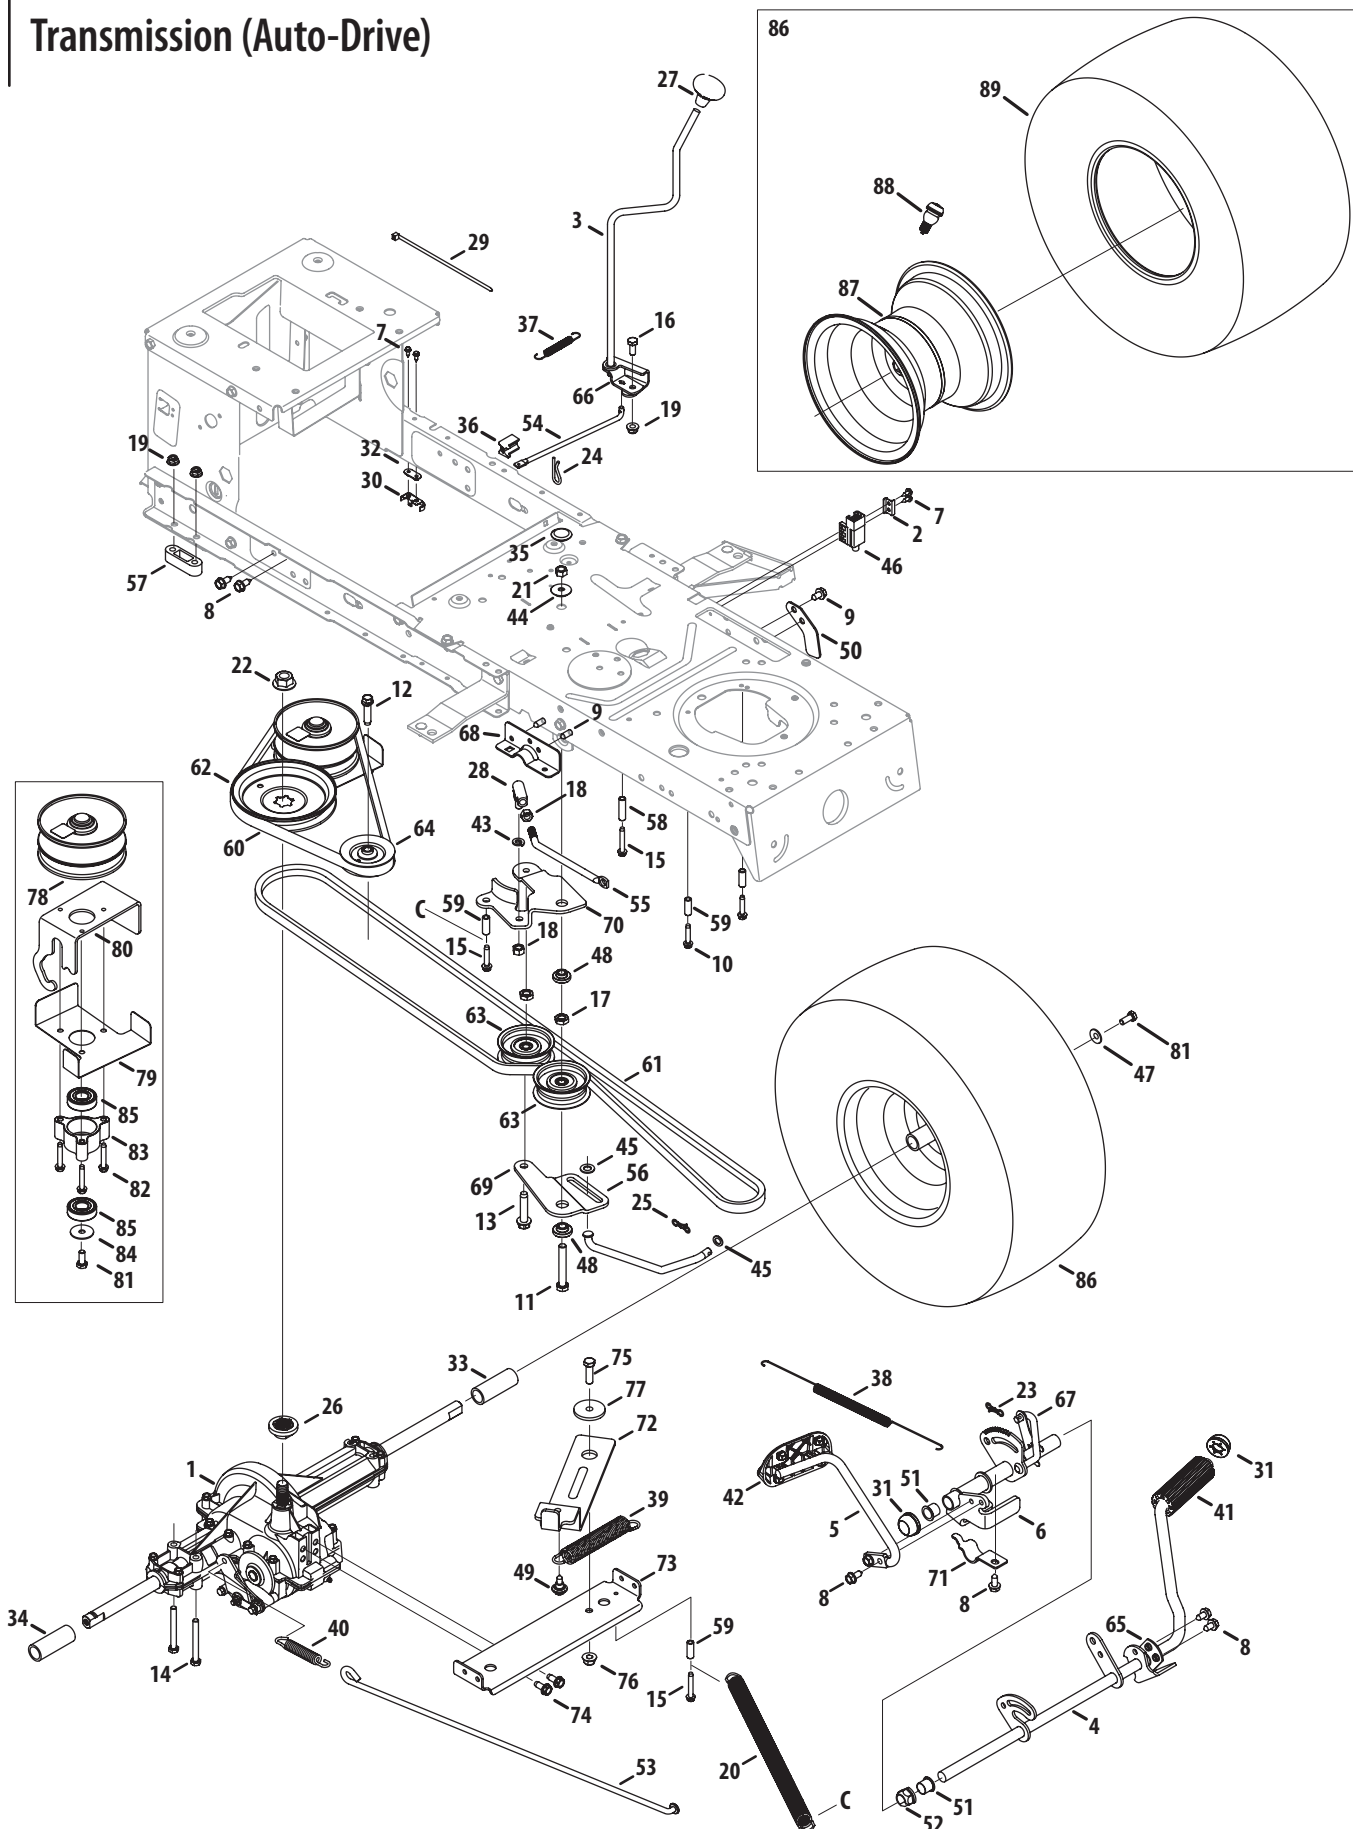

Ref.	Part No.	Description	Ref.	Part No.	Description
1	918-04566	Transmission Drive Assembly	46	725-04363	Switch Interlock
2	17962	Plate Switch	47	736-0242	Bell Washer, .340 x .872 x .060
3	647-04035	Shaft Lever Assembly	48	738-0372B	Shoulder Spacer, 1.00 X .38 X .38
4	647-04201	Pedal Assembly, drive	49	738-04091A	Shoulder Screw, .43 x .29, 5/16-18
5	647-04203A	Pedal Assembly, control	50	783-06807	Stop Pedal Plate
6	683-04607	Pedal Bracket Assembly	51	741-0495	Fling Bearing .63 Id x .695 Od X .60
7	710-0227	Screw, 8-18:0.500	52	741-3065B	Hex Flange Bearing, .628 Id
8	710-04484	Screw, 5/16-18 x .750	53	747-05188	Brake Rod
9	710-0604A	Screw, 5/16-18 x 0.625	54	747-05243	Shift Rod, 46"
10	710-0809	Screw, 1/4-20 x 1.250	55	747-05251A	Idler Rod, 3/8
11	710-0859	Hex Screw, 3/8-16 x 2.50	56	747-05415	Transmission Bypass Rod
12	710-1007	Screw, 3/8-16 x 1.500	57	948-0334	Spacer, T-Axle .68
13	710-1858A	Screw, 3/8-16 x 1.750	58	750-04456	Spacer, .260 X .372 X 1.420 Lg
14	710-1266	Hex Screw, 5/16-18 x .625	59	750-0566A	Spacer, .260 X .375 X 1.030 Lg
15	710-1325	Screw, 1/4-20 x 1.625	60	954-04208	V Belt, 5L 40.9 Poly
16	710-3008	Hex Screw, 5/16-18 x .75	61	954-0467A	V Belt, 5L, 90.93 Poly
17	912-0240	Jam Nut, 7/16-20	62	956-04002	V Pulley 7.25 DIA SPUN
18	712-0241	Hex Nut, 3/8-24	63	756-04224	Idler Pulley
19	712-04063	Flangelock Nut, 5/16-18	64	756-04325	Idler Pulley
20	732-04764	Spring Extension, .56 OD x 12.05	65	783-04536B	Pedal Support Bracket
21	912-3000	Nut, 3/8-16, Centerlock	66	783-04595A	Shaft Adjust Bracket
22	712-0700	Flange Nut, 9/16-18	67	783-06278	Reinforcement Plate Bracket
23	914-0111	Cotter Pin, 3/32 x 1.0	68	783-06562A	Frame Pedal Bracket, Rh
24	914-0209	Cotter Pin INT- .125 DIA	69	783-06769	Center Idler Bracket
25	714-04040	Bow-Tie Cotter Pin, 72	70	783-06592A	Idler Bracket
26	718-04407	Pulley Hub, 5/8 SPLINE	71	783-06641	Pedal Support Bracket
27	720-04028	Shift Knob	72	753-06662	Idler Bracket Assembly
28	923-3018	Ball joint	73	683-04606	Bracket Assembly
29	725-0157	Cable tie	74	710-1260A	Screw, 5/16-18 x 0.750
30	725-1644	Short Spring Switch	75	710-3005	Hex Screw, 3/8-16 x 1.25
31	726-0214	Push Cap, 5/8	76	712-04065	Flangelock Nut, 3/8-16
32	926-0320	Plate Insulator Nut	77	738-04162A	Shoulder Spacer, .8840 X .190
33	731-04602	Sleeve, .758 x .821 x 3.3125	78	956-04015A	Variable Speed Pulley Assembly
34	731-04604	Sleeve, .758 x .821 x 2.4375	79	683-04522	Belt Keepr Assembly
35	731-06330	Plug, 7/8	80	683-04612	Bracket Assembly
36	731-06894	Shift Plate Bearing	81	710-0627	Hex Screw, 5/16-24 x .750
37	732-04488	Spring Extension, .38 OD x 3.25 LG	82	710-0778	Screw, 1/4-20 x 1.500
38	732-04612	Spring Extension, .70 OD X 12.00	83	718-04261	Bearing Cup
39	732-04616B	Spring Extension, .97 Od X 6.18 Lg	84	736-0362	Flat Washer, .330 X 1.25 X .06
40	732-0716D	Spring Extension, .59 OD x 4.00 LG	85	941-0600	Ball Bearing, 17 x 40 x 12
41	735-0239	Foot Pad, 4.0 Long	86	634-0104	Wheel, 20 x 8 x 8
42	735-0662	Control Pad	87	634-04369	Rim, 8.0 X 7.0 X .750
43	936-0169	Lock Washer, 3/8	88	934-0255	Valve, tubeless Air
44	736-3040	Flat Washer, .406 x 1.920 x .060	89	734-1730	Tire, 20 X 8 X 8
45	936-0185	Flat Washer, .375 X .738 X .063			

NOTE, Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Transmission (Single Speed)

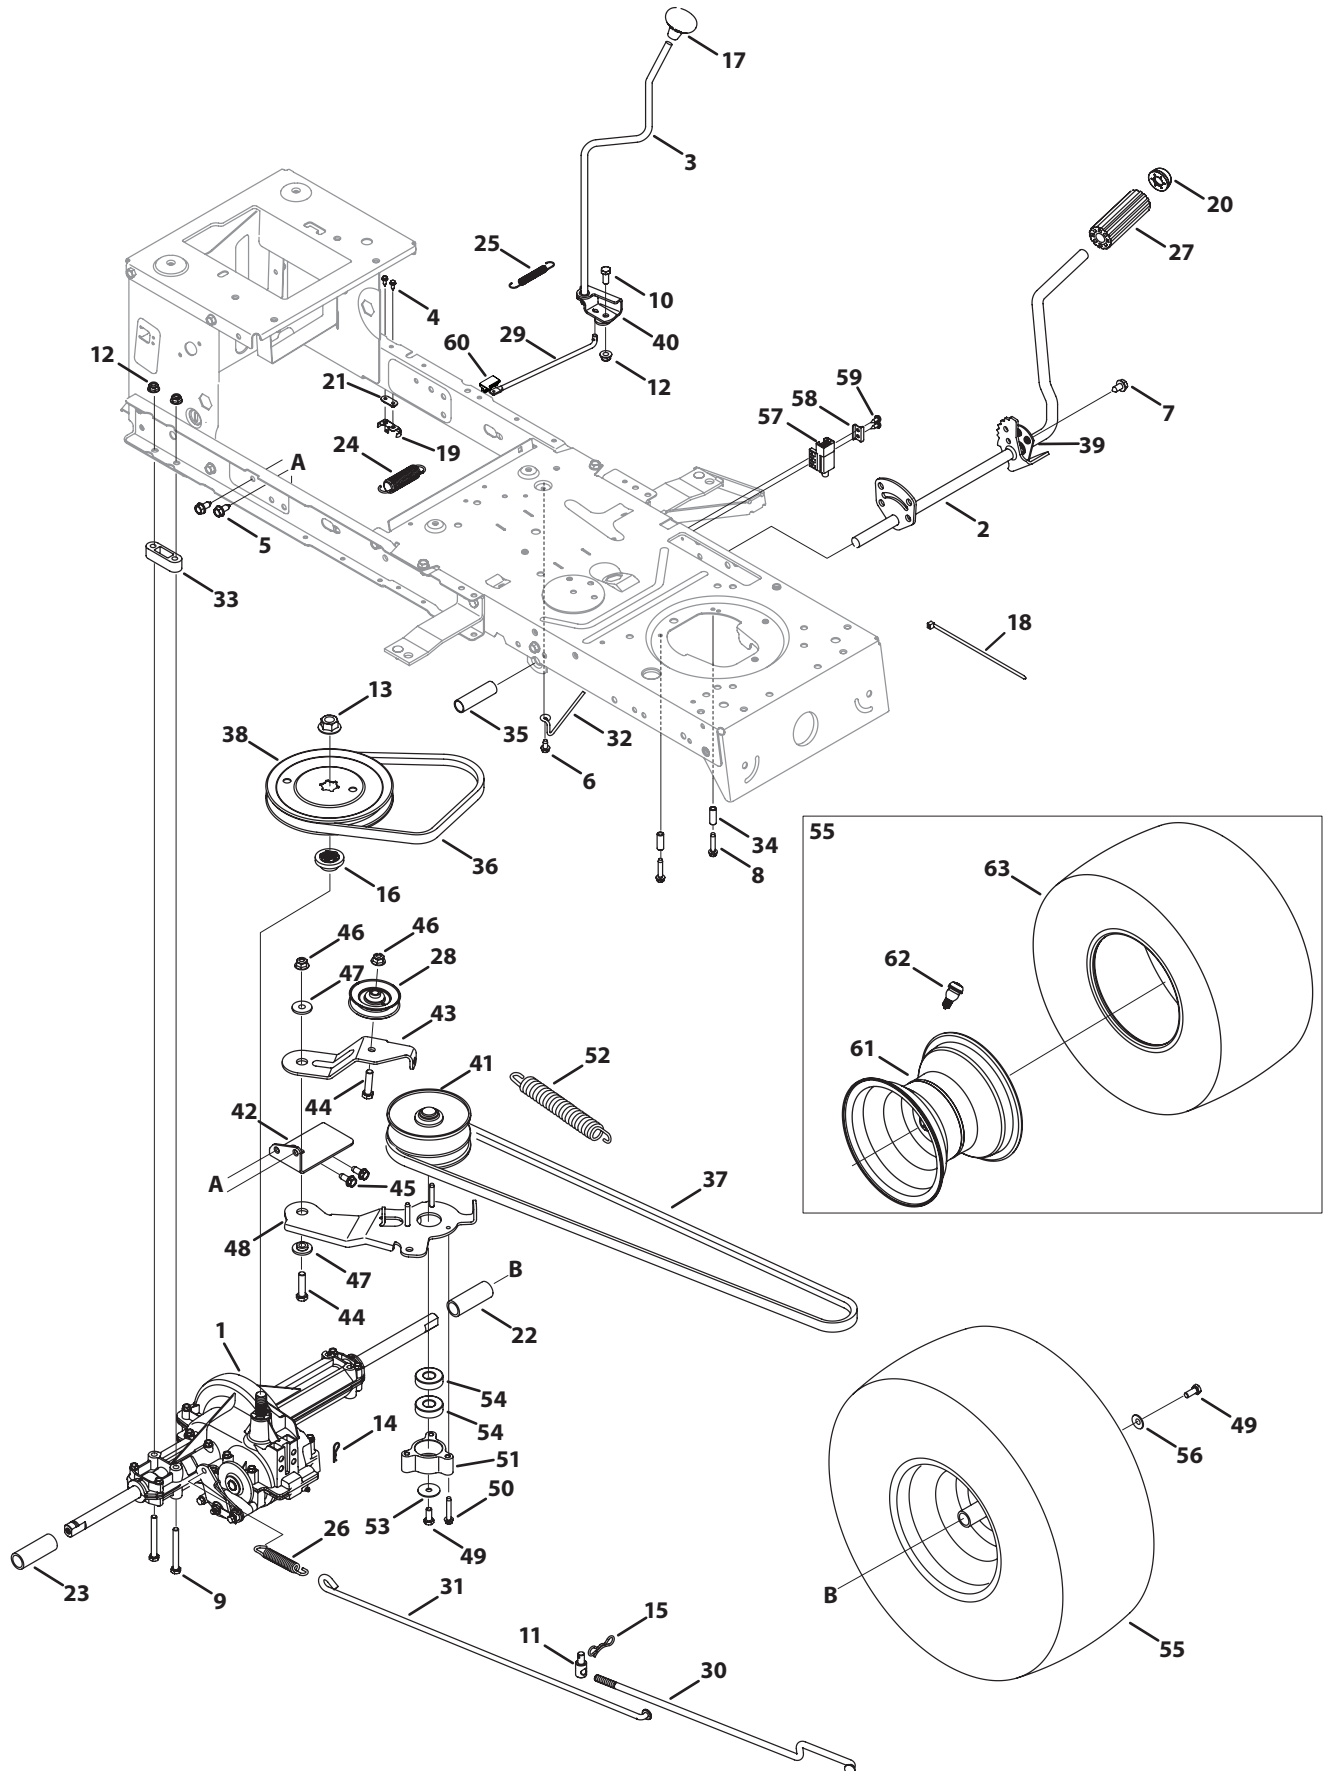

Ref.	Part Number	Description	Ref.	Part Number	Description
1	918-04566	Transmission Drive Assembly	33	948-0334	Spacer, T-Axle, 46" Only
2	647-04034C	Pedal Assembly	34	750-0566A	Spacer, .260 x .375 x 1.030 LG
3	647-04266	Shaft Lever Assembly	35	750-0802	Spacer, .640 ID x .76 OD x 2.63
4	710-0227	Screw, 8-18:0.500	36	954-0241A	V Belt, 5L 35.25 POLY
5	710-04484	Screw, 5/16-18 x .750	37	954-04249A	V Belt, 5L 70.90 POLY
6	710-0599	Screw, 1/4-20 x 0.500	38	956-04002	V Pulley 7.25 DIA SPUN
7	710-0604A	Screw, 5/16-18 x 0.625	39	783-04536B	Pedal Support Bracket
8	710-0809	Screw, 1/4-20 x 1.250	40	783-04595A	Shaft Adjust Bracket
9	710-1266	Hex Screw, 5/16-18 x .625	41	956-04015A	Variable Speed Pulley Assembly
	710-0176	Hex Screw, 5/16-18 x 2.75	42	683-04176A	Transmission Bracket Assembly
10	710-3008	Hex Screw, 5/16-18 x .75	43	683-04207	Idler Bracket Assembly
11	911-04075A	Ferrule, 3/8-24 X .375 DIA.	44	710-0347	Hex Screw, 3/8-16 x 1.75
12	712-04063	Flangelock Nut, 5/16-18	45	710-1260A	Screw, 5/16-18 x 0.750
13	712-0700	Flange Nut, 9/16-18	46	712-04065	Flangelock Nut, 3/8-16
14	914-0209	Cotter Pin INT- .125 DIA	47	938-0347	Shoulder Spacer, .625 ID x .169
15	714-04040	Bow-Tie Cotter Pin, 72	48	683-04206	Bracket Assembly
16	718-04407	Pulley Hub, 5/8 SPLINE	49	710-0627	Hex Screw, 5/16-24 x .750
17	720-04028	Shift Knob	50	710-0778	Screw, 1/4-20 x 1.500
18	725-0157	Cable Tie	51	718-04261	Bearing Cup
19	725-1644	Short Spring Switch	52	732-04746	Extension Spring, .94 OD x 6.75 LG
20	726-0214	Push Cap, 5/8	53	736-0362	Flat Washer, .330 x 1.25 x .06:HT
21	926-0320	Plate Insulator Nut	54	941-0600	Ball Bearing, 17 x 40 x 12
22	731-04602	Sleeve, .758 x .821 x 3.3125	55	634-04324	Wheel, 20 x 8 x 8, 38"
23	731-04604	Sleeve, .758 x .821 x 2.4375		634-0104	Wheel, 20 x 8 x 8, 42/46"
24	732-04306	Spring Extension, .80 OD x 3.28 LG	56	736-0242	Bell Washer, .340 x .872 x .060
25	732-04488	Spring Extension, .38 OD x 3.25 LG	57	725-04363	Switch Interlock
26	732-0716D	Spring Extension, .59 OD x 4.00 LG	58	17962	Plate Switch
27	735-0239	Foot Pad, 4.0 LONG	59	738-04237A	Shoulder Screw, #10-32 x .500
28	756-04325	Idler Pulley	60	731-06894	Shift Plate Bearing
29	747-05243	Shift Rod, 46"	61	634-04369	Rim, 8.0 x 7.0 x .750, 38/42/46"
	747-05244	Shift Rod, 38/42"	62	934-0255	Valve, tubeless Air
30	747-05186	Variable Speed Control Rod	63	734-1730	Tire, 20 X 8 X 8 Sq Shldr, 42/46"
31	747-05188	Brake Rod		734-04241	Tire, 20 X 8 X 8 Rd Shldr, 38"
32	747-04969	Belt Keeper Rod			


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

42" Deck

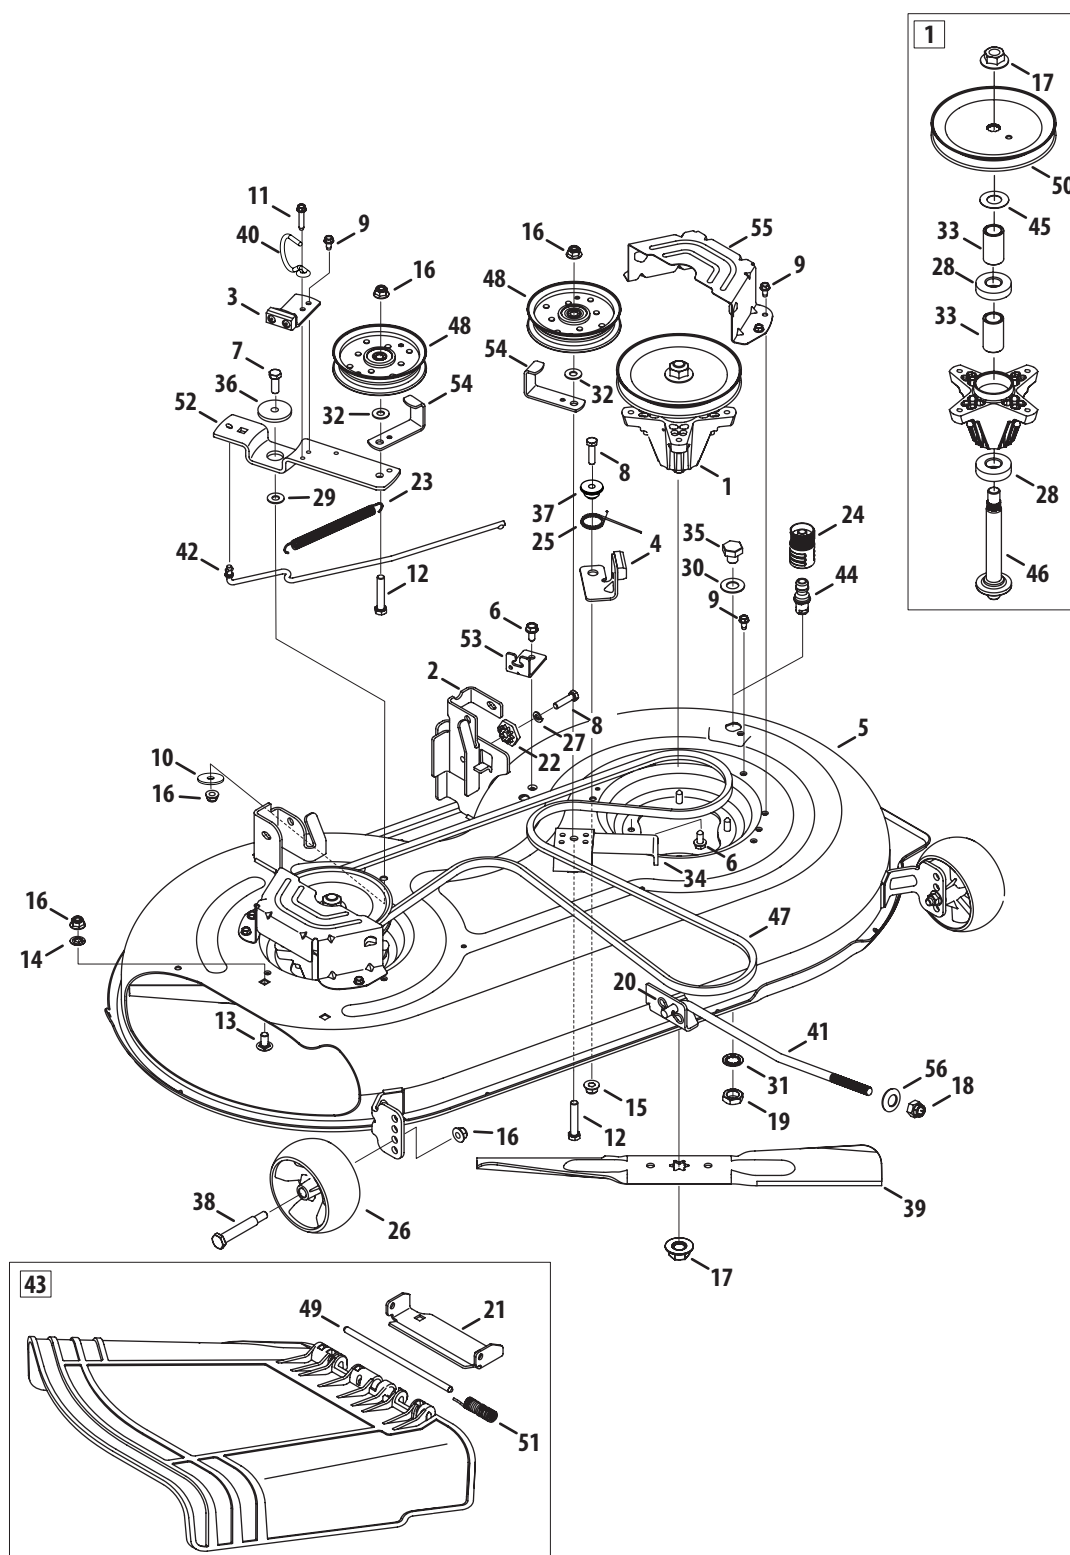


Ref.	Part Number	Description	Ref.	Part Number	Description
1.	918-04822A	Spindle Ass'y, Pulley, 6.3 Dia	29.	936-0344	Washer, Flat, .385 X 1.0 X .030
2.	683-0254B	Bracket Ass'y, Deck, Hanger LH	30.	736-0187	Washer, flat, .64 X 1.24 X .06
3.	983-04511	Brake Ass'y, Deck, 42/46	31.	736-0225	Washer, Lock, 5/8, Int Tooth
4.	983-04525	Brake Ass'y, Deck, 46"	32.	736-0262	Washer, Flat, .385 x .870 x .092
5.	983-04570	Deck Ass'y, Offset, 42" W/O wheel	33.	750-04936	Spacer, .792 x 1.060 x 1.860
	983-04572	Deck Ass'y, Offset, 42 W/ 2 wheel	34.	783-06643	Bracket, Support, Stationary Idler
6.	710-04484	Screw, Self-tapping, 5/16-18, .750	35.	738-04146	Plug, Bolt, M16 X 1.5
7.	710-3005	Hex Screw, 3/8-16, 1.25, Gr5, Std	36.	738-04162A	Spacer, Shoulder, .8840 x .190
8.	710-0528	Hex Screw, 5/16-18, 1.25, Gr5, Std	37.	748-04272	Shoulder Spacer
9.	710-0599	Screw, Self-tapping, 1/4-20, 0.500	38.	938-3056	Bolt, Shoulder, .496 x 2.50, 3/8-16
10.	936-3039	Flat Washer, .406 x 1.500 x .105	39.	942-04308	Blade, Cut, 21.23" 2-In-1, Econ
11.	710-0642	Screw, Self-tapping, 1/4-20, .750	40.	747-05323	Rod, Keepr, Belt 42 Idler
12.	710-3144	Hex Screw, 3/8-16, 2.00, Gr5, Std	41.	747-05141A	Rod, Lift, Deck, Frt, 12.7
13.	710-3178	Bolt, Carriage, 3/8-16, 0.75, Gr1	42.	747-05105B	Rod, Control, Brake 42"
14.	712-0229	Nut, Push, 3/8	43.	631-04288	Chut Assembly, 42" Deck
15.	712-04063	Nut, Flange Lock, 5/16-18, Grf	44.	737-04003D	Deck Water Nozzle
16.	712-04065	Nut, Flange Lock, 3/8-16, Grf	45.	936-0351	Washer, Flat, .760 ldx1.50 OD
17.	712-0417A	Nut, Flange, 5/8-18	46.	738-1186A	Shift, Spindle, 6.11.
18.	712-04243	Nut, Lock, 1/2-13	47.	954-04060B	Belt, V Type, A Sec X 96.5
19.	912-0641	Nut, Hex, M16-1.5	48.	756-04129B	Pulley, Idler, 4.25"Dia
20.	714-04043	Bow-Tie Cotter Pin	49.	711-04847B	Pin, Hinge, Dia .3125 x 7.96
21.	783-06074A	Chute Bracket	50.	956-1227	Pulley, Deck, 6.3 Dia
22.	917-04074	Gear, Deck, Adjustment	51.	732-04372	Spring, Torsion, .44 I.D. X 2.0
23.	932-0384	Spring, Extension, .62 Dia x 6.12	52.	783-05946	Pivot idler Bracket, 46
24.	921-04041	Water Nozzle Adapter	53.	783-06243	Bracket, Cable, Deck Engage
25.	732-04840	Spring, Torsion, .992 ID X 1.17 OD	54.	783-06368	Bracket, Guard, Belt, 4.25 Pulley
26.	734-04155	Wheel, Deck, 5.0 Dia Ball	55.	783-06424A	Deck Belt Cover, 42
27.	936-0119	Washer, Lock, 5/16, Regular Duty	56.	748-04069	Deck Lift Pivot Cup
28.	941-0919	Bearing, Ball, .787id x 1.85 Odx.551			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

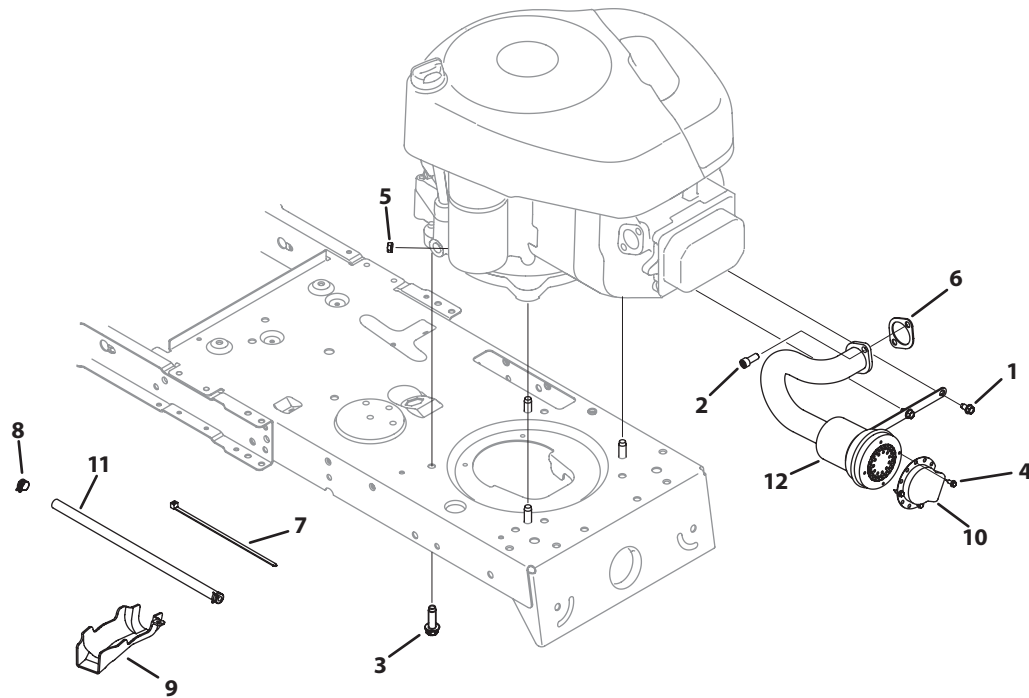


Ref.	Part Number	Description
1	710-0599	Screw, 1/4-20 x .500
2	710-1314A	Socket Screw, 5/16-18 x .750
3	710-04683	Screw, 3/8-16 x 1.0
4	710-0227	Screw, 8-18 x .500
5	712-0271	Sems Nut, 1/4-20
6	BS-692236	Exhaust Gasket, 10 HP Briggs
7	725-0157	Cable Tie
8	726-0205	Clamp Hose, .490 diameter
9	731-05628	Oil Drain Sleeve
10	751B222261	Muffler Deflector
11	751-10349-28	Fuel Hose, Low Permeation
12	751-9986A	Muffler

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

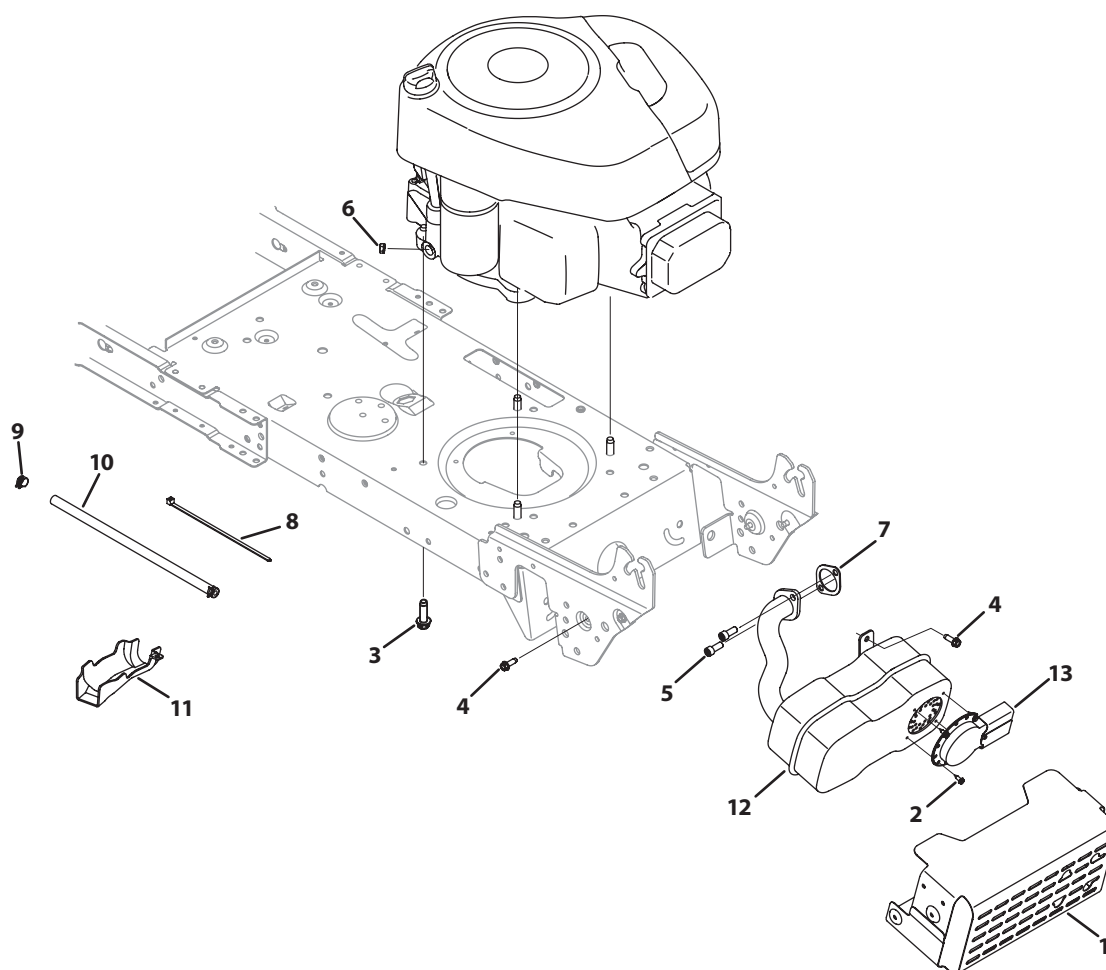


Ref.	Part Number	Description
1	683-04549	Muffler Shield Assembly with Weld
2	710-0227	Screw, 8-18 x .500
3	710-04683	Screw, 3/8-16 x 1.0
4	710-0642	Screw, 1/4-20 x .750
5	710-1314A	Socket Screw, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	BS-692236	Exhaust Gasket, 10 HP Briggs
8	725-0157	Cable Tie
9	726-0205	Clamp Hose, .490 diameter
10	751-10349-28	Fuel Hose, Low Permeation
11	731-05628	Oil Drain Sleeve
12	751-10448C	Muffler, Single Inlet
13	751-11053	Muffler Deflector Long

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

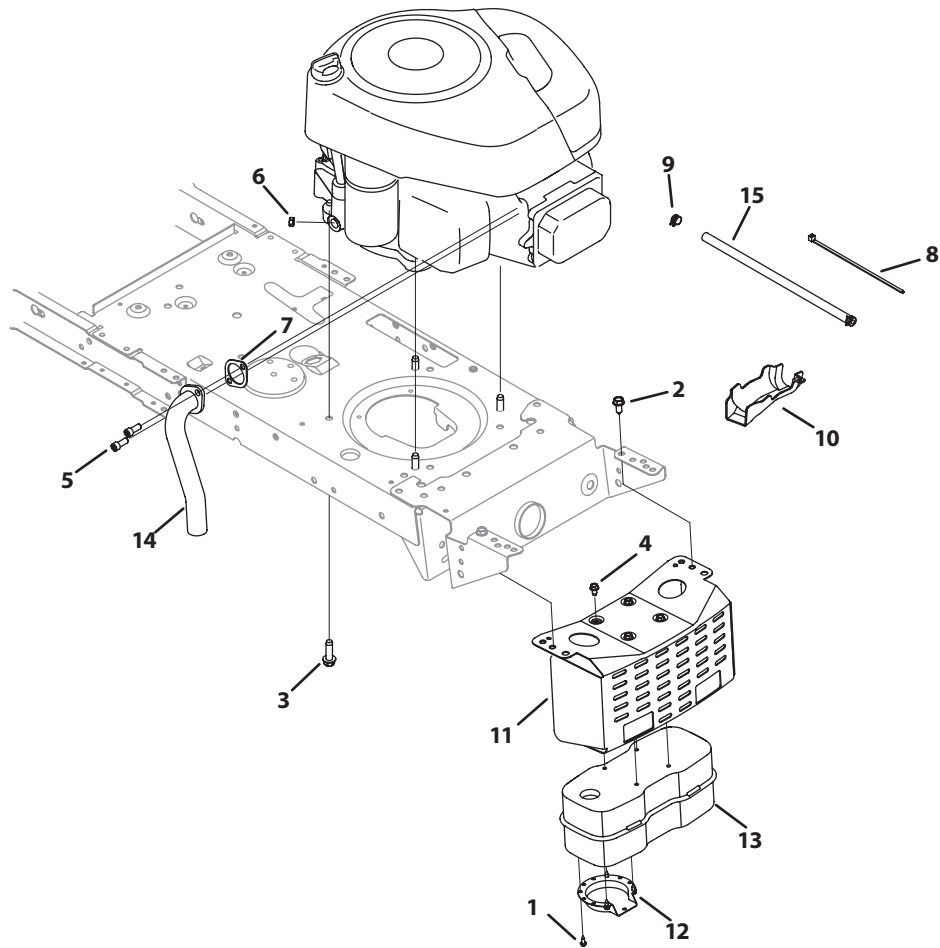


Ref.	Part Number	Description
1	710-0227	Screw, 8-18 x .500
2	710-04484	Screw, 5/16-18 x .750
3	710-04683	Screw, 3/8-16 x 1.000
4	710-0599	Screw, 1/4-20 x .500
5	710-1214	Socket Screw, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	BS-692236	Exhaust Gasket, 10 HP Briggs
8	725-0157	Cable Tie
9	726-0205	Hose Clamp, .490 Diameter
10	731-05628	Oil Drain Sleeve
11	783-0615E	Muffler Bracket
12	751-0564B	Muffler Deflector
13	751-0617C	Single Inlet Muffler
14	751-0619A	Exhaust Pipe, Single Briggs
15	751-10349-28	Fuel Hose, Low Permeation

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

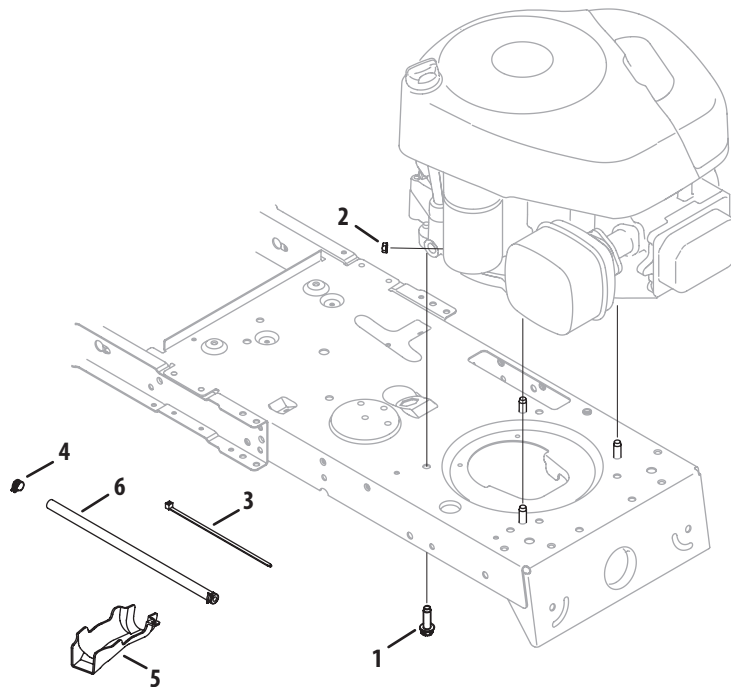

Ref.	Part Number	Description
1	710-04683	Screw, 3/8-16 x 1.0
2	712-0271	Sems Nut, 1/4-20
3	725-0157	Cable Tie
4	726-0205	Clamp Hose, .490 diameter
5	731-05628	Oil Drain Sleeve
6	751-10349	Fuel Hose, Low Permeation

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

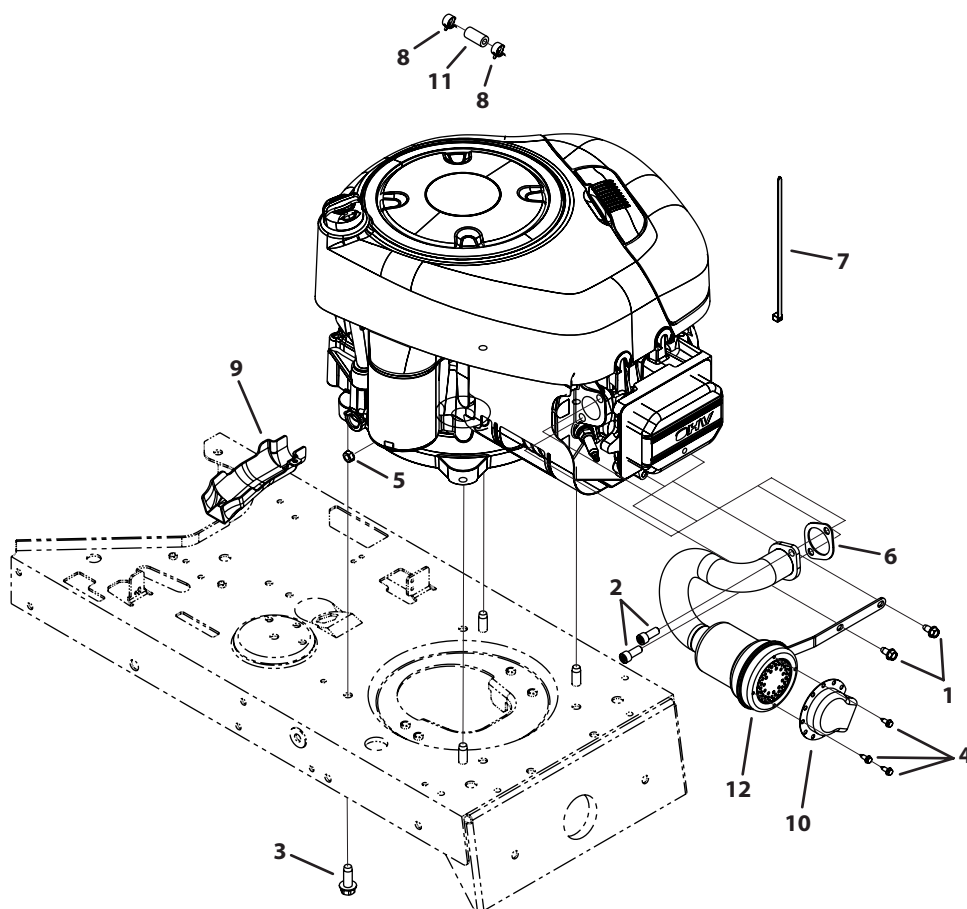

Ref.	Part Number	Description
1	710-0599	Screw, 1/4-20 x .500
2	710-1214	Socket Screw, 5/16-18 x .750
3	710-04683	Screw, 3/8-16 x 1.000
4	710-0227	Screw, 8-18 x .500
5	712-0271	Sems Nut, 1/4-20
6	BS-692236	Exhaust Gasket, 10 HP Briggs
7	725-0157	Cable Tie
8	726-0205	Hose Clamp, .490 Diameter
9	731-05628	Oil Drain Sleeve
10	751B222261	Muffler Deflector
11	751-10349-28	Fuel Hose, Low Permeation
12	751-12091	Muffler

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

