


Model Series LS 33 TB

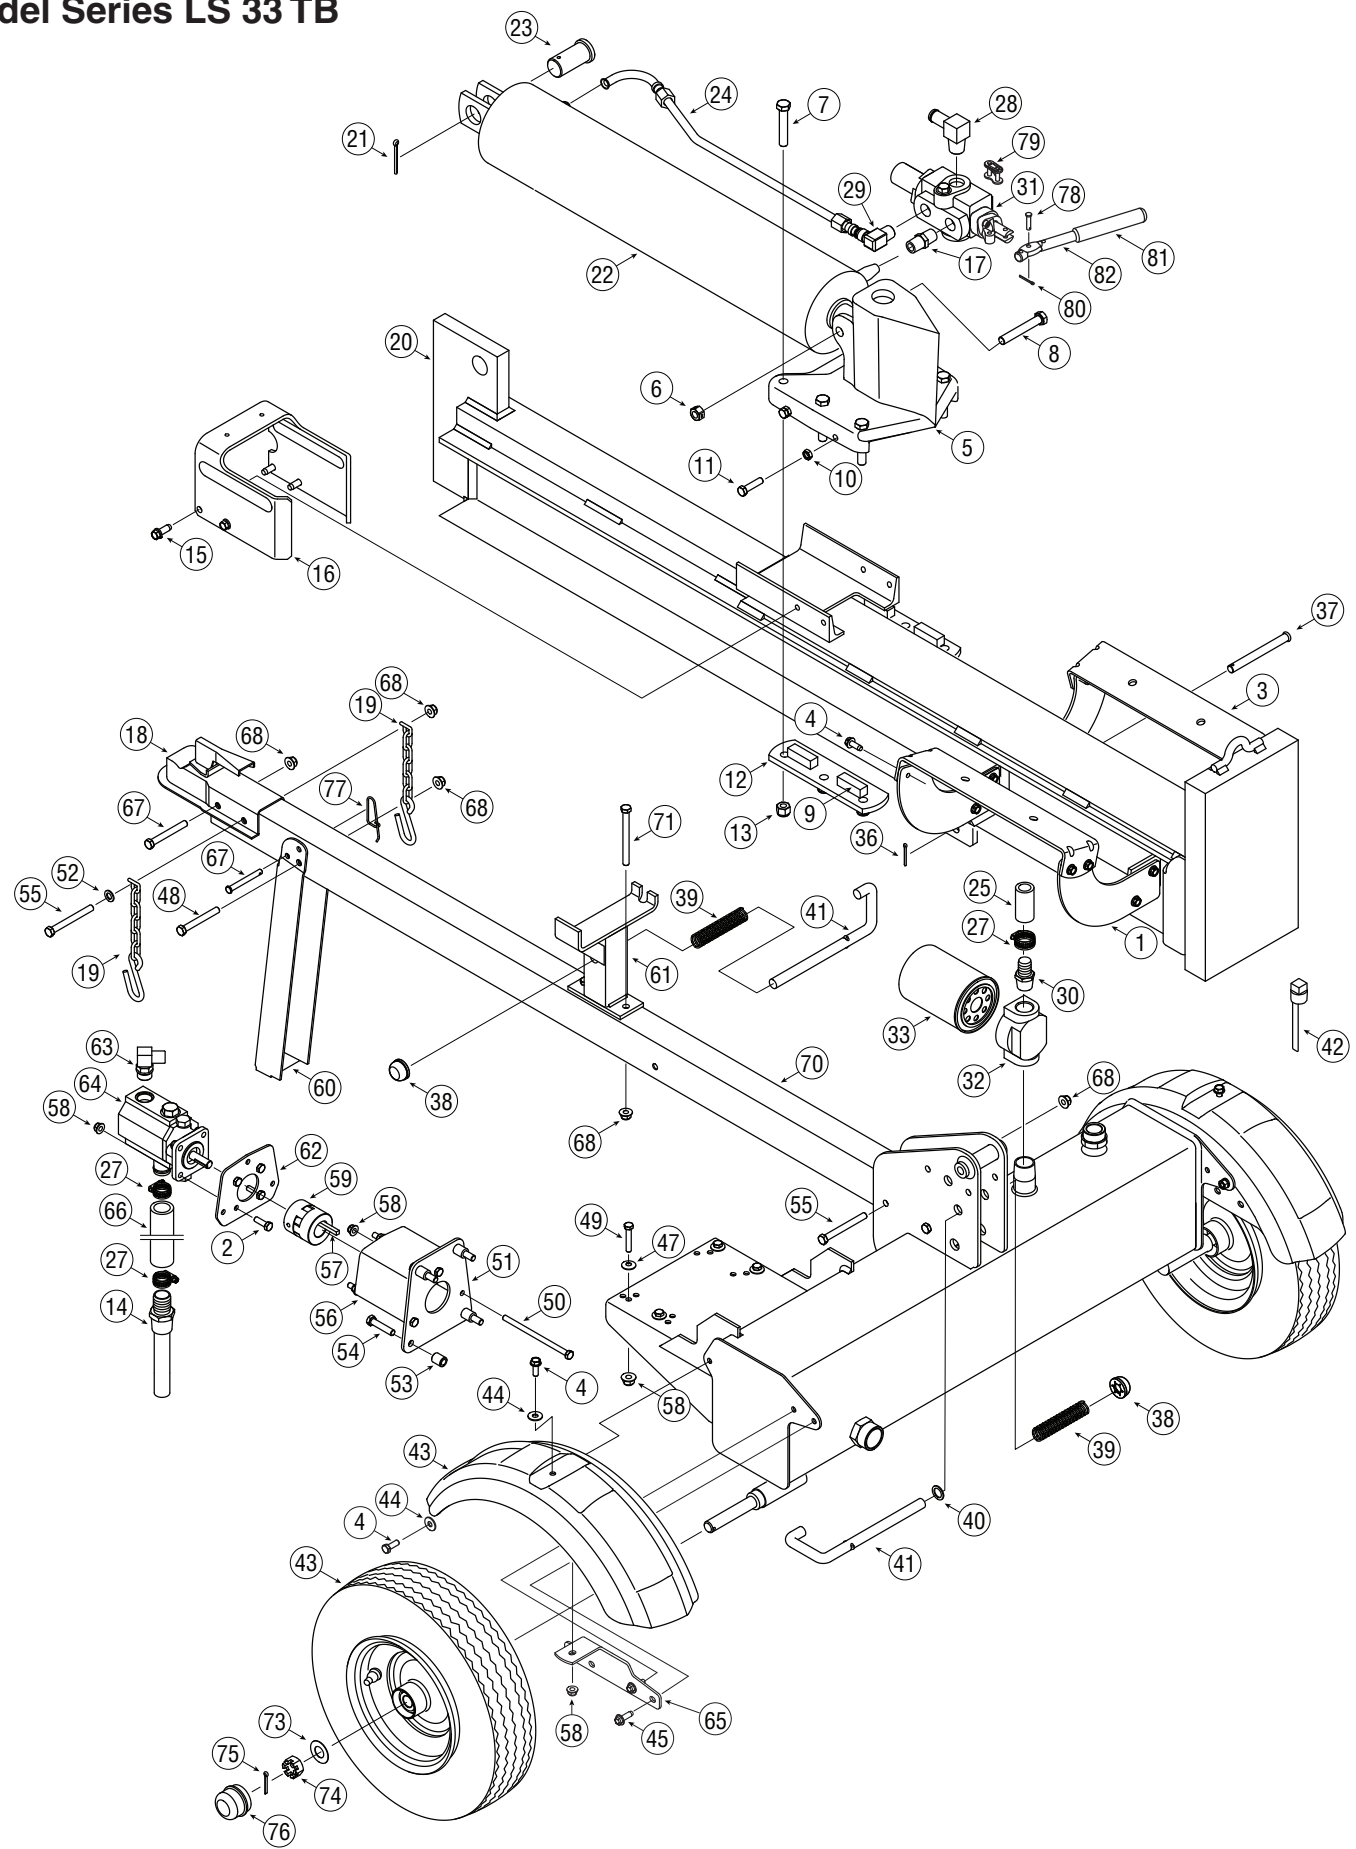

Ref. No.	Part No.	Description
1.	781-04180	Log Tray Bracket
2.	710-0376	Hex Screw, 5/16-18 x 1.00
3.	781-04179	Log Tray Bracket
4.	710-0650	Self-tap Screw, 5/16-18 x .875
5.	719-0550A	Wedge Assembly
6.	712-3022	Lock Nut 1/2-13
7.	710-1018	Hex Cap Screw 1/2-20 x 2.75
8.	710-1806	Hex Cap Screw 1/2-13 x 3.25
9.	781-0351	Adjustable Gib
10.	712-0711	Hex Jam Nut 3/8-24
11.	710-0459A	Hex Cap Screw 3/8-24 x 1.5
12.	781-0790	Back Plate
13.	712-3058	Hex Lock Nut, 1/2-20
14.	737-04093	Inlet Filter
15.	710-0654A	Hex Washer Screw 3/8-16 x 1.0
16.	781-0525	Dislodger
17.	737-0238	Pipe Nipple
18.	681-04030	Hitch Coupler, 2-inch
19.	713-0433A	Chain
20.	681-04080	Beam Assembly
21.	714-0211	Cotter Pin
22.	718-0313	Hydraulic Cylinder 31/33 Ton
23.	711-1135	Clevis Pin
24.	727-04166	Hydraulic Tube
25.	727-0443	Return Hose 3/4" ID x 44"
26.	781-0526A	Hose Guard
27.	726-0132	Hose Clamp 5/8"
28.	737-0153	Return Elbow
29.	737-0192	90 Degree Solid Male Adapter
30.	737-0235	3/4" Hose Adapter
31.	718-0481A	Control Valve
32.	737-0316	Filter Housing
33.	723-0405	Oil Filter
34.	727-0502	High Pressure Hydraulic Hose
35.	781-0538A	Hose Guard
36.	714-0470	Cotter Pin 1/8"
37.	738-0805	Hinge Pin 1/2 x 4.8" Lg.
38.	726-0214	Push Cap
39.	732-0583	Compression Spring 4"
40.	736-0116	Flat Washer .635 ID x .93 OD
41.	781-0690	Locking Rod

Ref. No.	Part No.	Description
42.	737-0348A	Vented Dipstick
43.	731-2496A	Fender
44.	736-0371	Flat Washer, .343 x .880 x .062
45.	710-0602	Self-tap Screw, 5/16-18 x 1.00
46.	681-04041A	Frame Assembly 7.0 Gal
47.	736-0242	Bell Washer, 340 x .872 x .060
48.	710-0521	Hex Cap Screw 3/8-16 x 3.00
49.	710-3180	Hex Cap Screw 5/16-18 x 1.75
50.	710-3226	Hex Cap Screw 5/16-18 x 5.50
51.	781-1100	Front Support Bracket Coupling
52.	736-0185	Flat Washer, .375 x .738 x .063
53.	711-0396	Spacer, .385 x .623 x .750
54.	710-0347	Hex Cap Screw 3/8-16 x 1.75
55.	710-3085	Hex Cap Screw 3/8-16 x 3.50
56.	719-0315	Coupling Shield
57.	714-0114	Key
58.	712-04063	Hex Flange Lock Nut, 5/16-18
59.	718-04135	Flex Coupling
60.	781-0162	Jack Stand
61.	681-0110	Support Beam Assembly
62.	781-0097	Rear Coupling Support Bracket
63.	737-0264	Adapter 7/8-14
64.	718-04128	Pump
65.	781-04174	Fender Mounting Bracket
66.	727-0451	Suction Hose
67.	711-0813	Clevis Pin, 5/16 x 2.5
68.	712-04065	Flange Lock Nut, 3/8-16
69.	736-0169	Lock Washer 3/8
70.	781-0680B	Tube
71.	710-0411	Hex Cap Screw 3/8-16 x 4.0
72.	634-0186	Wheel Assembly
73.	736-0351	Flat Washer .76" ID x 1.5" OD
74.	712-0359	Slotted Nut 3/4-16
75.	714-0162	Cotter Pin 5/32" x 1-1/4"
76.	734-0873	Hub Cap
77.	732-0194	Spring Pin
78.	711-04585	Clevis Pin
79.	713-04036	Valve Handle Link
80.	714-0111	Cotter Pin
81.	720-04088	Grip
82.	747-04539	Hydraulic Valve Control

7

Parts List



To order replacement parts, call the Customer Service Line at
1-800-828-5500,
or visit
www.troybilt.com