



SECTION 11: PARTS LIST FOR MODEL LR927

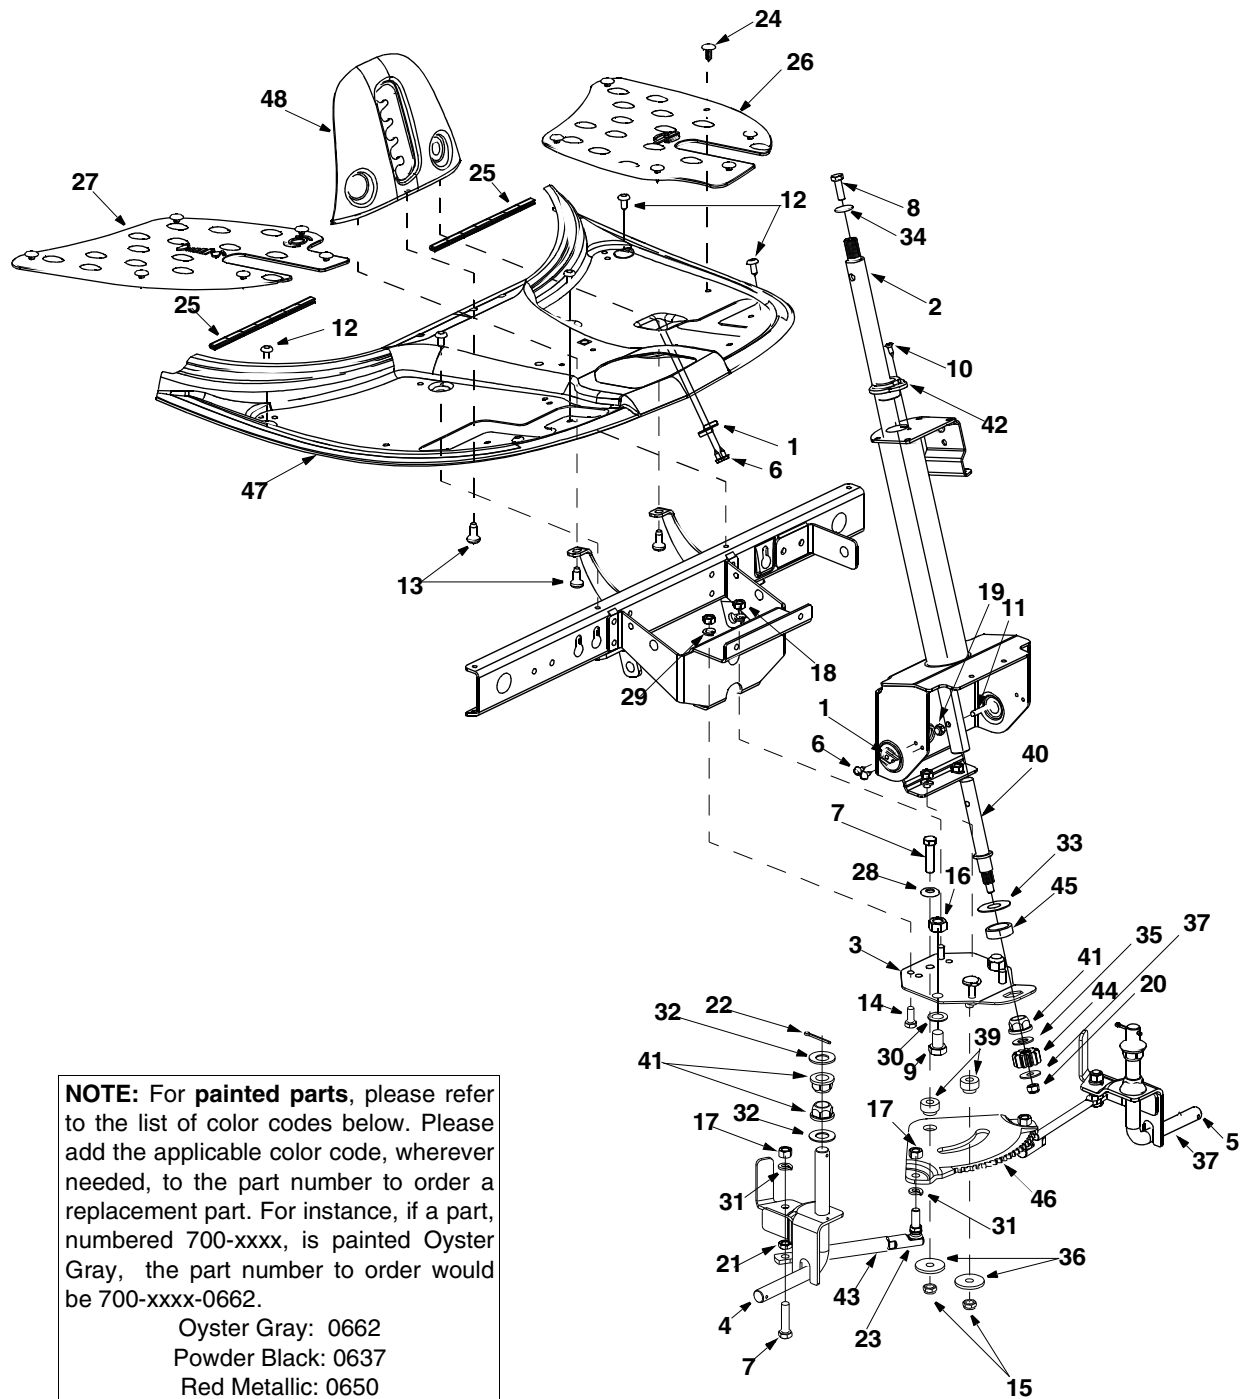

Model LR927

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	17962	Switch Plate	25.	731-0511	Trim Strip
2.	650-0007	Steering Tube Assembly	26.	735-0674	Floor Pad: LH
3.	683-0033A	Steering Support Bracket	27.	735-0266A	Floor Pad: RH
4.	683-0178A	Front Axle Assembly: RH	28.	736-0105	Bell Washer
5.	683-0179A	Front Axle Assembly: LH	29.	736-0119	Lock Washer
6.	710-0224	Hex Screw AB	30.	736-0160	Flat Washer
7.	710-0459A	Hex Screw 3/8-24 x 1.5" Gr.5 Sp.	31.	736-0169	Lock Washer
8.	710-0643	Lock Screw 5/16-18 x 1.0" Gr.5	32.	736-0187	Flat Washer
9.	710-0689	Hex Screw 1/2-13 x 0.75"	33.	736-0196	Flat Washer
10.	710-0837	Oval C-Sunk Screw #10-16 x 0.625"	34.	736-0242	Beleville Washer
11.	710-0958	Hex Screw 1/4-20 x 1.25 Gr.5 Sp.	35.	736-0272	Flat Washer
12.	710-1017	AB Screw 1/4-14 x 0.625"	36.	736-0320	Flat Washer
13.	710-1611B	Self-Tapping Screw 5/16-18 x 0.75"	37.	736-3078	Flat Washer
14.	710-3008	Hex Screw 5/16-18 x 0.75"	38.	737-3007	Grease
15.	712-0116	Lock Nut 3/8-24	39.	738-0541	Spacer
16.	712-0206	Hex Nut 1/2-13	40.	738-3089A	Steering Adapter
17.	712-0241	Hex Nut	41.	741-0225	Hex Flange Bearing
18.	712-0267	Hex Nut	42.	741-0356	Bearing: Steering Column
19.	712-0324	Lock Nut 1/4-20	43.	747-0955	Tie Rod
20.	712-0411	Lock Nut	44.	748-0290	Pinion Gear
21.	712-0711	Jam Nut	45.	750-0532	Spacer
22.	714-0470	Cotter Pin	46.	783-0411	Gear: Steering Segment
23.	723-0156	Ball Joint	47.	783-0565C	Upper Frame Cover
24.	726-3046	Ratchet Clip	48.	783-1013	Lift Plate

Model LR927

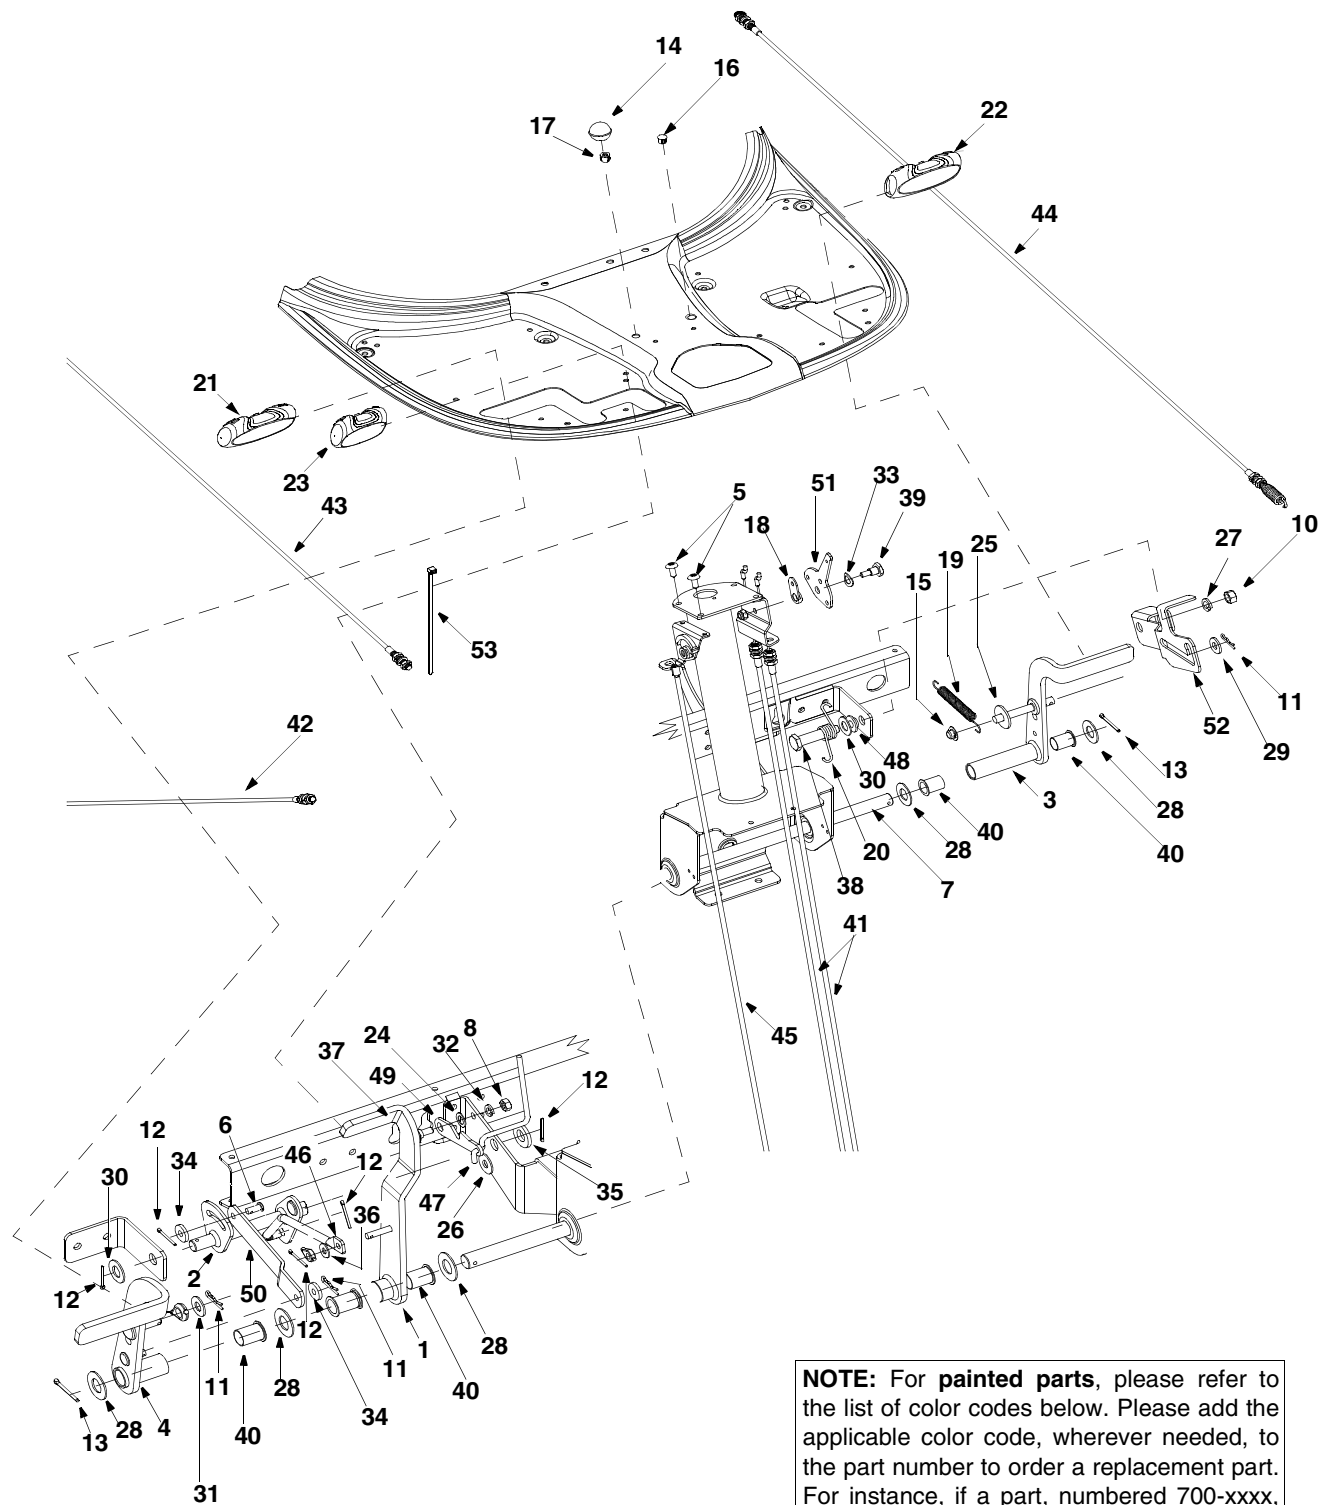

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part, numbered 700-xxxx, is painted Oyster Gray, the part number to order would be 700-xxxx-0662.

Oyster Gray: 0662


Powder Black: 0637

Red Metallic: 0650

Model LR927


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	683-0155A	Brake Pedal Assembly	28.	736-0187	Flat Washer
2.	683-0161	Shift Cam Assembly	29.	736-0262	Flat Washer
3.	683-0275A	Deck Pedal Assembly	30.	736-0272	Flat Washer .510 X 1.00 X .060
4.	683-0310A	Variable Pedal Assembly	31.	736-0300	Flat Washer
5.	710-1017	Ab Screw 1/4-14 X .625	32.	736-0329	Lock Washer
6.	711-0701	Clevis Pin	33.	736-0608	Spring Washer
7.	711-1156	Shaft	34.	736-3000	Flat Washer
8.	712-0287	Hex Nut 1/4-20	35.	736-3019	Flat Washer .531 X 1.062 X .134
9.	712-0324	Lock Nut 1/4-20	36.	736-3020	Flat Washer .271 X .630 X .065
10.	712-3017	Hex Nut 3/8-16	37.	738-0255	Shoulder Screw .375 Dia X .18
11.	714-0104	Internal Cotter Pin	38.	738-0373	Shoulder Screw
12.	714-0111	Hairpin Clip	39.	738-0974	Shoulder Screw .375 X .380 X 1/4-20
13.	714-0470	Hairpin Clip	40.	741-0591	Flange Bearing
14.	720-0166	Ball Knob	41.	746-0935A	Shift Cable
15.	726-0100	Push Cap	42.	746-0936	Variable Drive Cable
16.	726-0450	Plug Cap	43.	746-0937	Brake Cable
17.	731-0405	Snap-on Bushing	44.	746-0940	Deck Cable
18.	731-1913	Stop Lever	45.	746-0964	Throttle Choke Cable: 67"
19.	732-0815A	Extension Spring	46.	747-0963A	Brake Rod
20.	732-0865	Torsion Spring	47.	747-0964	Brake Lock Out Rod
21.	735-0261	Drive Pad	48.	750-0736	Shoulder Spacer
22.	735-0262	Deck Pad	49.	783-0473	Brake Lock Out Bracket
23.	735-0263	Brake Pad	50.	783-0525	Self-Propelled Pedal Link
24.	736-0117	Flat Washer 3/8 X .620 X .033	51.	783-0593A	Shift Lever
25.	736-0133	Flat Washer.411 x 1.25" x .100	52.	783-0794	Bracket: Lock-Out Pedal
26.	736-0159	5/16 Washer	53.	726-0157	Cable Tie
27.	736-0169	Lock Washer			

Model LR927

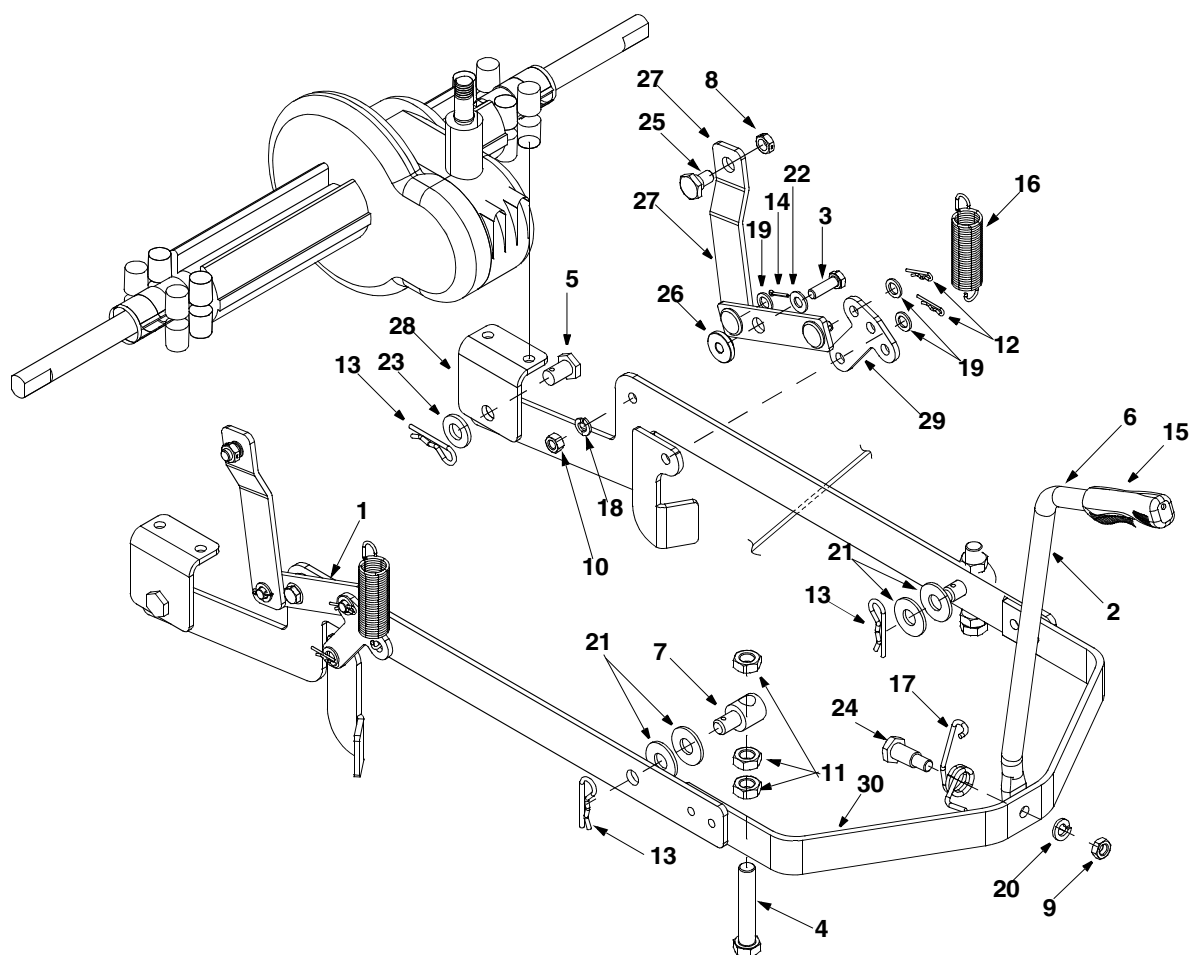

Key No.	Part No.	Description	Key No.	Part No.	Description
1.	683-0152	Pivot Link Assembly	16.	732-0829	Extension Spring
2.	683-0194A	Lift Arm Assembly	17.	732-0837	Torsion Spring
3.	710-0376	Hex Screw 5/16-18 X 1.00 Gr.5	18.	736-0119	Lock Washer 5/16
4.	710-3230	Hex Bolt 1/2-13 X 2.75 Gr.5 Spec.	19.	736-0140	Flat Washer .385 I.D. x .620 O.D.
5.	711-0332	Lift Bracket Pin	20.	736-0169	Lock Washer
6.	711-04158	Lift Rod	21.	736-0257	Flat Washer
7.	711-3319	Ferrule	22.	736-0275	Flat Washer 5/16
8.	712-0266	Jam Nut	23.	736-3019	Flat Washer
9.	712-3008	Jam Nut 3/8-16 Gr. 5	24.	738-0145	Shoulder Screw
10.	712-3010	Hex Nut 5/16-18	25.	738-0183	Shoulder Screw
11.	712-3048	Jam Nut	26.	738-0958	Shoulder Spacer
12.	714-0104	Cotter Pin	27.	783-0435	Upper Deck Link
13.	714-0147	Cotter Pin	28.	783-04320	Axle Bracket: Rear
14.	714-3010	Cotter Pin	29.	783-0440	Lower Link
15.	720-0298	Handle Grip	30.	783-0442A	Crossbar Link: Lift

Model LR927

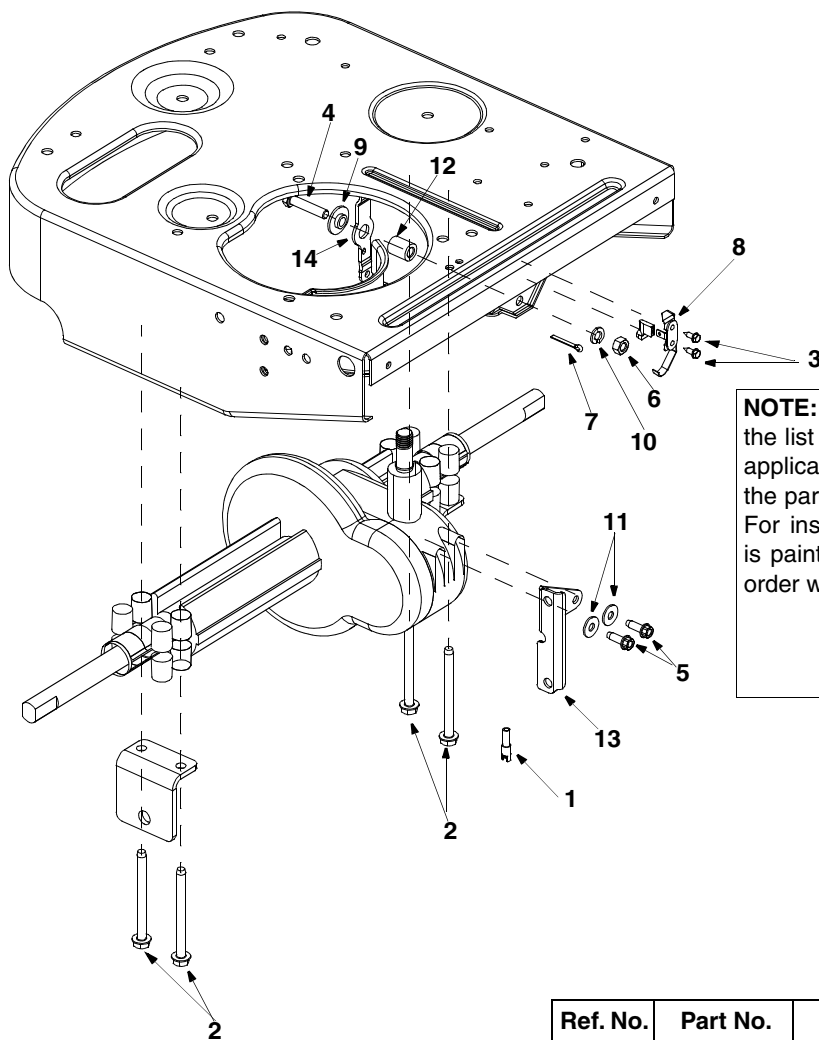


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part, numbered 700-xxxx, is painted Oyster Gray, the part number to order would be 700-xxxx-0662.

Oyster Gray: 0662
Powder Black: 0637
Red Metallic: 0650

Ref. No.	Part No.	Description
1	629-0865	Harness Assembly Adapter
2	710-1208	Hex TT Screw 5/16-18 x 3.50
3	710-0227	Hex Washer Head Self-Tap.Screw
4	710-0805	Hex Screw 5/16-18 x 1.5 Gr. 5
5	710-0642	Thd. Forming Scr. 1/4-20x .75
6	712-3010	Hex Nut 5/16-18
7	714-0115	Cotter Pin
8	726-0320	Insulator Nut Plate
9	736-0289	Shoulder Bushing
10	736-0119	Lock Washer 5/16
11	736-3000	Flat Washer
12	750-1064	Spacer
13	783-0591	Transaxle Bracket
14	783-0433A	Shift Lever

Model LR927

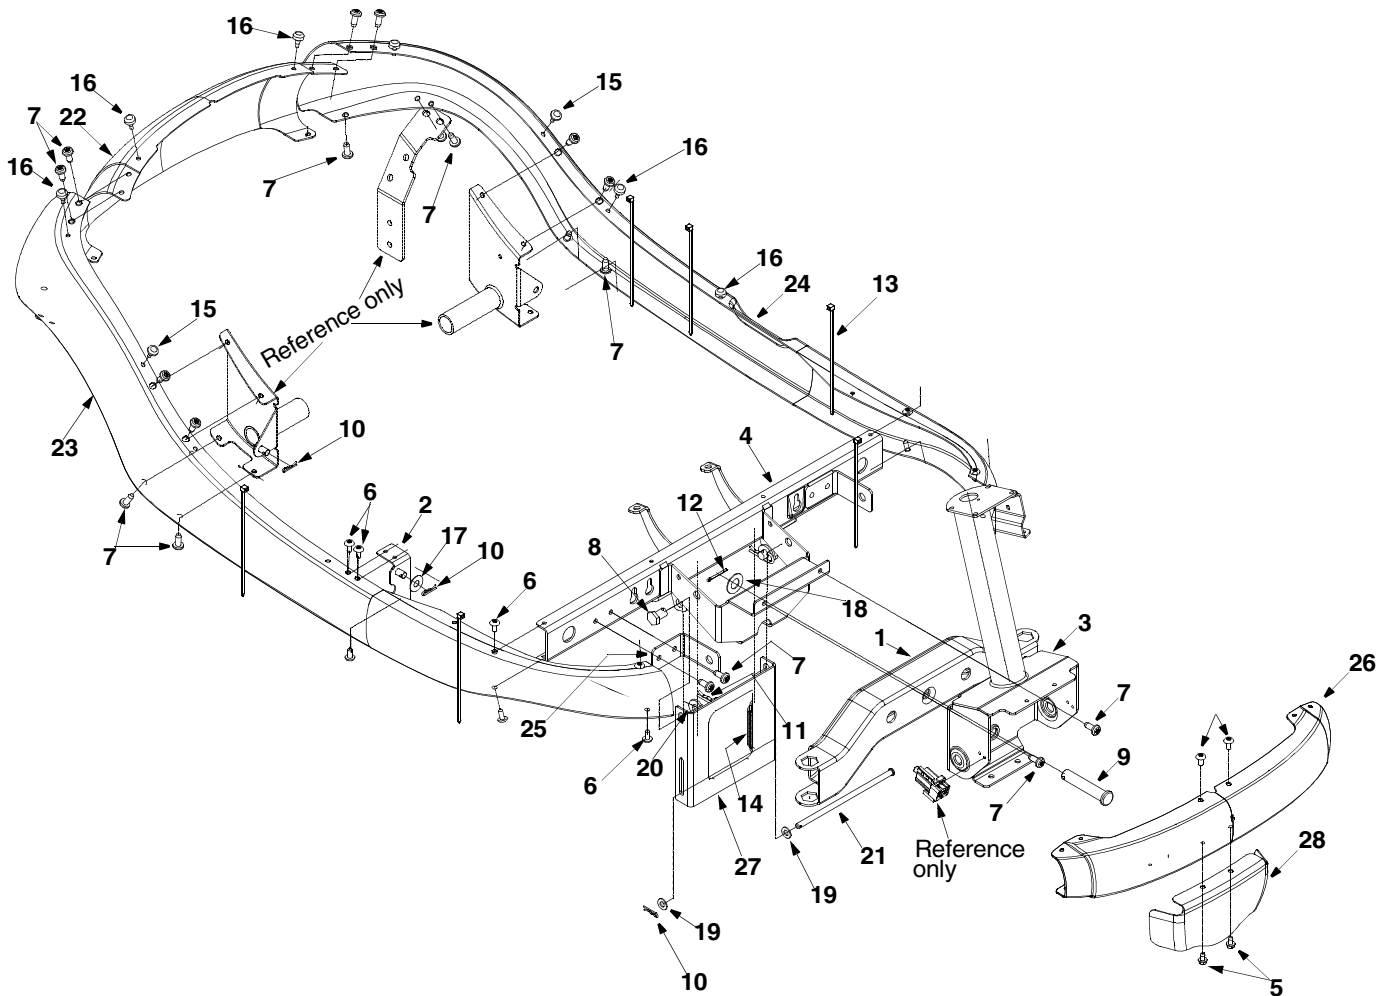

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part, numbered 700-xxxx, is painted Oyster Gray, the part number to order would be 700-xxxx-0662.

Oyster Gray: 0662
 Powder Black: 0637
 Red Metallic: 0650


Model LR927

Ref. No.	Part No.	Description
1.	683-0142	Pivot Bar Assembly
2.	683-0160	Bracket Assembly: Hood Pivot
3.	683-0163A	Steering Support Bracket
4.	683-0264A	Channel Assembly: Front Frame
5.	710-0599	TT screw 1/4-20 x 0.5"
6.	710-1017	AB Screw 1/4-14 x 0.625"
7.	710-1611B	TT Screw 5/16-18 x 0.75"
8.	711-0332	Clevis Pin
9.	711-1165	Clevis Pin
10.	714-0104	Cotter Pin
11.	714-0147	Hairpin Clip
12.	714-0470	Cotter Pin
13.	725-0157	Cable Tie
14.	732-0829	Extension Spring
15.	735-0199A	Rubber Bumper
16.	735-0271	Bumper
17.	736-0101	Flat Washer
18.	736-0187	Flat Washer
19.	736-0275	Flat Washer
20.	736-3019	Flat Washer
21.	747-0985	Deck Rod
22.	783-04231	Rail: Rear Frame
23.	783-04248	Rail: Frame RH
24.	783-04252	Rail: Frame LH
25.	783-0554	Cam Bracket
26.	783-0564A	Frame: Upper Front
27.	783-0605	Stabilizing Bracket: Deck
28.	783-0811A	Front Bumper

Model LR927


IMPORTANT: For a proper working machine, use Factory Approved Parts.

V-BELTS are specially designed to engage and disengage safely. A substitute (non OEM) V-Belt can be dangerous by not disengaging completely.

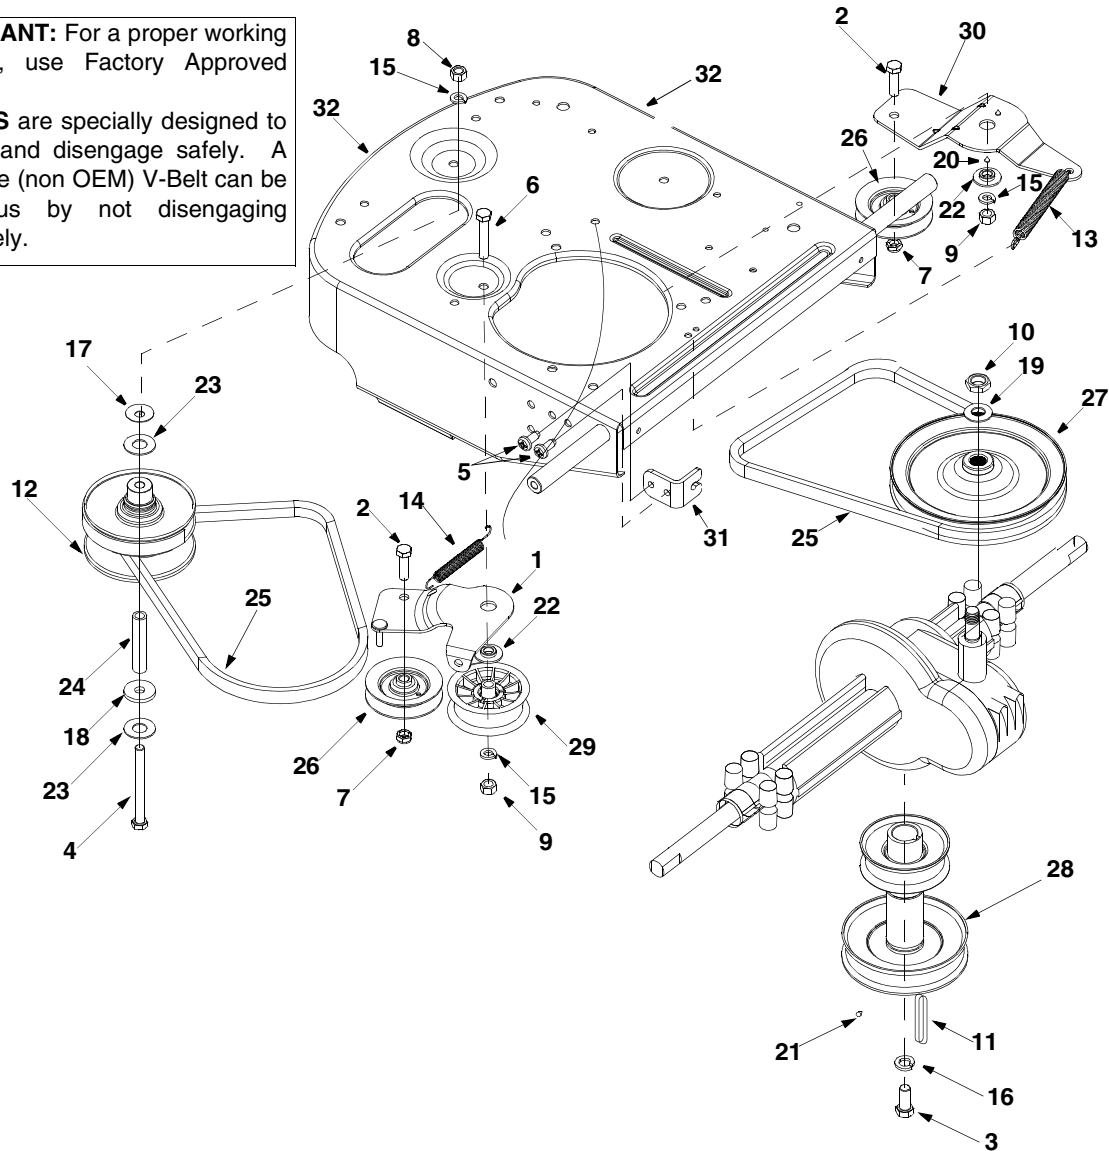


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	683-0147A	Idler Bracket Assembly	17	736-0219	Bell Washer
2	710-0191	Hex Screw (Special)	18	736-0247	Flat Washer
3	710-0314	Hex Screw 7/16-20 x 1.0"	19	736-0427	Beleville Washer
4	710-0902	Hex Screw 3/8-24 x 3.75"	20	737-0167	Grease
5	710-1611B	TT Screw	21	737-0288	Grease
6	710-3096	Hex Screw 3/8-16 x 2.0"	22	738-0968	Shoulder Spacer
7	712-0116	Jam Lock Nut	23	741-0405	Thrust Bearing
8	712-0241	Hex Nut 3/8-24	24	750-0705	Slv. Spacer
9	712-3017	Hex Nut 3/8-16	25	754-0453	V-Belt
10	712-3035	Jam Nut 9/16-18	26	756-0116	Idler Pulley
11	714-0114	Sq. Key	27	756-0650	Transmission Pulley
12	717-0884	Variable Speed Pulley Assembly	28	756-0658	Engine Pulley
13	732-0814	Extension Spring	29	756-0981A	Flat Idler Pulley
14	732-0815A	Extension Spring	30	783-0528	Idler Bracket: Variable Speed
15	736-0169	Lock Washer	31	783-0529	Cable Bracket
16	736-0171	Lock Washer	32	683-0149B	Frame Assembly

Model LR927

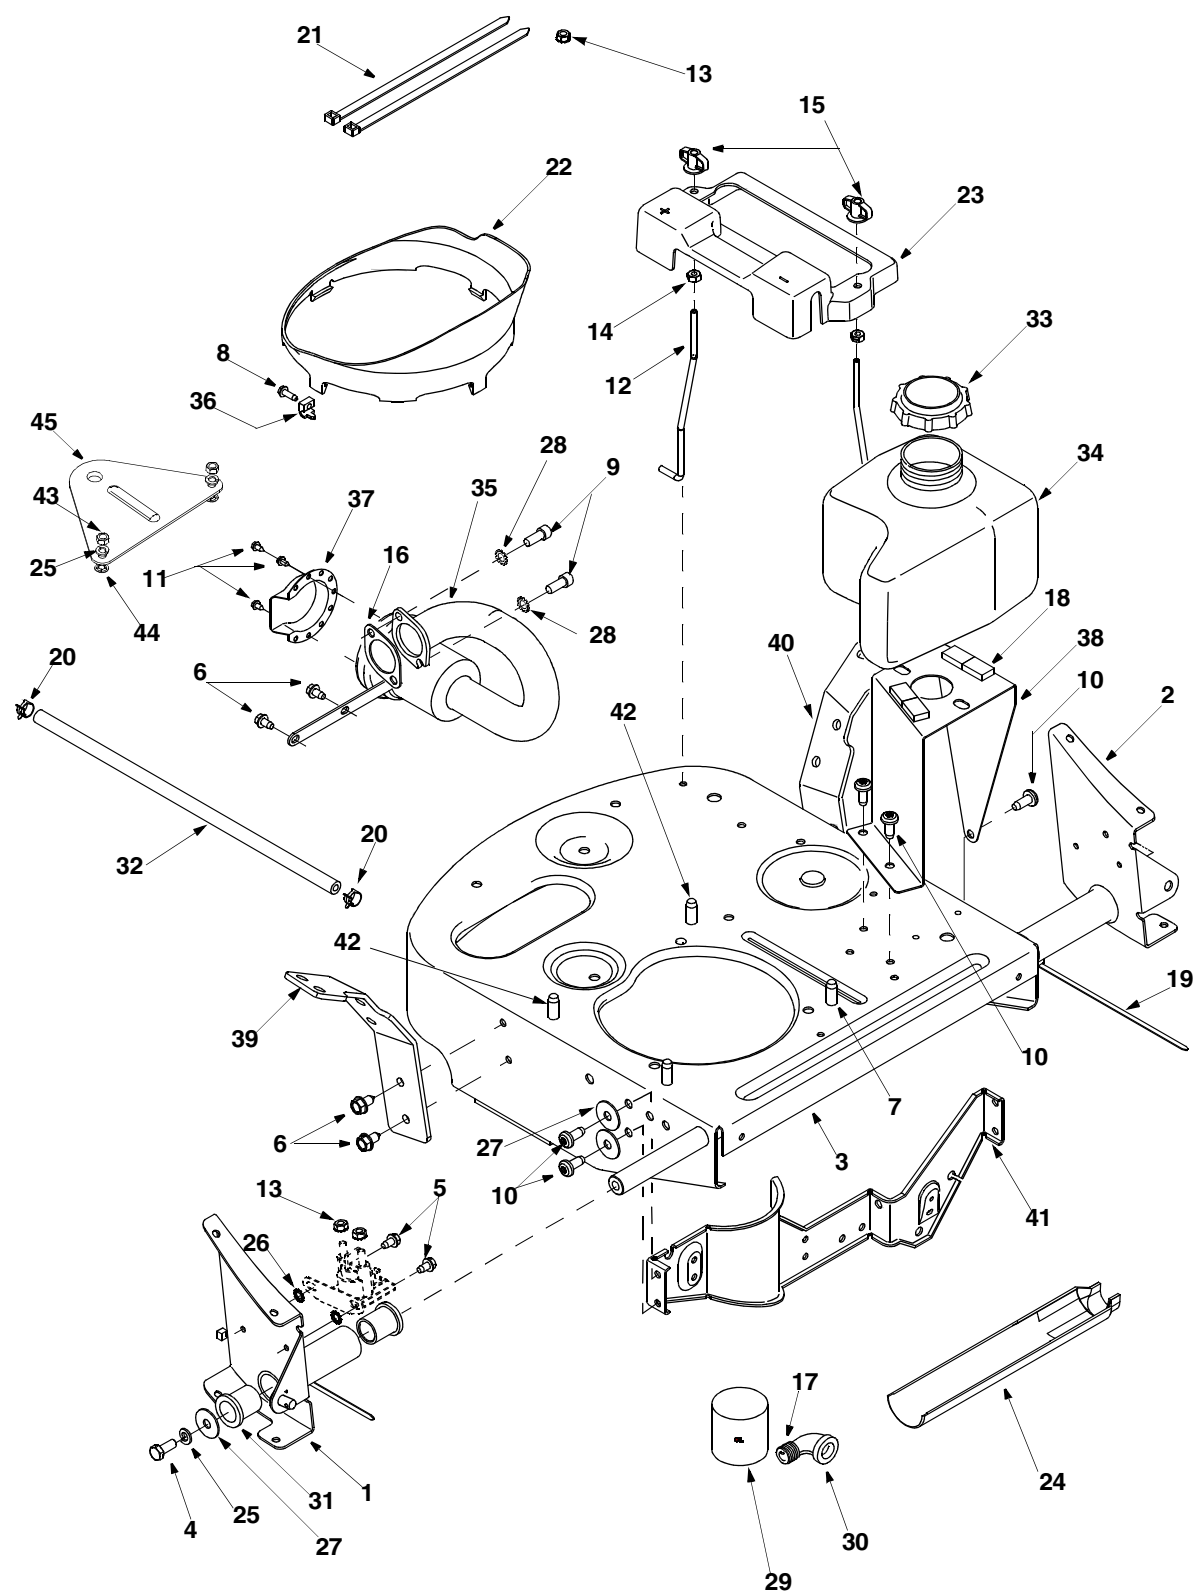


Model LR927

Ref No.	Part No.	Description	Ref No.	Part No.	Description
1.	683-0190B	Rail Support: Frame Assembly RH	24.	731-1682A	Oil drain Sleeve
2.	683-0191B	Rail Support: Frame Assembly LH	25.	736-0119	Lock Washer 5/16
3.	683-0401B	Frame Assembly	26.	736-0222	External Lock Washer
4.	710-0157	Hex Bolt 5/16-24 x 0.75"	27.	736-0123	Flat Washer
5.	710-0599	TT Screw 1/4-20 x 0.5"	28.	736-0607	Lock Washer 1/4
6.	710-0604A	TT Screw 5/16-18 x 0.625"	29.	737-0169	SAE 30W Oil (not serviceable)
7.	710-0654A	TT Sems Screw 3/8-16 x 1.0"	30.	737-0125	Elbow Feeting
8.	710-1237	T Screw #10-32 x 0.625"	31.	741-0516	Flange Bearing
9.	710-1314A	Soc. Hd. Screw 5/16-18 x 0.75"	32.	751-0535	Fuel Line Hose
10.	710-1611B	TT Screw 5/16-18 x 0.75"	33.	751-3071	Fuel Cap
11.	710-1502	AB Screw 8-18 x 0.375"	34.	751-3214	Fuel Tank
12.	711-04143	Battery Hold -Down Rod	35.	751-9986	Muffler
13.	712-0271	Sems Nut	36.	751B213146	Clamp Casing: Throttle
14.	712-0291	Hex Lock Nut 1/4-20	37.	751B222261	Muffler Deflector
15.	712-0397	Wing Nut	38.	783-04100	Tank Bracket
16.	721-0208	Exhaust Gasket	39.	783-04144	Support Bracket RH
17.	721-0331	Sealant: Loctite™ (not serviceable)	40.	783-04260	Support Bracket LH
18.	722-3022	Foam Tape: 0.625 x 0.25 thk.	41.	783-08098	Support Bracket: Transaxle
19.	725-0157	Cable Tie	42.	710-3008	Hex Screw 5/16-18 x 0.75"
20.	726-0205	Hose Clamp	43.	712-0267	Hex Nut 5/16-18
21.	726-0209	Cable Tie	44.	726-0201	Speed Nut
22.	731-04282	Plen	45.	783-0561	Hitch Plate
23.	731-0707A	Battery Cover	46.	725-1704	Battery (not shown)

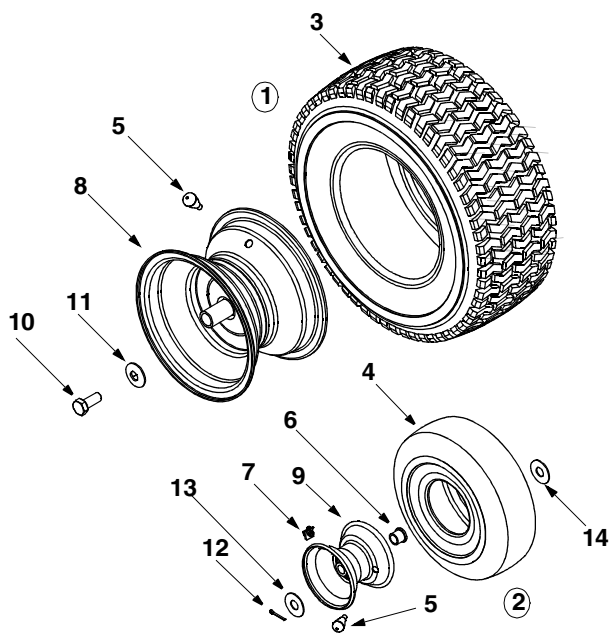


Ref. No.	Part No.	Description
1.	634-0139	Rear Wheel Compl.
2.	634-0169A	Front Wheel Compl.
3.	734-1727	Rear Tire
4.	734-1382	Front Tire
5.	734-0255	Valve: Tubeless Air
6.	737-0211A	Grease Fitting
7.	741-0353	Flange Bearing
8.	634-0138	Rim Assembly
9.	634-0170A	Rim Assembly
10.	710-0627	Hex Bolt 5/16-24 x .75"
11.	736-0242	Beleville Washer
12.	714-0115	Cotter Pin
13.	736-0285	Flat Washer
14.	736-0156	Flat Washer
15.	731-0484A	Hub Cap (not shown)

Model LR927

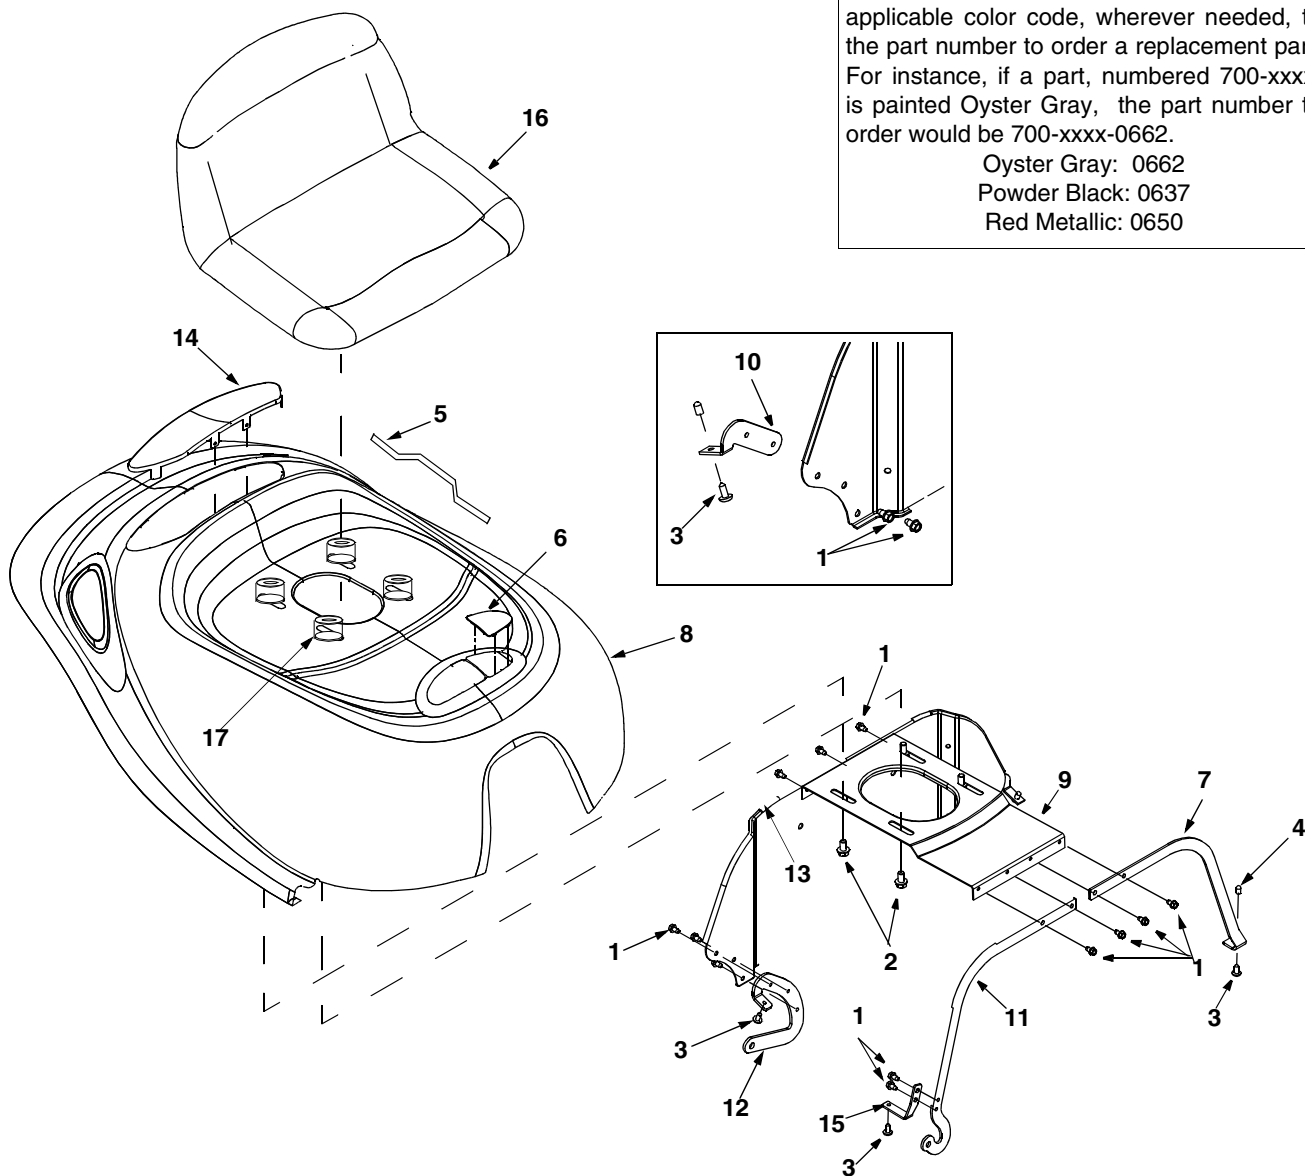


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	710-0599	TT Screw 1/4-20 x 0.5	10.	783-0447	Hood Bracket
2.	710-1315	TT Screw 3/8-16 x 1.25	11.	783-0448	Hood Bracket: Reinforcement
3.	710-1017	Torx AB Screw 1/4-14 x 0.625	12.	783-0449A	Hinge Bracket: Rear
4.	720-0238	Rod End Grip	13.	783-0451A	Pivot Plate: Rear Hood
5.	731-0511	Trim Strip	14.	783-0545	Hood Screen
6.	731-1691A	Grass Bag Lens	15.	783-0562	Hinge Bracket: Front
7.	783-0410	Bracket Reinforcement: Hood	16.	757-04016	Seat: Low Back
8.	783-0445	Hood	17.	738-04008	Spacer
9.	783-0446	Plate: Hood			

Model LR927

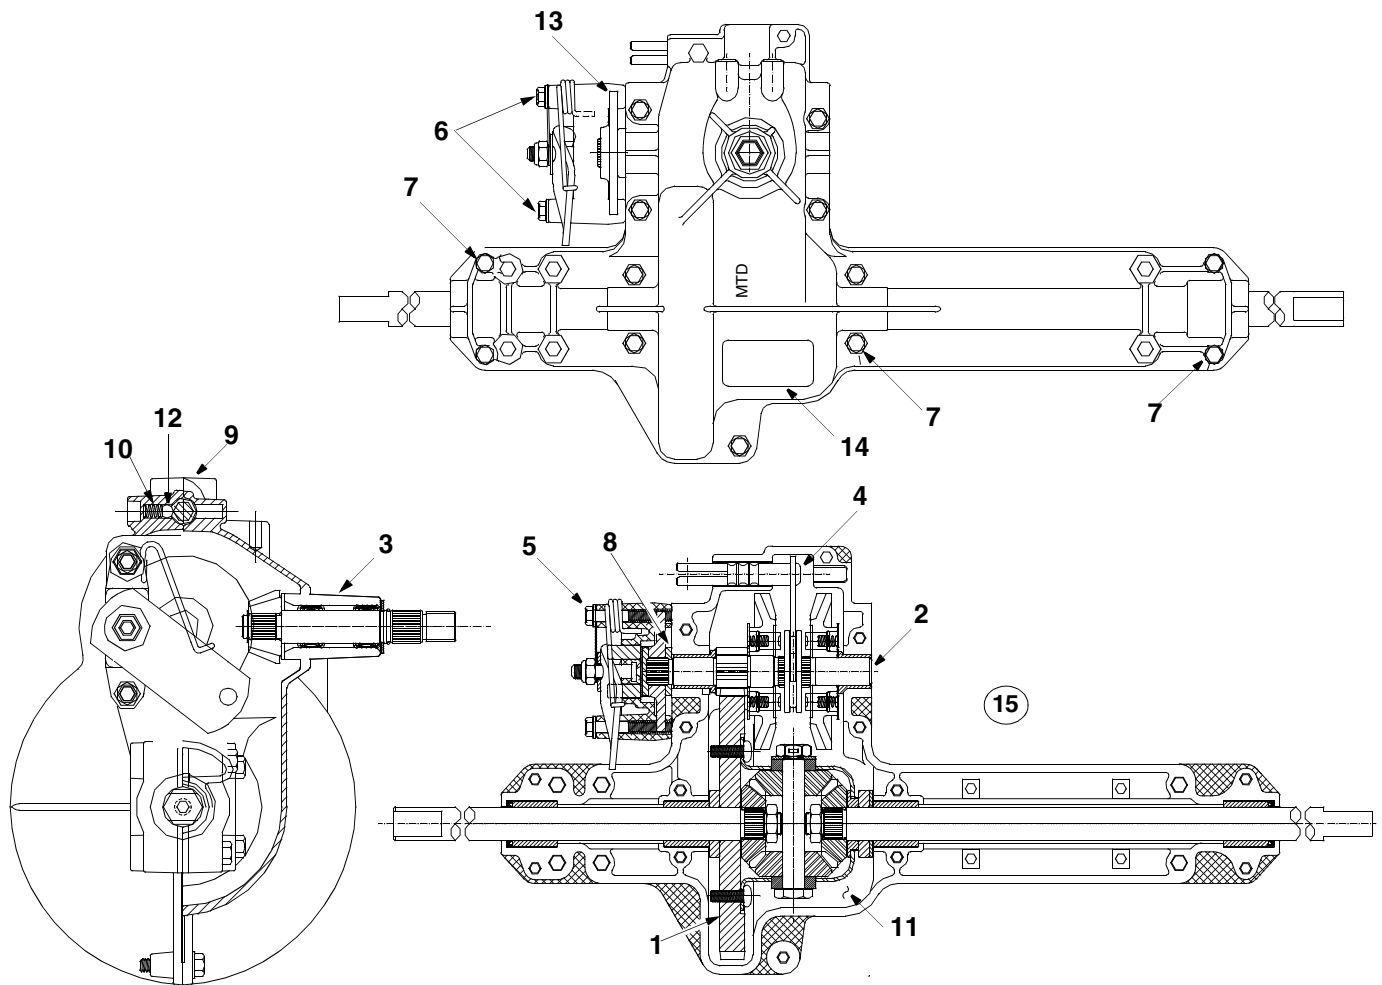

Ref. No.	Part No.	Description
1.	618-0232	Differential Assembly: Single Speed
2.	618-0248	Drive Shaft assembly: LH Brake
3.	618-0072B	Upper Housing Assembly
4.	611-0114	Detent Shaft Assembly
5.	661-0006	Brake Yoke Assembly: LH
6.	710-1206	Hex Washer Hd. TT Screw 1/4-20 x 2.37
7.	710-1325	Hex Washer Hd. TT Screw 1/4-20 x 1.65
8.	717-0678	Brake Puck
9.	719-0313B	Lower Housing
10.	732-0863	Spring Detent
11.	737-0148	Grease
12.	741-0862	Ball Detent
13.	761-0202	Brake Disc
14.	777-6318	Label
15.	618-0251C	Transmission Assembly, Complete

Model LR927

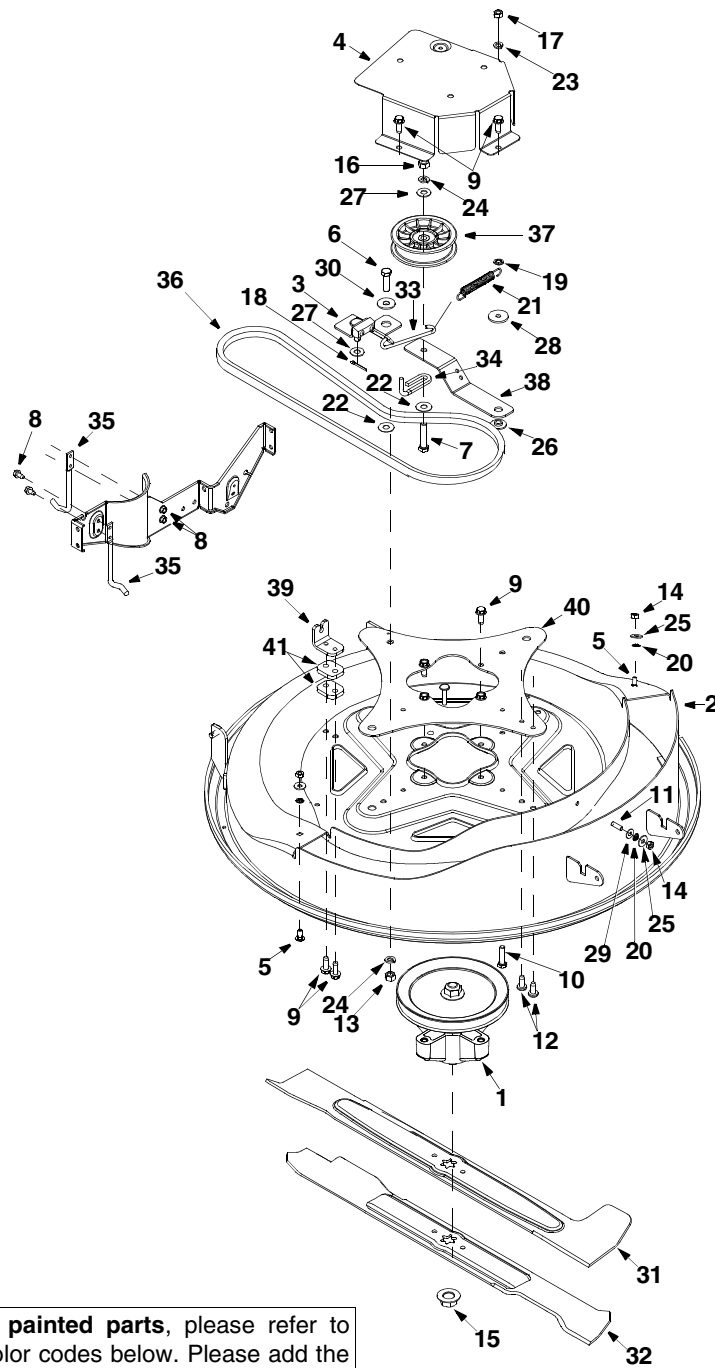


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part, numbered 700-xxxx, is painted Oyster Gray, the part number to order would be 700-xxxx-0662.

Oyster Gray: 0662
 Powder Black: 0637
 Red Metallic: 0650


Model LR927

Ref. No.	Part No.	Description
1.	618-0250	Spindle Assembly
2.	683-0150E	Deck Assembly
3.	683-0159	Brake Bracket Assembly
4.	683-0173	Deck Belt Cover
5.	710-0134	Carriage Screw 1/4-20 x .62"
6.	710-0191	Hex Bolt 3/8-24 x 1.25"
7.	710-0347	Hex Screw 3/8-16 x 1.75 "
8.	710-0599	Self-Tapp. Screw 1/4-20 x .5"
9.	710-0650	Self-Tapp. Screw 5/16-18 x .75"
10.	710-0672	Hex Cap Scr. 5/16-24 x 1.25"
11.	710-0932	Carriage Screw
12.	710-1611B	Torx Screw 5/16-18 x .75"
13.	712-0241	Hex Nut 3/8-24
14.	712-0287	Hex Nut 1/4-20
15.	712-0417A	Flange Nut 5/8-18
16.	712-3017	Hex Nut 3/8-16
17.	712-3057	Hex Nut 5/16-24
18.	714-0115	Cotter Pin
19.	726-0201	Speed Nut
20.	726-0233	Push Nut
21.	732-0429A	Extension Spring
22.	736-0101	Flat Washer 3/8 x 1.00 x .030"
23.	736-0119	Lock Washer 5/16
24.	736-0169	Lock Washer 3/8
25.	736-0173	Flat Washer
26.	736-0289	Bushing
27.	736-0300	Flat Washer .406 x .875 x .059"
28.	736-0343	Flat Washer .330 x 1.25 x .120"
29.	736-3020	Flat Washer
30.	738-0968	Spacer
31.	742-0578	Blade: 27.5" Bagging
32.	742-0651	Three-in-one Blade
33.	747-0957	Link Rod
34.	747-0972	Belt Keeper
35.	747-1172	Belt Keeper
36.	754-0221	V Belt
37.	756-0627	Flat Idler Pulley
38.	783-0463A	Idler Bracket
39.	783-0529	Cable Bracket
40.	783-0569B	Deck Plate
41.	783-0594	Deck Cable Plate

Model LR927

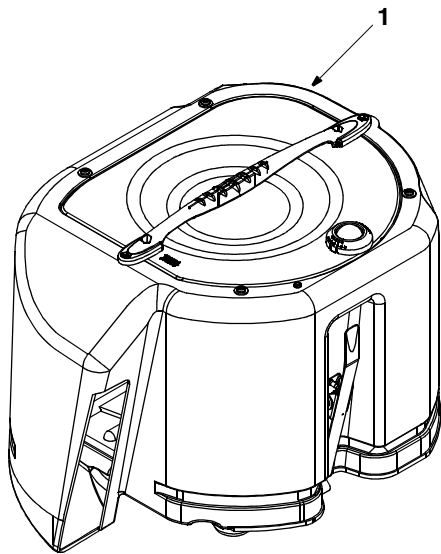


Ref. No.	Part No.	Description
1.	631-0084	Grass Bag Assembly
2.	710-0286	Pan Hd. Machine Screw 1/4-20 x 0.5
3.	710-0564	Hex Screw 1/4-20 x 2.75
4.	710-0825	Hex Screw 1/4-20 x 3.75
5.	712-0298	Jam Nut
6.	712-0397	Wing Nut
7.	726-0271	Push Nut
8.	731-1743A	Chute: Bagger
9.	731-1744	Discharge Chute: Side-Discharge
10.	731-1745A	Mulching Plug
11.	736-0173	Flat Washer
12.	736-0329	Lock Washer
13.	783-0645A	Deflector Plate: Bagger Chute

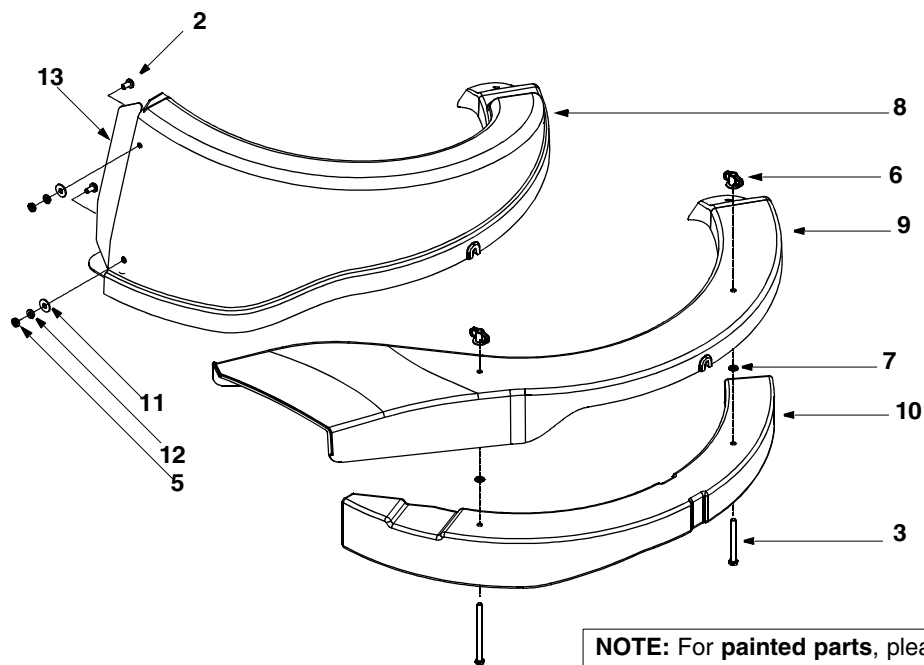


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Powder Black, the part number to order would be 700-xxxx-0637.

Powder Black: 0637
Oyster Gray: 0662
Metallic Red: 0650

Model LR927

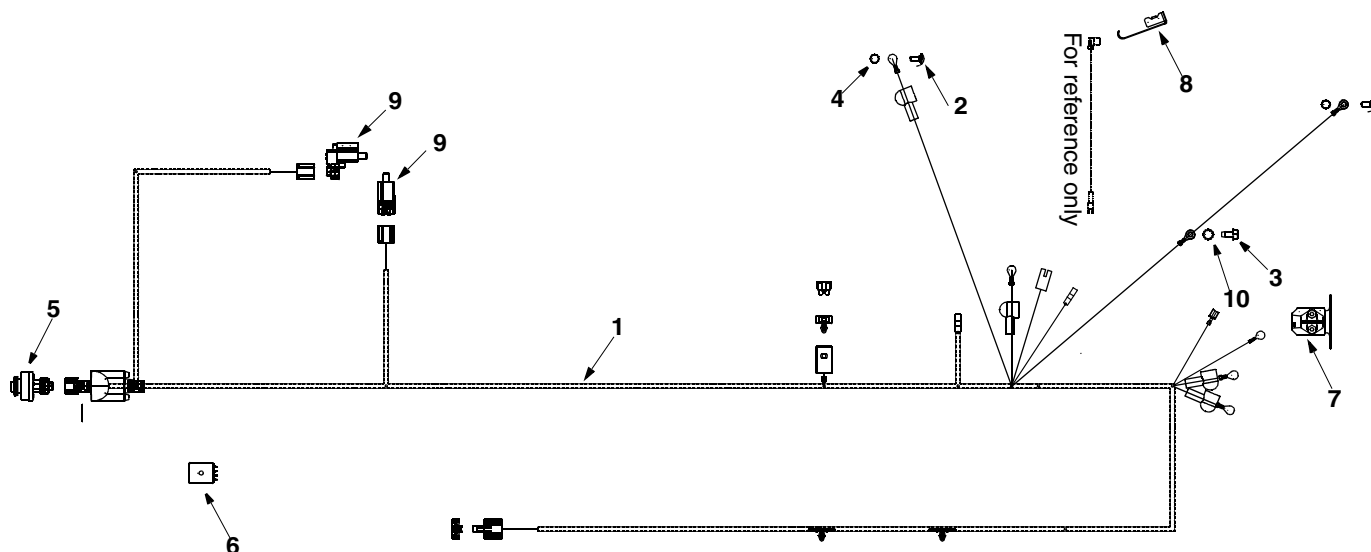

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	629-04055	Harness Assembly w/o relays	7.	725-1426	Solenoid 12 volt, 100 amp.
2.	710-0134	Carriage Screw 1/4-20 x 0.62"	8.	725-1643	Spring Switch
3.	710-3021	D Screw 5/16-18 x 0.625"	9.	725-1657A	Switch: Interlock
4.	712-0271	Sems Nut 1/4-20	10.	736-0607	Lock Washer 5/16
5.	725-0267	Ignition Switch: 5 Pin	11.	725-1704	Battery (not shown)
6.	725-04040	Seat Switch			

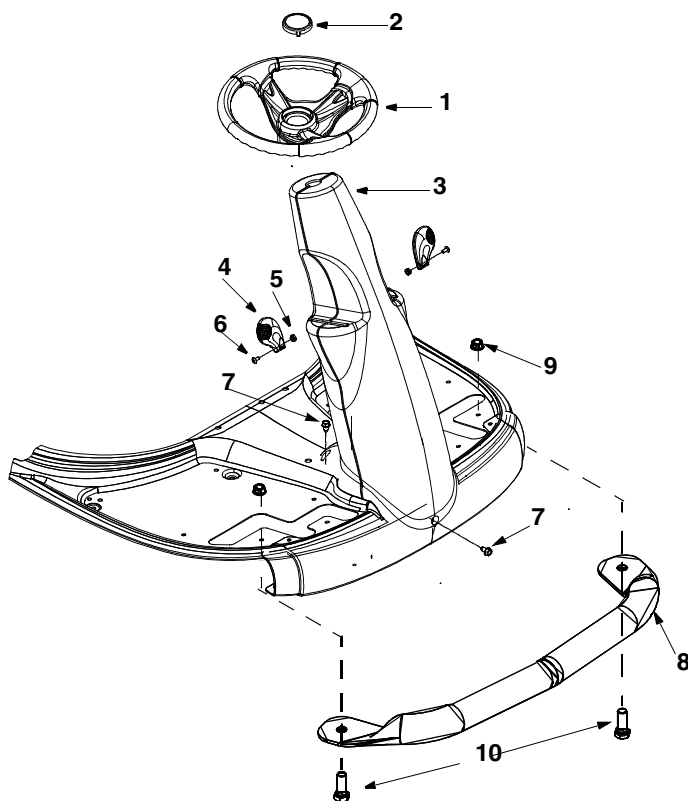

Ref. No.	Part No.	Description
1.	731-2624	Steering Wheel: 3Spoke
2.	731-2625	Steering Wheel Cap
3.	731-1919	Steering Column: Black
4.	731-1857	Control Knob
5.	712-0142	Hex Nut 8-32
6.	710-3217	Pan Head Machine Screw #8-32
7.	710-0599	Hex Screw TT 1/4-20 x .50"
8.	749-1099	Bumper Tube: Front
9.	712-0431	Lock Nut
10.	710-0514	Hex Screw 3/8-16 x 1.0"

Safety & Decorative Labels

