



SECTION 12: PARTS LIST

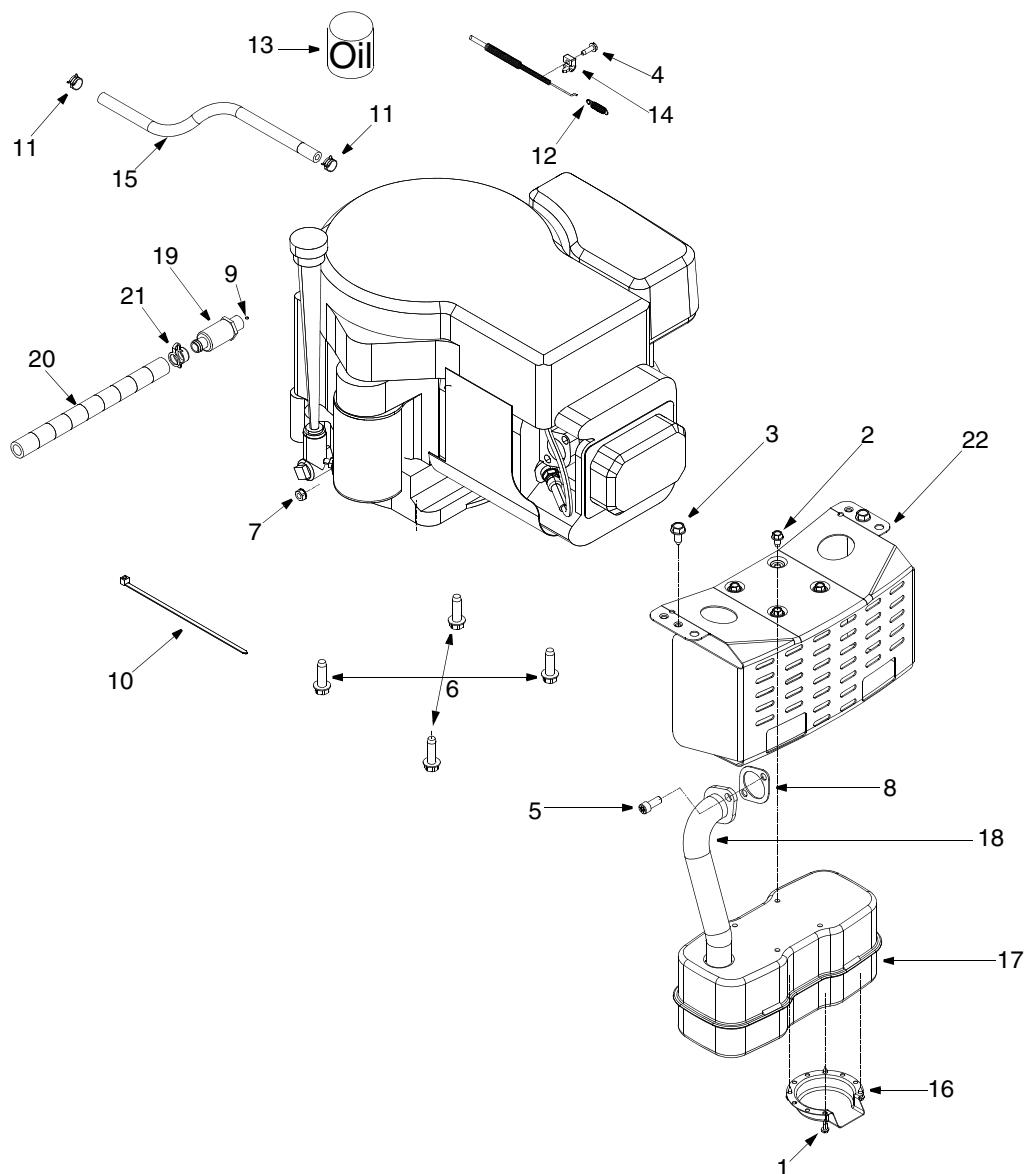

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	710-0227	AB Screw #8-18 x 0.5	12	732-0966	Extension Spring
2	710-0599	TT Screw 1/4-20 x 0.5	13	737-0169	SAE 30W Oil
3	710-0726	AB Screw 5/16-12 x 0.5	14	751B213146	Throttle Clamp
4	710-1237	T screw #10-32 x 0.625	15	751-0535	Fuel Line Hose
5	710-1314A	Socket Hd Scr. 5/16-18 x .750	16	751-0564A	Muffler Deflector
6	710-1315	TT Screw 3/8-16 x 1.25	17	751-0617A	Muffler
7	712-0271	Sems Nut	18	751-0619A	Exhaust Pipe
8	721-0208	Exhaust Gasket	19	751-3140	Oil Drain
9	721-0331	Sealant: Loctite™	20	751-3141	Oil Drain Extension Hose
10	725-0157	Cable Tie	21	751-3142	Oil Drain Cap
11	726-0205	Hose Clamp	22	783-0615D	Muffler Bracket

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

Model Series 606G

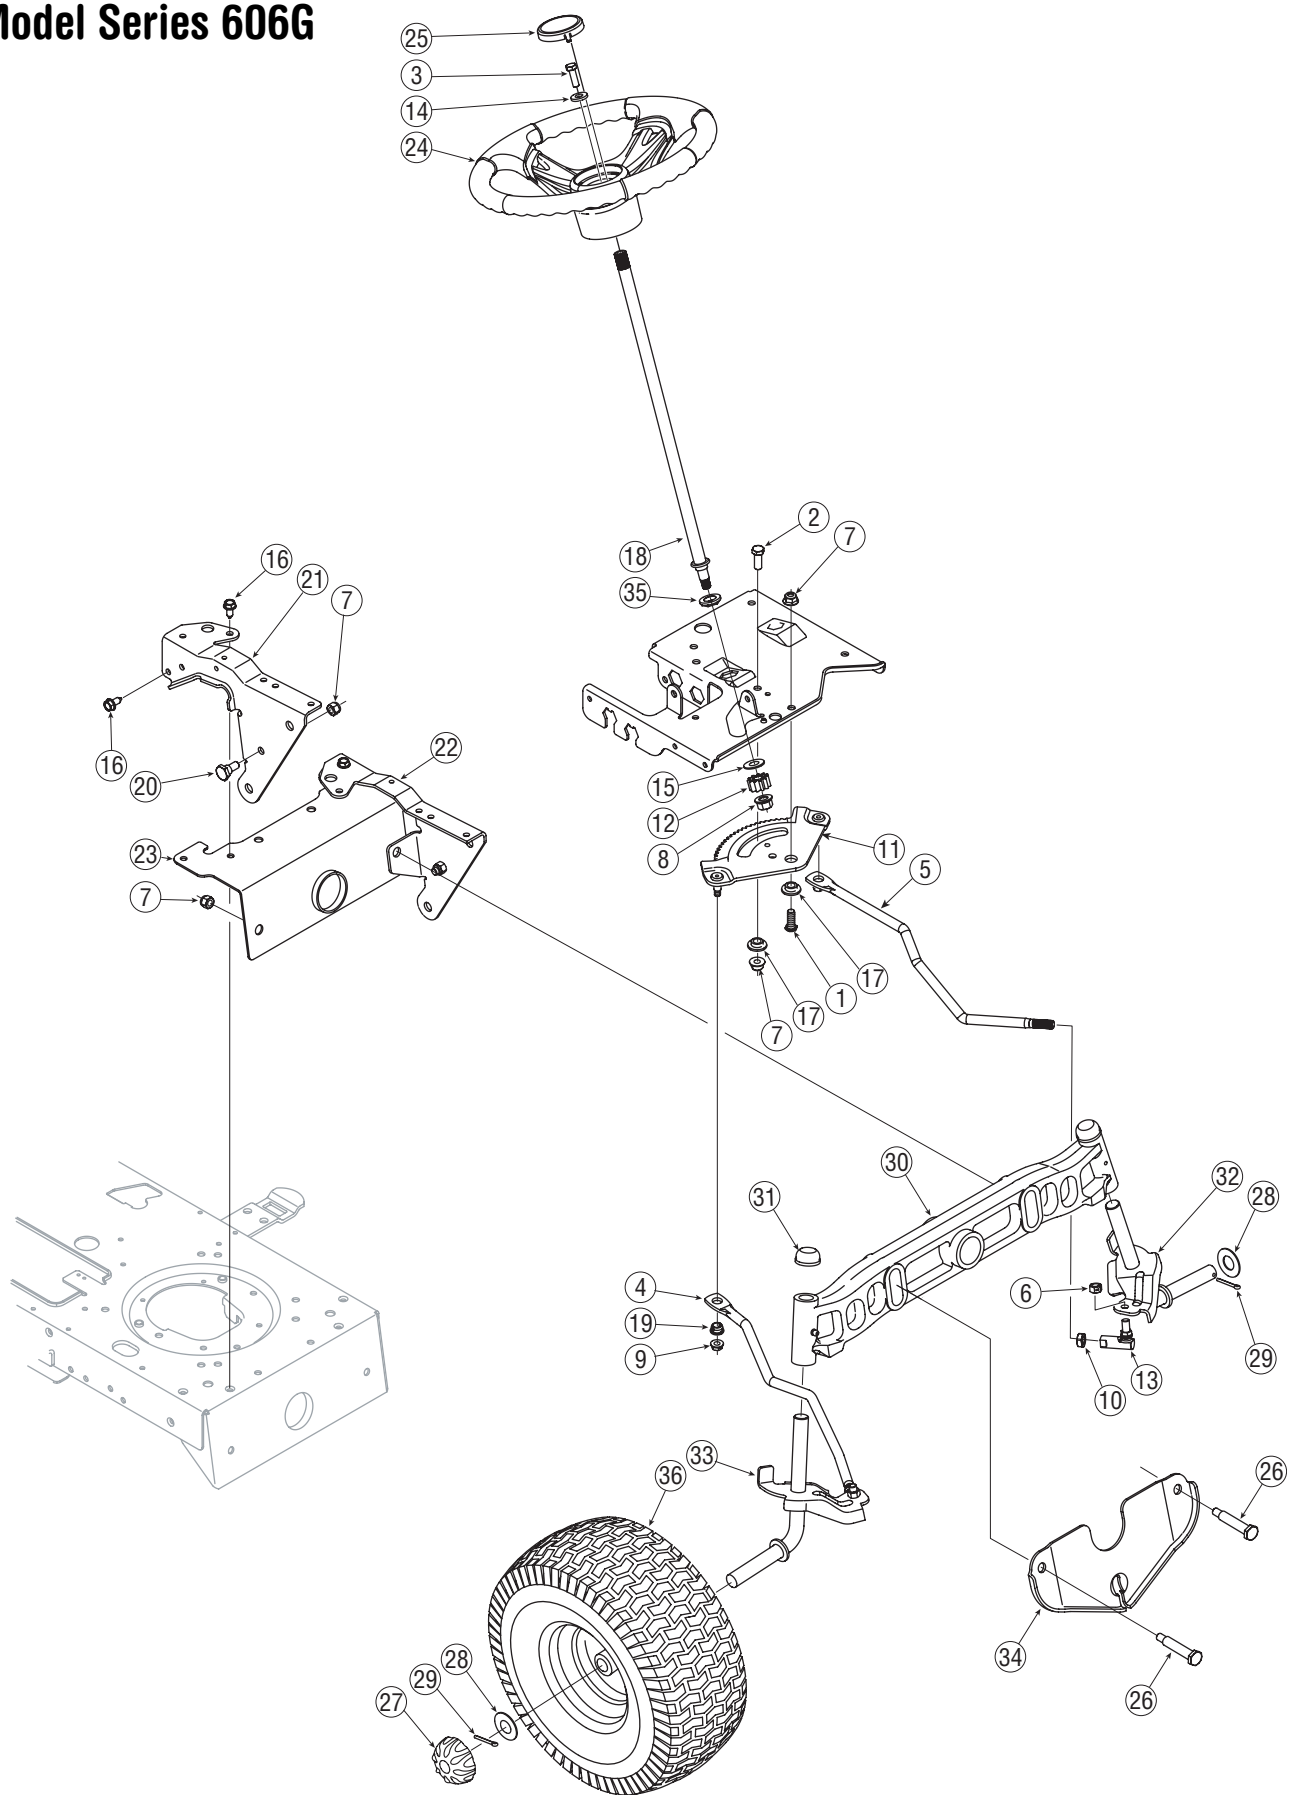


Models 606G

REF. NO.	PART NO.	DESCRIPTION
1	710-04095	Hex Screw, 3/8-16, 1.00, Gr5
2	710-0514	Hex Screw, 3/8-16, 1.00, Gr5
3	710-0643	Hex Screw, 5/16-18, 1.00, Gr5
4	711-1408	Link, Drag, RH
5	711-1409A	Link, Drag, LH
6	712-0214	Nut, Hex Lock, 3/8-24
7	712-04065	Nut, Flange Lock, 3/8-16, Grf, Nylon
8	712-0459	Nut, Flange Lock, 7/16-20
9	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
10	712-0240	Nut, Jam, 7/16-20, Gr2
11	717-1550E	Gear, Steering, 11/90 Ratio
12	717-1554	Gear, Pinion, Steering
13	723-0448A	Ball Joint, 7/16-20, Lock
14	736-3004	Washer, Flat,.406 x.875 x.105
15	736-3084	Washer, Flat,.51 x 1.12 x.06
16	710-0726	Screw, 5/16-12, 0.750
17	738-04154	Spacer, Shoulder,.38 x 1.00 x.31
18	738-1001A	Shaft, Steering,.625 OD x 24.25 Lg
19	741-0475	Plastic Bushing.380 ID
20	738-0143	Screw, Shoulder,.498 x.340, 3/8-16
21	783-0726D	Pivot Bracket, Support RH
22	783-0727C	Pivot Bracket, Support LH
23	783-0728	Pivot Bracket, Bar
24	631-04008	Steering Wheel, 3 Spoke, Soft Grip
25	731-04039	Steering Wheel Cap
26	738-04128	Shoulder Screw,.5 x 2.380, 3/8-16
27	734-2290A	Deluxe Hub Cap
28	736-0316	Flat Washer,.78 x 1.589 x.06
29	714-04039	Cotter Pin, 5/32 x 1.25
30	719-04105	Cast Iron Pivot Bar
31	726-0341	Push Cap
32	638-04006	LH Axle Assembly,.750
33	638-04005	RH Axle Assembly,.750
34	783-04568	Deck Hanger Bracket, Front
35	741-0656A	Hex Flange Bearing
36	634-04086	Wheel Assembly Complete, 15 x 6
	734-1731	Tire Only 15 x 6 x 6
	634-04081	Rim Only w/ Valve Stem

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model Series 606G

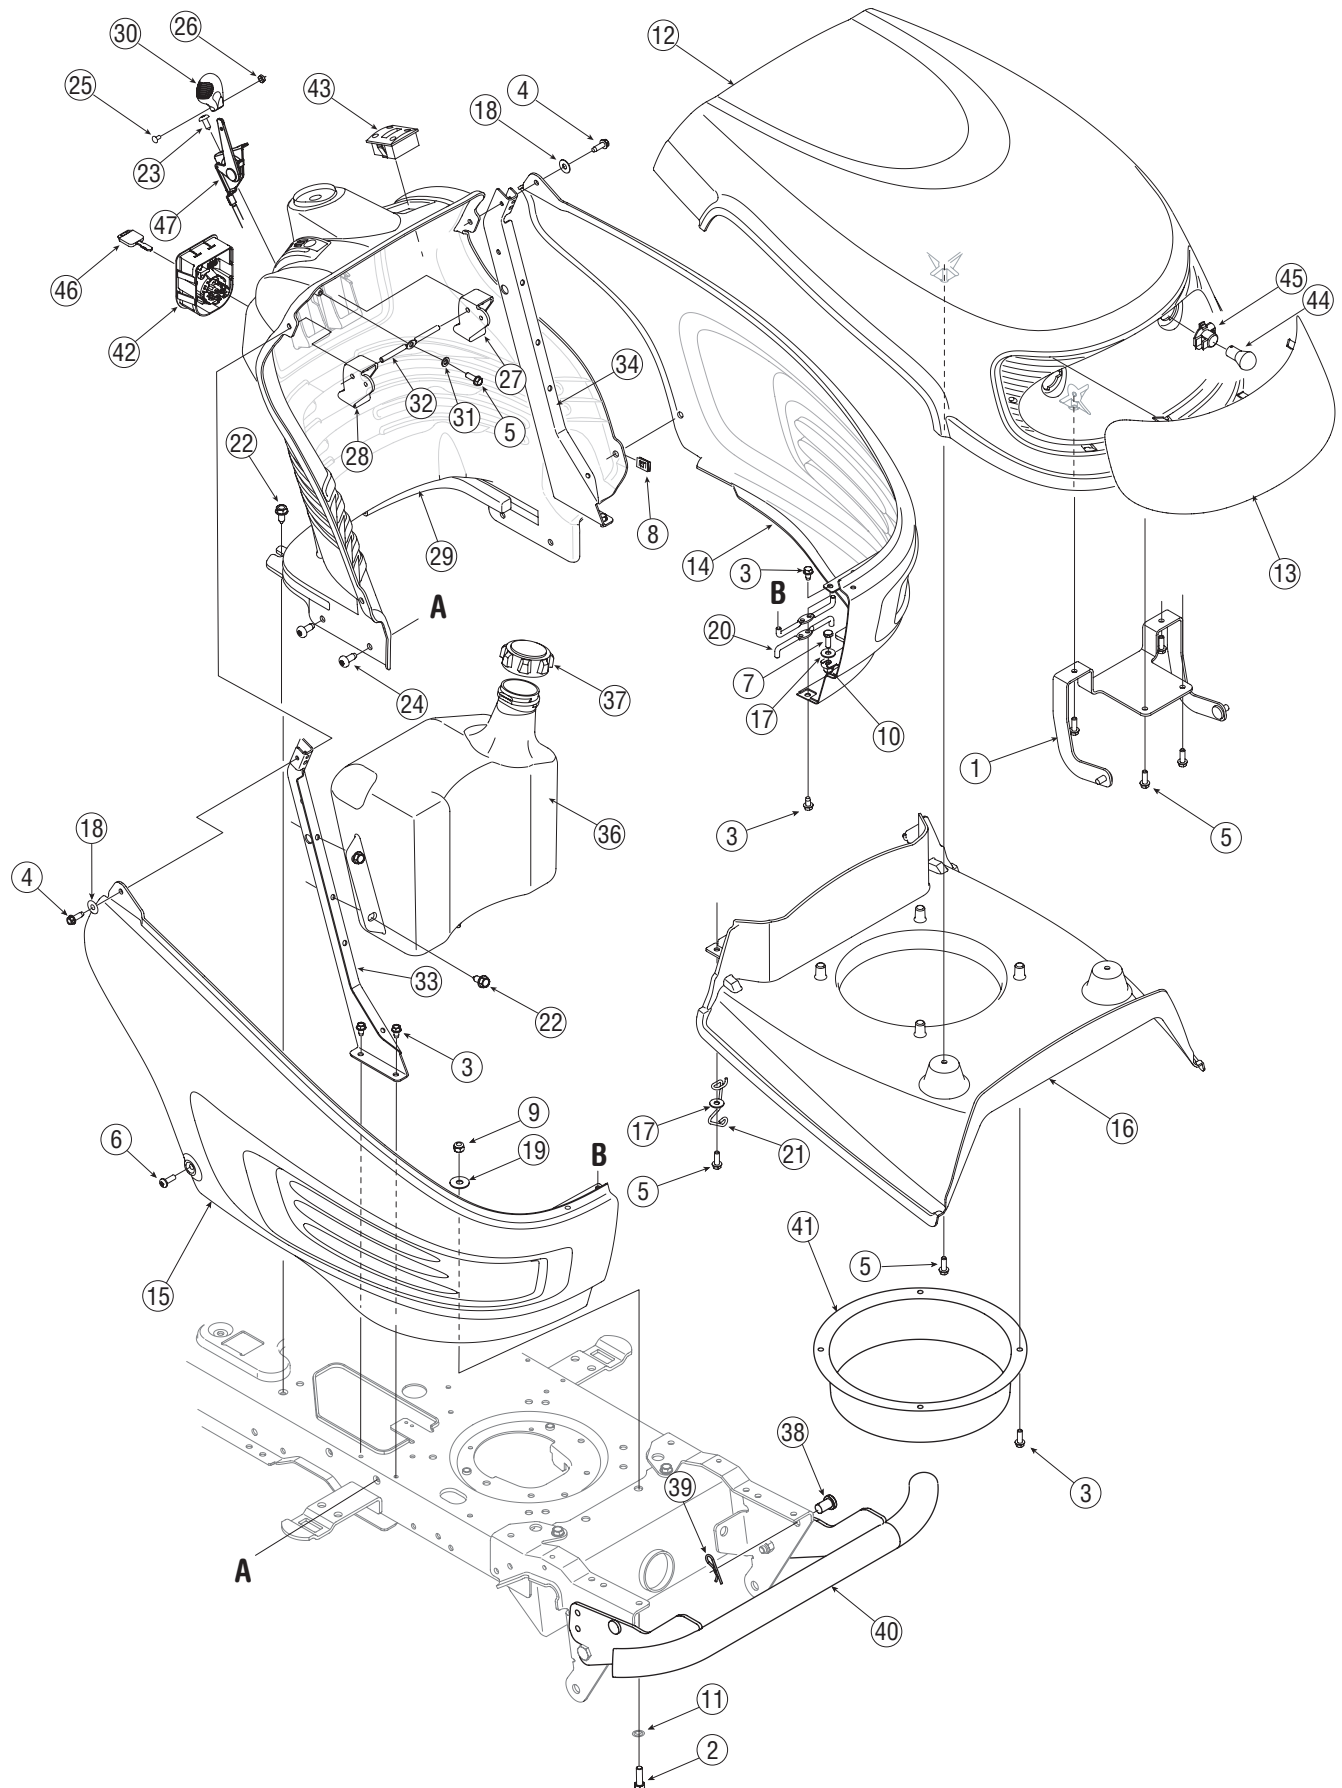


Model Series 606G

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	683-0305	Bracket Assembly, Hood	28	731-04214	Cruise Control Lever
2	710-0376	Hex Screw, 5/16-18, 1.00, Gr5	29	731-05002	Dash Panel (Models w/ Manual PTO)
3	710-0599	Screw, 1/4-20, 0.500	30	731-1857	Control Knob
4	710-0642	Screw, 1/4-20, 0.750	31	736-0142	Washer, Flat,.281 x.50 x.063
5	710-0895	Screw, 1/4-15, 0.750	32	747-1155	Rod, Brake / Cruise Pivot
6	710-0924	Screw, Machine, 1/4-20, 0.750	33	783-04285B	Support Plate, Dash, RH
7	710-3015	Hex Screw, 1/4-20,.75, Gr5	34	783-04323B	Support Plate, Dash, LH
8	712-0292	Nut, Clip, 1/4-20	36	751-0659C	Fuel Tank, 2 Gal.
9	712-04063	Nut, Flange Lock, 5/16-18, Grf, Nylon		751-0658E†	Fuel Tank, 3 Gal.
10	712-04064	Nut, Flange Lock, 1/4-20, Grf, Nylon	37	751-0603	Fuel Cap (Fits either fuel tank)
11	726-0201	Nut, Speed,.3125 ID	38	711-0332	Pin, Clevis,.50 x.78
12	731-2283A	Hood	39	714-0145	Pin, Click,.092 x 1.64
13	731-2286	Lens	40	768-0010B	Bumper
14	731-2307B	Side Panel, LH	41	731-2232A	Bellow
15	731-2308B	Side Panel, RH	42	725-04227	Ignition Switch Module
16	731-05219	Plenum, Red	43	725-04036A	Systems Indicator Monitor w/ Hour Meter
17	736-0173	Washer, Flat,.28 x.74 x.063	44	725-0963	Miniature Lamp, 12V
18	736-0342	Washer, Flat,.283 x.75 x.030	45	725-1649	Socket, Lamp
19	736-3078	Washer, Flat,.344 x 1.0 x.063	46	725-1744	Key, Ignition
20	747-04301	Support, Side Panel		725-1745	Key w/ Plastic Cover, Ignition
21	747-2127	Rod, Hood Latch	47	746-1084	Throttle/ Choke Cable
22	710-0726	Screw, 5/16-12, 0.750		746-1086†	Throttle Cable, 39"
23	710-1017	Screw, 1/4-14, 0.625	48	731-1999	Choke Plug (Not Shown)
24	710-1611B	Screw, 5/16-18, 0.750		746-1085A†	Choke Knob w/ Cable, 37.5"
25	710-3217	Screw, Machine, #8-32, 0.375	—	629-04083	Headlight Wire Harness
26	712-0142	Nut, Hex, #8-32	—	629-04104	Tractor Wire Harness
27	731-04213	Brake Lever	—	629-04144	Jumper Harness Assembly

† If Equipped

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model Series 606G

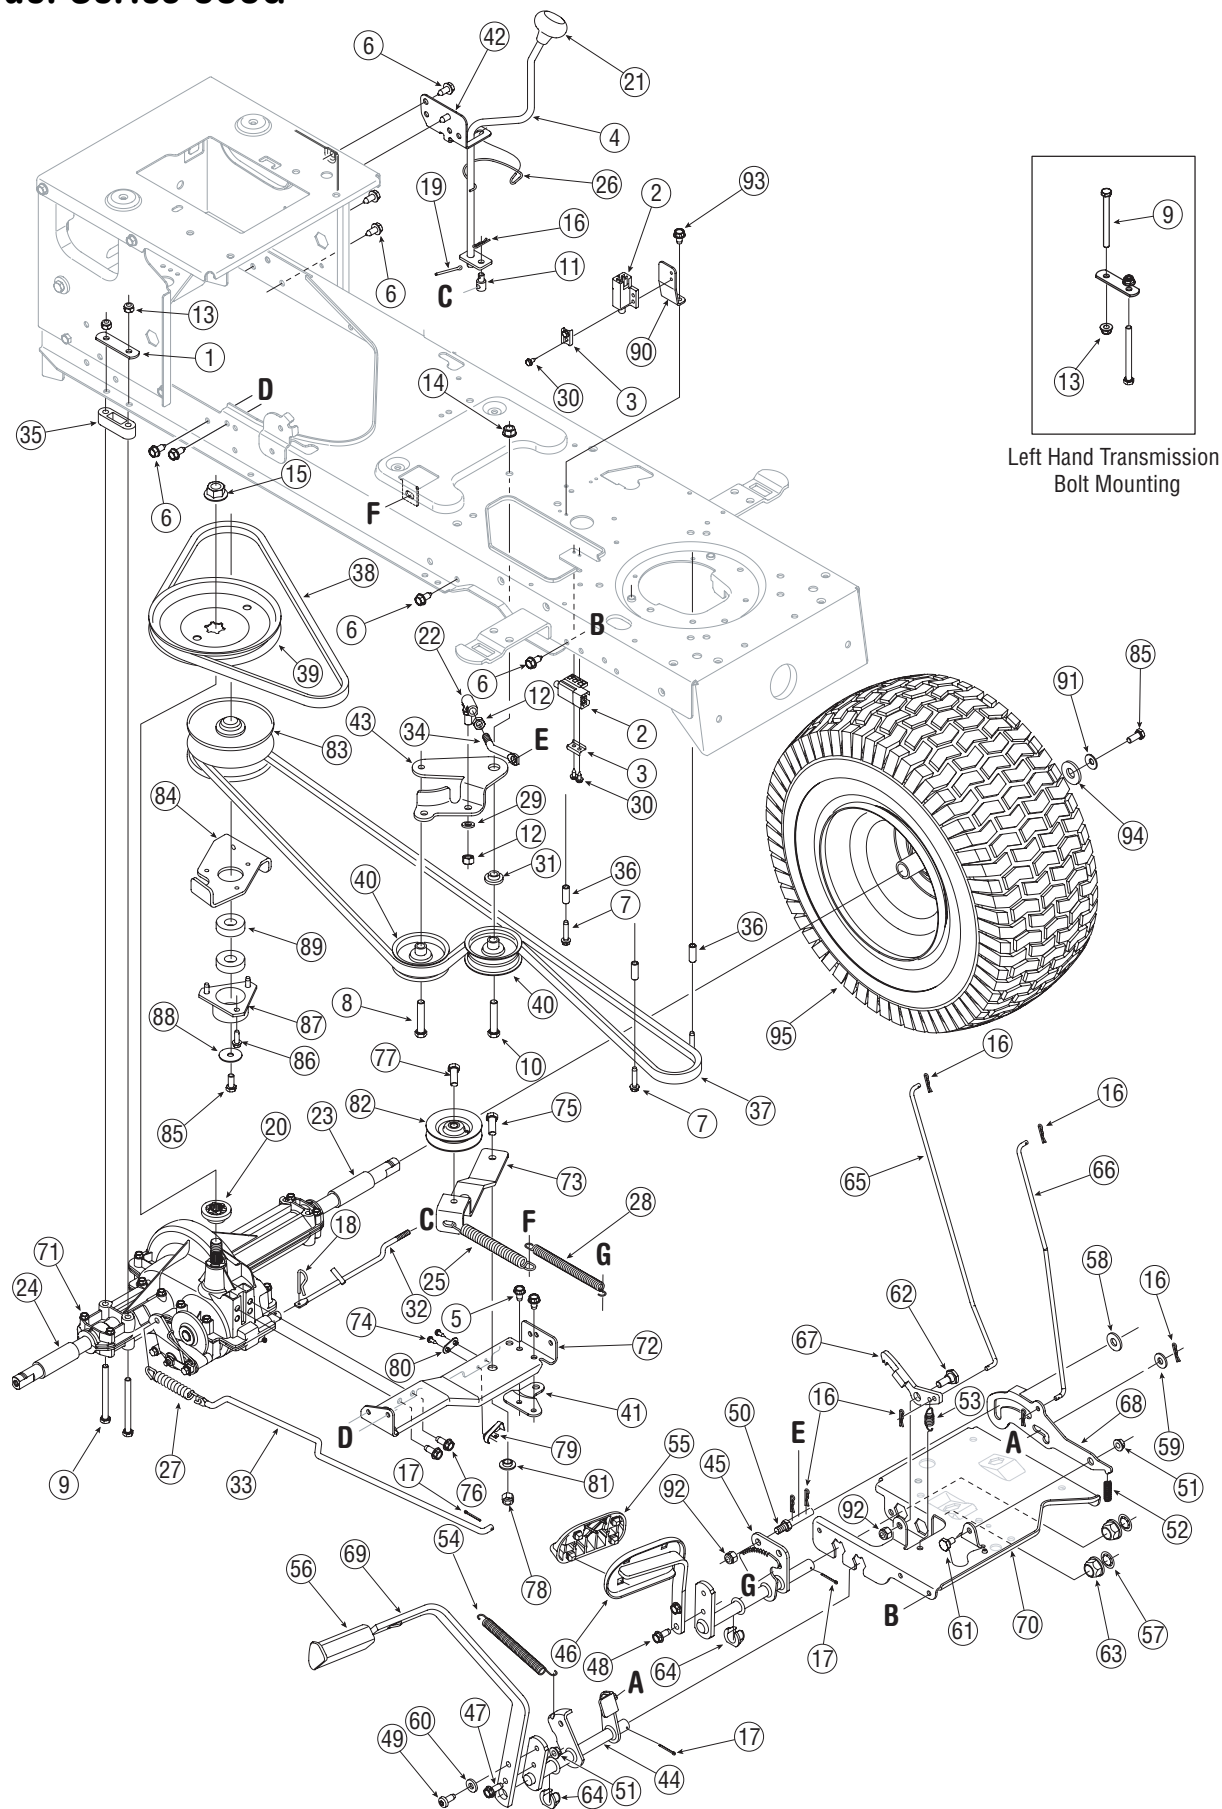

Model Series 606G

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17840	Mounting Bracket, Transaxle	50	711-04159B	Pin, 3/8-16 x 2.68
2	725-04039	Switch, Interlock	51	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
3	17962	Plate, Switch	52	732-0335	Spring, Compression,.405 x 1.17
4	647-04020	Lever Assembly, Shift	53	732-0955	Spring, Extension,.50 OD x 1.41
5	710-0607	Screw, 5/16-18, 0.500	54	732-0963	Spring, Extension,.50 OD x 6.37
6	710-0726	Screw, 5/16-12, 0.750	55	735-0662	Pad
7	710-0809	Screw, 1/4-20, 1.250	56	735-3049	Pad, Brake
8	710-1007	Screw, Sems, 3/8-16, 1.500	57	736-0187	Washer, Flat,.64 x 1.24 x.06, Ht
9	710-1266	Screw, 5/16-18, 3.50, Gr5	58	736-0262	Washer, Flat,.385 x.870 x.092
10	710-3144	Screw, 3/8-16, 2.00, Gr5	59	736-0300	Washer, Flat,.406 x.875 x.059
11	711-0736	Adjustment Ferrule 1/4-20 x 1.	60	736-3008	Washer, Flat,.344 x.750 x.120
12	712-0241	Nut, Hex, 3/8-24, Gr5	61	738-0155	Screw, Shoulder.437 Dia x.162
13	712-04063	Nut, Flange Lock, 5/16-18, GrF, Nylon	62	738-0380	Screw, Shoulder,.50 x.27 Lg, 3/8-16
14	712-0431	Nut, Flange Lock, 3/8-16, GrF, Nylon	63	741-0225	Bearing, Hex Flange
15	712-0700	Nut, Flange, 9/16-18, Gr2	64	741-3065B	Split Bearing, Hex Flange
16	714-0104	Pin, Cotter,.072 Dia. x 1.13	65	747-04093	Rod, Brake Lock
17	714-0111	Pin, Cotter, 3/32, 1.0	66	747-04096	Rod, Cruise Control
18	714-0209	Cotter Pin, Internal,.125 Dia.	67	748-04039B	Latch, Cruise Control
19	714-0470	Pin, Cotter, 1/8 x 1.25	68	683-04186	Bracket, Lockout
20	718-0758A	Pulley Hub, 5/8 Spline	69	783-0773A	Ped, Brake
21	720-04028	Knob, Shift	70	783-04612	Bracket, Steering Support
22	723-3018	Ball Joint	71	618-04034	Transmission, Single Speed
23	731-04602	Sleeve,.758 x.821 x 3.3125	72	683-04055A	Bracket Assembly, Torque
24	731-04604	Sleeve,.758 x.821 x 2.4375	73	683-04130	Bracket, Idler
25	732-0384	Spring, Extension,.62 Dia x 6.12	74	710-0227	Screw, #8-18 x.50
26	732-0525	Spring Clip, Shifter	75	710-0514	Screw, 3/8-16, 1.00
27	732-0716	Spring, Extension,.59 OD x 4.00	76	710-0604A	Screw, 5/16-18,.625
28	732-0963	Spring, Extension,.50 Dia x 6.37	77	710-1315	Screw, 3/8-16, 1.250
29	736-0169	Washer, Lock, 3/8	78	712-0130	Nut, Lock, 3/8-16, Nylon
30	710-0224	Screw, #10-16,.50	79	725-1644	Switch Spring, Short
31	738-0372B	Spacer, Shoulder, 1.00 x.38 x.38	80	726-0320	Plate, Insulator
32	747-04146	Rod, Shift	81	750-04294	Spacer, Shoulder
33	747-04164	Rod, Brake	82	756-0116A	Pulley, V-Type, 3.06
34	747-1127	Idler Rod, Adjustable, 3/8	83	656-04015	Pulley Assembly, Variable Speed
35	748-0334	Spacer,.68	84	683-04129	Bracket, Pulley
36	750-0566A	Spacer,.260 x.372 x 1.030	85	710-0627	Screw, 5/16-24,.750
37	754-0467	Belt, V-Type	86	710-0642	Screw, 1/4-20,.750
38	754-0468	Belt, V-Type	87	718-04012	Cup, Bearing
39	756-04002	Pulley, V-Type, 7.25 Dia.	88	736-0362	Washer, Flat
40	756-0981B	Idler Pulley, Flat 2.75 OD	89	741-0600	Ball Bearing
41	783-04283	Bracket, Shift	90	783-04707	Switch Bracket, Parking Brake
42	783-04360	Bracket, Shift, F-N-R	91	736-0242	Washer, Bell,.340 x.872 x.060
43	783-04442	Idler Bracket, Center Double	92	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon
44	647-0031B	Control Assembly, Brake	93	710-0599	Screw, 1/4-20 x.500
45	647-0032A	Control Assembly, Speed	94	736-0430	Flat Washer,.350 x 1.59 x.062
46	683-0266	Pedal Assembly	95	634-0104	Wheel Assembly Complete, 20 x 8 x 8
47	710-0650	Screw, 5/16-18, 0.875		734-1730	Tire Only 20 x 8 x 8
48	710-1260A	Screw, 5/16-18, 0.750		734-0603A	Rim Only w/ Valve Stem
49	710-1611B	Screw, 5/16-18, 0.750			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.




Model Series 606G

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17962	Plate, Switch	26	783-0744A	Stop Bracket, Engagement
2	647-04036	Lever Assembly, Engagement	27	683-04173	Frame Assembly, Lower
3	710-0809	Screw, 1/4-20 x 1.250	28	710-0607	Screw, 5/16-18, 0.500
4	710-0859	Screw, 3/8-16, 2.50	29	710-0642	Screw, 1/4-20, 0.750
5	710-0276	Screw, Carriage, 5/16-18, 1.00	30	710-3005	Screw, 3/8-16, 1.25, Gr5
6	710-1260A	Screw, 5/16-18 x.750	31	712-04064	Nut, Flange Lock, 1/4-20, GrF, Nylon
7	710-3157A	Screw, 7/16-20, 3.25, Gr5	32	712-3006	Nut, Hex, 1/4-20, Gr5
8	710-0726	Screw, 5/16-12, 0.750	33	732-04035	Spring, Compression, 1.28 OD x 3.125
9	714-0145	Click Pin	34	736-0222	Washer, Lock, 1/4, External
10	732-04248	Extension Spring,.38OD x 3.9LG	35	736-0329	Washer, Lock, 1/4
11	736-0171	Lock Washer, 7/16	36	738-04058	Spacer, Shoulder,.38 x 1.0 x.70
12	746-04092	Deck Engagement Cable	37	747-04121A	Hold Rod, Battery
13	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon	38	783-0349	Battery Tray
14	750-0566A	Spacer,.260 x.372 x 1.030LG	39	783-04329A	Seat Bracket, Frame
15	714-0470	Pin, Cotter, 1/8 x 1.25	40	783-04375A	Frame, Upper
16	726-0201	Nut, Speed,.3125 ID	41	710-0599	Screw, 1/4-20, 0.50
17	731-2111A	Knob, PTO	42	725-1426	Solenoid, 12V, 100 Amp
18	783-04590	Cable Bracket	43	725-04039	Switch, Interlock
19	736-0322	Washer, Flat,.450 x1.250 x.164	44	710-0224	Screw, #10-16,.50
20	741-0708	Bearing, Flange, Hex Split.500 ID	45	712-04063	Nut, Flange, Lock Nut, 5/16-18
21	747-04307	Keeper Rod, Belt	46	712-0271	Nut, Sems, 1/4-20
22	747-1112D	Engagement Handle, Deck	47	725-1737A	Battery, 190 CCA
23	748-0415B	Spacer,.385 ID x.635 OD x 1.54	48	738-1132	Screw, Shoulder,.250 x.15, 1/4-20
24	750-0956	Spacer, 1.010 x 1.400 x.825	49	710-0703	Screw, Carriage, 1/4-20,.75
25	756-04064A	Pulley, Engine, 3.39 x 6.12 Diameter	50	712-3087	Nut, Wing, 1/4-20

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model Series 606G

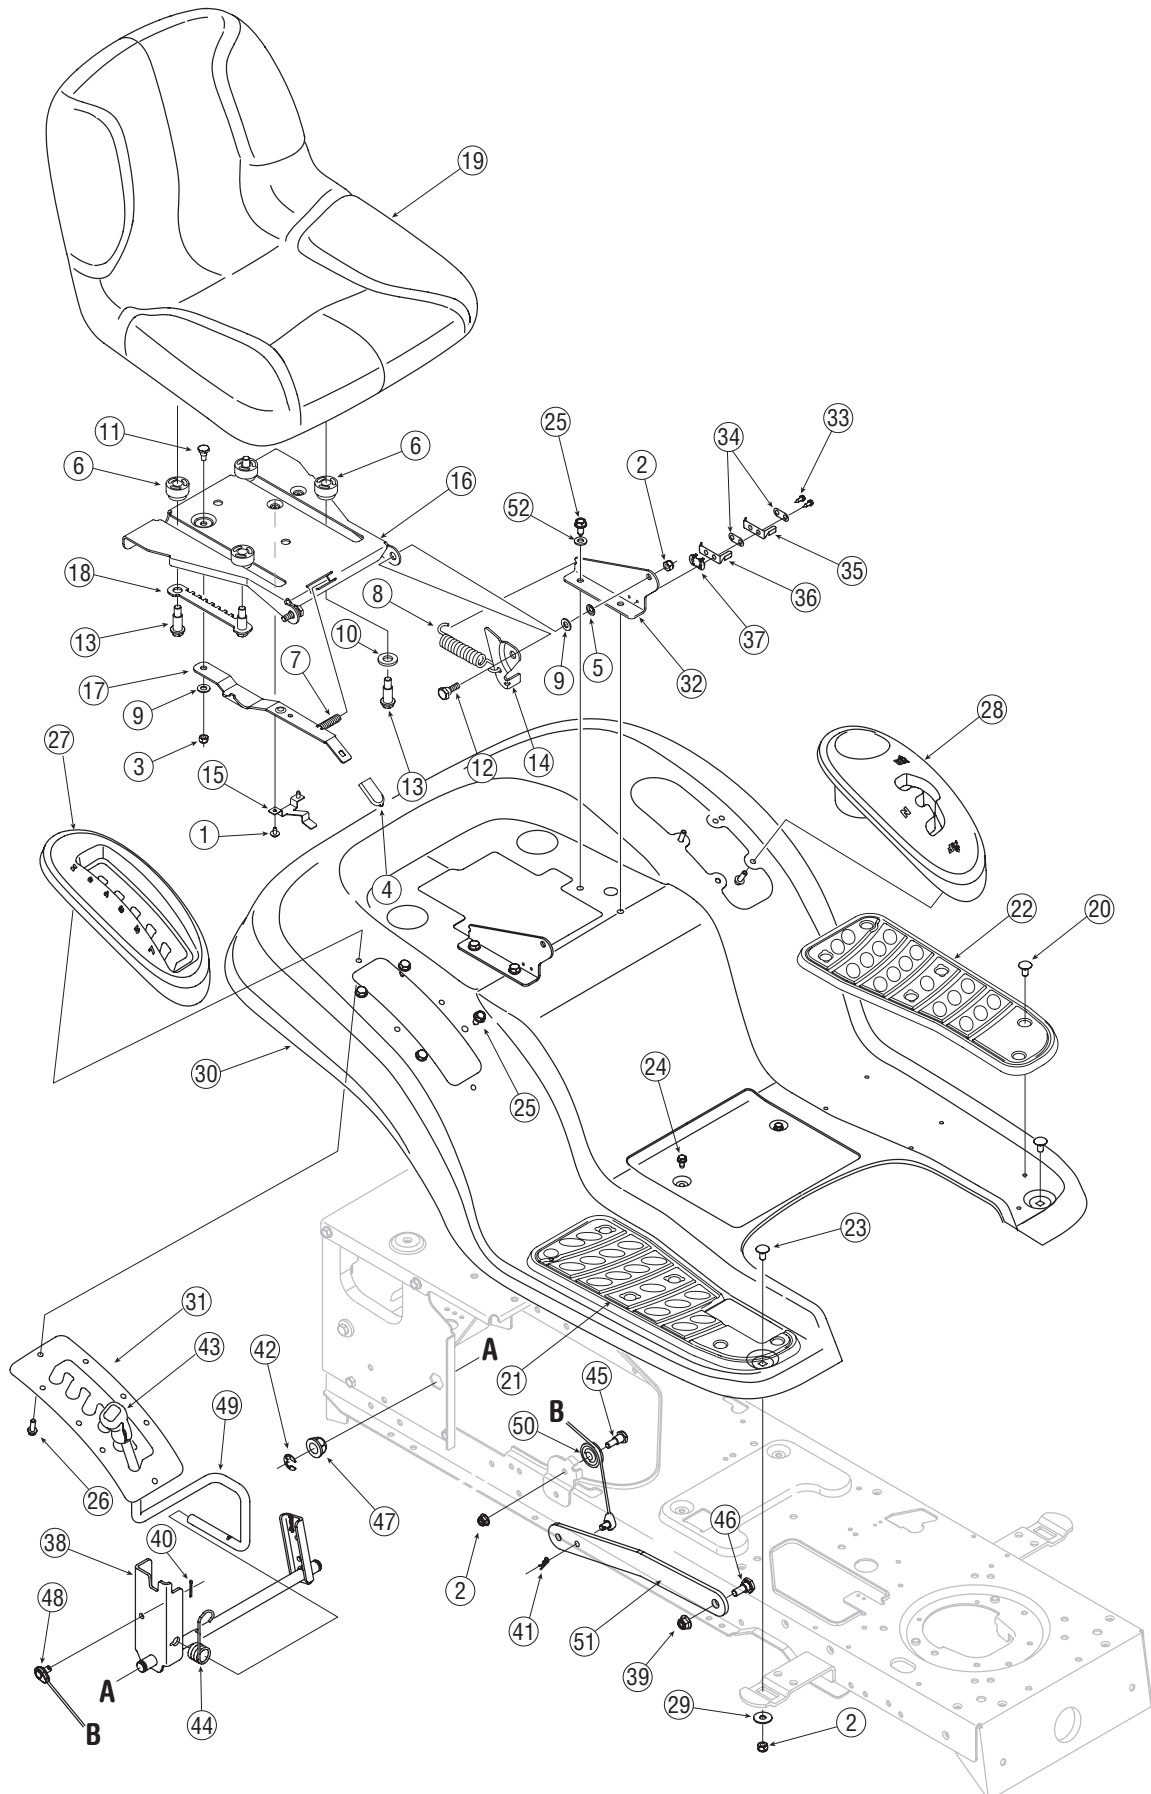


Model Series 606G

REF. NO.	PART NO.	DESCRIPTION
1	710-1268	Screw, #10-16 x.375
2	712-04063	Nut, Flange Lock, 5/16-18, GrF, Nylon
3	712-3027	Nut, Flange Lock, 1/4-20
4	720-0309A	Seat Adjuster Grip
5	726-0201	Nut, Speed,.3125 ID
6	731-04074	Spacer
7	732-0499	Compression Spring,.41 x 1.5
8	732-1184	Spring, Extension,.84 Dia. x 4.6
9	736-0275	Wash, Flat,.344 x.688 x.065
10	736-3019	Wash, Flat,.531x 1.062 x.134
11	738-0137A	Screw, Shoulder,.340 x.285,1/4-20
12	738-0296	Screw, Shoulder,.437 x.268, 5/16-18
13	738-0966	Screw, Shoulder,.50 x.925, 3/8-16
14	783-0209C	Seat Bracket, Lift
15	783-0611	Seat Stop
16	783-0738B	Seat Pivot Bracket
17	783-0739A	Seat Adjustment Lever
18	783-0753	Seat Adjustment Selector
19	757-04003	High Back Seat, Black
20	726-3046	Ratchet Clip
21	735-0656	RH Foot Pad, Rubber
22	735-0657	LH Foot Pad, Rubber
23	710-0260A	Bolt, Carriage, 5/16-18,.62, Gr1
24	710-0599	Screw, 1/4-20, 0.500
25	710-0726	Screw, 5/16-12, 0.750
26	710-0895	Screw, 1/4-15, 0.750
27	731-1990	Cover, Lift Lever
28	731-2104C	Cover, w/ Cup Holder
29	736-3078	Washer, Flat,.344 x 1.0 x.063
30	783-04333A	Fender
31	783-0677	Adjustment Bracket, Lift
32	783-1489A	Mounting Bracket, Seat
33	710-0227	Screw, #8-18 x.50
34	726-0279	Plate, Insulator
35	725-1303	Spring Switch, Outer
36	725-1439	Spring Switch, Inner
37	726-0278	Plate, Insulator Boss
38	683-04079	Shaft Assembly, Lift
39	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon
40	714-0104	Pin, Cotter,.072 Dia. x 1.13
41	714-0111	Pin, Cotter, 3/32, 1.0
42	716-0106A	Ring, E Type,.625 Dia.
43	720-0311	Grip, Handle, 1/2
44	732-0874	Spring, Torsion
45	738-0138A	Screw, 5/16-18 x.620 Gr2
46	738-04130	Screw, Shoulder,.625 x.165, 3/8-16
47	741-0225	Bearing, Hex Flange
48	746-0968	Cable, Lift, 16.16
49	747-04155	Handle, Lift
50	756-1154	Pulley, Roller
51	783-04711	Arm, Lift - LH
	783-04494	Arm, Lift - RH
52	736-0607	Lock Washer, 5/16

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model Series 606G

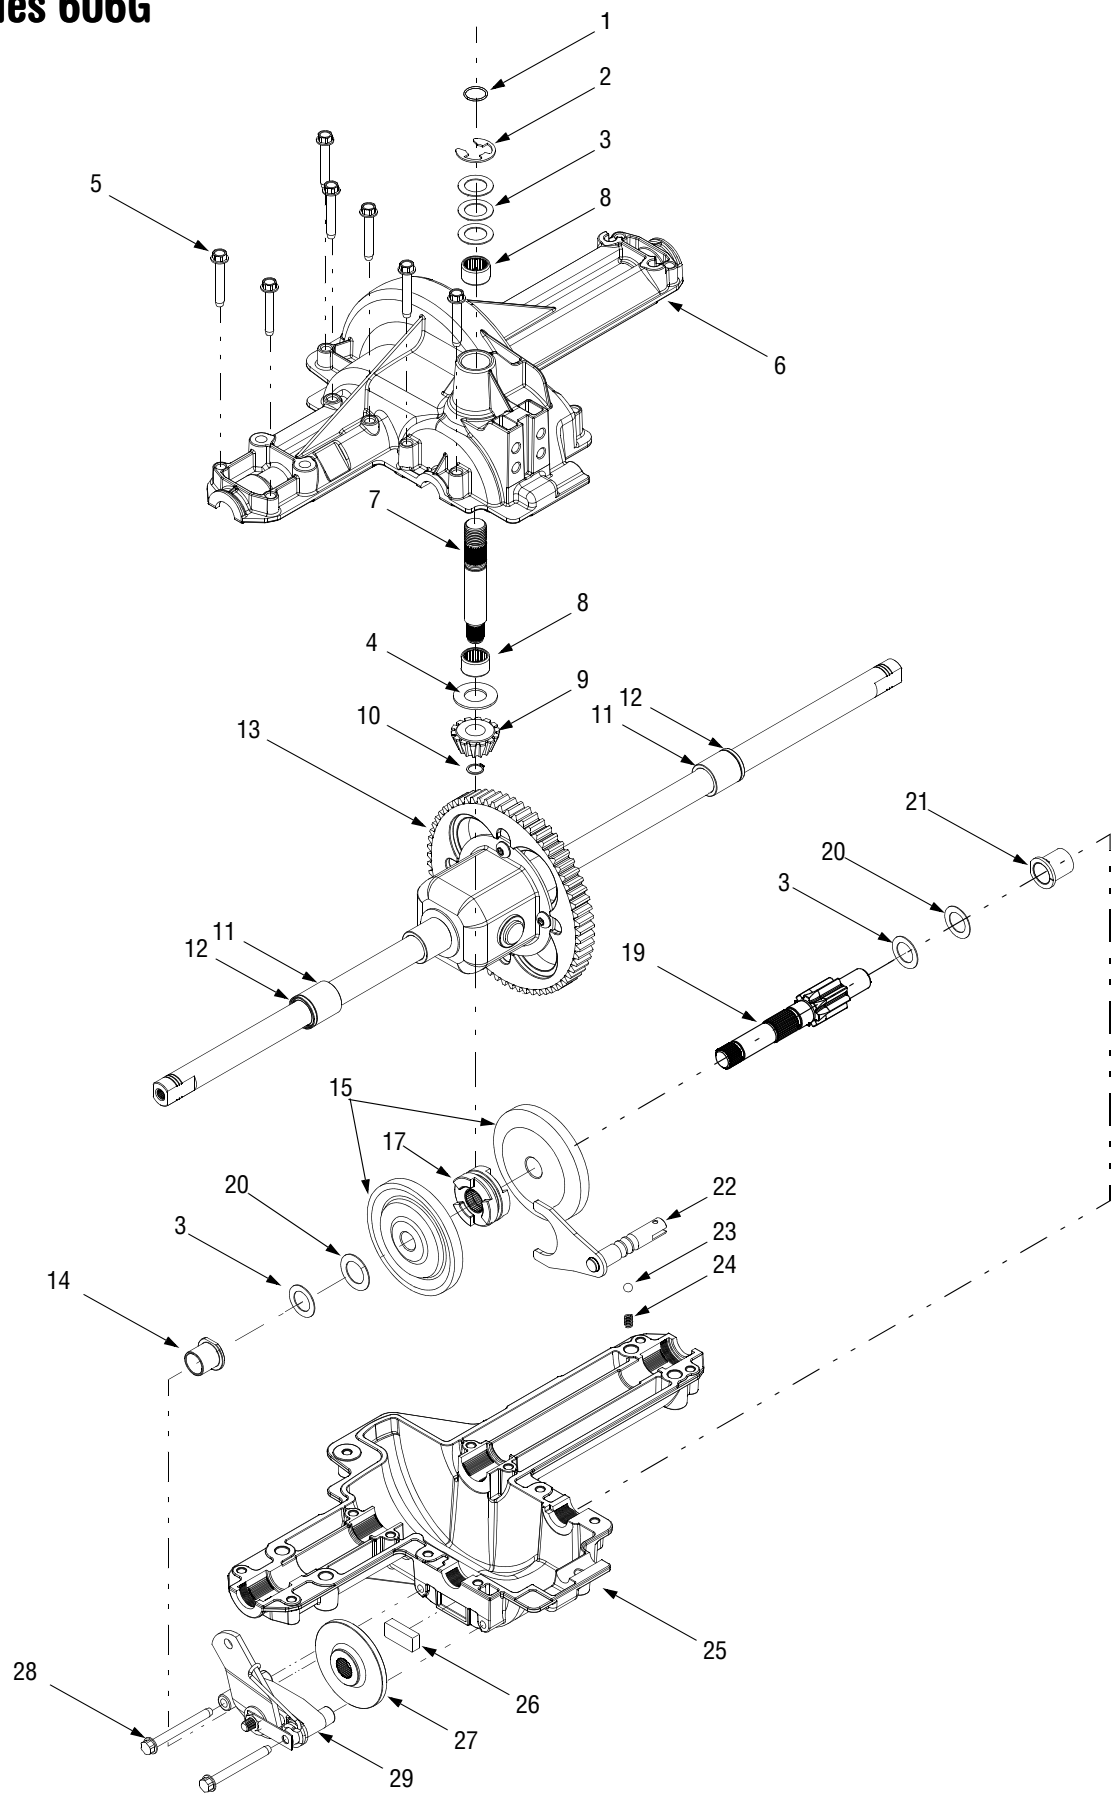


Model Series 606G

REF. NO.	PART NO.	DESCRIPTION
1	732-0614	Ring, Wire
2	716-0231	Ring, E Type,.750
3	736-0336*	Flat Washer, 5/8 x 1.0 x.030
	736-0337*	Flat Washer, 5/8 x 1.0 x.040
	736-0349*	Flat Washer, 5/8 x 1.0 x.020
4	736-0335	Washer, Thrust.635 x 1.26 x.06
5	710-1325	Self-tapping Screw, 1/4-20 x 1.625
6	719-04017	Upper Housing
7	711-1109	Input Shaft
8	741-0335	Needle Bearing,.625 x.813 x.495
9	717-1464	14-tooth Bevel Pinion
10	716-0108	Retaining Ring,.437
11	741-0340	Sleeve Bearing,.75 x 1.0 x 1.0
12	721-0338	Seal,.75 x 1.0 x.125
13	618-04041	Differential Assembly
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	717-04056	42-tooth Bevel Gear
17	718-04045	Clutch Collar
19	711-04134	Drive Shaft
20	736-0495*	Thrust Washer, 1.0 x.632 x.0
	736-0494*	Flat Washer,.632 x 1.00 x.035
21	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
22	611-0011	Detent Shaft Assembly
23	741-0862	Detent Ball
24	732-0863	Compression Spring
25	719-04018	Lower Housing
26	717-0678	Brake Puck
27	761-0202	Brake Disc
28	710-1206	Self-tapping Screw, 1/4-20 x 2.375
29	661-0001	Brake Assembly
—	737-0148	Grease (19 oz.)

*Use applicable washers (ref. no.'s 3 or 20) in this application allowing .0150/.0020 in. end-play.

NOTE: If rebuilding the upper housing, include two ounces (2 oz.) of Unirex[®] N3 grease (Part No. 737-0289) in the input shaft cavity.

Model Series 606G

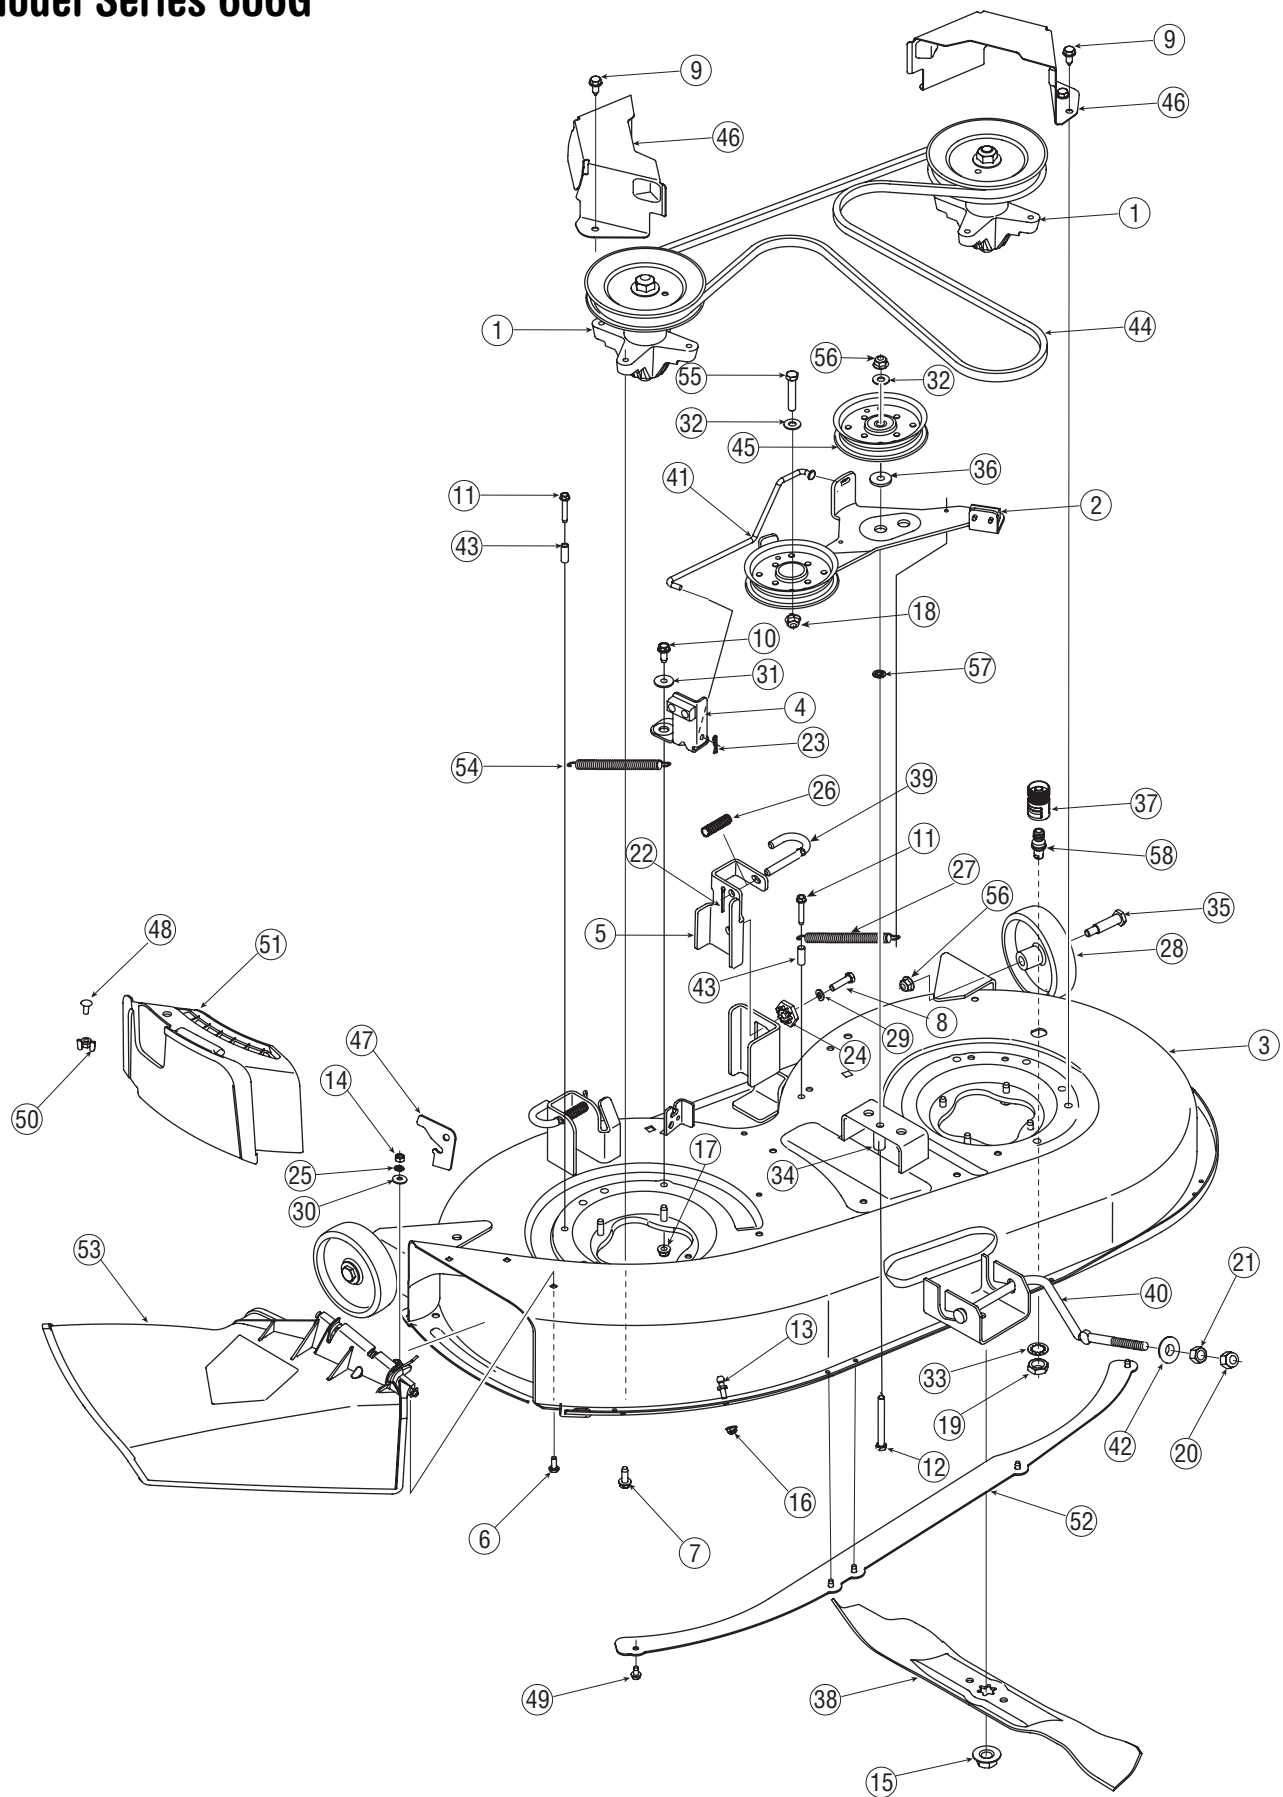

Model Series 606G

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	618-0624	Pulley/ Spindle Assembly	30	736-0270	Bell Washer, .265 x .75 x .062
2	683-04138	Deck Brake Assembly	31	736-0289	Shoulder Bushing, .320 ID x .135 Lg.
3	683-04162	42" Deck Assembly	32	736-0267	Flat Washer, .385 x .87 x .06
4	683-04167	Deck Brake Assembly	33	736-0760	Lock Washer
5	683-0254B	Deck Hanger Bracket Assembly	34	750-04446	Spacer, 3/8 ID x .68 OD x 1.46 Lg
6	710-0751	Screw, 1/4-20 x .620	35	738-0373	Shoulder Screw, .498 x 1.53 x 3/8-16
7	710-0650	Screw, 5/16-18 x .875	36	738-04162	Shoulder Spacer, .8540 x .200
8	710-0528	Screw, 5/16-18 x 1.25	37	721-04041	Water Nozzle Adapter
9	710-0726	Screw, 5/16-12 x .750	38	742-0616A	Blade, 21.23", Star 3-in-One
10	710-1260A	Screw, 5/16-18 x .750	39	747-1116	Deck Release Handle Rod
11	710-0778	Screw, 1/4-20 x 1.500	40	747-04269A	Front Deck Adjustment Rod
12	710-3085	Screw, 3/8-16 x 3.50	41	747-04379	Brake Control Rod
13	711-04069	Grass catcher Pin	42	748-04069	Deck Lift Pivot Cup
14	712-3006	Hex Nut, 1/4-20	43	750-0566A	Spacer, .260 x .372 x 1.030 Lg.
15	712-0417A	Flange Nut, 5/8-18	44	754-04060B	V-Belt, 96.3 Lg.
16	712-04064	Flange Lock Nut, 1/4-20	45	756-04129	Idler Pulley, 4.25" Dia.
17	712-04063	Flange Lock Nut, 5/16-18	46	783-04327	Belt Cover
18	712-04065	Flange Lock Nut, 3/8-16	47	783-1025	Chute Stop
19	712-0641	Hex Nut, M16-1.5	48	710-0134†	Carriage Screw, 1/4-20 x .62
20	712-3083	Hex Lock Nut, 1/2-13	49	710-0599†	Screw, 1/4-20 x .500
21	712-0206	Hex Nut, 1/2-13	50	712-3087†	Wing Nut, 1/4-20
22	714-0470	Cotter Pin, 1/8 x 1.25	51	731-2363†	Mulch Plug
23	714-0104	Cotter Pin, .072 Dia. x 1.13 Lg.	52	783-1146A†	Deck Skirt
24	717-04074	Deck Adjustment Gear	53	731-1032B	Discharge Chute
25	726-0233	Push Nut, .25 ID x .50 OD	54	732-04287	Extension Spring, .500 Dia. x 6.375 Lg
26	732-0306A	Compression Spring, .531 OD x 1.75 Lg.	55	710-3144	Screw, 3/8-16 x 2.00
27	732-0308A	Extension Spring, .50 Dia. x 6.37 Lg.	56	712-0431	Flange Lock Nut, 3/8-16
28	734-0973	Deck Wheel	57	712-0229	Push Nut, 3/8
29	736-0119	Lock Washer, 5/16	58	737-04003B	Deck Water Nozzle

† If Equipped

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. **NOT** all parts listed above and pictured on the previous page are standard equipment.