



SECTION 12: ILLUSTRATED PARTS LIST FOR MODEL GT50

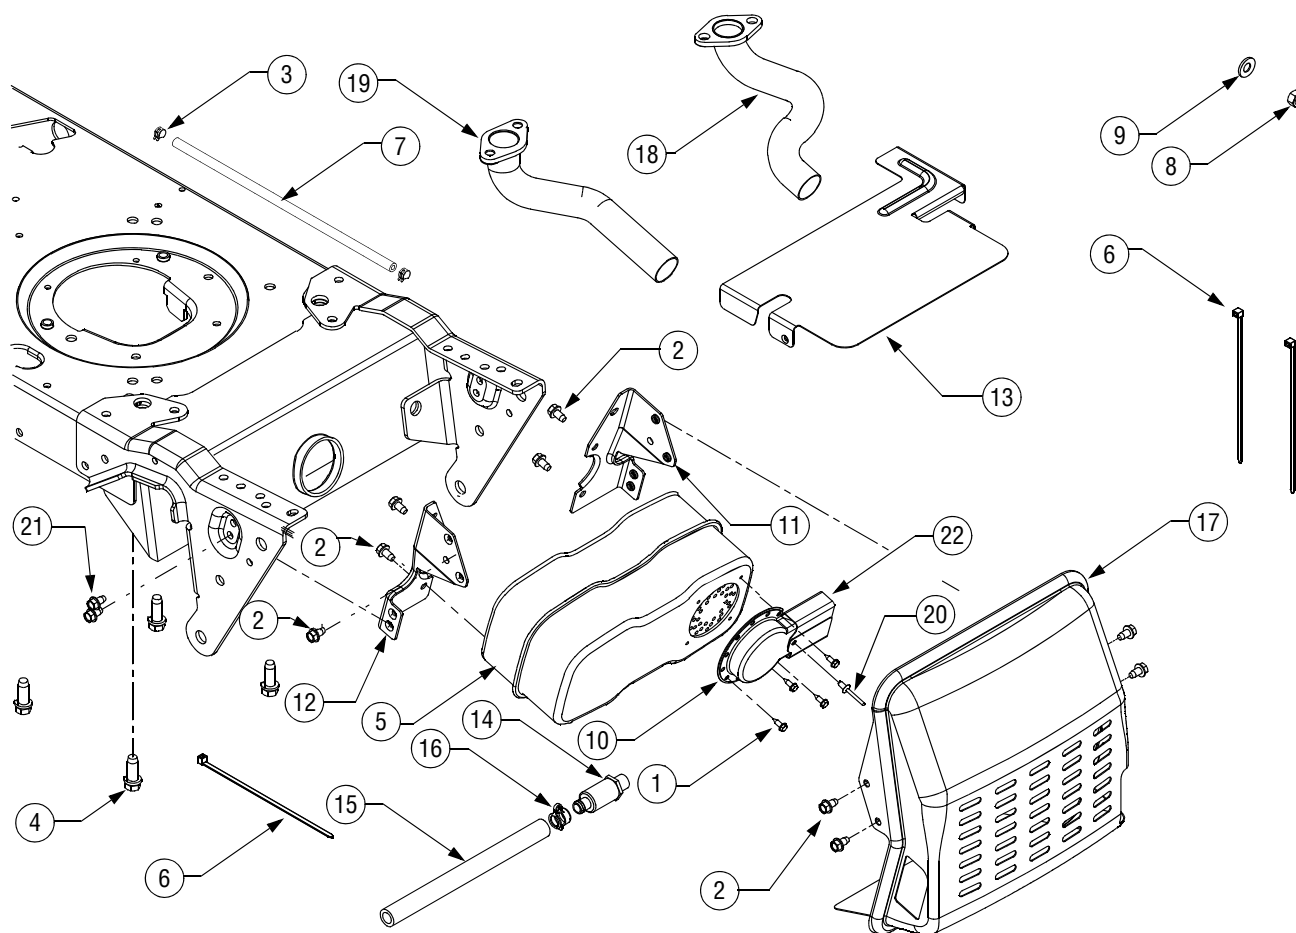

REF. NO.	PART NUMBER	DESCRIPTION
1	710-0227	Screw, #8-18, 0.500
2	710-0599	Screw, Hex, 1/4-20, 0.500
3	726-0205	Clamp
4	710-0654A	Screw, Hex, 3/8-16 x 1.00
5	751-10161	Muffler, Dual Inlet
6	725-0157	Cable, Tie, 3/16 x.05 x 7.4
7	751-10349	Fuel Hose, Low Permeation
8	712-3005	Hex Flange Nut, 3/8-16
9	736-0300	Lock Washer,.406 x.875 x.059
10	751-0564B	Deflector, Muffler
11	783-04573	Muffler Bracket, LH
12	783-04574	Muffler Bracket, RH
13	783-04783	Heat Shield
14	751-3140	Drain, Oil
15	751-3141	Extension Hose, Oil Drain
16	751-3142	Cap, Oil Drain
17	683-04256	Shield, Muffler
18	751-10007	Pipe, Exhaust, LH
19	751-10006	Pipe, Exhaust, RH
20	728-04000	Rivet, Pop., 188 x.325
21	710-0642	Screw, Hex, 1/4-20, 0.750
22	751-10353	Extension, Deflector


Model GT50

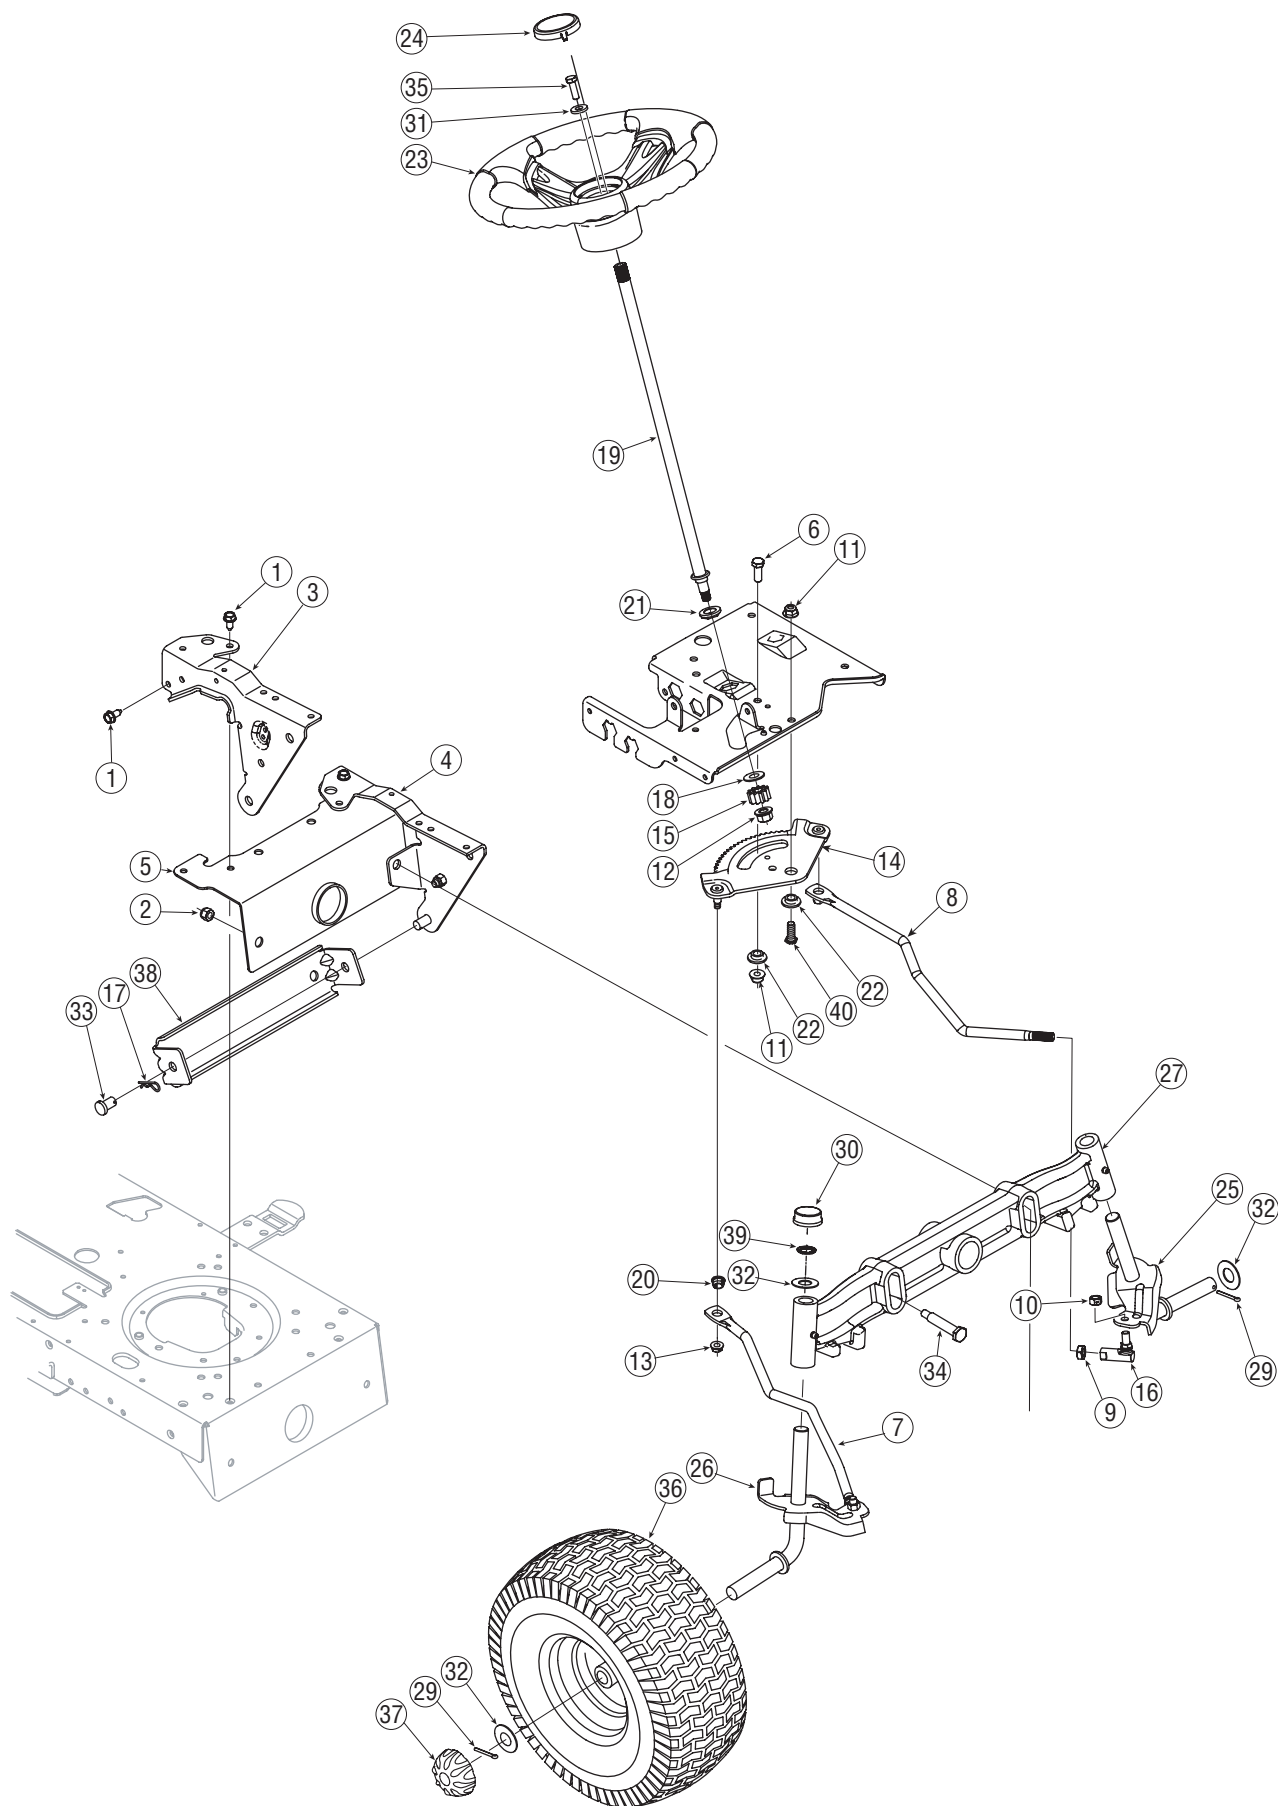

Model GT50

REF. NO.	PART NO.	DESCRIPTION
1	710-1260A	Self-tapping Screw, 5/16-18 x.75
2	712-04065	Nut, Flange Lock, 3/8-16
3	783-0726E	RH Pivot Support Bracket
4	783-0727D	LH Pivot Support Bracket
5	783-0728	Pivot Bar Bracket
6	710-0514	Hex Cap Screw, 3/8-16 x 1
7	711-1408	RH Drag Link
8	711-1409A	LH Drag Link
9	712-0240	Jam Nut, 7/16-20
10	712-0214	Hex Nut, 3/8-24
11	712-0431	Flange Lock Nut, 3/8-16
12	712-0459	Flange Lock Nut, 7/16-20
13	712-3004A	Flange Lock Nut, 5/16-18
14	717-1550E	Steering Gear, 11/90 Ratio
15	717-1554	Steering Pinion Gear
16	723-0448A	Ball Joint, 7/16-20
17	714-04023	Cotter Pin, Internal
18	736-3084	Flat Washer,.51 x 1.12 x.06
19	738-1001A	Steering Shaft,.625 OD x 24.4
20	741-0475	Plastic Bushing,.38 ID
21	741-0656A	Hex Flange Bearing, 5/8
22	738-04154	Shoulder Spacer,.38 x 1.00 x.31
23	631-04008	Steering Wheel, Soft Grip, Three Spoke
24	731-04681	Steering Wheel Cap
25	638-04003A	LH Axle Assembly,.75 Diameter
26	638-04004A	RH Axle Assembly,.75 Diameter
27	719-04177	Cast Iron Pivot Bar
29	714-04039	Cotter Pin
30	731-04693	Hub Cap
31	736-3004	Flat Washer,.406 x.875 x.105
32	736-0316	Flat Washer,.78 x 1.59 x.06
33	711-0332	Pin, Clevis,.50 Dia. x.78 Lg.
34	738-1011A	Shoulder Screw,.5 x 2.2, 3/8-16
35	710-0643	Hex Bolt, 5/16-18 X 1
36	634-04088A	Wheel Assembly Complete, 16 x 7.5 x 8
	634-04082	Rim Only w/ Plastic Bearing
	734-0255	Air Valve (Not Shown)
	734-04148	Tire Only, Square Shoulder
	741-0516A	Flange Bearing
	741-0990A	Flange Bearing w/ Grease Fitting
37	734-2290A	Hub Cap
38	783-0720A	Brkt., Adj., Frt.
39	726-04035	Nut, Push, 3/4 Dia.
40	710-04095	Hex Bolt 3/8-16 x 1.0 Special


Model GT50

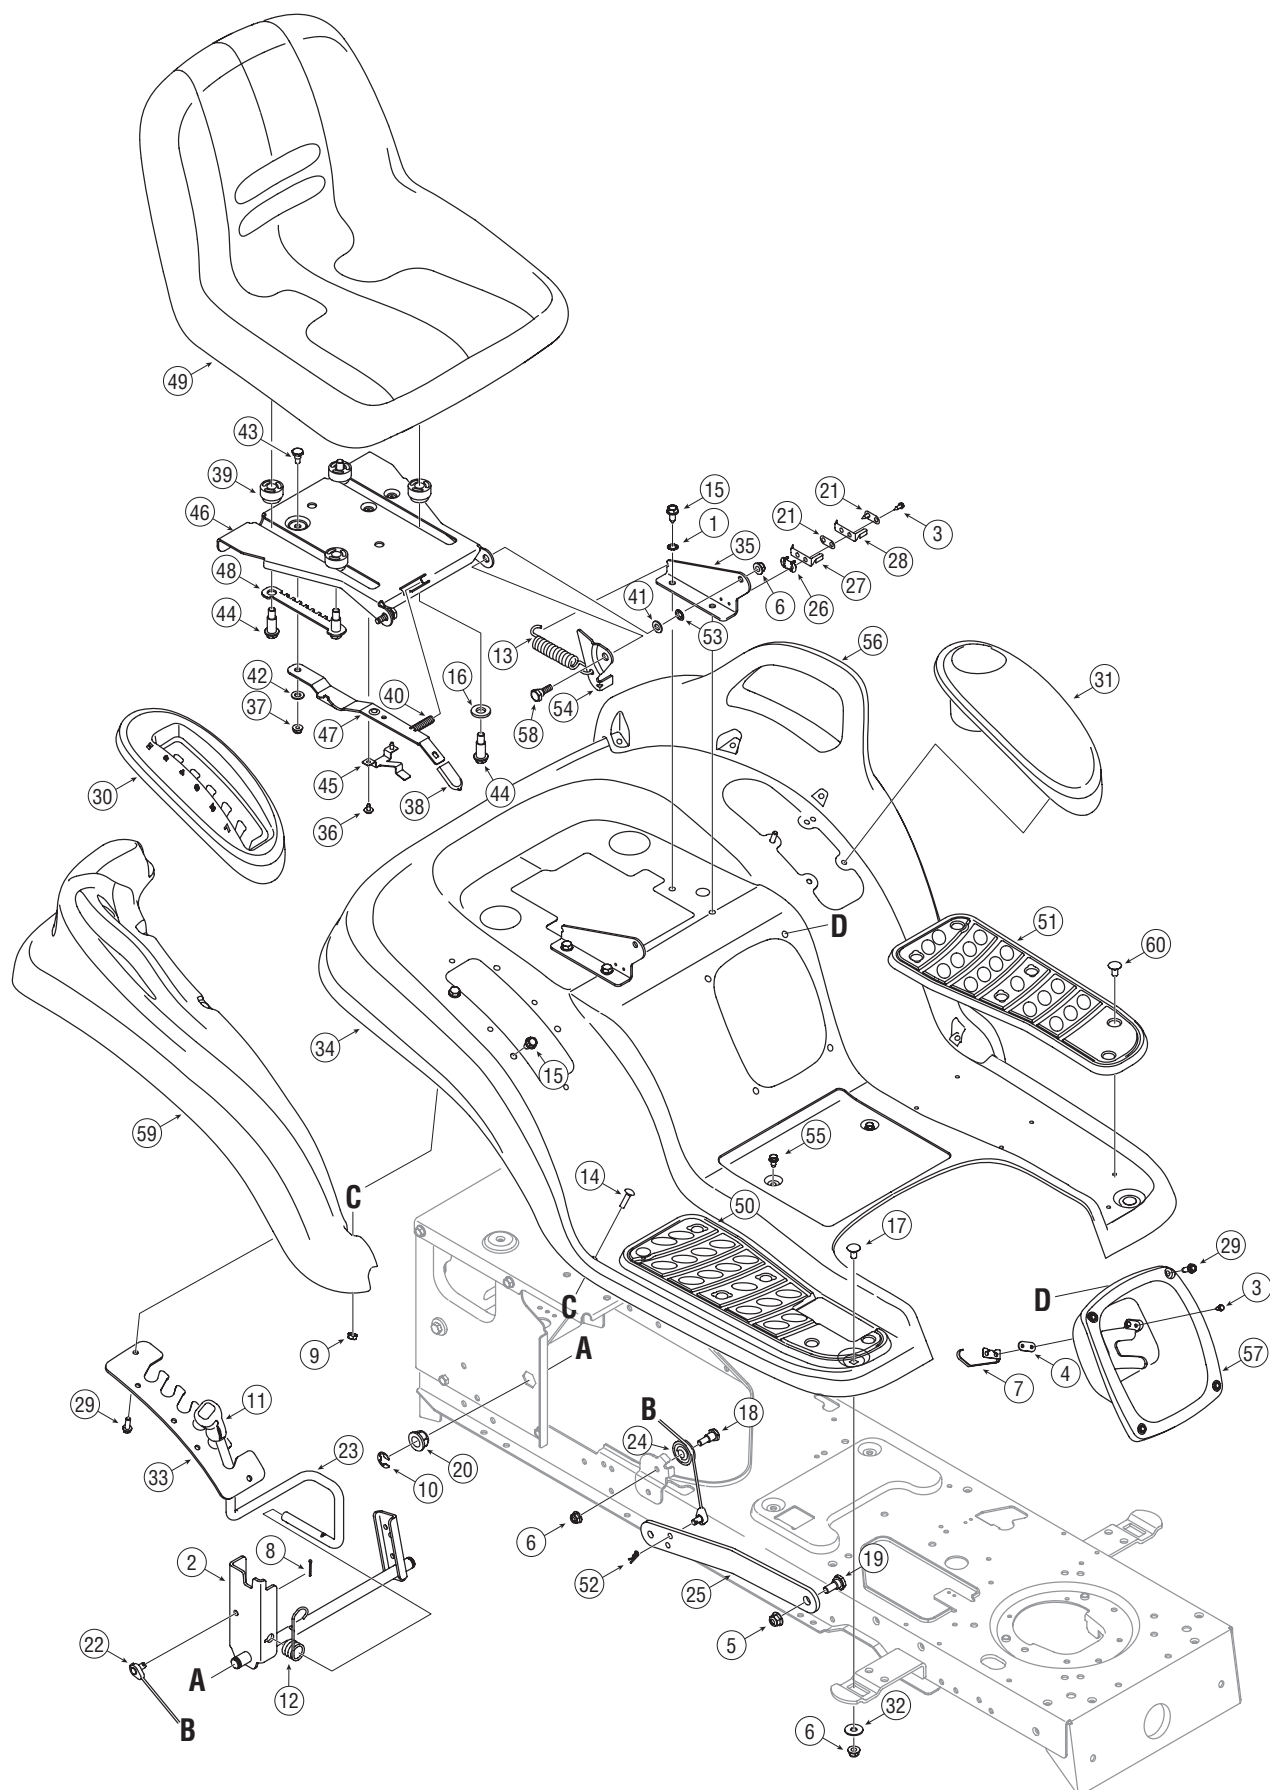

Model GT50

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	736-0607	Wash, Lock, 5/16	31	731-1993A	Cover w/ Cup Holder
2	683-04079	Lift Shaft Assembly	32	736-3078	Flat Washer,.349 x 1.0 x.063
3	710-0227	Screw, AB #8-18 x.500	33	783-0677B	Lift Adjustment Bracket
4	726-0320	Plate, Insulator Nut	34	783-04331A	Fender
5	712-04065	Flange Lock Nut, 3/8-16	35	783-1489B	Seat Mounting Bracket
6	712-04063	Flange Lock Nut, 5/16-18	36	710-1268	Screw, #10-16 x.375
7	725-1713	Switch, Spring	37	712-04064	Flange Lock Nut, 1/4-20
8	714-0104	Internal Cotter Pin	38	720-0309A	Seat Adjuster Grip
9	712-0271	Nut, Sems, 1/4-20	39	731-04074	Spacer
10	716-0106A	E-Ring	40	732-0499	Compression Spring,.41 x 1.5
11	720-0311	Handle Grip	41	736-0242	Washer, Bell,.340 x.872 x.060
12	732-0874	Torsion Spring	42	736-0204	Flat Washer,.344 x.62 x.03
13	732-1184	Extension Spring,.84 x 4.6	43	738-0137A	Shoulder Screw,.340 x.285,1/4-20
14	710-0932	Screw, Carriage, 1/4-20 x 1.00	44	738-0966A	Shoulder Bolt,.50 x.925, 3/8-16
15	710-0604A	Screw, TT, 5/16-18 x.625	45	783-0611	Seat Stop
16	736-3019	Flat Washer,.31 x 1.062 x.134	46	783-0738C	Seat Pivot Bracket
17	710-0451	Bolt, Carriage, 5/16-18 x.750	47	783-0739A	Seat Adjustment Lever
18	738-0138A	Hex Cap Screw, 5/16-18 x.62	48	783-0753	Seat Adjustment Selector
19	738-0380	Shoulder Screw, 3/8-16	49	757-04010	High Back Seat, Black
20	741-0225	Hex Flange Bearing	50	735-0656	RH Foot Pad
21	726-0279	Plate, Insulator	51	735-0657	LH Foot Pad
22	746-0968	Lift Cable, 16.16	52	714-0111	Cotter Pin
23	747-04155	Lift Handle	53	726-0201	Nut, Spd.,.3125 ID
24	756-1154	Roller Pulley	54	783-0209D	Seat Lift Bracket
25	783-0678A	Arm Lift	55	710-0599	Screw, TT, 1/4-20 x 0.5
26	726-0278	Plate, Insulator Boss	56	731-2619	LH Fender Flare
27	725-1439	Switch, Inner, Seat Spring	57	731-2480A	Shift Lever Cover
28	725-1303	Switch, Outer, Seat Spring	58	738-0296	Shoulder Screw,.437 x.286
29	710-0895	Self-tapping Screw, 1/4-15 x.75	59	731-2618	RH Fender Flare
30	731-1990	Lift Lever Cover	60	726-3046	Foot Pad Clips


Model GT50

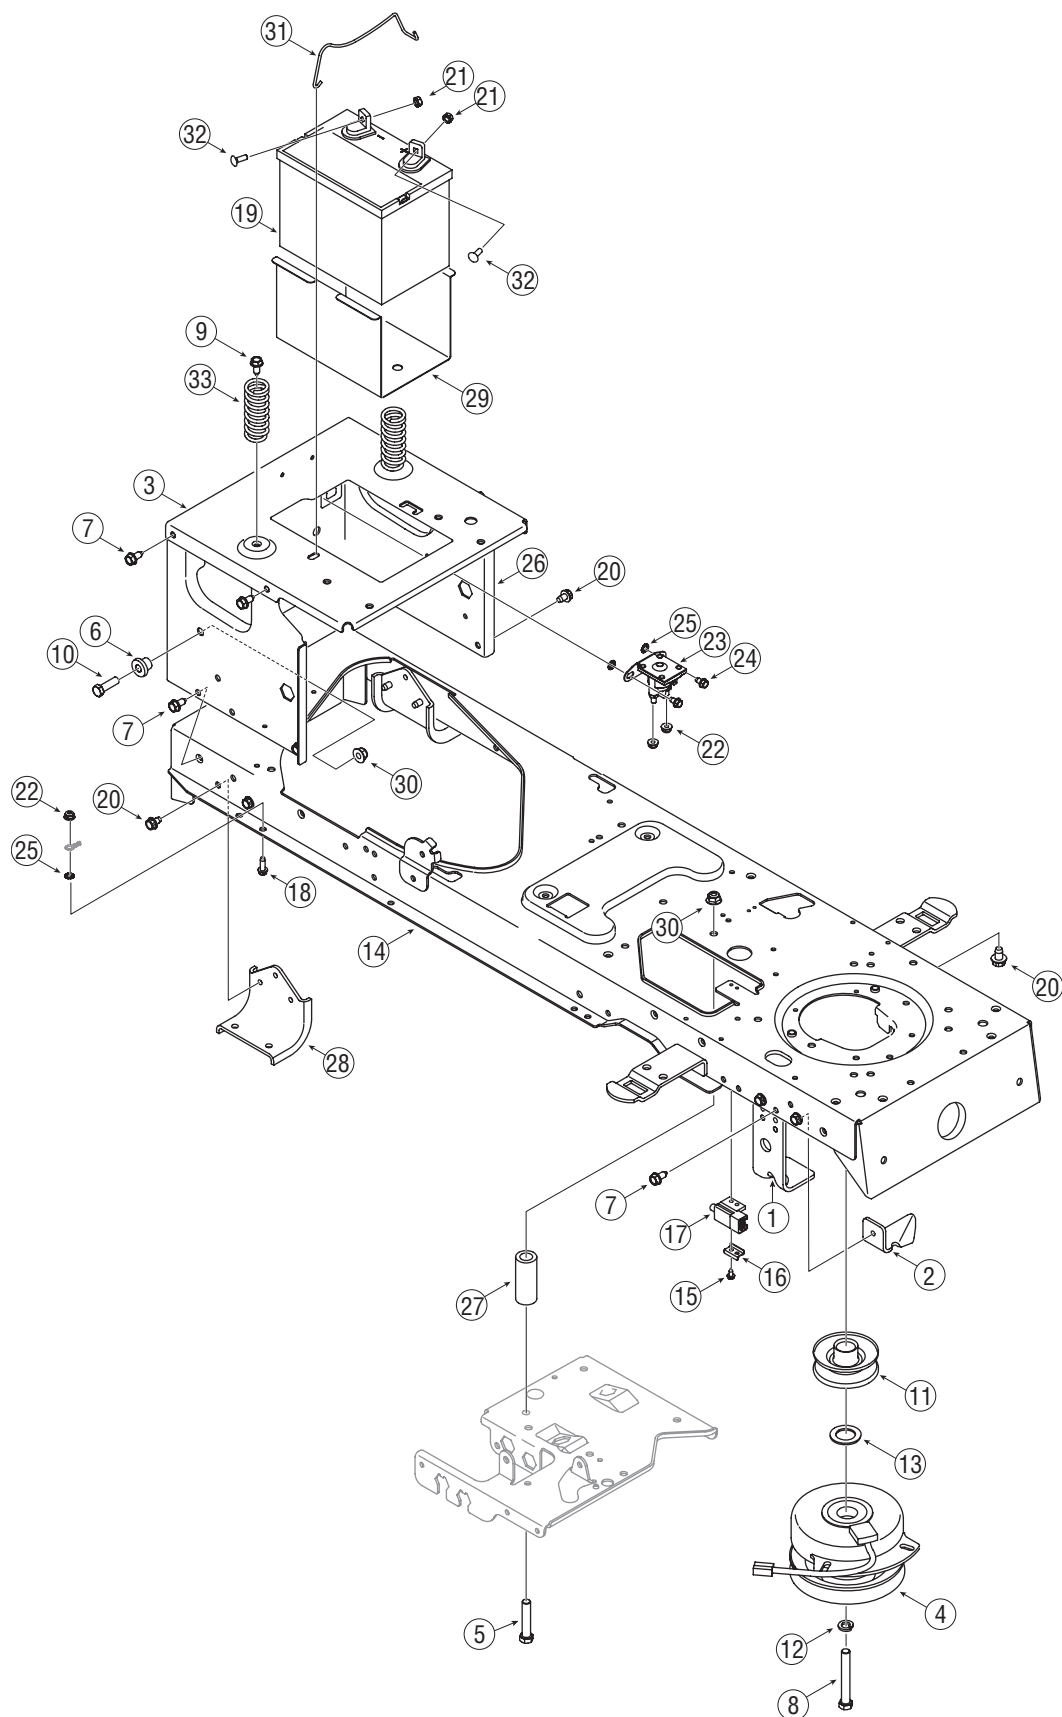

Model GT50

Ref.No.	Part No.	Description
1.	783-04467	Up Stop Deck Bracket
2.	783-04419B	Clutch Bracket
3.	783-04329A	Seat Frame Bracket
4.	717-04174	Electric Clutch
5.	710-3011	Hex Screw, 3/8-16 x 2.25
6.	738-04058	Spacer, Shldr,.38 x 1.0 x .70
7.	710-0726	AB Screw, 5/16-12 x .75
8.	710-04379A	Hex Screw, 7/16-20 x 3.50
9.	710-1260A	Screw, LD, 5/16-18 x .750
10.	710-3005	Screw, 3/8-16 x 1.25
11.	756-0639A	Engine Pulley
12.	736-0171	Lock Washer
13.	736-0277	Flat Washer, 1.031 x 1.620 x .095
14.	683-04173A	Lower Frame Assembly
15.	710-0224	AB Screw #10-16 x 0.5
16.	17962	Switch Plate
17.	725-04039	Switch
18.	710-0642	TT Screw 1/4-20 x 0.75
19.	725-1750A	12 V Battery, 235 CCA
20.	710-0607	TT Screw 5/16-18 x 0.5
21.	712-0271	Hex Sems Nut, 1/4-20
22.	712-04064	Flange Lock Nut, 1/4-20
23.	725-1426A	Solenoid, 12-Volt, 100 Amp
24.	710-0599	Self Tapping Screw, 1/4-20 x .5
25.	736-0222	Lock Washer, 1/4
26.	783-04811A	Upper Frame
27.	748-0415B	Spacer
28.	783-0693	Axle Bracket
29.	783-0349	Battery Tray
30.	712-04065	Flange Lock Nut, 3/8-16
31.	747-04121A	Battery Hold Rod
32.	710-0703	Screw, Carriage, 1/4-20 x .75
33.	732-04035	Compression Spring, 1.28 x 3.125


Model GT50

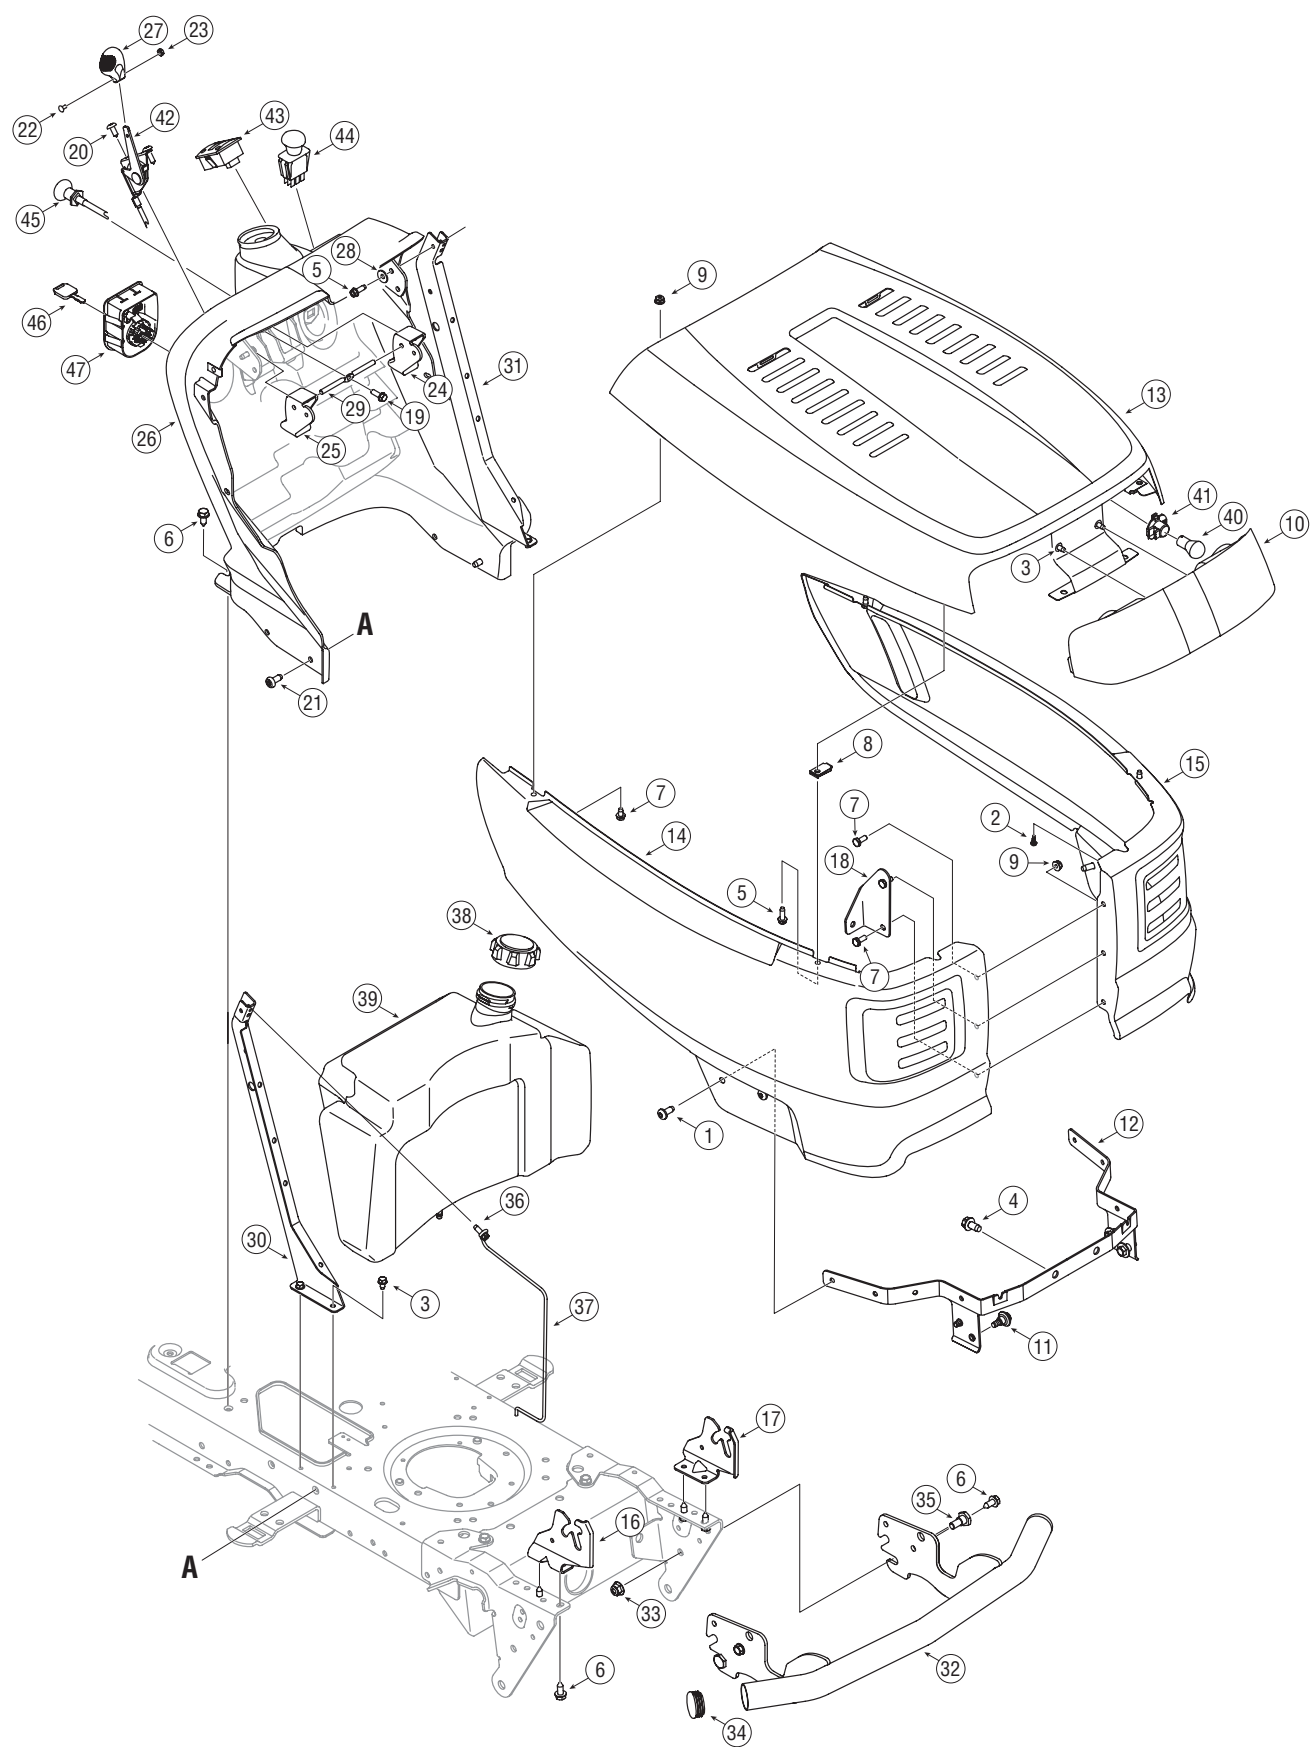

Model GT50

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	710-04593	Screw TT, 5/16-18 x.375	27	731-1857	Control Knob
2	710-04599	Screw #8-18 x.500	28	736-0270	Bell Washer.265 x.75 x.062
3	710-0599	Screw TT, 1/4-20 x.500	29	747-1196	Lever Rod
4	710-0623	Screw TT, 3/8-16 x.750	30	783-04285D	RH Plate Dash Support
5	710-0642	Screw TT, 1/4-20 x.750	31	783-04323D	LH Plate Dash Support
6	710-0726	Screw AB, 5/16-12 x.750	32	683-04219	Bumper
7	710-0751	HH Cap Screw 1/4-20 x.620	33	712-04065	Flange Lock Nut 3/8-16
8	712-0292	Clip Nut 1/4-20	34	731-05598	Bumper Cap
9	712-04064	Flange Lock Nut 1/4-20	35	738-0143	Shoulder Screw.498 x.340 x 3/8-16
10	731-05357	Lens	36	710-0642	Screw TT, 1/4-20 x.75
11	738-04091	Shoulder Screw.43x.29:TT:5/16-18	37	747-04161	Tank Support Rod
12	783-04606A	Pivot Bracket	38	751-0603	Fuel Cap
13	783-04827	Hood	39	751-10283	Fuel Tank, 3 Gal.
14	783-04828	RH Side Panel	40	725-0963	Miniature Lamp, 12V
15	783-04829	LH Side Panel	41	725-1649	Socket, Lamp
16	783-04840	RH Hood Pivot Bracket	42	746-1086	Throttle Cable 39-inch
17	783-04841	LH Hood Pivot Bracket	43	725-04036B	Systems Indicator Monitor w/Hour Meter
18	783-05116	Support Hood Bracket	44	725-04174	Electric PTO Switch
19	710-0895	Screw HL, 1/4-15 x.750	45	746-04132	Choke Control 37.5" x 2
20	710-1017	Screw AB, 1/4-14 x.625	46	725-1744	Ignition Key
21	710-1611B	Screw TT, 5/16-18 x.750		725-1745	Ignition Key w/ Plastic Cover
22	710-3217	Screw #8-32 x.375	47	725-04227A	Ignition Switch Module
23	712-0142	Hex Nut #8-32	—	629-04083	Headlight Wire Harness <i>(not pictured)</i>
24	731-04728	Brake Dash Lever	—	725-04336	Tractor Wire Harness <i>(not pictured)</i>
25	731-04729	Cruise Dash Lever	—	725-0157	Cable Tie <i>(not pictured)</i>
26	731-05005B	Dash Panel			


Model GT50

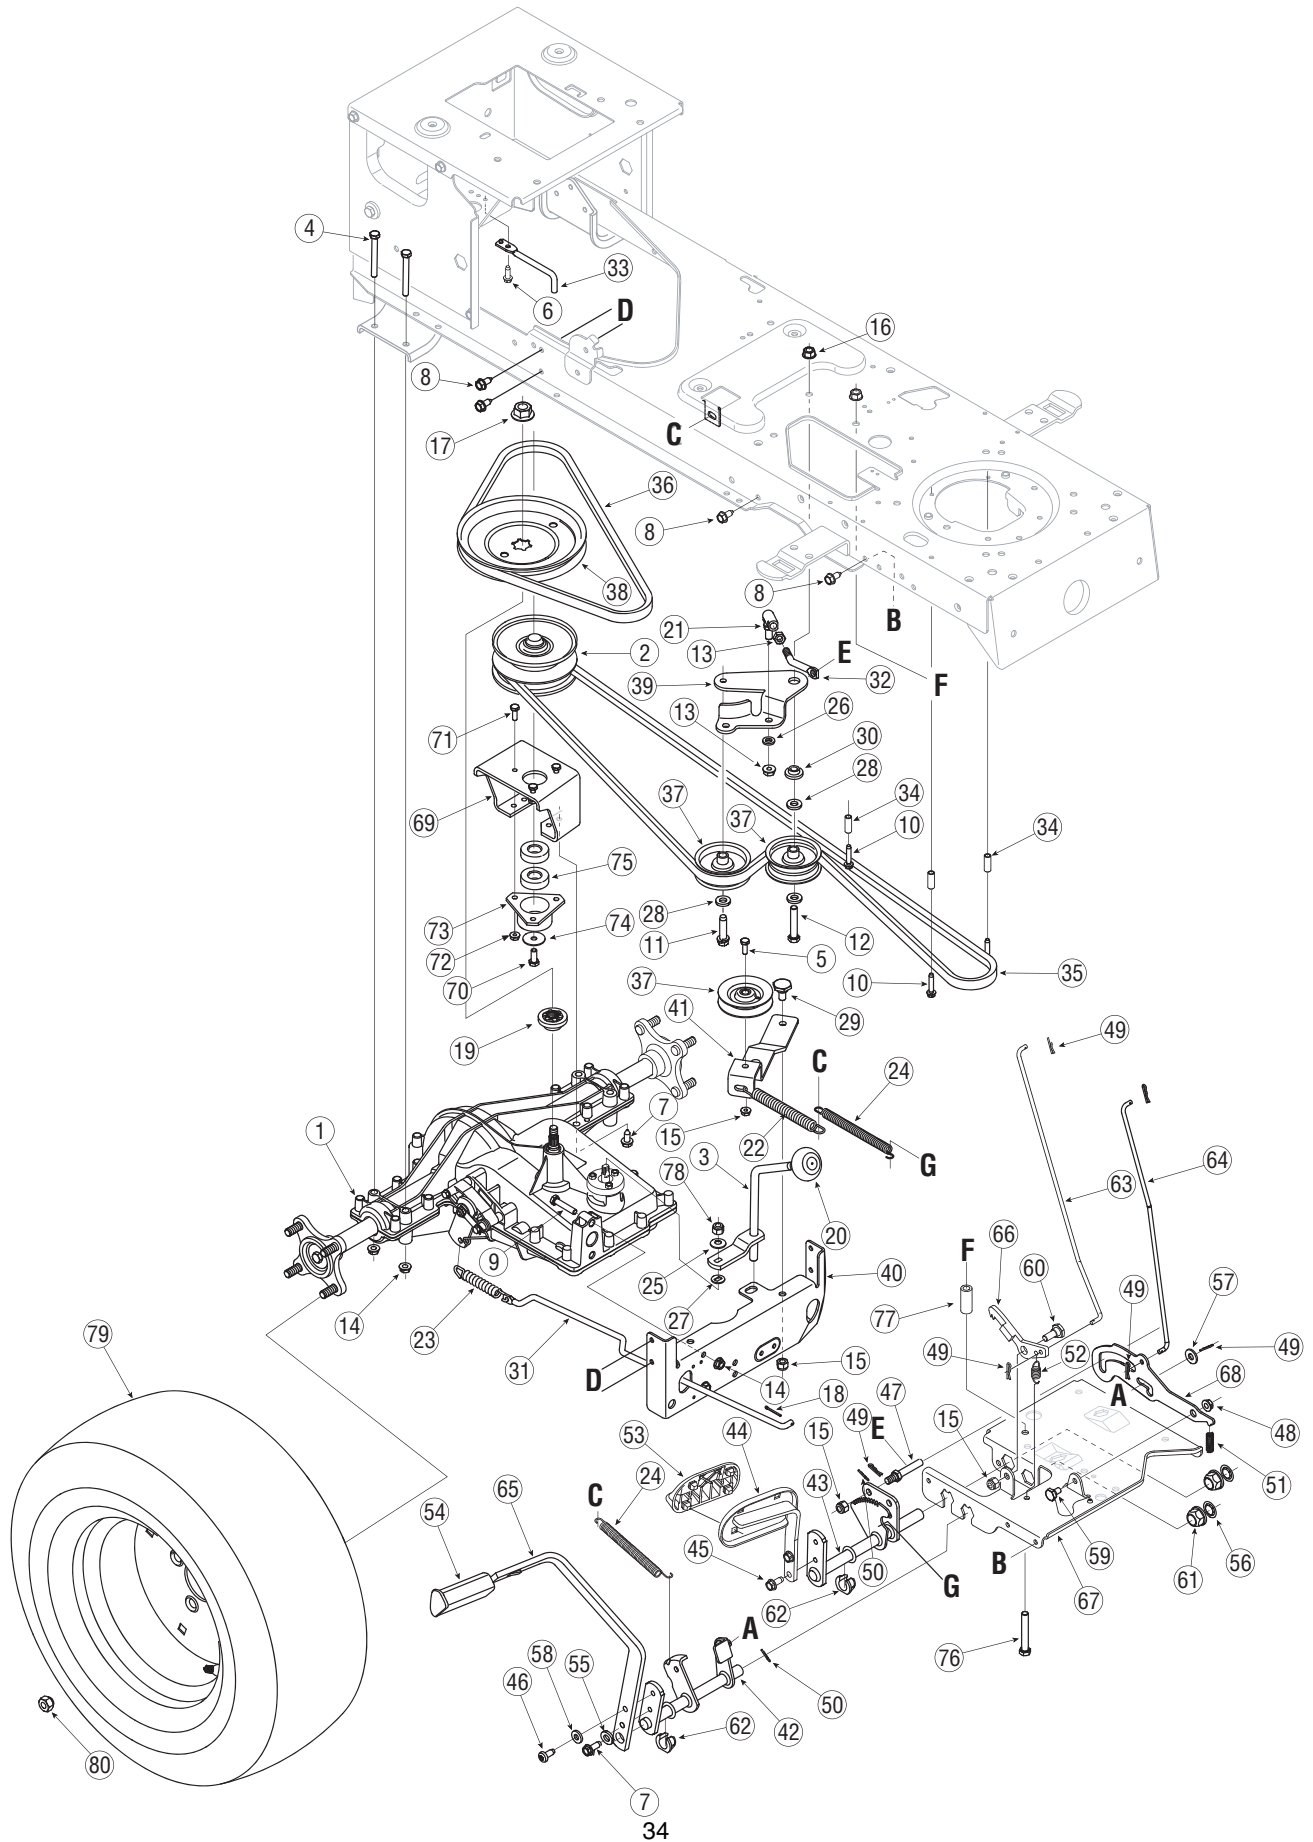

Model GT50

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
1	753-05002	Transmission Assembly, 2-Speed	42	647-0031B	Control Assembly, Brake
2	656-04015	Pulley Assembly, Variable Speed	43	647-0032A	Control Assembly, Speed
3	647-04023	Rod Assembly, Shift, 2-Speed	44	683-0266	Pedal Assembly, Control
4	710-0176	Screw, 5/16-18, 2.75, Gr5	45	710-1260A	Screw, 5/16-18, 0.750
5	710-0347	Screw, 3/8-16, 1.75, Gr5	46	710-1611B	Screw, 5/16-18, 0.750
6	710-0642	Screw, 1/4-20, 0.750	47	711-04159B	Pin, 3/8-16 x 2.68
7	710-0650	Screw, 5/16-18, 0.875	48	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
8	710-0726	Screw, 5/16-12, 0.750	49	714-0104	Pin, Cotter, .072 Dia. x 1.13
9	710-0805	Screw, 5/16-18, 1.50, Gr5	50	714-0111	Pin, Cotter, 3/32, 1.0
10	710-0809	Screw, 1/4-20, 1.250	51	732-0335	Spring, Compression, .405 x 1.17
11	710-1007	Screw, Sems, 3/8-16, 1.500	52	732-0955	Spring, Extension, .50 OD x 1.41
12	710-3011	Screw, 3/8-16, 2.25, Gr5	53	735-0662	Pad, Drive Control
13	712-0241	Nut, Hex, 3/8-24, Gr5	54	735-3049	Pad, Brake
14	712-04063	Nut, Flange Lock, 5/16-18, GrF, Nylon	55	736-0119	Washer, Lock, 5/16, Regular Duty
15	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon	56	736-0187	Washer, Flat, .64 x 1.24 x .06
16	712-0431	Nut, Flange Lock, 3/8-16, GrF,	57	736-0262	Washer, Flat, .385 x .870 x .092
17	712-0702	Nut, Flange, 7/16-20, Gr2	58	736-3008	Washer, Flat, .344 x .750 x .120
18	714-0507	Pin, Cotter, 3/32 x .750	59	738-0155	Shoulder Screw, .437 Dia x .162
19	718-0771A	Hub, Pulley, 1/2 Spline	60	738-0380	Screw, Shoulder, .50 x .27, 3/8-16
20	720-04028	Knob, Shift	61	741-0225	Bearing, Hex Flange
21	723-3018	Ball, Joint	62	741-3065B	Bearing, Hex Flange, .628 ID, Split
22	732-0478	Extension, Spring 6.12	63	747-04093	Control Rod, Brake Lock
23	732-0716C	Spring, Extension, .59 OD x 4.00	64	747-04096	Control Rod, Cruise
24	732-0963	Spring, Extension, .50 Dia x 6.37	65	747-04521	Pedal, Brake
25	736-0105	Washer, Bell, .375 x .870 x .063	66	748-04039B	Latch, Cruise
26	736-0169	Washer, Lock, 3/8, Regular Duty	67	783-04612	Bracket, Steering Support
27	736-0642	Washer, Flat, .44x.75x.06, Ht Spcl	68	783-0732A	Bracket, Lockout
28	736-3010	Washer, Flat, .407x.812x.135, Ht	69	618-04200	Pulley Bracket
29	738-0322	Screw, Shoulder, .625 Dia x .217	70	710-0627	Screw, 5/16-24, .75
30	738-0372B	Spacer, Shoulder, 1.00 x .38 x .38	71	710-3015	Screw, 1/4-20, .75
31	747-04136	Brake Rod	72	712-3027	Nut, Flange Lock, 1/4-20
32	747-1127	Adjustment Rod, Idlr, 3/8	73	718-04012	Bearing Cup
33	747-1185A	Rod, Belt Guard	74	736-0362	Washer, Flat, .330 x 1.25 x .06
34	750-0566A	Spacer, .260 x .372 x 1.030	75	741-0600	Ball Bearing
35	754-0467	Belt, V-Type	76	710-3011	Screw, 3/8-16, 2.25
36	754-0468	Belt, V-Type	77	748-0415B	Spacer, .385 x .635 x 1.54
37	756-04224	Pulley, Flat Idler, 2.75	78	712-0181	Nut, Jam Lock, 3/6-16
38	756-0665	Pulley, V-Type, 8.50	79	634-0202A	Wheel Assembly, 23 x 10.5 x 12
39	783-04442	Idler Bracket, Center Double		734-04147	Tire, 23 x 10.5 x 12
40	783-0667B	Torque Bracket, Transmission,		634-3178	Rim Assembly
41	783-0669	Bracket, Idler	80	712-3050	Lug Nut, 7/16-14


Model GT50

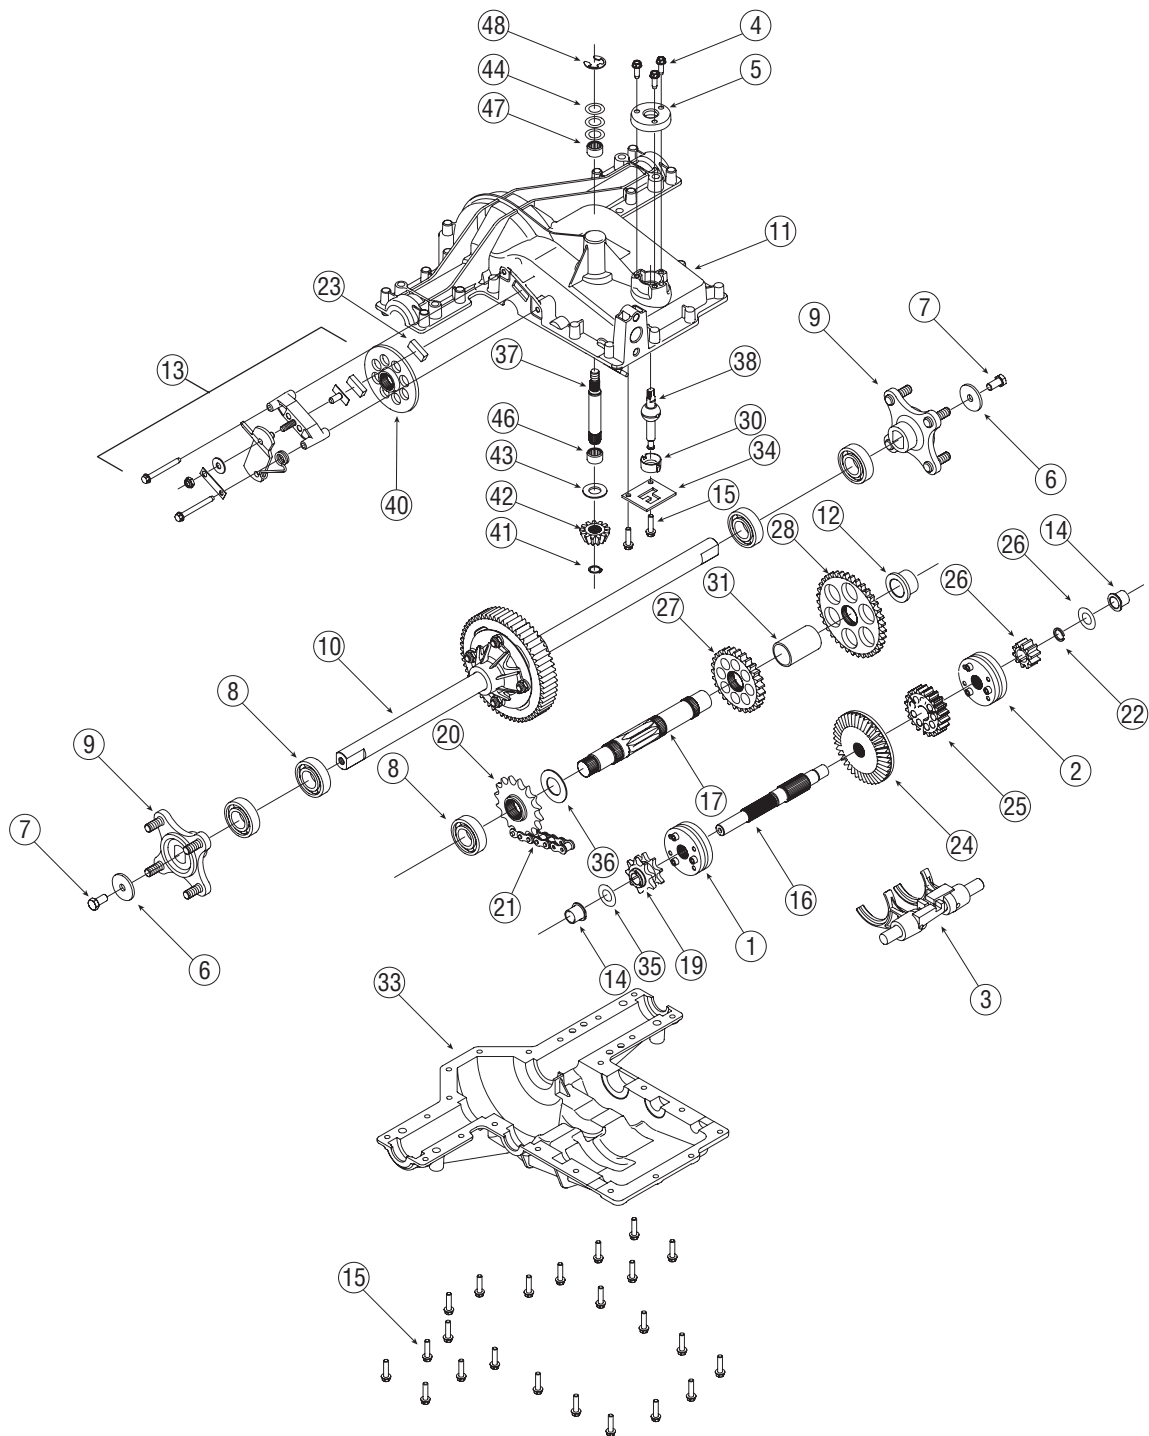

Model GT50

REF. NO.	PART NO.	DESCRIPTION
1	618-0225	Reverse Collar Assembly
2	618-0226	Hi-Lo Collar Assembly
3	918-04156	Shift Fork Assembly
4	910-0642	Self-tapping Screw, 1/4-20 x .75
5	718-04053	Shift Cover
6	936-0227	Flat Washer
7	710-3119	Lock bolt 3/8-16 x 0.75
8	741-0681	Ball Bearing
9	918-04317	Wheel Hub Assembly
10	918-04142	Differential Axle Assembly
11	619-04081	Upper Housing
12	941-0476	Flanged Bearing
13	961-0012	Brake Assembly
14	741-04085	Flanged Bearing
15	710-0788	Screw 1/4-20 x 1.0
16	711-1051A	Drive Shaft
17	711-1216	Output Shaft
19	913-0446	9-tooth Sprocket
20	913-0447	16-tooth Sprocket
21	913-0448	22-link Chain,.625
22	916-0131	External Snap Ring
23	917-0678	Brake Pad
24	917-1438A	41-tooth Bevel Gear
25	917-1439A	20-tooth Spur Gear
26	717-1440	10-tooth Spur Gear
27	717-04109	27-tooth Spur Gear
28	717-04110	37-tooth Spur Gear
30	718-0504	Shifter Insert
31	718-0505	Shifter Cover
33	753-05002	Lower Housing
34	718-0540	Lockout Plate
35	936-0337	Flat Washer, 5/8 x 1.0
36	736-3046A	Flat Washer, 1.01 x 1.86 x .060
37	711-1235	Input Shaft
38	747-1140	Shift Lever
40	761-0215	Disc Brake
41	916-0114	Retaining Ring,.56
42	717-1463A	13-tooth Bevel Gear
43	936-0335	Flat Washer
44	936-0336	Flat Washer, 5/8 x 1.0 x .030*
	936-0337	Flat Washer, 5/8 x 1.0 x .040*
	936-0349	Flat Washer, 5/8 x 1.0 x .020*
46	941-0335	Needle Bearing
47	741-0696	Needle Bearing
48	916-0231	E-ring,.75

Model GT50

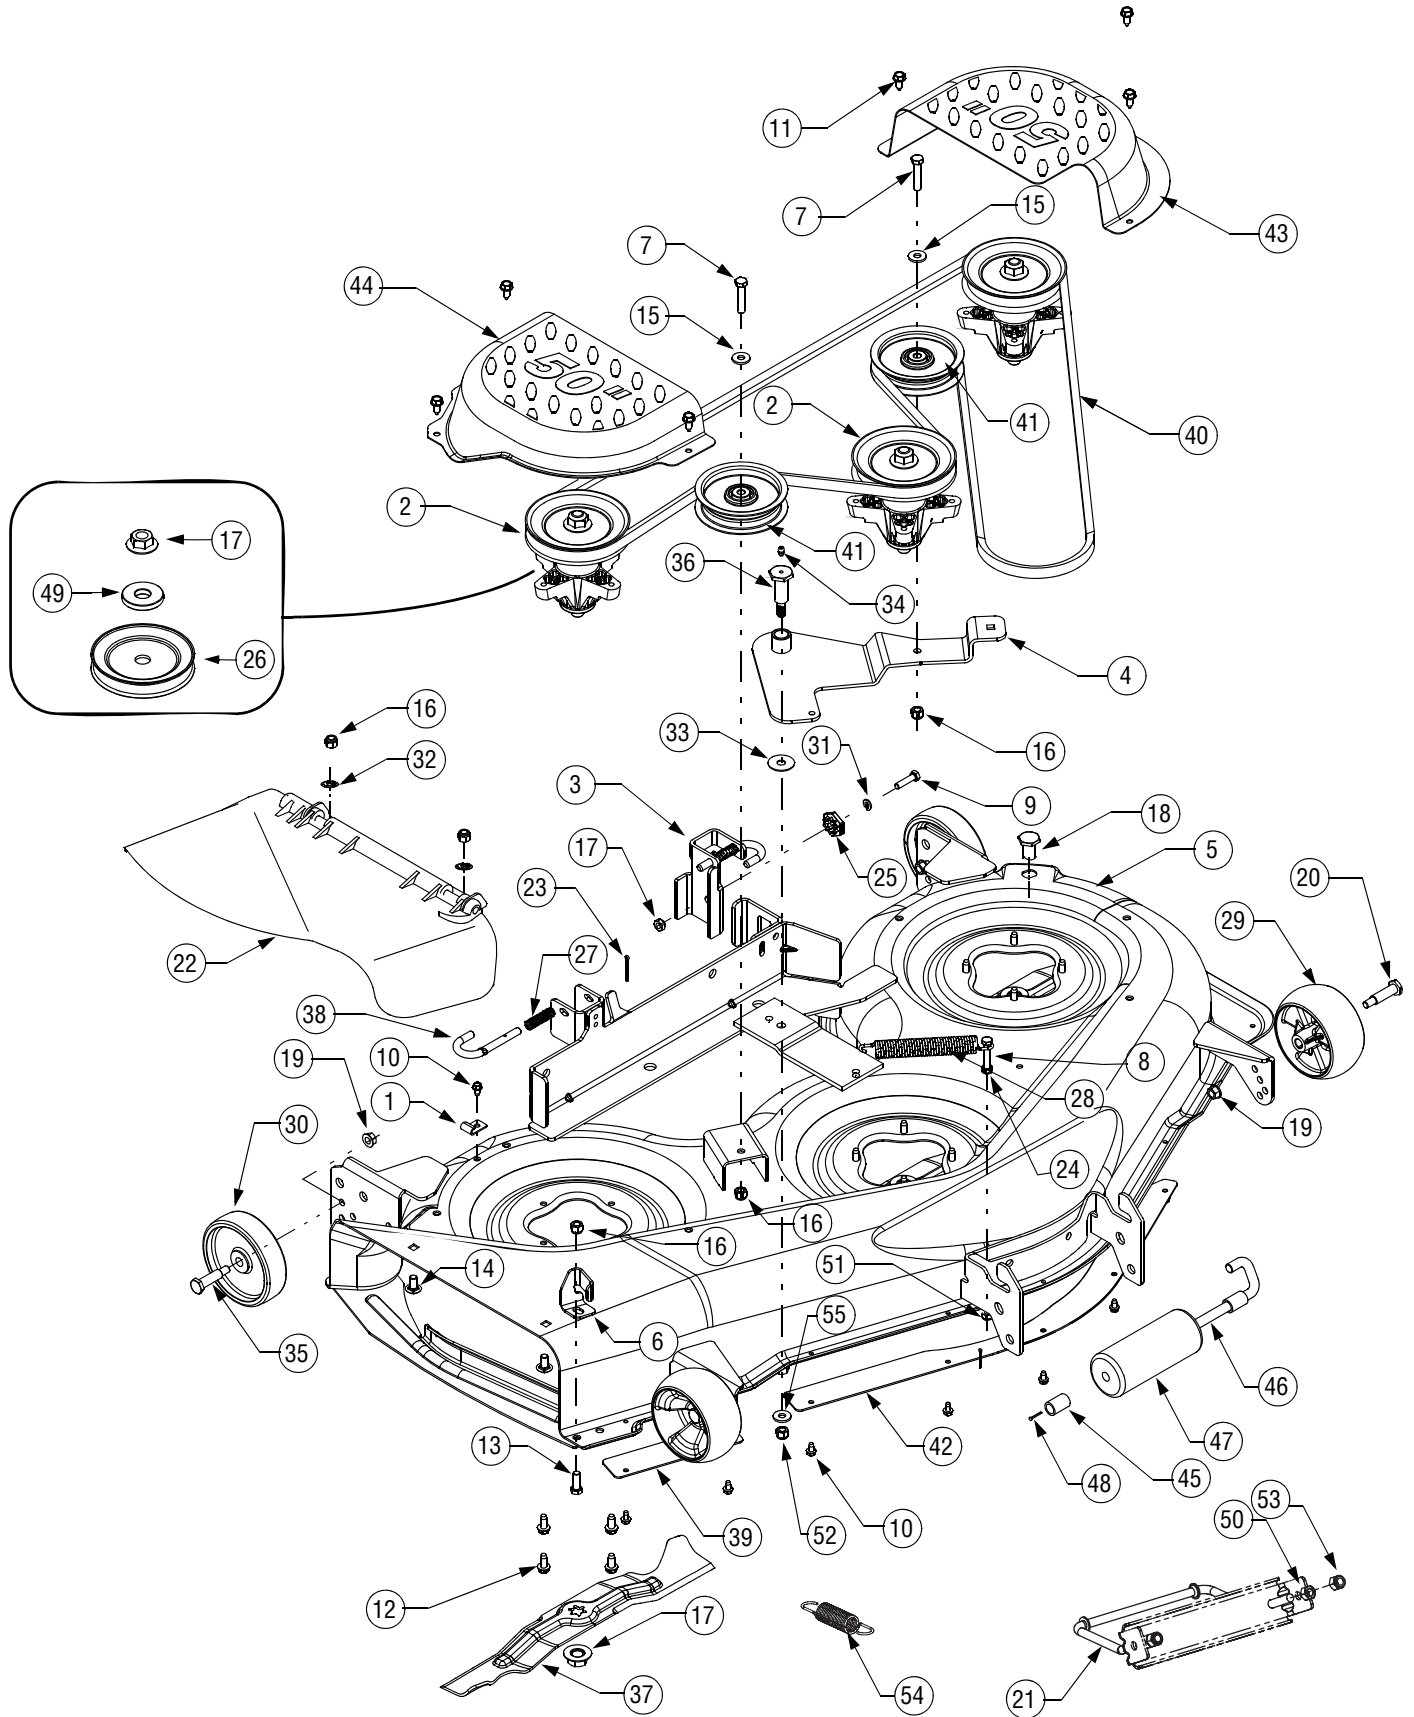

Model GT50

REF. NO.	PART NUMBER	DESCRIPTION
1	16606	Hook, Retainer
2	618-04126	Spindle Assembly
3	683-0254B	Hanger Bracket Assembly
4	683-04239	Idler Bracket
5	683-04109B	Deck Assembly, 50-inch
6	703-3279	Deflector Chute Stop
7	710-0347	Screw, 3/8-16, 1.75
8	710-3103	Screw, 5/16-18 x 2.00
9	710-0528	Screw, 5/16-18, 1.25, Gr5
10	710-0599	Screw, 1/4-20 x 0.5
11	710-0607	Screw, 5/16-18 x.500
12	710-1260A	Screw, 5/16-18 x.75
13	710-04095	Screw, 3/8-16 x 1.0
14	710-3178	Screw, Carriage, 3/8-16 x.75
15	736-0300	Washer, Flat,.406 x.875 x.059
16	712-04065	Nut, Nylon Lock, 3/8-16
17	712-0417A	Nut, Hex, Flange, 5/8-18
18	738-04146	Plug, Screw, M16 x 1.5
19	712-0431	Nut, Flange Lock, 3/8-16
20	738-3056	Shld, Screw, 1/2 Dia. x 2.50 Lg.
21	747-1324	Rod, Deck, Front
22	631-04070A	Chute Assembly, Side Discharge
23	714-0470	Pin, Cotter, 1/8 x 1.25
24	712-3010	Nut, Hex, 5/16-18
25	717-04074	Deck Adjustment Gear
26	756-1171	Pulley, 5.39"
27	732-0306A	Spring, Compression,.531 x 1.75
28	732-0459B	Spring, Extension,.94 x 6.74
29	734-04155	Deck Wheel, 5.0
30	734-0973	Deck Wheel, 5.0
31	736-0119	Washer, Lock, 5/16
32	712-0229	Push Nut, 3/8
33	736-0406	Washer, Flat,.442 x 1.38 x.060
34	737-3000	Fitting, Lube, 3/16
35	738-0373	Shoulder Screw
36	738-3005A	Screw, Shoulder,.68 x 1.59
37	742-04053A	Blade, 17.90
38	747-1116	Rod, Deck Release.375 Dia.
39	783-04415	Deck Skirt, RH
40	754-04107	Belt, V-Type, Aramid
41	756-04129	Pulley, Idler, 3.5"
42	783-04414A	Deck Skirt, Center
43	783-04399	LH Belt Cover
44	783-04400	RH Belt Cover
45	750-0151	Spacer, 1.1"
46	711-1737	Roller Pin
47	731-3005	Roller
48	714-0111	Pin, Cotter, 3/32 x 1.00
49	736-0315	Wash, Flat,.760 x 1.50 x.120
50	712-0206	Nut, Hex, 1/2-13
51	712-04063	Nut, Flange Lock, 5/16-18
52	712-3019	Nut, Hex, 7/16-14
53	712-3083	Nut, Hex Lock, 1/2-13
54	732-0934	Spring, Extension, 1.15 Dia. x 5.99
55	736-0407	Wash, Bell,.45 x 1.00 x.062