


ILLUSTRATED PARTS MANUAL

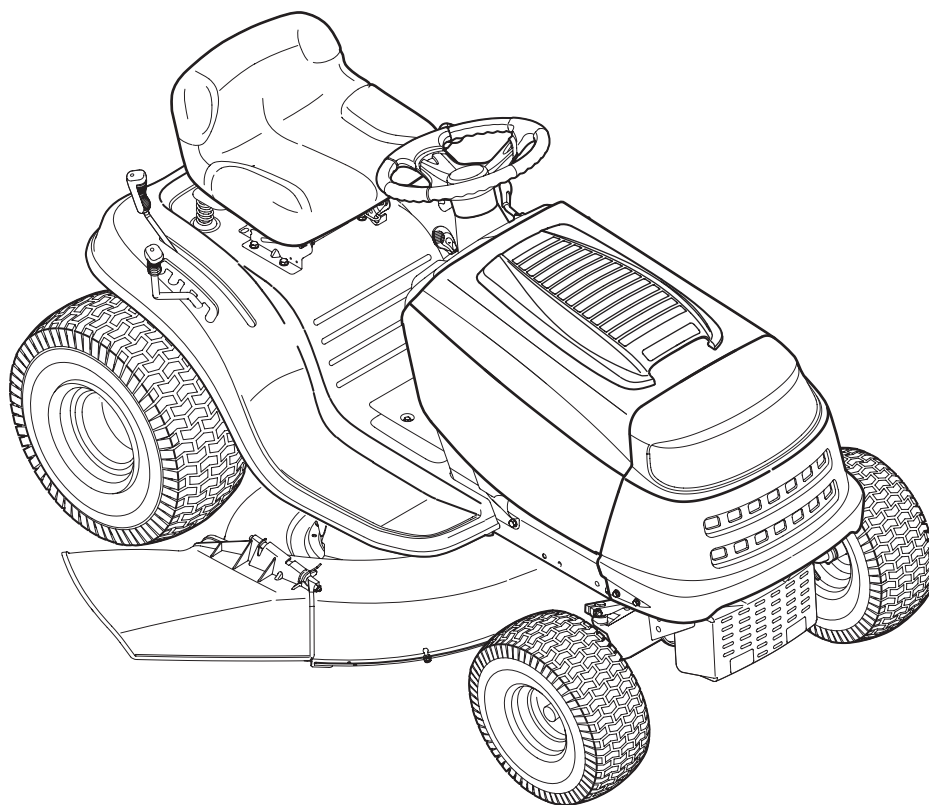

Transmatic Lawn Tractor — Model Series 700

MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019


Model Series 771

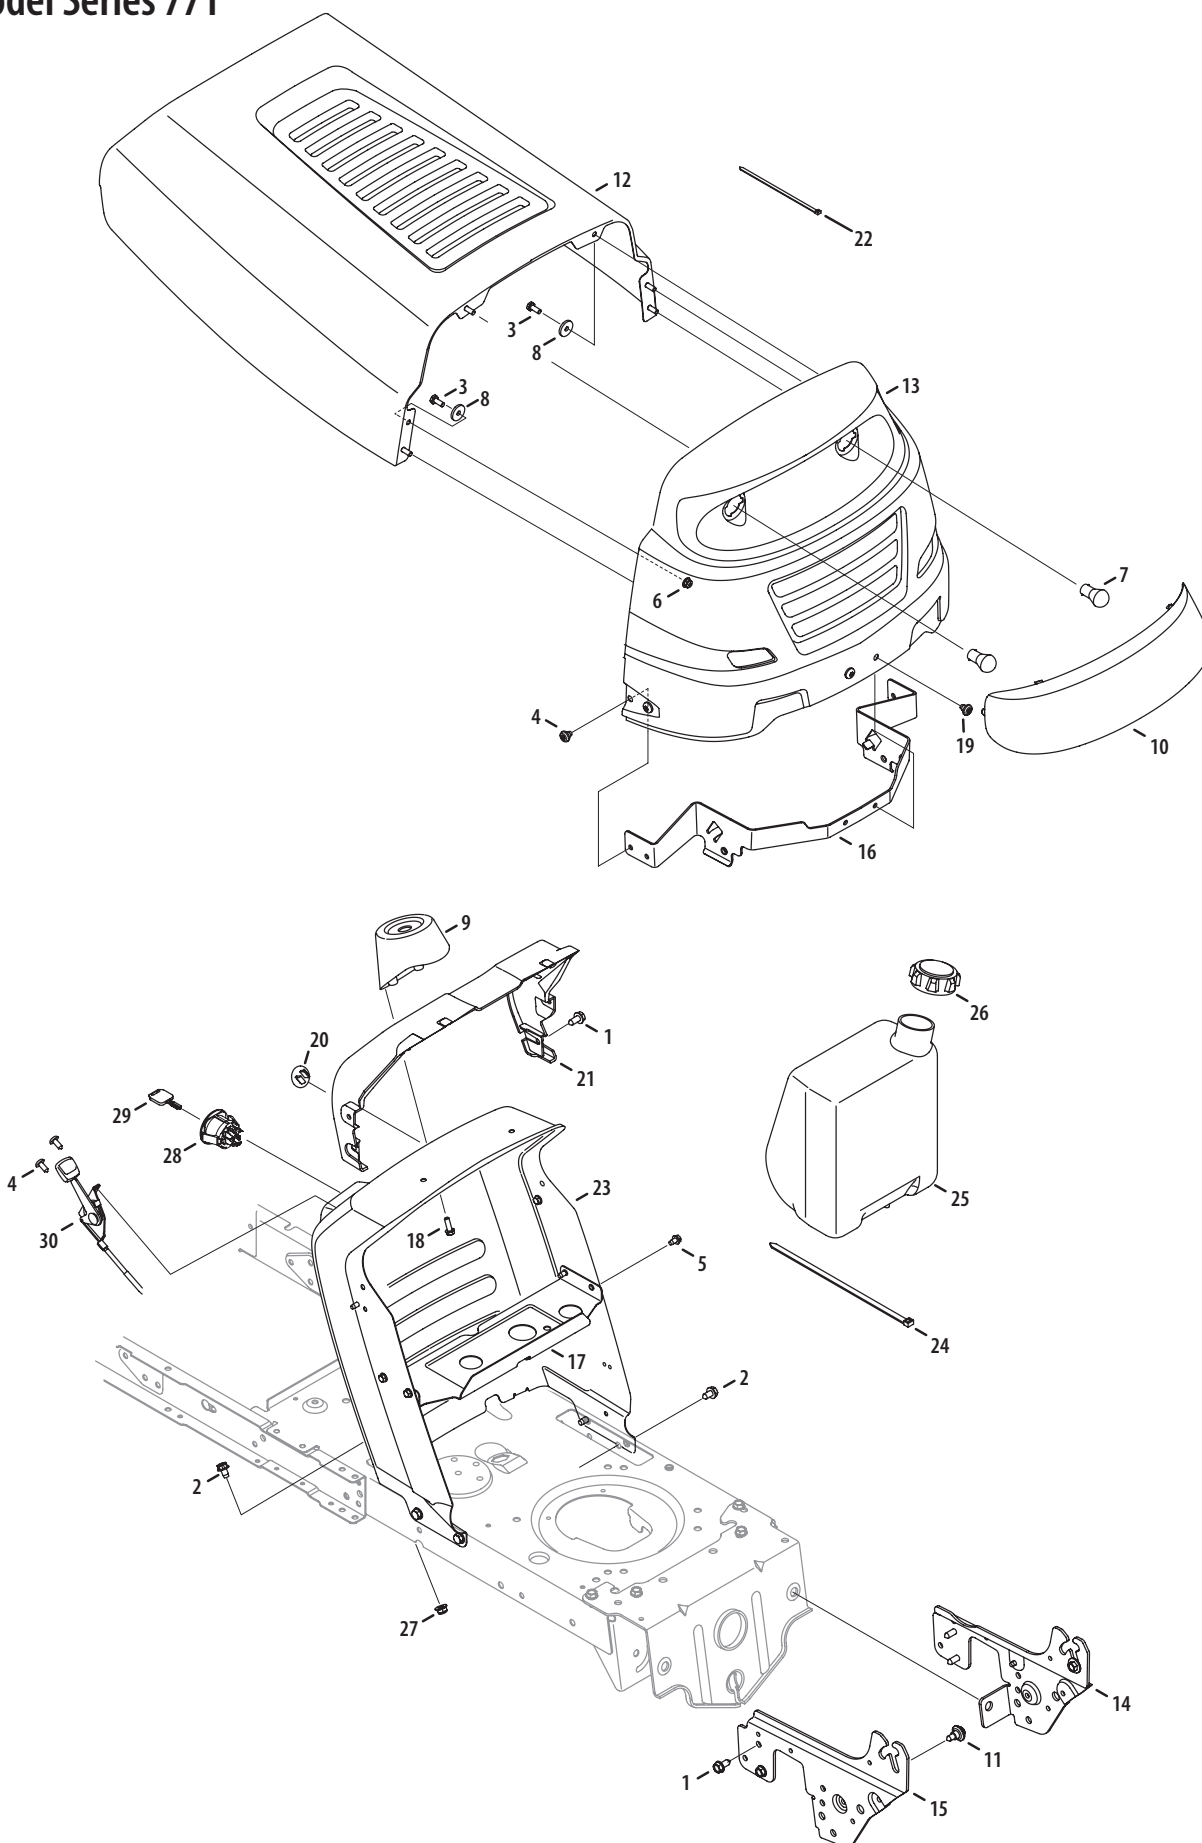

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	710-04484	Self-Tapping Screw 5/16-18 x .750	19	710-04593	Self-Tapping Screw 5/16-18 x .375
2	710-0604A	Screw, 5/16-18, 0.625	20	731-05265	Dash Plug
3	710-0751	Screw, 1/4-20, .620, Gr5	21	731-05078C	Collar, Dash
4	710-04483	Screw, 1/4-20, .500	22	725-0157	Cable Tie
5	710-0599	Screw, 1/4-20, 0.500	23	783-04873	Dash Assembly (No RMC)
6	712-04064	Nut, Flange Lock, 1/4-20, Gr5	24	726-0230	Cable Tie, 34.75
7	725-0963	Headlamp, 12V	25	751-0555B	Fuel Tank, 1.5 gal.
8	736-0176	Washer, Flat, .265 x .938 x .120	26	751-0603	Fuel Tank Cap
9	731-04945	Support, Steering	27	712-04063	Flange Lock Nut 5/16-18
10	731-04949A	Lens	28	725-04659	Ignition, Switch (No RMC) 3 Position
11	738-04091A	Screw, Shoulder, .43 x.29, 5/16-18		725-1741	Ignition, Switch (No RMC) 4 Position
12	783-05684	Hood Style 1	29	725-1744A	Key
13	783-05685	Grille Style 1	30	746-04364	Throttle/Choke Control, 25"
14	783-05327A	Pivot Bracket, LH			(Single Cylinder Engine)
15	783-05328	Pivot Bracket, RH	—	725-04567	Wire Harness (No RMC) 3 Pos. Switch
16	783-05454	Pivot Bracket, Grille	—	725-04433A	Wire Harness (No RMC) 4 Pos. Switch
17	783-04584	Gas Tank Support Bracket	—	777X41984	Headlight Lens Reflector
18	710-0895	Screw, 1/4-15, 0.750			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model Series 762 & 772

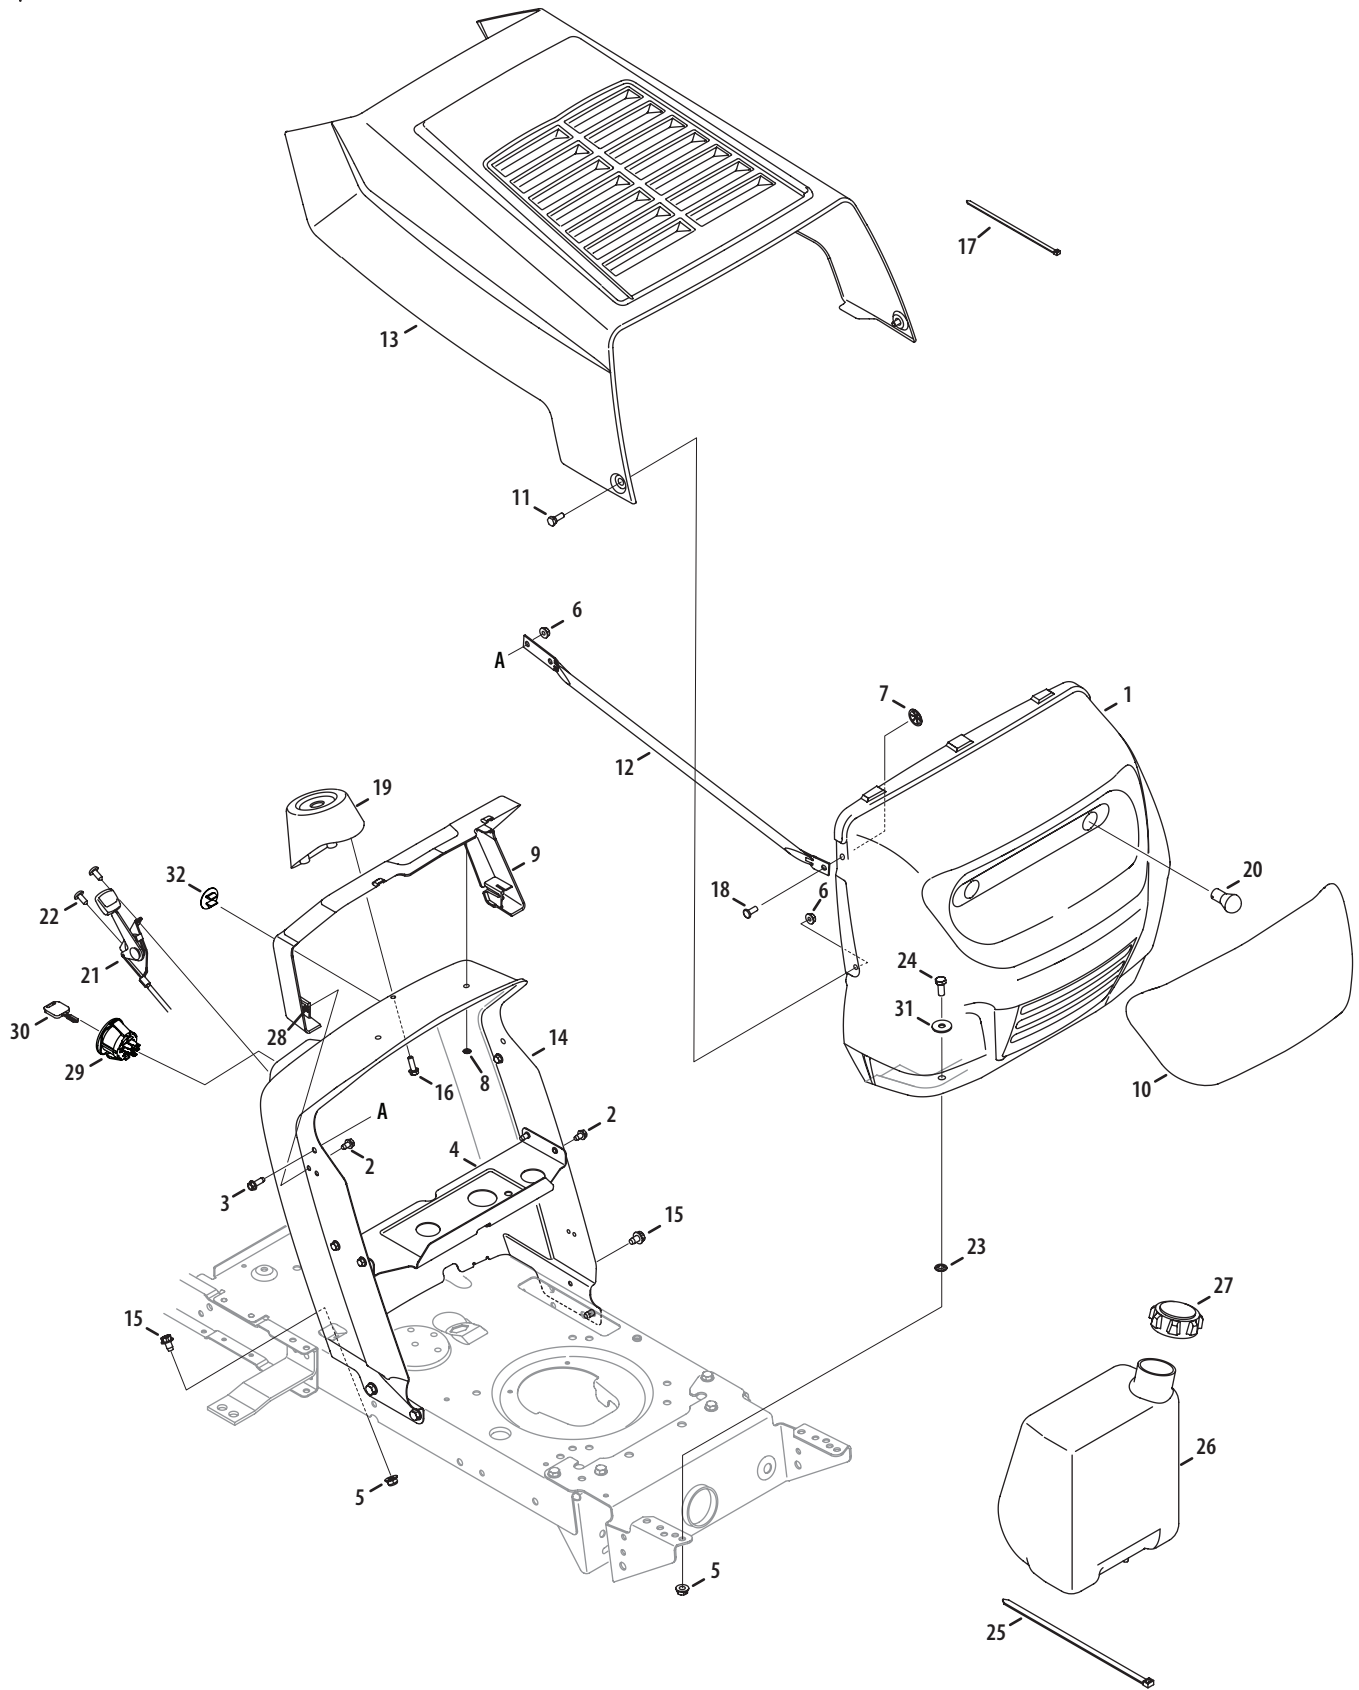


Ref. No.	Part No.	Description
1	783-05656	Grille
2	710-0599	Screw, 1/4-20, 0.500
3	710-0642	Screw, 1/4-20, 0.750
4	783-04584	Gas Tank Support Bracket
5	712-04063	Nut, Flange Lock, 5/16-18, GrF
6	712-04064	Nut, Flange Lock, 1/4-20, GrF
7	726-04012	Nut, Push-on, .25 Dia
8	726-0233	Push Nut, .25ID x .50OD
9	731-05012A	Collar, Dash, 0-Style
10	731-06042	Lens
11	738-0952A	Screw, Shldr, .375 x .125, 1/4-20
12	749-04220	Support Rod, Grill
13	783-04608	Hood
14	783-04873	Dash Assembly (No RMC)
15	710-0604A	Screw, 5/16-18, 0.625
16	710-0895	Screw, 1/4-15, 0.750
17	725-0157	Cable Tie
18	728-0162	Rivet, Flat Head 1/4"

Ref. No.	Part No.	Description
19	731-04945	Support, Steering
20	725-0963	Headlamp, 12V
21	746-04364	Throttle/Choke Cable, 25"
22	710-04483	Screw, 1/4-14, .500
23	726-0201	Speed Nut, .3125
24	710-3008	Screw, 5/16-18, .750
25	726-0230	Cable Tie, 34.75
26	751-0555B	Fuel Tank, 1.5 gal.
27	751-0603	Fuel Tank Cap
28	712-0185	Nut, 1/4-20
29	725-04659	Ignition, Switch (No RMC) 3 Position
	725-1741	Ignition, Switch (No RMC) 4 Position
30	725-1744A	Key
31	736-3078	Flat Washer, .344 x 1.00 x .063
32	731-05265	Dash Plug
—	725-04567	Wire Harness (No RMC) 3 Position
—	725-04433A	Wire Harness (No RMC) 4 Position
—	777X40065	Headlight Lens Reflector

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Model Series 775

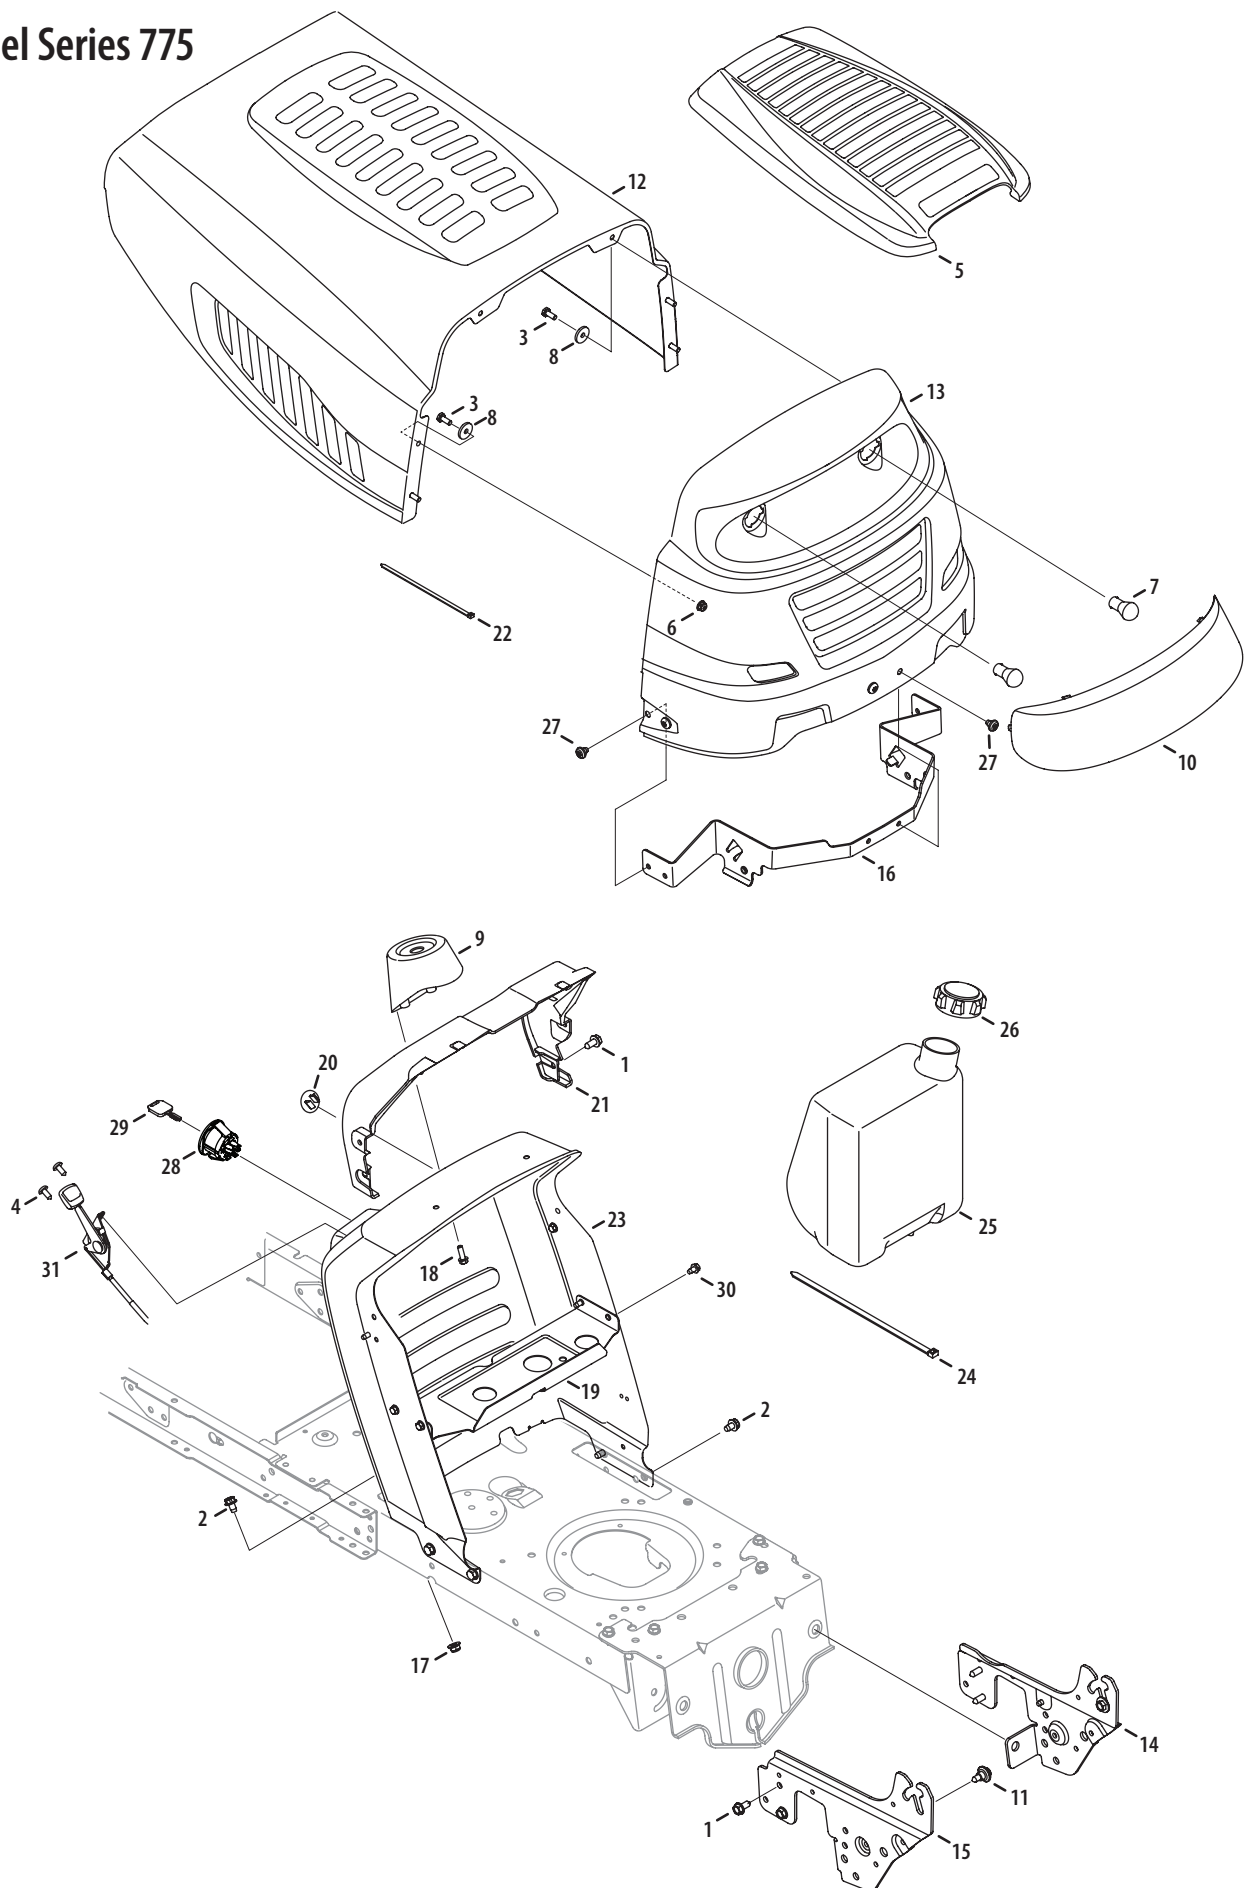

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	710-04484	Self-Tapping Screw 5/16-18 x .750	19	783-04584	Gas Tank Support Bracket
2	710-0604A	Screw, 5/16-18, 0.625	20	731-05265	Dash Plug
3	710-0751	Screw, 1/4-20, .620, Gr5	21	731-05078C	Collar, Dash
4	710-04483	Screw, 1/4-20, .500	22	725-0157	Cable Tie
5	731-05522A	5-Style Hood Cover	23	783-04873	Dash Assembly (No RMC)
6	712-04064	Nut, Flange Lock, 1/4-20, Gr5	24	726-0230	Cable Tie, 34.75
7	725-0963	Headlamp, 12V	25	751-0555B	Fuel Tank, 1.5 gal.
8	736-0176	Washer, Flat, .265 x .938 x .120	26	751-0603	Fuel Tank Cap
9	731-04945	Support, Steering	27	710-04593	Self-Tapping Screw 5/16-18 x .375
10	731-04949A	Lens	28	725-04659	Ignition, Switch (No RMC) 3 Pos.
11	738-04091A	Screw, Shoulder, .43 x .29, 5/16-18		725-1741	Ignition, Switch (No RMC) 4 Pos.
12	783-05683	Hood Style 5	29	725-1744A	Key
13	783-05685	Grille Style 1	30	710-0599	Screw, 1/4-20, 0.500
14	783-05327B	Pivot Bracket, LH	31	746-04364	Throttle/Choke Control, 25"
15	783-05328A	Pivot Bracket, RH			(Single Cylinder Engine)
16	783-05454	Pivot Bracket, Grille	—	725-04566	Wire Harness (No RMC) 3 Pos.
17	712-04063	Flange Lock Nut 5/16-18	—	725-04433A	Wire Harness (No RMC) 4 Pos.
18	710-0895	Screw, 1/4-15, 0.750	—	777X41984	Headlight Lens Reflector



NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model Series 77K

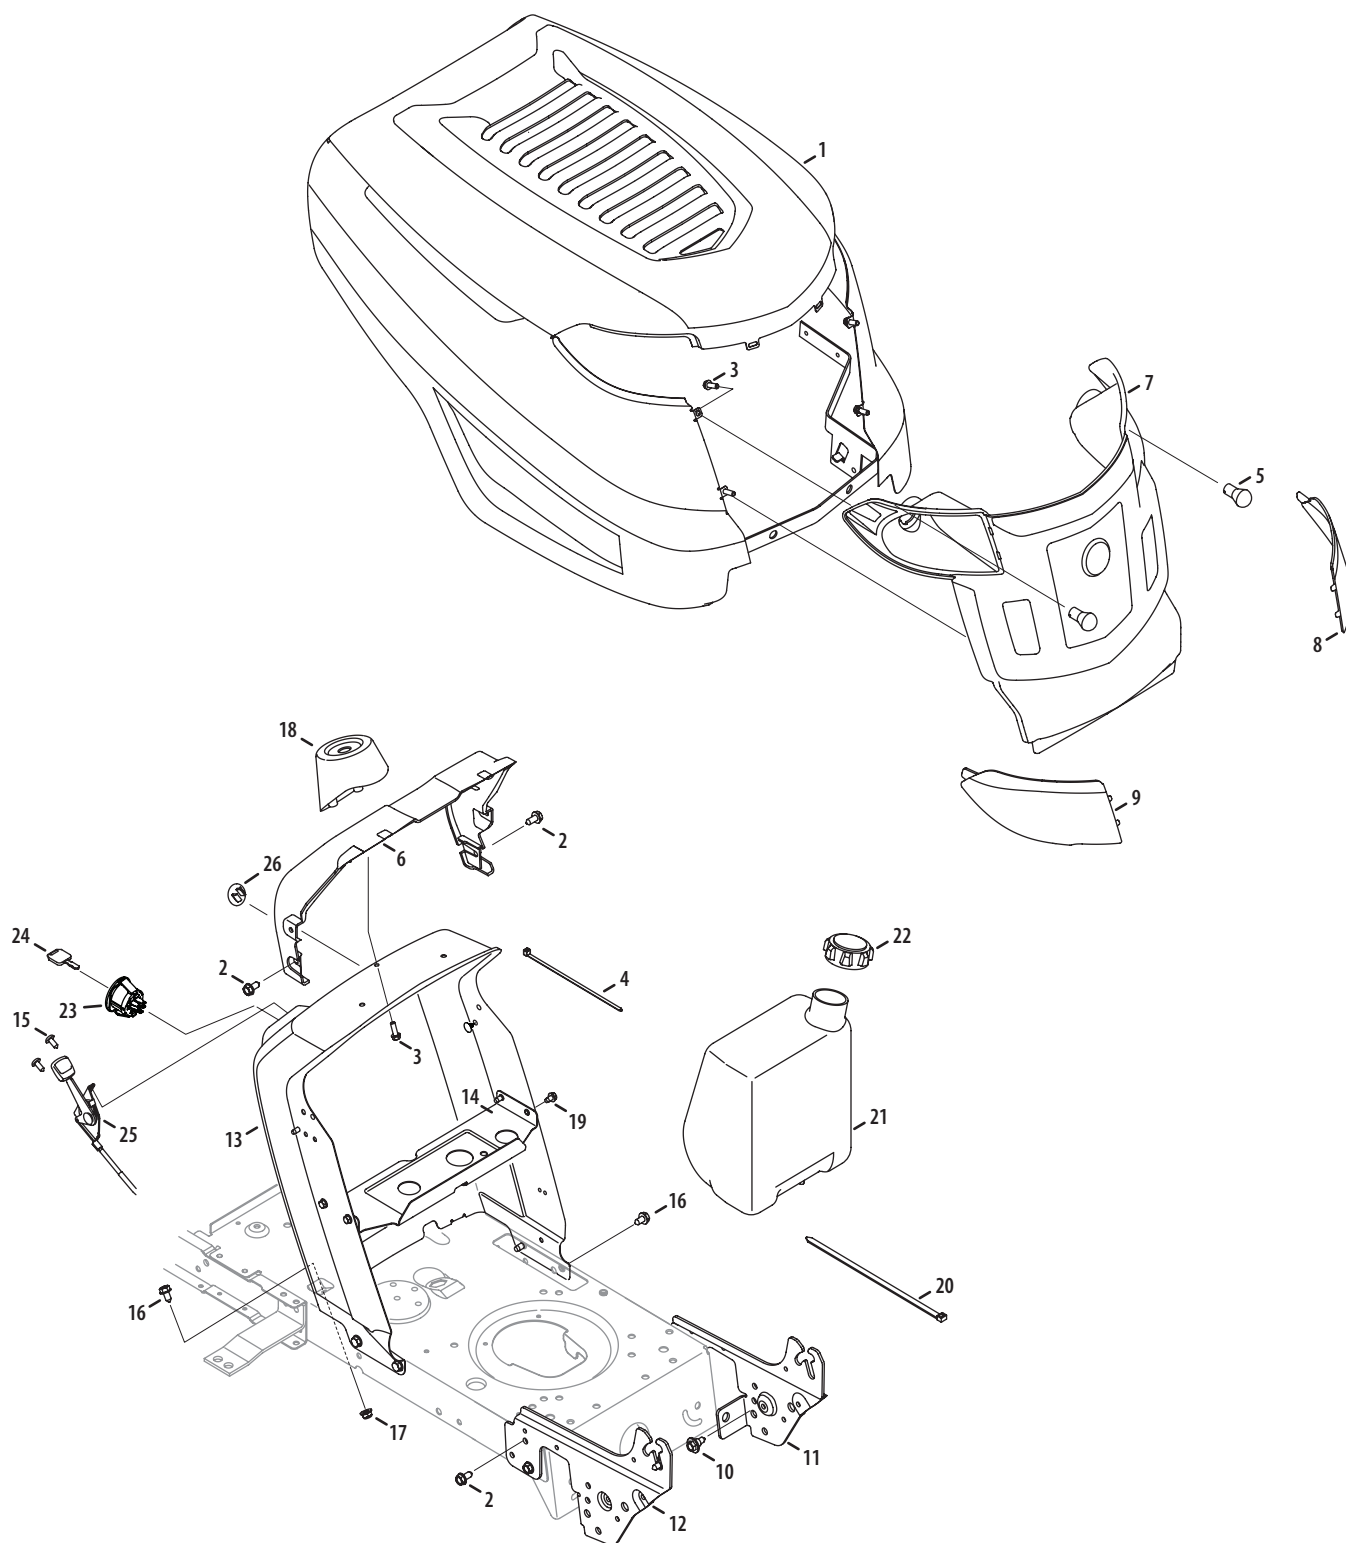

Ref. No.	Part No.	Description
1	683-04441	K Style Hood Assembly
2	710-04484	Screw, 5/16-18, 0.750
3	710-0895	Screw, 1/4-15, .750
4	725-0157	Cable Tie, 3/16 x .05 x 7.4
5	725-0963	Headlamp, 12V
6	731-05078C	Dash Collar
7	731-06094	K-Style Grill
8	731-06095	Lens, LH
9	731-06096	Lens, RH
10	738-04091A	Screw, Shldr, .43 x .29, 5/16-18
11	783-05327	Hood Pivot Bracket, LH
12	783-05328	Hood Pivot Bracket, RH
13	783-04873	Dash Assembly
14	783-04584	Gas Tank Support Bracket
15	710-04483	Screw, 1/4-14, .500
16	710-0604A	Screw, 5/16-18, 0.625
17	712-04063	Flange Lock Nut 5/16-18
18	731-04945	Support, Steering
19	710-0599	Screw, 1/4-20, 0.500
20	726-0230	Cable Tie, 3/4.75
21	751-0555B	Fuel Tank, 1.5 gal.
22	751-0603	Fuel Tank Cap
23	725-04659	Ignition, Switch (No RMC) 3 Position
	725-1741	Ignition, Switch (No RMC) 4 Position
24	725-1744A	Key
25	746-04364	Throttle/Choke Control, 25.0
26	731-05265	Choke Plug
—	725-04567	Wire Harness (No RMC) 3 Position
	725-04433A	Wire Harness (No RMC) 4 Position
—	777X42188	Headlight Lens Reflector RH
—	777X42187	Headlight Lens Reflector LH


Model Series 700

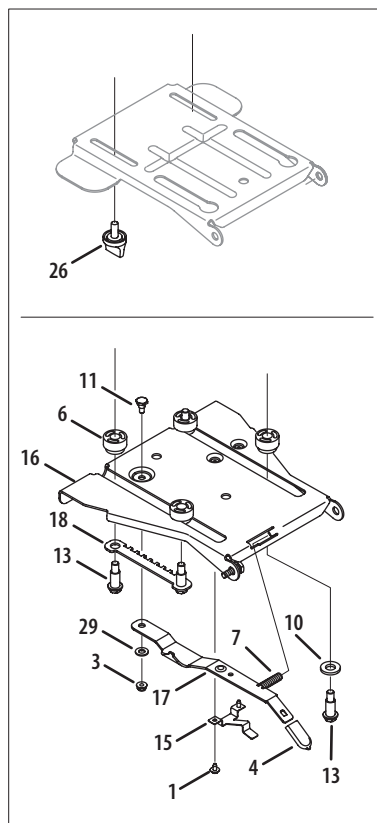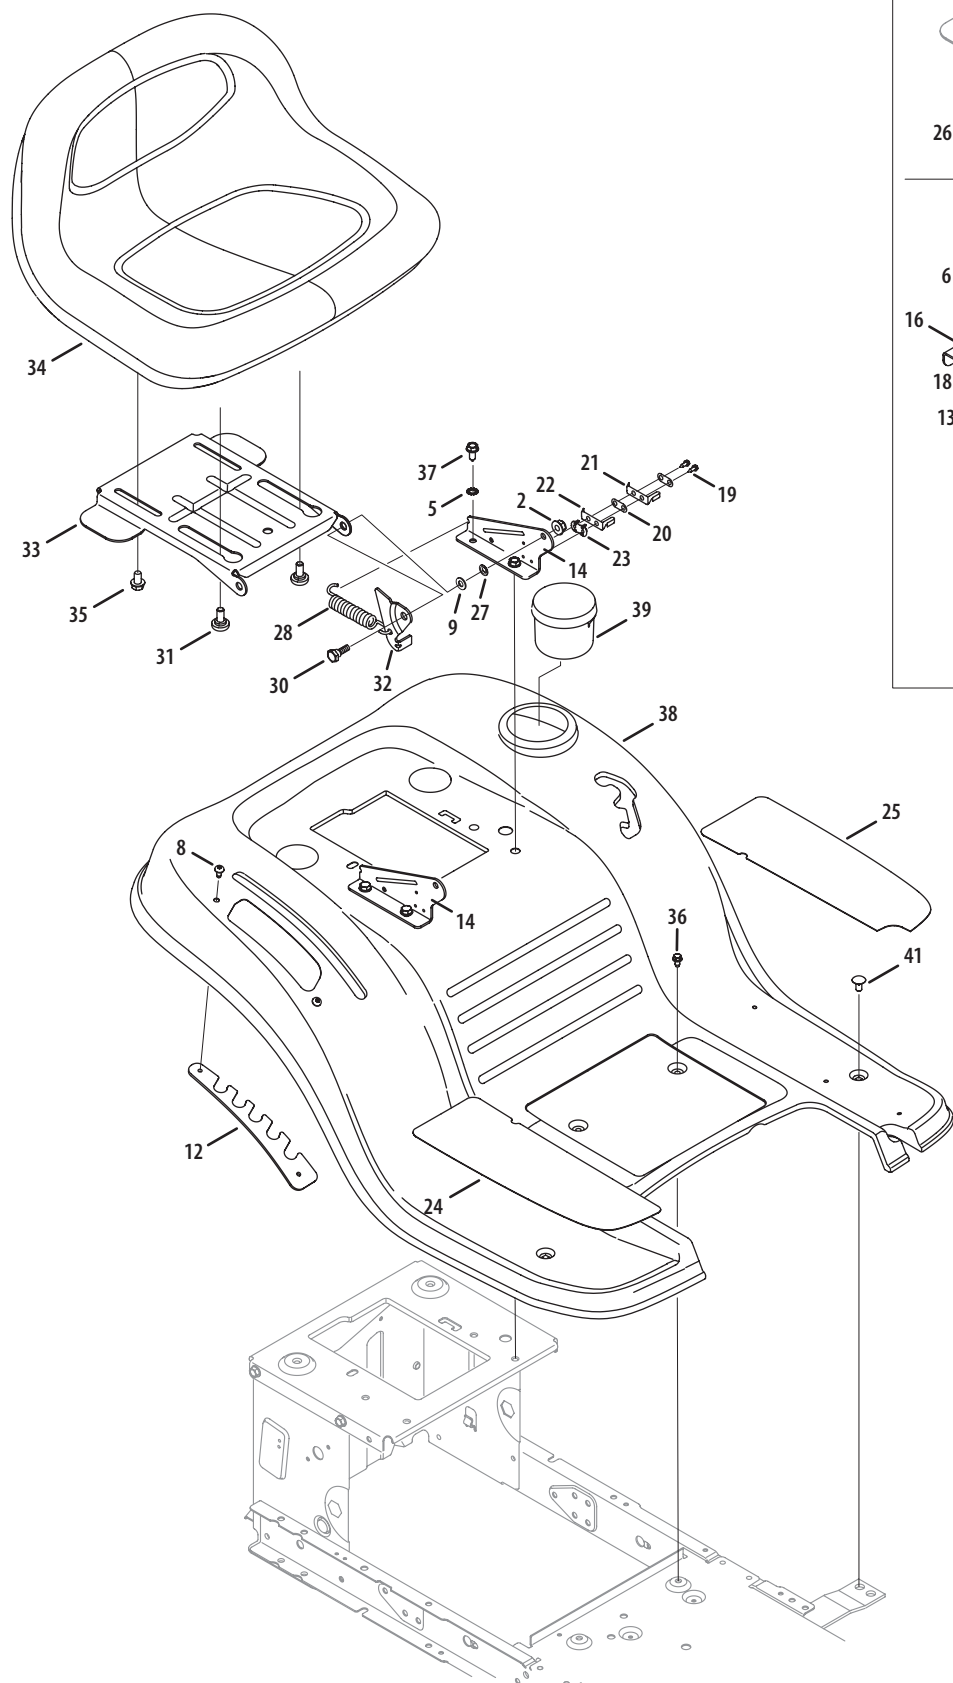

Ref. No.	Part No.	Description
1	710-1268	Screw, #10-16, .375
2	712-04063	Nut, Flange Lock, 5/16-18, GrF
3	712-04064	Nut, Flange Lock, 1/4-20
4	720-0309A	Seat Adjuster Grip
5	736-0607	Lock Washer, 5/16
6	731-04074	Spacer
7	732-0499	Compression Spring, .41 x 1.5
8	710-04483	Screw, 1/4-20 x .500
9	736-0242	Wash, Bell, .340 x .872 x .060
10	736-3019	Wash, Flat, .531x 1.062 x.134
11	738-0137A	Screw, Shlder, .340 x .285,1/4-20
12	783-04843	Lift Adjustment Bracket
13	738-0966A	Screw, Shlder, .50 x .925, 3/8-16
14	783-1489C	Mounting Bracket, Seat
15	783-0611	Seat Stop
16	783-0738D	Seat Pivot Bracket
17	783-0739A	Seat Adjustment Lever
18	783-0753	Seat Adjustment Selector
19	710-0227	Screw, #8-18 x .50
20	726-0279	Plate, Insulator
21	725-1303	Spring Switch, Outer
22	725-1439	Spring Switch, Inner
23	726-0278	Plate, Insulator Boss
24	723-04025	Foot Pad, Abrasive, RH
	735-04048	Foot Pad, Rubber RH

Ref. No.	Part No.	Description
25	723-04026	Foot Pad, Abrasive, LH
	735-04047	Foot Pad, Rubber LH
26	720-04061	Knob, 3/8-16, .875
27	726-0201	Nut, Speed, .3125 Id
28	732-1184	Spring, Exten., .84 Dia x 4.6 Lg.
29	736-0204	Wash, Flat, .344 x .62 x .033
30	738-0296	Scr., Shlder, .437 x .268, 5/16-18
31	738-04012A	Screw, Shlder, .625 x .175, 3/8-16
32	783-0209D	Lift Bracket, Seat
33	783-04081B	Pivot Bracket, Seat
34	757-04001A	Seat, Low, Black
	757-04037	Seat, Medium, Black
	757-04011	Seat, Medium, Yellow
	757-04038A	Seat, Medium, Yellow
35	710-04482	Screw, 3/8-16, .875
36	710-0599	Screw, 1/4-20, 0.500
37	710-04484	Screw, 5/16-18, 0.750
38	783-04587A	Fender
39	731-04591A	Cup Holder
40	736-0300	Flat Washer, .406 x .875 x .059
	736-0140	Flat Washer, .395 x .62 x .063
—	726-04072A	Ratchet Clip (For use w/ rubber foot pad)
41	710-0134	Carriage Screw, 1/4-20 x .62


Model Series 700

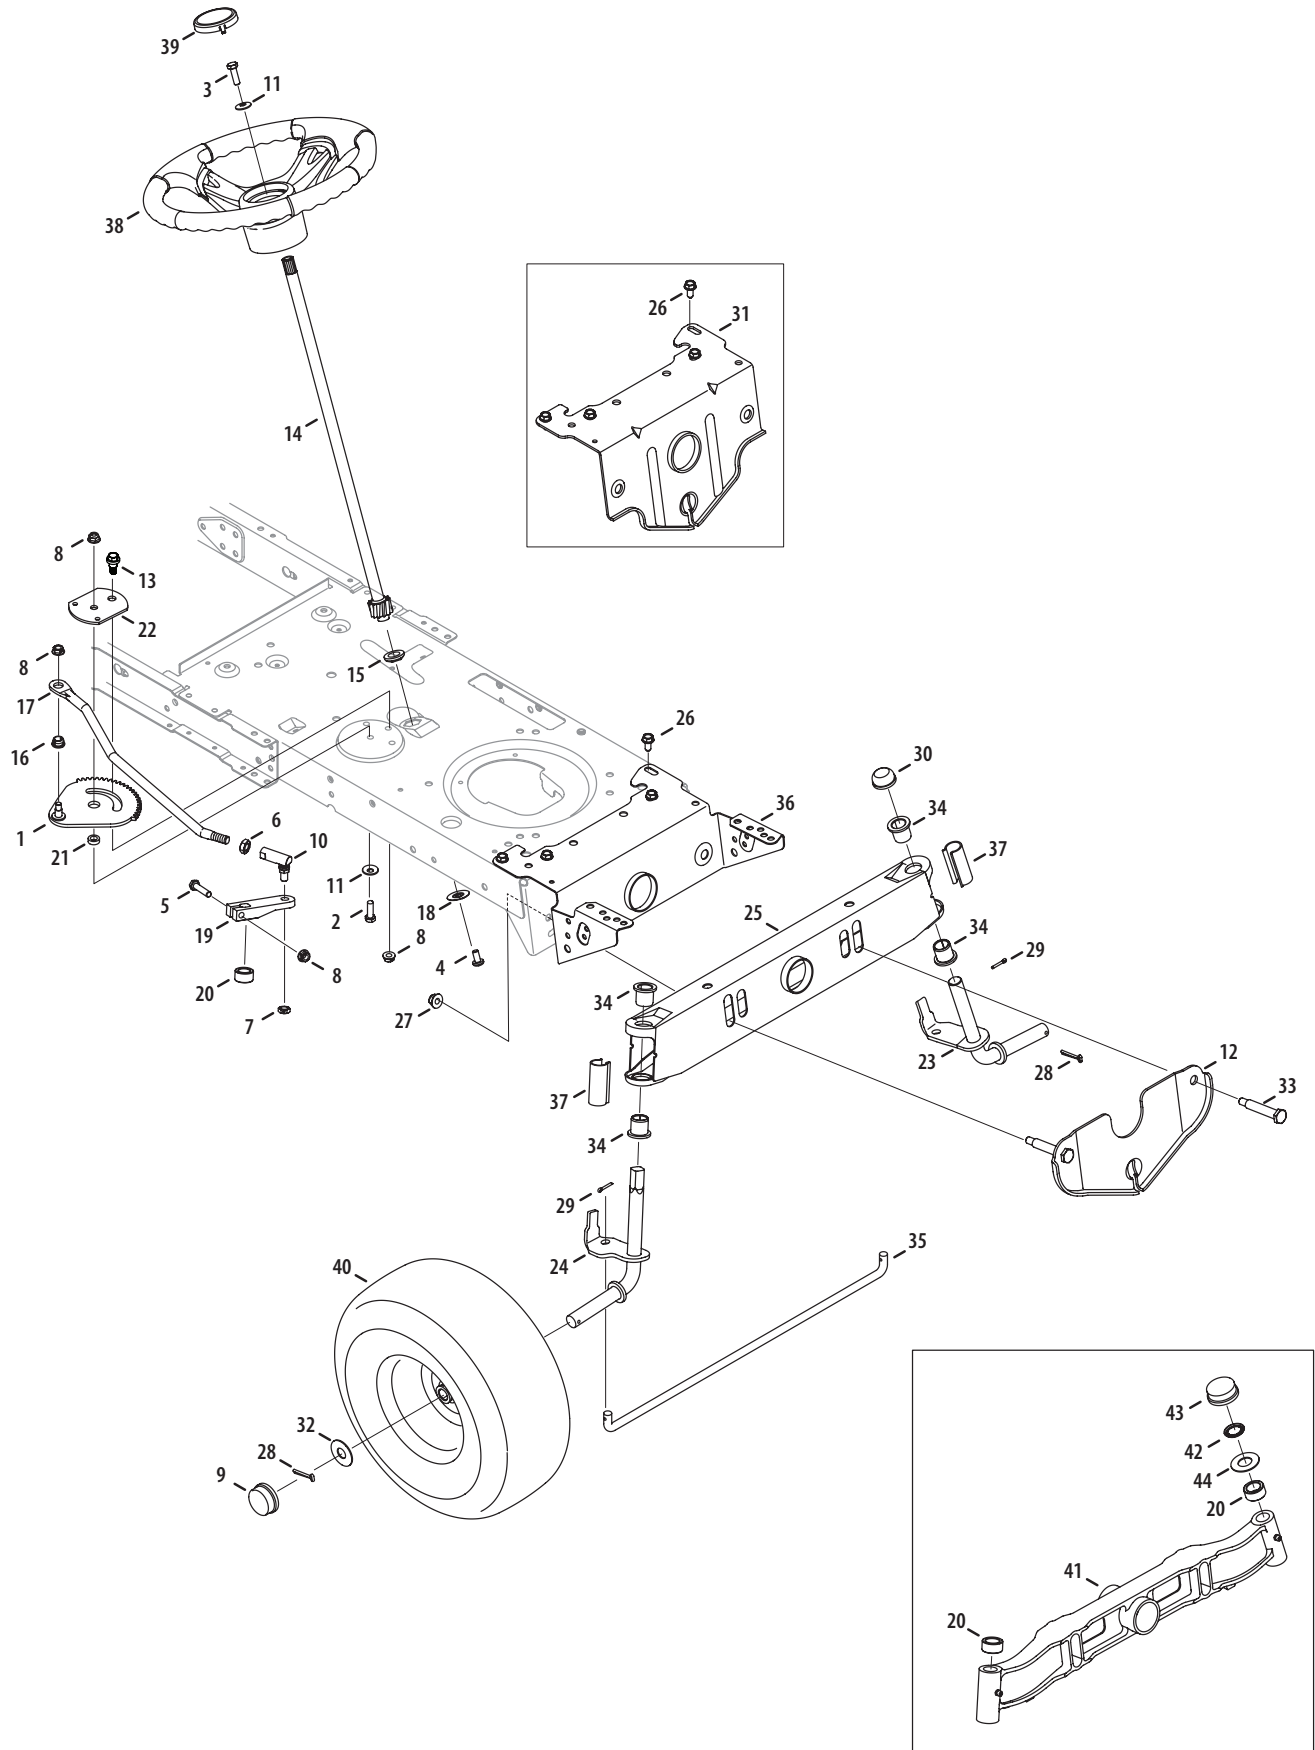

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	617-04024	Gear Assembly, Steering	26	710-04484	Screw, 5/16-18, 0.750
2	710-0376	Screw, 5/16-18, 1.00, Gr5	27	712-04065	Nut, Flange Lock, 3/8-16, GrF
3	710-0643	Screw, 5/16-18, 1.00, Gr5, Lock	28	714-04039	Pin, Cotter, 5/32, 1.25
4	710-1309	Screw, Mach, 5/16-18, 0.750	29	714-0474	Pin, Cotter, 1/8 x 0.75
5	710-3180	Screw, 5/16-18, 1.75, Gr5	30	726-0341	Push Cap, 3/4
6	712-0240	Nut, Jam, 7/16-20, Gr2	31	783-05326	Pivot Bar Bracket, T-Style Hood
7	712-0262	Nut, Jam Lock, 3/8-24, Gr2	32	736-0316	Washer, Flat, .78 x 1.59 x .060
8	712-04063	Nut, Flange Lock, 5/16-18, Grf	33	738-04128	Scr., Shlder, .500 x 2.380, 3/8-16
9	731-0484A	Hub Cap	34	741-0660A	Bearing, Flange, .760 x .941 x 1.0
10	723-0448A	Ball Joint, 7/16-20, Lock	35	747-04299A	Tie Rod
11	736-0242	Washer, Bell, .340 x .872 x .060	36	783-04601C	Bracket, Pivot
12	783-04568	Front Hanger Bracket, Deck	37	731-04057A	Axle End Cap, Standard
13	738-04141	Shoulder Screw, .435 x .3485, 5/16-18	38	631-04028	Steering Wheel, Standard Grip
14	738-0919A	Steering Shaft, 5/8 Spline x 21.86		631-04008A	Steering Wheel, Soft Grip
15	741-04124	Bearing, Flange, Hex 5/8	39	731-04039	Cap, Steering Wheel (no logo)
16	741-0475	Plastic Bushing .380 ID		731-04040	Cap, Steering Wheel (sprig logo)
17	747-04298	Drag Link, Steering		731-04681	Cap, Steering Wheel (tine logo)
18	748-0389	Cap, 1.25 x .16	40	634-04325	Wheel Ass'y, Round Shoulder
19	748-04065	Steering, Block		734-04240A	Tire Only, 15 x 6 x 6, Round Shld.
20	748-04068	Spacer, .710 ID x .125 OD x .56		634-04086	Wheel Ass'y, Square Shoulder
21	750-04418	Spacer, .322 ID x .625 OD x .21		734-1731	Tire Only, 15 x 6 x 6, Square Shld.
22	783-04644	Stabilizer Plate, Gear Segment		634-04081	Rim Assembly <i>(Incl. bearings & valve stem)</i>
23	638-04007	Axle Assmbly LH (38" & 42" Deck)	41	719-04177A	Pivot Bar, Cast
	638-04013	Axle Assembly, LH (46" Deck)	42	726-04035	Push Nut 3/4 Dia.
24	638-04008	Axle Assmbly RH (38" & 42" Deck)	43	731-04693	Push Cap
	638-04014	Axle Assembly, RH (46" Deck)	44	736-0316	Washer, Flat, .78 x 1.59 x .60
25	683-0128B	Pivot Bar			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model Series 700

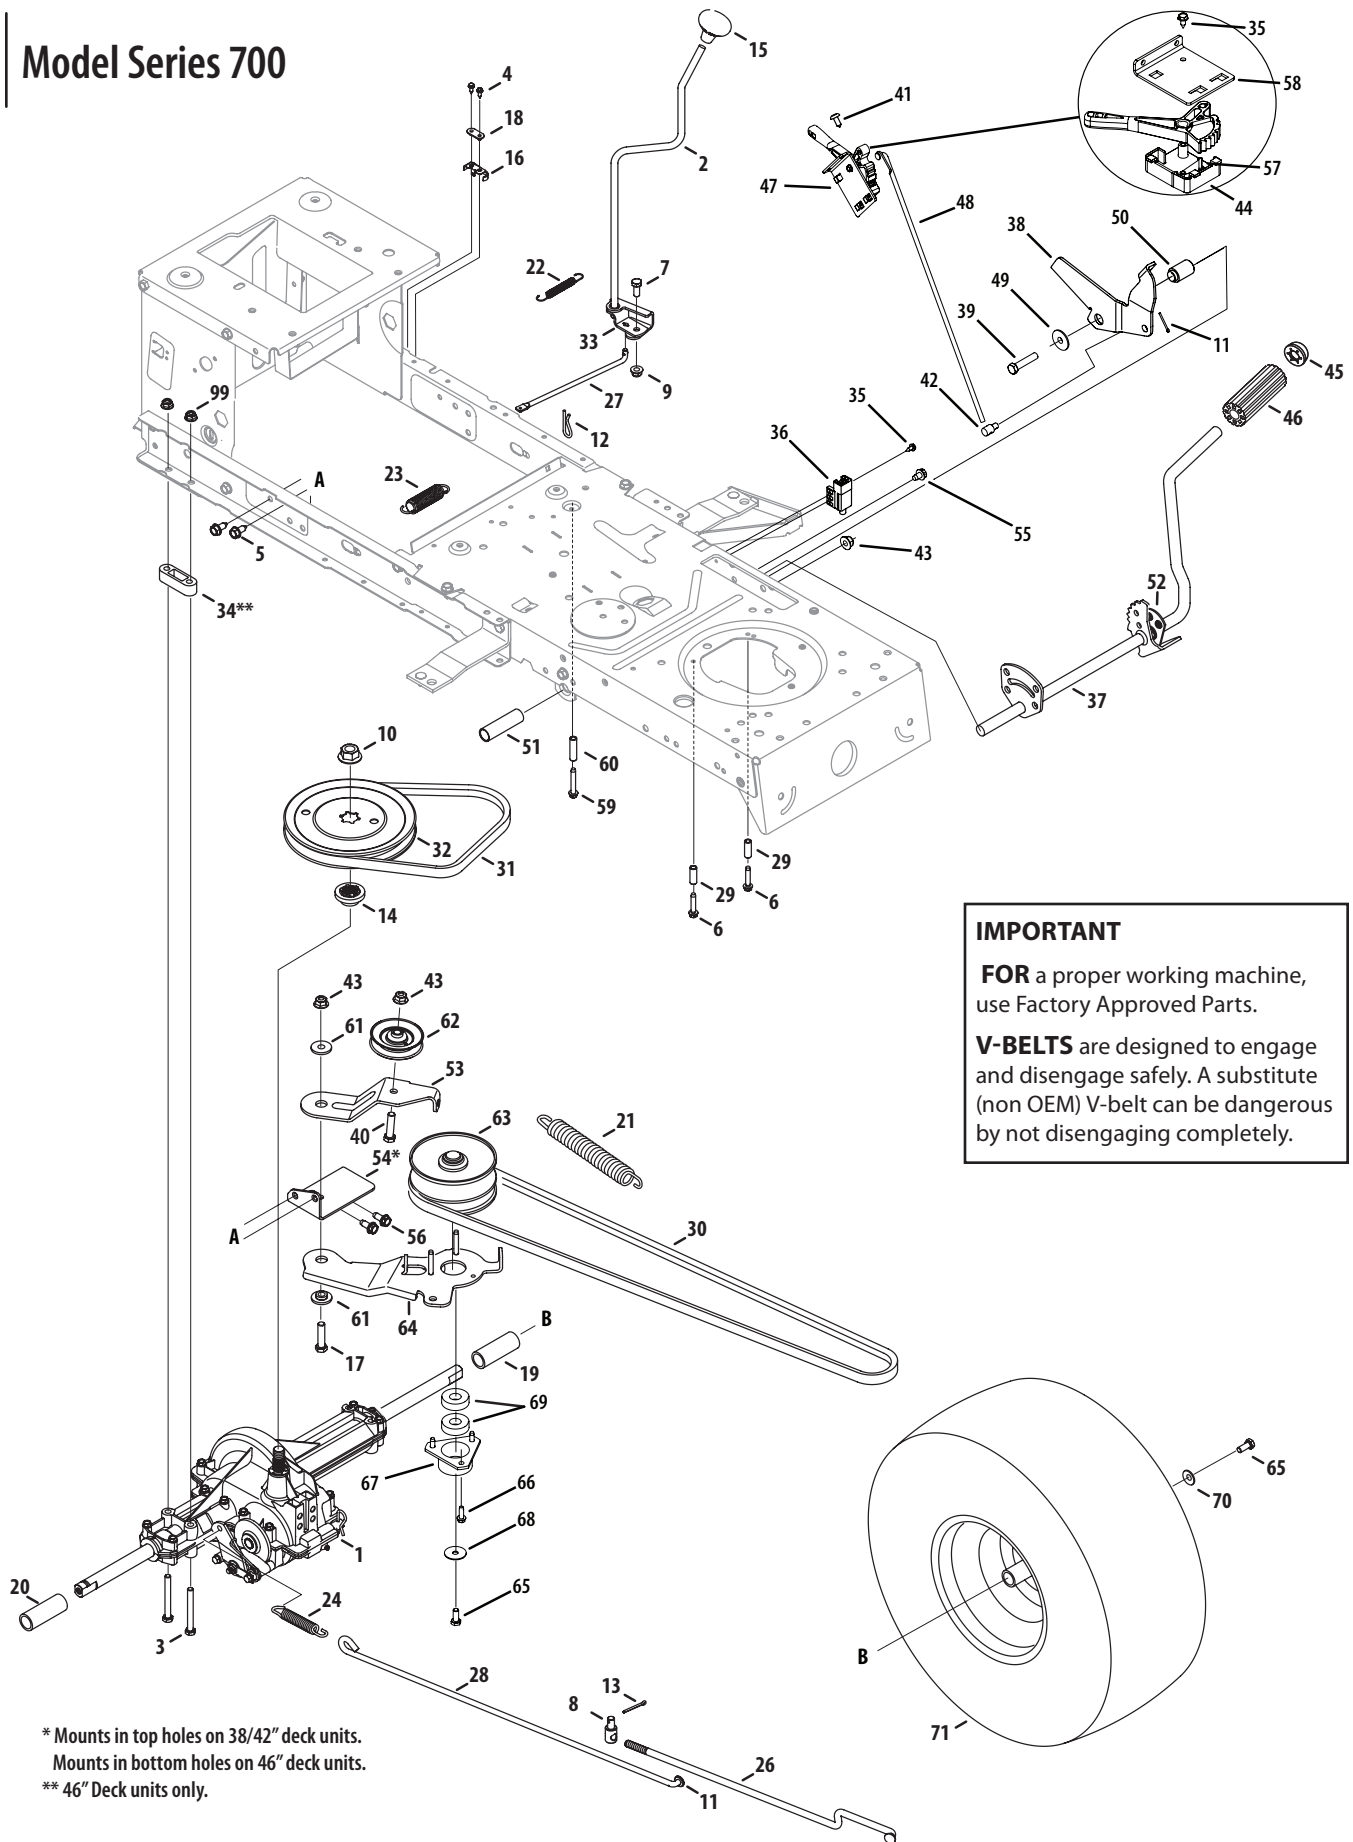

IMPORTANT

FOR a proper working machine, use Factory Approved Parts.


V-BELTS are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

* Mounts in top holes on 38/42" deck units.
Mounts in bottom holes on 46" deck units.
** 46" Deck units only.

Ref. No.	Part No.	Description
1	918-04566	Transmission
2	647-04035	Lever Assembly, Shift
3	710-0176	Screw, 5/16-18, 2.75 (38/42" Dk.)
	710-1266	Screw, 5/16-18, 3.50 (46" Deck)
4	710-0227	Screw, #8-18, 0.500
5	710-04484	Screw, 5/16-18, 0.750
6	710-0809	Screw, 1/4-20, 1.250
7	710-3008	Screw, 5/16-18, .75, Gr5
8	711-04075A	Ferrule, 3/8-24 x .375 Dia.
9	712-04063	Nut, Flange Lock, 5/16-18, GrF
10	712-0700	Nut, Flange, 9/16-18, Gr2
11	714-0111	Pin, Cotter, 3/32, 1.0
12	714-0209	Cotter Pin, Internal .125 Dia
13	714-0470	Pin, Cotter, 1/8 x 1.25
14	718-0758A	Hub, Pulley, 5/8 Spline
15	720-04028	Knob, Shift
16	725-1644	Spring Switch, Short
17	710-0520	Screw, 3/8-16 x 1.50
18	726-0320	Plate, Insulator Nut
19	731-04602	Sleeve, .758 x .821 x 3.3125
20	731-04604	Sleeve, .758 x .821 x 2.4375
21	732-04076A	Spring, Extension, 1.15 OD x 7.90
22	732-04488	Spring, Extension
23	732-04306	Spring, Extension, .80 OD x 3.28
24	732-0716C	Spring, Extension, .59 OD x 4.00
25	736-0264	Washer, Flat, .330 x .630 x .0635
26	747-04265	Variable Speed Control Rod
27	747-04277	Rod, Shift (38/42" Decks)
	747-04568	Rod, Shift (46" Deck)
28	747-04733	Rod, Brake
29	750-0566A	Spacer, .260 x .372 x 1.030
30	754-04001A	Belt
31	754-0241A	Belt
32	756-04002	Pulley, V-Type, 7.25 Dia
33	783-04595	Shift Bracket, Adjustable
34	748-0334	Spacer .68 (46" Deck Only)
35	710-0224	Screw, #10, 0.500
36	725-04363	Switch, Interlock
37	647-04034C	Pedal Assembly, Drive
38	783-04903	Latch Bracket (No RMC)
39	710-3144	Screw, 3/8-16, 2.00, Gr5

Ref. No.	Part No.	Description
40	710-0347	Screw, 3/8-16 x 1.75
41	710-04483	Screw, 1/4-20, 0.500
42	711-0736	Adjustment Ferrule 1/4-20
43	712-04065	Nut, Flange Lock, 3/8-16, GrF
44	731-05361	Control Cover
45	726-0214	Push Cap, 5/8
46	735-0239	Pad, Foot, 4.0
47	683-04225	Shift Cont. Assembly, 6-Spd
	683-04216	Shift Cont. Assembly, 7-Spd
	683-04274	Shift Cont. Assembly, 7-Spd TB
48	747-04430	Control Rod, Speed Selector
49	736-0133	Washer, Flat, .411 x 1.25 x .100
50	750-04465	Spacer, Flge, .390 x .671 x 1.095
51	750-0802	Spacer, .640 ID x .76 OD x 2.63
52	783-04536	Support Bracket, Pedal
53	683-04207	Bracket, Idler
54	683-04176A	Torque Bracket, Transmission
55	710-0604A	Screw, 5/16-18, 0.625
56	710-1260A	Screw, 5/16-18, 0.750
57	732-0627	Shift Lever Spring
58	783-04830	Control Bracket
59	710-1325	Screw, 1/4-20 x 1.625
60	750-04456	Spacer, .260 x .372 x 1.420
61	738-0347	Spacer, Shoulder, .625 ID x .169
62	756-04325	Pulley, Flat Idler
63	656-04015	Pulley Ass'y, Variable Speed
64	683-04206	Bracket Ass'y, Variable Speed
65	710-0627	Screw, 5/16-24, .750, Gr5
66	710-0778	Screw, 1/4-20, 1.50
67	718-04261	Cup, Bearing
68	736-0362	Washer, Flat, .330 x 1.25 x .06
69	741-0124	Bearing, Ball, 17 x 40 x 12
70	736-0242	Bell Washer, .34 x .872 x .060
71	634-04324	Wheel Ass'y, Round Shoulder
	734-04241	Tire Only, 20 x 8 x 8, Round Shld.
	634-0070	Rim Assy. (Inc. bearings, valve stem)
	634-0104	Wheel Ass'y, Square Shoulder
	734-1730	Tire Only, 20 x 8 x 8, Square Shld
	734-0603A	Rim Assy. (Inc. bearings, valve stem)
72	710-0599	Screw, 1/4-20 x .500


Model Series 700

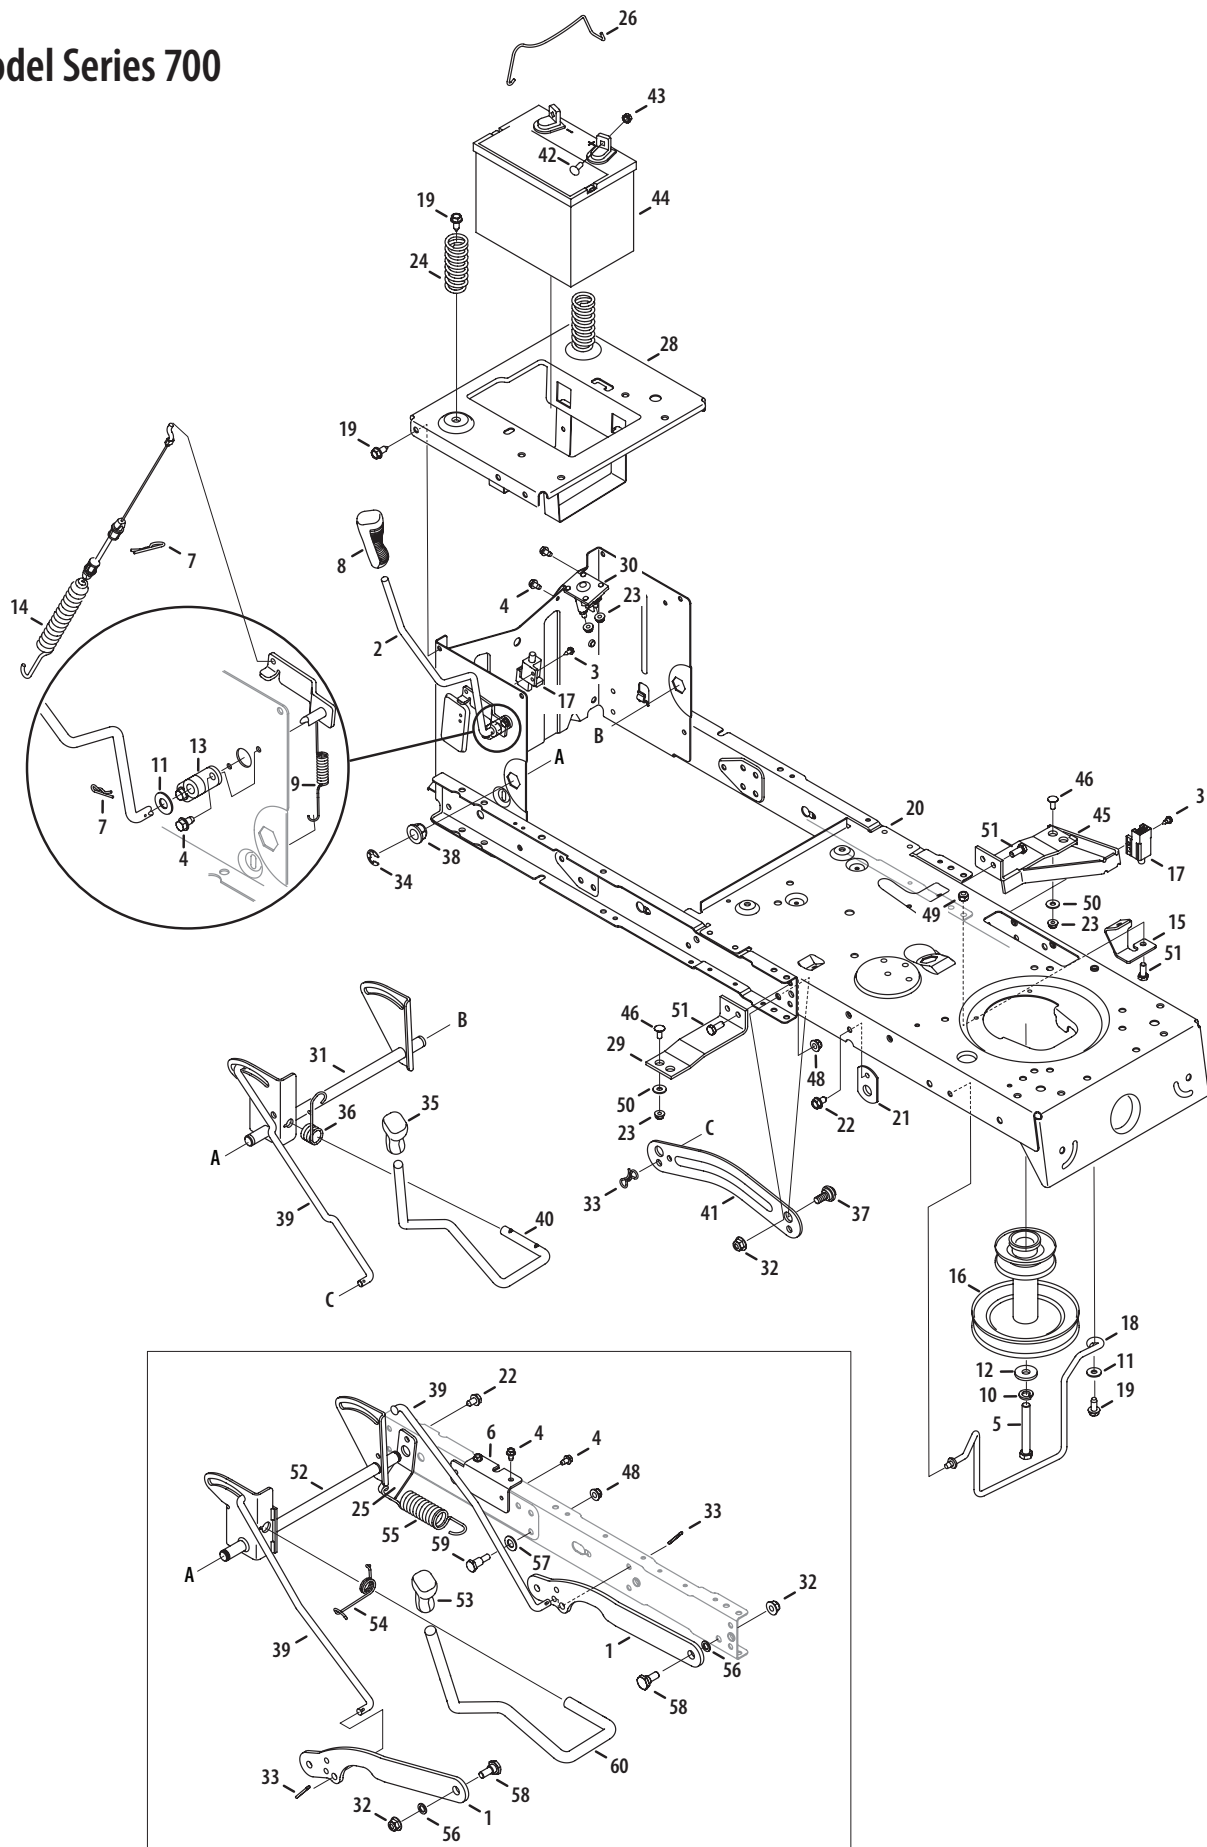

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	783-0678C	Deck Lift Link	31	683-04155A	Shaft Assembly Lift 38/42" Decks
2	647-04096	Handle Asswmbly, PTO	32	712-04065	Nut, Flange Lock, 3/8-16, GrF
3	738-04237	Shoulder Screw, #10-16, 0.500	33	714-04043	Pin, Cotter .08 x 1.56 Intern. RH
4	710-0599	Screw, 1/4-20, 0.500		714-0470	Pin, Cotter .080 x 1.25 Intern. LH
5	710-04608	Screw, 7/16-20, 3.25 38 & 42" Dk.	34	716-0106A	Ring, E-Type, .625 Dia.
	710-04607	Screw, 7/16-20, 2.75 46" Deck	35	720-0311	Grip, Handle, 1/2
6	783-05389	Frame Brace Bracket	36	732-04225	Spring, Torsion 38/42" Decks
7	714-0145	Pin, Click, .092 x 1.64	37	738-04130	Screw, Shldr. , .625 x .175, 3/8-16
8	720-04049A	Grip, Handle, 3/8	38	741-0225	Bearing, Hex Flange
9	732-04276A	Spring, Extension	39	747-04393	Rod, Lift
10	736-0171	Washer, Lock, 7/16	40	747-04282	Deck Handle, Lift, 38/43" Decks
11	736-0300	Washer, Flat, .406 x .875 x .059	41	783-04494	Lift Arm, Deck - RH
12	736-0322	Washer, Flat, .450 x 1.250 x .164		783-04711	Lift Arm, Deck - LH
13	741-04119	Bearing, PTO	42	710-04666	Screw, Carriage, 1/4-20, .75, Gr5
14	746-04173B	Cable, Deck Engagement	43	712-0271	Nut, Sems, 1/4-20
15	783-04753	Frame Support Bracket	44	725-1737A	Battery, 190 CCA
16	756-04196A	Engine Pulley, 38" & 42" Deck		725-1704A	Battery, 125 CCA
	756-04207A	Engine Pulley, 46" Deck	45	683-04195	Support Bracket Assembly
17	725-04363	Switch, Interlock	46	710-0134	Carriage Screw, 1/4-20 x .62
18	747-04332A	Rod, Belt Keeper (38" Deck)	47	710-3025	Screw, 5/16-18 x .625
	683-04443	Rod, Belt Keeper (42" Deck)	48	712-04063	Flange Lock Nut, 5/16-18
	683-04414	Rod, Belt Keeper (46" Deck)	49	712-0429	Hex Lock Nut, 5/16-18
19	710-04484	Screw, 5/16-18, .750	50	736-0173	Flat Washer, .28 x .74 x .063
20	683-04163B	Frame Assembly	51	710-3008	Hex Screw, 5/16-18 x .75
21	783-04536B	Pedal Support Bracket	52	683-04334	Shaft Assembly Lift 46" Decks
22	710-0604A	Screw, 5/16-18, 0.625	53	720-0298	Grip, Handle, 5/8
23	712-04064	Nut, Flange Lock, 1/4-20, GrF	54	732-04438	Spring, Torsion 46" Deck
24	732-04035	Spring, Compr. , 1.28 OD x 3.125	55	732-0934	Extension Spring
25	783-04462	Lift Bracket	56	736-0140	Washer, Flat, .385 x .62 x .063
26	683-04448	Hold Down Rod, Battery	57	736-0226	Washer, Flat, .474 x .879 x .064
27	783-04869A	Bracket, Battery	58	738-0380	Bolt, Shldr. .500 x .270 3/8-16
28	783-04548C	Seat Bracket, Frame	59	738-0754	Screw, Shldr. , .437 x .54
29	783-04637	Bracket, Runing Board	60	747-04653	Deck Handle, Lift, 46" Deck
30	725-04439	Solenoid			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Transmission

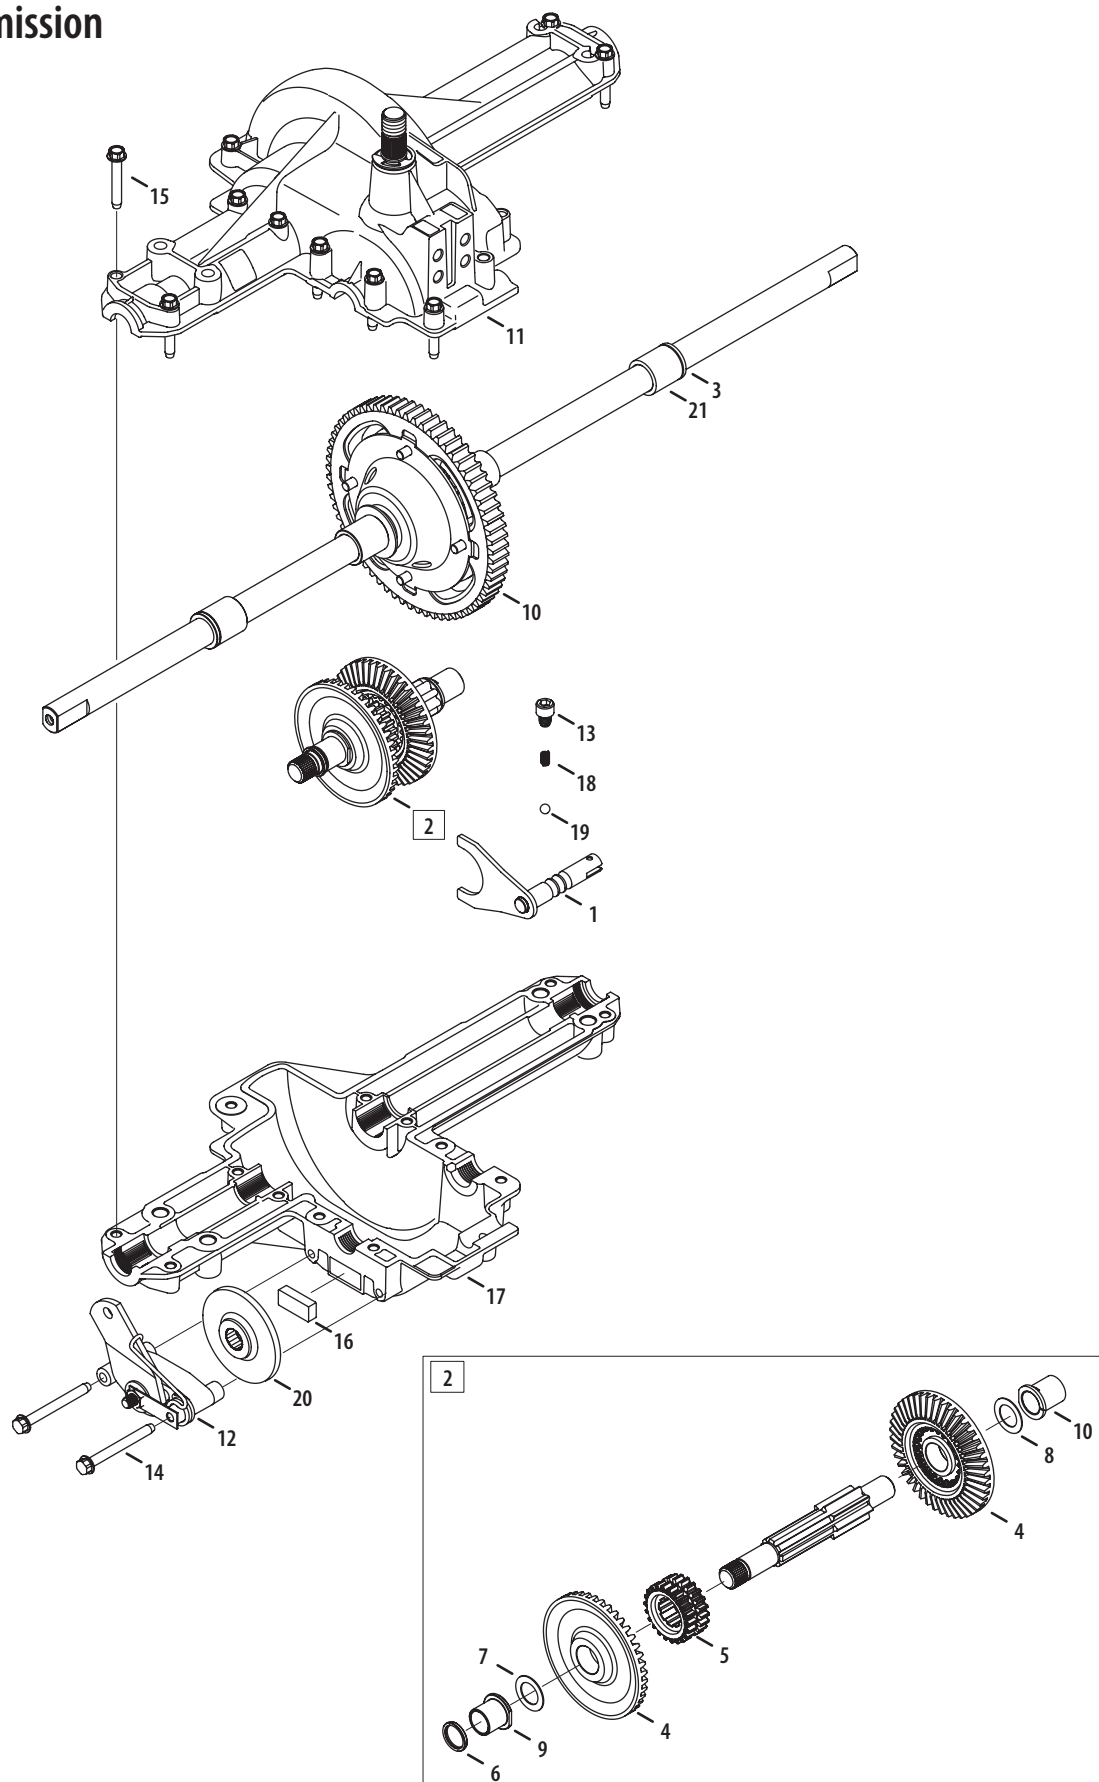


Ref. No.	Part No.	Description
1	611-0011	Detent Shaft Assembly
2	611-04091	Drive Shaft Assy. (includes ref. 3 - 9)
3	721-0338	Seal,.75 x 1.0 x .125
4	717-04479	Bevel Gear, 42 tooth spline
5	718-04381	Single Speed Clutch Collar
6	721-0213	Seal, .625 x .812 x .094
7 *	736-0336	Flat Washer 5/8 x 1 x .030
	736-0337	Flat Washer .634 x 1 x .04
	736-0349	Flat Washer .63 x 1 x .02
	736-0494	Flat Washer .632 x 1 x .035
	736-0495	Thrust Washer 1.00 x .632 x .0
8	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
9	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
10	618-04567	Differential Assembly
11	619-04187	Upper Housing
12	661-0001	Brake Assembly
13	710-04731	Self-tapping Screw, 5/16-18 x .375
14	710-1206	Self-tapping Screw, 1/4-20 x 2.375
15	710-1325	Self-tapping Screw, 1/4-20 x 1.625
16	717-0678	Brake Puck
17	719-04329	Lower Housing
18	732-0863	Compression Spring
19	741-0862	Detent Ball
20	761-0202	Brake Disc
21	741-0340	Sleeve Bearing,.75 x.1.0 x 1.0
—	737-0148	Grease (19 oz.)

* Use applicable flat washers (ref. # 7) in this application allowing .006/.014 in. end-play.

NOTE: If rebuilding the upper housing, include two ounces (2 oz.) of Unirex® N3 grease (Part No. 737-0289) in the input shaft cavity.

38" Deck

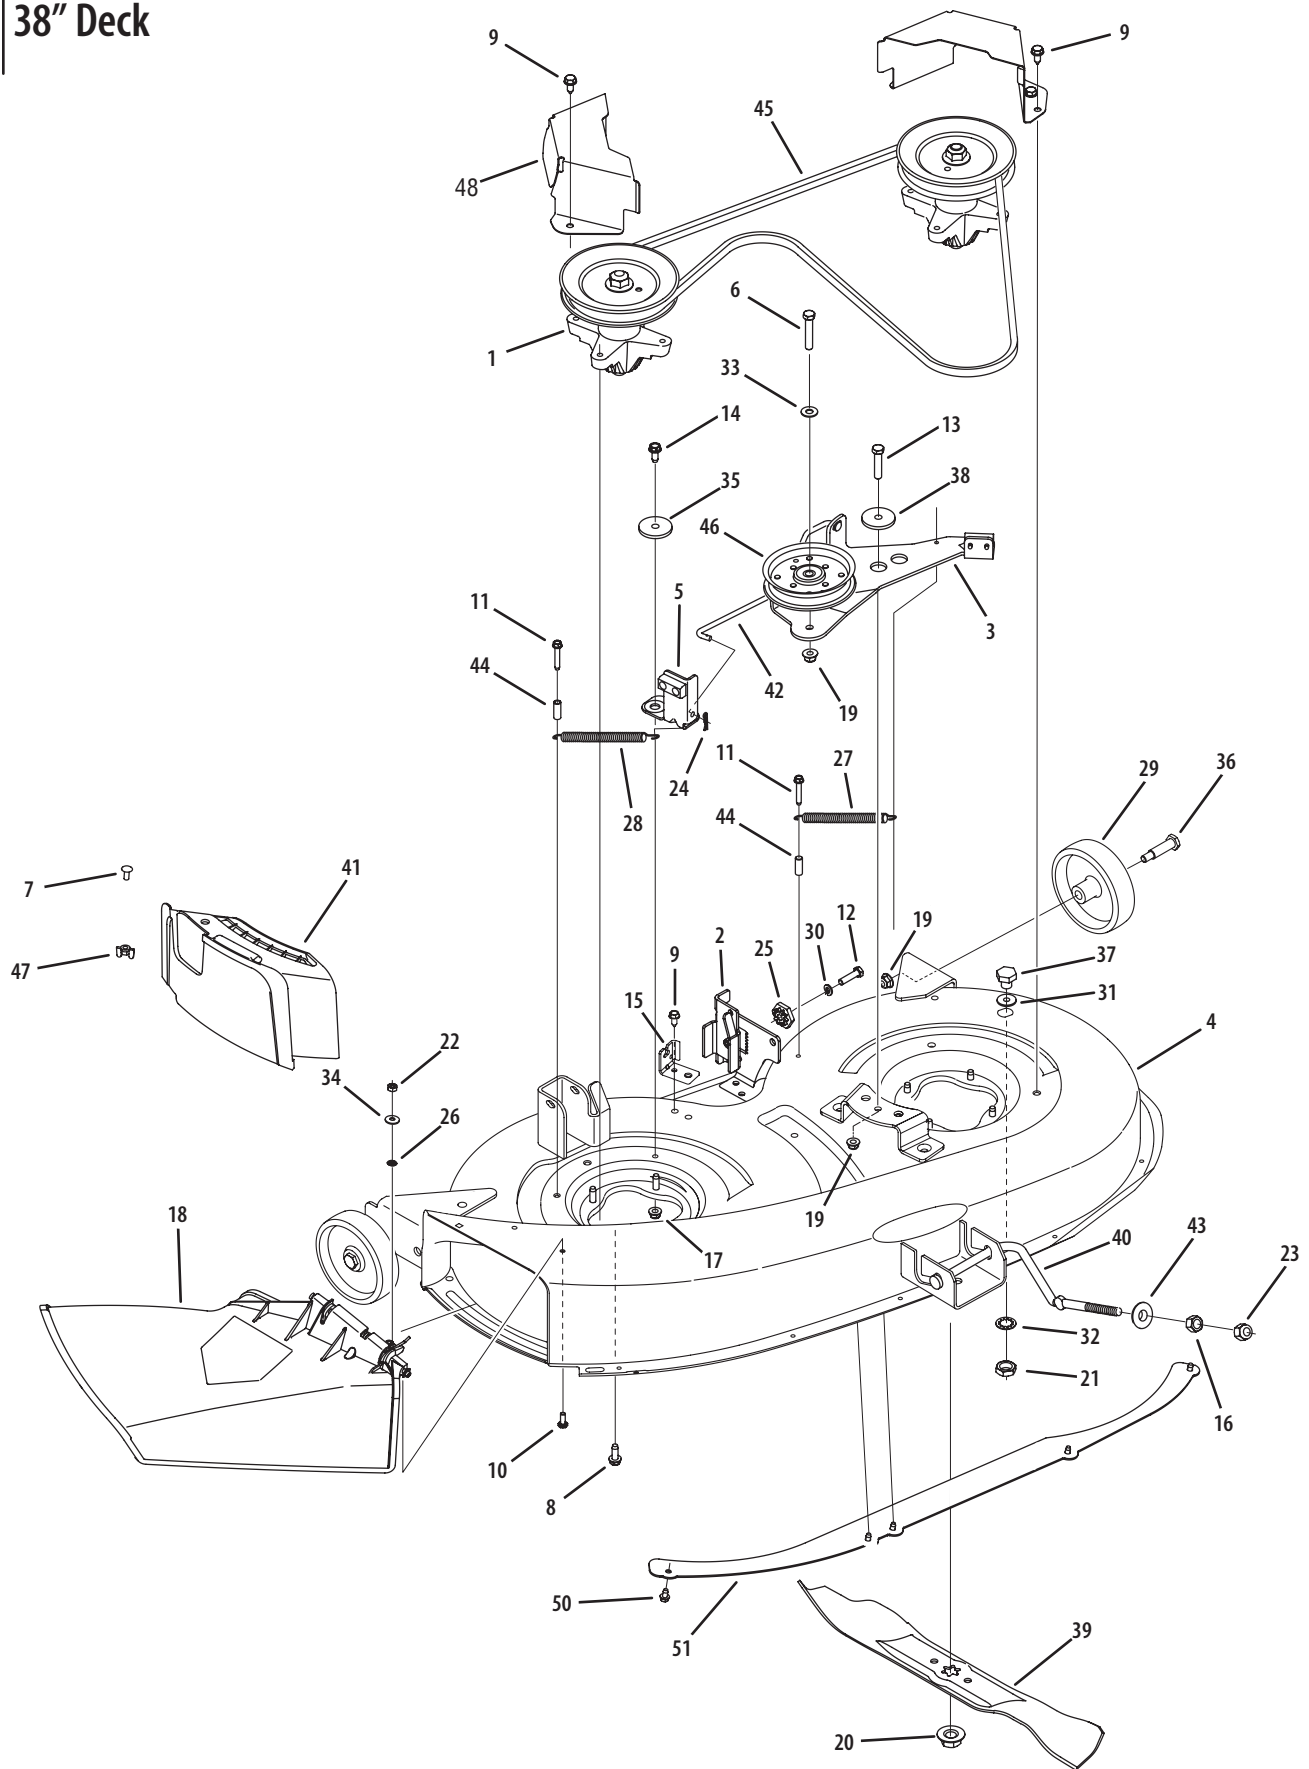

Ref. No.	Part No.	Description
1	618-04474	Spindle Assembly, Pul, 5.75" Dia
2	683-04228	Brkt. Assembly, Deck, Hanger LH
3	683-04138B	Brake Assembly, Deck
4	683-04263	Deck Shell, 38" (w/o Wheel Brkt)
	683-04161	Deck Shell, 38" (w/ Wheel Brkt)
5	683-04167	Brake Assembly, Deck
6	710-0347	Screw, 3/8-16, 1.75, Gr5
7	710-0134†	Carriage Screw, , 1/4-20 x .62
8	710-04484	Screw, 5/16-18, 0.75
9	710-0604A	Screw, 5/16-18, 0.625
10	710-3015	Screw, 1/4-20, .75, Gr5
11	710-0778	Screw, 1/4-20, 1.500
12	710-0528	Screw, 5/16-18, 1.250
13	710-3005	Screw, 3/8-16, 1.25, Gr5
14	710-3008	Screw, 5/16-18, .75, Gr5
15	783-04740	Deck Engagement Cable Bracket
16	712-0206	Nut, Hex, 1/2-13, Gr5
17	712-04063	Nut, Flange Lock, 5/16-18, GrF
18	731-1032B	Chute Assembly, Discharge
19	712-04065	Nut, Flange Lock, 3/8-16, GrF
20	712-0417A	Nut, Flange, 5/8-18
21	712-0641†	Nut, Hex, M16-1.5
22	712-3006	Nut, Hex, 1/4-20, Gr5
23	712-3083	Nut, Hex Lock, 1/2-13, Gr8, Nylon
24	714-0104	Pin, Cot, .072 Dia. x 1.13 Lg
25	717-04074	Gear, Deck Adjustment

Ref. No.	Part No.	Description
26	726-0233	Nut, Push, .25 ID x .50 OD
27	732-04280B	Spring, Exten. , .75 Dia. x 6.375
28	732-04287	Spring, Exten. , .50 Dia. x 6.375
29	734-0973†	Wheel, Deck 5.0 x 1.38
30	736-0119	Washer, Lock, 5/16
31	736-0187†	Washer, Flat, .64 x 1.24 x .06
32	736-0225†	Washer, Lock, 5/8, Internal Tooth
33	736-0300	Washer, Flat, .406 x .875 x .059
34	736-0270	Washer, Bell, .265 x .75 x .062
35	738-04166	Spacer, Shoulder, .5000 x .1475
36	738-0373†	Screw, Shldr, .498 x 1.53, 3/8-16
37	738-04146†	Plug, Screw, M16 x 1.5
38	738-04162A	Spacer, Shoulder, .8840 x .190
39	742-0610A	Blade, 19.38", Star 3-in-1
40	747-04322	Deck Rod, Front Adjustable
41	731-2363†	Mulch Plug
42	747-04381	Control Rod, Brake
43	748-04069	Pivot Cup, Deck Lift
44	750-0566A	Spacer, .260 x .372 x 1.030
45	754-04062	Belt, V-Type
46	756-04129	Idler Pulley, 4.25" Dia.
47	712-3087†	Wing Nut, 1/4-20
48	783-04602A	Cover, Belt, 5.66 Dia.
50	710-0599 †	Screw, 1/4-20, .500
51	783-1297 †	38" Deck Skirt


† If Equipped

IMPORTANT: For a proper working machine, use only Factory Approved Parts.

IMPORTANT: V-belts are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

42" Deck

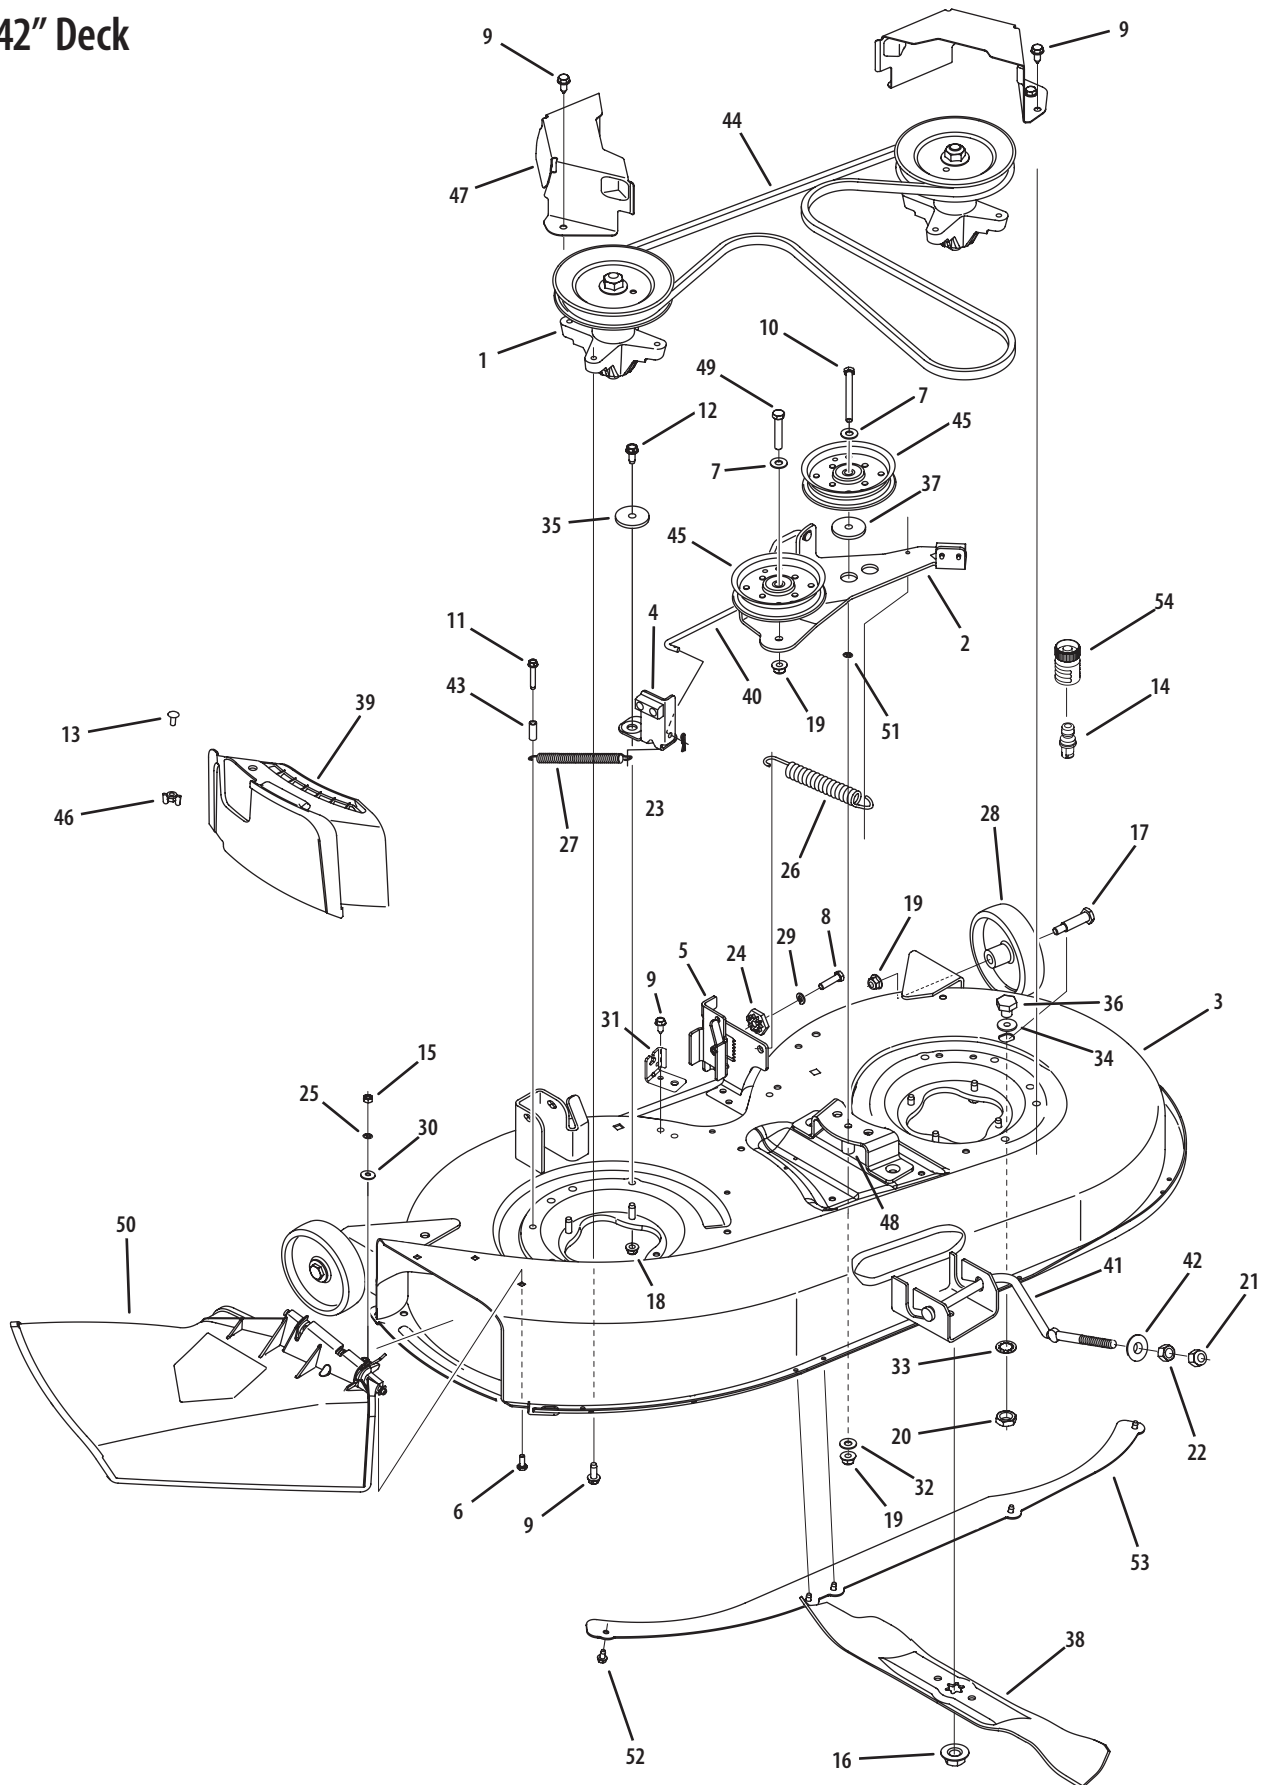

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	618-04456	Spindle Assembly, Pul, 6.3" Dia	28	734-0973†	Wheel, Deck 5.0 x 1.38
2	683-04138B	Brake Assembly, Deck	29	736-0119	Washer, Lock, 5/16
3	683-04165A	Deck Shell, 42" (w/o Wheel Brkt)	30	736-0270	Washer, Bell, .265 x .75 x .062
	683-04162A	Deck Shell, 42" (w/ Wheel Brkts.)	31	783-04740	Deck Engagement Cable Bracket
4	683-04167	Brake Assembly, Deck	32	736-0300	Washer, Flat, .406 x .875 x .059
5	683-04228	Brkt. Ass'y, Deck, Hanger LH	33	736-0225†	Washer, Lock, 5/8, Internal Tooth
6	710-3015	Screw, 1/4-20, .75, Gr5	34	736-0187†	Washer, Flat, .64 x 1.24 x .06
7	736-0267	Washer, Flat, .385 x .75 x .062	35	738-04166	Spacer, Shoulder, .5000 x .1475
8	710-0528	Screw, 5/16-18, 1.250	36	738-04146†	Plug, Screw, M16 x 1.5
9	710-04484	Screw, 5/16-18, 0.750	37	738-04162A	Spacer, Shoulder, .8840 x .190
10	710-3085	Screw, 3/8-16, 3.50, Gr5	38	742-0616A	Blade, 21.23", Star 3-in-1
11	710-0778	Screw, 1/4-20, 1.500	39	731-2363†	Mulch Plug
12	710-3008	Screw, 5/16-18, .75, Gr5	40	747-04379A	Control Rod, Brake
13	710-0134†	Carriage Screw, , 1/4-20 x .62	41	747-04269A	Deck Rod, Front Adjustable
14	737-04003C†	Deck Water Nozzle	42	748-04069	Pivot Cup, Deck Lift
15	712-3006	Nut, Hex, 1/4-20, Gr5	43	750-0566A	Spacer, .260 x .372 x 1.030
16	712-0417A	Nut, Flange, 5/8-18	44	754-04060B	Belt, V-Type
17	738-0373	Screw, Shldr, .498 x 1.53, 3/8-16	45	756-04129	Idler Pulley, 4.25" Dia.
18	712-04063	Nut, Flange Lock, 5/16-18, GrF	46	712-3087†	Wing Nut, 1/4-20
19	712-04065	Nut, Flange Lock, 3/8-16, GrF	47	783-04327B	Cover, Belt, 6.00 Dia.
20	712-0641†	Nut, Hex, M16-1.5	48	750-04446	Spacr, 3/8 ID x .68 OD x 1.46 Lg.
21	712-3083	Nut, Hex Lock, 1/2-13, Gr8	49	710-0347	Screw, 3/8-16 x 1.75
22	712-0206	Nut, Hex, 1/2-13, Gr5	50	731-1032B	Chute Assembly, Discharge
23	714-0104	Pin, Cot, .072 Dia. x 1.13 Lg	51	712-0229	Nut, Push, 3/8
24	717-04074	Gear, Deck Adjustment	52	710-0599†	Screw, 1/4-20, 0.500
25	726-0233	Nut, Push, .25 ID x .50 OD	53	783-1146A†	Deck Skirt
26	732-04280B	Spring, Exten. , .75 Dia. x 6.375	54	721-04041†	Water Nozzle Adapt
27	732-04287	Spring, Exten. , .50 Dia. x 6.375			


† If Equipped

IMPORTANT: For a proper working machine, use only Factory Approved Parts.

IMPORTANT: V-belts are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

46" Deck

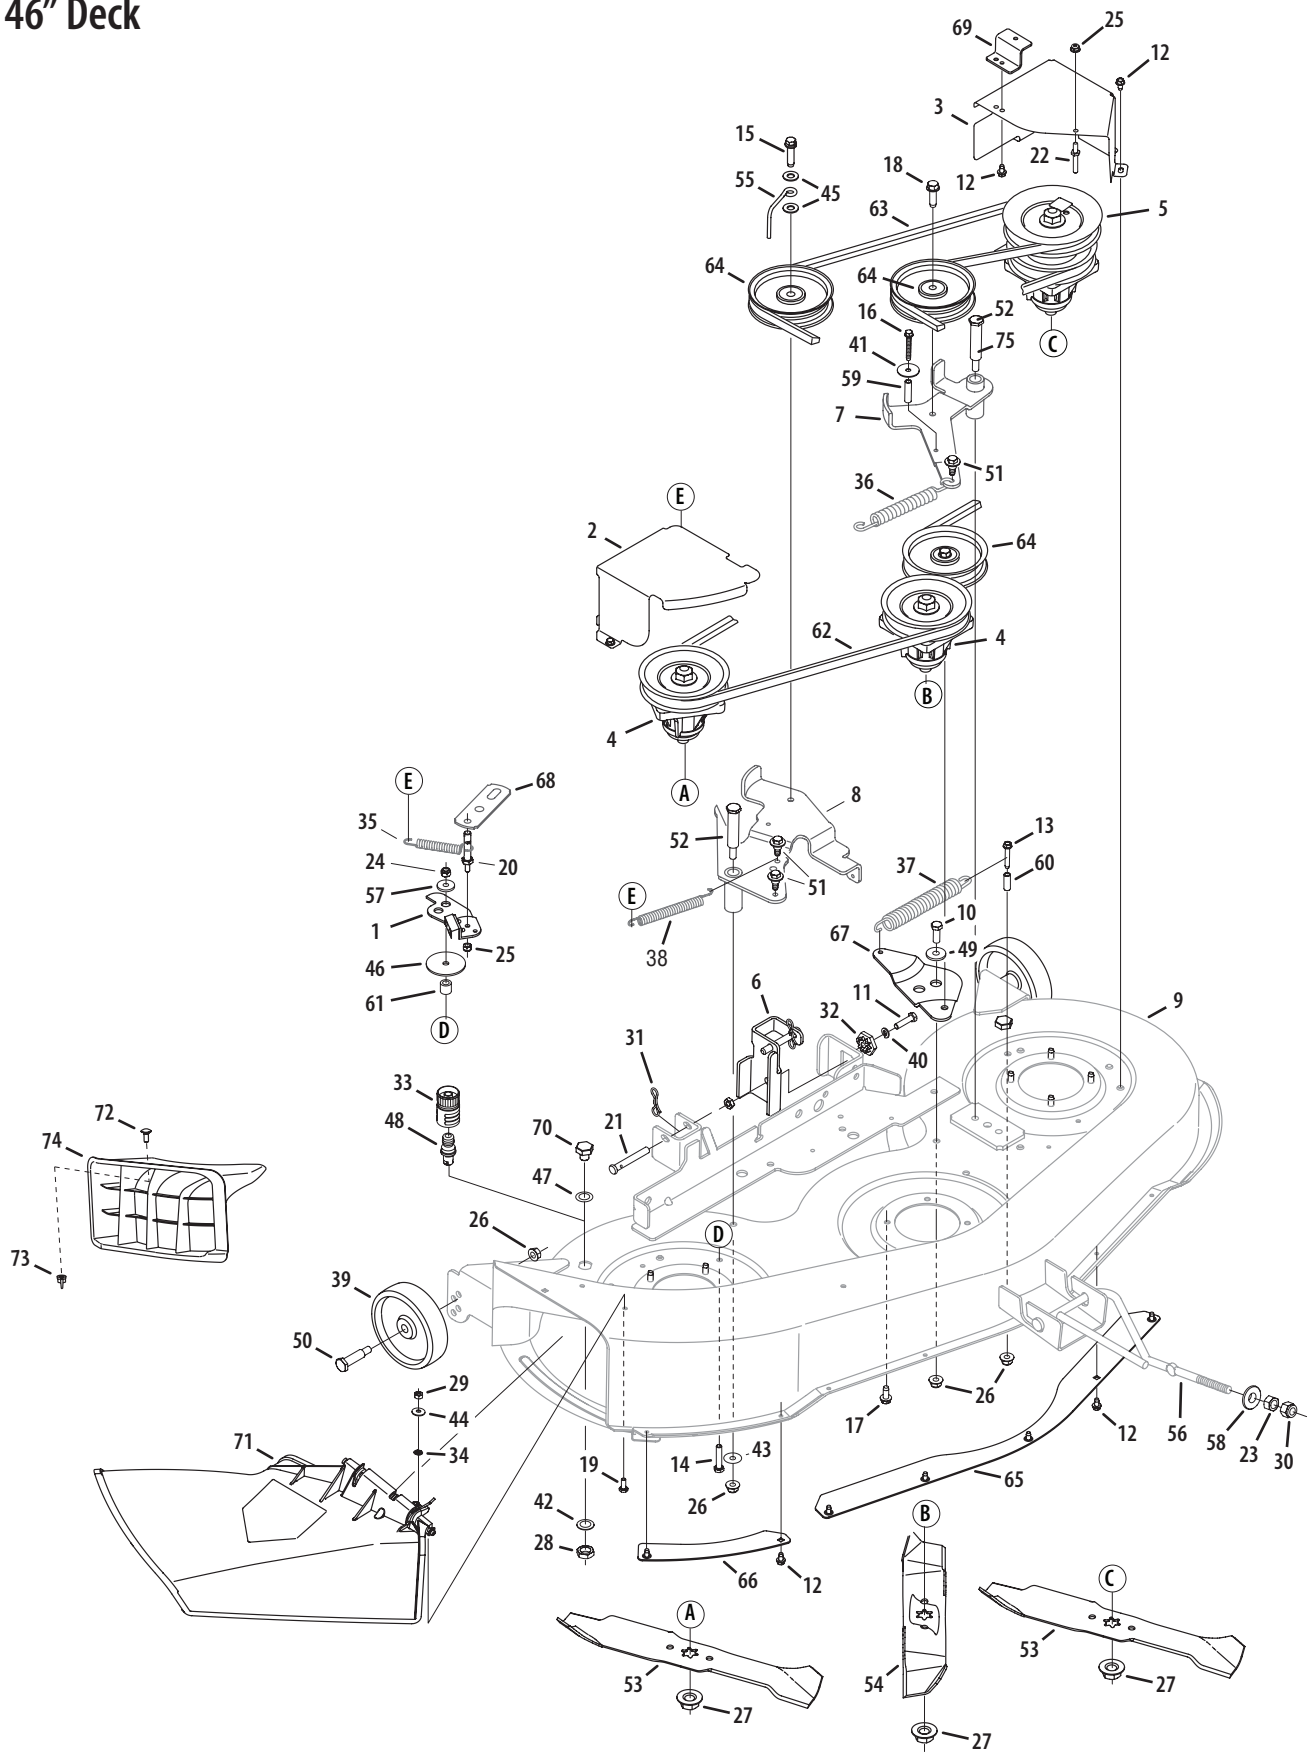


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	17116	Deck Brake Assembly	39	734-0973	Deck Wheel 5.0 x 1.38
2	17258E	Deck Belt Cover RH	40	736-0119	Lock Washer, 5/16
3	783-1348D	Deck Belt Cover LH	41	736-0211	Flat Washer, .285 x 1.25 x .06
4	618-0240A	Spindle Assembly	42	736-0225	Lock Washer, 5/8 Int. Tooth
5	618-04134B	Double Pulley Spindle Assy.	43	736-0258	Flat Washer, .385 x 1.0 x .135
6	683-0254B	Deck Hanger Bracket Assy.	44	736-0270	Bell Washer, .265 x .75 x .062
7	683-04250A	Idler Bracket Assembly LH	45	736-0300	Flat Washer, .406 x .875 x .059
8	683-04251A	Idler Bracket Assembly RH	46	736-0418A	Flat Washer, .406 x .875 x .059
9	683-04413	Deck Assembly	47	736-0187	Flat Washer, .64 x 1.24 x .06
10	710-0514	Hex Screw, 3/8-16 x 1.00	48	737-04003C †	Deck Water Nozzle
11	710-0528	Hex Screw, 5/16-18 x 1.25	49	738-0347	Shoulder Spacer, .625 ID x .169
12	710-0599	Screw, 1/4-20 x .50	50	738-0373	Shoulder Bolt .496 x 1.525: 3/8-16
13	710-0778	Screw, 1/4-20 x 1.50	51	738-04091A	Shoulder Screw .43 x .29:5/16-18
14	710-0805	Hex Screw, 5/16-18 x 1.50	52	710-04754	Shoulder Bolt .625 x 2.515: 3/8-16
15	710-1007	Sems Screw, 3/8-16 x 1.50	53	742-0611A	Blade, 3 in 1 star, 16.28" Lg.
16	710-1026	Screw, 1/4-20 x 1.75	54	742-0612A	Blade, 3 in 1 star, 14.88" Lg.
17	710-1260A	Screw, 5/16-18, .750	55	747-04530	Belt Keeper Rod
18	710-1315	Screw, 3/8-16, x 1.25	56	747-04645	Front Deck Adjustment Rod
19	710-3015	Screw, 1/4-20 x .75	57	748-0234	Shoulder Spacer
20	711-04636	Pin, 1/4-20: 3/8 x 2.685	58	748-04069	Deck Lift Pivot Cup
21	711-04669	Clevis Pin, 3/8 dia. x 2.75	59	750-04456	Spacer, .260 x .372 x 1.420 Lg.
22	711-0993	Belt Guard Pin, 1/4 x 1.43 Lg.	60	750-0566A	Spacer, .260 x .372 x 1.030 Lg.
23	712-0206	Hex Nut, 1/2-13	61	750-1320	Spacer, .375 x .63 x .595 Lg.
24	712-04063	Flange Lock Nut, 5/16-18	62	754-0349	V-Belt, 79.10 Lg.
25	712-04064	Flange Lock Nut, 1/4-20	63	754-04142	V-Belt, 91.4 Lg.
26	712-04065	Flange Lock Nut, 3/8-16	64	756-04129	Idler Pulley, 4.25" dia.
27	712-0417A	Flange Nut, 5/8-18	65	783-0141	Center Deck Skirt
28	712-0641	Hex Nut, M16-1.5	66	783-0142	RH Deck Skirt
29	712-3006	Hex Nut, 1/4-20	67	783-04641A	Idler Bracket
30	712-3083	Hex Lock Nut, 1/2-13	68	783-05321	Brake Bracket
31	714-04043	Bow-Tie Cotter Pin	69	783-05360	Deck Stop Bracket
32	717-04074	Deck Adjustment Gear	70	738-04146	Bolt Plug, M16 x 1.5
33	721-04041 †	Water Nozzle Adapter	71	731-1032B	Discharge Chute
34	726-0233	Push Nut, .25 ID x .50 OD	72	710-0134 †	Carriage Screw, 1/4-20 x .62
35	732-0429A	Extension Spring, .50 x 3.97 Lg.	73	712-3087 †	Wing Nut, 1/4-20
36	732-04400	Extension Spring, .75 x 6.835 Lg.	74	731-05264 †	Mulch Plug, 46" Deck
37	732-0594A	Extension Spring, .91 x 7.33 Lg.	75	750-04999	Spacer, .380 x .625 x 2.515 Lg.
38	732-0814	Extension Spring, .56 x 5.52 Lg.			


† If Equipped

IMPORTANT: For a proper working machine, use only Factory Approved Parts.**IMPORTANT:** V-belts are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

B&S Model 28 w/ Low Muffler

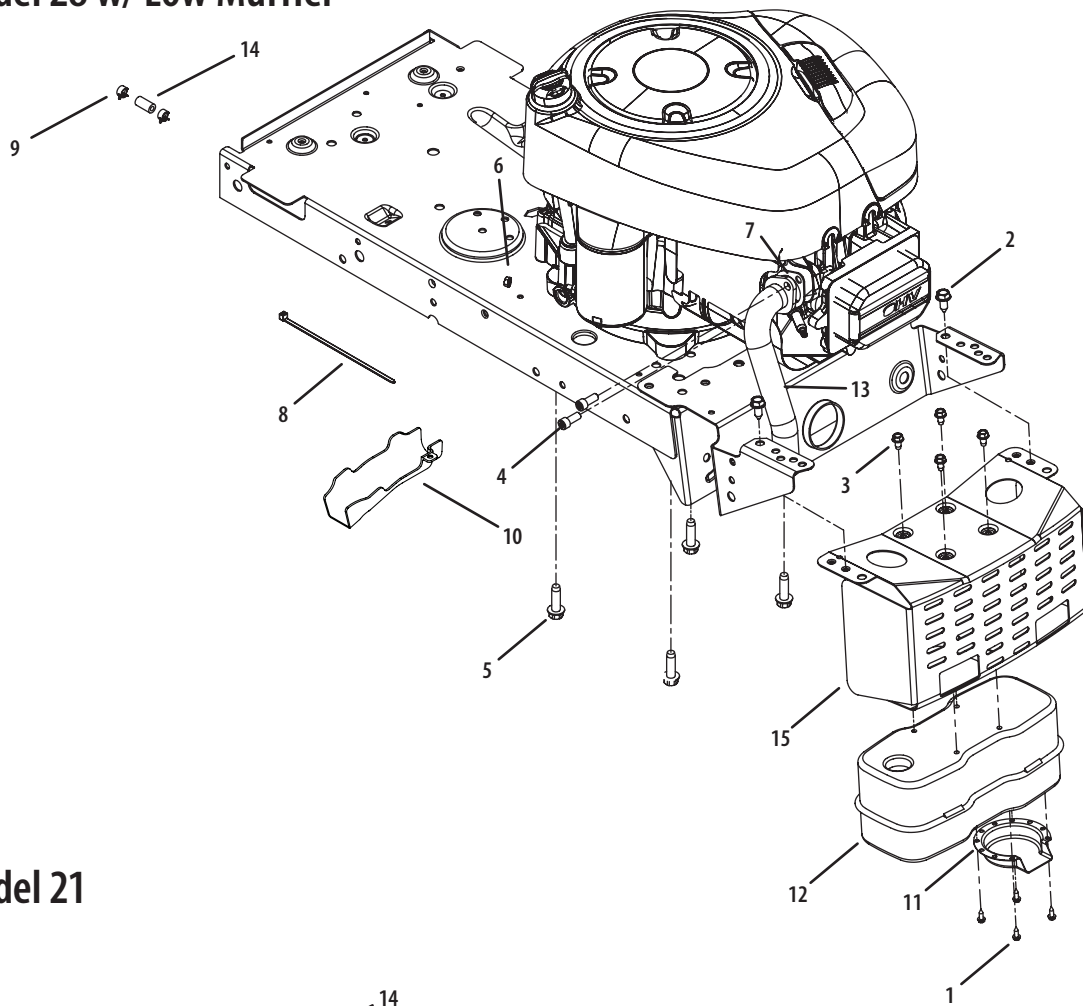


B&S Model 21

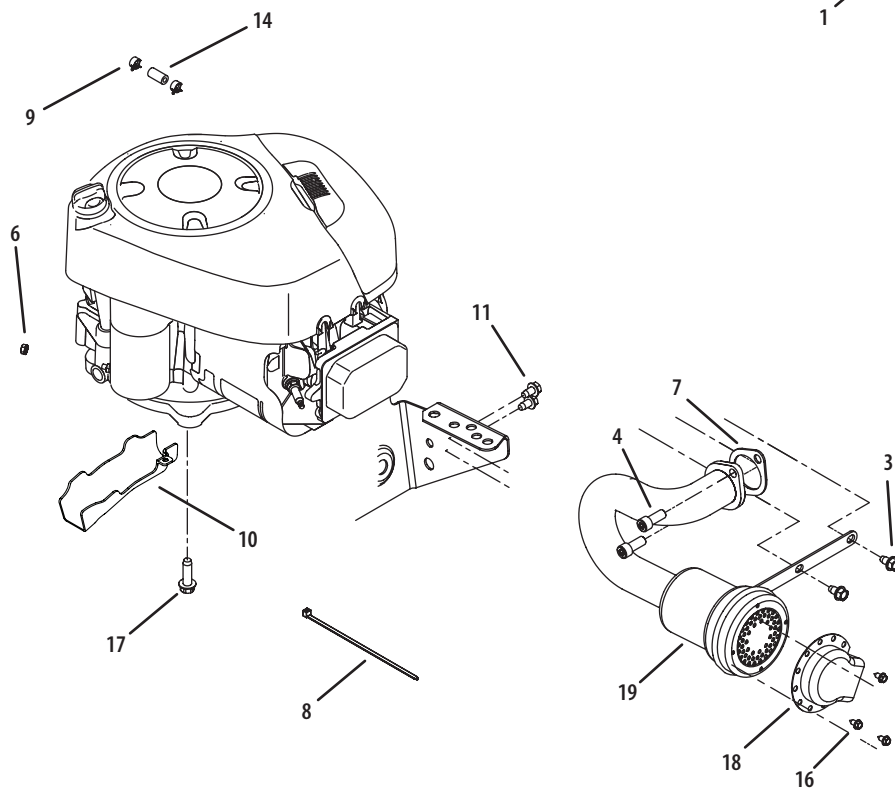


B&S Model 28 w/ Low Muffler & Model 21

Ref. No.	Part No.	Description
1	710-0227	Screw, #8-18 x .50
2	710-04484	Self-tapping Screw, 5/16-18, .750
3	710-0599	Screw, 1/4-20, 0.500
4	710-1314A	Socket Cap Screw, 5/16-18, .625
5	710-1315	Screw, 3/8-16, 1.25
6	712-0271	Hex Sems Nut, 1/4-20
7	721-0208	Exhaust Gasket
8	725-0157	Cable Tie, 7.4"
9	726-0205	Hose Clamp, .490
10	731-05628	Oil Drain Sleeve
11	751-0564B	Muffler Deflector
12	751-0617B	Muffer, Single Inlet
13	751-0619A	Exhaust Pipe
14	751-10349	Fuel Line Hose
15	783-0615E	Muffler Heat Shield
16	710-1502	Screw, #8-18 x .375
17	710-04683	Self-tapping Screw, 3/8-16, 1.00
18	751B222261	Muffler Deflector
19	751-9986A	Muffler, Bug

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

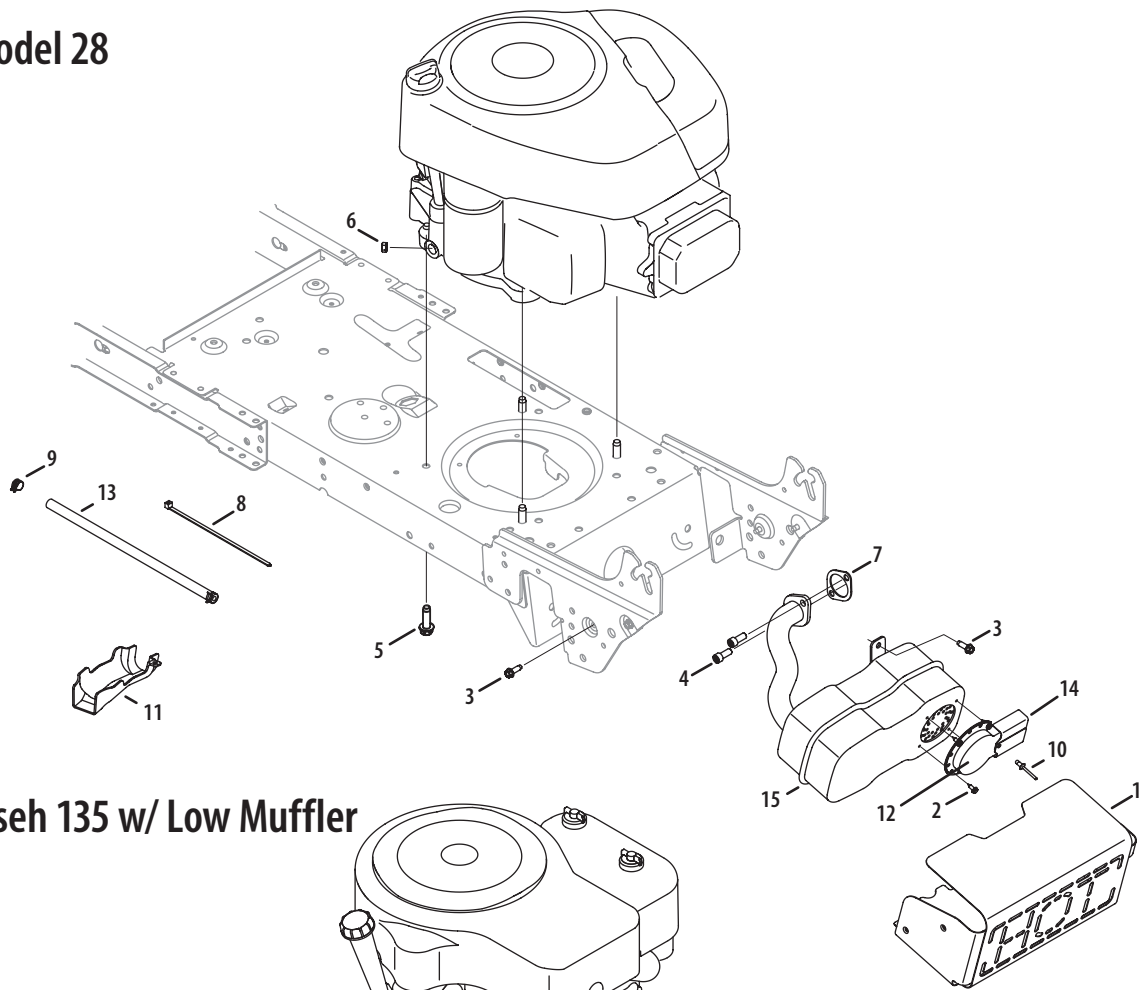


Tecumseh 135 w/ Low Muffler

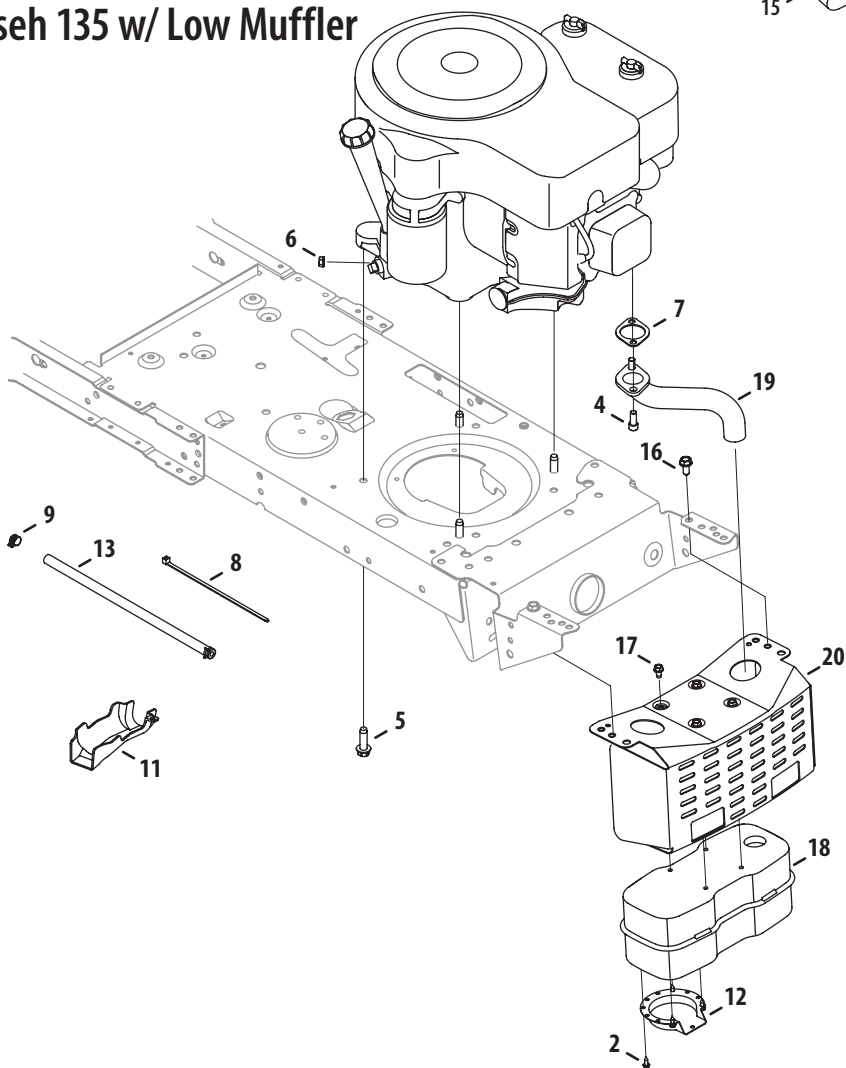

B&S Model 28 & Tec. 135 w/ Low Muffler

Ref. No.	Part No.	Description
1	683-04370	Muffler Shield Assembly
2	710-0227	Screw, #8-18 x .50
3	710-0642	Self-tapping Screw, 1/4-20, .750
4	710-1314A	Socket Cap Screw, 5/16-18, .625
5	710-1315	Self-tapping Screw, 3/8-16, 1.250
6	712-0271	Hex Sems Nut, 1/4-20
7	721-0208	Exhaust Gasket
8	725-0157	Cable Tie, 7.4"
9	726-0205	Hose Clamp, .490
10	728-04000	Pop Rivet, .188 x .300
11	731-05628	Oil Drain Sleeve
12	751-0564B	Muffler Deflector
13	751-10349	Fuel Line Hose
14	751-10353	Muffler Deflector, Long
15	751-10448	Muffler
16	710-04484	Self-tapping Screw, 5/16-18, .750
17	710-0599	Screw, 1/4-20, 0.500
18	751-0617B	Muffer, Single Inlet
19	751-0622A	Exhaust Pipe
20	783-0615E	Muffler Heat Shield

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

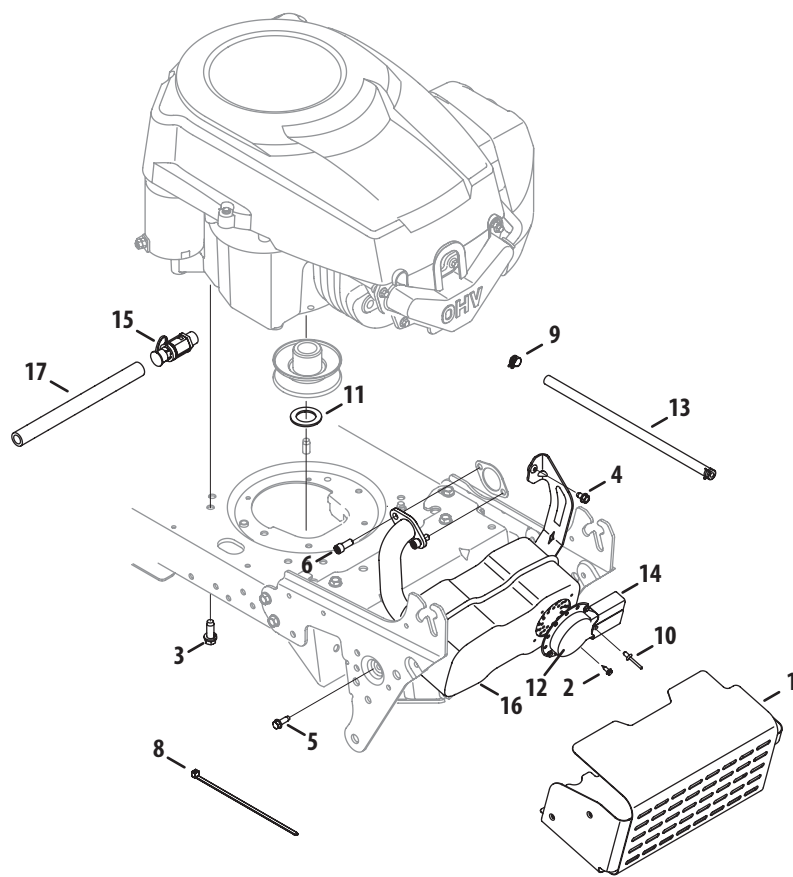

Ref. No.	Part No.	Description
1	683-04370	Muffler Shield Assembly
2	710-0227	Screw, #8-18 x .50
3	710-04683	Self-tapping Screw, 3/8-16, 1.00
4	710-0599	Screw, 1/4-20, 0.500
5	710-0642	Self-tapping Screw, 1/4-20, .750
6	710-1314A	Socket Cap Screw, 5/16-18, .625
7	721-0208	Exhaust Gasket
8	725-0157	Cable Tie, 7.4"
9	726-0205	Hose Clamp, .490
10	728-04000	Pop Rivet, .188 x .300
11	751-0564B	Muffler Deflector
12	751-10349	Fuel Line Hose
13	751-10353	Muffler Deflector, Long
14	751-10517	Oil Drain
15	751-10529	Muffler
16	751-3141	Oil Drain Extension Hose

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.