


5-Style Hood & Dash Assembly

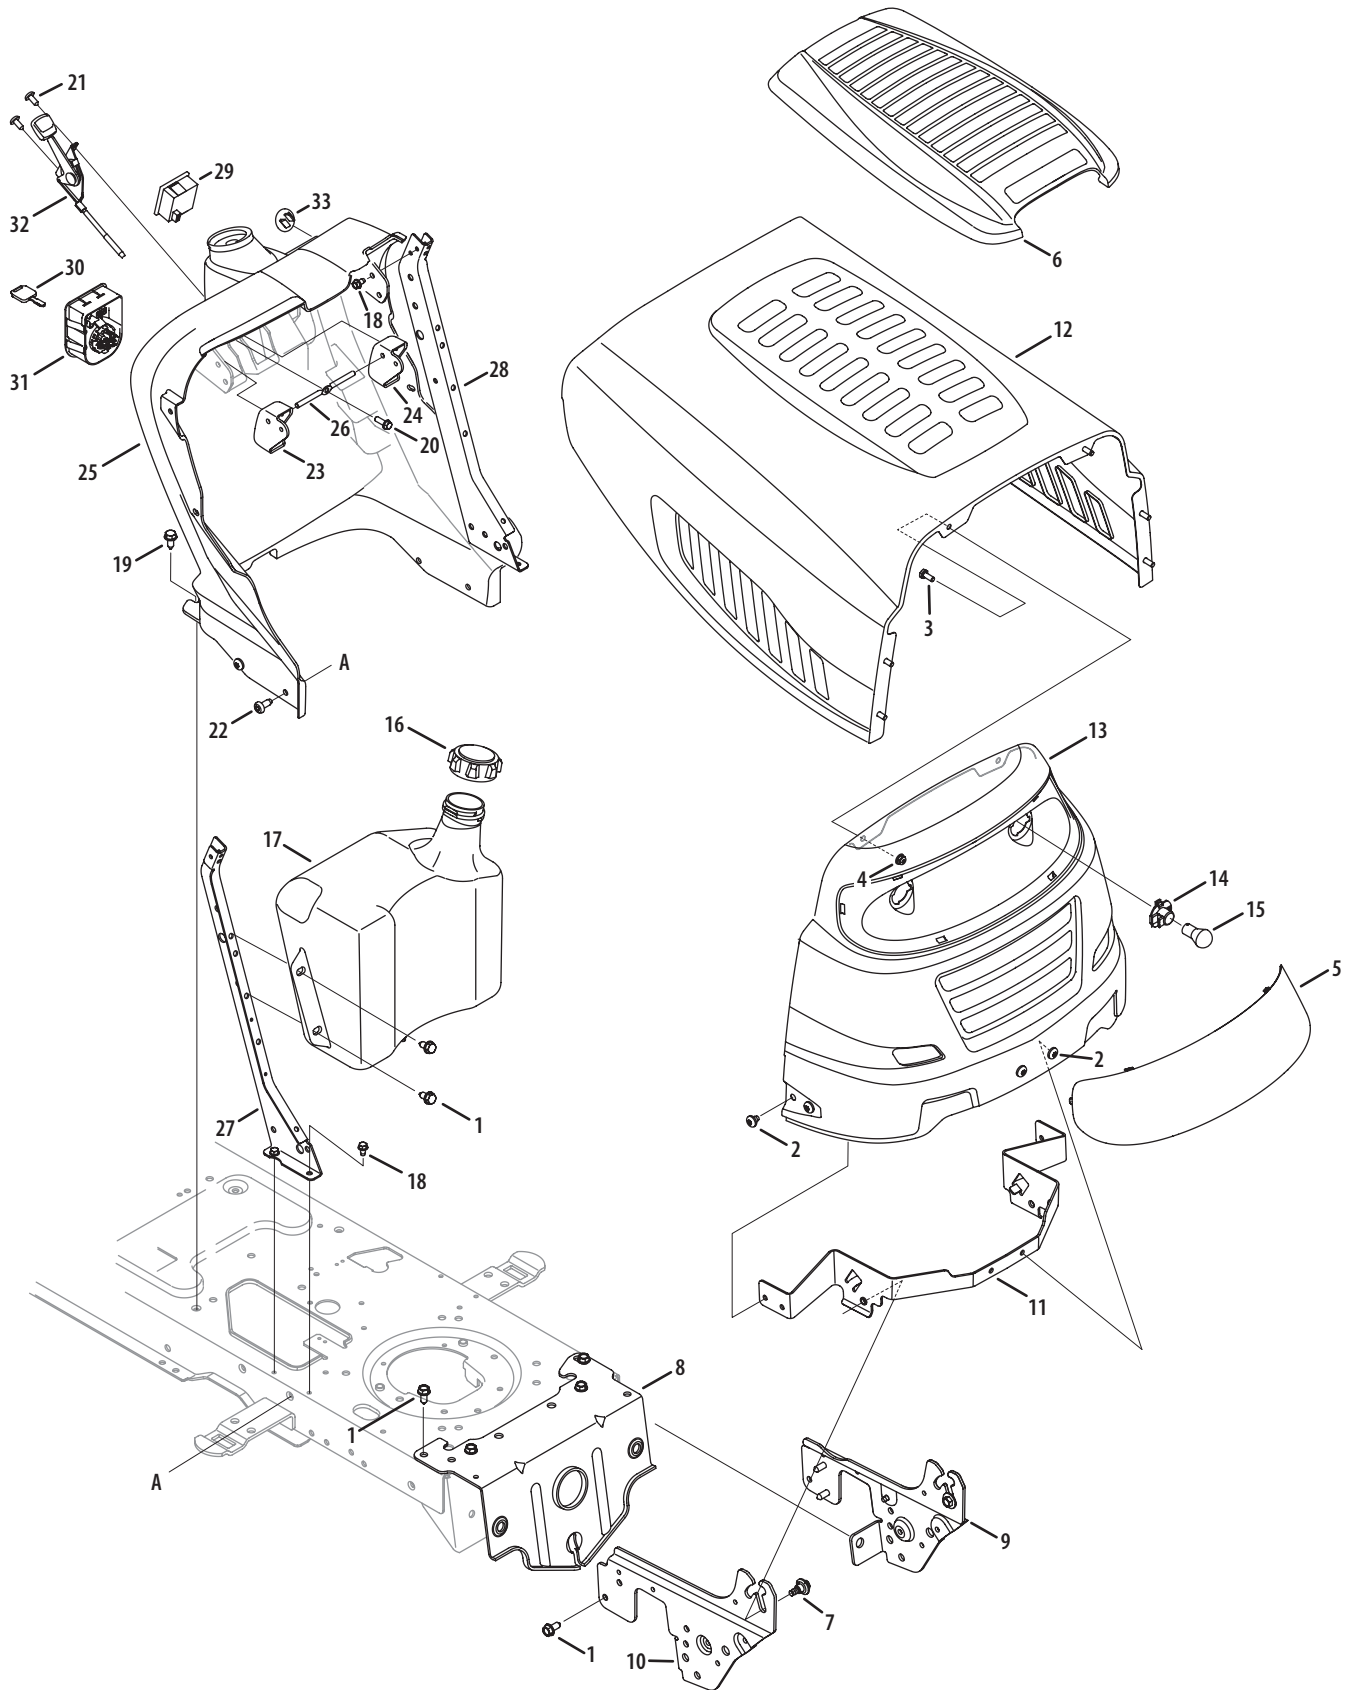

5-Style Hood & Dash Assembly


Ref.	Part Number	Description
1	710-04484	Screw, 5/16-18 x .750
2	710-04593	Screw, 5/16-18 x .375
3	710-0751	Hex Cap Screw, 1/4-20 x.62
4	712-04064	Flange Lock Nut, 1/4-20
5	731-04949A	Headlight Lens
6	731-05522A	Cover Hood 5-Style
7	738-04091A	Shoulder Screw,.43 x.29
8	783-05326	Pivot Bar Bracket
9	783-05327B	Pivot Support Bracket - LH
10	783-05328A	Pivot Support Bracket - RH
11	783-05454	Hood Pivot Bracket
12	783-05683	Hood, 5 Style
13	783-05685	Grille, 1 Style
14	725-1649	Headlight Socket
15	725-0963	Lamp
16	751-0603	Fuel Cap
17	751-0659D	Fuel Tank, Two Gallon
18	710-0599	Self-tapping Screw, 1/4-20 x.5
19	710-0607	Screw, 5/16-18 x .500

Ref.	Part Number	Description
20	710-0895	Self-tapping Screw, 1/4-15 x.75
21	710-1017	Screw, 1/4-14 x.625
22	710-1611B	Screw, 5/16-18 x.75
23	731-04215	Cruise Control Button
24	731-04217	Parking Brake Button
25	731-06167	Dash Panel
26	747-1196	Brake/Cruise Pivot Rod
27	783-04285F	RH Dash Support Plate
28	783-04323F	LH Dash Support Plate
29	725-04156	Ammeter Monitor Indicator w/o Lts.
30	725-1745A	Ignition Key w/ plastic cover
	725-1744A	Ignition Key w/o plastic cover
31	725-04227B	Ignition Switch
32	746-04364	Throttle/Choke Control & Cable
33	731-1999	Choke Plug
—	629-04083B*	Headlight Wire Harness
—	725-04411A*	Wire Harness (w/ Hr. Mtr. & Elctr. PTO)
—	777X41984*	Headlight Reflective Insert

* Not Shown

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

K-Style Hood & Dash Assembly

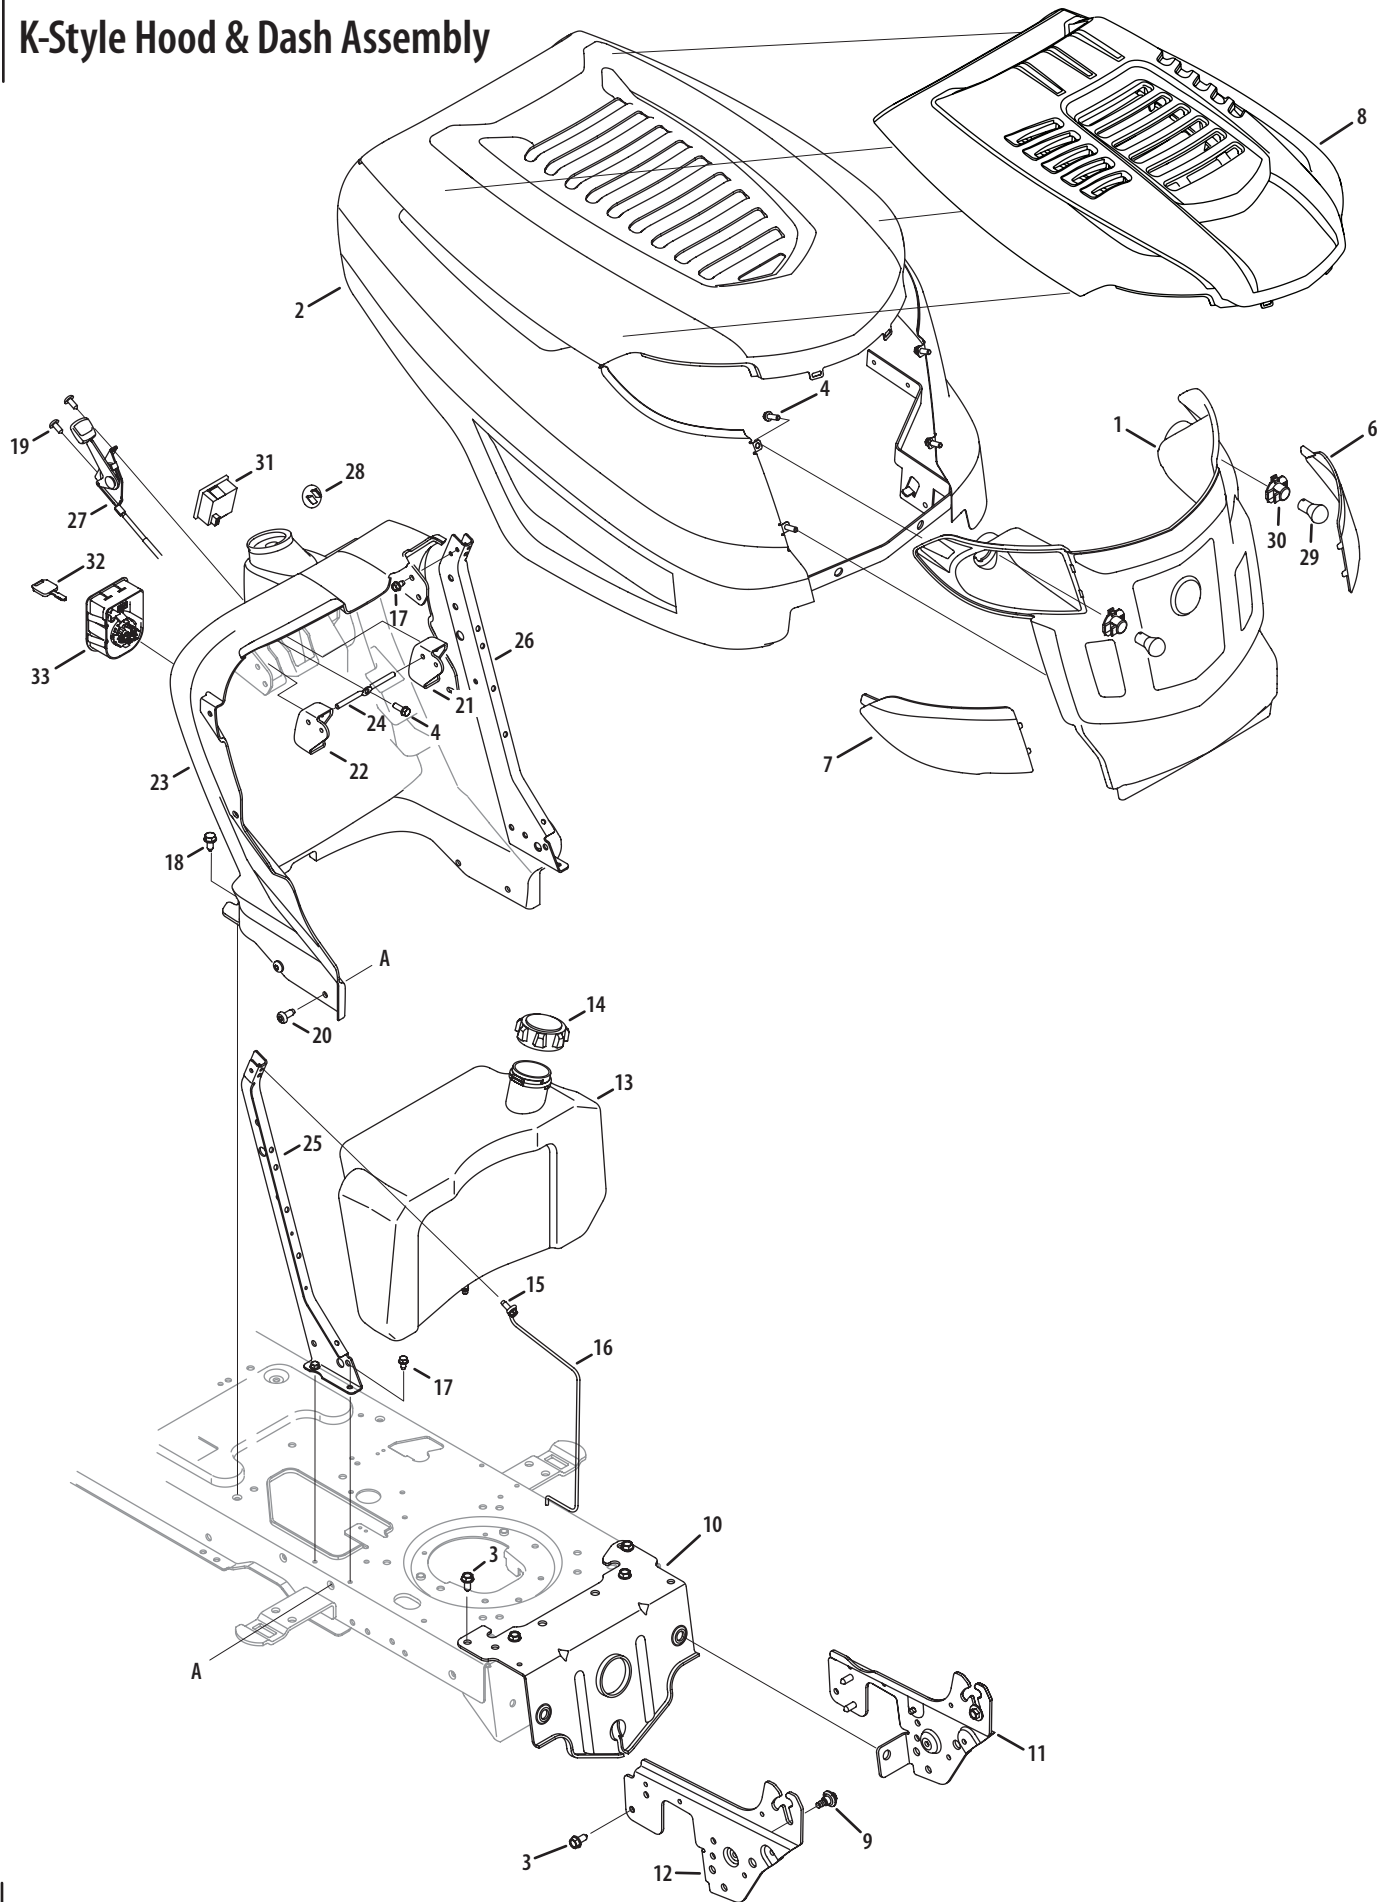

K-Style Hood & Dash Assembly


Ref.	Part Number	Description
1	631-04272	Grill Assembly
2	683-04441	Hood, K-Style
3	710-04484	Screw, 5/16-18, 0.625
4	710-0895	Self-tapping Screw, 1/4-15 x.75
5	725-0157*	Cable Tie, 3/16 x .05 x 7.4
6	731-06095	Headlight Lens (LH)
7	731-06096	Headlight Lens (RH)
8	731-06194	TB Hood Scoop
9	738-04091A	Shoulder Screw, .43 x.29
10	783-05326	Pivot Bar Bracket
11	783-05327B	Pivot Support Bracket, LH (42" Dk.)
	783-05417*	Pivot Support Bracket, LH (50" Dk.)
12	783-05328A	Pivot Support Bracket, RH (42" Dk.)
	783-05418*	Pivot Support Bracket, RH (50" Dk.)
13	751-10609	Fuel Tank, 2.5 gal.
14	751-0603	Fuel Tank Cap
15	710-0642	Screw, 1/4-20, 0.750
16	747-04161	Gas Tank Support Rod
17	710-0599	Screw, 1/4-20, 0.500
18	710-0607	Screw, 5/16-18 x 0.500
19	710-1017	Screw, 1/4-14 x.625
20	710-1611B	Screw, 5/16-18 x.75
21	731-04728	Parking Brake Button

Ref.	Part Number	Description
22	731-04729	Cruise Control Button
23	731-06166	Dash Panel w/ Manual PTO
	731-06168	Dash Panel w/ Electric PTO
24	747-1196	Brake/Cruise Pivot Rod
25	783-04285F	RH Dash Support Plate
26	783-04323F	LH Dash Support Plate
27	746-04364	Throttle/Choke Cntrl. Cable (Single)
	746-04417	Throttle Cable (Twin Cyl.)
28	731-1999	Choke Plug
29	725-0963	Headlamp, 12V
30	725-1649	Lamp Socket
31	725-04156	Systems Ind. Monitor w/ Amtr.
	725-04036C*	Service Reminder / Hour Indicator
32	725-1745A	Ignition Key w/ plastic cover
	725-1744A*	Ignition Key w/o plastic cover
33	725-04227B	Module, Ignition Switch
—	725-1752	Electric PTO Switch
—	746-1085A*	Choke Control Cable (Twin Cyl.)
—	629-04083B*	Headlight Wire Harness
—	725-04411A*	Wire Harness (Manual PTO)
—	725-04404A*	Wire Harness (Electric PTO)
—	777X43039*	Headlight Lens Reflector RH
—	777X43038*	Headlight Lens Reflector LH

* Not Shown

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

4-Style Fender, Deck Lift & Seat

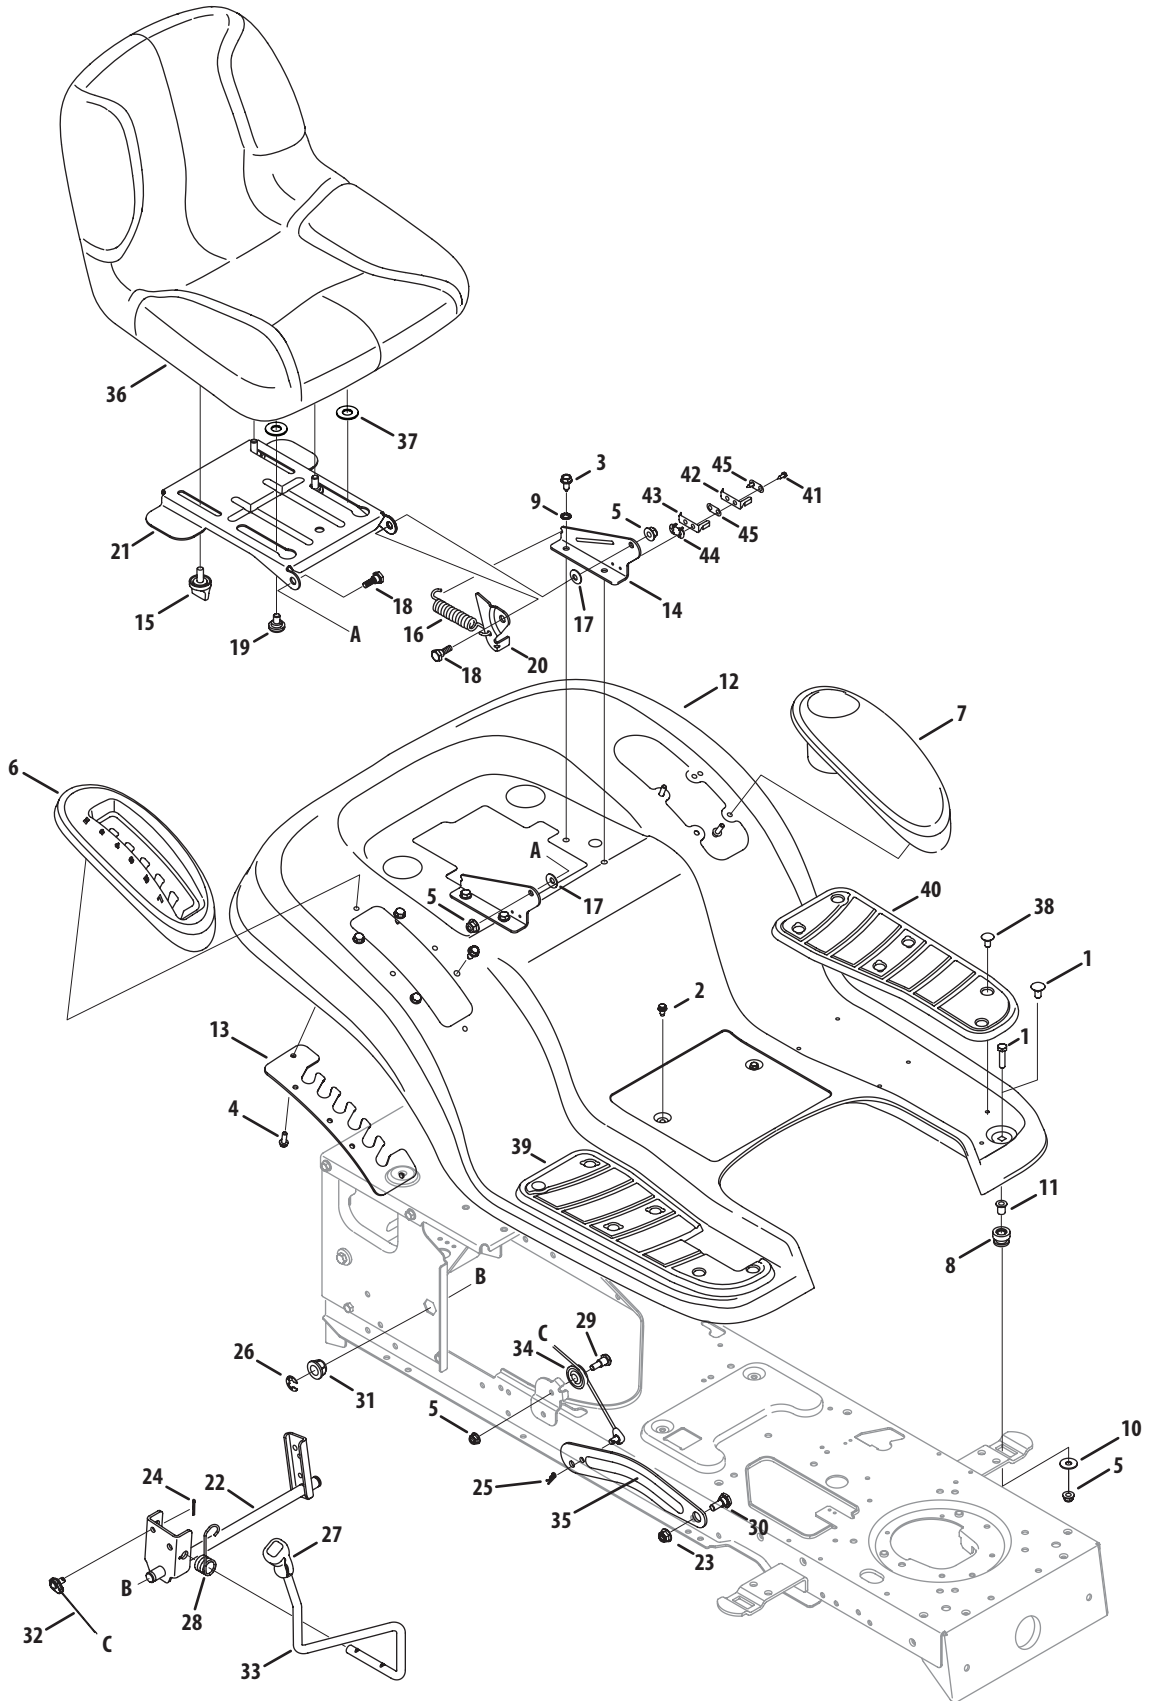

4-Style Fender, Deck Lift & Seat


Ref.	Part Number	Description
1	710-0528	Hex Screw, 5/16-18 x 1.25 (Sngle. Cyl.)
	710-0451	Carriage Bolt, 5/16-18 (Twin Cyl. Models)
2	710-0599	Screw, 1/4-20, 0.500
3	710-04484	Screw, 5/16-18, 0.750x
4	710-0895	Screw, 1/4-15, 0.750
5	712-04063	Nut, Flange Lock, 5/16-18, GrF
6	731-1990	Deck Lift Lever Cover
7	731-1993A	Cover with Cup Holder
8	735-0690	Grommet, .4375 x .750 (Sngle. Cyl.)
9	736-0607	Lock Washer, 5/16
10	736-3078	Washer, Flat, .344 x 1.0 x .063
11	750-3310	Flanged Spacer (Sngle. Cyl. Models only)
12	783-04333A	Hydro Fender, 4-style
13	783-0677B	Deck Lift Plate
14	783-1489C	Mounting Bracket, Seat
15	720-04061	Knob, 3/8-16
16	732-1184	Spring, Extension, .84 Dia. x 4.6
17	736-0242	Wash, Flat, .340 x .688 x .065
18	738-0296	Screw, Shoulder, .437 x .268
19	738-04012A	Shoulder Screw
20	783-0209D	Seat Bracket, Lift
21	783-04081B	Seat Pivot Bracket, Manual Adj.
22	683-04223	Deck Lift Shaft Assembly
23	712-04065	Nut, Flange Lock, 3/8-16, GrF
24	714-0104	Pin, Cotter, .072 Dia. x 1.13
25	714-0111	Pin, Cotter, 3/32, 1.0

Ref.	Part Number	Description
26	716-0106A	Ring, E Type, .625 Dia.
27	720-0311	Grip, Handle, 1/2
28	732-0874	Spring, Torsion
29	738-0138A	Screw, 5/16-18 x .620 Gr2
30	738-04130	Scr., Shldr, .625 x .165, (42" Deck)
	738-0380	Scr., Shldr, .500 x .270, (50" Deck)
31	741-0225	Bearing, Hex Flange
32	746-0968	Cable, Lift, 16.16
33	747-04447	Handle, Lift
34	756-1154	Pulley, Roller
35	783-04494B	Arm, Lift - RH (42" Deck)
	783-04711B*	Arm, Lift - LH (42" Deck)
	783-05546	Arm, Lift - Universal (50" Deck)
36	757-04003A	High Back Seat
37	736-0300	Flat Washer, .406 x .875 x .059
38	726-3046	Ratchet Clip
39	735-0656	RH Foot Pad, Rubber
	735-0656	Foot Pad, RH
40	735-0657	LH Foot Pad, Rubber
	735-0657	Foot Pad, LH
41	710-0227	Screw, #8-18 x .50
42	725-1303	Spring Switch, Outer
43	725-1439	Spring Switch, Inner
44	726-0278	Plate, Insulator Boss
45	726-0279	Plate, Insulator

* Not Shown

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

10-Style Fender, Deck Lift & Seat

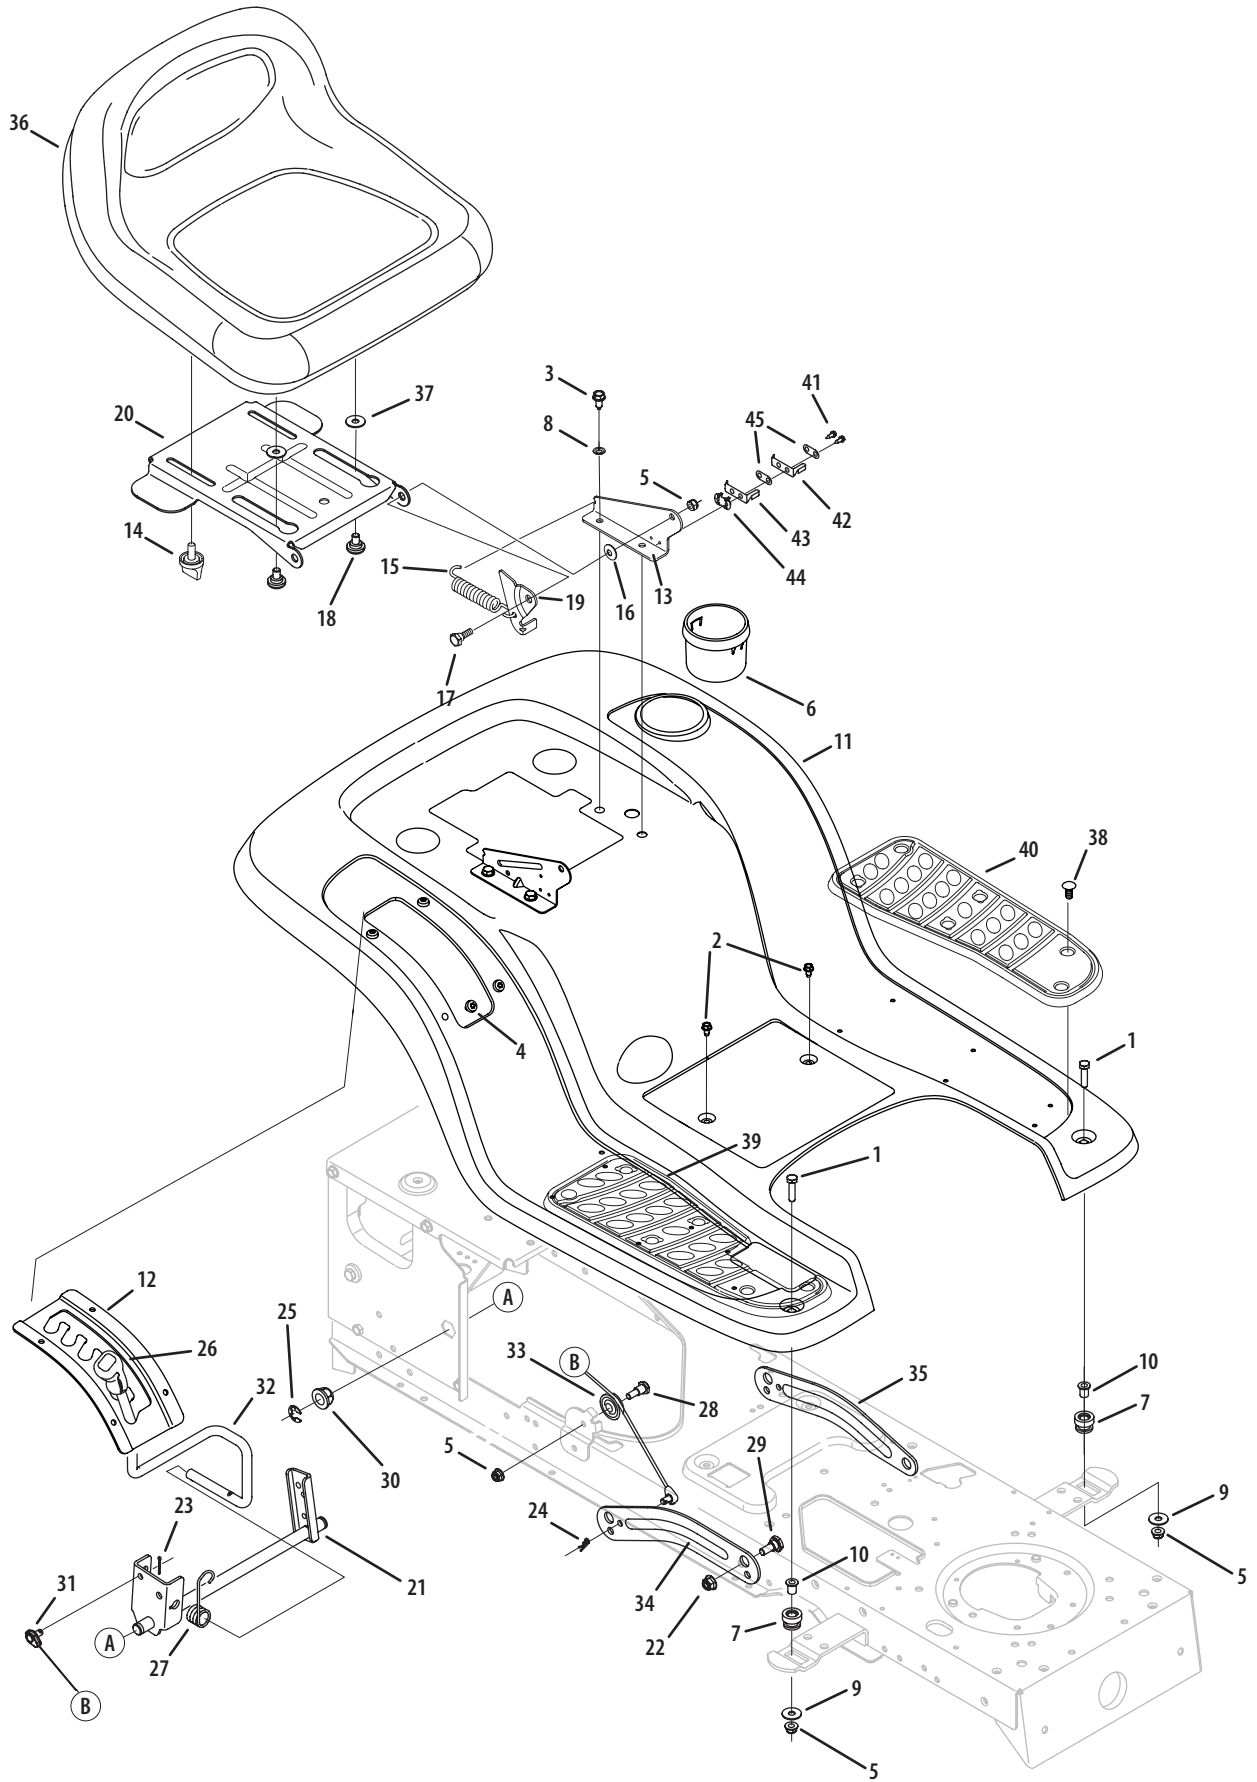


10-Style Fender, Deck Lift & Seat

Ref.	Part Number	Description
1	710-0528	Hex Screw, 5/16-18 x 1.25
2	710-0599	Screw, 1/4-20, 0.500
3	710-04484	Screw, 5/16-18, 0.750x
4	710-0611B	Screw, 5/16-18, 0.750
5	712-04063	Nut, Flange Lock, 5/16-18, GrF
6	731-04591A	Cup Holder
7	735-0690	Grommet, .4375 x .750
8	736-0607	Lock Washer, 5/16
9	736-3078	Washer, Flat,.344 x 1.0 x.063
10	750-3310	Flanged Spacer
11	783-04437A	Hydro Fender, 7-style
12	783-1010A	Deck Lift Plate
13	783-1489C	Mounting Bracket, Seat
14	720-04061	Knob, 3/8-16
15	732-1184	Spring, Extension,.84 Dia. x 4.6
16	736-0242	Wash, Flat, .340 x .688 x .065
17	738-0296	Screw, Shoulder,.437 x.268
18	738-04012A	Shoulder Screw
19	783-0209D	Seat Bracket, Lift
20	783-04081B	Seat Pivot Bracket, Manual Adj.
21	683-04223	Deck Lift Shaft Assembly
22	712-04065	Nut, Flange Lock, 3/8-16, GrF
23	714-0104	Pin, Cotter,.072 Dia. x 1.13

Ref.	Part Number	Description
24	714-0111	Pin, Cotter, 3/32, 1.0
25	716-0106A	Ring, E Type,.625 Dia.
26	720-0311	Grip, Handle, 1/2
27	732-0874	Spring, Torsion
28	738-0138A	Screw, 5/16-18 x.620 Gr2
29	738-04130	Scr.,Shldr, .625 x.165,(42" Deck)
30	741-0225	Bearing, Hex Flange
31	746-0968	Cable, Lift, 16.16
32	747-04447	Handle, Lift
33	756-1154	Pulley, Roller
34	783-04494B	Arm, Lift - RH (42" Deck)
35	783-04711B	Arm, Lift - LH (42" Deck)
36	757-04001A	Low Back Seat
37	736-0300	Flat Washer, .406 x .875 x .059
38	726-3046	Ratchet Clip
39	735-0672	RH Foot Pad,Rubber
40	735-0673	LH Foot Pad, Rubber
41	710-0227	Screw, #8-18 x.50
42	725-1303	Spring Switch, Outer
43	725-1439	Spring Switch, Inner
44	726-0278	Plate, Insulator Boss
45	726-0279	Plate, Insulator

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Steering & Front Axle Assembly

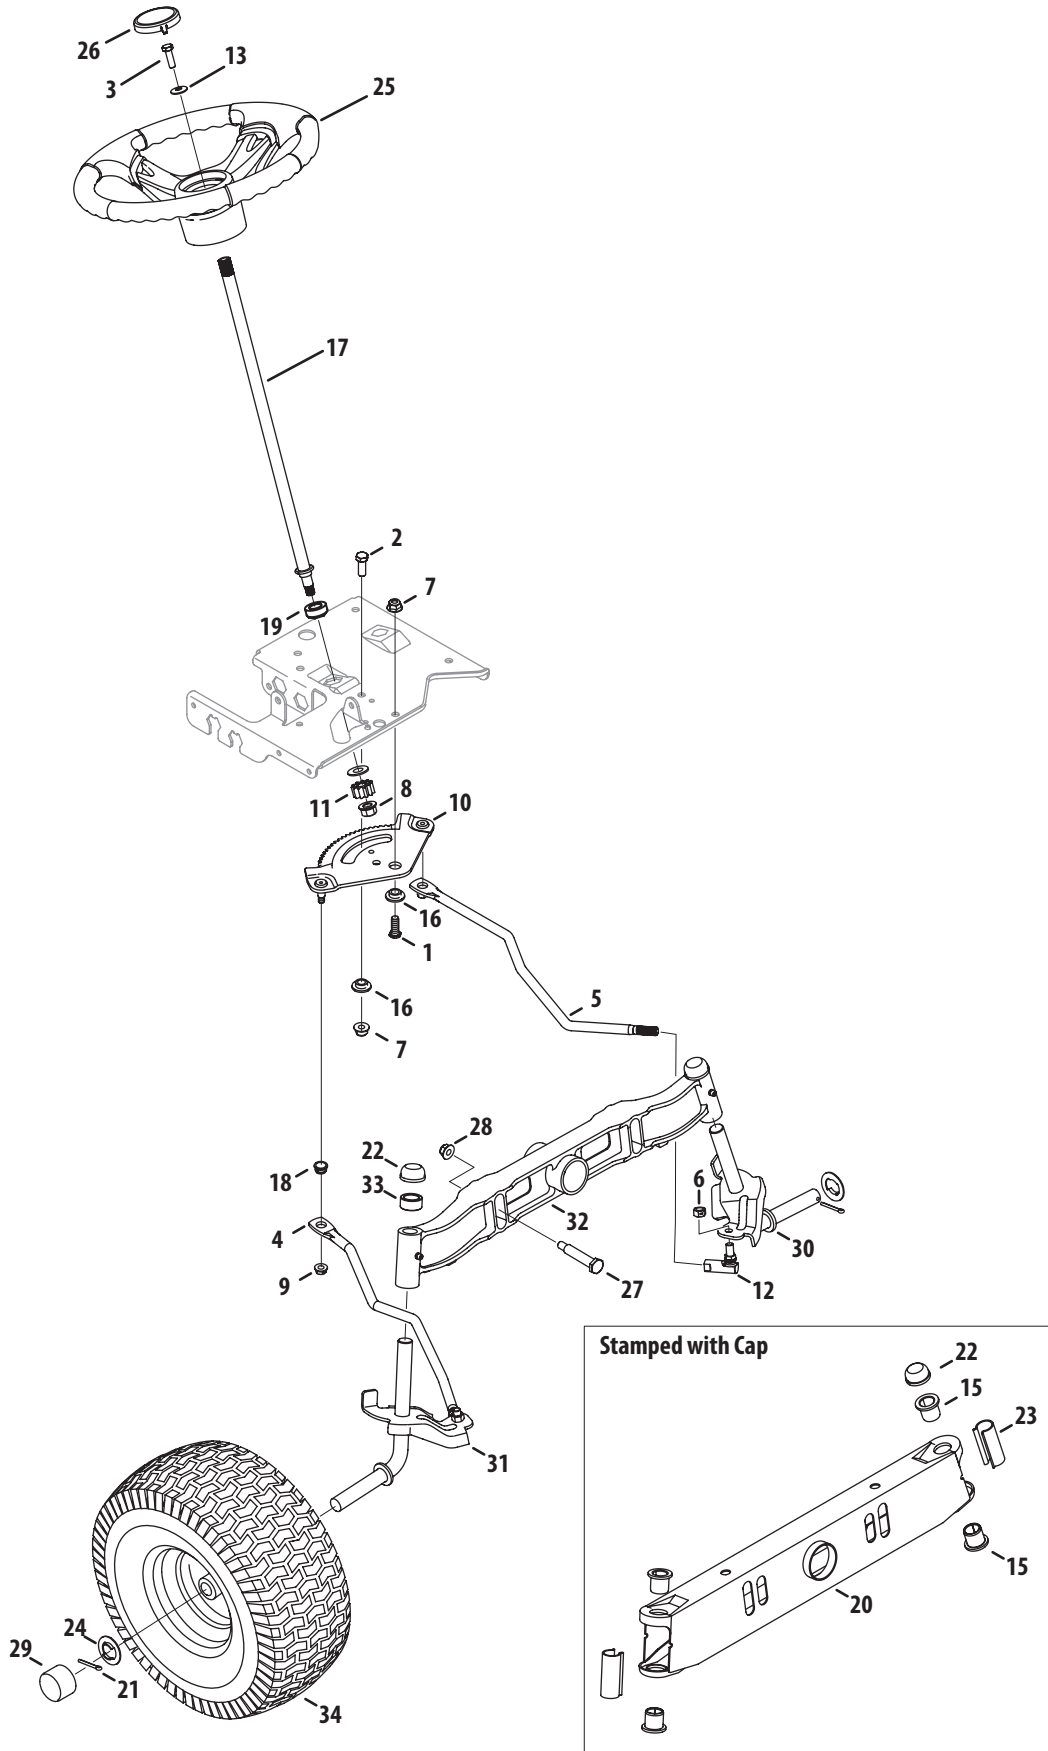


Steering & Front Axle Assembly

Ref.	Part Number	Description	Ref.	Part Number	Description
1	710-04095	Hex Screw, 3/8-16, 1.00, Gr5	21	714-0162	Cotter Pin, 5/32 x 1.25 (Cast Axle)
2	710-0514	Hex Screw, 3/8-16, 1.00, Gr5	22	726-0341	Push Cap, 3/4
3	710-0643	Hex Screw, 5/16-18, 1.00, Gr5	23	731-1291A	Pivot Bar End Cap w/ fitting
4	711-1408	Link, Drag, RH	24	736-04228A	Flat Washer, .781 x 1.59
5	711-1409A	Link, Drag, LH	25	631-04028	Steering Wheel
6	712-0214	Nut, Hex Lock, 3/8-24		631-04008	Steering Wheel
7	712-04065	Nut, Flange Lock, 3/8-16, Grf	26	731-04040	Steering Wheel Cap, Sprig Logo
8	712-0459	Nut, Flange Lock, 7/16-20		731-04681	Steering Wheel Cap, TB Logo
9	712-3004A	Nut, Flange Lock, 5/16-18, Gr5	27	738-04128	Shoulder Bolt, .5 x 2.38, 3/8-16
10	717-1550E	Gear, Steering, 11/90 Ratio	28	712-04065	Flange Lock Nut, 3/8-16
11	717-1554	Gear, Pinion, Steering	29	731-05674	Hub Cap, Standard
12	723-0448A	Ball Joint, 7/16-20, Lock	30	638-04006	LH Axle Assembly, .750 (42" Deck)
13	736-3004	Washer, Flat, .406 x .875 x .105		638-04003A	LH Axle Assembly, .750 (50" Deck)
14	736-3084	Washer, Flat, .51 x 1.12 x .06	31	638-04005	RH Axle Assembly, .750 (42" Deck)
15	741-0660A	Flange Bearing		638-04004A	RH Axle Assembly, .750 (50" Deck)
16	738-04154	Spacer, Shoulder, .38 x 1.00 x .31	32	719-04177A	Pivot Bar End, Cast
17	738-04263	Shaft, Steering, .625 OD x 24.25	33	748-04068	Spacer, Shoulder, .71 x .125 x .56
18	741-0475	Plastic Bushing .380 ID	34	634-04086	Wheel Assembly Complete, 15x6
19	741-04237	Hex Flange Bearing		734-1731	Tire Only 15 x 6 x 6
20	683-0128B	Pivot Bar Axle Assembly		634-04081	Rim Only w/ Valve Stem

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Frame & Manual PTO

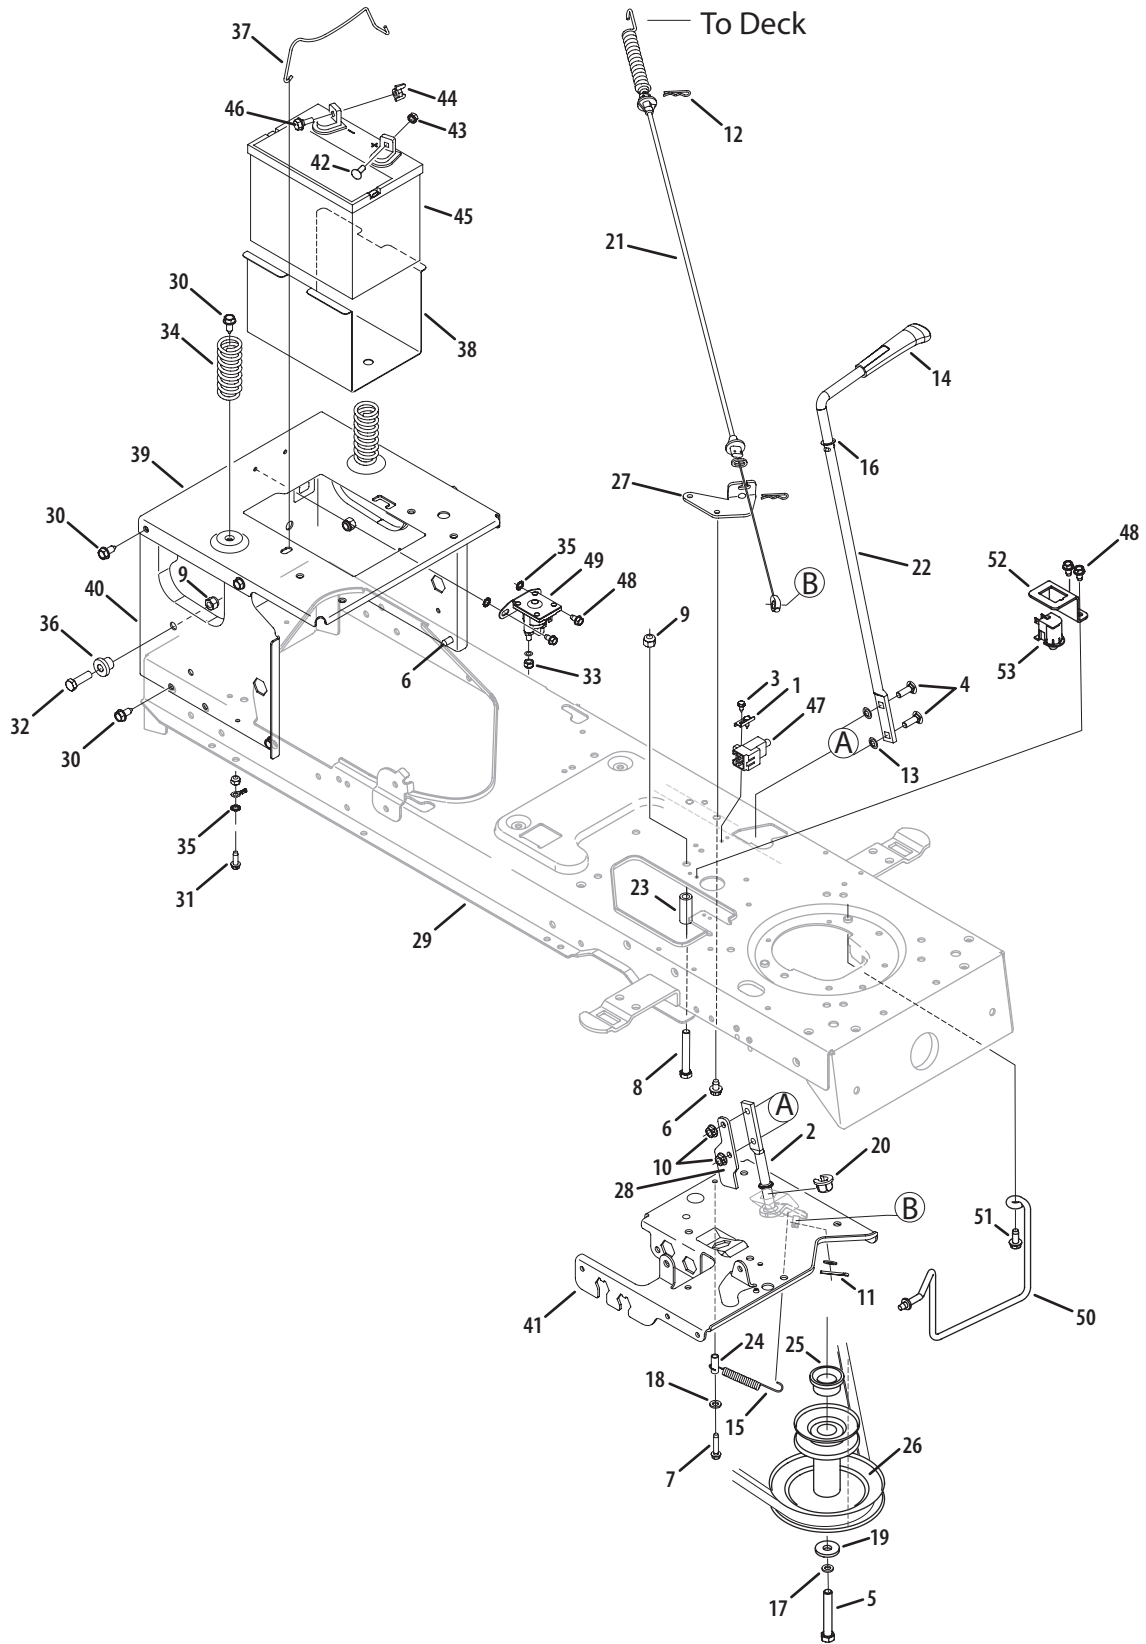


Frame & Manual PTO

Ref.	Part Number	Description	Ref.	Part Number	Description
1	17962	Plate, Switch	28	783-0744A	Stop Bracket, Engagement
2	647-04036A	Lever Assembly, Engagement	29	683-04173B	Frame Assembly, Lower
3	710-0224	Screw, #10-16, 0.500	30	710-04484	Screw, 5/16-18 x 0.625
4	710-0276	Screw, Carriage, 5/16-18, 1.00	31	710-0642	Screw, 1/4-20, 0.750
5	710-04608	Screw, 7/16-20, 3.25 42" Deck	32	710-3005	Screw, 3/8-16, 1.25, Gr5
6	710-0607	Screw, 5/16-18, 0.500	33	712-04064	Nut, Flange Lock, 1/4-20, GrF
7	710-0778	Screw, 1/4-20 x 1.50	34	732-04035	Spring, Compr., 1.28 OD x 3.125
8	710-3011	Screw, 3/8-16 x 2.25	35	736-0222	Washer, Lock, 1/4, External
9	712-04065	Nut, Flange Lock, 3/8-16, GrF	36	738-04058	Spacer, Shoulder, .38 x 1.0 x .70
10	712-3004A	Nut, Flange Lock, 5/16-18, Gr5	37	747-04121A	Hold Rod, Battery
11	714-0115	Pin, Cotter, 1/8 x 1.00	38	783-0349	Battery Tray
12	714-0145	Click Pin	39	783-04329A	Seat Bracket, Frame
13	726-0201	Nut, Speed, .3125 ID	40	783-04809C	Frame, Upper
14	731-2111B	Knob, PTO	41	783-04612	Support Bracket, Steering
15	732-04248	Extension Spring, .38 OD x 3.9 Lg	42	710-04666	Hex Head Flange Screw
16	736-0108	Washer, Flat, .510 x .750 x .033	43	712-0271	Nut, Sems, 1/4-20
17	736-0171	Washer, Lock, 7/16	44	712-3087	Nut, Wing, 1/4-20
18	736-0173	Washer, Flat, .28 x .74 x .063	45	725-1737A	Battery, 190 CCA
19	736-0322	Washer, Flat, .450 x 1.250 x .164	46	738-1132	Screw, Shoulder, .250 x .150
20	741-0708	Bearing, Flange, Hex Split .500 ID	47	725-04039	Switch, Interlock
21	746-04353A	Deck Engagement Cable	48	710-0599	Screw, 1/4-20, 0.50
22	747-04470	Engagement Handle, Deck	49	725-04439	Solenoid, 12V, 100 Amp
23	748-0415B	Spacer, .385 ID x .635 OD x 1.54	50	683-04443	Belt Keeper Rod Assembly
24	750-0566A	Spacer, .260 x .372 x 1.030 Lg.	51	710-1260A	Screw, 5/16-18, .750
25	750-0956	Spacer, 1.010 x 1.40 x .825	52	783-04722	Parking Brake Switch Bracket
26	756-04607A	Pulley, Engine, 42" Deck	53	725-3167	Snap Mount Switch
27	783-05358	Cable Bracket			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Frame & Electric PTO

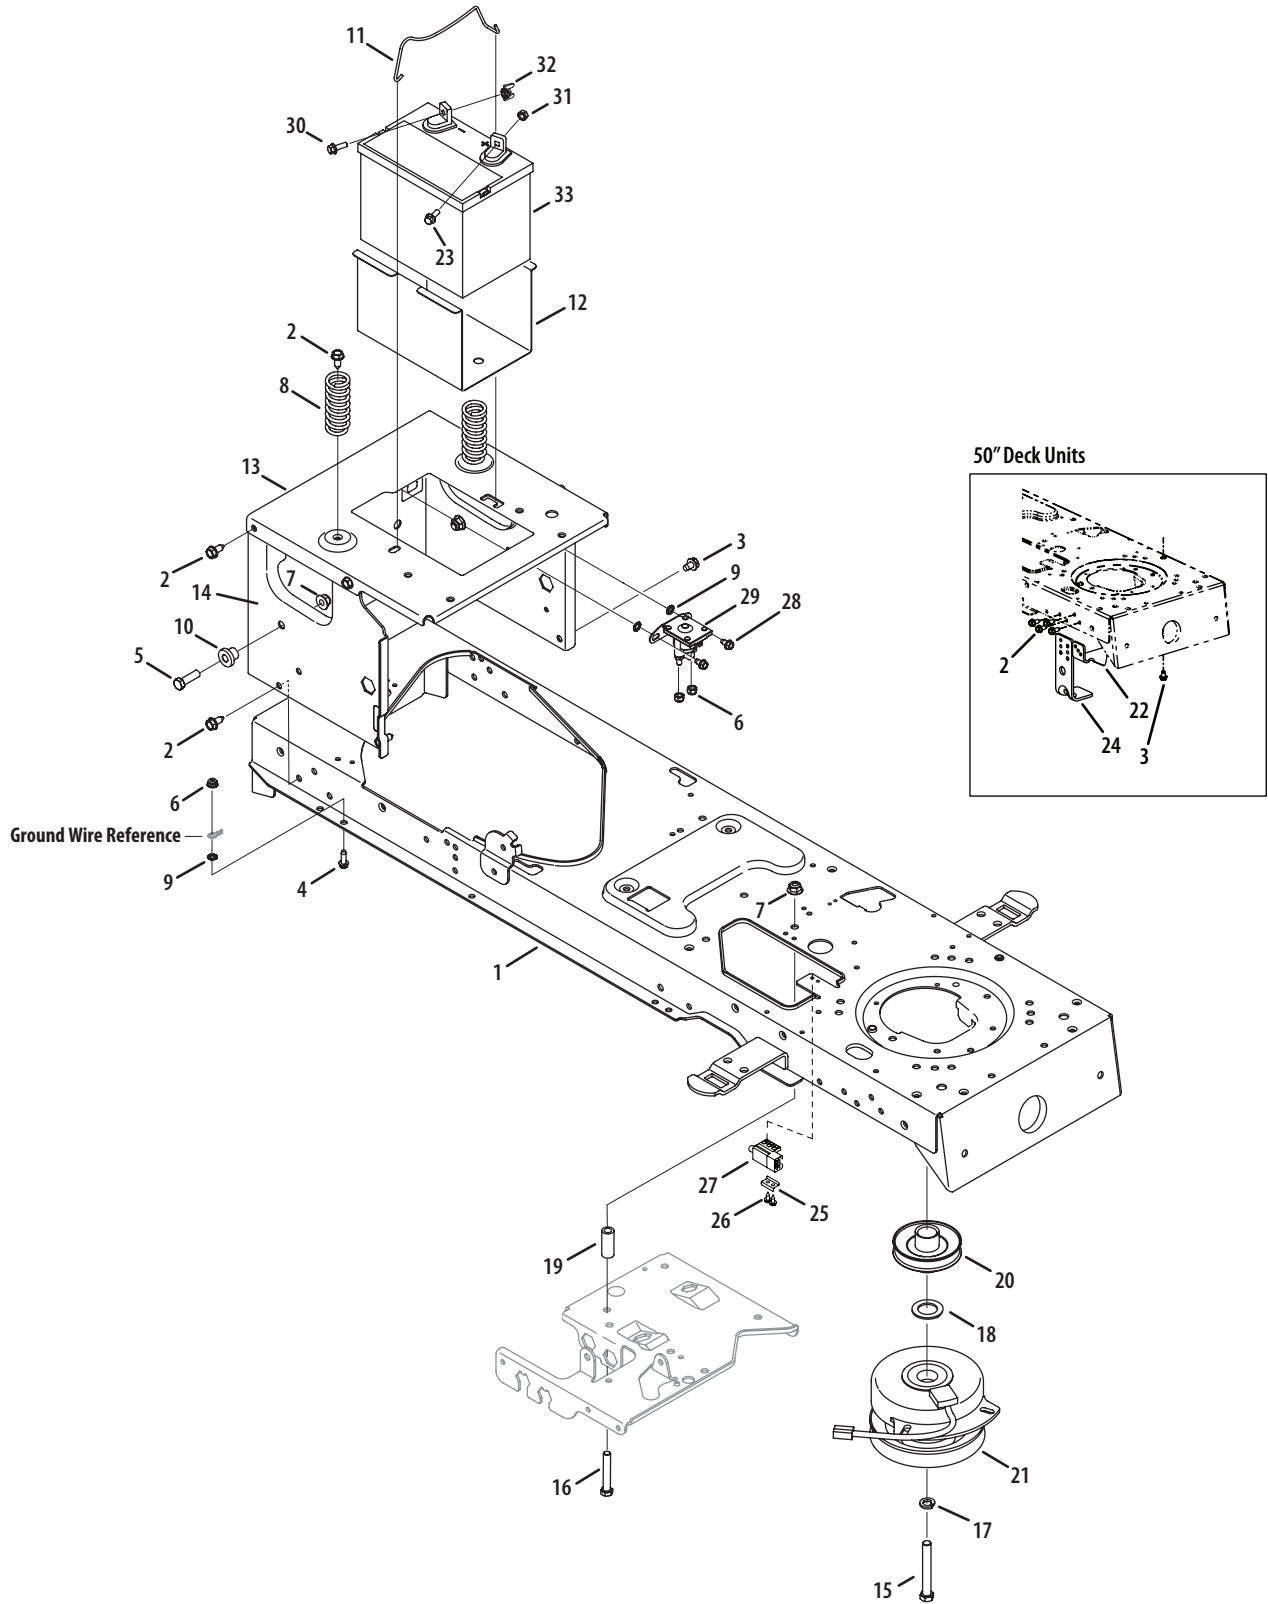


Frame & Electric PTO

Ref.	Part Number	Description	Ref.	Part Number	Description
1	683-04173B	Frame Assembly, Lower	18	736-0277	Washer, Flat, 1.031 x 1.620 x.095
2	710-04484	Screw, 5/16-18 x 0.75	19	748-0415B	Spacer,.385 ID x.635 OD x 1.54
3	710-0607	Screw, 5/16-18, 0.500	20	756-0978B	Pulley, Engine, 3.56 Diameter
4	710-0642	Screw, 1/4-20, 0.750	21	717-04174A	PTO Clutch, Electric (50" Deck Units)
5	710-3005	Screw, 3/8-16, 1.25, Gr5	22	783-04419B	Clutch Bracket
6	712-04064	Nut, Flange Lock, 1/4-20	23	738-1132	Screw, Shoulder,.250 x.15, 1/4-20
7	712-04065	Nut, Flange Lock, 3/8-16	24	783-04467	Deck Bracket, Up-Stop (50" Deck)
8	732-04035	Spring, Compress., 1.28 x 3.125	25	17962	Switch Plate
9	736-0222	Washer, Lock, 1/4, External	26	710-0224	AB Screw, #10-16 x.500
10	738-04058	Spacer, Shoulder,.38 x 1.0 x.70	27	725-04039	Switch
11	747-04121A	Hold Rod, Battery	28	710-0599	Screw, 1/4-20, 0.50
12	783-0349	Battery Tray	29	725-04439	Solenoid, 12V, 100 Amp
13	783-04329A	Seat Bracket, Frame	30	710-04666	Hex Flange Bolt, 1/4-20,.75
14	783-04809C	Frame, Upper	31	712-0271	Nut, Sems, 1/4-20
15	710-04379A	Screw, 7/16-20, 3.50, Gr5, Lock	32	712-3087	Nut, Wing, 1/4-20
16	710-3011	Screw, 3/8-16, 2.25, Gr5	33	725-1750A	Battery, 235 CCA
17	736-0171	Lock Washer, 7/16			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Drive System

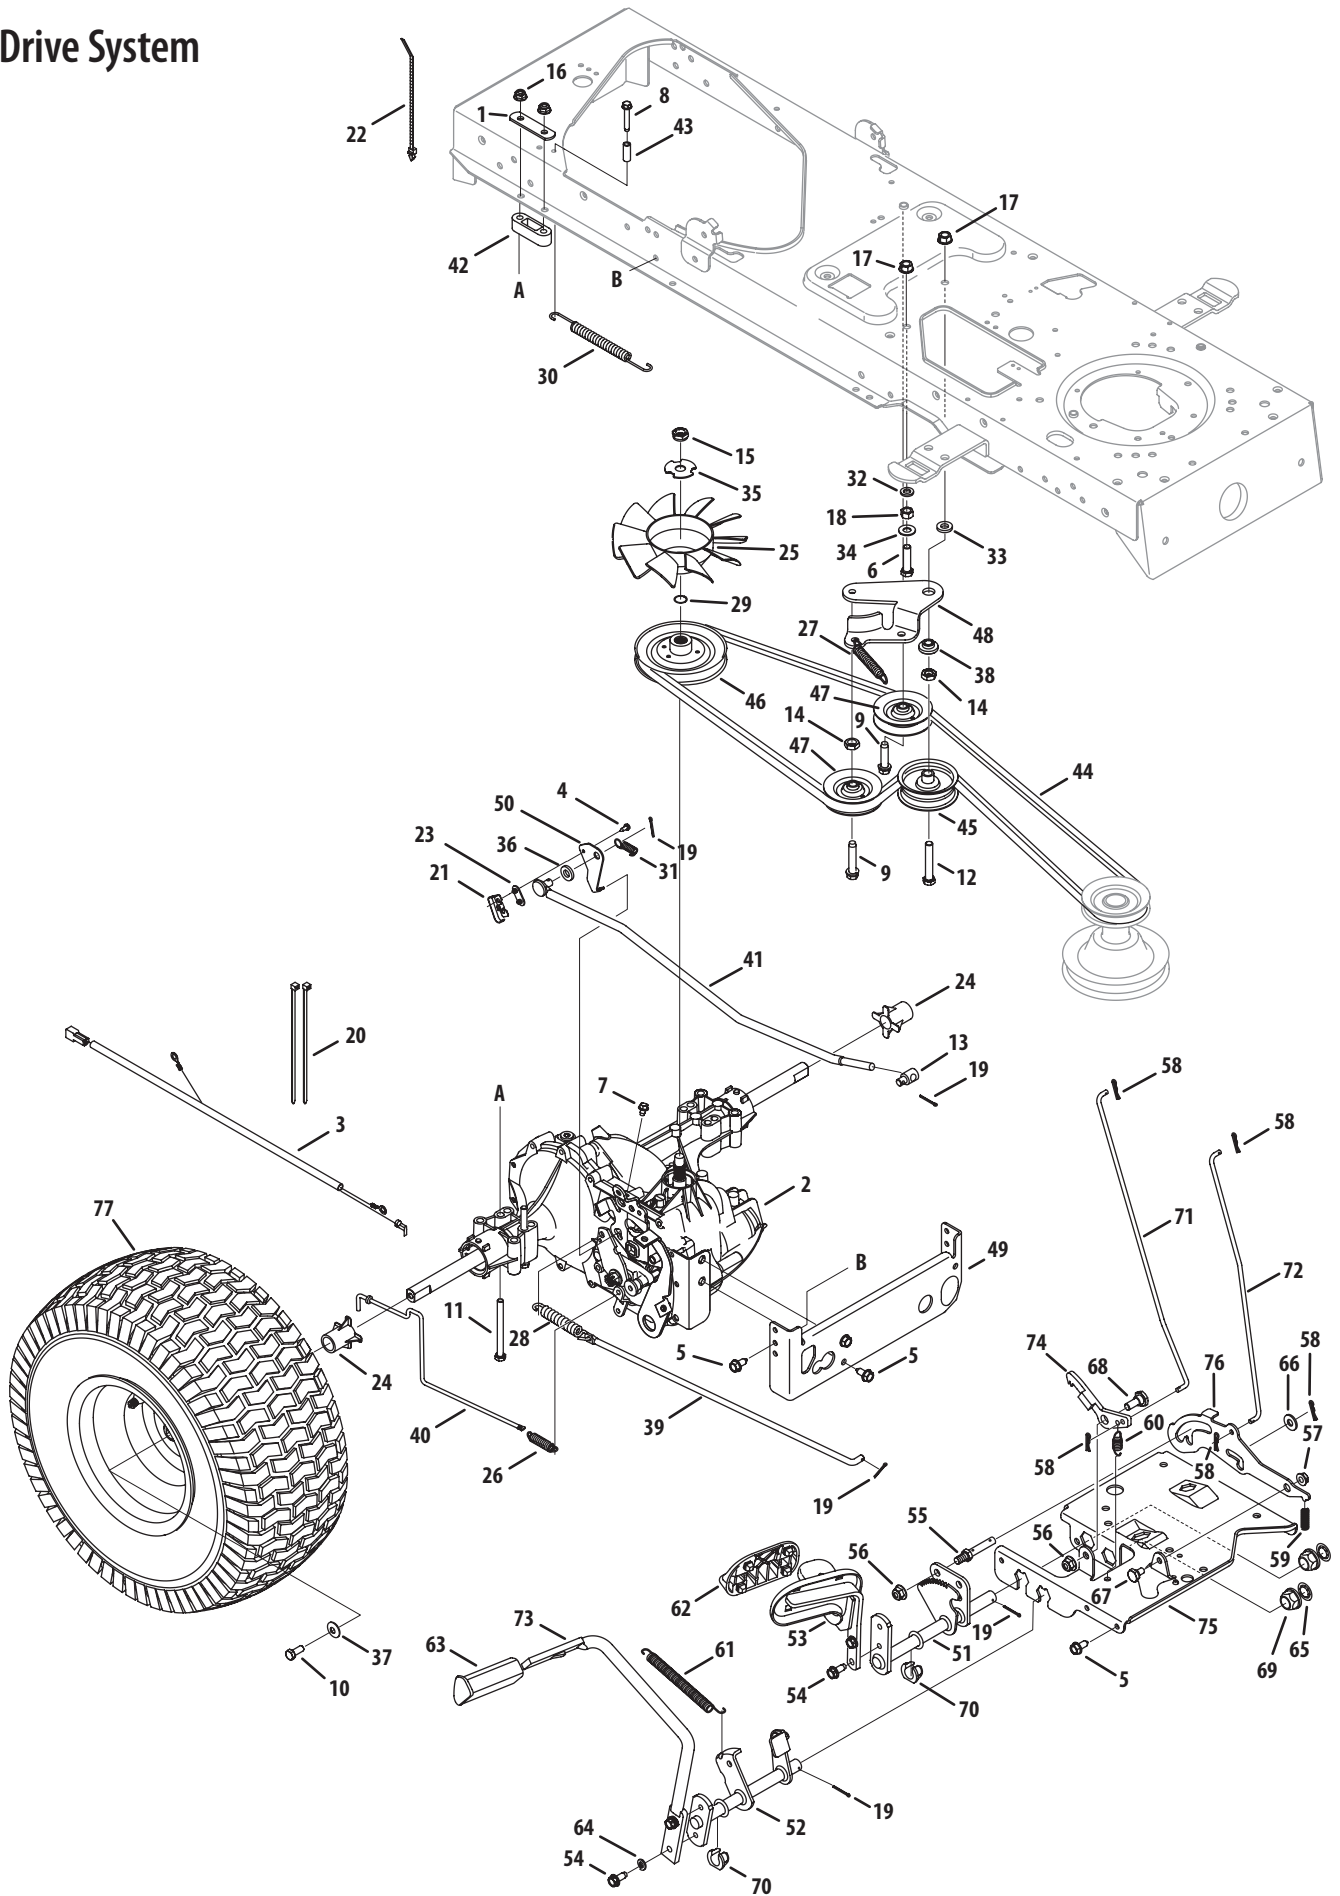


Drive System

Ref.	Part Number	Description
1	17840	Transaxle Mounting Bracket
2	618-0319	Hydrostatic Transmission, 0510
3	629-0949B	Hydro Ground Harness Assembly
4	710-0227	Screw, #8-18 x 0.500
5	710-04484	Self-Tap Screw, 5/16-18 x .750
6	710-0520	Hex Head Screw, 3/8-16 x 1.50 Gr5
7	710-0653	Self-Tap Screw, 1/4-20 x 0.375
8	710-0778	Self-Tap Screw, 1/4-20 x 1.500
9	710-1007	Sems Self-Tap Screw, 3/8-16 x 1.500
10	710-0627	Hex Head Screw, 5/16-24, .750 x Gr5
11	710-1266	Hex Head Screw, 5/16-18 x 3.50 Gr5
12	710-3011	Hex Head Screw, 3/8-16 x 2.25
13	711-0832	Ferrule, 3/8-24 x .375
14	712-0240	Jam Nut, 7/16-20
15	712-0346	Flange Jam Nut, 1/2-20 Gr5
16	712-04063	Flange Lock Nut, 5/16-18 Grf
17	712-0431	Flange Lock Nut, 3/8-16 Grf
18	712-3017	Hex Nut, 3/8-16 Gr5
19	714-0111	Cotter Pin, 3/32 1.0
20	725-0157	Cable Tie, 3/16 X .05 X 7.4
21	725-1644	Short Spring Switch
22	726-0154	Push Mount Cable Tie, 7.5 Lg
23	726-0320	Insulator Plate Nut
24	731-05299	Sleeve, .765 Id X 1.500 Lg
25	731-06098	LT Hydro Fan
26	732-0209	Extension Spring, .48 Od X 2.03
27	732-04323B	Extension Spring, .770 X 3.720 Lg
28	732-0716D	Extension Spring, .59 Od X 4.00 Lg
29	732-0729	Wire Ring
30	732-0994	Extension Spring, .500 Dia X 7.0 Lg
31	732-3118	Extension Spring, 3/8 Od X 1.44 Lg
32	736-0169	Lock Washer, 3/8 Regular Duty
33	736-0258	Flat Washer, .385 X 1.0 X .135
34	736-0300	Flat Washer, .406 X .875 X .059
35	736-04263	Lock Washer, Hydro Trans.
36	736-3010	Flat Washer, .407 x .812 x .135
37	736-0242	Belleville Washer, .340 X .872 X .060
38	738-0372B	Shoulder Spacer, 1.00 X .38 X .38
39	747-04139	Hydro Brake Rod
40	747-1149	Hydro Bypass Rod
41	747-1151	Hydro Control Rod


Ref.	Part Number	Description
42	748-0334	Spacer, T-Axle .68
43	750-0566A	Spacer, .260 X .372 X 1.030 Lg
44	754-04165	V-Belt, 41 X 78 Lg Poly
45	756-04224	Flat Idler Pulley, 2.75 Od
46	756-04308	Input Pulley, 4.13 Dia
47	756-04325	Idler Pulley, V-Type X 3.06
48	783-04442	Center Double Idler Bracket
49	783-0810B	Hydro Torque Trans. Bracket
50	783-1019B	Light Switch Actuator Bracket
51	647-0049A	Hydro Control Assembly
52	647-04100	Brake Control Assembly
53	683-0267C	Hydro Control Pedal Assembly
54	710-1260A	Self-tap Screw, 5/16-18 x 0.750
55	711-04159B	Pin, 3/8-16 X 2.68lg
56	712-04065	Flange Lock Nut, 3/8-16 Grf
57	712-3004A	Flange Lock Nut, 5/16-18 Gr5
58	714-0104	Cotter Pin, .072 Dia. X 1.13 Lg
59	732-0335	Compression Spring, .405 X 1.17
60	732-0955	Extension Spring, .50 Od X 1.41 Lg
61	732-0963	Extension Spring, .50 Dia X 6.37 Lg
62	735-0662	Drive Pedal Pad
63	735-3049A	Brake Control Pad
64	736-0119	Lock Washer, 5/16, Regular Duty
65	736-0187	Flat Washer, .64 X 1.24 X .06
66	736-0262	Flat Washer, .385 X .870 X .092
67	738-0155	Shoulder Bolt, .435 X .160, 5/16-18
68	738-0380	Shoulder Bolt, .500 X .270, 3/8-16
69	741-0225	Hex Flange Bearing
70	741-3065B	Hex Flange Bearing
71	747-04093A	Brake Lock-Rod
72	747-04096	Cruise Control Rod
73	747-04641A	Brake Pedal
74	748-04039C	Latch, cruise
75	783-04612	Steering Support Bracket
76	783-0663E	Hydro Lockout Bracket
77	634-0104	Tire Assembly Complete 20 x 8 x 8
—	734-1730*	Tire, 20 x 8 x 8 Sq. Shldr.
—	634-0177*	Tire Assembly Complete 20 x 10 x 8
—	734-1873*	Tire, 20 x 10 x 8 Sq. Shldr.
—	634-04369*	Rim-Wheel, Rear
—	934-0255*	Valve-Air, Tubeless

* Not Shown

Engine Accessories

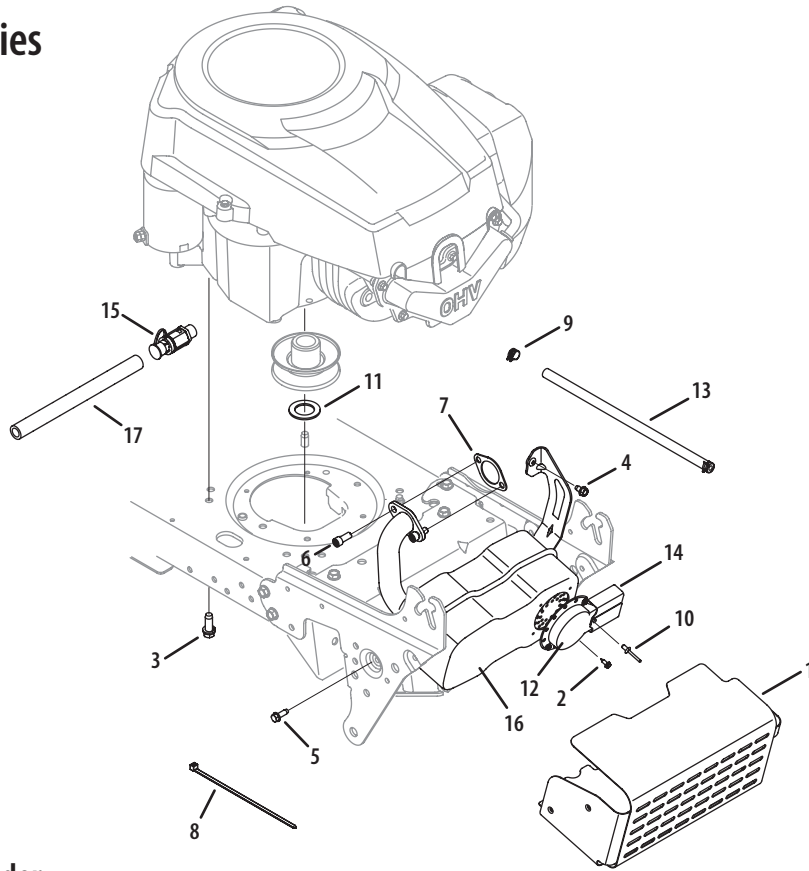

Kohler Single Cylinder



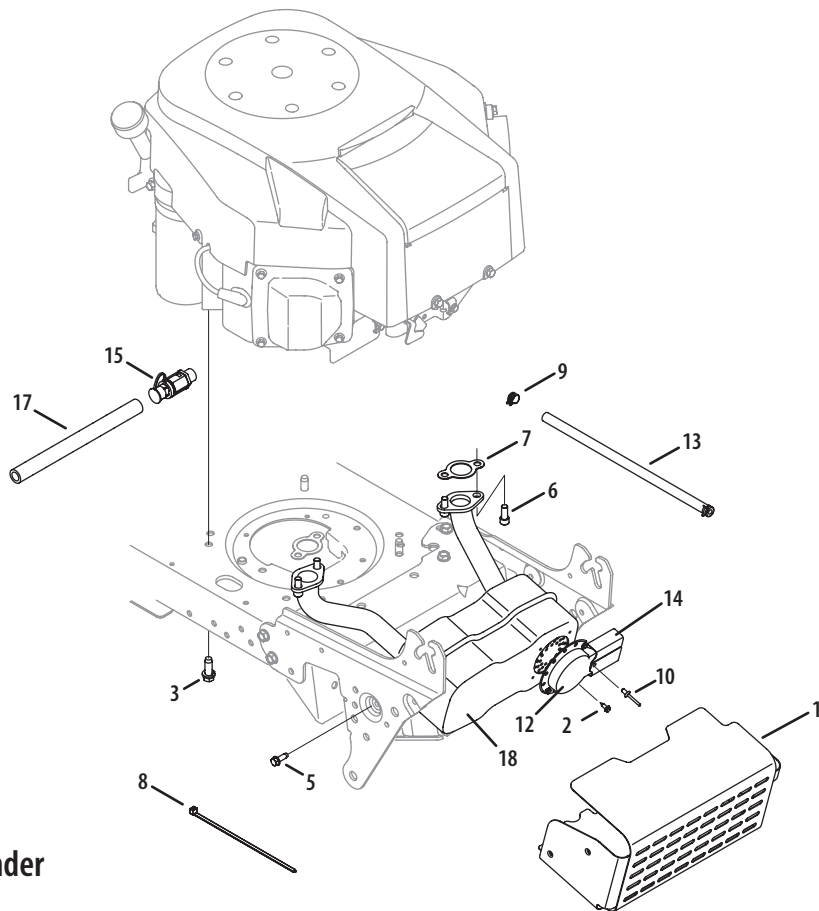


Kohler V-Twin Cylinder

Ref.	Part Number	Description
1	683-04370	Shield, Muffler
2	710-0227	Screw, #8-18, 0.500
3	710-04683	Screw, Hex, 3/8-16 x 1.00
4	710-0599	Screw, Hex, 1/4-20, 0.500
5	710-0642	Screw, Hex, 1/4-20, 0.750
6	710-1314A	Screw, 5/16-18, 0.75
7	KH-20-041-12-S	Exhaust Gasket
8	725-0157	Cable, Tie, 3/16 x .05 x 7.4
9	726-0205	Hose Clamp
10	728-04000	Rivet, Pop, .188 x .325
11	736-0277	Flat Washer, 1.031 x 1.620 x .095
12	751-0564B	Deflector, Muffler
13	751-10349	Fuel Line, Low Permeation
14	751-10353	Extension, Deflector
15	751-10517	Drain, Oil
16	751-10529	Muffler, Single Inlet
17	751-3141	Extension Hose, Oil Drain
18	751-10528	Twin Muffler, Kohler
19	751K2408643	Self-Tap Screw, M5 x 0.8 Torx
20	751K4723702	Conduit Dual Clamp, Kohler

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

42-inch Mowing Deck

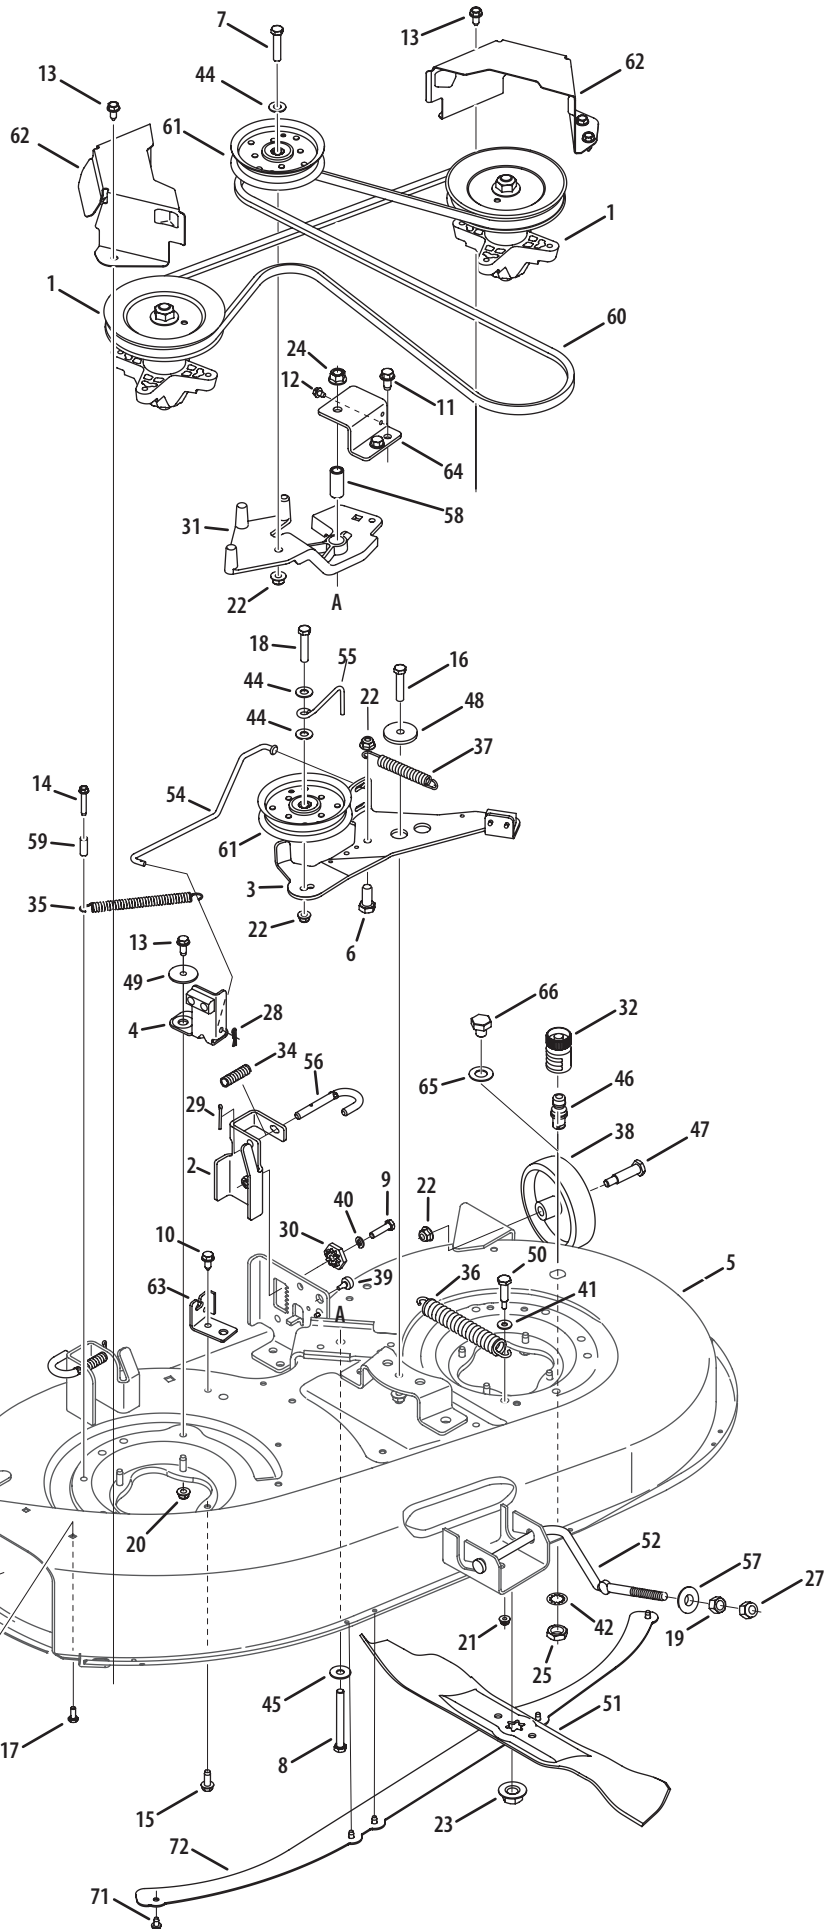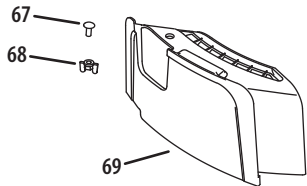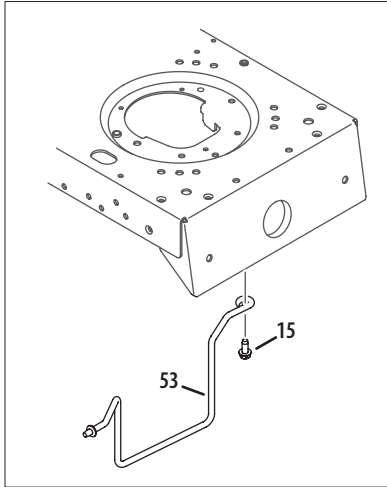

42-inch Mowing Deck


Ref.	Part Number	Description	Ref.	Part Number	Description
1	618-04456	Spindle Assembly Pulley 6.3 Dia	37	732-0470A	Extension Spring, .53 x 4.75
2	683-0254B	Deck Hanger Bracket Assy. LH	38	734-0973	Deck Wheel, 5.0 x 1.38
3	683-04138B	Brake Assembly, 42" Deck	39	735-0271A	Bumper, .62 Dia. x .3
4	683-04167	Brake Assembly, 42" Deck	40	736-0119	Lock Washer, 5/16
5	683-04261	Deck Assembly 42" W/Whl Brkt.	41	736-0173	Flat Washer, .28 x .74 x .063
6	710-0216	Screw, 3/8-16 x .75 GR5 STD	42	736-0225	Lock Washer, 5/8
7	710-0347	Screw, 3/8-16 x 1.75 GR5 STD	43	736-0270	Bell Washer, .265 x .75 x .062
8	710-0510	Screw, 7/16-20 x 3.00 GR5 STD	44	736-0300	Flat Washer, .406 x .875 x .059
9	710-0528	Screw, 5/16-18 x 1.25 GR5 STD	45	736-0322	Flat Washer, .450 x 1.250 x .164
10	710-04484	Screw, 5/16-18 x 0.75	46	737-04003D	Deck Water Nozzle
11	710-0623	Screw, 3/8-16 x 0.750	47	738-0373	Shoulder Bolt, .496 x 1.525
12	710-0653	Screw, 1/4-20 x 0.375	48	738-04162A	Shoulder Spacer, .8840 x .190
13	710-3008	Screw, 5/16-18 x 0.750	49	738-04166	Shoulder Spacer, .5000 X .1475
14	710-0778	Screw, 1/4-20 x 1.500	50	738-04272	Shoulder Screw, .374 x 1.16
15	710-1260A	Screw, 5/16-18 x 0.750	51	742-0616A	3 in 1 Star Blade 21.23" LG
16	710-3005	Screw, 3/8-16 x 1.25	52	747-04269A	Adjustable Front Deck Rod,
17	710-3015	Screw, 1/4-20 x .75	53	683-04443	Belt-Keeper Rod, 42"
18	710-3144	Screw, 3/8-16 x 2.00	54	747-04501	Brake Control Ride, 42"
19	712-0206	Hex Nut, 1/2-13	55	747-04530	Belt Keeper Rod, 42" IDLER
20	712-04063	Flange Lock Nut, 5/16-18	56	747-1116	Deck Release Handle Rod
21	712-04064	Flange Lock Nut, 1/4-20	57	748-04069	Deck Lift Pivot Cup
22	712-04065	Flange Lock Nut, 3/8-16	58	750-04637B	Spacer, .455 X .697 X 1.585
23	712-0417A	Flange Nut, 5/8-18	59	750-0566A	Spacer, .260 x .372 x 1.030
24	712-0459	Flange Lock Nut, 7/16-20	60	754-04045	V-Belt
25	712-0641	Hex Nut, M16-1.5 DIN 936	61	756-04129	Idler Pulley, 4.25"DIA
26	712-3006	Hex Nut, 1/4-20	62	783-04327B	Belt Covers, 6.00 DIA
27	712-3083	Hex Lock Nut, 1/2-13	63	783-04740	Cable Deck Engage Bracket
28	714-0104	Cotter Pin, .072 Dia. x 1.13 Lg.	64	783-05490	Support Bracket
29	714-0470	Cotter Pin, 1/8 x 1.25	65	736-0187	Flat Washer, .64 x 1.24 x .06
30	717-04074	Deck Gear Adjustment	66	738-04146	Bolt Plug, M16 x 1.5
31	719-04233	Idler Bracket, Cast 42" DECK	67	710-0134	Carriage Screw, 1/4-20 x .62
32	721-04041	Water Nozzle Adapter	68	712-3087	Wing Nut, 1/4-20
33	726-0233	Push Nut, .25 ID x .50 OD	69	731-2363	Mulch Plug
34	732-0306A	Compression Spring .531 x 1.75	70	731-1032B	Discharge Chute Assembly
35	732-04287	Extension Spring, .500 x 6.375	71	710-0599	Screw, Hex, 1/4-20, 0.500
36	732-0459C	Extension Spring, .94 x 6.74	72	783-1146A	Deck Skirt, 42"

IMPORTANT: For a proper working machine, use only Factory Approved Parts.

IMPORTANT: V-belts are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

50-inch Mowing Deck

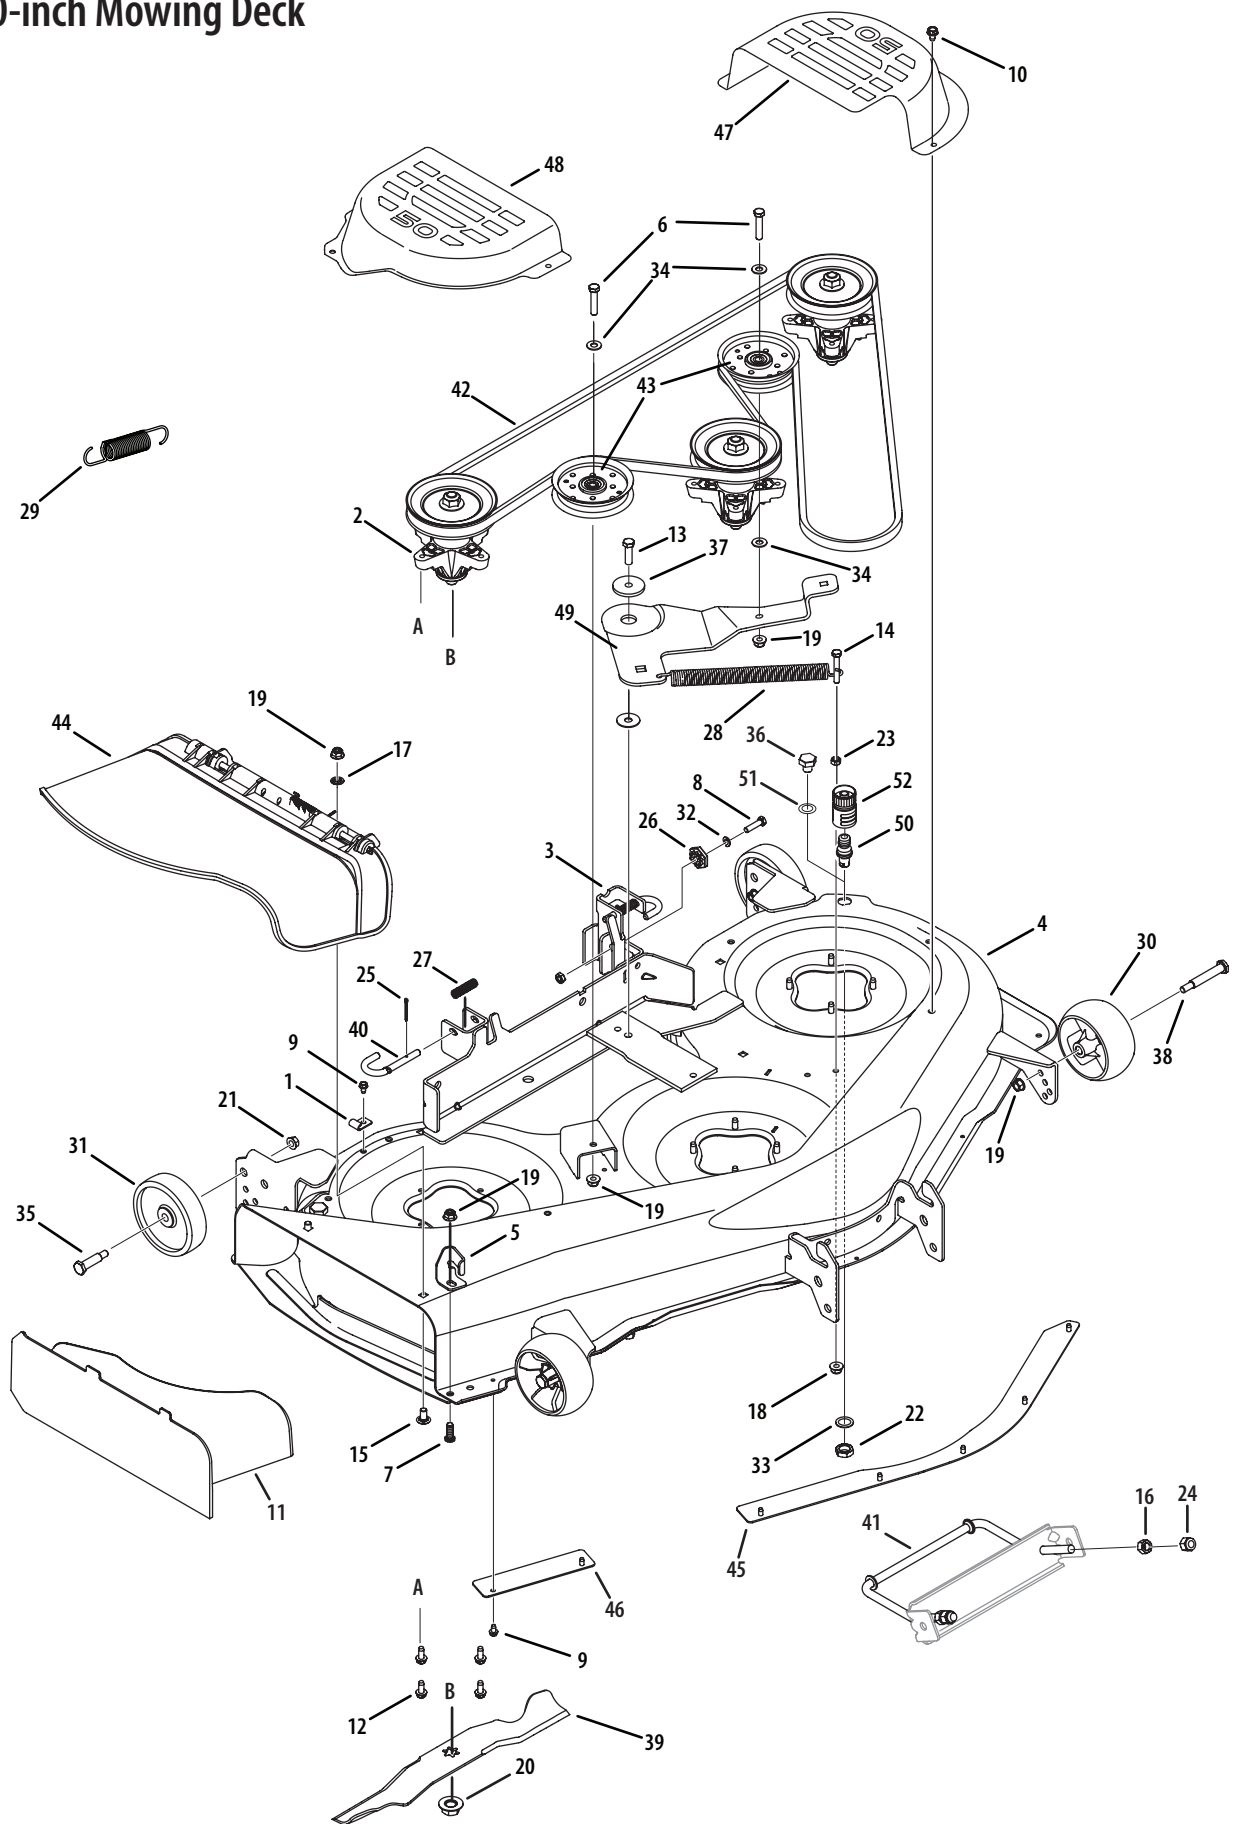

50-inch Mowing Deck

Ref.	Part Number	Description	Ref.	Part Number	Description
1	16606	Hook, Retainer	27	732-0306A	Spring, Compression, .531 x 1.75
2	618-04125A	Spindle Assembly	28	732-0459C	Spring, Extension, .94 x 6.74
3	683-0254B	Hanger Bracket Assembly	29	732-0934	Spring, Lift Assist
4	683-04075B	Weldment, 50-inch Deck	30	734-04155	Deck Wheel, 5.0
5	703-3279	Chute Stop	31	734-0973	Deck Wheel, 5.0
6	710-0347	Screw, 3/8-16, 1.75	32	736-0119	Washer, Lock, 5/16
7	710-04095	Screw, 3/8-16 x 1.0	33	736-0225	Lock Washer, 5/8"
8	710-0528	Screw, 5/16-18, 1.25, Gr5	34	736-0300	Washer, Flat, .406 x .875 x .059
9	710-0599	Screw, 1/4-20 x 0.5	35	738-0373	Shoulder Screw
10	710-0607	Screw, 5/16-18, .500	36	738-04146	Bolt Plug
11	731-04651	Mulch Plug	37	738-04162A	Spacer, Shoulder, .884 x .190
12	710-1260A	Screw, 5/16-18, .750	38	738-3056	Shoulder Screw
13	710-3005	Screw, 3/8-16, 1.25	39	742-04053C	Blade, 17.90
14	710-3103	Screw, 5/16-18 x 2.00	40	747-1116	Rod, Deck Release .375 Dia.
15	710-3178	Screw, Carriage, 3/8-16 x .75	41	747-1324	Rod, Deck Adjust
16	712-0206	Hex Nut, 1/2-13	42	754-04164	Belt, V-Type
17	712-0229	Push Nut Retainer	43	756-04129	Pulley, Idler, 3.5"
18	712-04063	Nut, Nylon Lock, 5/16-18	44	631-04070A	Chute Assembly, Side Discharge
19	712-04065	Nut, Nylon Lock, 3/8-16	45	783-04414A	Deck Skirt, Center
20	712-0417A	Nut, Hex, Flange, 5/8-18	46	783-04415	Deck Skirt, RH
21	712-0431	Nut, Nylon Lock, 3/8-16, Top Lock	47	783-05280	LH Belt Cover
22	712-0641	Nut, Hex, M16-1.5	48	783-05281	RH Belt Cover
23	712-3010	Nut, Hex, 5/16-18, Gr5	49	783-05474	Idler Bracket
24	712-3083	Hex Lock Nut, 1/2-13	50	737-04003C	Port, Water
25	714-0470	Pin, Cotter, 1/8 x 1.25	51	736-0187	Flat Washer, .64 x 1.24 x .06
26	717-04074	Deck Adjustment Gear	52	721-04041	Water Nozzle Adapter

IMPORTANT: For a proper working machine, use only Factory Approved Parts.

IMPORTANT: V-belts are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.