


# 4-Style Fender, Deck Lift & Seat

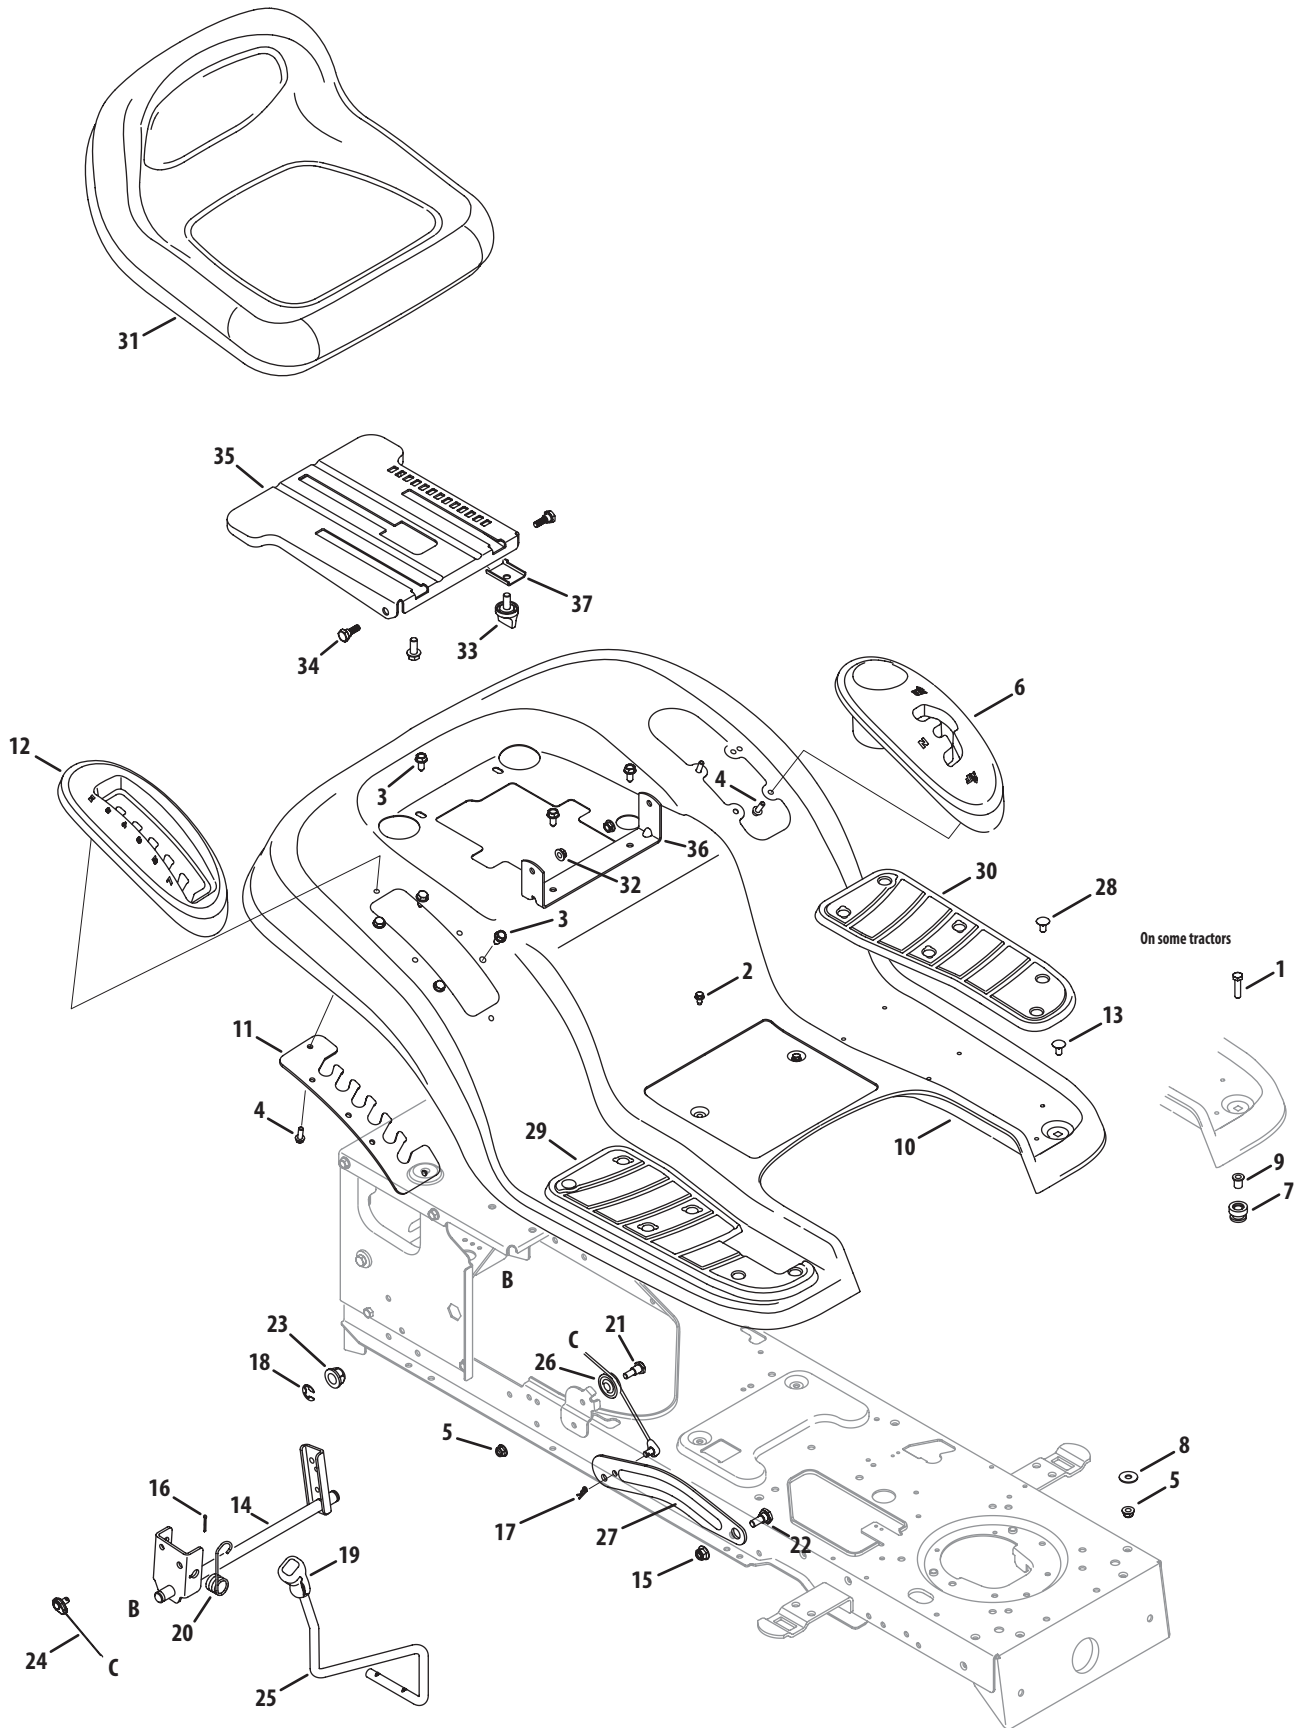


## 4-Style Fender, Deck Lift & Seat

Ref.	Part Number	Description	Ref.	Part Number	Description
1	710-0528	Hex Screw, 5/16-18 x 1.25	22	738-04130	Scr.,Shldr, .625 x.165,(42" Deck)
2	710-0599	Screw, 1/4-20, 0.500		938-0380	Screw, Shld.,50 x.27, (46" & 50" Deck)
3	710-04484	Screw, 5/16-18, 0.750x	23	941-0225	Bearing, Hex Flange
4	710-0895	Screw, 1/4-15, 0.750	24	746-0968	Cable, Lift, 16.16
5	712-04063	Nut, Flange Lock, 5/16-18, GrF	25	747-04447	Handle, Lift
6	731-2104C	Cover, w/ Cup Holder	26	756-1154	Pulley, Roller
7	735-0690	Grommet, .4375 x .750	27	783-04494B-0637	Arm, Lift - RH (42" Deck) <i>(shown)</i>
8	736-3078	Washer, Flat,.344 x 1.0 x.063		783-04711B-0637	Arm, Lift - LH (42" Deck) <i>(not shown)</i>
9	750-3310	Flanged Spacer		783-04963A-0637	Arm, Lift (46" Deck) <i>(not shown)</i>
10	783-06246-0638	Fender (4-Style) shown		783-05546-0637	Arm, Lift (50" Deck) <i>(not shown)</i>
11	783-0677B-0637	Lift Adjustment Bracket	28	726-3046	Ratchet Clip
12	731-06795	Lift Lever Cover	29	735-0656	RH Foot Pad, Rubber
13	710-0451	Carriage Bolt, 5/16-18 x .750	30	735-0657	LH Foot Pad, Rubber
14	683-04223-0637	Deck Lift Shaft Assembly	31	757-04081	Medium Back Seat
15	712-04065	Nut, Flange Lock, 3/8-16, GrF		757-04086	High Back Seat <i>(not shown)</i>
16	914-0104	Pin, Cotter,.072 Dia. x 1.13	32	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
17	914-0111	Pin, Cotter, 3/32, 1.0	33	720-04061	Knob, 3/8-16
18	716-0106A	Ring, E Type,.625 Dia.	34	938-0296	Screw, Shoulder,.437 x.268
19	720-0311	Grip, Handle, 1/2	35	783-06049-0637	Seat Mounting Bracket
20	732-0874	Spring, Torsion	36	783-06088-0637	Seat Pivot Bracket
21	738-0138A	Screw, 5/16-18 x.620 Gr2	37	783-06266-0637	Seat Adjustment Knob Bracket

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# 10-Style Fender, Deck Lift & Seat

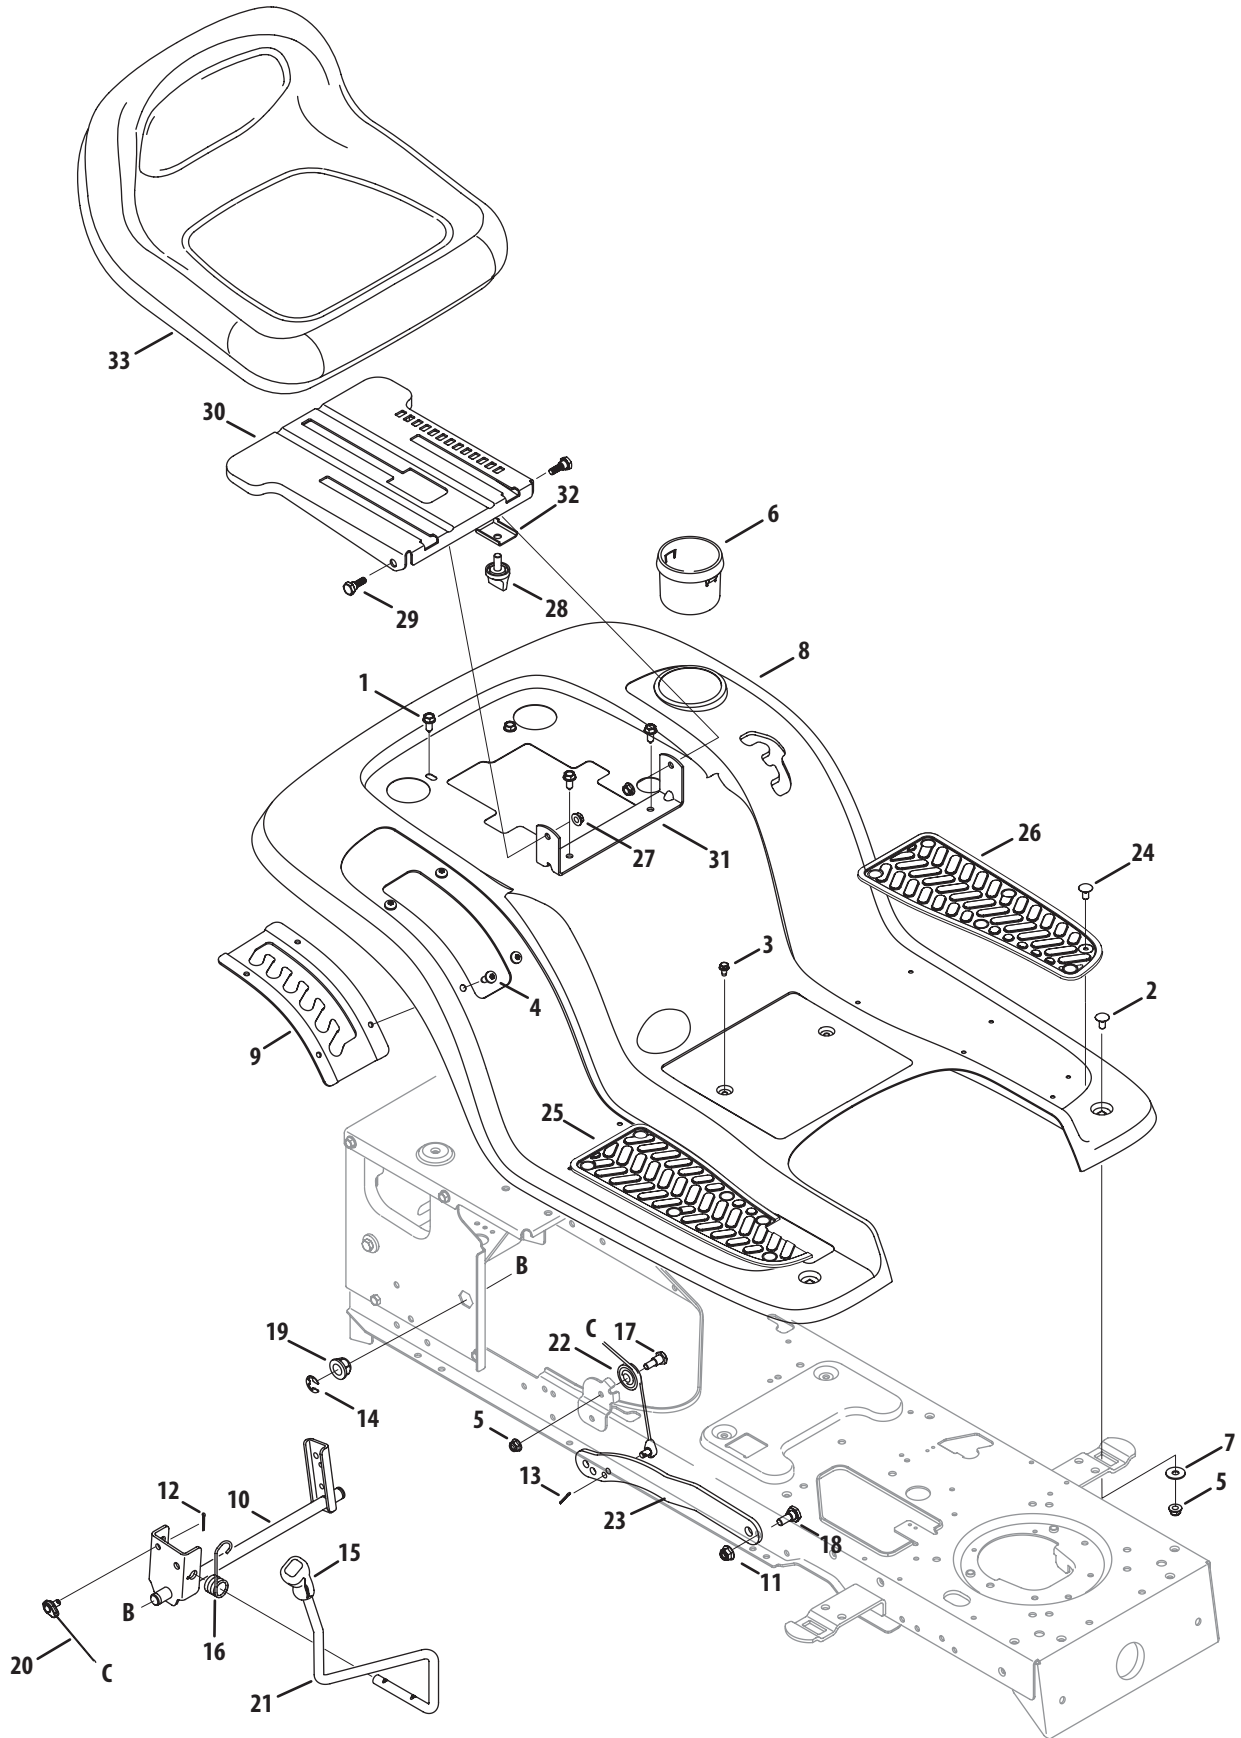


## 10-Style Fender, Deck Lift & Seat

Ref.	Part Number	Description
1	710-04484	Screw, 5/16-18, 0.750x
2	710-0451	Carriage Bolt, 5/16-18 x .750
3	710-0599	Screw, 1/4-20, 0.500
4	710-1611B	Screw, 5/16-18, 0.750
5	712-04063	Nut, Flange Lock, 5/16-18, GrF
6	731-04591A	Cup Holder
7	736-3078	Washer, Flat,.344 x 1.0 x.063
8	783-06248-0691	Fender (10-Style)
9	783-1010A-0637	Deck Lift Plate (10-Style)
10	683-04223-0637	Deck Lift Shaft Assembly
11	712-04065	Nut, Flange Lock, 3/8-16, GrF
12	914-0104	Pin, Cotter,.072 Dia. x 1.13
13	914-0111	Pin, Cotter, 3/32, 1.0
14	716-0106A	Ring, E Type,.625 Dia.
15	720-0311	Grip, Handle, 1/2
16	732-0874	Spring, Torsion
17	738-0138A	Screw, 5/16-18 x.620 Gr2
18	938-0380	Screw, Shld,.50 x.27, (46" & 50" Deck)
19	941-0225	Bearing, Hex Flange
20	746-0968	Cable, Lift, 16.16
21	747-04447	Handle, Lift
22	756-1154	Pulley, Roller
23	783-04963A-0637	Arm, Lift (46" Deck)
24	726-3046	Ratchet Clip
25	735-0672	RH Foot Pad
26	735-0673	LH Foot Pad
27	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
28	720-04061	Knob, 3/8-16
29	938-0296	Screw, Shoulder,.437 x.268
30	783-06049-0637	Seat Mounting Bracket
31	783-06088-0637	Seat Pivot Bracket
32	783-06266-0637	Seat Adjustment Knob Bracket
33	757-04081	Medium Back Seat

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Steering & Front Axle Assembly

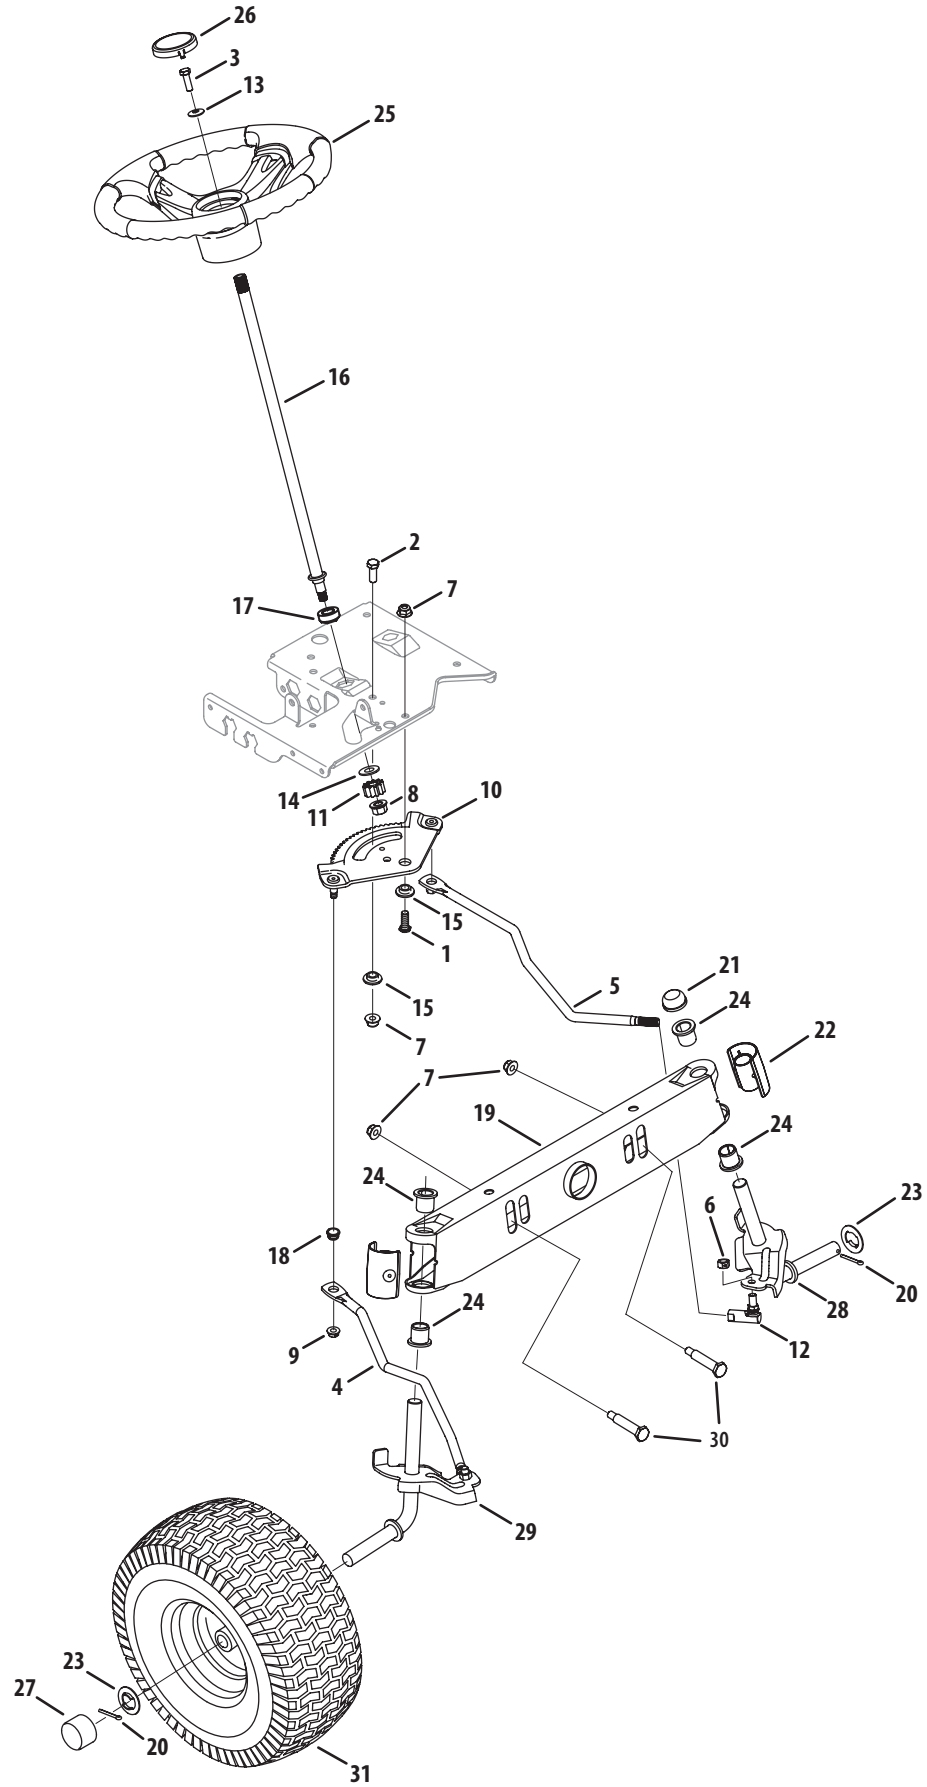


## Steering & Front Axle Assembly

Ref.	Part Number	Description
1	710-04095	Hex Screw, 3/8-16, 1.00, Gr5
2	710-0514	Hex Screw, 3/8-16, 1.00, Gr5
3	710-0643	Hex Screw, 5/16-18, 1.00, Gr5
4	711-1408	Link, Drag, RH
5	711-1409A	Link, Drag, LH
6	912-0214	Nut, Hex Lock, 3/8-24
7	712-04065	Nut, Flange Lock, 3/8-16, Grf
8	712-0459	Nut, Flange Lock, 7/16-20
9	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
10	917-1550E	Gear, Steering, 11/90 Ratio
11	717-1554	Gear, Pinion, Steering
12	923-0448A	Ball Joint, 7/16-20, Lock
13	936-3004	Washer, Flat, .406 x .875 x .105
14	736-3084	Washer, Flat, .51 x 1.12 x .06
15	738-04154	Spacer, Shoulder, .38 x 1.00 x .31
16	738-04263	Shaft, Steering, .625 OD x 24.25
17	741-04237A	Hex Flange Bearing
18	941-0475	Plastic Bushing .380 ID
19	683-0128B-0637	Pivot Bar Axle Assembly
20	714-0162	Cotter Pin, 5/32 x 1.25 (Cast Axle)
21	726-0341	Push Cap (Stamped Axle)
22	931-1291A	Pivot Bar End Cap w/ fitting
23	736-04228A	Flat Washer, .781 x 1.59
24	741-0660A	Flange Bearing
25	631-04028	Steering Wheel
26	731-04039	Steering Wheel Cap
	731-04681	Steering Wheel Cap, Tine Logo
27	731-05674	Push Cap, 3/4
28	638-04006A-0637	LH Axle Assembly, .750 (42" Deck)
	638-04003A	LH Axle Assembly, .750 (46" & 50")
29	638-04005A-0637	RH Axle Assembly, .750 (42" Deck)
	938-04004A	RH Axle Assembly, .750 (46" & 50")
30	738-04128	Shoulder Bolt, .5 x 2.38, 3/8-16
31	634-04086-0911	Wheel Assembly Complete, 15x6 TB
	634-04086-0941	Wheel Assembly Complete, 15x6 Brute
	734-1731-0901	Tire Only 15 x 6 x 6
	934-04081-0662	Rim Only w/ Valve Stem TB
	934-04081-0674	Rim Only w/ Valve Stem Brute

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Hood & Dash Assembly — K Style

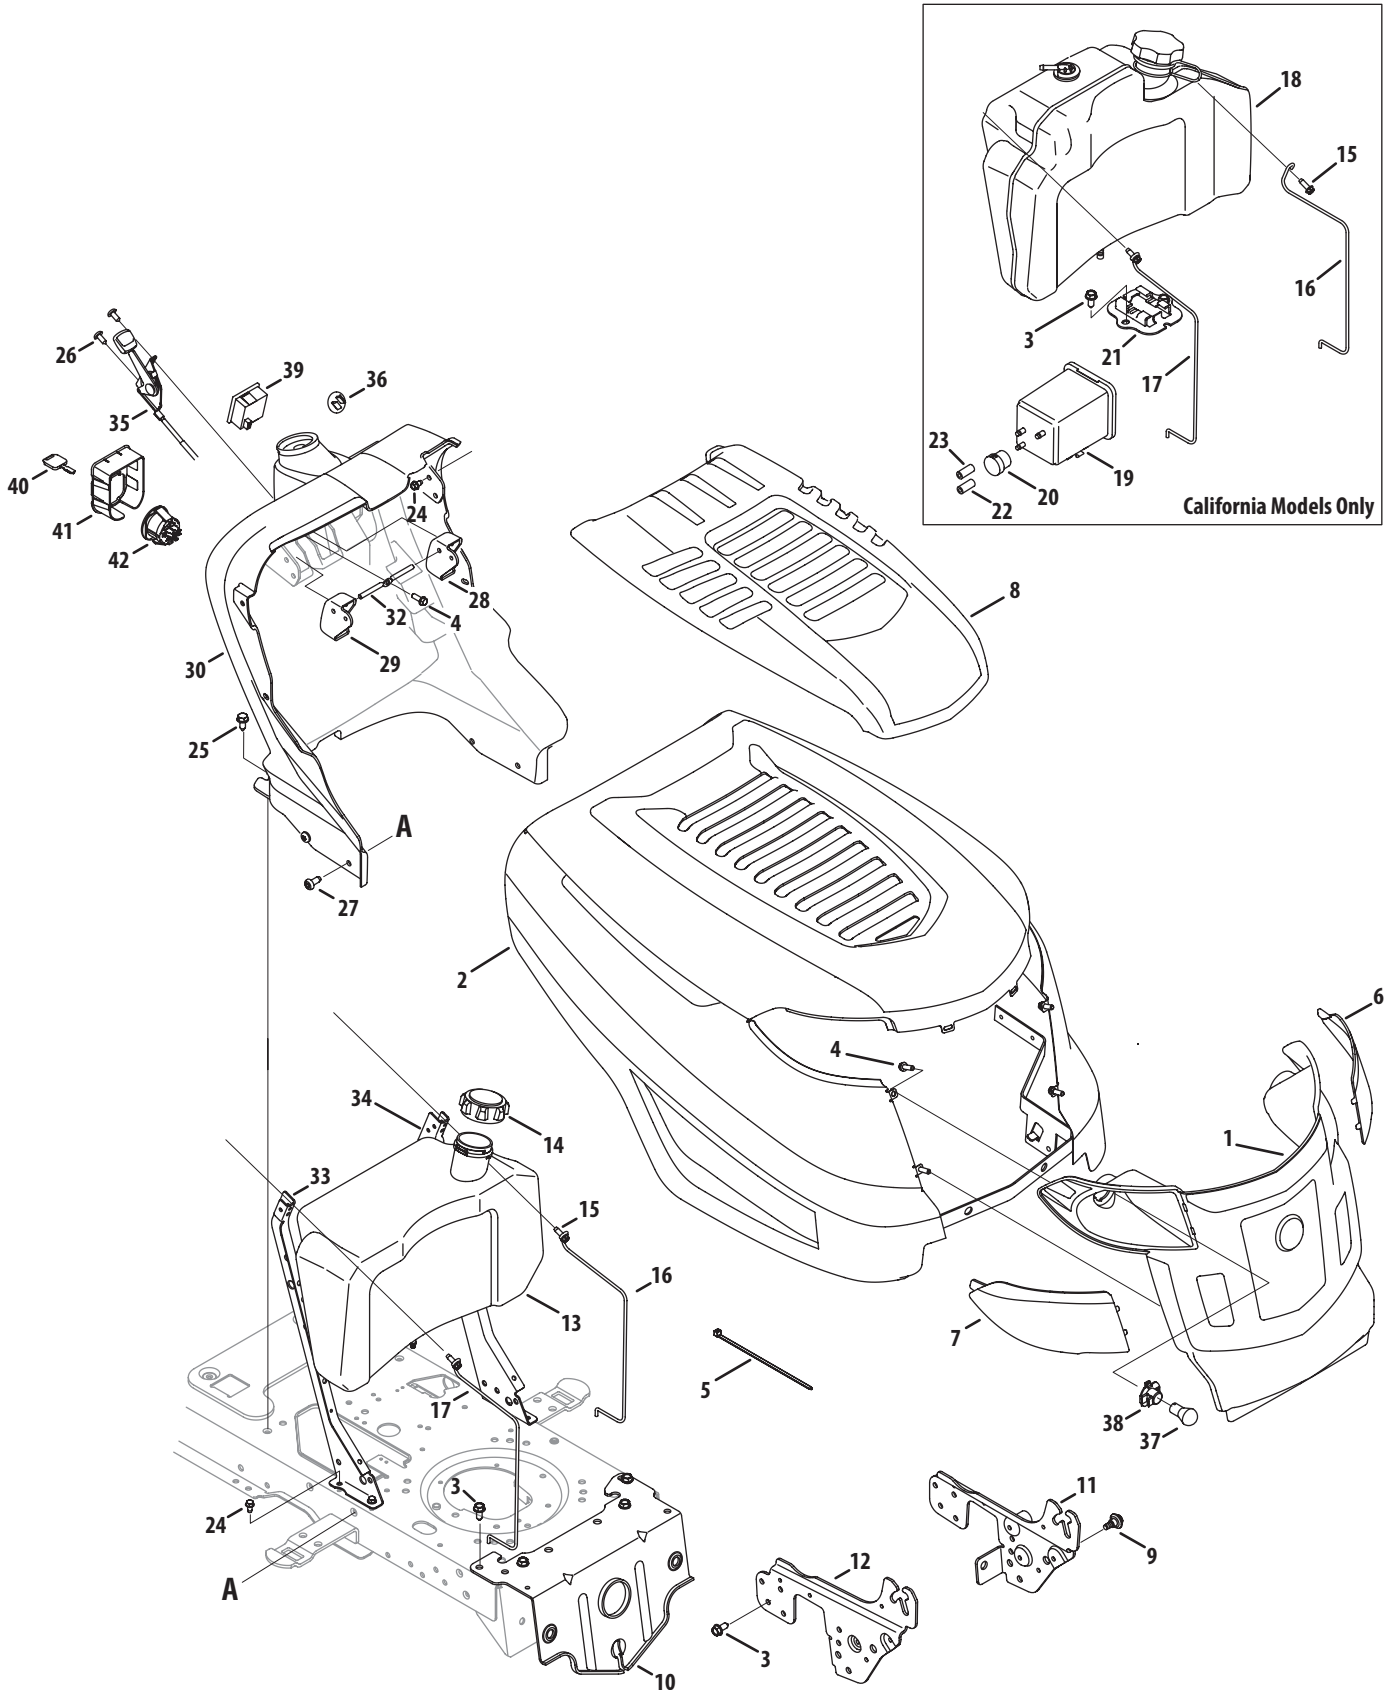

## Hood & Dash Assembly — K Style

Ref.	Part Number	Description	Ref.	Part Number	Description
1	631-04272	Grill Assembly TB	23	951-10750*	Fuel Line, 7/32
2	683-04441-0638	Hood, K-Style	24	710-0599	Screw, 1/4-20, 0.500
3	710-04484	Screw, 5/16-18, 0.625	25	710-0607	Screw, 5/16-18 x 0.500
4	710-0895	Self-tapping Screw, 1/4-15 x.75	26	710-1017	Screw, 1/4-14 x.625
5	725-0157	Cable Tie, 3/16 x .05 x 7.4	27	710-1611B	Screw, 5/16-18 x.75
6	731-06095	Headlight Lens (LH)	28	731-04728	Parking Brake Button
7	731-06096	Headlight Lens (RH)	29	731-04729	Cruise Control Button
8	731-06194A*	Hood Scoop	30	731-06166	Dash Panel w/ Manual PTO
9	738-04091A	Shoulder Screw,.43 x.29	31	735-0271A***	Rubber Bumper
10	783-05326-0637	Pivot Bar Bracket	32	747-1196	Brake/Cruise Pivot Rod
11	783-05327B-0637	Pivot support Bracket, LH	33	783-04285F-0637	RH Dash Support Plate
12	783-05328A-0637	Pivot support Bracket, RH	34	783-04323F-0637	LH Dash Support Plate
13	751-10609	Fuel Tank, 2.5 gal.	35	746-04364	Throttle/Choke Control Cable
14	751-0603A	Fuel Tank Cap	36	731-1999	Choke Plug
15	710-0642	Screw, 1/4-20, 0.750	37	925-0963	Headlamp, 12V
16	747-04161	Gas Tank Support Rod LH	38	925-1649	Lamp Socket
17	747-04946	Gas Tank Support Rod RH	39	925-04156	Systems Ind. Monitor w/ Amtr.
18	651-04218**	Fuel Tank, 2.5 gal. Assembly (CARB)	40	925-1745A	Ignition Key w/ plastic cover
	951-10587	Fuel Cap, 2.25 ID Female	41	731-05241A	Switch Housing
	751-10441	Rollover Valve Grommet Mount	42	925-04659	Module, Ignition Switch (3 position)
	735-04081	Rubber Grommet, 23.0 ID x 3.55		925-04227B	Module, Ignition Switch (4 position)
	951-10570	Fuel Tank, 2.5 gal.	—	725-04867	Wire Harness (no RMC - 3 Position)
19	951-10589*	Carbon Canister	—	725-04864	Wire Harness (w/ RMC - 4 Position)
20	951-10590*	Canister Filter Vent	—	777X43039	Headlight Lens Reflector RH
21	951-10610*	Canister Adapter Bracket	—	777X43038	Headlight Lens Reflector LH
22	951-10749*	Fuel Line, 3/16			

\* On Some Models


\*\* Not available as an assembly.

\*\*\* Not shown

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.



# Hood & Dash Assembly — 5 Style

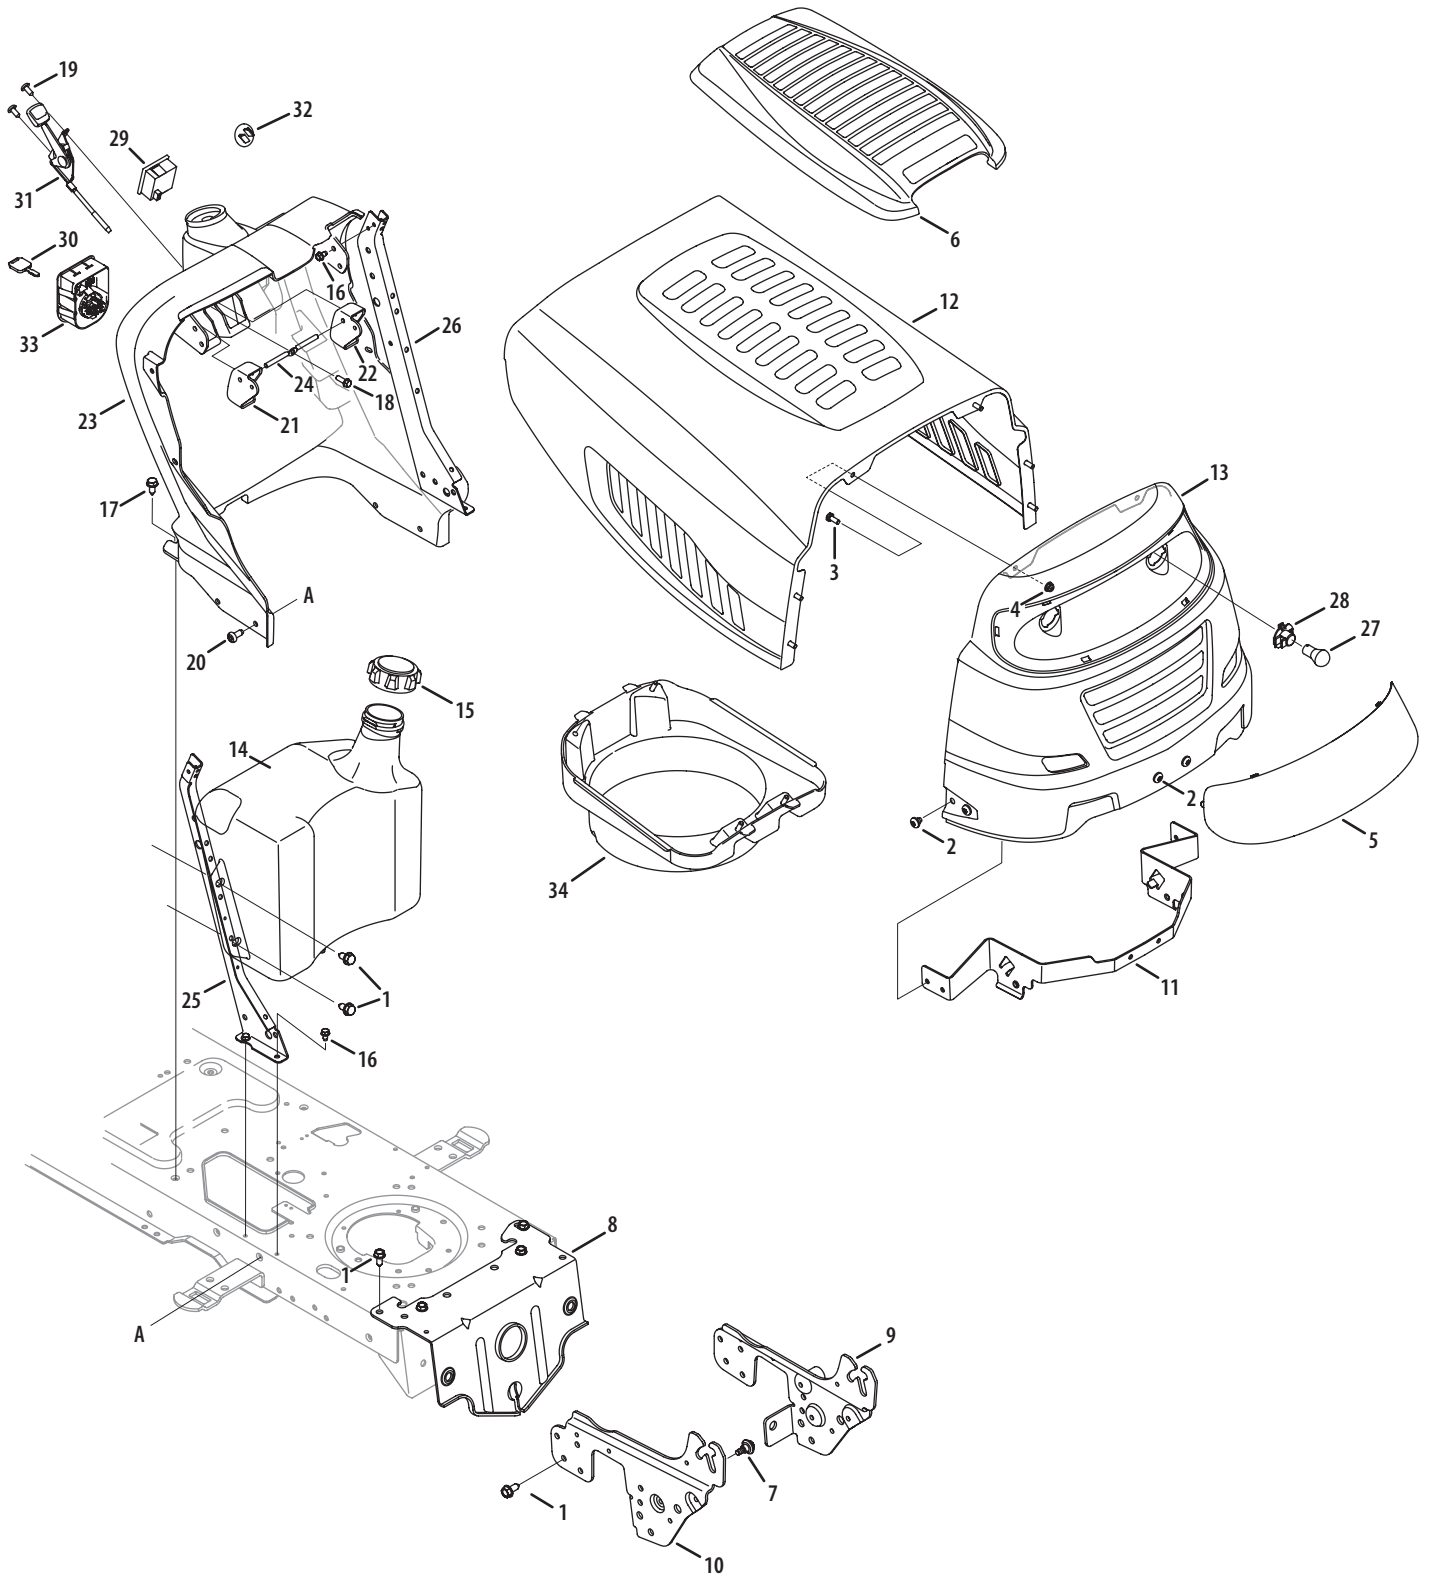


## Hood & Dash Assembly — 5 Style

Ref.	Part Number	Description	Ref.	Part Number	Description
1	710-04484	Screw, 5/16-18, 0.625	19	710-1017	Screw, 1/4-14, 0.625
2	710-04593	Screw, 5/16-18, .375	20	710-1611B	Screw, 5/16-18, 0.750
3	710-0751	Screw, 1/4-20, 0.620	21	931-04215	Dash Cruise Lever
4	712-04064	Flange Lock Nut, 1/4-20	22	931-04217	Dash Brake Lever
5	731-04949A	1/5-Style Lens	23	731-06167	Dash Panel, w/ Manual PTO
6	731-05522A	Hood Cover/Scoop	24	747-1196	Bent Lever Rod
7	738-04091A	Screw, Shldr, .43 x .29, 5/16-18	25	783-04323F-0637	Dash Support, RH
8	783-05326-0637	Pivot Bar Bracket	26	783-04285F-0637	Dash Support, LH
9	783-05327B-0637	Pivot Bracket Support LH	27	925-0963	Headlamp, 12V
10	783-05328A-0637	Pivot Bracket Support RH	28	925-1649	Lamp Socket
11	783-05454-0637	Hood Pivot Bracket	29	925-04156	Systems Ind. Monitor w/ Amtr.
12	783-05683-0691	1/5-Style Hood	30	925-1745A	Key w/ Plastic Grip
13	783-05685-0691	1/5-Style Grill	31	746-1084	Throttle/Choke Control, 25.0
14	751-0659D	Fuel Tank, 2.0 gal.	32	731-1999	Choke Plug
15	751-0603A	Fuel Tank Cap	33	925-04227B	4-Position Key Switch B&S
16	710-0599	Screw, 1/4-20, 0.500	34	731-05147A	Hood Plenum
17	710-0607	Screw, 5/16-18 x 0.500	—	725-04863	Wire Harness, Main B&S
18	710-0895	Screw, 1/4-15, .750	—	777X41984	Headlight Lens Reflector

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Drive System

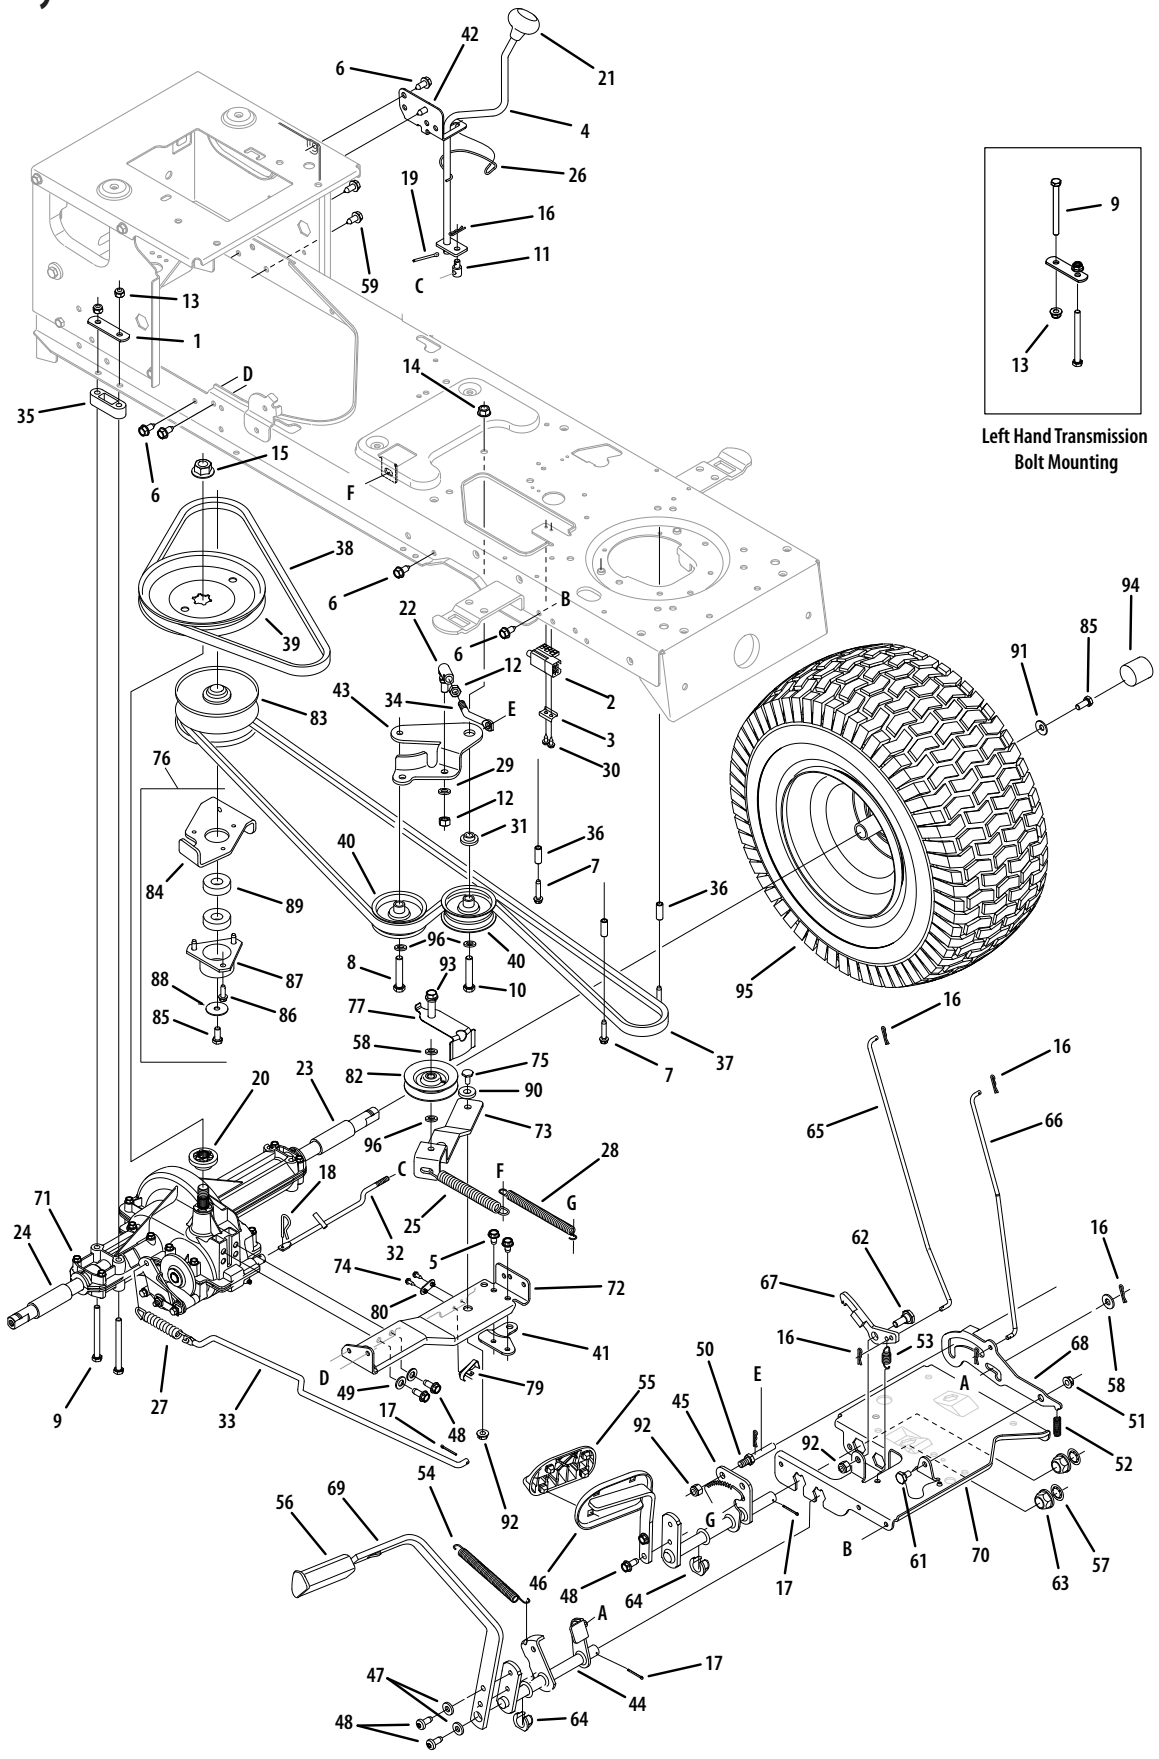

Left Hand Transmission Bolt Mounting


Ref.	Part Number	Description	Ref.	Part Number	Description
1	17840-0637	Mounting Bracket, Trans-axle	41	783-04283A	Bracket, Shift
2	925-04039	Switch, Interlock	42	783-04360	Bracket, Shift, F-N-R
3	17962	Plate, Switch	43	783-04442-0637	Idler Bracket, Center Double
4	647-04020	Lever Assembly, Shift	44	647-04100-0637	Control Assembly, Brake
5	710-0607	Screw, 5/16-18, 0.500	45	647-0032A-0637	Control Assembly, Speed
6	710-04484	Screw, 5/16-12, 0.750	46	683-0266	Pedal Assembly
7	710-0809	Screw, 1/4-20, 1.250	47	936-0119	Lock Washer, 5/16
8	710-1007	Screw, Sems, 3/8-16, 1.500	48	710-1260A	Screw, 5/16-18, 0.750
9	710-1266	Screw, 5/16-18, 3.50, Gr5	49	936-0264	Washer, Flat, .330 x .630 x .0635
10	710-3144	Screw, 3/8-16, 2.00, Gr5	50	711-04159B	Pin, 3/8-16 x 2.68
11	711-0736	Adjustment Ferrule 1/4-20 x 1.	51	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
12	712-0241	Nut, Hex, 3/8-24, Gr5	52	732-0335	Spring, Compression, .405 x 1.17
13	712-04063	Nut, Flange Lock, 5/16-18, GrF	53	732-0955	Spring, Extension, .50 OD x 1.41
14	912-0431	Nut, Flange Lock, 3/8-16, GrF	54	732-0963	Spring, Extension, .50 OD x 6.37
15	712-0700	Nut, Flange, 9/16-18, Gr2	55	735-0662	Pad
16	914-0104	Pin, Cotter, .072 Dia. x 1.13	56	735-3049A	Pad, Brake
17	914-0111	Pin, Cotter, 3/32, 1.0	57	736-0187	Washer, Flat, .64 x 1.24 x .06, Ht
18	914-0209	Cotter .Pin, Internal, .125 Dia.	58	736-0262	Washer, Flat, .385 x .870 x .092
19	914-0470	Pin, Cotter, 1/8 x 1.25	59	710-04598	Hex Screw
20	718-04407	Pulley Hub, 5/8 Spline	60	936-3008	Washer, Flat, .344 x .750 x .120
21	720-04028	Knob, Shift	61	938-0155	Screw, Shoulder, .437 Dia x .162
22	923-3018	Ball Joint	62	938-0380	Screw, Shoulder, .50 x .27 Lg,
23	731-04602	Sleeve, .758 x .821 x 3.3125	63	941-0225	Bearing, Hex Flange
24	731-04604	Sleeve, .758 x .821 x 2.4375	64	741-3065B	Split Bearing, Hex Flange
25	932-04370A	Spring, Extension, .62 Dia x 6.12	65	747-04093A	Rod, Brake Lock
26	732-0525	Spring Clip, Shifter	66	747-04096	Rod, Cruise Control
27	732-0716D	Spring, Extension, .59 OD x 4.00	67	748-04039C	Latch, Cruise Control
28	732-0963	Spring, Extension, .50 Dia x 6.37	68	783-0732A	Bracket, Lockout
29	936-0169	Washer, Lock, 3/8	69	747-04641A-0637	Pedal, Brake
30	910-0224	Screw, #10-16, .50	70	783-04612-0637	Bracket, Steering Support
31	738-0372B	Spacer, Shoulder, 1.00 x .38 x .38	71	918-04566	Transmission, Single Speed
32	747-04146C	Rod, Shift	72	683-04287	Bracket Assembly, Torque
33	747-04164	Rod, Brake	73	783-05904-0637	Bracket, Idler
34	747-1127	Idler Rod, Adjustable, 3/8	74	710-0227	Screw, #8-18 x .50
35	948-0334	Spacer, .68	75	710-3005	Hex Screw, 3/8-16 x 1.25
36	750-0566A	Spacer, .260 x .372 x 1.030	76	918-04423A	Variable Speed Pulley Assembly
37	954-0467	Belt, V-Type	77	732-1013A	Belt Guard
38	954-0468	Belt, V-Type	79	725-1644	Switch Spring, Short
39	956-04002	Pulley, V-Type, 7.25 Dia.	80	926-0320	Plate, Insulator
40	756-04224	Idler Pulley, Flat 2.75 OD	82	756-04324	Idler Pulley, V-Type, 5L x 3.06

## Drive System


Ref.	Part Number	Description
83	956-04015	Variable Speed Pulley
84	683-04296	Bracket, Pulley
85	710-0627	Screw, 5/16-24,.750
86	710-0778	Screw, 1/4-20, 1.500
87	718-04261	Cup, Bearing
88	736-0362	Washer, Flat
89	941-0124	Ball Bearing
90	738-04162A	Shoulder Spacer, .8840 x .190
91	736-0242	Washer, Bell,.340 x.872 x.060
92	712-04065	Nut, Flange Lock, 3/8-16, GrF
93	710-04467	Screw, Sems, 3/8-16, 2.500
94	731-2290A	Hub Cap
95	634-0104-0911	Wheel Assy Comp, 20 x 8 x 8 TB
	634-0104-0941	Wheel Assy Comp, 20 x 8 x 8 Brute
	734-1730-0901	Tire Only 20 x 8 x 8
	634-04369-0662	Rim Only TB
	634-04369-0674	Rim Only Brute
	934-0255	Valve Stem
96	736-3010	Flat Washer, .407 x .812 x .135

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.



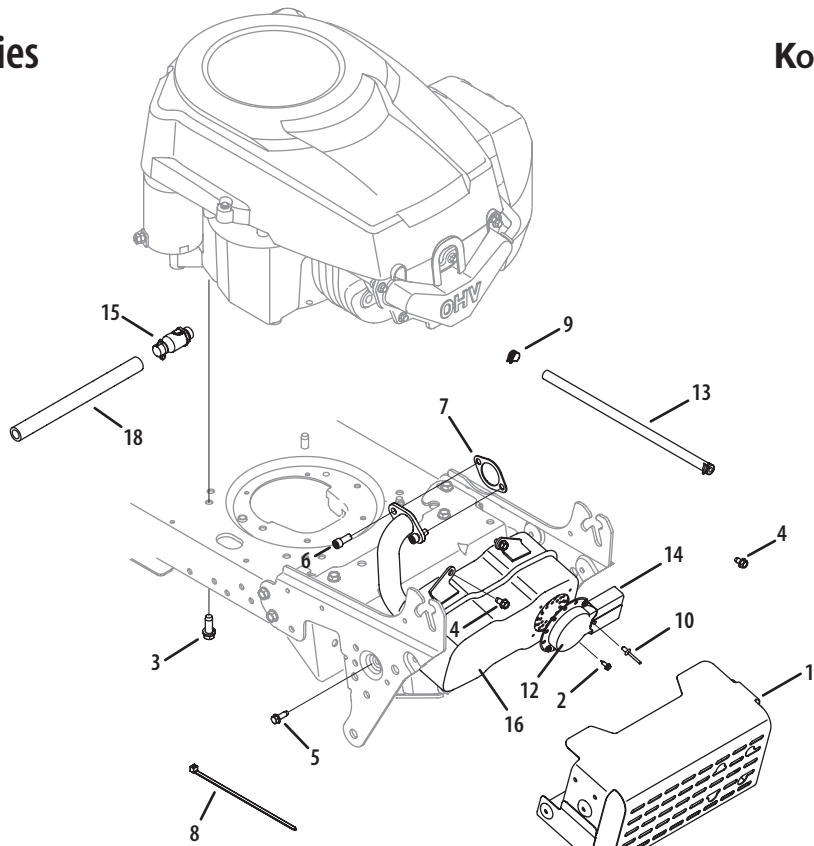

Used to secure slack of headlight harness to hood hinge

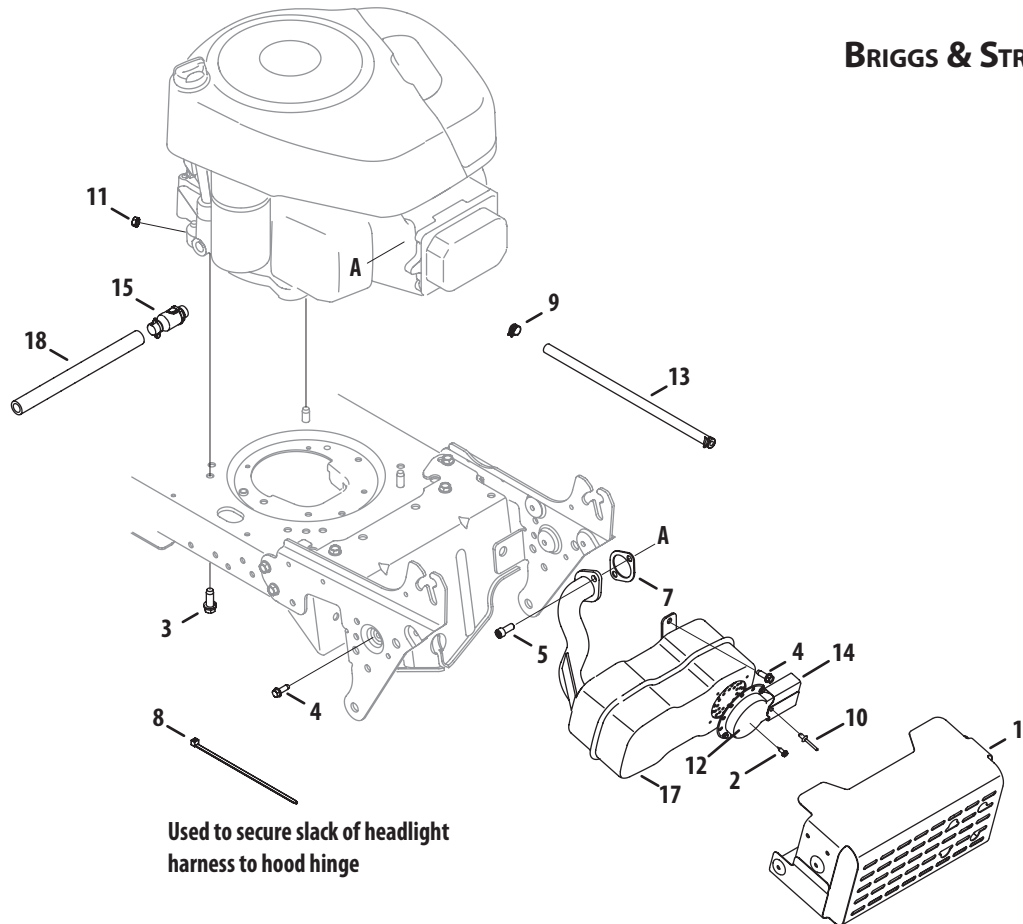

Used to secure slack of headlight harness to hood hinge


Ref.	Part Number	Description
1	683-04549-0637	Shield, Muffler
2	710-0227	Screw, #8-18, 0.500
3	710-04683	Screw, Hex, 3/8-16 x 1.00
4	710-0599	Screw, Hex, 1/4-20, 0.500
5	710-0642	Screw, Hex, 1/4-20, 0.750
6	710-1314A	Screw, 5/16-18, 0.75
7	BS-692236	Exhaust Gasket
8	725-0157	Cable, Tie, 3/16 x .05 x 7.4
9	726-0205	Hose Clamp
10	728-04000	Rivet, Pop, .188 x .325
11	712-0271	Sems Nut, 1/4-20
12	751-0564B	Deflector, Muffler
13	751-10349	Fuel Line, Low Permeation
14	751-10353	Extension, Deflector
15	951-10517A	Drain, Oil
16	751-11022	Muffler, Single Inlet
17	751-10448A	Muffler, Single Inlet
18	751-3141-14	Extension Hose, Oil Drain

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.



# Frame & Manual PTO

42" & 46" Decks

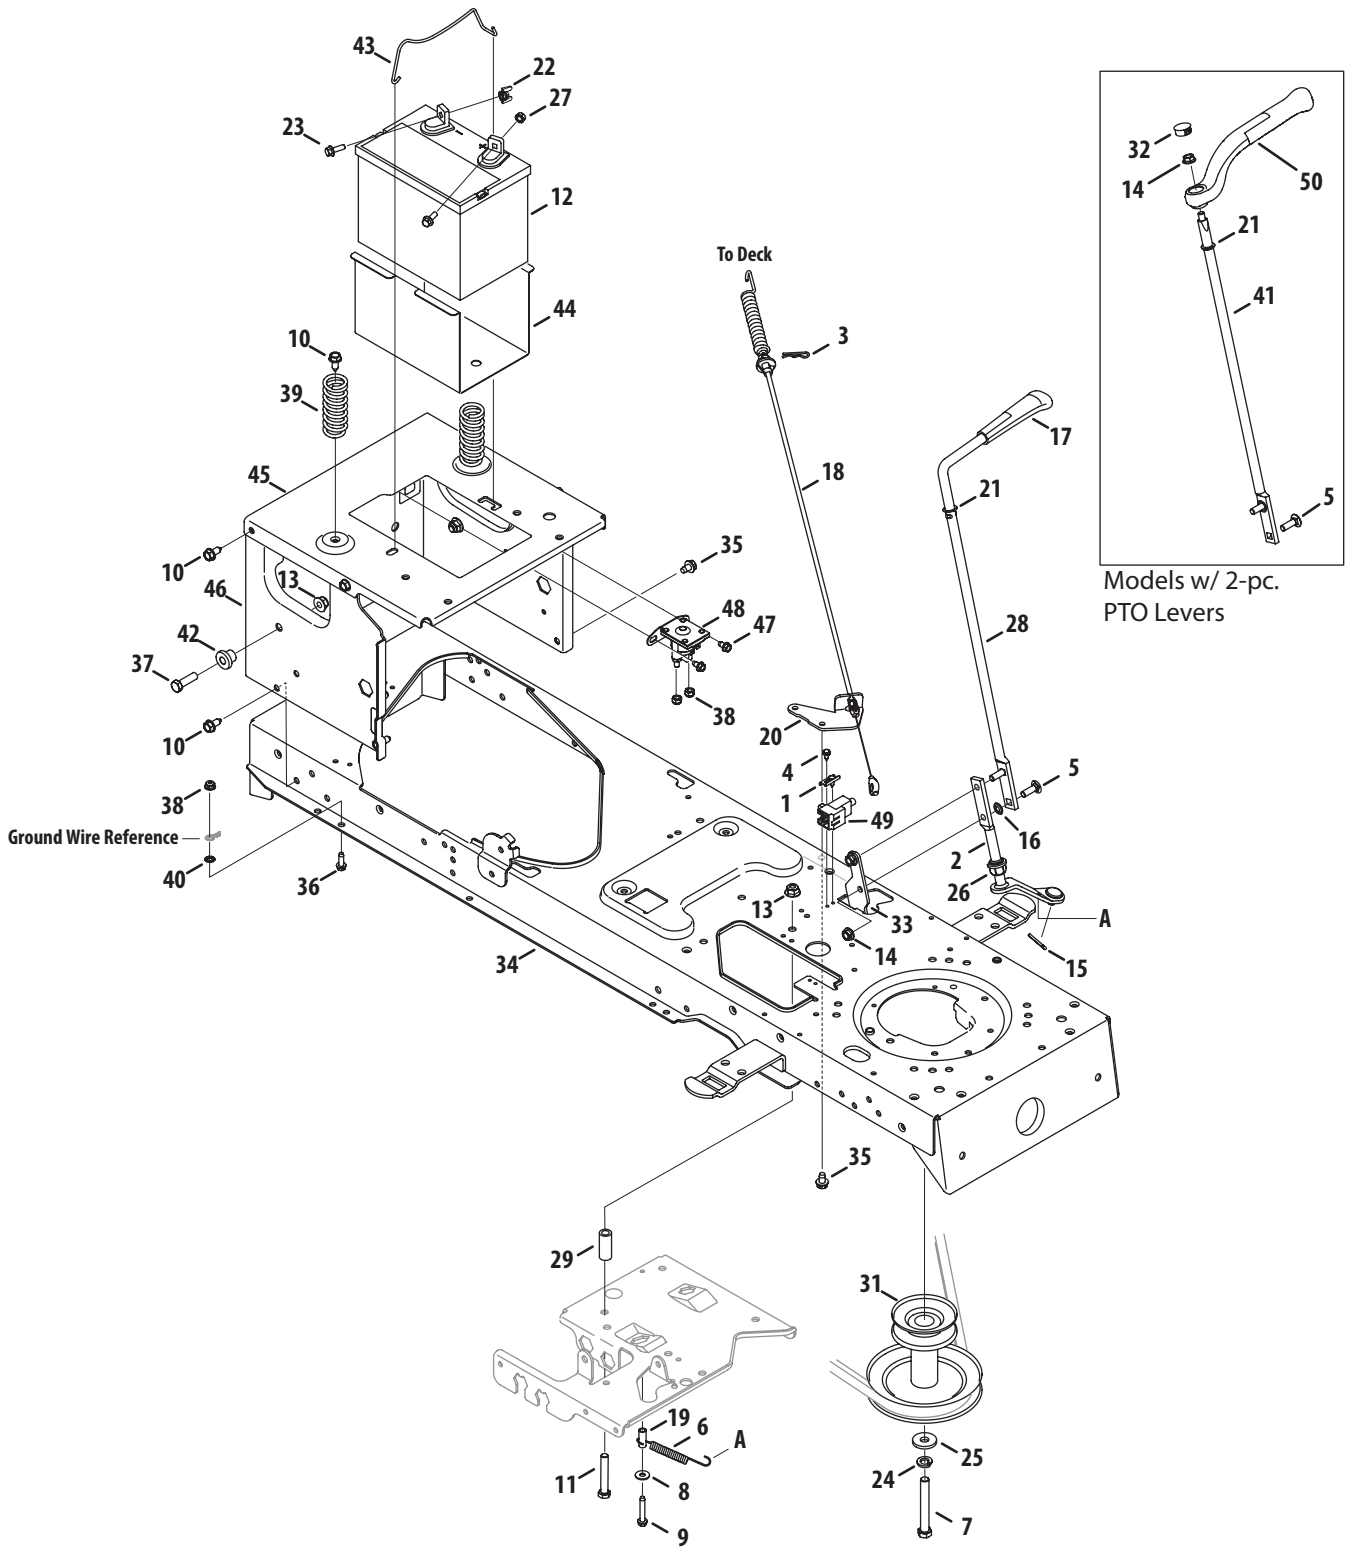


## Frame & Manual PTO 42" & 46" Decks

Ref.	Part Number	Description	Ref.	Part Number	Description
1	17962	Plate, Switch	26	741-0708	Bearing, Flange, Hex Split .500 ID
2	947-04036A	Lever Assembly, Engagement	27	712-0271	Nut, Sems, 1/4-20
3	914-0145	Click Pin	28	747-04470	Engagement Handle, Deck
4	910-0224	Screw, #10-16, 0.500	29	748-0415B	Spacer, .385 ID x .635 OD x 1.54
5	710-0276	Screw, Carriage, 5/16-18, 1.00	30	710-1260A	Screw, 5/16-18 x .750
6	732-04248	Extension Spring, .38 OD x 3.9 Lg	31	756-04196A	Pulley, Engine, 42" Deck
7	710-04608	Screw, 7/16-20, 3.25 42" Deck		756-04207A	Pulley, Engine, 46" Deck
	710-04607	Screw, 7/16-20, 2.75 46" Deck	32	720-0425	Cap Plug
8	736-0173	Washer, Flat, .28 x .74 x .063	33	783-0744A-0637	Stop Bracket, Engagement
9	710-0778	Screw, 1/4-20 x 1.50	34	683-04173B-0637	Frame Assembly, Lower
10	710-04484	Screw, 5/16-18 x 0.625	35	710-0607	Screw, 5/16-18, 0.500
11	710-3011	Screw, 3/8-16 x 2.25	36	710-0642	Screw, 1/4-20, 0.750
12	925-1707D	Battery	37	710-3005	Screw, 3/8-16, 1.25, Gr5
13	712-04065	Nut, Flange Lock, 3/8-16, GrF	38	712-04064	Nut, Flange Lock, 1/4-20, GrF
14	712-3004A	Nut, Flange Lock, 5/16-18, Gr5	39	732-04561	Spring, Compr., 1.71 x 3.735 x .238
15	914-0115	Pin, Cotter, 1/8 x 1.00	40	936-0222	Washer, Lock, 1/4, External
16	726-0201	Nut, Speed, .3125 ID	41	747-04855	Deck Engage Handle
17	731-2111B	Knob, PTO	42	738-04058	Spacer, Shoulder, .38 x 1.0 x .70
18	746-04353A	Deck Engagement Cable	43	747-04121A	Hold Rod, Battery
19	750-0566A	Spacer, .260 x .372 x 1.030 Lg.	44	783-0349-0637	Battery Tray
20	783-05358-0637	Cable Bracket	45	783-06089-0637	Seat Bracket, Frame
21	936-0108	Washer, Flat, .510 x .750 x .033	46	783-04809C-0637	Frame, Upper
22	712-3087	Nut, Wing, 1/4-20	47	710-0599	Screw, 1/4-20, 0.50
23	738-1132	Screw, Shoulder, .250 x .150	48	725-04439	Solenoid, 12V, 100 Amp
24	936-0171	Washer, Lock, 7/16	49	925-04039	Switch, Interlock
25	736-0322	Washer, Flat, .450 x 1.250 x .164	50	647-04147	PTO Lever

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Transmission

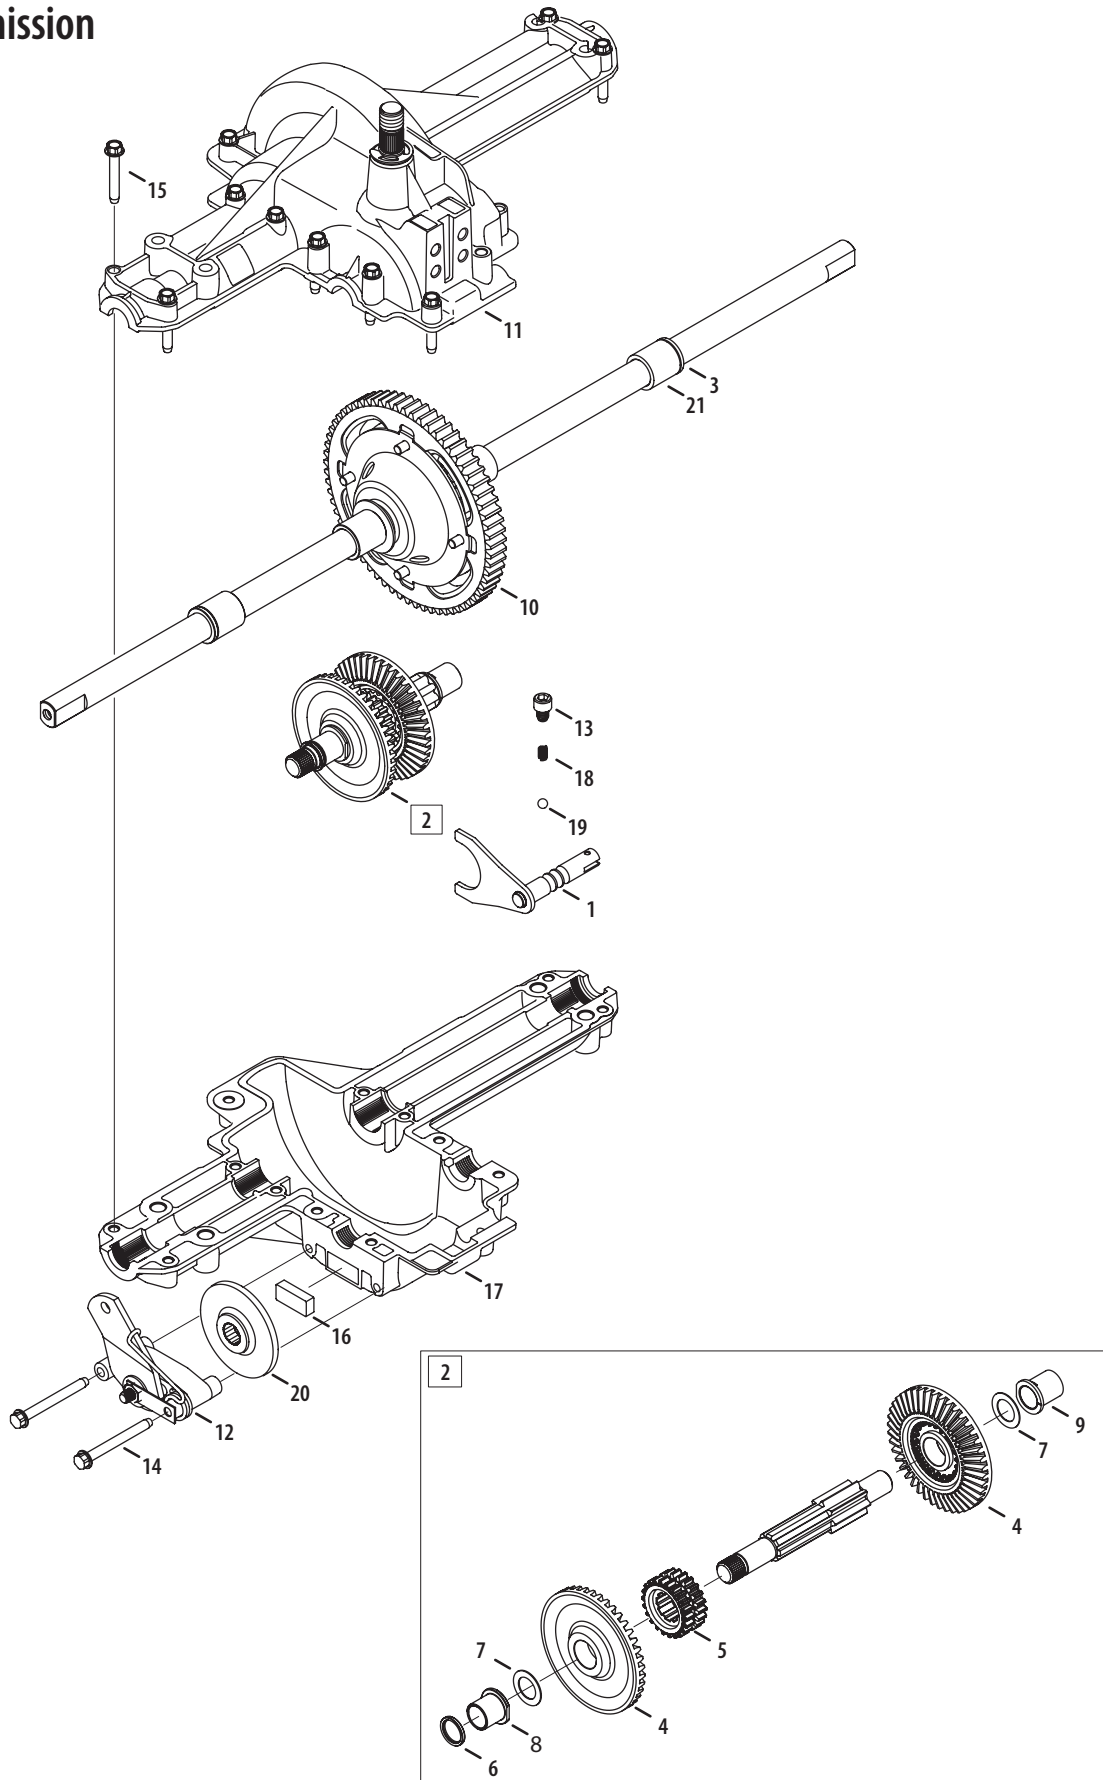




Ref.	Part Number	Description
1	911-0011	Detent Shaft Assembly
2	911-04091	Drive Shaft Assy. (includes ref. 4 - 9)
3	921-0338	Seal,.75 x 1.0 x.125
4	917-04479B	Bevel Gear, 42 tooth spline
5	718-04381P	Single Speed Clutch Collar
6	721-0213	Seal, .625 x .812 x .094
7 *	936-0336	Flat Washer 5/8 x 1 x .030
	936-0337	Flat Washer .634 x 1 x .04
	936-0349	Flat Washer .63 x 1 x .02
	736-0494	Flat Washer .632 x 1 x .035
	936-0495	Thrust Washer 1.00 x .632 x .0
8	941-0337	Flange Bearing, 5/8 x 3/4 x 15/16
9	941-04347	Flange Bearing, .625 x .75 x .75
10	918-04567A	Differential Assembly
11	919-04187	Upper Housing
12	961-0001	Brake Assembly
13	710-04731	Self-tapping Screw, 5/16-18 x .375
14	710-1206	Self-tapping Screw, 1/4-20 x 2.375
15	710-1325	Self-tapping Screw, 1/4-20 x 1.625
16	917-0678	Brake Puck
17	919-04329	Lower Housing
18	932-0863	Compression Spring
19	741-0862	Detent Ball
20	761-0202	Brake Disc
21	941-0340	Sleeve Bearing,.75 x.1.0 x 1.0
—	737-0300A	Grease (19 oz.)

\* Use applicable flat washers (ref. # 7) in this application allowing .006/.014 in. end-play.

**NOTE:** If rebuilding the upper housing, include two ounces (2 oz.) of Unirex® N3 grease (Part No. 737-0289) in the input shaft cavity.

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# 42-inch Mowing Deck

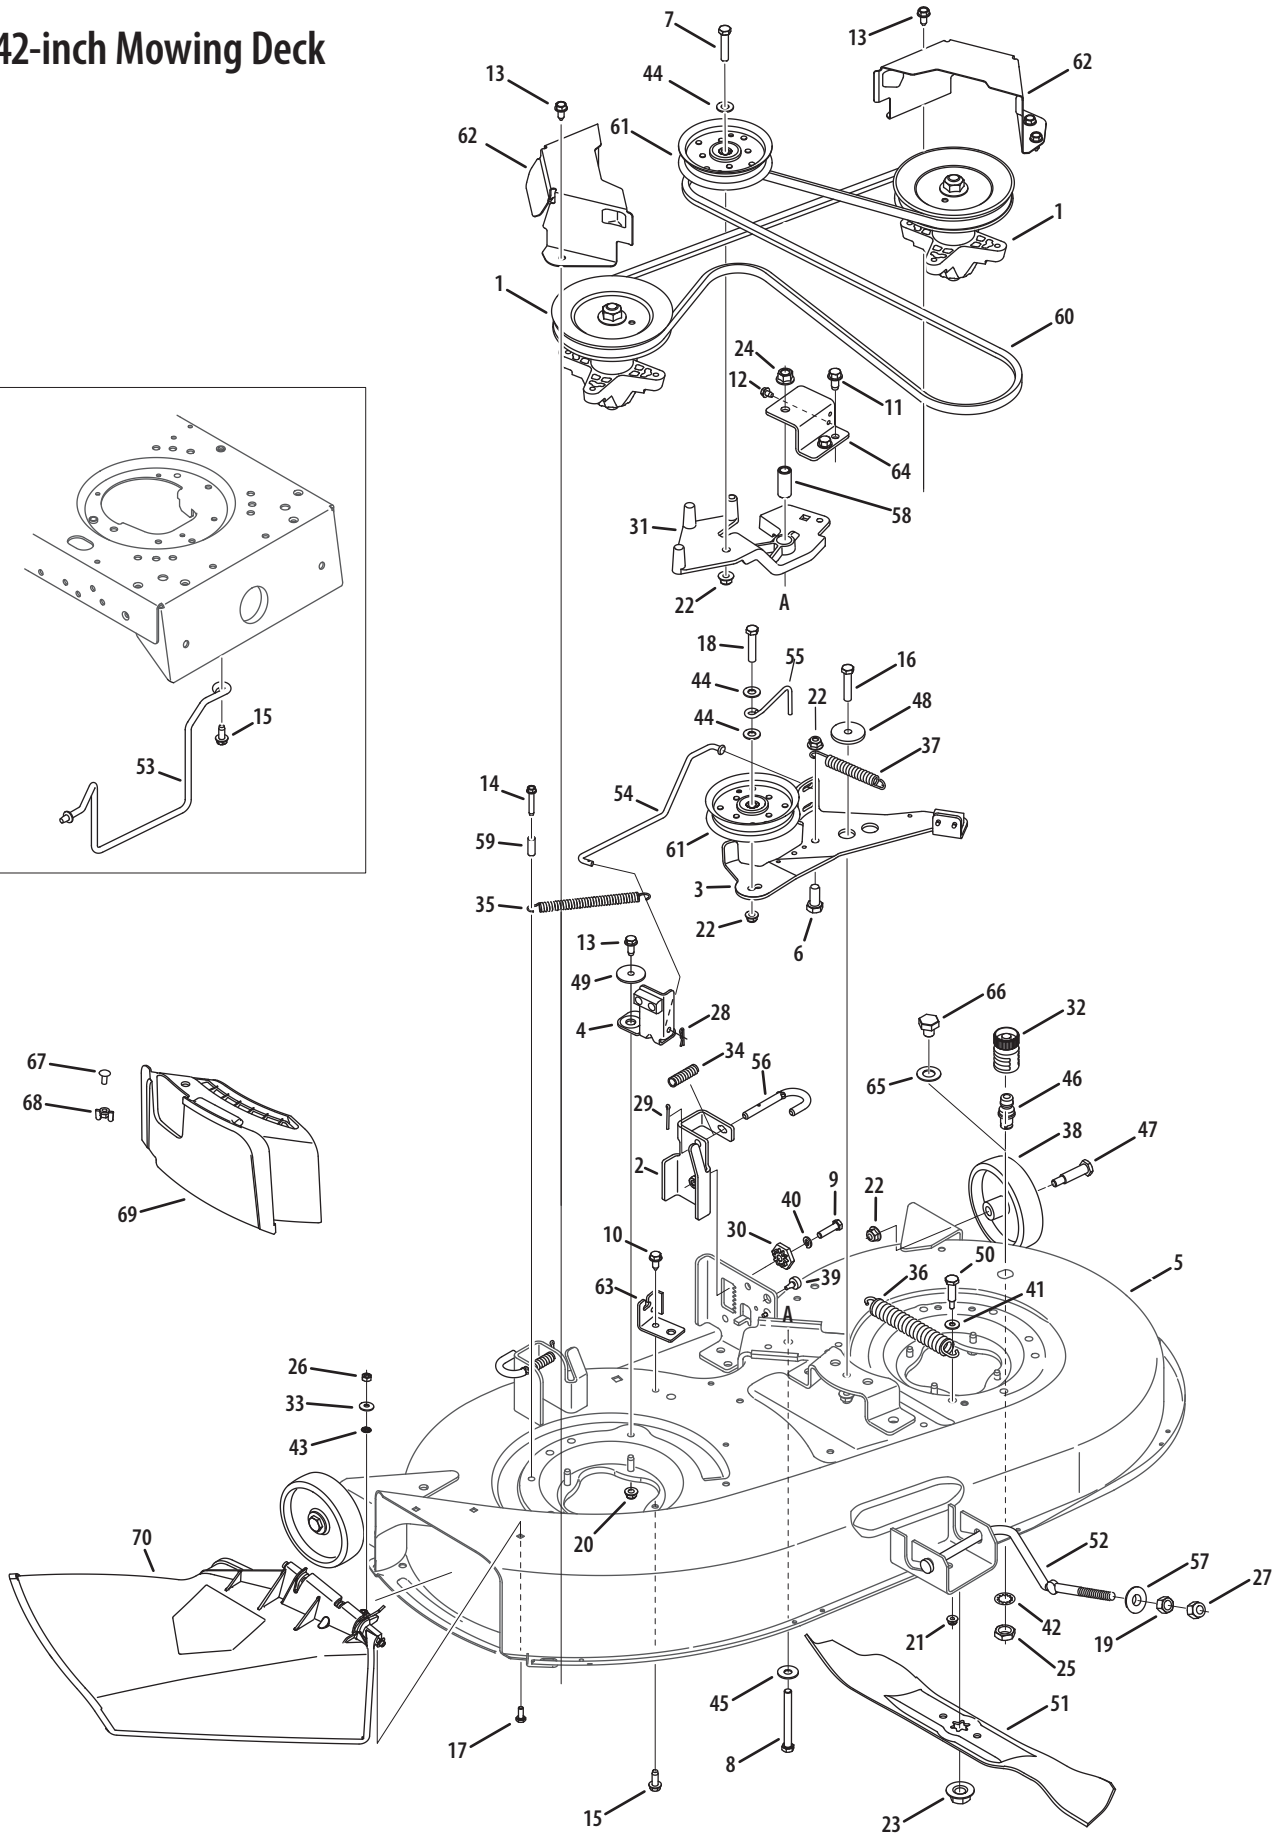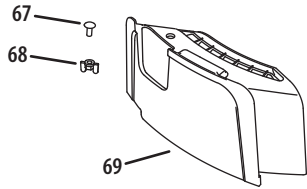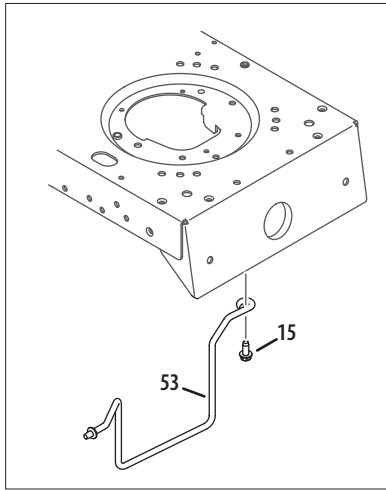

## 42-inch Mowing Deck


Ref.	Part Number	Description	Ref.	Part Number	Description
1	918-04456	Spindle Assembly Pulley 6.3 Dia	36	732-0459C	Extension Spring, .94 x 6.74
2	683-0254B-0637	Deck Hanger Bracket Assy. LH	37	932-0470A	Extension Spring, .53 x 4.75
3	683-04138B-0637	Brake Assembly, 42" Deck	38	734-0973	Deck Wheel, 5.0 x 1.38
4	683-04167	Brake Assembly, 42" Deck	39	735-0271A	Bumper, .62 Dia. x .3
5	983-04261-0637	Deck Assembly 42" W/Whl Brkt.	40	936-0119	Lock Washer, 5/16
6	710-0216	Screw, 3/8-16 x .75 GR5 STD	41	736-0173	Flat Washer, .28 x .74 x .063
7	710-0347	Screw, 3/8-16 x 1.75 GR5 STD	42	736-0225	Lock Washer, 5/8
8	710-0510	Screw, 7/16-20 x 3.00 GR5 STD	43	736-0270	Bell Washer, .265 x .75 x .062
9	710-0528	Screw, 5/16-18 x 1.25 GR5 STD	44	936-0300	Flat Washer, .406 x .875 x .059
10	710-04484	Screw, 5/16-18 x 0.75	45	736-0322	Flat Washer, .450 x 1.250 x .164
11	710-0623	Screw, 3/8-16 x 0.750	46	737-04003D	Deck Water Nozzle
12	710-0653	Screw, 1/4-20 x 0.375	47	938-0373	Shoulder Bolt, .496 x 1.525
13	710-3008	Screw, 5/16-18 x 0.750	48	738-04162A	Shoulder Spacer, .8840 x .190
14	710-0778	Screw, 1/4-20 x 1.500	49	738-04166	Shoulder Spacer, .5000 X .1475
15	710-1260A	Screw, 5/16-18 x 0.750	50	738-04272	Shoulder Screw, .374 x 1.16
16	710-3005	Screw, 3/8-16 x 1.25	51	942-0616A	3 in 1 Star Blade 21.23" LG
17	710-3015	Screw, 1/4-20 x .75	52	747-04269A	Adjustable Front Deck Rod,
18	710-3144	Screw, 3/8-16 x 2.00	53	747-04857	Belt-Keeper Rod, 42"
19	912-0206	Hex Nut, 1/2-13	54	747-04501	Brake Control Ride, 42"
20	712-04063	Flange Lock Nut, 5/16-18	55	747-04530	Belt Keeper Rod, 42" IDLER
21	712-04064	Flange Lock Nut, 1/4-20	56	747-1116	Deck Release Handle Rod
22	712-04065	Flange Lock Nut, 3/8-16	57	748-04069	Deck Lift Pivot Cup
23	712-0417A	Flange Nut, 5/8-18	58	750-04637B	Spacer, .455 X .697 X 1.585
24	712-0459	Flange Lock Nut, 7/16-20	59	750-0566A	Spacer, .260 x .372 x 1.030
25	912-0641	Hex Nut, M16-1.5 DIN 936	60	954-04045	V-Belt
26	712-3006	Hex Nut, 1/4-20	61	756-04129B	Idler Pulley, 4.25" DIA
27	712-3083	Hex Lock Nut, 1/2-13	62	783-04327B-0637	Belt Covers, 6.00 DIA
28	914-0104	Cotter Pin, .072 Dia. x 1.13 Lg.	63	783-04740-0637	Cable Deck Engage Bracket
29	914-0470	Cotter Pin, 1/8 x 1.25	64	783-05490-0637	Support Bracket
30	917-04074	Deck Gear Adjustment	65	736-0187	Flat Washer, .64 x 1.24 x .06
31	719-04233-0637	Idler Bracket, Cast 42" DECK	66	738-04146	Bolt Plug, M16 x 1.5
32	921-04041	Water Nozzle Adapter	67	710-0134	Carriage Screw, 1/4-20 x .62
33	726-0233	Push Nut, .25 ID x .50 OD	68	712-3087	Wing Nut, 1/4-20
34	932-0306A	Compression Spring .531 x 1.75	69	731-2363	Mulch Plug
35	732-04287	Extension Spring, .500 x 6.375	70	931-1032B	Discharge Chute Assembly

**IMPORTANT:** For a proper working machine, use only Factory Approved Parts.

**IMPORTANT:** V-belts are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# 46-inch Mowing Deck

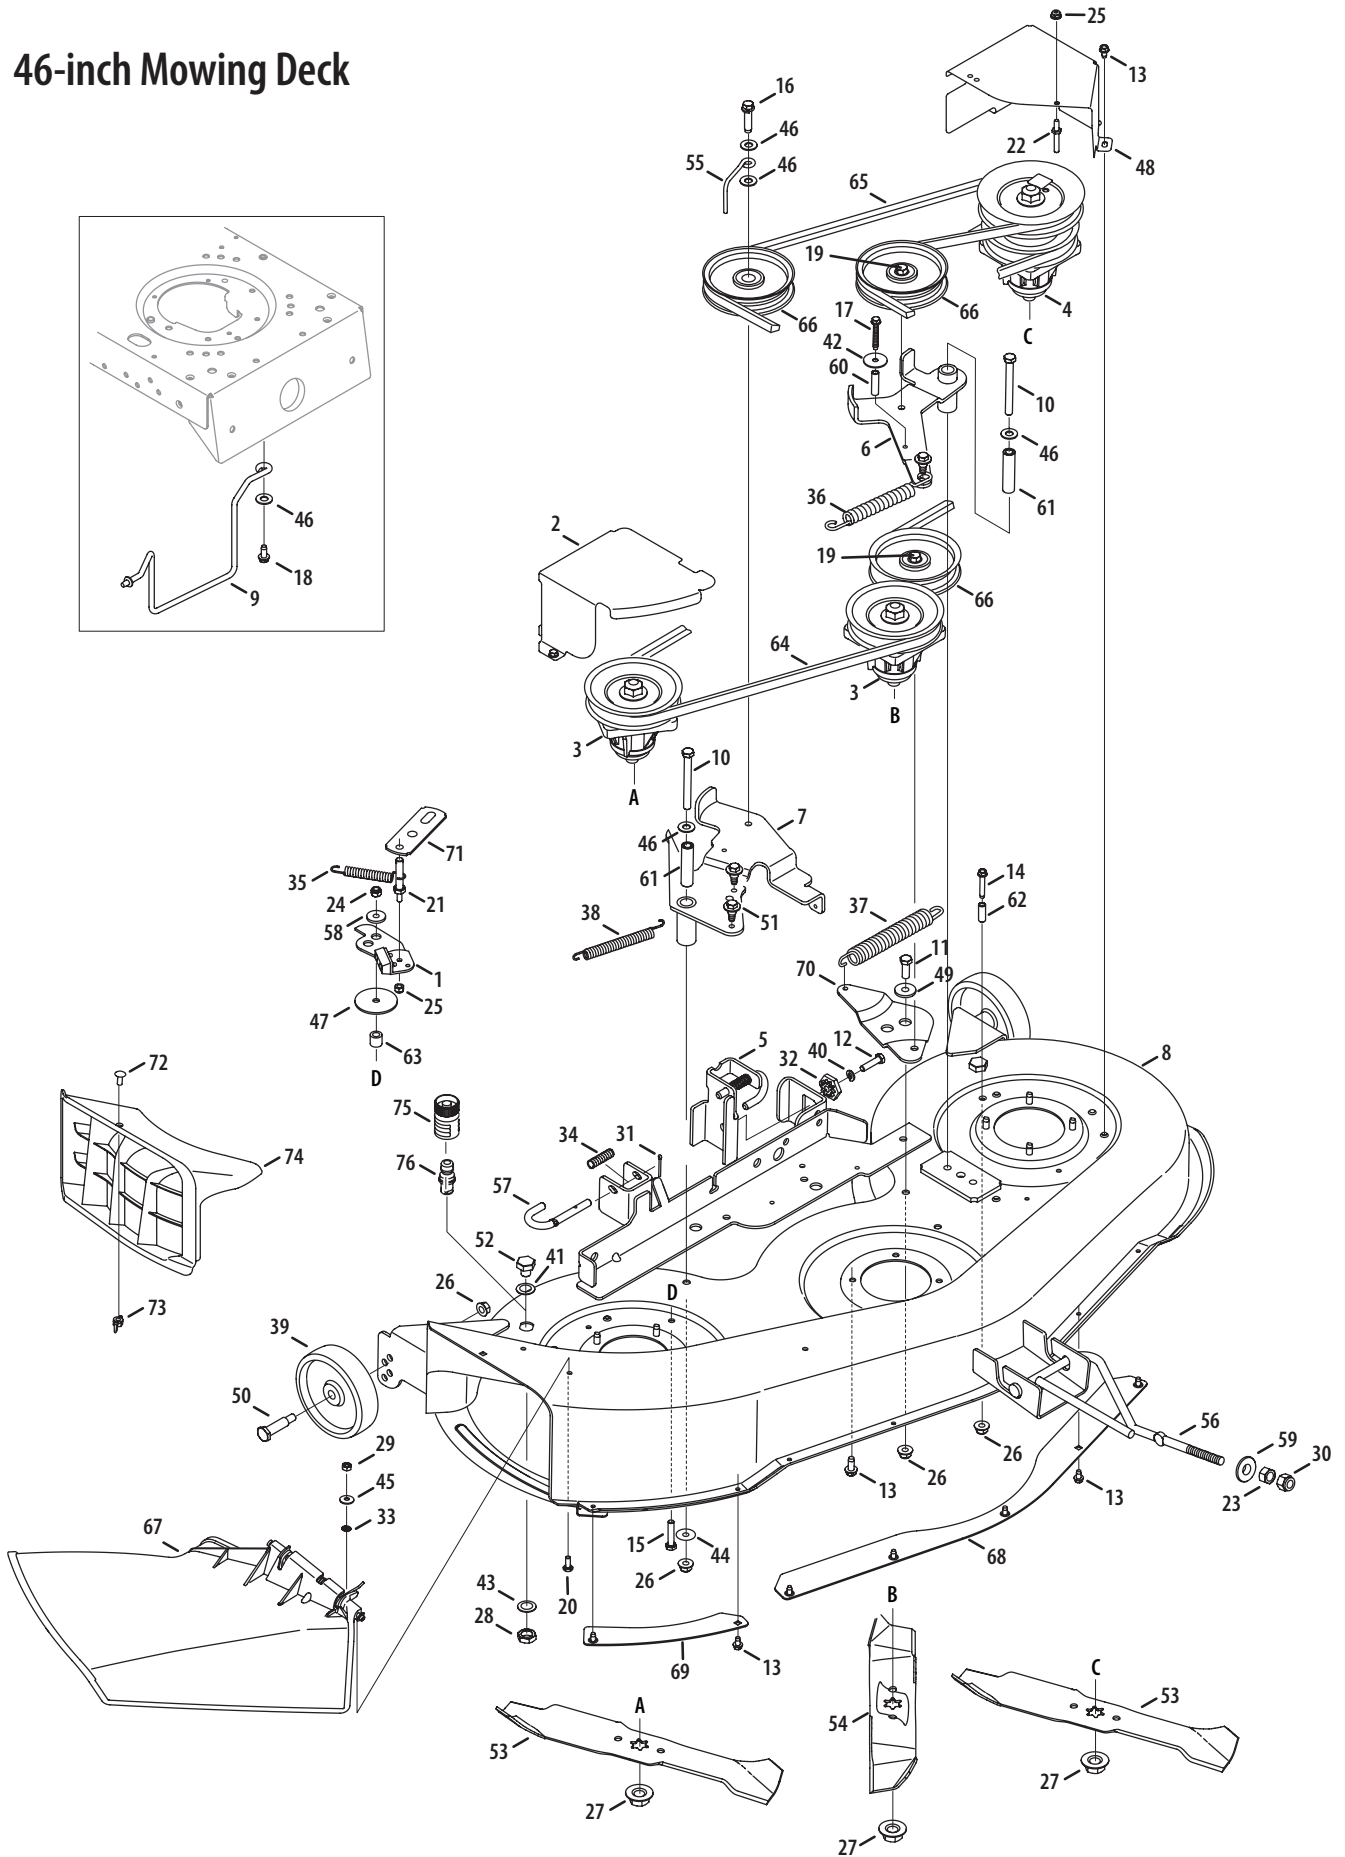

## 46-inch Mowing Deck

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	97116	Deck Brake Assembly	39	734-0973	Deck Wheel 5.0 x 1.38
2	17258E-0637	Deck Belt Cover RH	40	936-0119	Lock Washer, 5/16
3	918-0430B	Spindle Assembly	41	736-0187	Flat Washer, .64 x 1.24 x .06
4	918-04134C	Double Pulley Spindle Assy.	42	936-0211	Flat Washer, .285 x 1.25 x .06
5	683-0254B-0637	Deck Hanger Bracket Assy.	43	736-0225	Lock Washer, 5/8 Int. Tooth
6	683-04250A-0637	Idler Bracket Assembly LH	44	736-0258	Flat Washer, .385 x 1.0 x .135
7	683-04251A-0637	Idler Bracket Assembly RH	45	736-0270	Bell Washer, .265 x .75 x .062
8	683-04306-0637	Deck Assembly	46	936-0300	Flat Washer, .406 x .875 x .059
9	683-04414-0637	Belt Keeper Bracket	47	736-0418A	Flat Washer, .406 x .875 x .059
10	710-04754	Hex Screw, 3/8-16 x 3.50	48	783-1348D-0637	Deck Belt Cover LH
11	710-0514	Hex Screw, 3/8-16 x 1.00	49	938-0347	Shoulder Spacer, .625 ID x .169
12	710-0528	Hex Screw, 5/16-18 x 1.25	50	938-0373	Shoulder Bolt .496 x 1.525: 3/8-16
13	710-0599	Screw, 1/4-20 x .50	51	738-04091A	Shoulder Screw .43 x .29:5/16-18
14	710-0778	Screw, 1/4-20 x 1.50	52	738-04146	Bolt Plug, M16 x 1.5
15	710-0805	Hex Screw, 5/16-18 x 1.50	53	942-0611A	Blade, 3 in 1 star, 16.28" Lg.
16	710-1007	Sems Screw, 3/8-16 x 1.50	54	942-0612A	Blade, 3 in 1 star, 14.88" Lg.
17	710-1026	Screw, 1/4-20 x 1.75	55	747-04530	Belt Keeper Rod
18	710-04484	Screw, 5/16-18, .750	56	747-04645	Front Deck Adjustment Rod
19	710-1315	Screw, 3/8-16, x 1.25	57	747-1116	Deck Release Handle Rod
20	710-3015	Screw, 1/4-20 x .75	58	748-0234	Shoulder Spacer
21	711-04636	Pin, 1/4-20: 3/8 x 2.685	59	748-04069	Deck Lift Pivot Cup
22	911-0993	Belt Guard Pin, 1/4 x 1.43 lg.	60	750-04456	Spacer, .260 x .372 x 1.420 Lg.
23	912-0206	Hex Nut, 1/2-13	61	750-04999	Spacer, .380 x .625 x 2.515 Lg.
24	712-04063	Flange Lock Nut, 5/16-18	62	750-0566A	Spacer, .260 x .372 x 1.030 Lg.
25	712-04064	Flange Lock Nut, 1/4-20	63	750-1320	Spacer, .375 x .63 x .595 Lg.
26	712-04065	Flange Lock Nut, 3/8-16	64	954-0349	V-Belt, 79.10 Lg.
27	712-0417A	Flange Nut, 5/8-18	65	954-04122	V-Belt, 90.24 Lg.
28	912-0641	Hex Nut, M16-1.5	66	756-04129B	Idler Pulley, 4.25" dia.
29	712-3006	Hex Nut, 1/4-20	67	931-1032B	Discharge Chute
30	712-3083	Hex Lock Nut, 1/2-13	68	783-0141-0637	Center Deck Skirt
31	914-0470	Cotter Pin, 1/8 x 1.25	69	783-0142-0637	RH Deck Skirt
32	917-04074	Deck Adjustment Gear	70	783-04641A-0637	Idler Bracket
33	726-0233	Push Nut, .25 ID x .50 OD	71	783-05321-0637	Brake Bracket
34	932-0306A	Compression Spring .531 x 1.75	72	710-0134	Carriage Screw, 1/4-20 x .62
35	932-0429A	Extension Spring, .50 x 3.97 Lg.	73	712-3087	Wing Nut, 1/4-20
36	732-04400	Extension Spring, .75 x 6.835 Lg.	74	731-05264	Mulch Plug, 46" Deck
37	932-0594A	Extension Spring, .91 x 7.33 Lg.	75	921-04041	Water Nozzle Adapter
38	732-0814	Extension Spring, .56 x 5.52 Lg.	76	737-04003D	Deck Water Nozzle

**IMPORTANT:** For a proper working machine, use only Factory Approved Parts.

**IMPORTANT:** V-belts are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.