


1 Style Hood

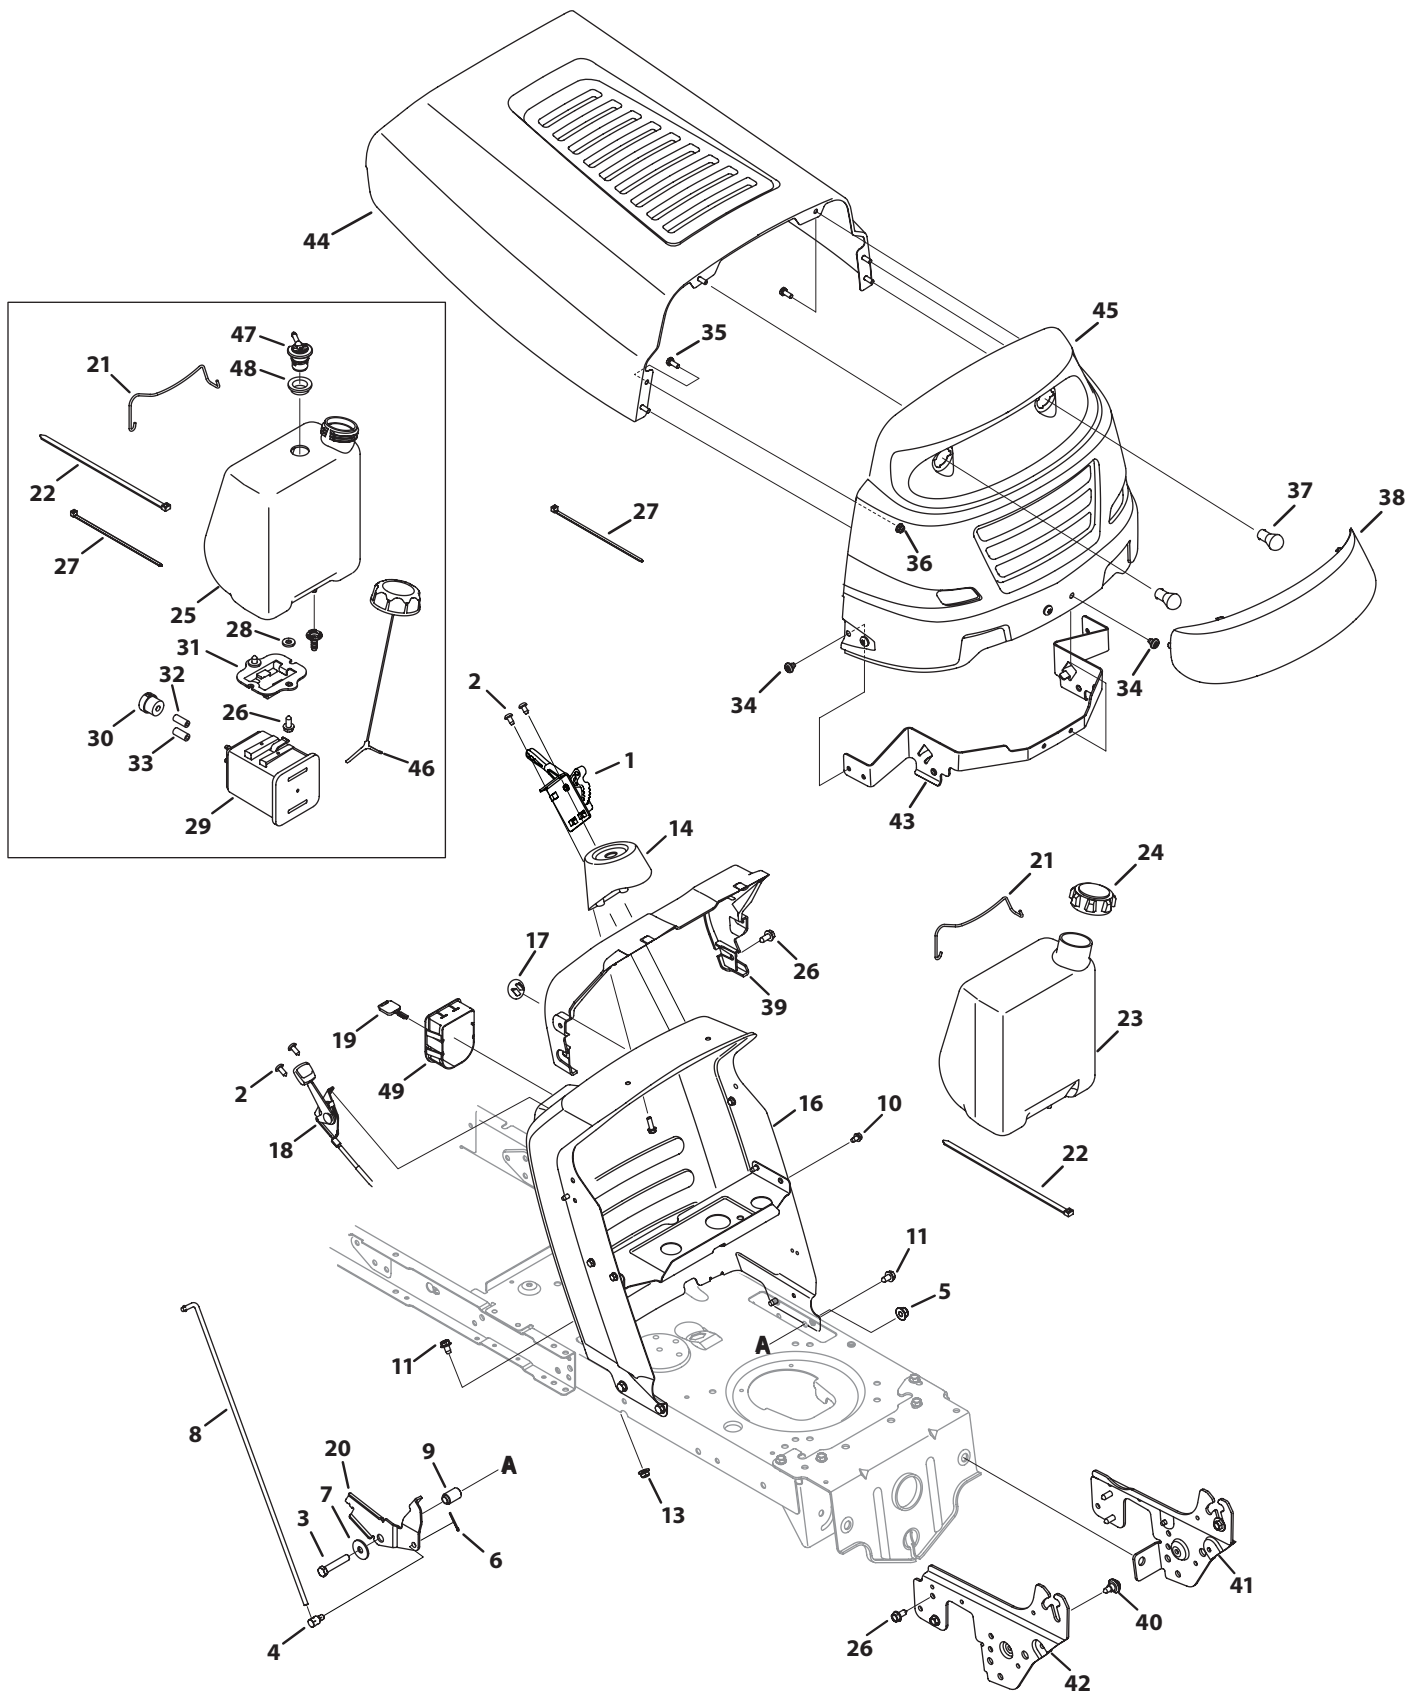


Ref. No.	Part No.	Description
1	983-04216	7-Speed Control Assembly
	983-04503	7-Speed Control Assembly
	983-04225	6-Speed Control Assembly
2	710-04483	Screw, 1/4-20 x .500
3	710-3144	Hex Screw, 3/8-16 x 2.0
4	711-0736	Ferrule, 1/4-20 x 1.00
5	710-04065	Flangelock Nut, 3/8-16
6	914-0111	Cotter Pin, 3/32 x 1.0
7	936-0133	Flat Washer, .411 x 1.25 x .100
8	747-04430	Speed Selector
9	750-04465	Flange Spacer, .390 x .671 x 1.095
10	710-0599	Hex Washer Screw, 1/4-20 x .500
11	710-0604A	Screw, 5/16-18 x .625
12	710-0895	Screw, 1/4-15 x .750
13	712-04063	Flangelock Nut, 5/16-18
14	731-04945	Steering Support
15	783-04584A-0637	Gas Tank Support Bracket
16	783-04873A-0637	Dash, No RMC - Powder Black
	783-04873A-0691	Dash, No RMC - Black Jack
	783-04873A-0665	Dash, No RMC - Green
17	731-05265	Choke Plug
18	746-04364	Throttle/Choke Cable
19	925-1745A	Key
20	783-04903	Speed Latch - No RMC
21	683-04448-0637	Battery Assembly Rod
22	726-0230	Cable Tie
23	751-0555B	1.5 Gallon Fuel Tank
24	751-0603A	Fuel Cap
25	751-10782	1.36 Gallon Fuel Tank
26	710-04484	Screw, 5/16-18 x .750

Ref. No.	Part No.	Description
27	725-0157	Cable Tie
28	936-3008	Flat Washer, .344 x .750 x .120
29	951-10589	5 Gallon Carbon Canister
30	951-10590	Vent Filter Canister
31	951-10610	Canister Adapter
32	751-10749-30	Fuel Hose, White
33	751-10750-28	Fuel Hose, Yellow
34	710-04593	Screw, 5/16-18 x .375
35	710-0751	Hex Screw, 1/4-20 x .620
36	712-04064	Flangelock Nut, 1/4-20
37	925-0963	Miniature Lamp 12V Socket
38	731-04949A	Lens Grill
39	731-05078C	Dash
40	738-04091A	Shoulder Screw, 5/16-18 x .43 x .29
41	783-05327B-0637	Left Support Pivot Bracket
42	783-05328A-0637	Right Support Pivot Bracket
43	783-05454-0637	Hood Pivot Bracket
44	783-05684-0638	Hood - Red
	783-05684-0674	Hood - Yellow
	783-05684-0662	Hood - Gray
	783-05684-0709	Hood - Green
45	783-05685-0638	Grill - Red
	783-05685-0674	Grill - Yellow
	783-05685-0662	Grill - Gray
	783-05685-0709	Grill - Green
46	951-10947	Fuel Cap, 2.25"
47	751-10441	Rollover Valve
48	735-04081	Rubber Grommet, 23 x 3.55
49	925-04659	Key Switch

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

2 Style Hood

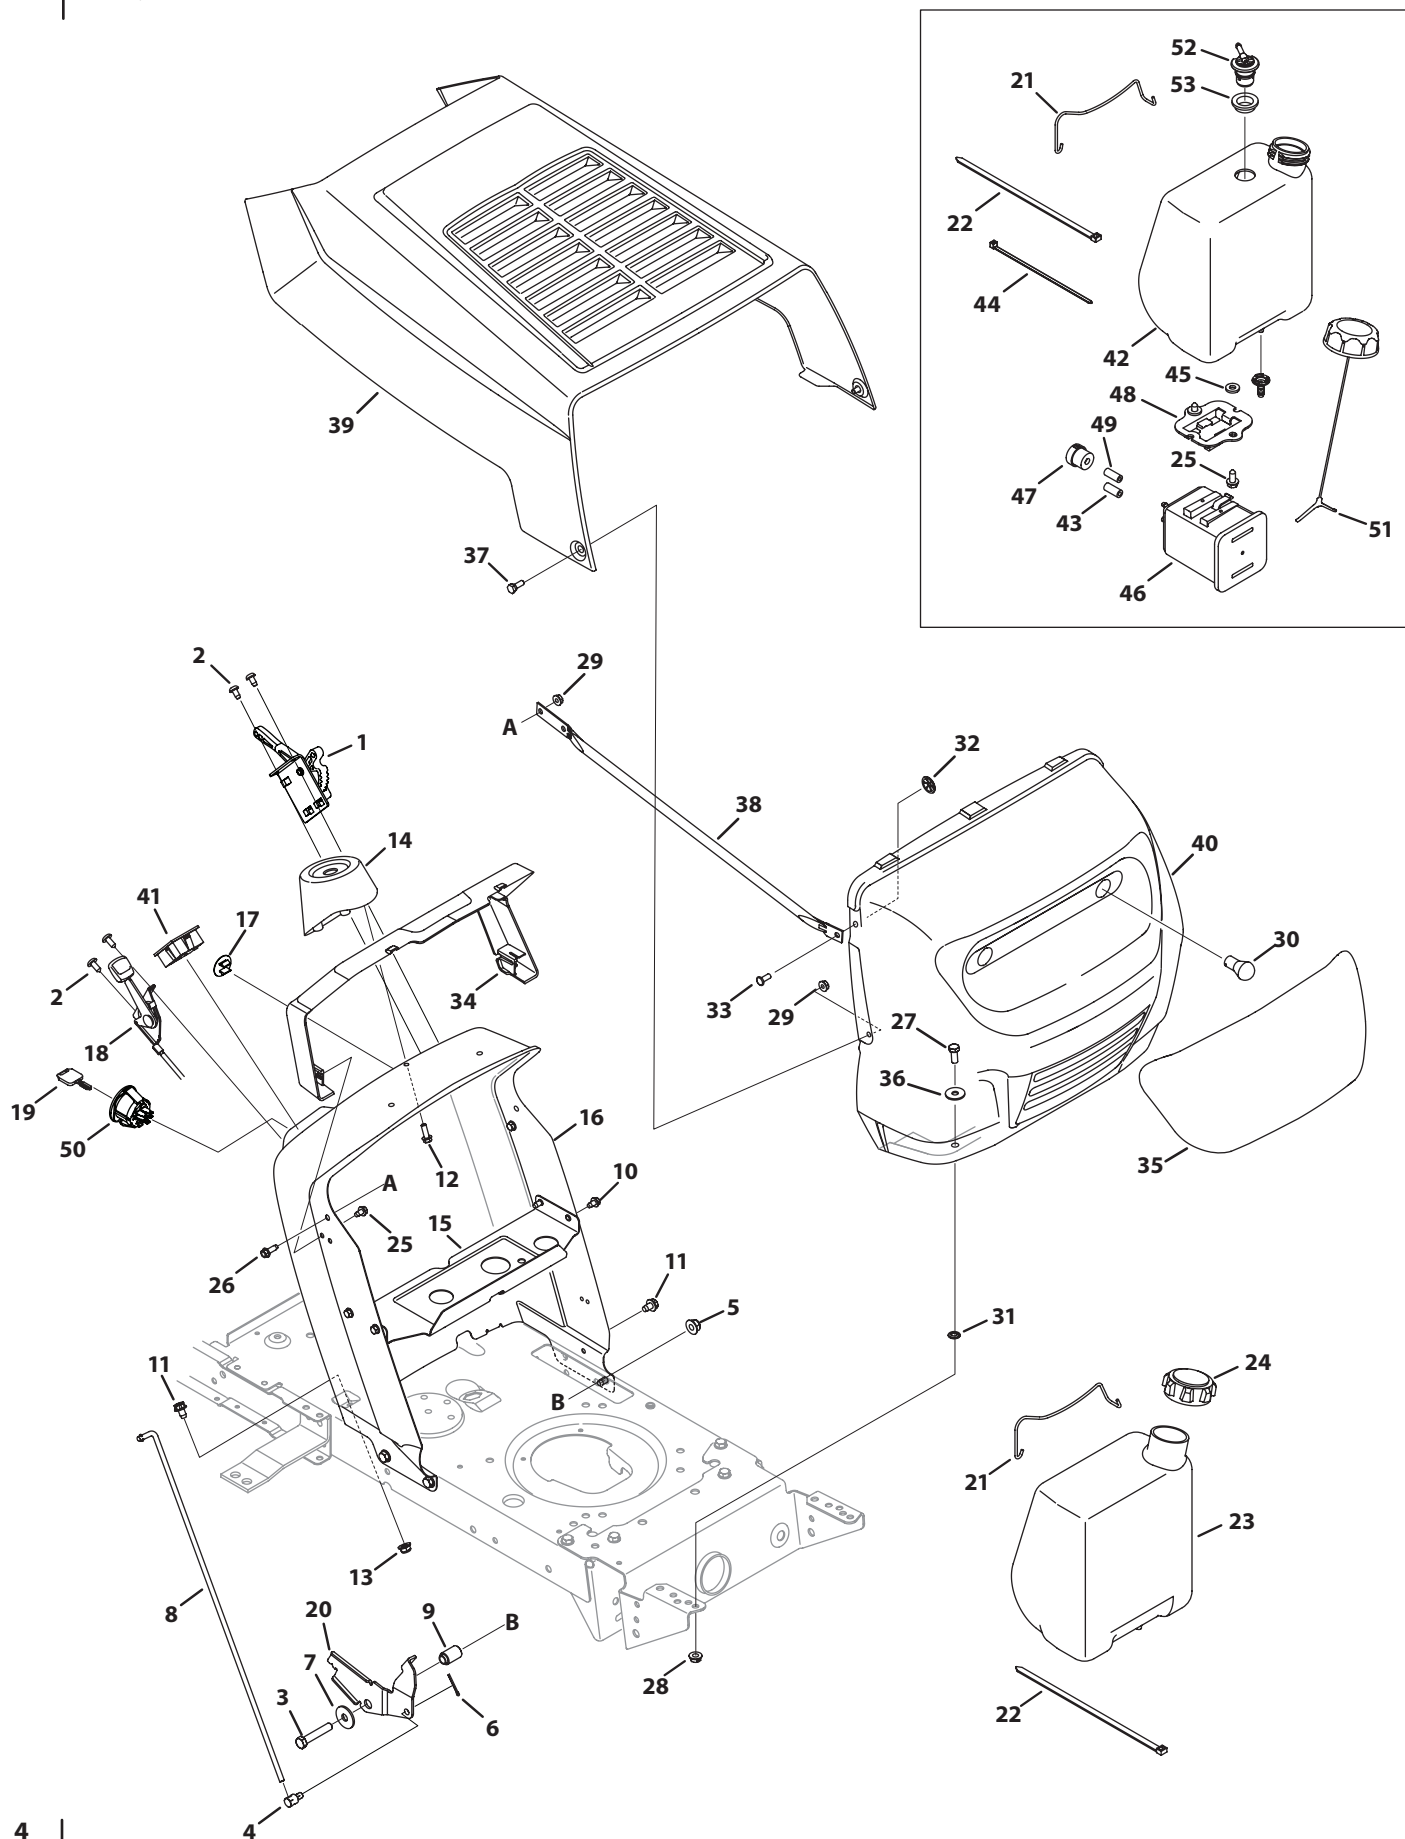


Ref. No.	Part No.	Description
1	983-04216	7-Speed Control Assembly
	983-04225	6-Speed Control Assembly
2	710-04483	Screw, 1/4-20 x .500
3	710-3144	Hex Screw, 3/8-16 x 2.0
4	711-0736	Ferrule, 1/4-20 x 1.00
5	710-04065	Flangelock Nut, 3/8-16
6	914-0111	Cotter Pin, 3/32 x 1.0
7	936-0133	Flat Washer, .411 x 1.25 x .100
8	747-04430	Speed Selector
9	750-04465	Flange Spacer, .390 x .671 x 1.095
10	710-0599	Hex Washer Screw, 1/4-20 x .500
11	710-0604A	Screw, 5/16-18 x .625
12	710-0895	Screw, 1/4-15 x .750
13	712-04063	Flangelock Nut, 5/16-18
14	731-04945	Steering Support
15	783-04584A-0637	Gas Tank Support Bracket
16	783-04889A-0637	Dash, RMC
	783-04873A-0637	Dash, No RMC - Powder Black
	783-04873A-0665	Dash, No RMC - Green
17	731-05265	Choke Plug
18	746-04364	Throttle/Choke Cable
19	925-1745A	Key
20	783-04862	Speed Latch. RMC
	783-04903	Speed Latch, No RMC
21	683-04448-0637	Battery Assembly Rod
22	726-0230	Cable Tie
23	751-0555B	1.5 Gallon Fuel Tank
24	751-0603A	Fuel Cap
25	710-04484	Screw, 5/16-18 x .750
26	710-0642	Screw, 1/4-20 x .750

Ref. No.	Part No.	Description
27	710-3008	Hex Screw, 5/16-18 x .75
28	712-04063	Flangelock Nut, 5/16-18
29	712-04064	Flangelock Nut, 1/4-20
30	925-0963	Miniature Lamp 12V Socket
31	726-0201	Speed Nut, .3125
32	926-04012	Push-On Nut, .25
33	728-0162	Flat Head Rivet, 1/4"
34	731-05012B	Dash
35	731-06042	Lens
36	736-3078	Flat Washer, .344 x 1.0 x .063
37	938-0952A	Shoulder Bolt, 1/4-20 x .375 x .125
38	749-04220-0637	Grill Support Rod
39	783-04608-0638	Hood - Red
	783-04608-0674	Hood - Yellow
40	783-05656-0638	Grill - Red
	783-05656-0674	Grill - Yellow
41	925-04156	Ammeter
42	751-10782	Fuel Tank, 1.36 Gallons
43	751-10750	Fuel Hose, Yellow
44	725-0157	Cable Tie
45	936-3008	Flat Washer, .344 x .750 x .120
46	951-10589	5 Gallon Carbon Canister
47	951-10590	Vent Filter Canister
48	951-10610	Canister Adaptor Bracket
49	751-10749-30	Fuel Hose, White
50	925-04659	Key Switch
51	951-10947	Fuel Cap, 2.25"
52	751-10441	Rollover Valve
53	735-04081	Rubber Grommet, 23 x 3.55

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

K Style Hood

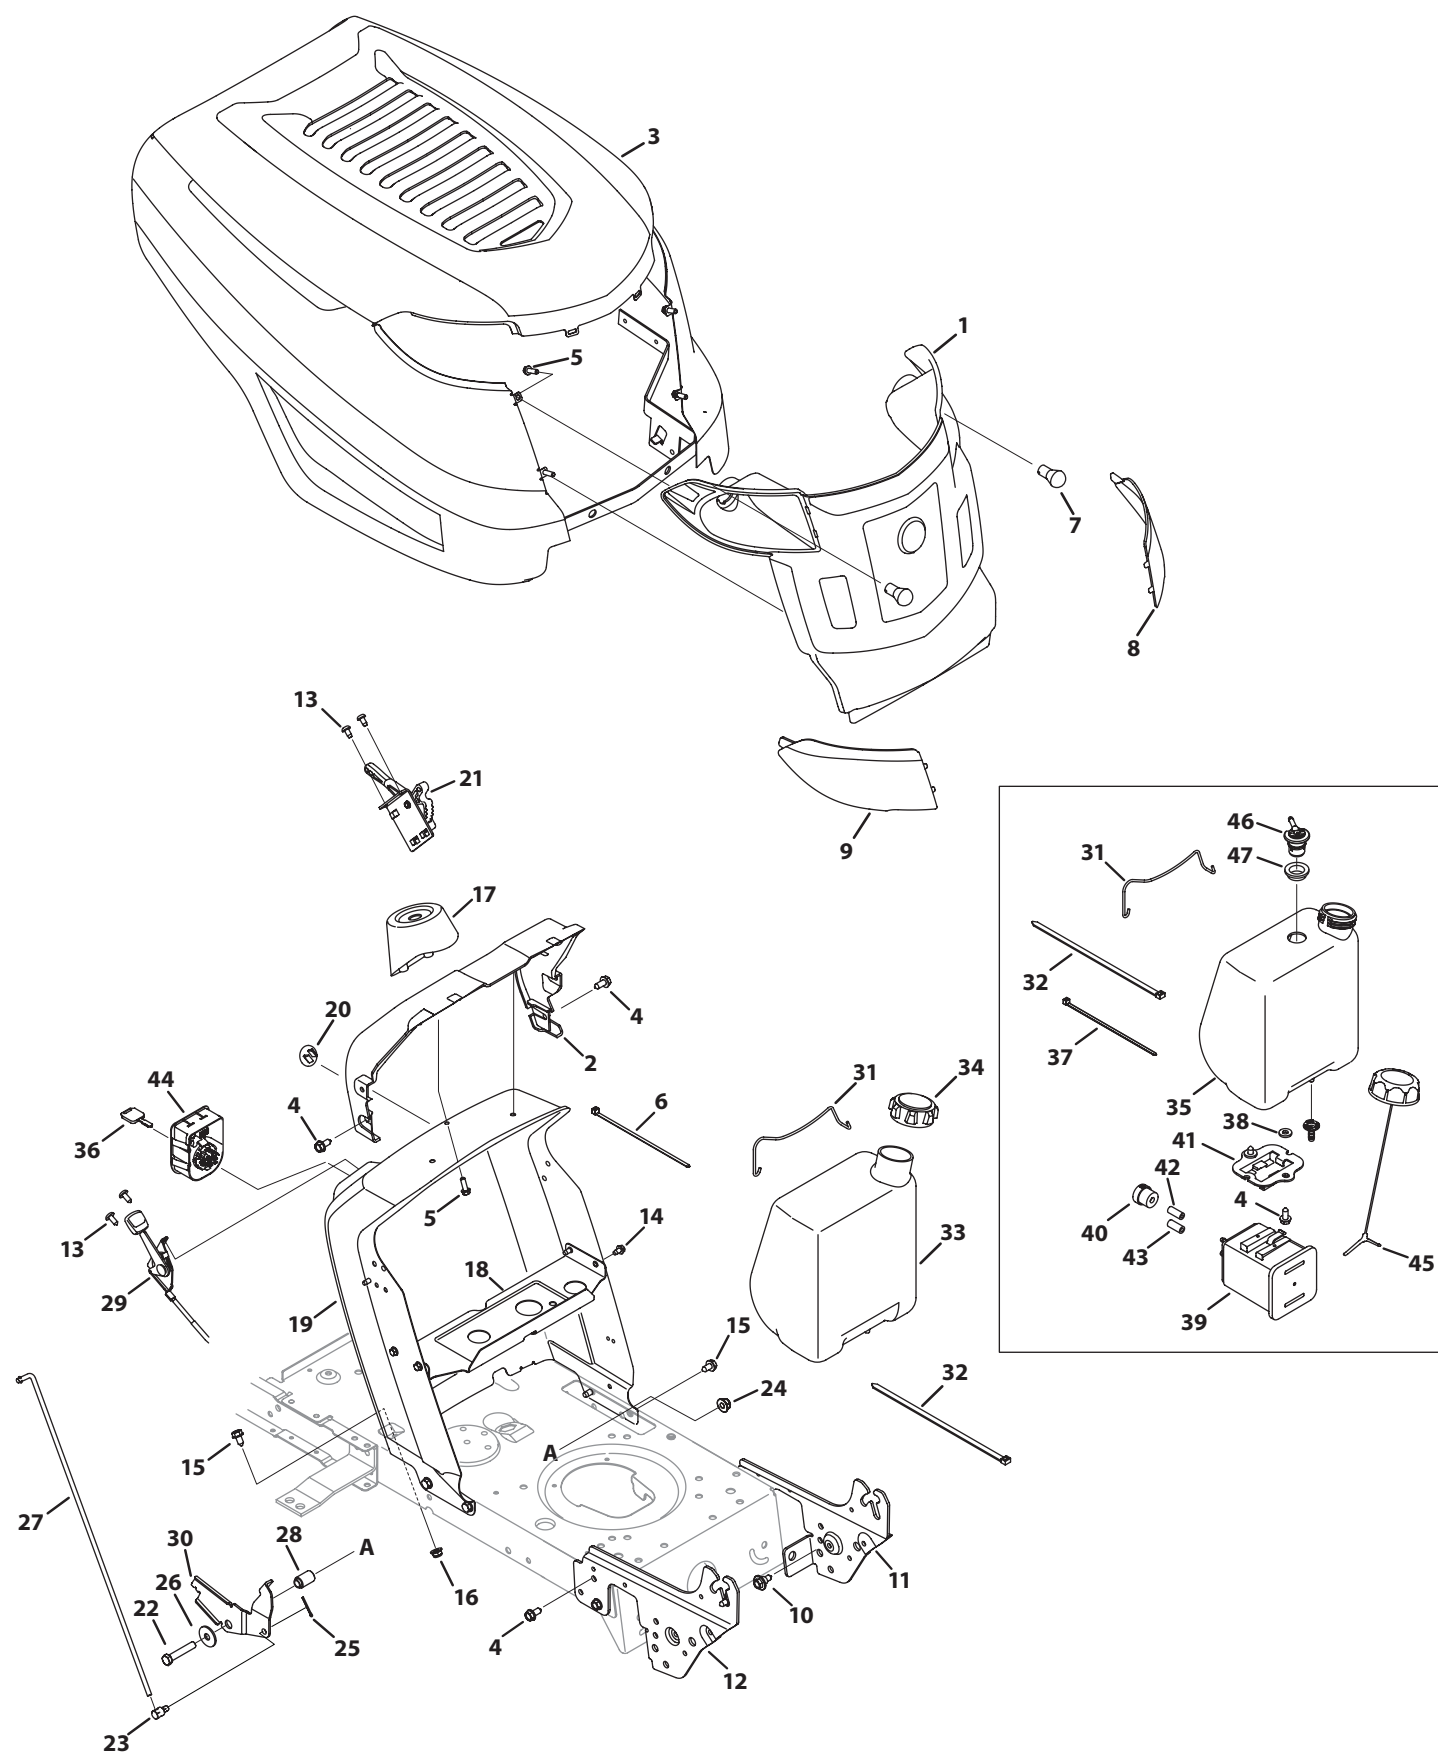


Ref. No.	Part No.	Description
1	631-04272	Grill Assembly, Troy-Bilt
2	731-05078C	Dash Assembly
	731-06404	K-Style Bumper
	710-04261	Screw, #12-16 x .50
3	683-04441-0638	Hood Assembly
4	710-04484	Screw, 5/16-18 x .750
5	710-0895	Screw, 1/4-15 x .750
6	725-0157	Cable Tie
7	925-0963	Lamp
8	731-06095	Left Lens
9	731-06096	Right Lens
10	738-04091A	Shoulder Screw, 5/16-18 x .43 x .29
11	783-05327B-0637	Left Support Pivot Bracket
12	783-05328A-0637	Right Support Pivot Bracket
13	710-04483	Screw, 1/4-20 x .500
14	710-0599	Hex Washer Screw, 1/4-20 x .500
15	710-0604A	Screw, 5/16-18 x .625
16	712-04063	Flangelock Nut, 5/16-18
17	731-04945	Steering Support
18	783-04584A-0637	Gas Tank Support Bracket
19	783-04873A-0638	Dash, No RMC - Red
20	731-05265	Choke Plug
21	983-04216	7-Speed Control Assembly
22	710-3144	Hex Screw, 3/8-16 x 2.0
23	711-0736	Ferrule, 1/4-20 x 1.00

Ref. No.	Part No.	Description
24	710-04065	Flangelock Nut, 3/8-16
25	914-0111	Cotter Pin, 3/32 x 1.0
26	936-0133	Flat Washer, .411 x 1.25 x .100
27	747-04430	Speed Selector
28	750-04465	Flange Spacer, .390 x .671 x 1.095
29	746-04364	Throttle/Choke Cable
30	783-04903	Speed Latch - No RMC
31	683-04448-0637	Battery Assembly Rod
32	726-0230	Cable Tie
33	751-0555B	1.5 Gallon Fuel Tank
34	751-0603A	Fuel Cap
35	751-10782	1.36 Gallon Fuel Tank
36	925-1745A	Key
37	725-0157	Cable Tie
38	936-3008	Flat Washer, .344 x .750 x .120
39	951-10589	5 Gallon Carbon Canister
40	951-10590	Vent Filter Canister
41	951-10610	Canister Adapter Bracket
42	751-10749-30	Fuel Hose, White
43	751-10750-28	Fuel Hose, Yellow
44	925-04659	3 Position Key Switch
45	951-10947	Fuel Cap, 2.25"
46	751-10441	Rollover Valve
47	735-04081	Rubber Grommet, 23 x 3.55

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

5 Style Hood with Plenum

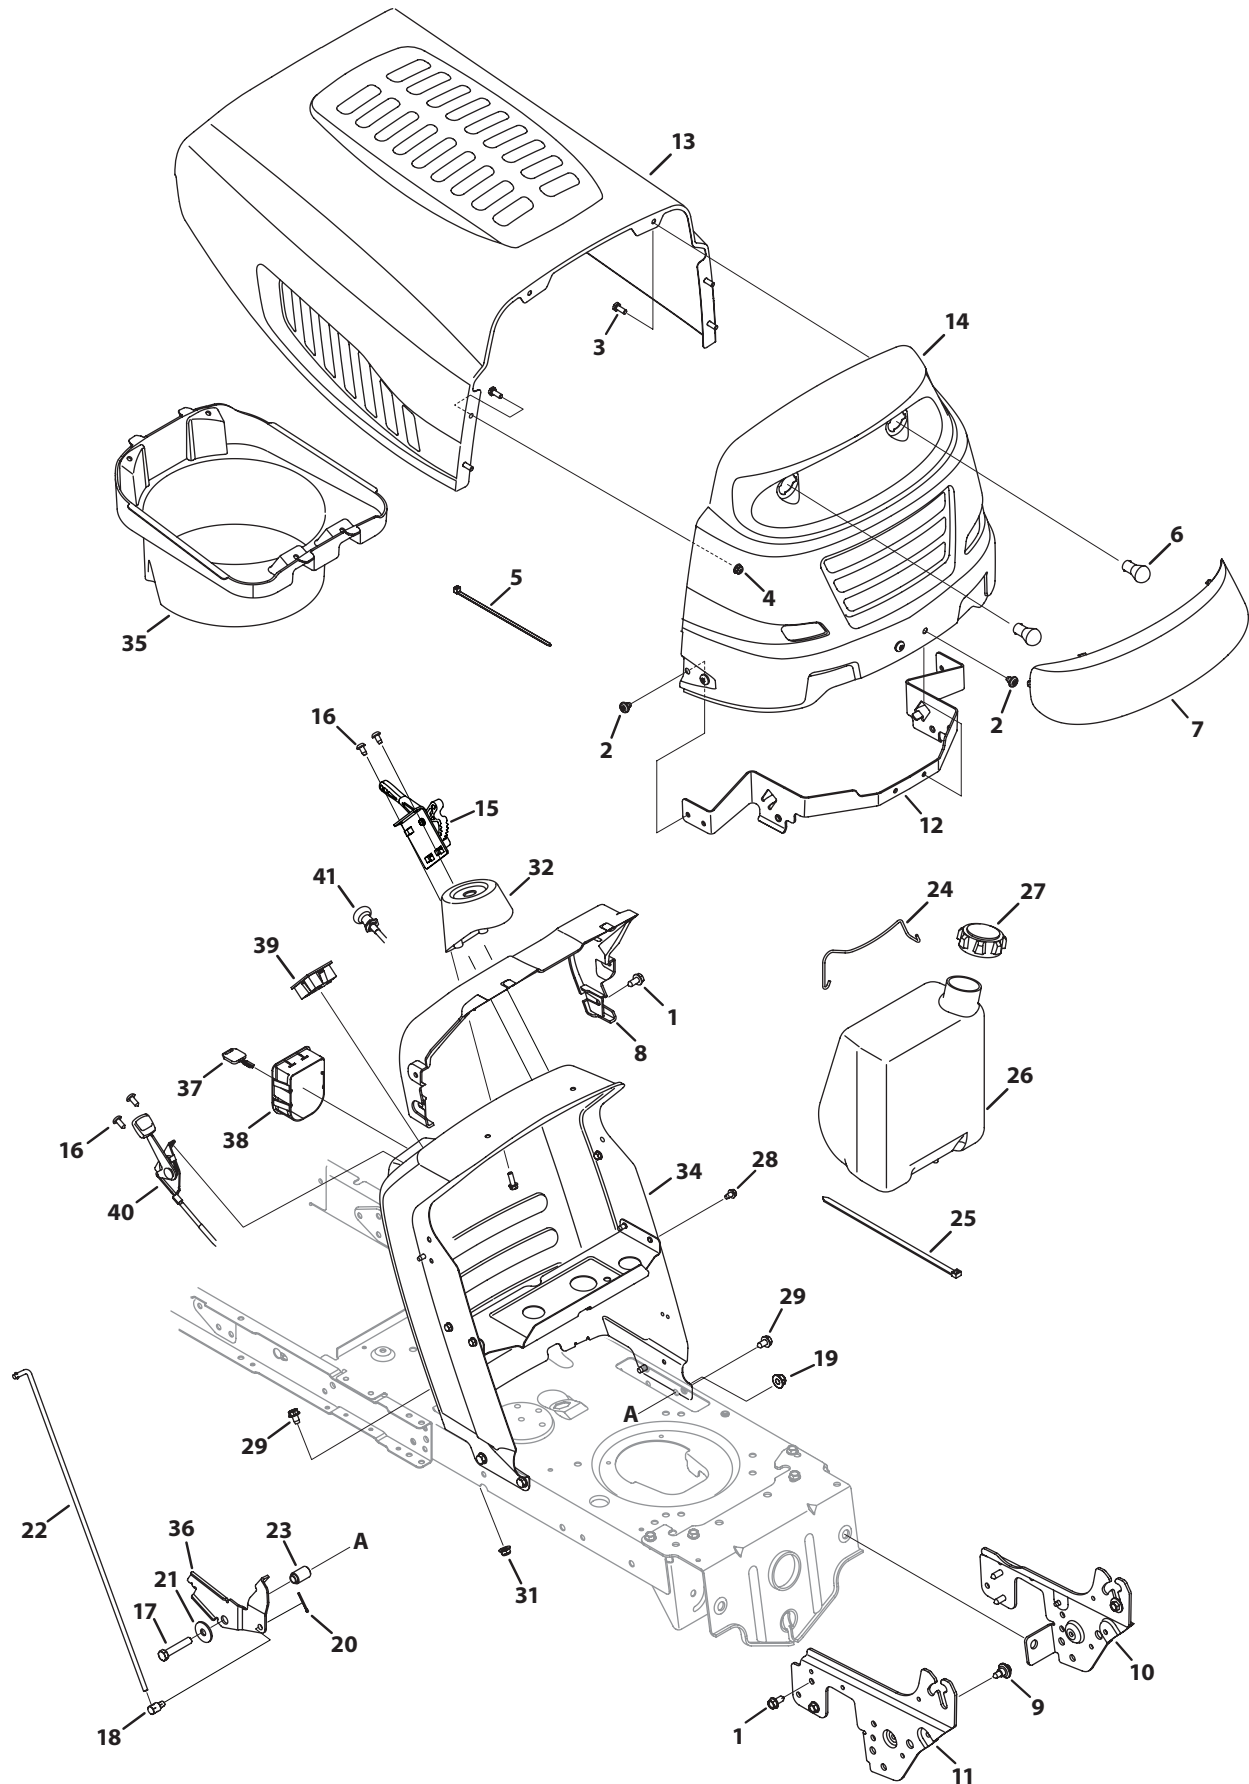


5 Style Hood with Plenum

Ref. No.	Part No.	Description
1	710-04484	Screw, 5/16-18 x .750
2	710-04593	Screw, 5/16-18 x .375
3	710-0751	Hex Screw, 1/4-20 x .620
4	712-04064	Flangelock Nut, 1/4-20
5	725-0157	Cable Tie
6	925-0963	Miniature Lamp, 12V
7	731-04949A	Grill Lens
8	731-05078C	Dash
9	738-04091A	Shoulder Screw, 5/16-18, .43 x .29
10	783-05327B-0637	Left-hand Support Pivot Bracket
11	783-05328A-0637	Right-hand Support Pivot Bracket
12	783-05454-0637	Hood Pivot Bracket
13	783-05683	Hood
14	783-05685	Grill
15	983-04216	7-speed Control Assembly
16	710-04483	Screw, 1/4-20 x .500
17	710-3144	Hex Screw, 3/8-16 x 2.0
18	711-0736	Ferrule, 1/4-20 x 1.0
19	712-04065	Flangelock Nut, 3/8-16
20	914-0111	Cotter Pin, 3/32 x 1.0
21	936-0133	Flat Washer, .411 x 1.25 x .100

Ref. No.	Part No.	Description
22	747-04430	Speed Selector Control Rod
23	750-04465	Flange Spacer, .390 x .671 x 1.095
24	683-04448-0637	Battery Rod
25	726-0230	Cable Tie
26	751-0555B	Fuel Tank, 1.5 Gallon
27	751-0603A	Fuel Cap
28	710-0599	Hex Index Washer Screw, 1/4-20 x .500
29	710-0604A	Screw, 5/16-18 x .625
30	710-0895	Screw, 1/4-15 x .750
31	712-04063	Flangelock Nut, 5/16-18
32	731-04945	Steering Support
33	783-04584A-0637	Gas Tank Support Bracket
34	783-04889A	Dash, RMC
35	731-06216	Plenum
36	783-04862	Speed Latch
37	925-1745A	Key
38	925-04227B	Key Switch
39	925-04156	Ammeter Monitor
40	746-04365	Throttle Cable
41	746-1085A	Choke Control

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


5 Style Hood

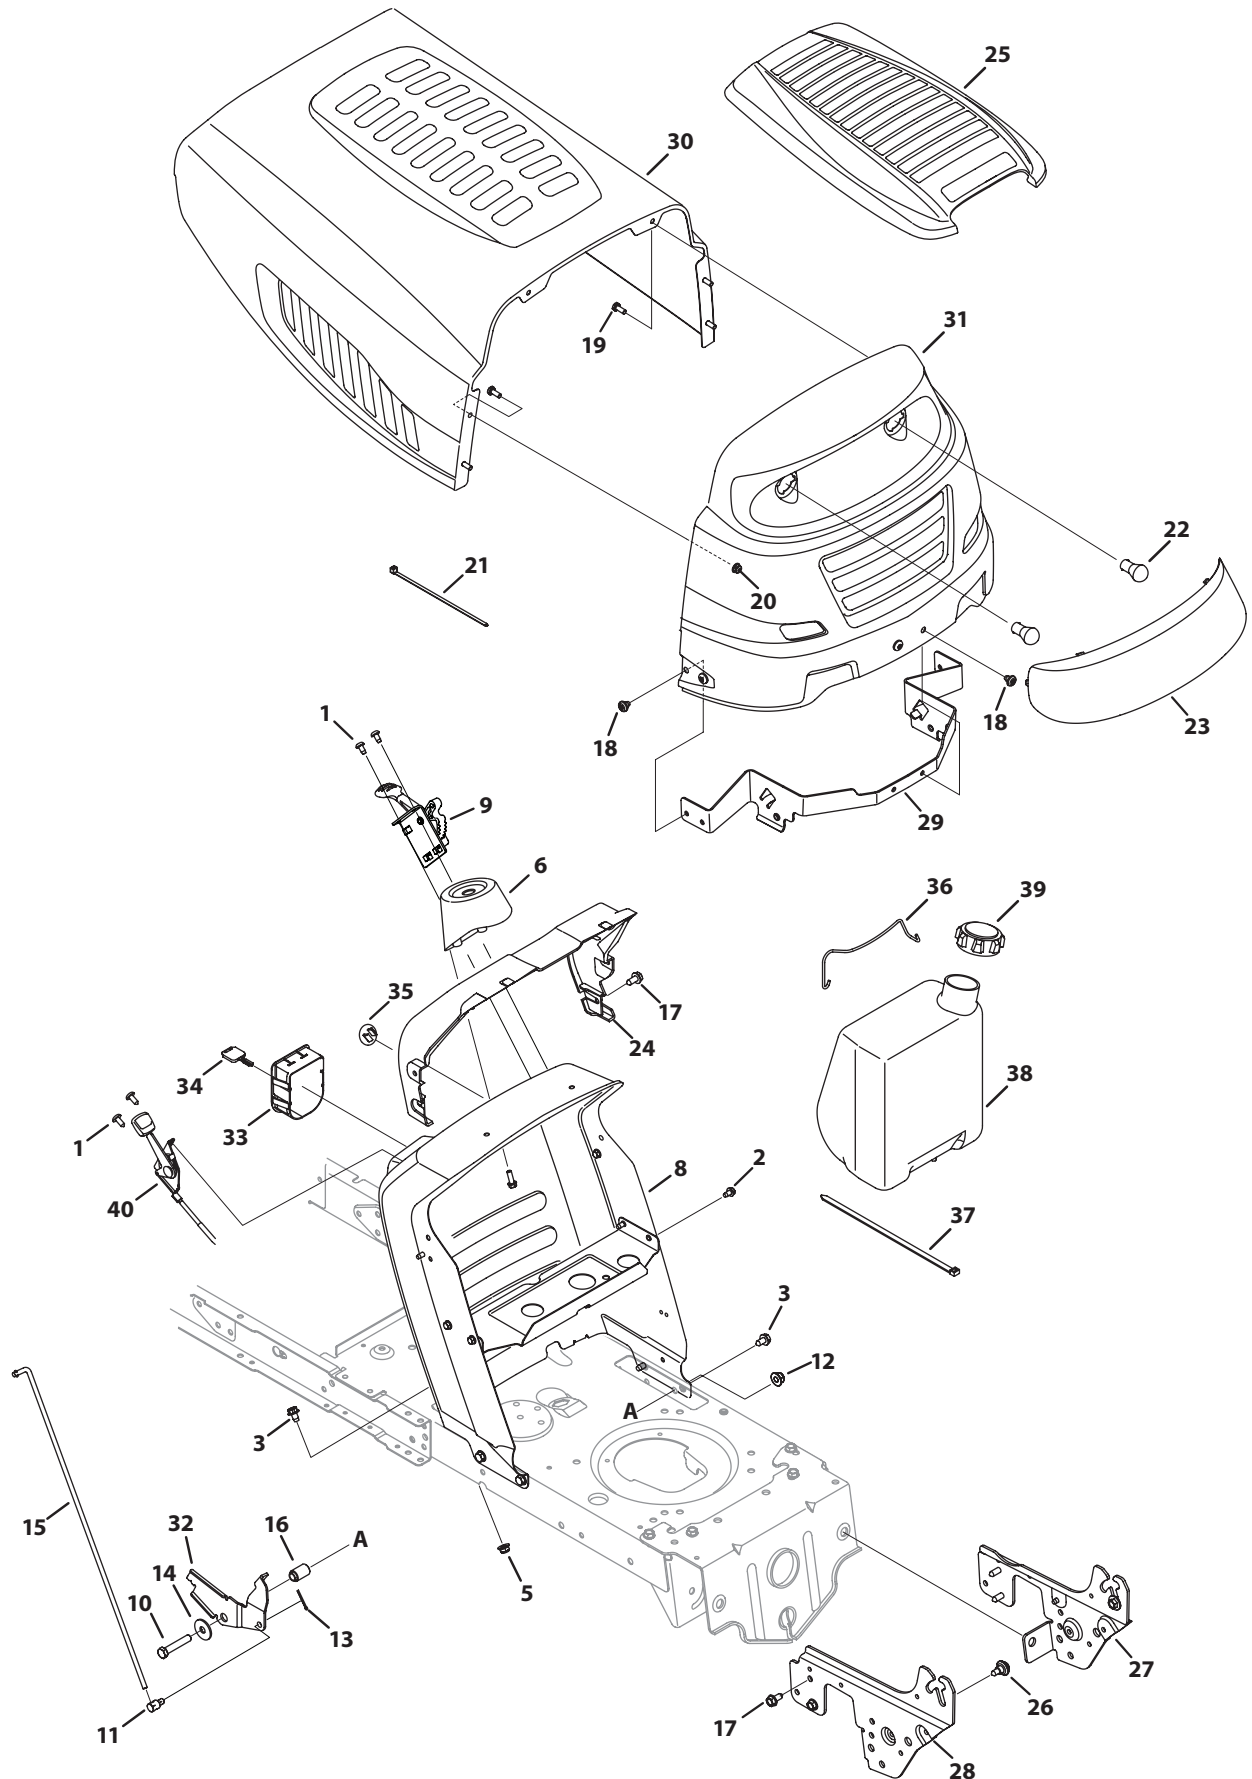

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	710-04483	Screw, 1/4-20 x .500	21	725-0157	Cable Tie
2	710-0599	Hex Index Washer Screw, 1/4-20 x .500	22	925-0963	Miniature Lamp, 12V
3	710-0604A	Screw, 5/16-18 x .625	23	731-04949A	Grill Lens
4	710-0895	Screw, 1/4-15 x .750	24	731-05078C	Dash
5	712-04063	Flangelock Nut, 5/16-18	25	731-05522A	Hood Cover
6	731-04945	Steering Support	26	738-04091A	Shoulder Screw, 5/16-18, .43 x .29
7	783-04584A-0637	Gas Tank Support Bracket	27	783-05327B-0637	Left-hand Support Pivot Bracket
8	783-04873A-0637	Dash, No RMC	28	783-05328A-0637	Right-hand Support Pivot Bracket
9	983-04274	7-speed Control Assembly	29	783-05454-0637	Hood Pivot Bracket
10	710-3144	Hex Screw, 3/8-16 x 2.0	30	783-05683-0638	Hood - Red
11	711-0736	Ferrule, 1/4-20 x 1.0	31	783-05685-0638	Grill - Red
12	712-04065	Flangelock Nut, 3/8-16	32	783-04903	Speed Latch, No RMC
13	914-0111	Cotter Pin, 3/32 x 1.0	33	925-04659	Key Switch
14	936-0133	Flat Washer, .411 x 1.25 x .100	34	925-1745A	Key
15	747-04430	Speed Selector Control Rod	35	731-05265	Choke Plug
16	750-04465	Flange Spacer, .390 x .671 x 1.095	36	683-04448-0637	Battery Rod
17	710-04484	Screw, 5/16-18 x .750	37	726-0230	Cable Tie
18	710-04593	Screw, 5/16-18 x .375	38	751-0555B	Fuel Tank, 1.5 Gallon
19	710-0751	Hex Screw, 1/4-20 x .620	39	751-0603A	Fuel Cap
20	712-04064	Flangelock Nut, 1/4-20	40	746-04364	Throttle/Choke Cable

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


G Style Hood

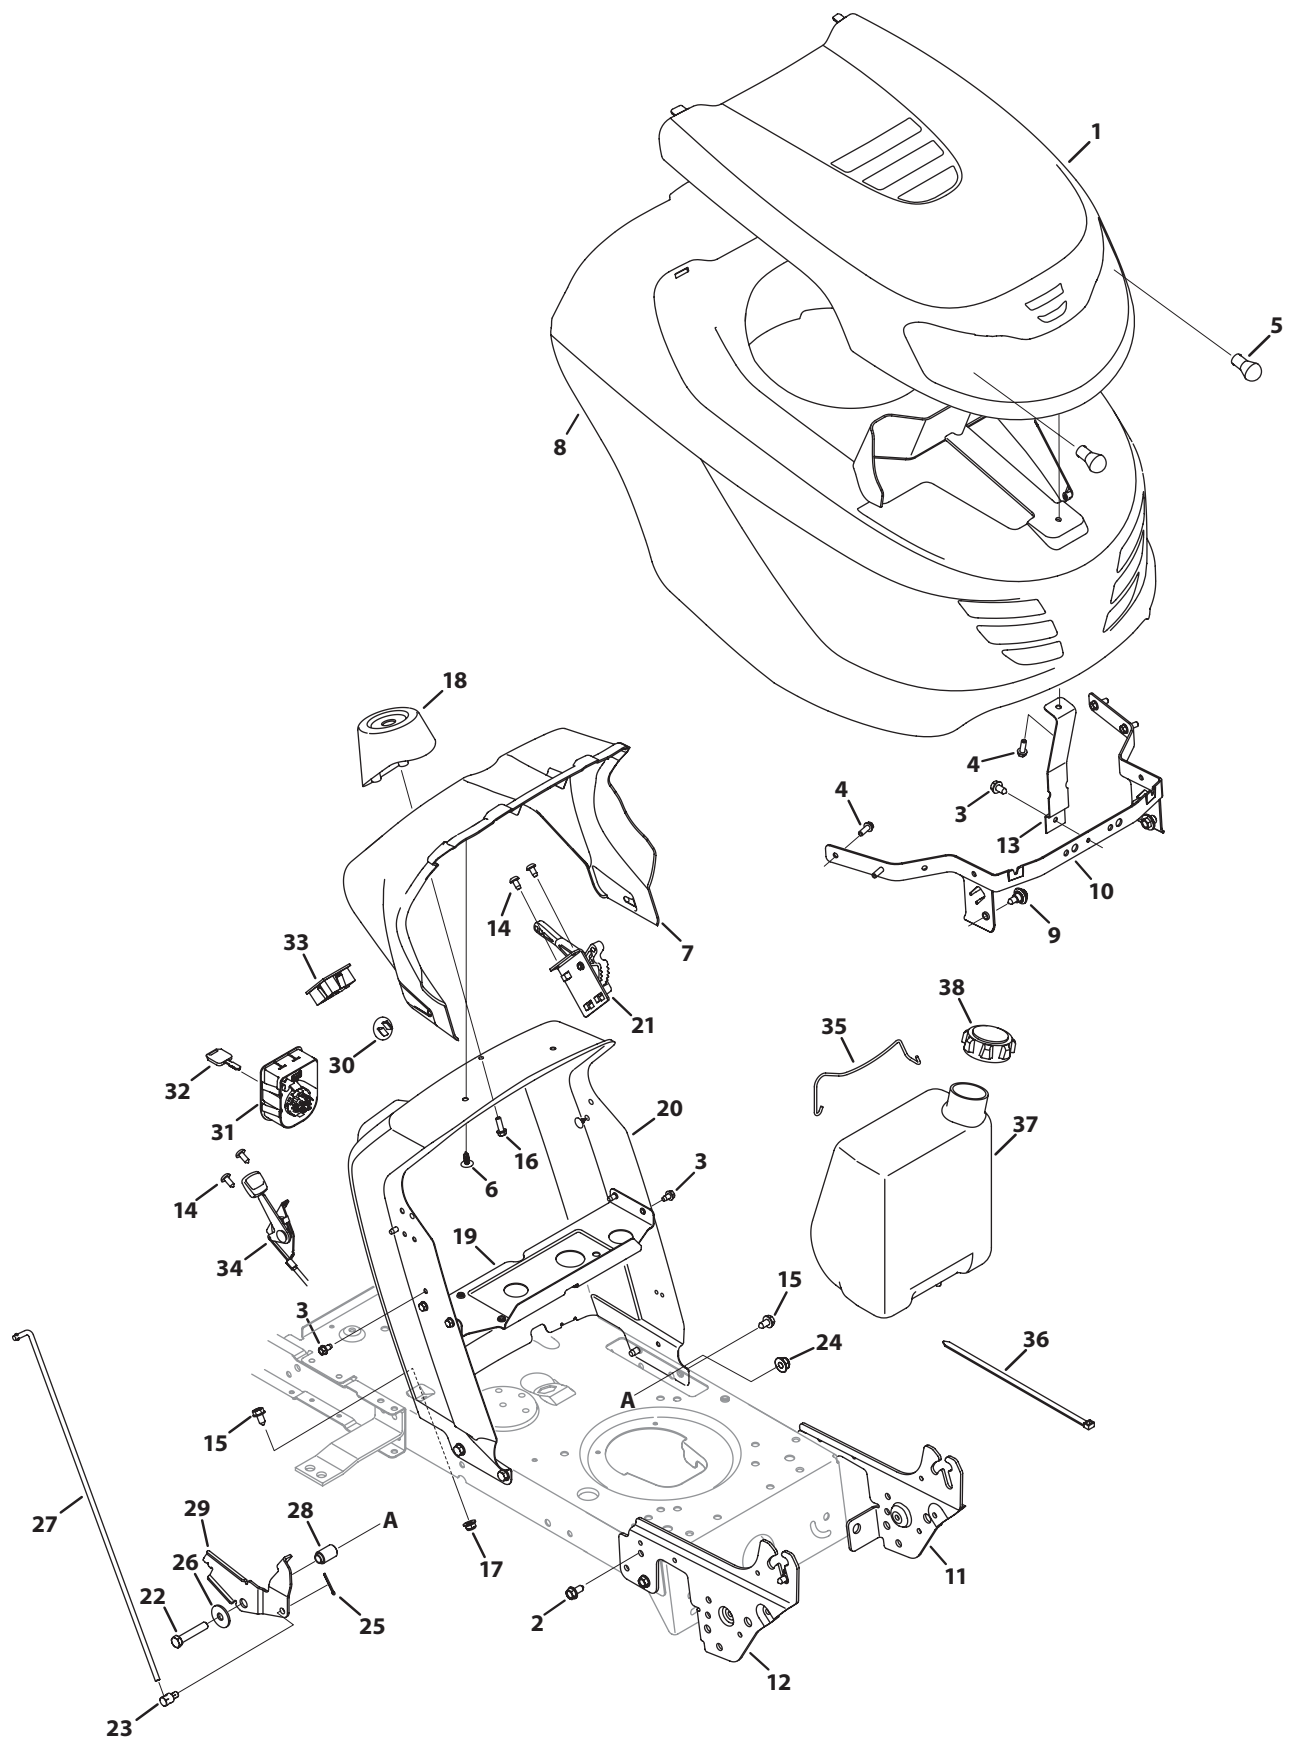

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	931-06560	G Style Hood, Upper Assembly	19	783-04584A-0637	Gas Tank Support Bracket
	931-06564	Lens, G Style Hood	20	983-04889A-0637	Dash
	777X43285	Label, Reflective G Style	21	983-04216	7 Speed Control Assembly
2	710-04484	Screw, 5/16-18 x .750	22	710-3144	Hex Screw, 3/8-16 x 2.00
3	710-0599	Screw, 1/4-20 x 0.500	23	711-0736	Ferrule, 1/4-20 x 1.00
4	710-0895	Screw, 1/4-15 x 0.750	24	712-04065	Flangelock Nut, 3/8-16
5	925-0963	Lamp	25	914-0111	Cotter Pin, 3/32:1.0
6	726-3046	Ratchet Clip, .250 DIA	26	936-0133	Flat Washer, .411 x 1.25 x .100
7	931-06470	Dash Collar	27	747-04430	Speed Selector Control Rod
8	931-06537	G Style Hood	28	750-04465	Flange Spacer, .390 x .671 x 1.095
9	738-04091A	Shoulder Screw, 5/16-18, .43 x .29	29	783-04862	Speed Latch
10	783-04606C-0637	Pivot Hood Bracket	30	731-05265	Choke Plug
11	783-05327B-0637	LH Pivot Support Bracket	31	925-04227B	Key Switch Module
12	783-05328A-0637	RH Pivot Support Bracket	32	925-1745A	Key
13	783-06117-0637	Hood Support Bracket	33	925-04156	Indicator Monitor
14	710-04483	Screw, 1/4-20 x .500	34	746-04364	Throttle/Choke Cable
15	710-0604A	Screw, 5/16-18 x 0.625	35	683-04448-0637	Battery Rod
16	710-0895	Screw, 1/4-15 x 0.750	36	726-0230	Cable Tie
17	712-04063	Flangelock Nut, 5/16-18	37	751-0555B	Fuel Tank
18	731-04945	Steering Support	38	751-0603A	Fuel Cap

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Frame and PTO Lift

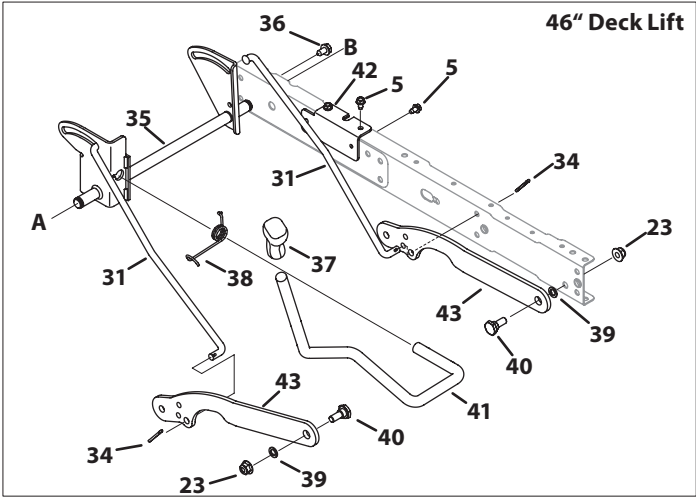

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	683-04195-0637	Support Bracket	30	747-04282	Deck Lift Handle
2	683-04450-0637	Frame Assembly - Powder Black	31	747-04393	Lift Rod
	683-04450-0665	Frame Assembly - Green	32	783-04494B-0637	38/42" Lift Arm, RH
	683-04450-0691	Frame Assembly - Black Jack	33	783-04711B-0637	38/42" Lift Arm, LH
	683-04450-0638	Frame Assembly - Red	34	914-0115	Cotter Pin, 1/8 x 1.0
3	710-0134	Screw Carriage, 1/4-20 x .62	35	683-04334-0637	Lift Assembly, 46"
4	710-04484	Screw 5/16-18 x .750	36	710-0604A	Screw, 5/16-18 x .625
5	710-0599	Screw, 1/4-20 x .500	37	720-0298	Handle Grip, 5/8
6	710-3008	Hex Screw, 5/16-18 x .75	38	732-04438	Torsion Spring Handle, 46"
7	712-04063	Flangelock Nut, 5/16-18	39	936-0140	Flat Washer, .385 x .62 x .063
8	712-04064	Flangelock Nut, 1/4-20	40	938-0380	Shoulder Bolt, 3/8-16 x .500 x .270
9	912-0429	Hexlock Nut, 5/16-18	41	747-04653	46" Lift Handle
10	732-04035	Compression Spacer, 1.28 x 3.125	42	783-05389-0637	Frame Brace Bracket
11	736-0173	Flat Washer, .28 x .74 x .063	43	783-0678C-0637	Lift Deck Link
12	738-04237A	Shoulder Spacer, 10-32 x .500	44	710-04607	Hex Screw, 7/16-20 x 2.75, 46"
13	783-04548C-0637	Seat Frame Bracket		710-04608	Hex Screw, 7/16-20 x 3.25, 38/42"
14	783-04637-0637	Runningboard Bracket	45	914-0145	Click Pin, .092 x 1.64
15	783-04753-0637	Support Frame Bracket	46	720-04049A	Handle Grip, 3/8
16	783-04869A-0637	Battery Bracket	47	732-04276A	PTO Spring Extension
17	710-04666	Hex Head Flange, 1/4-20 x .75	48	936-0171	Regular Duty Washer Lock, 7/16
18	712-0271	Sems Nut, 1/4-20	49	736-0322	Flat Washer, .450 x 1.250 x .164
19	925-1707D	155 CCA Battery	50	741-04119	PTO Bearing
	925-1707D	230 CCA Battery	51	746-04173B	Deck Engage Cable
20	783-04536B-0637	Support Bracket	52	756-04207A	Engine Pulley, 3.39 x 6.12, 46"
21	647-04096-0637	PTO Handle Assembly		756-04196A	Engine Pulley, 3.39 x 6.12, 38/42"
22	683-04155A-0637	Lift Assembly, 38/42"	53	747-04744	Battery Hold Down Rod
23	712-04065	Flangelock Nut, 3/8-16	54	936-0300	Flat Washer, .406 x .875 x .059
24	714-04043	Bow-tie Cotter Pin	55	747-04332A	38" Belt Keeper
25	716-0106A	E Ring		747-04857	42" Belt Keeper
26	720-0311	Handle Grip, 1/2		683-04414-0637	46" Belt Keeper
27	732-04225	Torsion Spring	56	710-0604A	Screw, 5/16-18.0 x .625
28	738-04130	Shoulder Bolt, 3/8-16 x .625 x .175	57	725-04439	12V Solenoid
29	941-0225	Hex Flange Bearing	58	725-04363	Switch Interlock

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Front End Steering

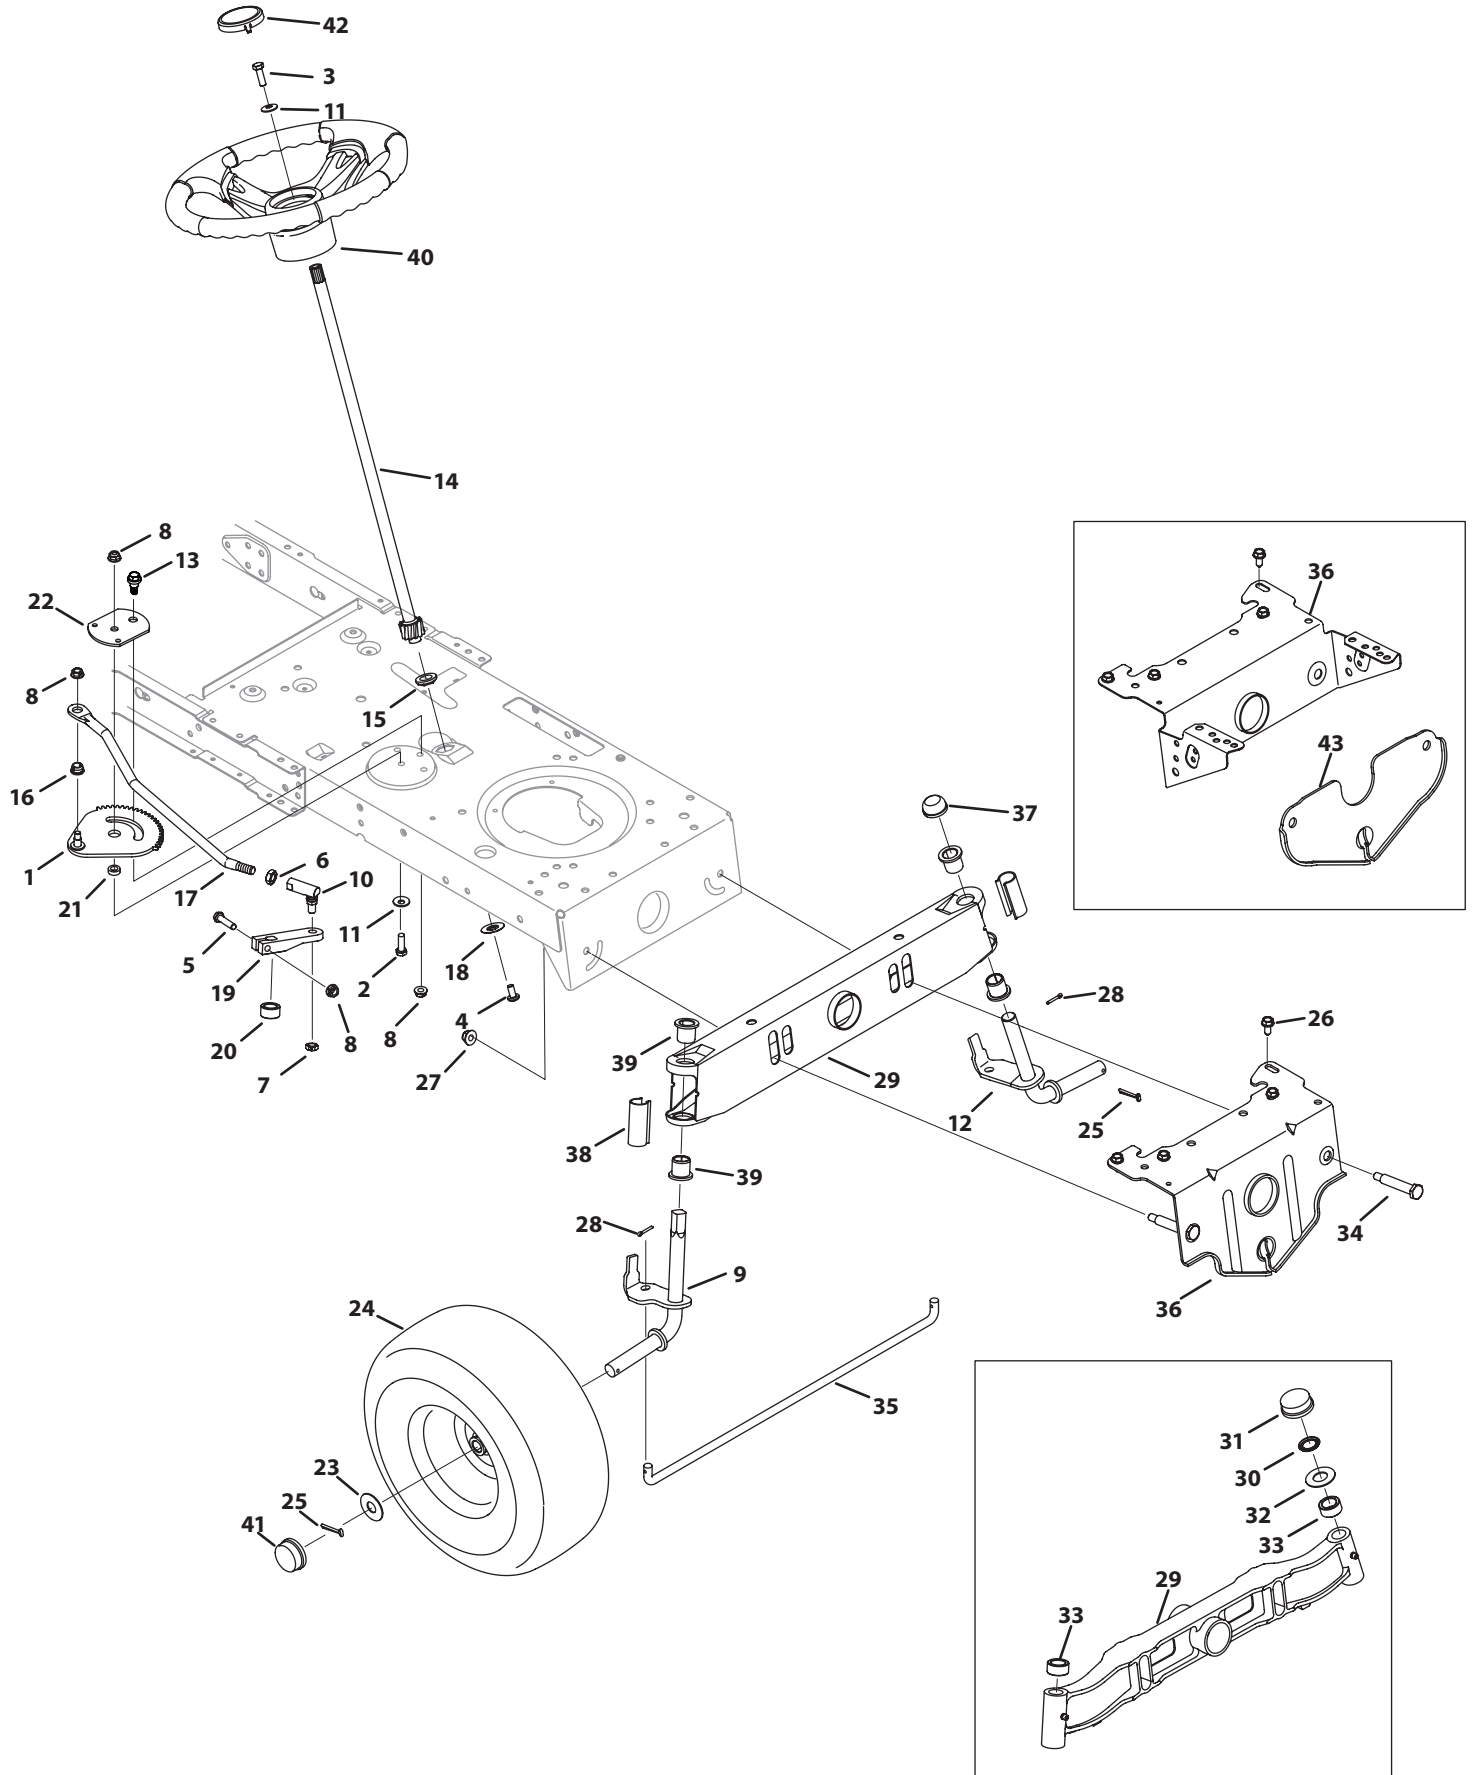


Front End Steering

Ref. No.	Part No.	Description
1	617-04024	Front Steering Gear Assembly
2	710-0376	Hex Screw, 5/16-18 x 1.00, Standard
3	710-0643	Hex Screw, 5/16-18 x 1.00, Lock
4	710-1309	Machine Screw, 5/16-18 x .750
5	710-3180	Hex Screw, 5/16-18 x 1.75
6	912-0240	Jam Nut, 7/16-20
7	712-0262	Jamlock Nut, 3/8-24
8	712-04063	Flangelock Nut, 5/16-18
9	638-04008P	Front RH Axle
	938-04013	46" Front RH Axle
10	923-0448A	Ball Joint, 7/16-20
11	736-0242	Bell Washer, .340 x .872 x .060
12	638-04007A-0637	Front LH Axle
	638-04014A-0637	46" Front LH Axle
13	738-04141	Shoulder Bolt, 5/16-18 x .435 x .350
14	738-0919A	Steering Shaft, 5/8 x 22.08
15	941-04124	Flange Bearing, 5/8
16	941-0475	Plastic Bushing, .380 ID
17	747-04298	Steering Link
18	948-0389	Cap, 1.25 x .16
19	748-04065-0637	Steering Block
20	748-04068	Spacer, .71 x .125 x .56
21	750-04418	Spacer, .322 x .625 .21
22	783-04644	Gear Segment Stabilizer Plater
23	736-04228A	Flat Washer, .781 x 1.590
24	634-04086-0911	Wheel Assembly, 46" - Gray
	634-04086-0941	Wheel Assembly, 46" - Yellow
	634-04325-0911	Wheel Assembly, 42"/38" - Gray
	634-04325-0941	Wheel Assembly, 42"/38" - Yellow

Ref. No.	Part No.	Description
25	714-04039	Cotter Pin, 5/32 x 1.25
26	710-04484	Screw, 5/16-18 x .750
27	712-04065	Flangelock Nut, 3/8-16
28	914-0474	Cotter Pin, .125 x .75
29	719-04177A	Pivot Axle
	683-0128B-0637	Pivot Axle
30	726-04035	Push Nut, 3/4
31	731-04693	Hub Cap
32	936-0316	Flat Washer, .78 x 1.59 x .060
33	748-04068	Spacer, .71 x .125 x .56
34	738-04128	Shoulder Bolt, 3/8-16 x .500 x 2.38
35	747-04299A	Fixed Rod
36	783-05326-0637	Pivot Bar Bracket
	783-04601C-0637	Pivot Bar Bracket
37	726-0341	Push Cap, 3/4
38	731-04057A	Standard Axle Cap
39	741-0660A	Flange Bearing, .760 x .941 x 1.0
40	631-04028	Steering Wheel
41	931-0484A	Hub Cap
42	731-04039	Cap
	731-04040	Sprig Cap
	731-04681	Cap, Troy-Bilt
43	783-04568-0637	Front Deck Hanger Bracket

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Seat and Fender

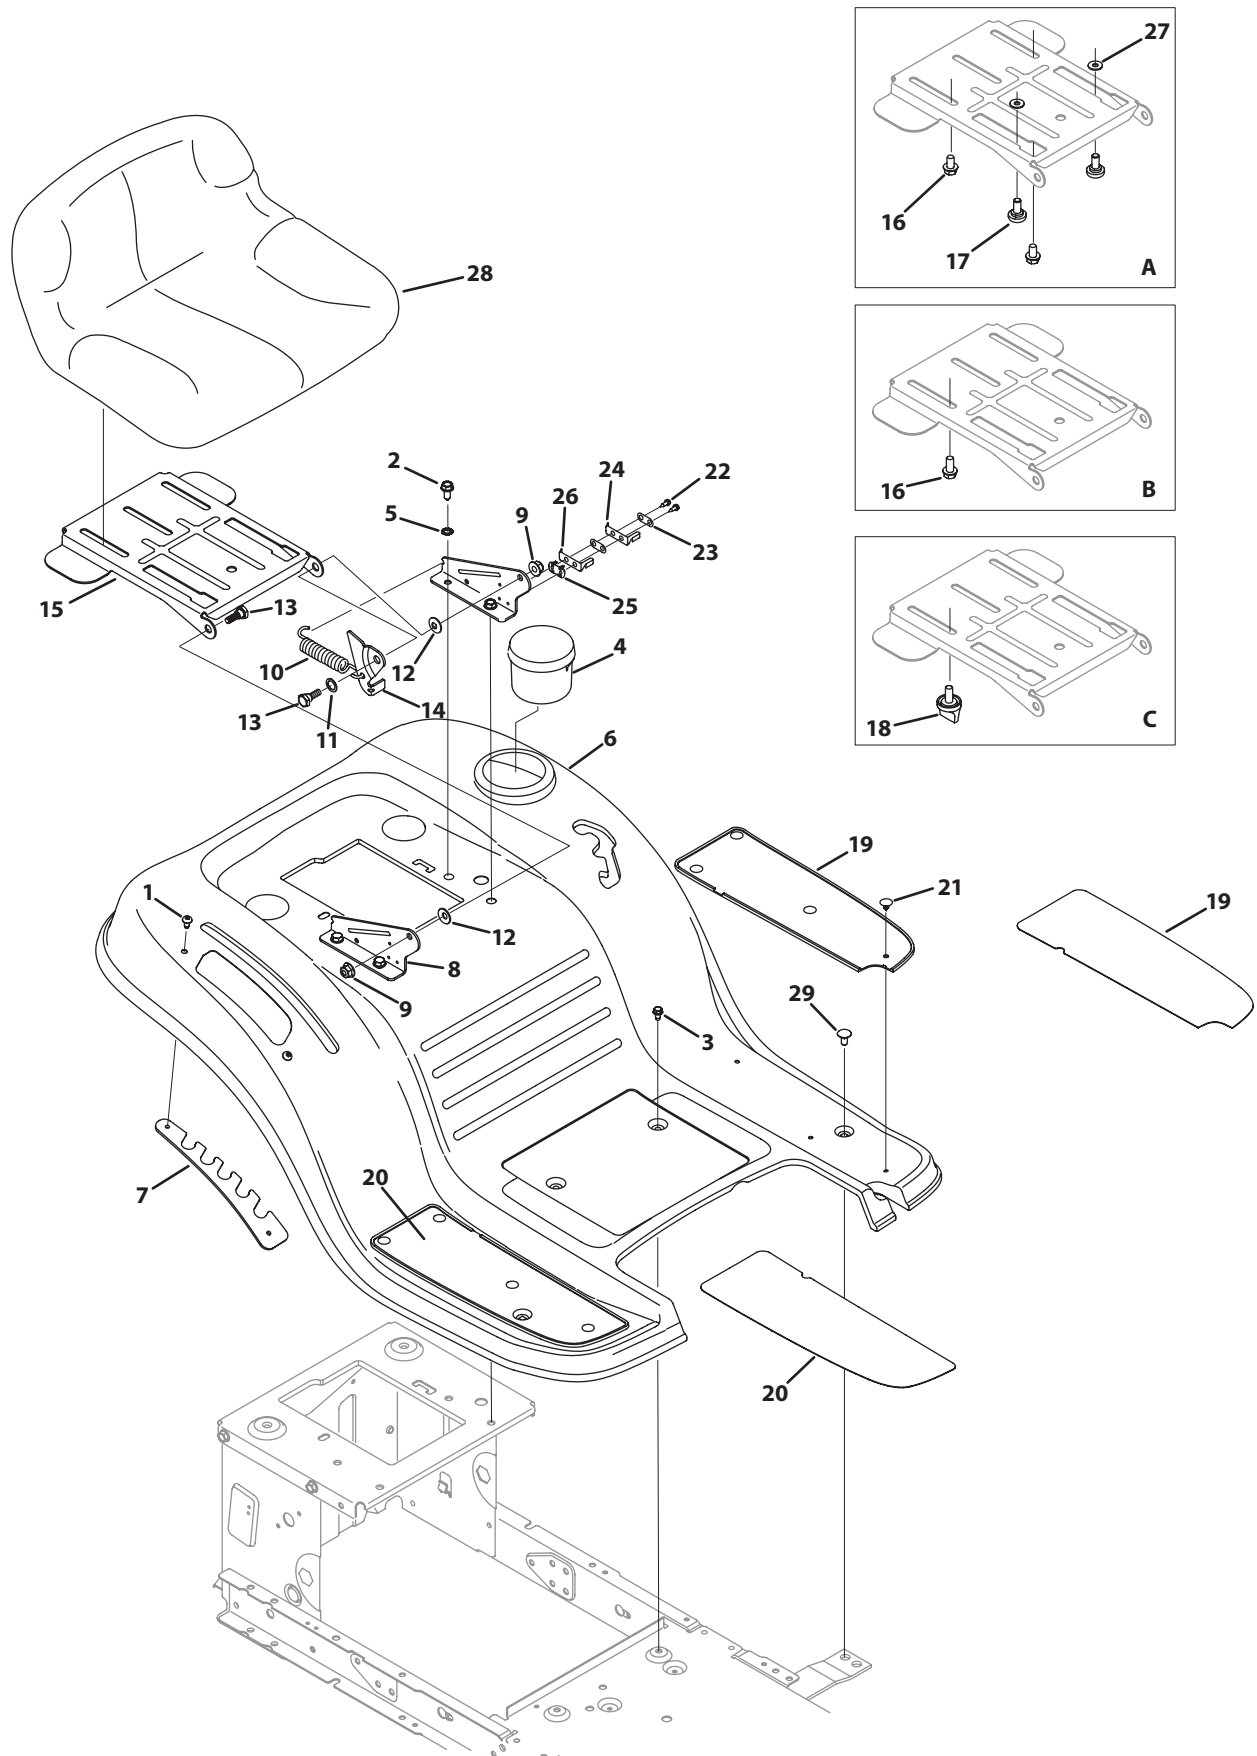

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	710-04483	Screw, 1/4-20 x .500	17	738-04012A	Shoulder Screw, 3/8-16 x .625 x .145
2	710-04484	Screw, 5/16-18 x .750	18	720-04061	Knob, 3/8-16 x .875
3	710-0599	Screw Pan Torx Head, 1/4-20 x .500	19	735-04047	Foot Pad, LH
4	731-04591A	Cup Holder		723-04026	Foot Pad, Abrasive, LH
5	736-0607	Loack Washer, 5/16	20	735-04048	Foot Pad, RH
6	783-04587A-0638	Fender - Red		723-04025	Foot Pad, Abrasive, RH
	783-04587A-0665	Fender - Yard Man Green	21	726-04072A	Ratchet Clip, .250 x .500
	783-04587A-0691	Fender - Black Jack	22	710-0227	Screw, 8-18 x .500
	783-04587A-0709	Fender - Mastercraft Green	23	726-0279	Insulator Plate
7	783-04843-0637	Lift Adjuster Bracket - Powder Black	24	925-1303	Outer Seat SPring
	783-04843-0638	Lift Adjuster Bracket - Red	25	726-0278	Insulator Boss Plate
8	783-1489C-0637	Seat Mount Bracket - Powder Black	26	725-1439	Inner Seat Spring
	783-1489C-0638	Seat Mount Bracket - Red	27	936-0140	Flat Washer, .385 x .62 x .063
9	712-04063	Flangelock Nut, 5/16-18	28	957-04037	Medium Back Seat, Set-up A
10	732-1184	Extension Spring		757-04083	Medium Back Seat, Black, Set-up B
11	936-0108	Flat Washer, .510x .750 x .033		757-04084	Medium Back Seat, Yellow, Set-up B
12	736-0242	Bell Washer, .340 x .872 x .060		757-04099	Low Back Seat, Black, Set-up B or C
13	938-0296	Shoulder Screw, 5/16-18 x .437 x .268		757-04100	Low Back Seat, Yellow, Set-up B
14	783-0209D	Lift Seat Bracket		757-04088	High Back Seat, Black, Set-up B
15	783-04081C-0637	Pivot Seat Manual Adjust Bracket	29	710-0134	Screw Carriage, 1/4-20 x .62
16	710-04482	Hex Head Flange, 3/8-16 x .875			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Transmission

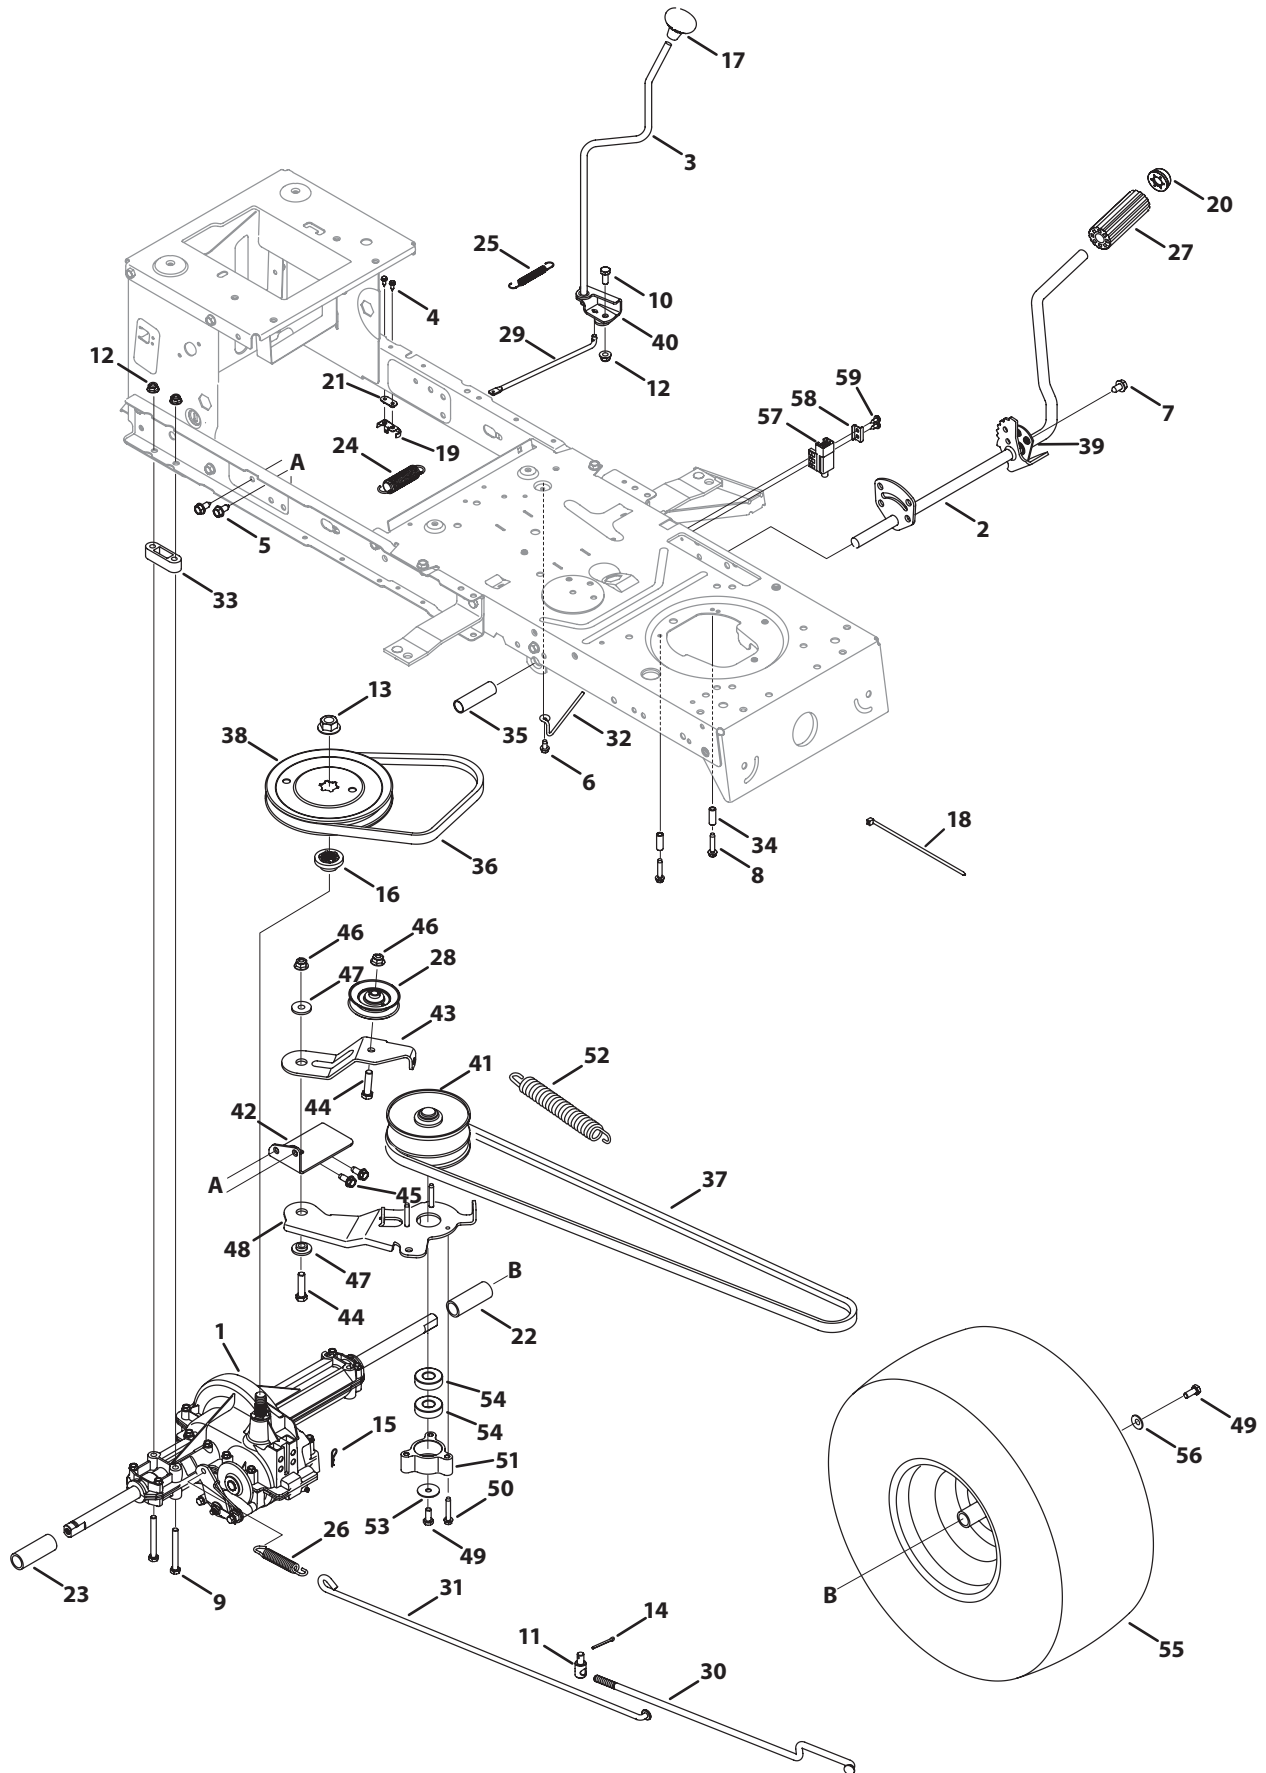

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	918-04566	Transmission Drive Assembly	31	747-04733A	Brake Rod
2	647-04034C-0637	Pedal Assembly	32	747-04969	Belt Keeper Rod
3	647-04035	Shaft Lever Assembly	33	948-0334	Spacer, T-Axle, 46" Only
4	710-0227	Screw, 8-18:0.500	34	750-0566A	Spacer, .260 x .375 x 1.030 LG
5	710-04484	Screw, 5/16-18 x .750	35	750-0802	Spacer, .640 ID x .76 OD x 2.63
6	710-0599	Screw, 1/4-20 x 0.500	36	954-0241A	V Belt, 5L:35.25:POLY
7	710-0604A	Screw, 5/16-18 x 0.625	37	954-04001A	V Belt, 5L:68.90:POLY
8	710-0809	Screw, 1/4-20 x 1.250	38	956-04002	V Pulley:7.25 DIA SPUN
9	710-1266	Hex Screw, 5/16-18 x .625	39	783-04536B-0637	Pedal Support Bracket
	710-0176	Hex Screw, 5/16-18 x 2.75	40	783-04595A	Shaft Adjust Bracket
10	710-3008	Hex Screw, 5/16-18 x .75	41	956-04015A	Variable Speed Pulley Assembly
11	911-04075A	Ferrule, 3/8-24 X .375 DIA.	42	683-04176A	Transmission Bracket Assembly
12	712-04063	Flangelock Nut, 5/16-18	43	753-05147	Idler Bracket Assembly
13	712-0700	Flange Nut, 9/16-18	44	710-0347	Hex Screw, 3/8-16 x 1.75
14	914-0115	Cotter Pin, 1/8 x 1.0	45	710-1260A	Screw, 5/16-18 x 0.750
15	914-0209	Cotter Pin INT- .125 DIA	46	712-04065	Flangelock Nut, 3/8-16
16	718-04407	Pulley Hub, 5/8 SPLINE	47	938-0347	Shoulder Spacer, .625 ID x .169
17	720-04028	Shift Knob	48	753-05147	Bracket Assembly
18	725-0157	Cable Tie	49	710-0627	Hex Screw, 5/16-24 x .750
19	725-1644	Short Spring Switch	50	710-0778	Screw, 1/4-20 x 1.500
20	726-0214	Push Cap, 5/8	51	718-04261	Bearing Cup
21	926-0320	Plate Insulator Nut	52	732-04076A	Extension Spring, 1.15 OD x 7.90 LG
22	731-04602	Sleeve, .758 x .821 x 3.3125	53	736-0362	Flat Washer, .330 x 1.25 x .06:HT
23	731-04604	Sleeve, .758 x .821 x 2.4375	54	941-0124	Ball Bearing, 17 x 40 x 12
24	732-04306	Spring Extension, .80 OD x 3.28 LG	55	634-04324-0911	Wheel, 20 x 8 x 8, 46" - Gray
25	732-04488	Spring Extension, .38 OD x 3.25 LG		634-04324-0941	Wheel, 20 x 8 x 8, 46" - Yellow
26	732-0716D	Spring Extension, .59 OD x 4.00 LG		634-0104-0911	Wheel, 20 x 8 x 8, 42" - Gray
27	735-0239	Foot Pad, 4.0 LONG		634-0104-0941	Wheel, 20 x 8 x 8, 42" - Yellow
28	756-04325	Idler Pulley	56	736-0242	Bell Washer, .340 x .872 x .060
29	747-04568	Shift Rod, 46"	57	725-04363	Switch Interlock
	747-04277	Shift Rod. 38/42"	58	17962	Plate Switch
30	747-04265	Variable Speed Control Rod	59	738-04237A	Shoulder Screw, #10-32 x .500

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

38" Deck

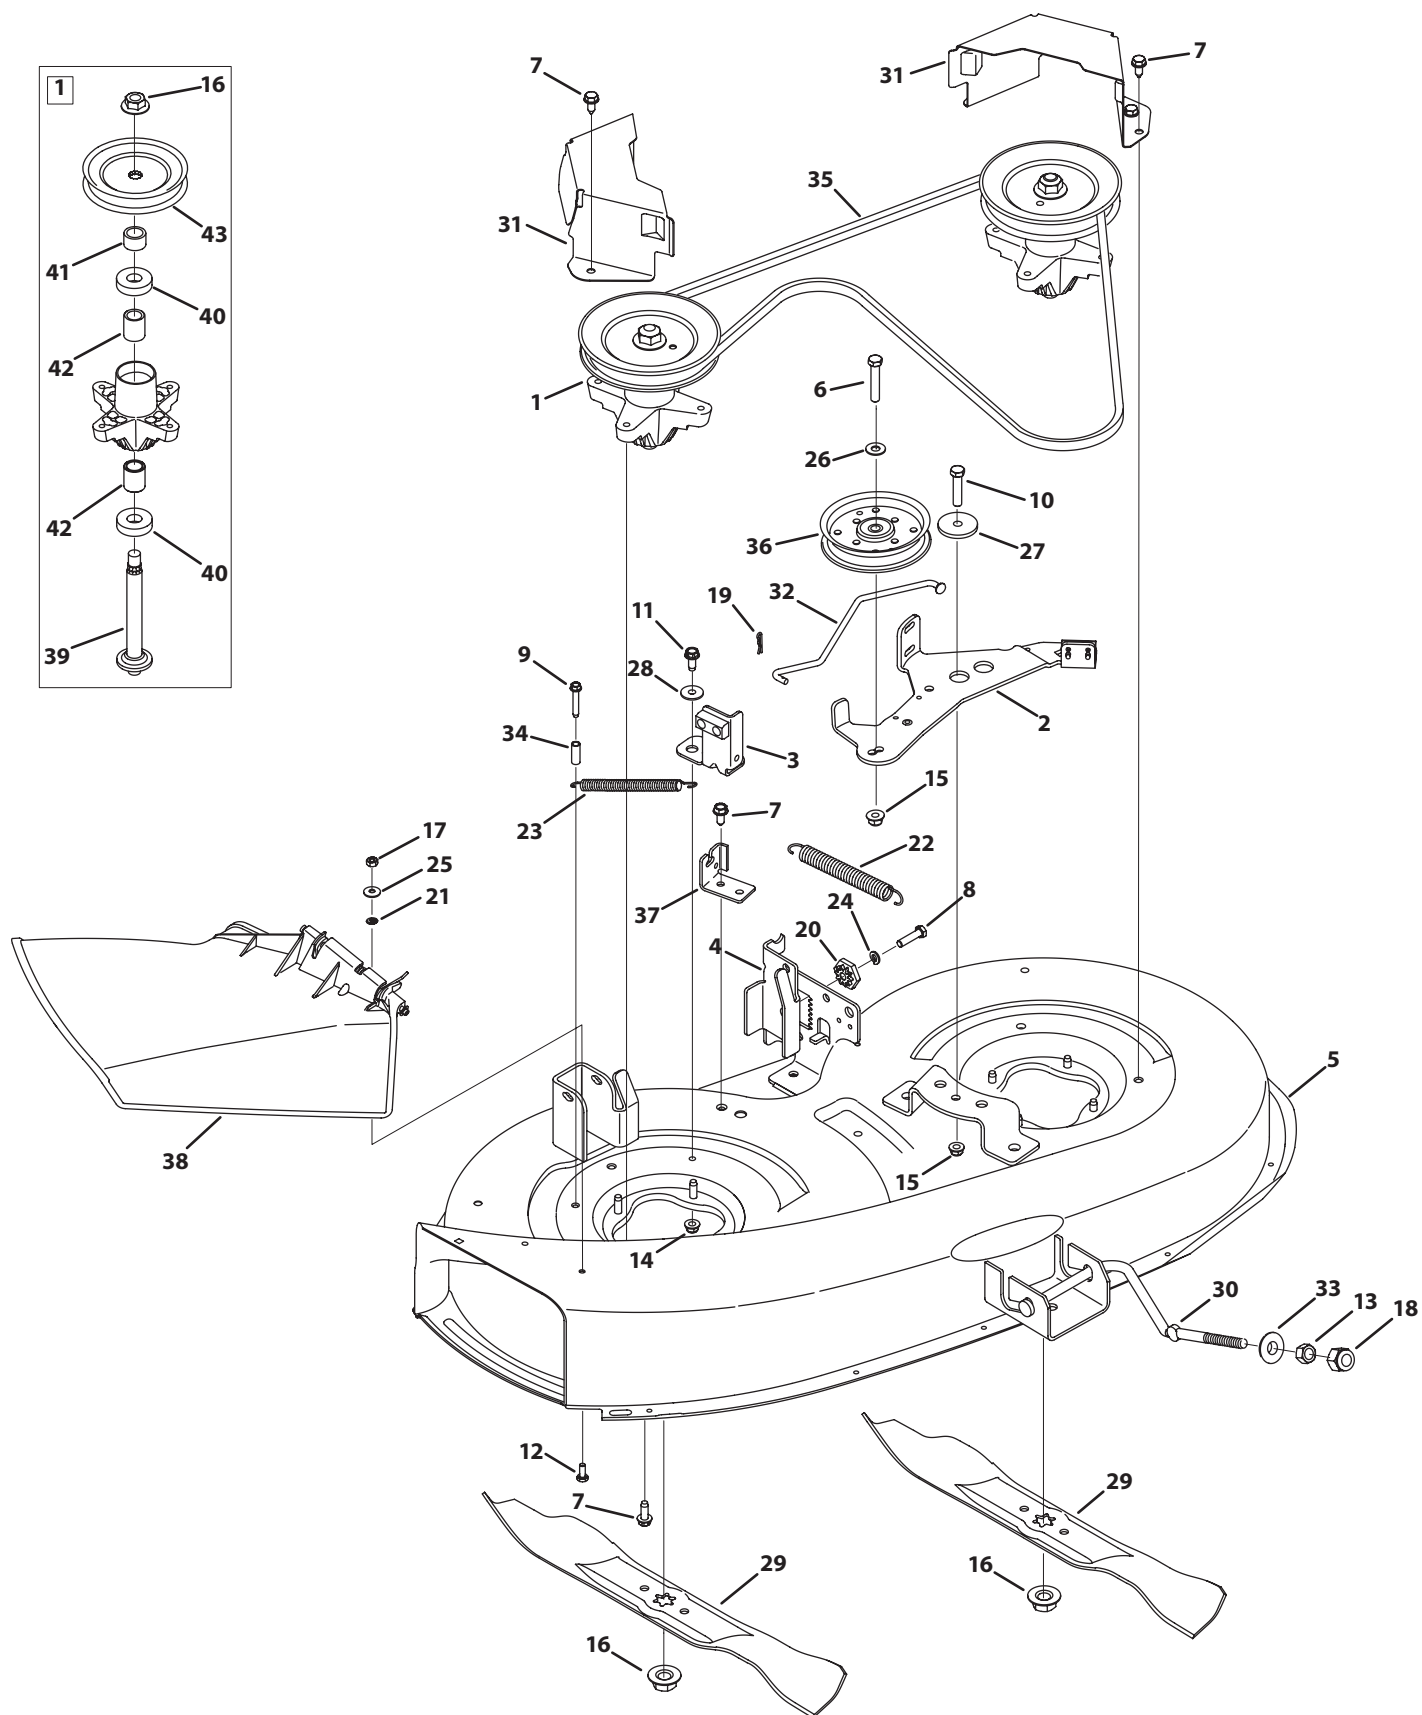


Ref. No.	Part No.	Description
1	918-04474	5.75" Pulley Spindle Assembly
2	683-04138B-0637	Deck Brake Assembly
3	983-04167	Deck Brake Assembly
4	683-04228-0637	LH Deck Hanger Bracket
5	983-04263-0637	38" Deck Assembly
6	710-0347	Hex Screw, 3/8-16 x 1.75
7	710-04484	Screw, 5/16-18 x .750
8	710-0528	Hex Screw, 5/16-18 x 1.25
9	710-0778	Screw, 1/4-20 x 1.50
10	710-3005	Hex Screw, 3/8-16 x 1.25
11	710-3008	Hex Screw, 5/16-18 x .75
12	710-3015	Hex Screw, 1/4-20 x .75
13	712-0206	Hex Nut, 1/2-13
14	712-04063	Flangelock Nut, 5/16-18
15	712-04065	Flangelock Nut, 3/8-16
16	712-0417A	Flange Nut, 5/8-18
17	712-3006	Hex Nut, 1/4-20
18	712-3083	Hexlock Nut, 1/2-13
19	914-0104	Cotter Pin, .072 Diameter
20	917-04074	Deck Adjuster Gear
21	726-0233	Push Nut, .25 x .50
22	732-04280B	Extension Spring, .75 x 6.375

Ref. No.	Part No.	Description
23	732-04287	Extension Spring, .500 x 6.375
24	936-0119	Lock Washer, 5/16
25	736-0270	Bell Washer, .265 x .75 x .062
26	936-0300	Flat Washer, .406 x .875 x .059
27	738-04162A	Shoulder Spacer, .8840 x .190
28	738-04166	Shoulder Spacer, .5000 x .1475
29	942-0610A	3 in 1 Blade
30	747-04322	38" Front Adjust Deck Rod
31	783-04602A-0637	Belt Cover
32	747-04381	38" Brake Control Rod
33	748-04069	Deck Lift, Pivot Cup
34	750-0566A	Spacer, .260 x .375 x 1.030
35	954-04062	V Type Belt
36	756-04129B	Idler Pulley
37	783-04740-0637	Deck Engage Cable Bracket
38	631-0216A	Chute Assembly
	931-1032B	Chute Assembly
39	938-04241	Spindle Shaft, 5.50
40	941-0919	Ball Bearing, .787ID x 1.85 OD x .551
41	750-04739	Spacer, .820 x 1.150 x .480 LG
42	750-1000	Spacer, .80 x 1.10 x 1.322 LG
43	756-1188	Deck Pulley, 5.75

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


42" Deck

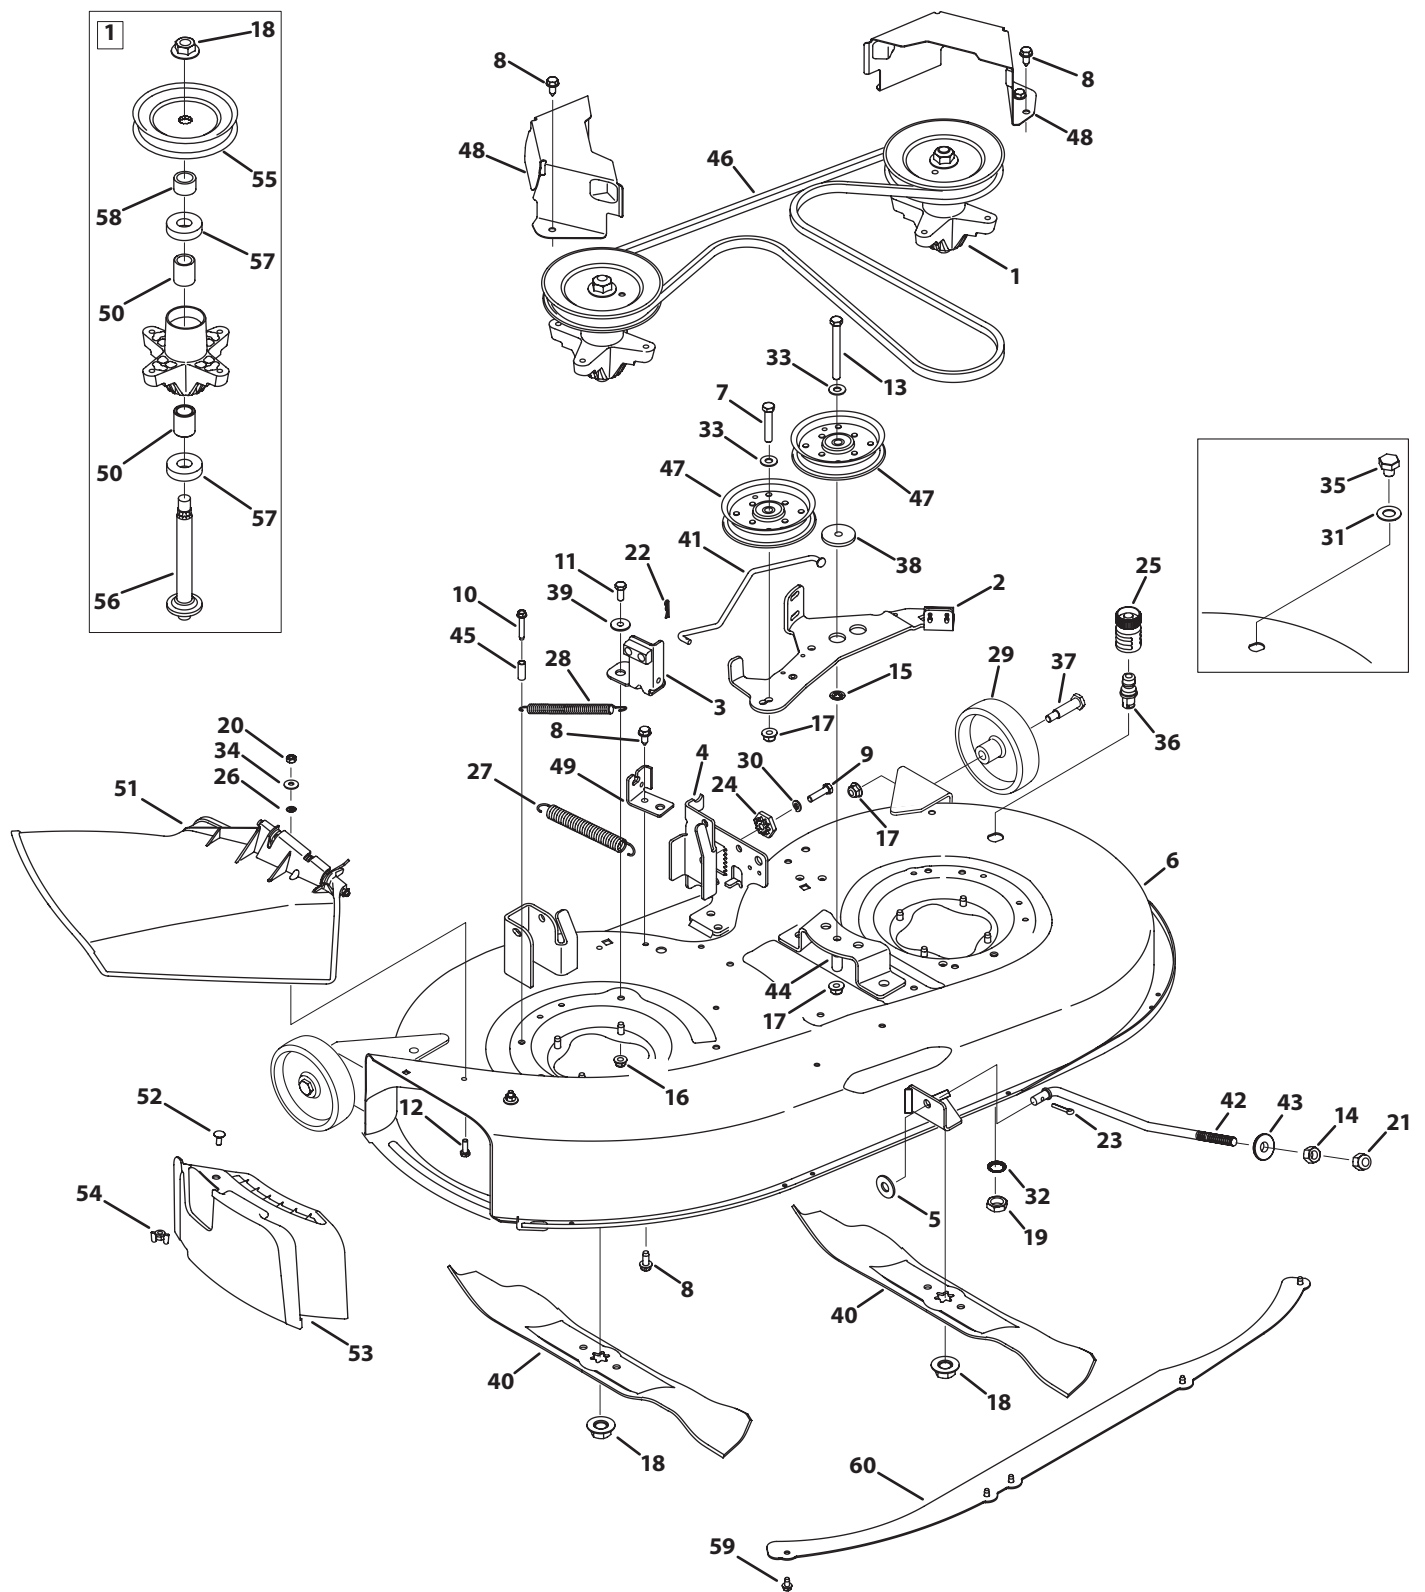

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	618-04456	Pulley Spindle Assembly, 6.3 DIA	32	736-0225	Lock Washer, 5/8
2	683-04138B-0637	Deck Brake Assembly	33	936-0267	Flat Washer, .385 x .87 x .06
3	983-04167	Deck Brake Assembly		936-3000	Flat Washer, .406 x .875 x .059
4	683-04228-0637	Deck Hanger Bracket LH	34	736-0270	Bell Washer, .265 X.75 x .062
5	936-0179	Flat Washer, .531 x 1.25 x .100	35	738-04146	Bolt Plug, M16 x 1.5
6	983-04547-0691	Deck Assembly, 42" w/ Wheel	36	737-04003D	Water Nozzle
	983-04546-0637	Deck Assembly, 42" w/o Wheel - Black	37	938-0373	Shoulder Bolt. .496 x 1.525:3/8-16
	983-04546-0665	Deck Assembly, 42" w/o Wheel - Green	38	738-04162A	Shoulder Spacer, .8840 x .190
	983-04546-0638	Deck Assembly, 42" w/o Wheel - Red	39	738-04166	Shoulder Spacer, .5000 x .1475
7	710-0347	Hex Screw, 3/8-16 x 1.75	40	942-0616A	3 in 1 Blade
8	710-04484	Screw, 5/16-18 x .750	41	747-04379A	Brake Control Rod
9	710-0528	Hex Screw, 5/16-18 x 1.25	42	747-04944A	Deck Lift Rod
10	710-0778	Screw, 1/4-20 x 1.500	43	748-04069	Deck Lift Pivot
11	710-3008	Hex Screw, 5/16-18 x .75	44	750-04446	Spacer, 3/8 ID x .68 OD x 1.46 LG
12	710-3015	Hex Screw, 1/4-20 x .75	45	750-0566A	Spacer, .260 x .375 x 1.030 LG
13	710-3085	Hex Screw, 3/8-16 x 3.50	46	954-04060B	V-Type Belt
14	712-0206	Hex Nut, 1/2-13:GR5	47	756-04129B	Idler Pulley
15	712-0229	Push Nut, 3/8	48	783-04327B-0637	Belt Cover - Powder Black
16	712-04063	Flangelock Nut, 5/16-18		783-04327B-0638	Belt Cover - Red
17	712-04065	Flangelock Nut, 3/8-16		783-04327B-0665	Belt Cover - Green
18	712-0417A	Flange Nut, 5/8-18		783-04327B-0691	Belt Cover - Black Jack
19	912-0641	Hex Nut, M16-1.5	49	783-04740-0637	Deck Engage Cable Bracket
20	712-3006	Hex Nut, 1/4-20	50	750-1000	Spacer, .80 x 1.10 x 1.322
21	712-3083	Hex Locknut, 1/2-13	51	931-1032B	Chute Assembly
22	914-0104	Cotter Pin, .072 DIA. x 1.13 LG		631-0216A	Chute Assembly
23	714-3002	Cotter Pin, 3/16 x 1.00	52	710-0134	Carriage Screw, 1/4-20 x .62
24	917-04074	Deck Gear Adjuster	53	731-2363	Mulch Plug
25	921-04041	Water Nozzle Adaptor	54	712-3087	Wing Nut, 1/4-20
26	726-0233	Push Nut, .25 ID X .50 OD	55	956-1227	Deck Pulley, 6.3 Diameter
27	732-04280B	Extension Spring, 0.75 OD x 6.375	56	938-04241	Spindle Shaft, 5.50 LG
28	732-04287	Extension Spring, .500 DIA x 6.375	57	941-0919	Ball Bearing, .787ID x 1.85OD x .551
29	734-0973	Deck Wheel, 5.0 x 1.38	58	750-04739	Spacer, .820 x 1.150 x .480
30	936-0119	Lock Washer, 5/16	59	710-0599	Screw, 1/4-20 x .500
31	736-0187	Flat Washer, 1/2 x 1.25 x .10	60	753-0884	42" Deck Skirt

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

46" Deck

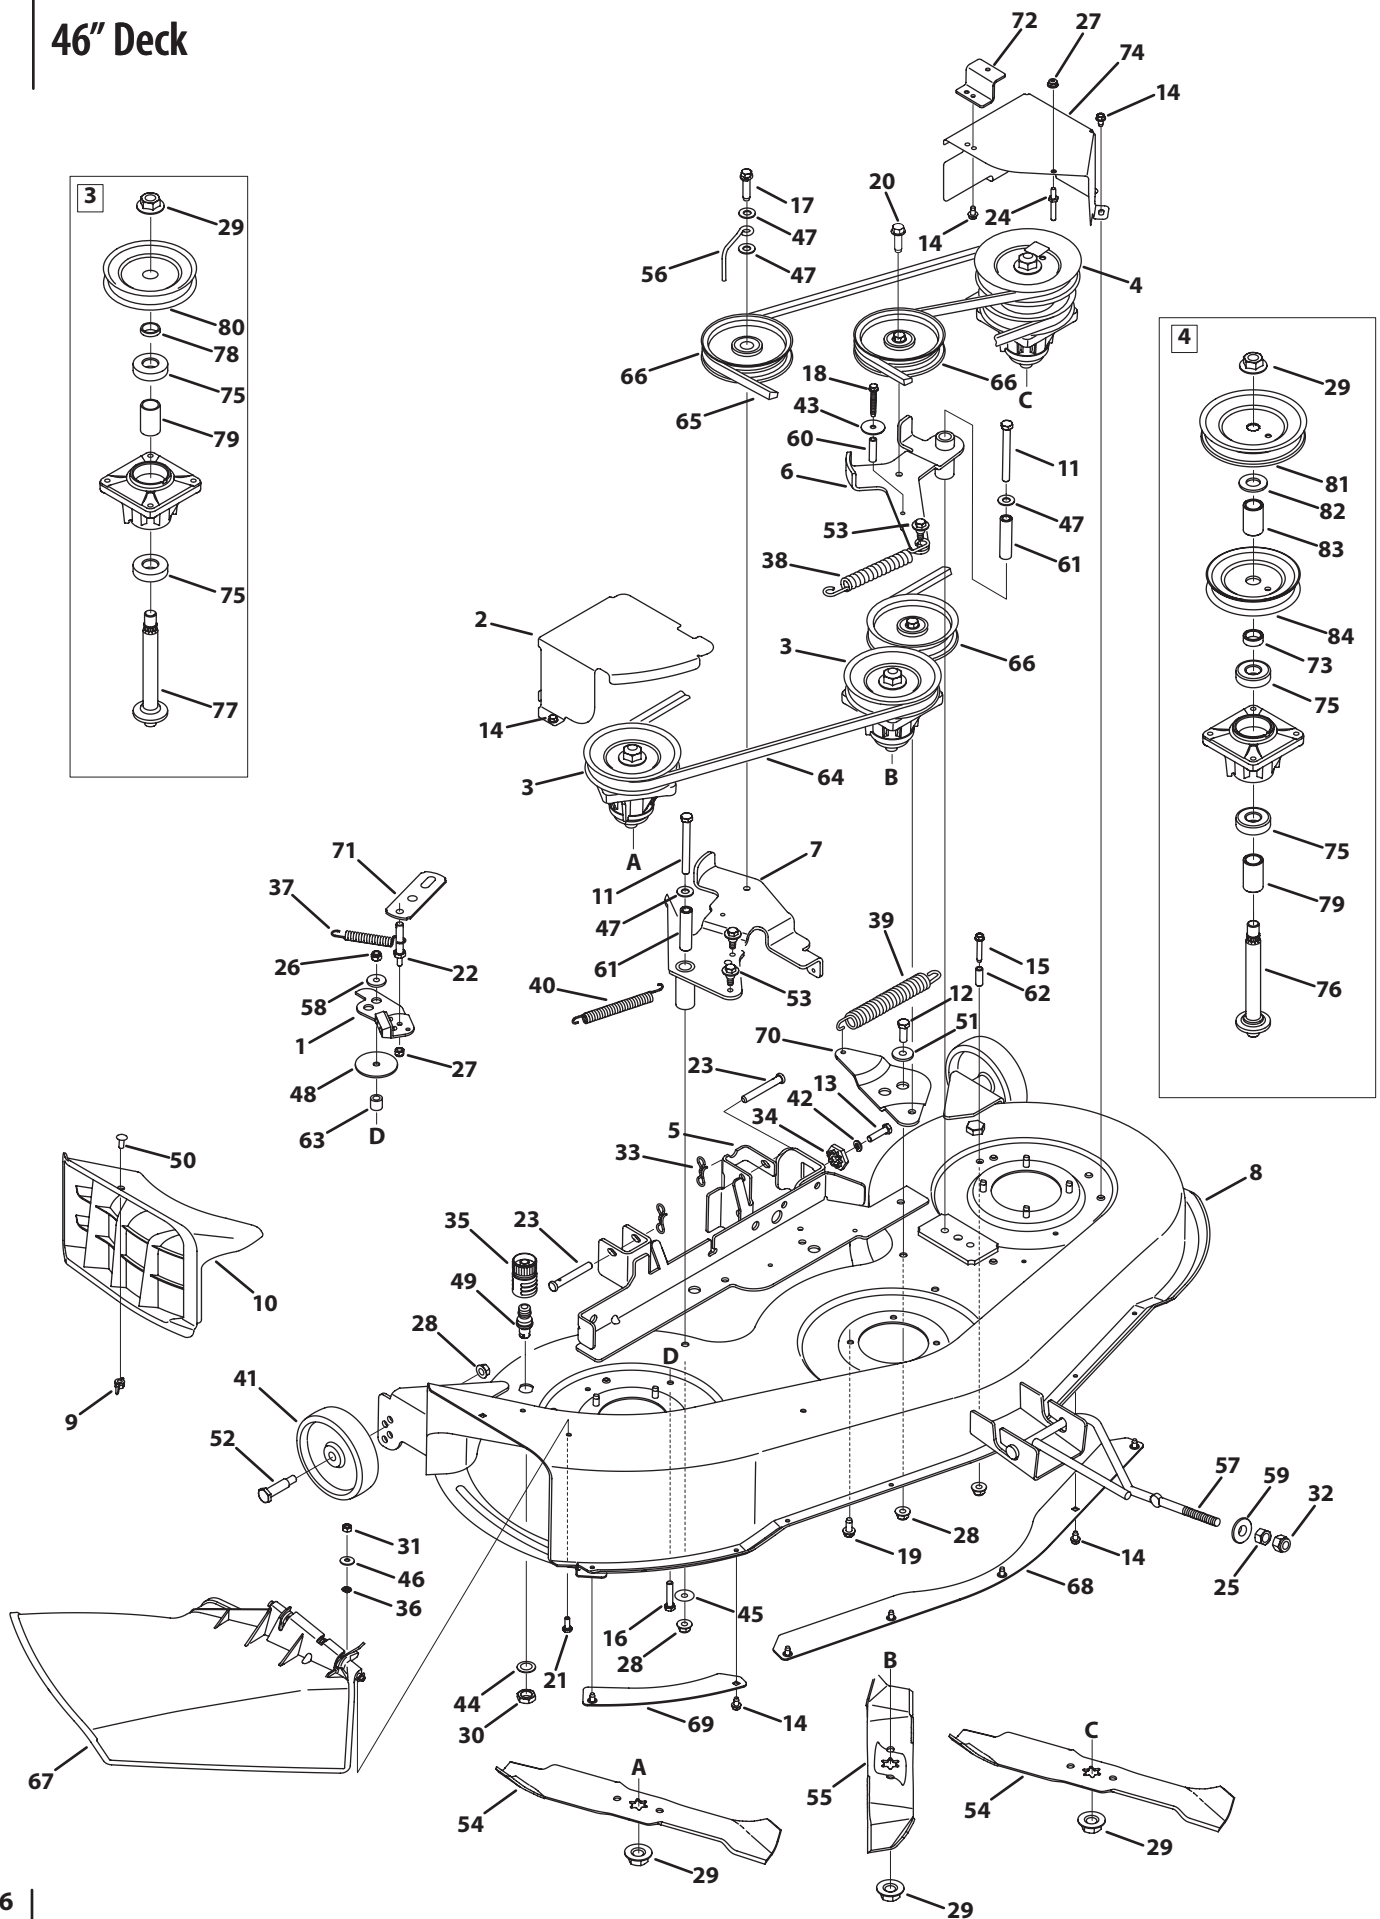


Ref. No.	Part No.	Description
1	97116	Deck Brake Assembly
2	71258E	46" Deck Belt Cover, RH
3	918-0430B	Spindle Assembly, 5.00 Dia. w/ Stud
4	918-04134C	Spindle Assembly, Double Pulley
5	683-0254B-0637	Deck Hanger Bracket Assembly - Powder Black
	683-0254B-0665	Deck Hanger Bracket Assembly - Green
	683-0254B-0691	Deck Hanger Bracket Assembly - Black Jack
6	683-04250A-0637	46" LH Idler Bracket
7	683-04251A-0637	46" RH Idler Bracket
8	983-04413A-0637	46" Side Deck Assembly - Powder Black
	983-04413A-0665	46" Side Deck Assembly - Green
	983-04413A-0691	46" Side Deck Assembly - Black Jack
9	712-3087	Wing Nut, 1/4-20
10	731-05264	Mulch Plug
11	710-04754	Hex Screw, 3/8-16 x 3.50
12	710-0514	Hex Screw, 3/8-16 x 1.0
13	710-0528	Hex Screw, 5/16-18 x 1.25
14	710-0599	Screw, 1/4-20 x .500
15	710-0778	Screw, 1/4-20 x 1.500
16	710-0805	Hex Screw, 5/16-18 x 1.50
17	710-1007	Screw, 3/8-16 x 1.500
18	710-1026	Screw, 1/4-20 x 1.750
19	710-1260A	Screw, 5/16-18 x .750
20	710-1315	Screw, 3/8-16 x 1.250
21	710-3015	Hex Screw, 1/4-20 x .75
22	711-04636	Pin, 1/4-20 x 3/8 x x 2.685
23	711-04669	Clevis Pin, 3/8 x 2.75
24	911-0993	Belt Guard Pin, 1/4 x 1.43
25	912-0206	Hex Nut, 1/2-13
26	712-04063	Flangelock Nut, 5/16-18
27	712-04064	Flangelock Nut, 1/4-20
28	712-04065	FLangelock Nut, 3/8-16
29	712-0417A	Flange Nut, 5/8-18
30	912-0641	Hex Nut, M16-1.5
31	712-3006	Hex Nut, 1/4-20
32	712-3083	Hexlock Nut, 1/2-13

Ref. No.	Part No.	Description
33	714-04043	Cotter Pin, Bow-Tie
34	917-04074	Deck Adjuster Gear
35	921-04041	Water Nozzle Adapter
36	726-0233	Push Nut, .25 x .50
37	932-0429A	Extension Spring, .50 x 3.97
38	732-04400	Extension Spring, .75 x 6.835
39	932-0594A	Extension Spring, .91 x 7.33
40	732-0814	Extension Spring, .56 x 5.52
41	734-0973	Deck Wheel, 5.0 x 1.38
42	936-0119	Lock Washer, 5/16
43	936-0211	Flat Washer, .285 x 1.25 x .06
44	736-0225	Lock Washer, 5/8
45	736-0258	Flat Washer, .385 x 1.0 x .135
46	736-0270	Bell Washer, .265 x .75 x .062
47	936-0300	Flat Washer, .406 x .875 x .059
48	736-0418A	Flat Washer, .34 x 2.25 x .10
49	737-04003D	Deck Water Nozzle
50	710-0134	Carriage Screw, 1/4-20 x .62
51	938-0347	Shoulder Spacer, .625 x .169
52	938-0373	Shoulder Bolt, 3/8-16 x .496 x 1.525
53	738-04091A	Shoulder Screw, .5/16-18 x 43 x .29
54	942-0611A	3 in 1 Blade, 16.28
55	942-0612A	3 in 1 Blade, 14.88
56	747-04530	Belt Keeper Rod
57	747-04645	46" Front Deck Rod
58	748-0234	Shoulder Spacer
59	748-04069	Deck Lift Pivot
60	750-04456	Spacer, .260 x .372 x 1.420
61	750-04999	Spacer, .380 x .625 x 2.515
62	750-0566A	Spacer, .260 x .375 x 1.030
63	750-1320	Spacer, .375 x .63 x .595
64	954-0349	V-Type Belt, 79.10
65	954-04142	V-Type Belt, 91.4
66	756-04129B	Idler Pulley, 4.25 Diameter
67	931-1032B	Chute Assembly Side Discharge
68	783-0141-0637	46" Deck Center Skirt
69	783-0142-0637	46" Deck RH Skirt
70	783-04641A-0637	46" Idler Bracket
71	783-05321-0637	46" Brake Bracket
72	783-05360-0637	Deck Stop Bracket
73	750-1304	Spacer, .792 x 1.060 x .400

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


46" Deck

Ref. No.	Part No.	Description
74	783-1348D-0637	46" LH Belt Cover - Powder Black
	783-1348D-0665	46" LH Belt Cover - Green
	783-1348D-0691	46" LH Belt Cover - Black Jack
75	941-0919	Ball Bearing, .787 x 1.85 x .551
76	938-1128	Spindle Shaft, 6.58
77	738-0927	Spindle Shaft, 4.450
78	748-0434	Spacer, .750 x 1.150 x .230
79	750-04936	Spacer, .792 x 1.060 x 1.860
80	756-1187	Deck Pulley, 5.00 Diameter
81	756-1188	Deck Pulley, 5.75 Diameter
82	736-0315	Flat Washer, .760 x 1.50 x .120
83	750-04440	Spacer, .792 x 1.060 x 1.680
84	756-04094	Deck Pulley, 5.00 x .80

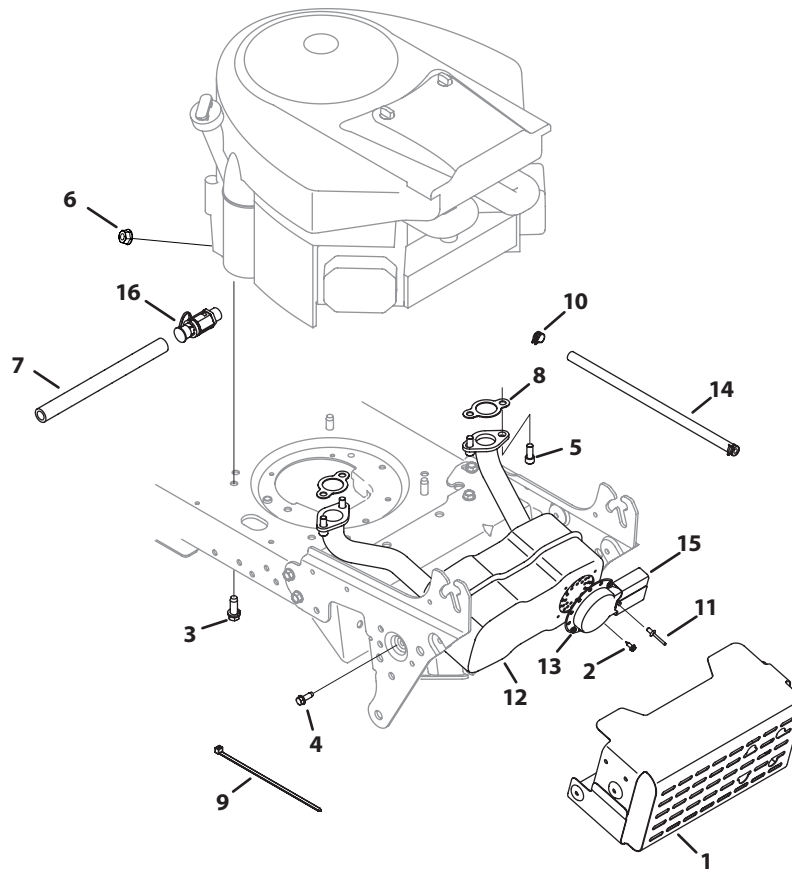


Ref. No.	Part No.	Description
1	683-04549-0637	Muffler Shield Assembly with Weld
2	710-0227	Screw, 8-18 x .500
3	710-04683	Screw, 3/8-16 x 1.0
4	710-0642	Screw, 1/4-20 x .750
5	710-1314A	Socket Screw, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	751-3141-14	Extension Hose, Oil Drain
8	721-0460	Twin Intek, Exhaust Gasket
9	725-0157	Cable Tie
10	726-0205	Clamp Hose, .490 diameter
11	728-04000	Rivet, .188 x .300
12	751-10542	Briggs Intek, Twin Muffler
13	751-0564B	Muffler Deflector
14	751-10349-28	Fuel Hose, Low Permeation
15	751-10353	Muffler Deflector Long
16	951-10517A	Oil Drain

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

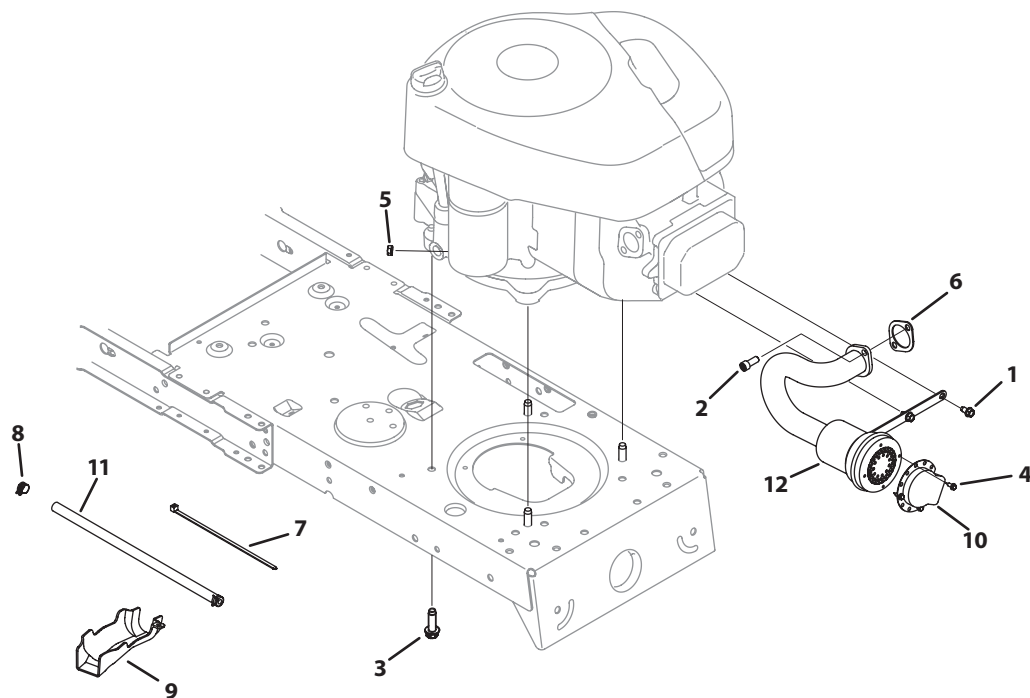


Ref. No.	Part No.	Description
1	710-0599	Screw, 1/4-20 x .500
2	710-1314A	Socket Screw, 5/16-18 x .750
3	710-04683	Screw, 3/8-16 x 1.0
4	710-0227	Screw, 8-18 x .500
5	712-0271	Sems Nut, 1/4-20
6	BS-692236	Exhaust Gasket, 10 HP Briggs
7	725-0157	Cable Tie
8	726-0205	Clamp Hose, .490 diameter
9	731-05628	Oil Drain Sleeve
10	751B222261	Muffler Deflector
11	751-10349-28	Fuel Hose, Low Permeation
12	751-9986A	Muffler

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

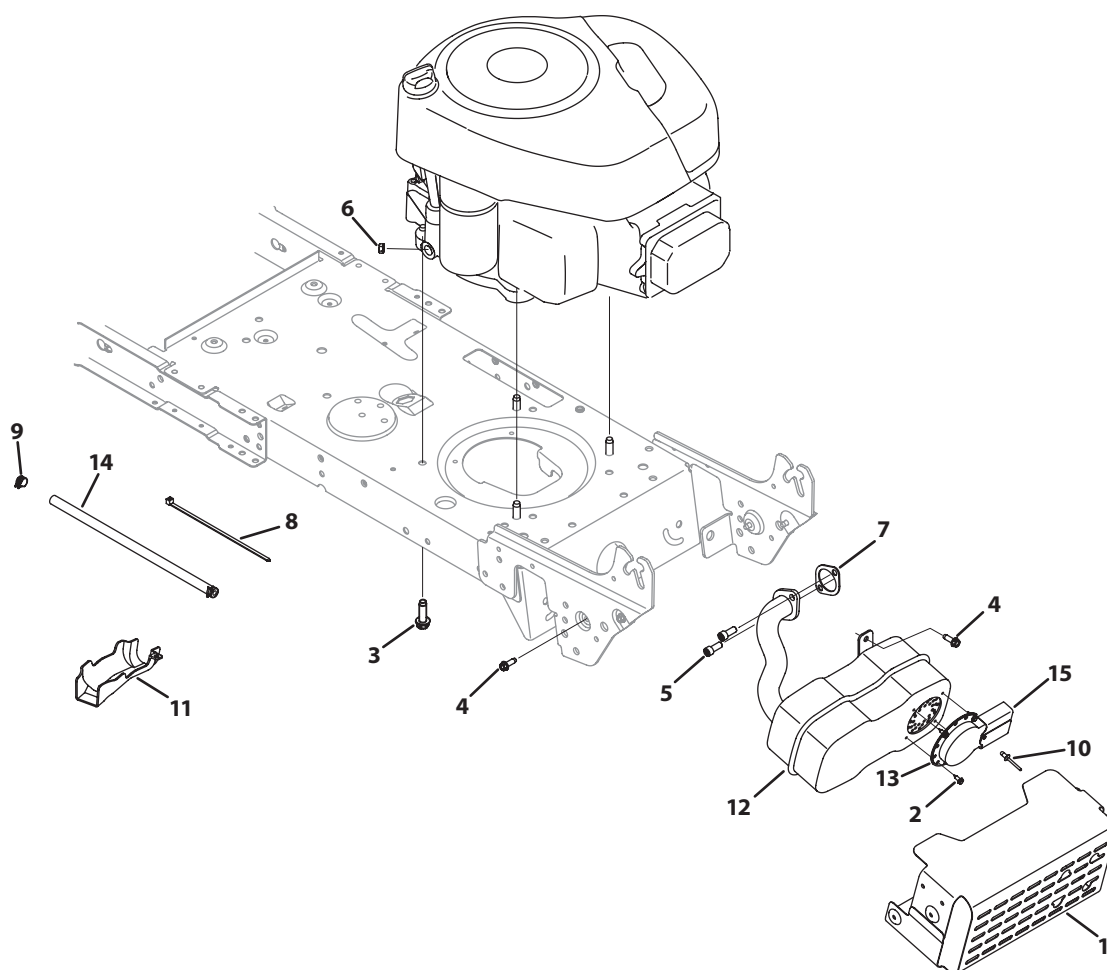


Ref. No.	Part No.	Description
1	683-04549-0637	Muffler Shield Assembly with Weld
2	710-0227	Screw, 8-18 x .500
3	710-04683	Screw, 3/8-16 x 1.0
4	710-0642	Screw, 1/4-20 x .750
5	710-1314A	Socket Screw, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	BS-692236	Exhaust Gasket, 10 HP Briggs
8	725-0157	Cable Tie
9	726-0205	Clamp Hose, .490 diameter
10	728-04000	Rivet, .188 x .300
11	731-05628	Oil Drain Sleeve
12	751-10448A	Muffler, Single Inlet
13	751-0564B	Muffler Deflector
14	751-10349-28	Fuel Hose, Low Permeation
15	751-10353	Muffler Deflector Long

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

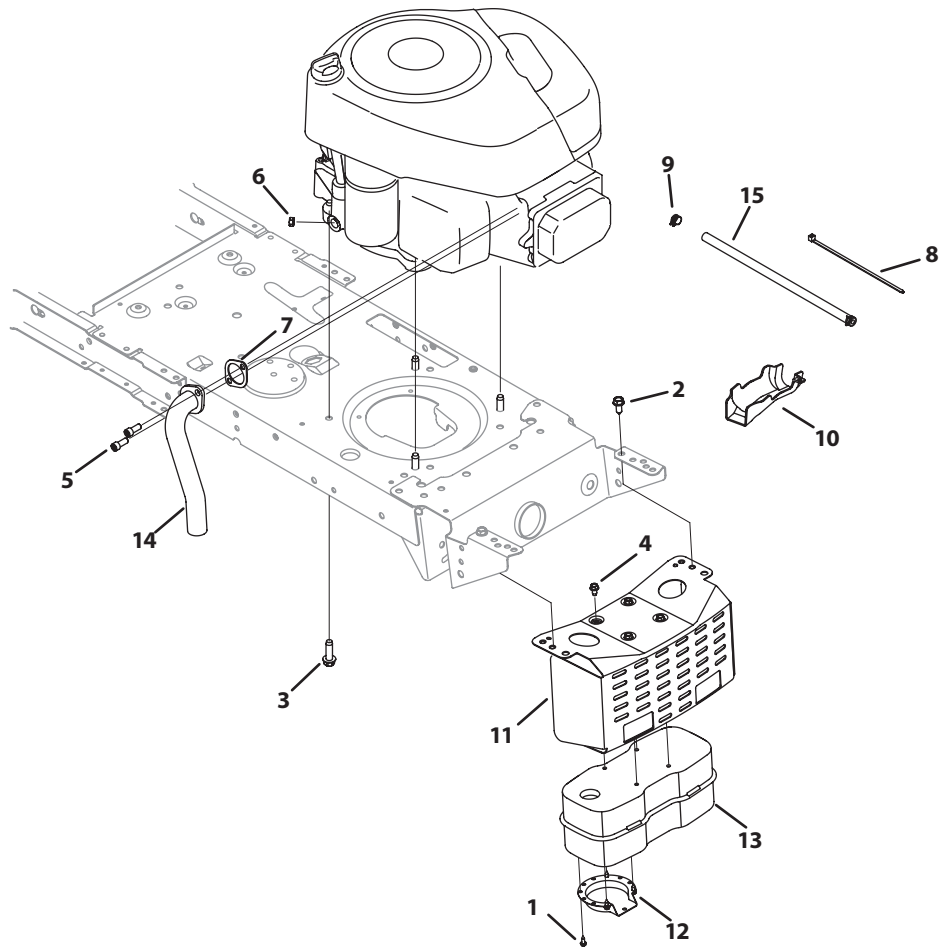


Ref. No.	Part No.	Description
1	710-0227	Screw, 8-18 x .500
2	710-04484	Screw, 5/16-18 x .750
3	710-04683	Screw, 3/8-16 x 1.000
4	710-0599	Screw, 1/4-20 x .500
5	710-1214	Socket Screw, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	BS-692236	Exhaust Gasket, 10 HP Briggs
8	725-0157	Cable Tie
9	726-0205	Hose Clamp, .490 Diameter
10	731-05628	Oil Drain Sleeve
11	783-0615E-0637	Muffler Bracket
12	751-0564B	Muffler Deflector
13	751-0617C	Single Inlet Muffler
14	751-0619A	Exhaust Pipe, Single Briggs
15	751-10349-28	Fuel Hose, Low Permeation

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

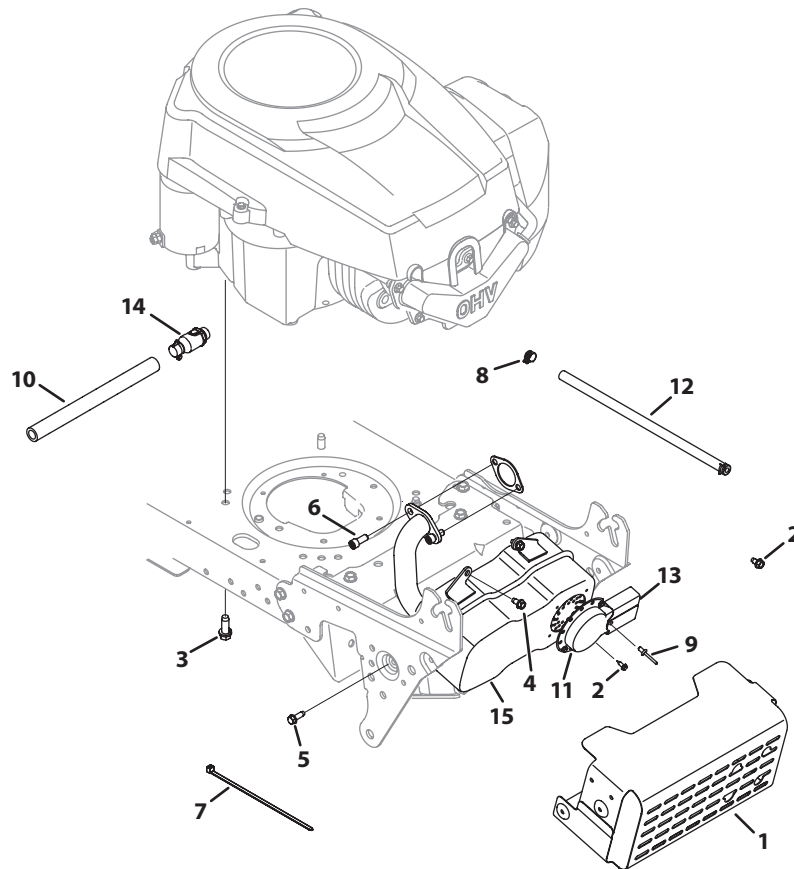


Ref. No.	Part No.	Description
1	683-04549-0637	Muffler Shield Assembly with Weld
2	710-0227	Screw, 8-18 x .500
3	710-04683	Screw, 3/8-16 x 1.0
4	710-0599	Screw, 1/4-20 x .500
5	710-0642	Screw, 1/4-20 x .750
6	710-1314A	Socket Screw, 5/16-18 x .750
7	725-0157	Cable Tie
8	726-0205	Clamp Hose, .490 diameter
9	728-04000	Rivet, .188 x .300
10	751-3141-14	Oil Drain, Extension Hose
11	751-0564B	Muffler Deflector
12	751-10349-28	Fuel Hose, Low Permeation
13	751-10353	Muffler Deflector Long
14	951-10517A	Oil Drain
15	751-11022	Muffler

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

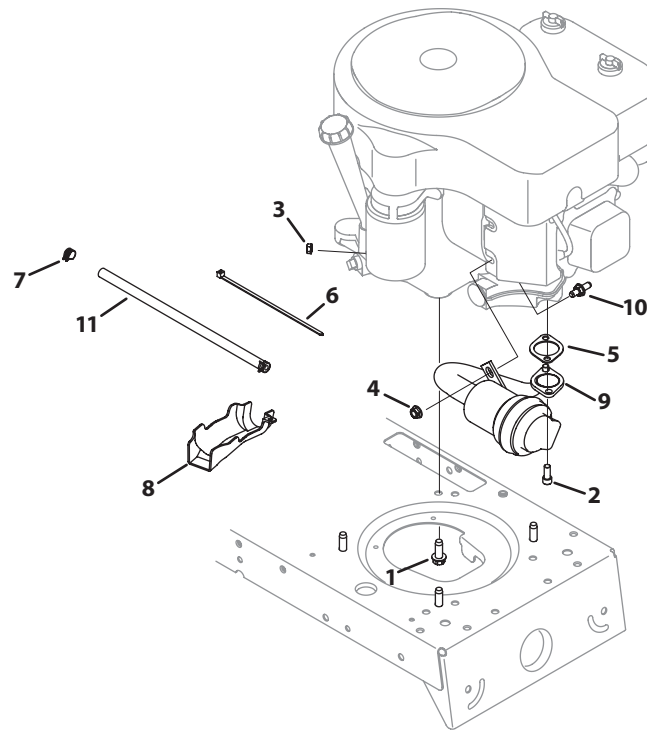


Ref. No.	Part No.	Description
1	710-04683	Screw, 3/8-16 x 1.0
2	710-1314A	Socket Screw, 5/16-18 x .750
3	712-0271	Sems Nut, 1/4-20
4	712-3004A	Flangelock Nut, 5/16-18
5	BS-692236	Exhaust Gasket, 10 HP Briggs
6	725-0157	Cable Tie
7	726-0205	Clamp Hose, .490 diameter
8	731-05628	Oil Drain Sleeve
9	751-10713	Muffler
10	751T72217	Stud, 5/16-18
11	751-10349-28	Fuel Hose, Low Permeation

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

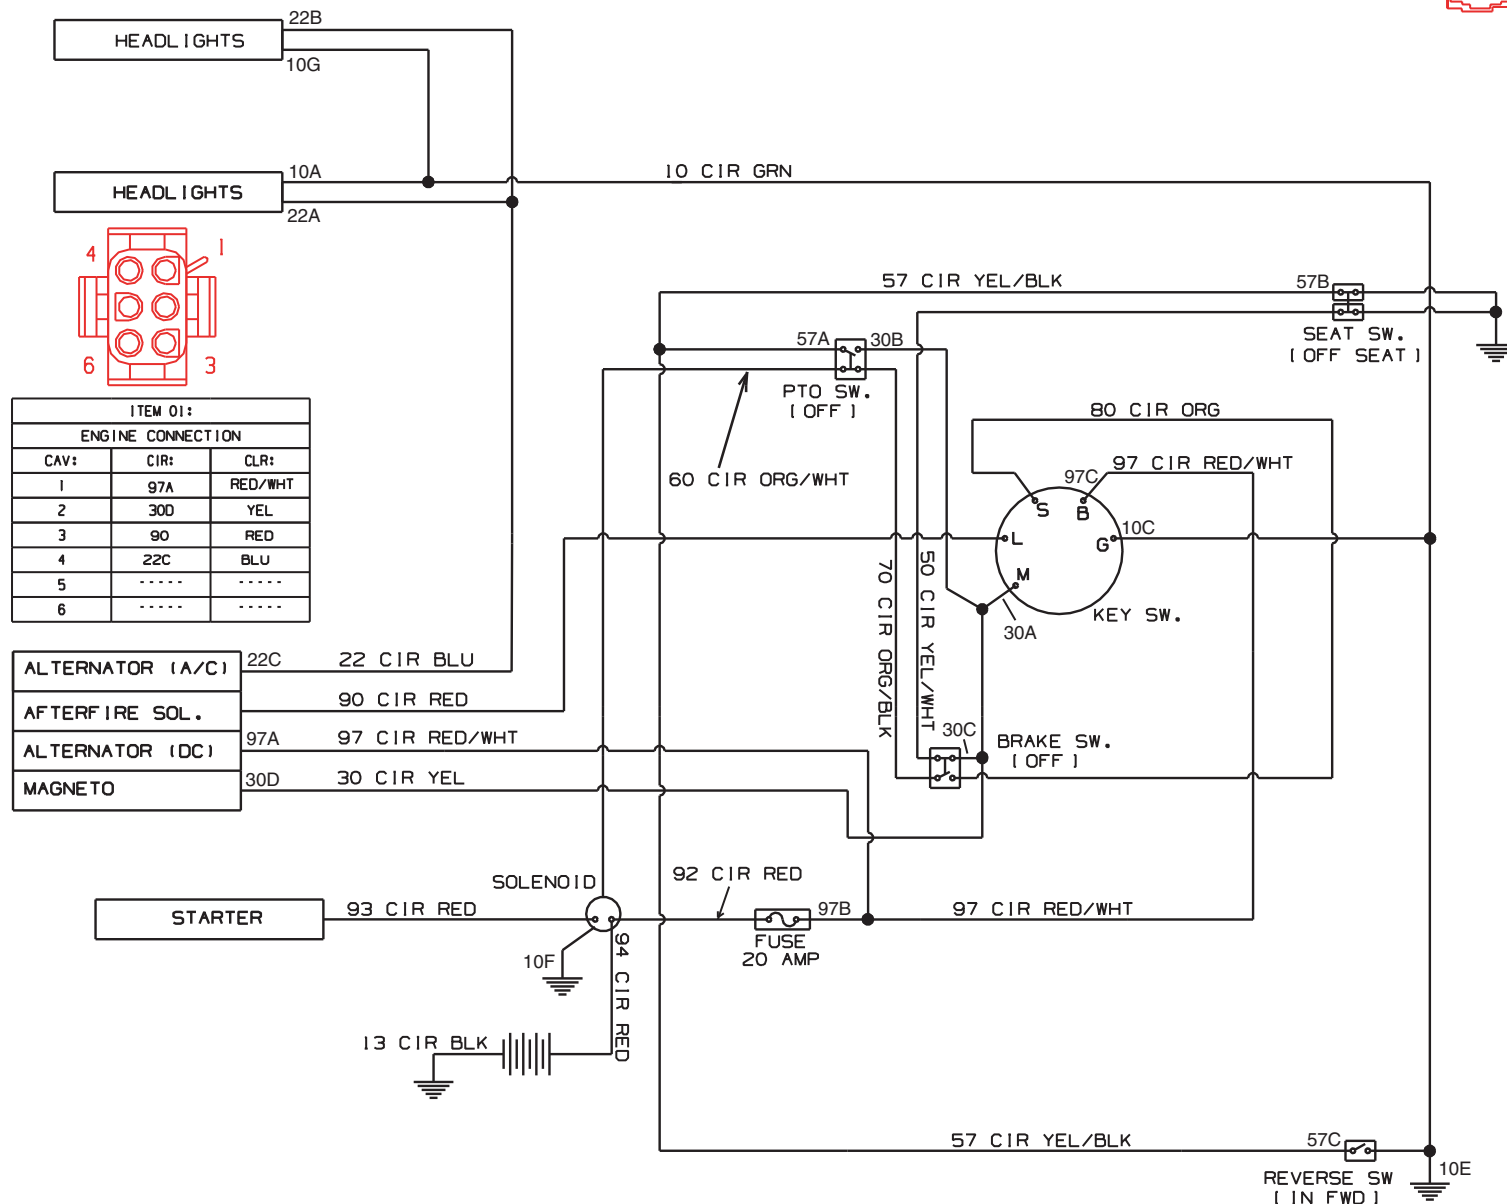

ITEM 06:		
KEY SWITCH		
CAV:	CIR:	CLR:
G	10C	GRN
L	90	RED
S	80	ORG
B	97C	RED/WHT
M	30A	YEL

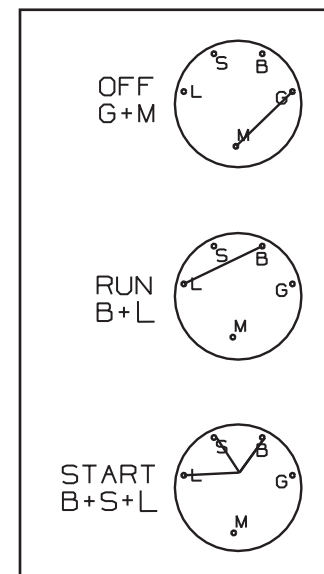

725-04567E
725-04567D
725-04567C
725-04567B
725-04567A
725-04567