





ILLUSTRATED PARTS MANUAL

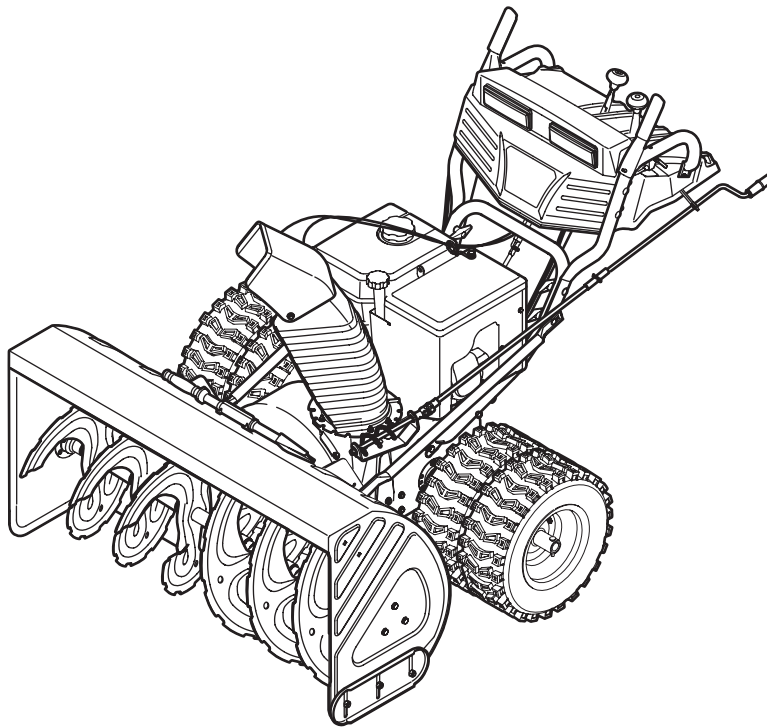

Two Stage Snow Thrower — Polar Blast 4510

TROY-BILT LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

Augers, Auger Housing, and Gearbox

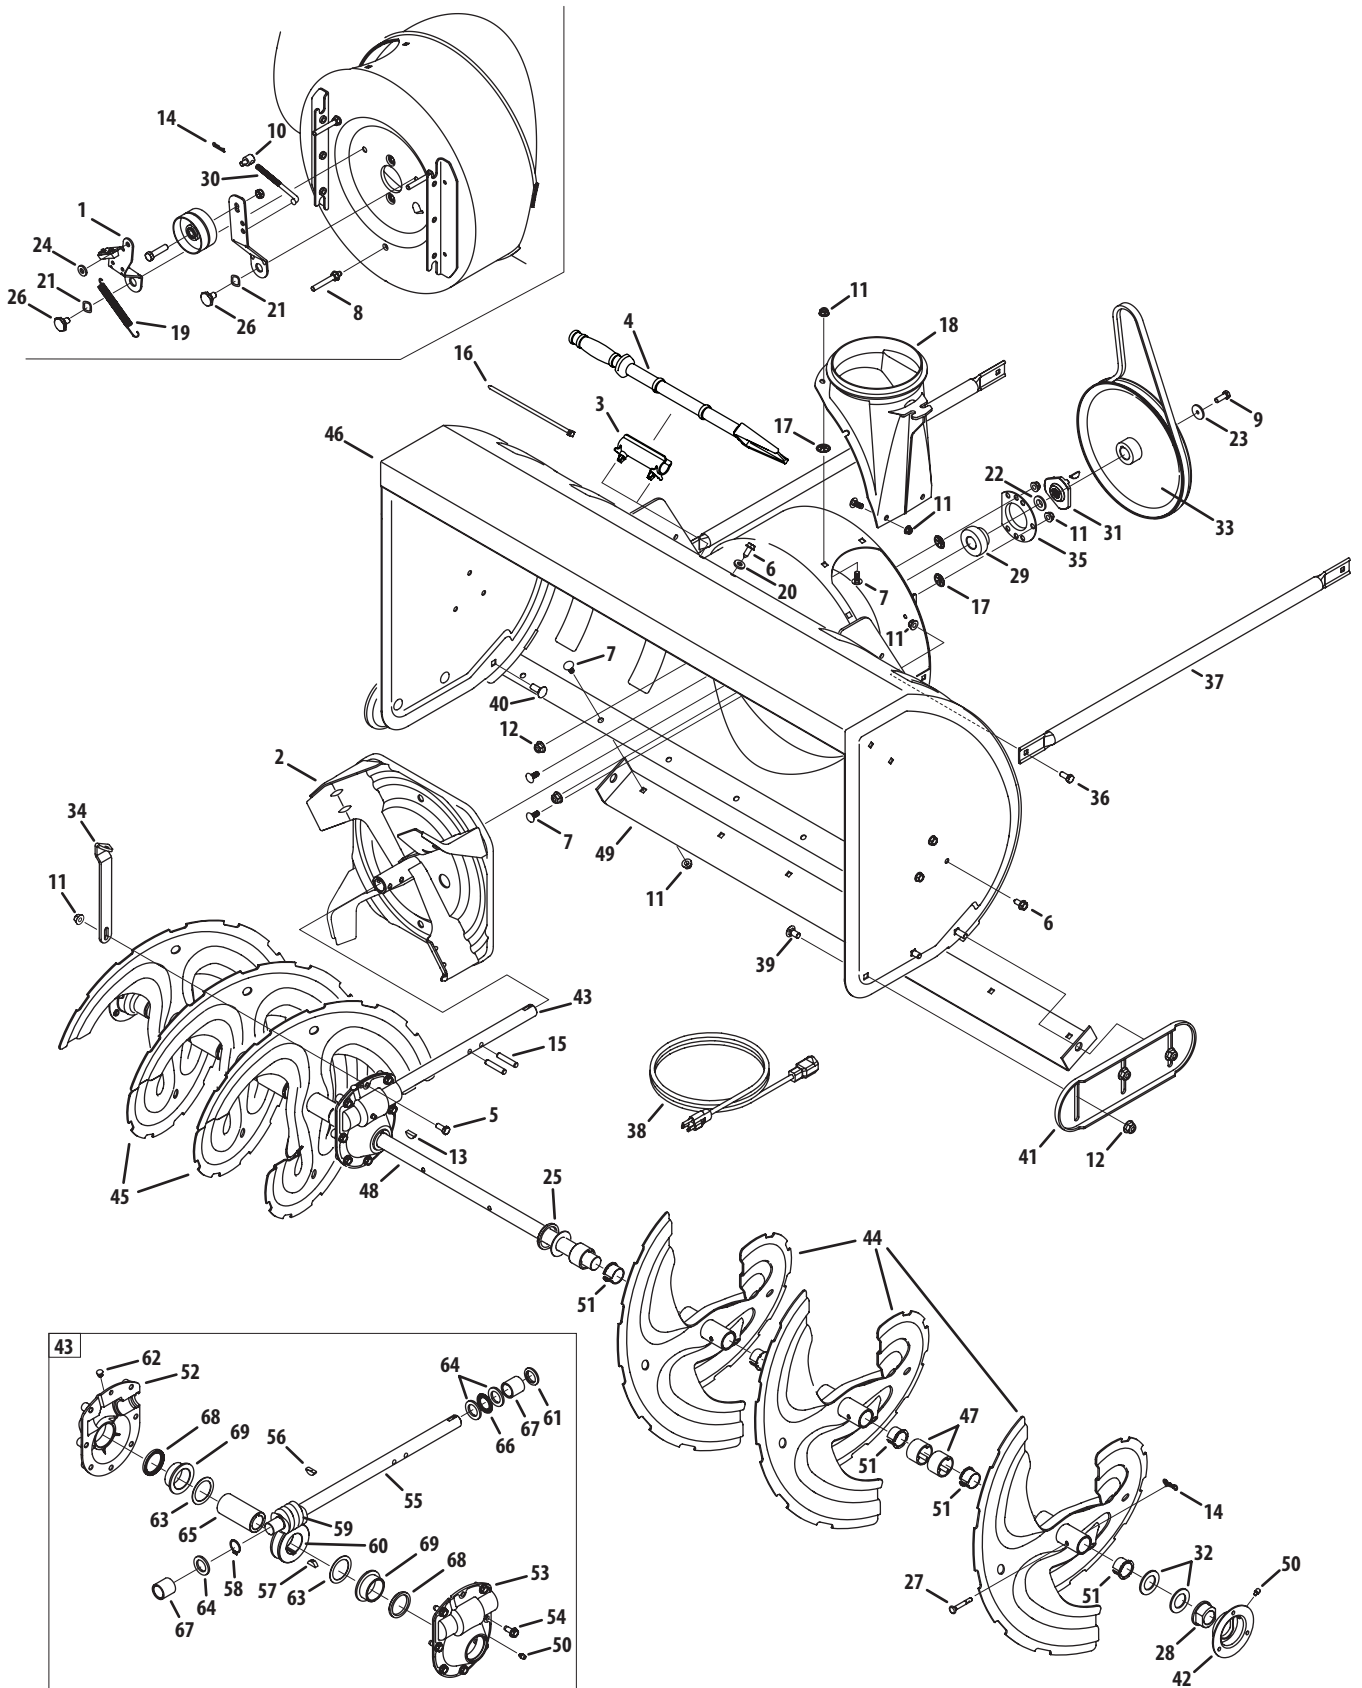


Augers, Auger Housing, and Gearbox

Ref.	Part Number	Description
1.	918-0281A	Bracket Assembly, Auger Brake
2.	684-0090B-0637	Impeller, 16"
3.	731-2635	Clip, Mounting
4.	731-2643	Tool, Clean-out
5.	710-0376	Screw, Hex Cap, 5/16-18 x 1.0 Gr5
6.	710-04484	Screw, 5/16-18 x .750
7.	710-0451	Screw, Carriage, 5/16-18 x .75
8.	710-04606A	Screw w/Stud, 5/16-18 x .4300
9.	710-1245B	Screw, Hex Cap Lock, 5/16-24, 875
10.	911-0677	Ferrule
11.	712-04063	Nut, Hex Flange Lock, 5/16-18
12.	712-04065	Nut, Hex Flange Lock, 3/8-16
13.	914-0135	Key, Woodruff, 1/4 x 3/4
14.	714-04040	Pin, Bow-tie Cotter
15.	915-0118	Pin, Spiral, 5/16 x 1.75
16.	725-0157	Cable Tie
17.	926-04012	Nut, Push
18.	731-1696B	Adapter, Chute, 6"
19.	732-0858	Spring, Extension
20.	936-0159	Washer, Flat, .349 x .879 .063
21.	736-0174	Washer, Wave, .625 x .885 x .015
22.	736-0188	Washer, Bell., .78 x 1.49 x .06
23.	736-0505	Washer, Flat, .34 x 1.5 x .15 Ht.
24.	936-3008	Washer, .344 x .75 x .12
25.	736-3046A	Washer, 1.01 x 1.86 x .06
26.	938-0281	Screw, Shoulder, .625 x .17
27.	738-04155	Pin, Shear, .25 x 1.75
28.	741-0192	Bearing, Flange w/Flats
29.	941-04024	Bearing, Self Aligning
30.	747-0980A	Rod, Auger Idler
31.	748-04067A	Adapter, Pulley w/Pins
32.	950-04020	Spacer, 1.004 x 1.375 x .25
33.	756-04244A	Pulley, Auger Drive, 10.0
34.	790-00264A-0637	Bracket, Gear Box Support
35.	05244B	Housing, Bearing

Ref.	Part Number	Description
36.	710-3008	Screw, 5/16-18 x .75 GR5
37.	749-04384-0637	Tube, Support
38.	929-0071	Extension Cord, 110V
39.	710-0389	Screw, Carriage, 3/8-16 x .75
40.	710-3168	Screw, Carriage, 3/8-16 x 1.00
41.	784-5697-0638	Skid Shoe
42.	784-0315A-0637	Housing, Bearing
43.	918-04514	Gear Box Assembly
44.	684-04151-0638	Spiral Assembly, LH
45.	684-04152-0638	Spiral Assembly, RH
46.	684-04223-0638	Housing, Auger - 45"
47.	731-05163	Spacer, 1.50 x 1.00 x 1.00
48.	738-04159	Axle, Spiral
49.	790-00280-0638	Shave Plate, 45"
50.	937-3000	Grease Fitting, 3/16
51.	741-0494	Flange Bushing
52.	918-0246	Housing Assembly, Auger, RH
53.	918-0435	Housing Assembly, Auger, LH
54.	710-1260A	Screw, LD, 5/16-18 x .750
55.	711-04714	Auger Drive Shaft
56.	914-0126	Key, Hi Pro, 3/16 x 3/4
57.	914-0135	Key, 1/4 x 3/4 Dia.
58.	716-0111	External Retainer Ring
59.	917-0299	Gear, Worm
60.	917-1425	Gear, Worm, LH
61.	921-0145	Seal, Oil
62.	721-0325	Plug
63.	936-0266	Wash, Flat, 1.52ID x 2.0 OD
64.	936-0291	Wash, Flat, .88 ID x .38 OD
65.	738-0275	Worm Gear Shaft
66.	741-0184	Bearing, Thrust
67.	941-0217	Sleeve
68.	921-0146	Oil Seal
69.	741-0670	Flange Bearing

Handles, Handle Panel & Discharge Chute

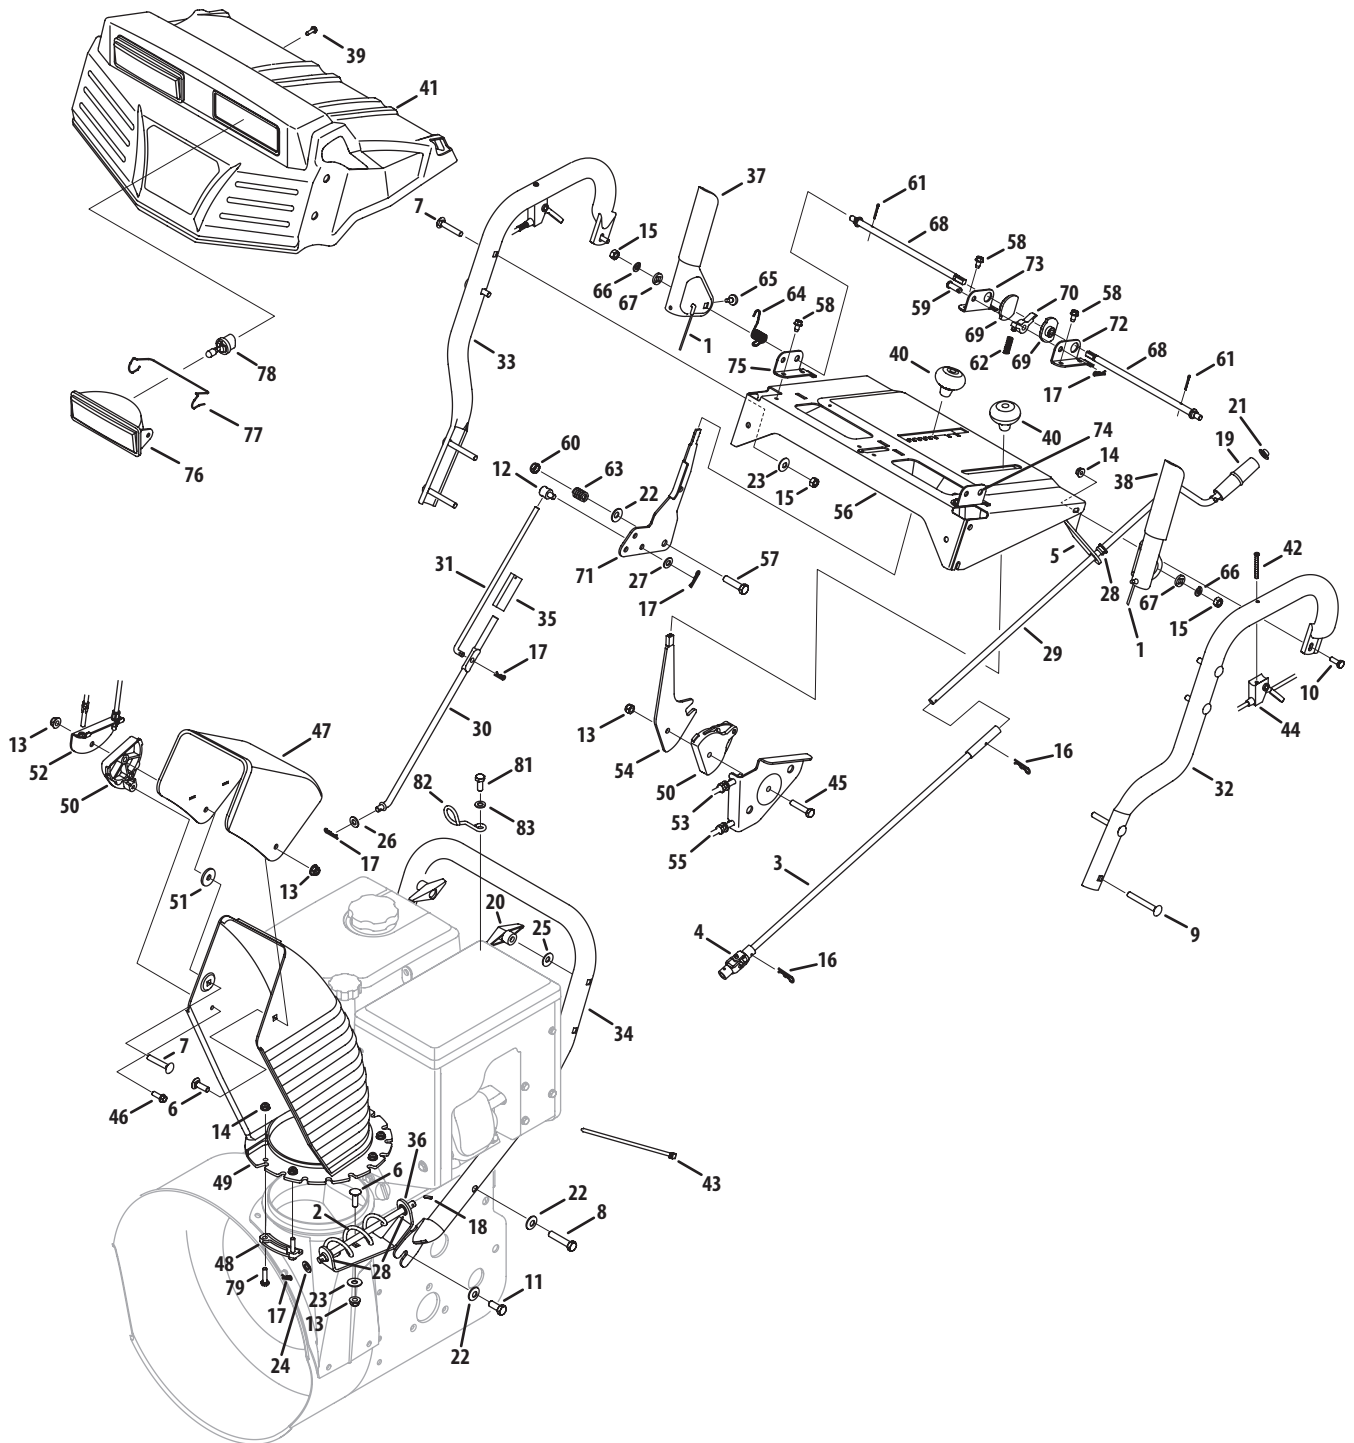

Handles, Handle Panel & Discharge Chute

Ref.	Part Number	Description
1.	646-0012	Cable Ass'y, Auger/Drive
2.	684-04308A	Chute Crank Assembly
3.	684-04309A-0637	Chute Crank Rod Assembly
4.	684-04350	Joint Block Assembly
5.	705-5266-0637	Chute Crank Bracket
6.	710-0276	Carriage Screw, 5/16-18 x 1.0
7.	710-0458	Carriage Screw, 5/16-18 x 1.75
8.	710-04682	Hex Screw, 3/8-16 x 2.00
9.	710-0572	Carriage Screw, 5/16-18 x 2.5
10.	710-3015	Hex Screw, 1/4-20 x .75
11.	710-3118	Screw, Hex, 3/8-16 x 1.00
12.	911-0677	Ferrule, 5/16-18 x .312 Dia
13.	712-04063	Flange Lock Nut 5/16-18
14.	712-04064	Flange Lock Nut 1/4-20
15.	912-3009	Hex Lock Nut, 5/16-18 GR5
16.	914-0101	Internal Cotter Pin
17.	914-0104	Internal Cotter Pin
18.	715-04095	Spring Pin, .156 dia. x .875 Lg.
19.	720-0201A	Knob, Crank
20.	720-04072A	Wing Knob, 5/16-18
21.	926-0100	Push Cap, 3/8
22.	736-0105	Bell Wash, .375 x .87 x .063
23.	936-0159	Flat Washer, .349 x .879 x .063
24.	936-0185	Flat Wash, .375 x .738 x .063
25.	736-0242	Wash, Bell, .34 x .872 x .06
26.	936-0275	Flat Wash, .344 x .688 x .065
27.	936-3008	Flat Washer, .344 x .750 x .120
28.	941-0475	Plastic Bushing, .38 ID
29.	747-0624-0637	Upper Chute Crank Rod
30.	747-0983A	Lower Shift Rod
31.	747-0997	Upper Shift Rod
32.	749-0989A-0638	Handle, Upper LH
33.	749-0990A-0638	Handle, Upper RH
34.	749-0991-0638	Handle, Lower
35.	950-0963	Shift Rod Connector
36.	790-00329-0637	Chute Crank Bracket
37.	705-5218	Engagement Handle, RH
38.	705-5219	Engagement Handle, LH
39.	710-1003	Screw, #10-16 x .625
40.	720-04039	Shift Knob
41.	731-04069	Handle Panel, 7-Style
42.	710-1625	Screw, #10-24 x 1.75

Ref.	Part Number	Description
43.	725-0157	Cable Tie
44.	746-0950A	Trigger Control
45.	710-0805	Hex Screw 5/16-18 x 1.5
46.	710-0895	Hex Screw, 1/4-15 x .75
47.	731-0846C	Upper Chute, 6.0
48.	731-0851A	Chute Flange Keeper
49.	731-0903E	Lower Chute
50.	731-1313C	Cbl. Guide, Chute Tilt
51.	936-0231	Flat Wash, .344 x 1.125 x .12
52.	784-5594-0637	Cable Bracket
53.	746-0902	Chute Control Cable, 66"
54.	784-5604A-0637	Chute Tilt Handle
55.	746-0903	Chute Control Cable w/Clip
56.	684-0102A-0637	Handle Panel
57.	710-0459A	Hex Screw, 3/8-24 x 1.5
58.	710-0599	Hex Screw, 1/4-20 x .5
59.	711-0653	Clevis Pin, .312 x 1.0
60.	912-0116	Insert Nut, 3/8-24
61.	914-0507	Cotter Pin, 3/32 x .75
62.	732-0145	Compression Spring
63.	732-0193	Compression Spring
64.	732-0746	Torsion Spring
65.	935-0199A	Rubber Bumper
66.	936-0119	Lock Washer, 5/16
67.	736-0509	Flat Wash, .35 Sq x .72 x .134
68.	747-0877	Cam Rod
69.	748-0362	Handle Lock Cam
70.	948-0363	Handle Lock Pawl
71.	784-5619B-0637	Shift Handle
72.	784-5679-0637	Handle Support Bracket - LH
73.	784-5680-0637	Handle Support Bracket - RH
74.	784-5681	Handle Support Bracket - LH
75.	784-5682-0637	Handle Support Bracket - RH
76.	925-1672	Light Assembly
77.	747-1136	Headlight Retainer
78.	925-1658	Lamp
79.	710-0597	Hex Screw 1/4-20 x 1.0
80.	629-04010A*	Dual Light Harness
81.	710-04022	Hex Head Screw, MB-1.25
82.	732-04677	Cable Guide
83.	736-0264	Flat Washer, .330 x .630 x .0635

* Not Shown


Snow Thrower Drive System

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	05244B	Housing, Bearing	40.	936-0300	Wash, .406 x .875 x .059
2.	618-0279P	Dogg, Steering Drive, LH	41.	936-0329	Washer, Lock, 1/4
3.	618-0280P	Dogg, Steering Drive, RH	42.	711-04615	Pin, Clevis
4.	918-0282E	Shaft Assembly, Steering	43.	914-0149B	Pin, Internal Cotter
5.	918-04178	Assembly, Friction Wheel	44.	937-3000	Fitting, Lube, 3/16 Drive
	718-04034	Wheel, Friction, Bonded	45.	738-0143	Screw, Shldr., .498 x .34
	710-0896	Screw, Hex Wash	46.	738-0279	Spindle, Drive Plate
6.	684-0118B-0637	Bracket, Auger Actuator	47.	738-0924A	Screw, Hex Shldr., 1/4-28
7.	684-0119B-0637	Bracket, Drive Actuator	48.	741-0163A	Ass'y, Bearing/Housing
8.	684-0161-0637	Arm, Shift	49.	941-04025	Bearing, Self Aligning
9.	984-04103	Rod Assembly, Shift	50.	741-04108	Bearing, Hex Flange
10.	684-04212-0637	Brkt, Friction Drive Suprt.	51.	941-0563	Bearing, Ball
11.	684-04235	Sprocket, 32T	52.	741-0747	Bush, Flg, .5625 ID x 1.375 x .4375
12.	710-04484	TT Screw, 5/16-18 x .750	53.	741-0748	Bush, Flg, .5 ID x .627 OD
13.	710-0538	Screw, Hex Cap Lock,	54.	746-0949A	Cable, Steering
14.	710-0599	Screw, Hex, 1/4-20 x .50	55.	946-0951A	Cable, Auger Idler
15.	710-0788	Screw, Hex, 1/4-20 x 1.00	56.	747-0973	Rod, Drive Clutch
16.	710-1652	Screw, Hex Wash.	57.	750-04703	Spacer, 1.01 x 1.50 x .93
17.	710-3001	Screw, Hex Cap, 3/8-16	58.	750-04717	Spacer, .49 x 7.865
18.	911-04279	Shaft, Hex Drive	59.	750-04718	Spacer, .49 x 3.545
19.	711-04605	Shaft, Actuator	60.	750-05342	Spacer, .566 x .87 x .190
20.	912-0116	Nut, Hex Insert Jam Lock	61.	750-05343	Spacer, .566 x .87 x 1.25
21.	912-0138	Nut, Hex, 1/4-28 GR5	62.	750-0903B	Spcr., .514 x .632 x 2.44
22.	712-04065	Nut, Hx Flnge Insert Lk	63.	950-0997	Spacer, .675 x 1.0 x .23
23.	912-0413	Nut, Hx Insert Jam Lk	64.	750-1302B	Spcr, .6725 x 1.125 x 2.48
24.	712-0717	Nut, Insert 3/8-16	65.	756-0344	Pulley, Drive
25.	713-0284	Chain, Endless, #41 x 36L	66.	756-0625	Roller, Cable
26.	713-0286	Chain, #420 x 40L	67.	784-0404	Retainer Bracket
27.	913-04015	Sprocket, #41 x 10T	68.	784-0406A-0637	Bracket, Frame Support
28.	914-0104	Pin, Internal Cotter	69.	784-0407-0637	Bracket, Axle Support
29.	914-0135	Key, Woodruff	70.	790-00257-0638	Cover, Upper Frame
30.	914-0388	Key, Hi-Pro, 3/16 x 5/8	71.	790-00259-0638	Cover, Lower Frame
31.	916-0104	E-Ring	72.	790-00349-0638	Trans Frame
32.	716-0136	Ring, Retaining	73.	684-04169	Idler Pulley Assembly
33.	716-04048	Ring, Retainer	74.	710-0157	Screw, Hex 5/16-24 x .75
34.	917-0302	Plate, Drive	75.	710-0191	Screw, Hex 3/8-24 x 1.25
35.	726-0221	Speed Nut, .500	76.	710-0607	Screw, Hx Wash Hd Tapp
36.	932-0121	Spring, Extension	77.	710-0624	Screw, Hex Cap, 5/16-24 x 1.50
37.	932-0209	Spring, Extension	78.	710-0654A	Screw, 3/8-16 x 1.00
38.	936-0158	Washer, Lock, 5/8	79.	710-0809	Screw, 1/4-20 x 1.25
39.	736-0242	Wsh, Bell, .34 x .872 x .06	80.	710-1245B	Screw, Hex Cap, 5/16-24 x .875


Continued on following page

Snow Thrower Drive System *(Continued)*

Ref. No.	Part No.	Description
81.	710-0347	Screw, Hex Cap, 3/8-16 x 1.75
82.	714-0118	Key, Square, 1/4 x 1.5
83.	926-04012	Nut, Push
84.	931-2531	Cover, Belt
85.	732-04308A	Torsion Spring, .850 dia. x .333 lg.
86.	936-0119	Washer, Lock, 5/16
87.	736-0247	Washer, Flat, .406 x 1.25
88.	736-3092	Washer, Flat, .265 x 1.0 x .030
89.	748-0234	Spacer, Shoulder
90.	748-04112B	Shldr. Spacer, .3175 x .500 x .094
91.	750-04571	Shldr. Spacer, .260 x .785 x .538
92.	750-04821	Shoulder Spacer, .340 x 1.00
93.	750-05316	Spacer, 1.02 x 1.63 x .1425
94.	954-04194A	V-Belt, 4L x 44.60
95.	954-04202	V Belt, 3/8 x 36.68
96.	756-0178	Pulley, Flat Idler, 2.75 OD
97.	756-0241B	Double Pulley, 3.25 x 2.75
98.	784-0385C	Bracket, Auger Idler
99.	790-00167A-0637	Belt Keeper Bracket
100.	790-00208C	Idler Drive Wheel Bracket
101.	790-00254A-0637	Belt Cover Bracket
102.	634-0225A-0911	Wheel Ass'y. - LH
	634-0226A-0911	Wheel Ass'y. - RH
	734-2031	Tire
	734-1124A-0662	Rim Assembly
	934-0255	Valve
103.	711-04606	Axle, Wheel, 45"
104.	756-04244A	Auger Pulley, 10.0 x .5

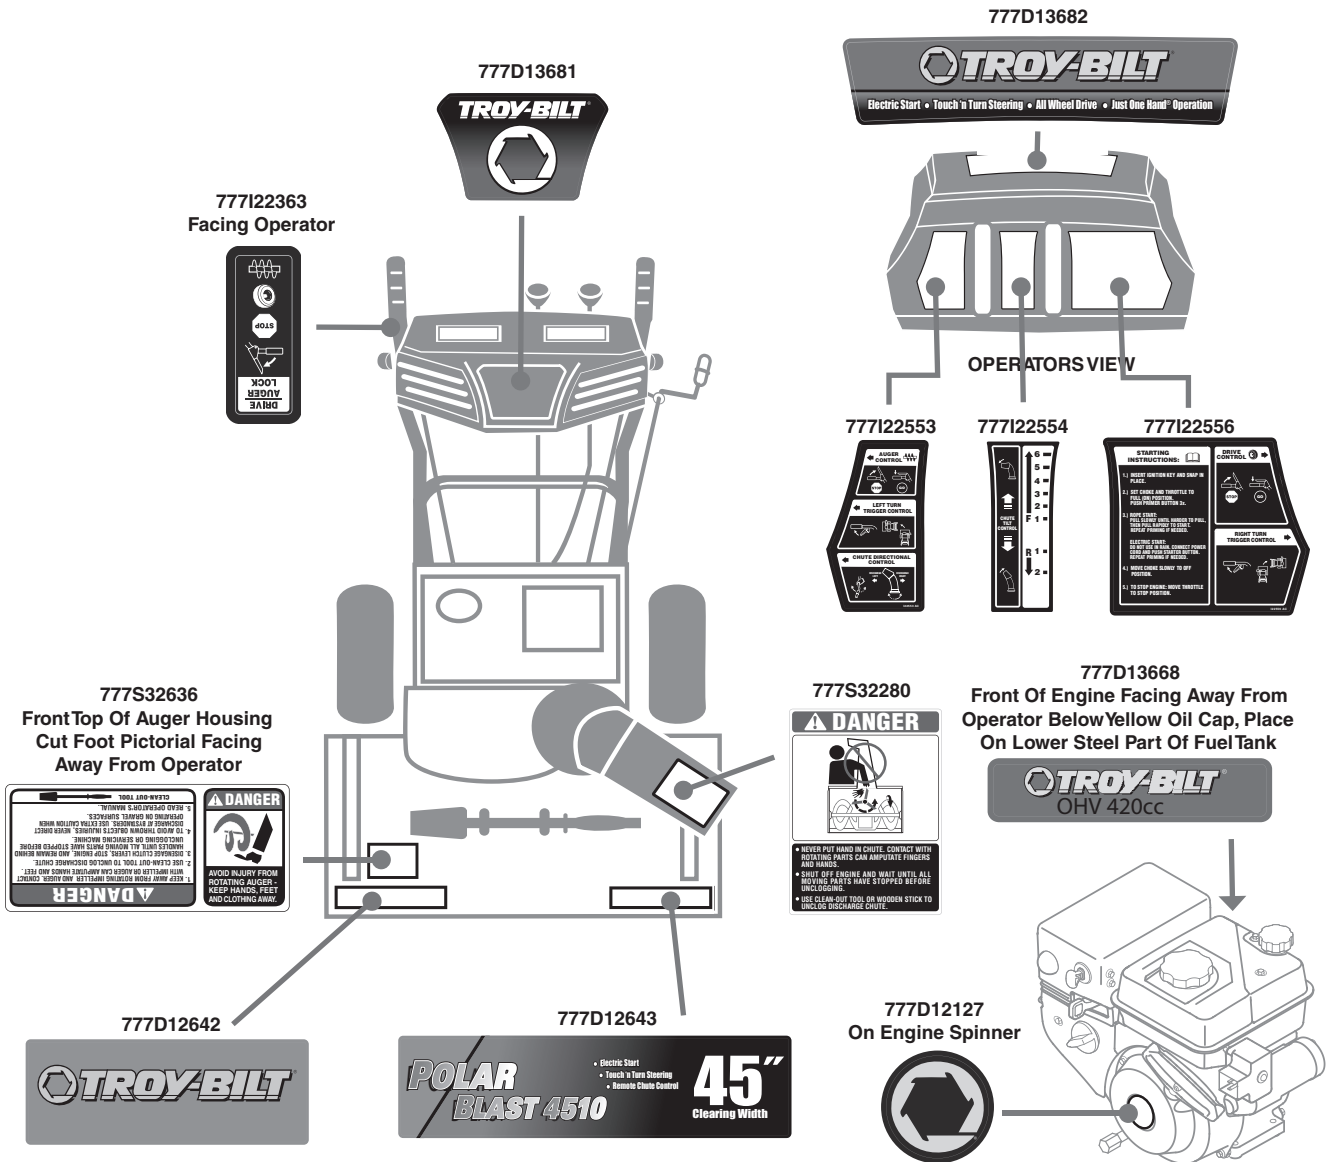

420cc ZS 490-SU Engine

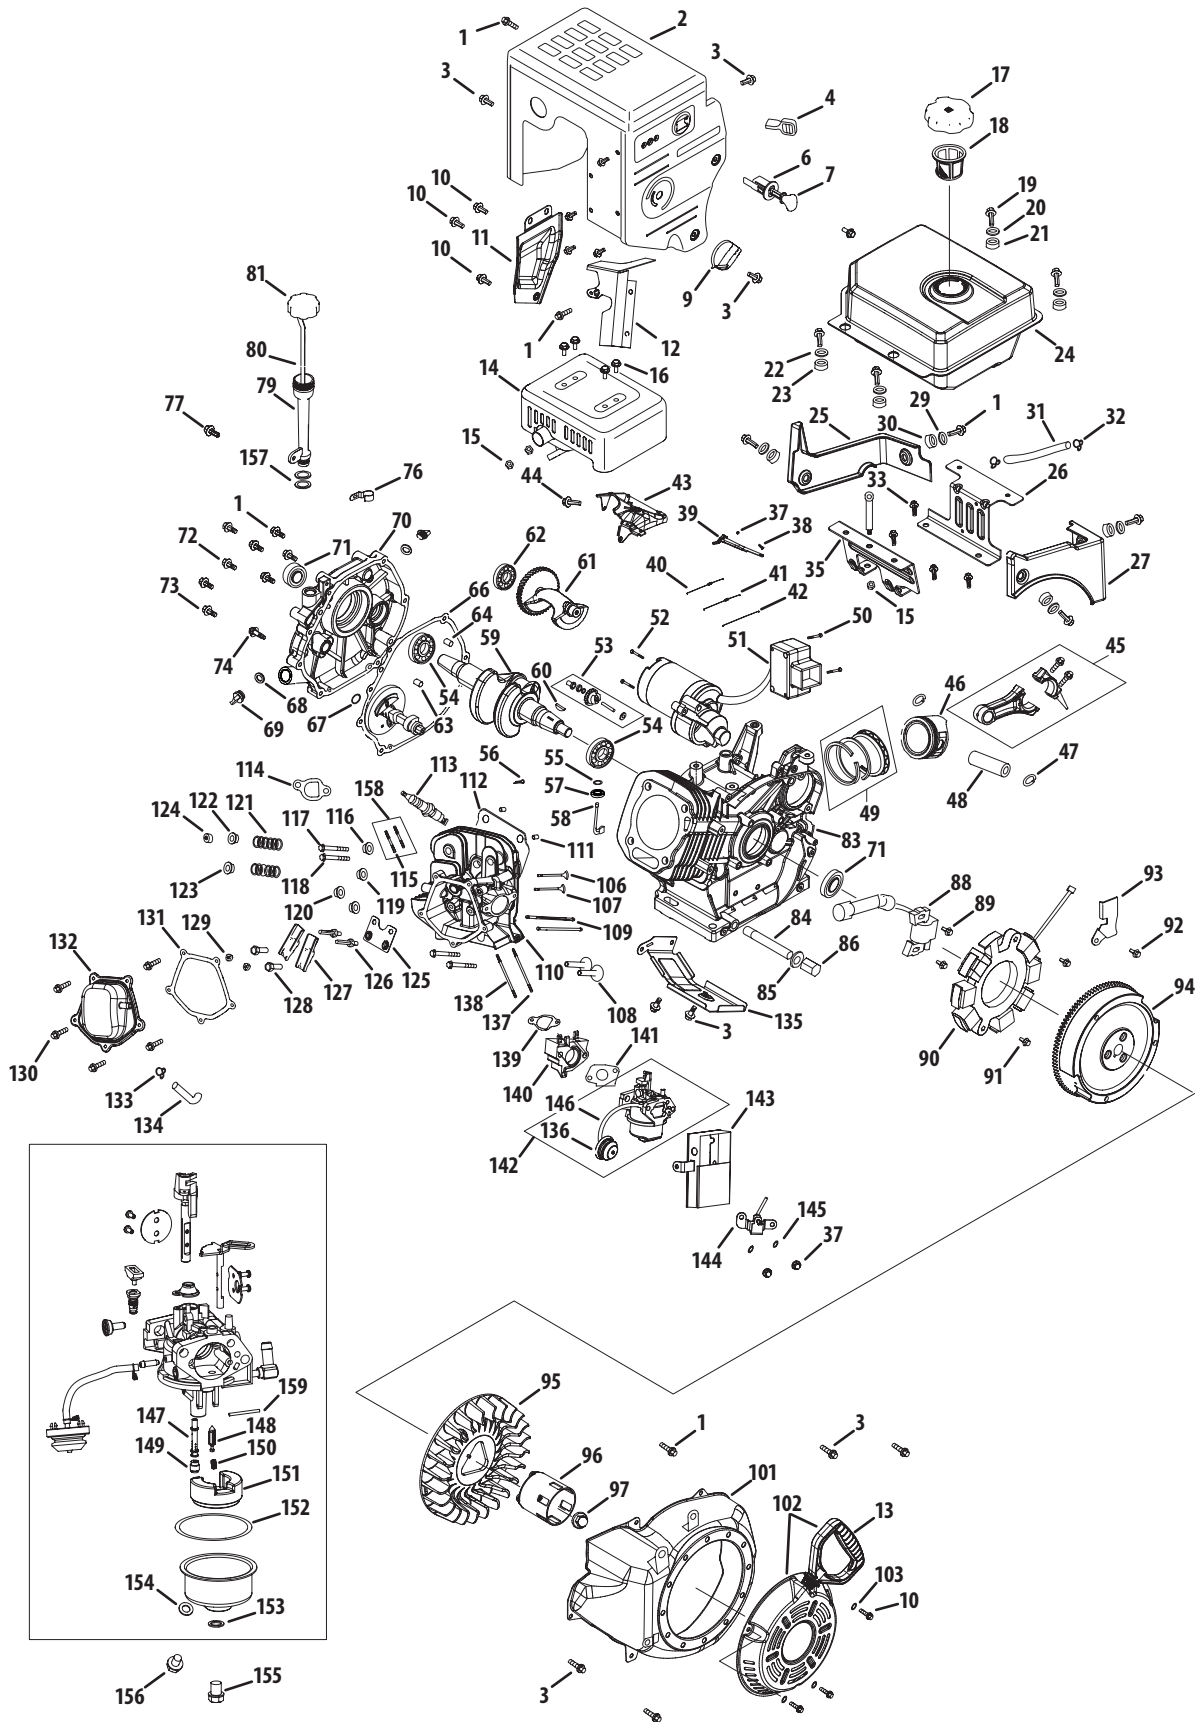

420cc ZS 490-SU Engine

Ref.	Part Number	Description
1	951-11012	Bolt, M6 x 16
2	951-11339	Muffler Shield
3	710-04915	Bolt, M6 x 12
4	951-11224	Throttle Control Knob
6	951-10637	Ignition Switch Assembly
7	731-05632	Key
9	951-11302	Choke Knob
10	710-04914	Bolt, Flange, M6 x 10
11	951-11181	Muffler Baffle
12	951-11321	Carburetor Heat Shield
13	731-05696	Starter Handle
14	951-11338	Muffler Assembly
15	712-04219	Nut, M8 x 1.25
16	710-05051	Bolt
17	951-10649	Fuel Cap
18	951-10652	Fuel Filter
19	710-04970	Flange Bolt, M8 x 20
20	736-04450	Flat Washer
21	750-05312	Bushing
22	736-04451	Flat Washer
23	750-05313	Bushing
24	951-11201	Fuel Tank
25	951-11319	Fuel Tank Shroud
26	951-11318	Fuel Tank Mounting Bracket
27	951-11351	Engine Shroud
28	951-11012	Bolt
29	736-04452	Flat Washer
30	750-05314	Bushing
33	710-04921	Bolt, Flange, M8 x 14
35	951-11182	Fuel Tank Mounting Bracket
37	712-04211	Nut, Flange, M6
38	710-04908	Bolt, M6 x 21, Governor Arm
39	951-11307	Governor Arm Bracket
40	951-11306	Governor Spring
41	951-11203	Throttle Return Spring
42	951-11309	Governor Rod
43	951-11311	Throttle Control Assembly
44	710-04916	Bolt, Flange, M6 x 14
50	710-04965	Screw, M4 x 55
51	951-11196	Electric Starter

Ref.	Part Number	Description
52	710-04967	Flange Bolt, M8 x 55
54	951-11373	Bearing
55	736-04453	Governor Shaft Washer
56	714-04077	Governor Shaft Clip
58	951-11365	Governor Arm Shaft
60	951-10307	Flywheel Key
63	715-04102	Dowel Pin
64	715-04096	Dowel Pin, 7 x 14
66	951-11376	Crankcase Cover Gasket
67	736-04476	Washer
71	951-11375	Oil Seal
72	710-04971	Flange Bolt, M8 x 38
73	710-04972	Bolt, M8 x 45
74	710-05052	Bolt, M8 x 35
76	951-11320	Oil Tube Support Bracket
77	710-04968	Flange Bolt M6 x 16
79	951-11206	Dipstick Tube
84	951-11350	Oil Drain Pipe
85	736-04440	Oil Drain Washer
86	710-04906	Oil Drain Plug
88	951-11305	Ignition Coil
89	710-04920	Bolt, Flange, M6 x 28
90	951-11216	Stator
91	710-04969	Flange Bolt, M6 x 30
92	710-04966	Flange Bolt, M6 x 8
93	951-11186	Alternator Wire Clamp Bracket
94	951-11312	Flywheel
95	951-11313	Cooling Fan
96	951-11314	Starter Cup
97	712-04220	Nut, M16 x 1.5
101	951-11211	Blower Housing
102	951-11310	Recoil Starter Assembly
103	736-04455	Flat Washer Recoil
111	715-04097	Dowel Pin, 12 x 20
113	951-10292	Spark Plug
114	951-11212	Muffler Gasket
115	710-04964	Exhaust Stud
116	736-04478	Flex Washer
117	710-05039	Head Bolt
118	710-05053	Bolt, M10 x 1.25 x 87

420cc ZS 490-SU Engine

Ref.	Part Number	Description
126	710-04962	Rocker Stud Bolt
128	751-11123	Pivot Adjusting Nut
129	751-11124	Pivot Locking Nut
130	710-05054	Bolt - Valve Cover, M6 x 16
132	951-11220	Valve Cover
133	726-04101	Breather Hose Clip
134	951-11221	Breather Hose
135	951-11317	Cylinder Baffle
136	951-10639	Primer
137	710-05055	Carburetor Stud, M6 x 8 x 98
138	710-05056	Carburetor Stud, M6 x 8 x 118
139	951-11315	Carb Insulator Gasket
140	951-11353	Carburetor Insulator
141	951-11354	Carburetor Gasket
142	951-11352	Carburetor Assembly
143	951-11304	Heater Box
144	951-11192	Choke Assembly
145	736-04477	Lock Washer
146	951-10324	Primer Hose
153	951-11348	Fuel Bowl Gasket
154	951-11349	Fuel Drain Plug Gasket
155	710-04945	Fuel Bowl Mounting Bolt
156	710-04903	Fuel Drain Plug
157	951-11381	O-Ring
	951-10651	Fuel Tank Nipple (Not Shown)
	952Z490-SU	Engine Complete
—	951-11340	Crankcase Cover Kit
54	951-11373	Bearing
66	951-11376	Crankcase Cover Gasket
67	736-04476	Washer
70	—	Crankcase Cover
71	951-11375	Oil Seal
72	710-04971	Flange Bolt, M8 x 38
73	710-04972	Bolt, M8 x 45
74	710-05052	Bolt, M8 x 35
—	951-11358	Crankshaft Kit
54	951-11373	Bearing
59	—	Crankshaft Assembly
60	951-10307	Flywheel Key
71	951-11375	Oil Seal

Ref.	Part Number	Description
—	951-11336	Fuel Line Kit
31	—	Fuel Line
32	—	Fuel Line Clamp
—	951-11360	Shortblock Assembly
45	—	Connecting Rod Ass'y Complete
46	—	Piston
47	—	Piston Pin Clip
48	—	Piston Pin
49	—	Piston Ring Set - Complete
53	—	Governor Assembly
54	951-11373	Bearing
55	736-04453	Governor Shaft Washer
56	714-04077	Governor Shaft Clip
57	—	Oil Seal - Governor Shaft
58	951-11365	Governor Arm Shaft
59	—	Crankshaft Assembly
60	951-10307	Flywheel Key
61	—	Camshaft Assembly
62	—	Bearing
63	715-04012	Dowel Pin
64	715-04096	Dowel Pin, 7 x 14
66	951-11376	Crankcase Cover Gasket
67	736-04476	Washer
70	—	Crankcase Cover
71	951-11375	Oil Seal
72	710-04971	Flange Bolt, M8 X 38
73	710-04972	Bolt, M8 x 45
74	710-05052	Bolt, M8 x 35
83	—	Crankcase
84	951-11350	Oil Drain Pipe
85	736-04440	Oil Drain Washer
86	710-04906	Oil Drain Plug
108	—	Valve Lifter (Tappet)
111	715-04097	Dowel Pin, 12 x 20
112	—	Cylinder Head Gasket
114	951-11212	Muffler Gasket
117	710-05039	Head Bolt
118	710-05053	Bolt, M10 x 1.25 x 87
131	—	Valve Cover Gasket
139	951-11315	Carb Insulator Gasket
140	951-11353	Carburetor Insulator

420cc ZS 490-SU Engine

Ref.	Part Number	Description
—	951-11359	Crankcase Kit
54	951-11373	Bearing
57	—	Oil Seal - Governor Shaft
71	951-11375	Oil Seal
83	—	Crankcase
—	951-11361	Cylinder Head Assembly
106	—	Exhaust Valve
107	—	Intake Valve
110	—	Cylinder Head
112	—	Cylinder Head Gasket
114	951-11212	Muffler Gasket
115	710-04964	Exhaust Stud
117	710-05039	Head Bolt
118	710-05053	Bolt, M10 x 1.25 x 87
119	—	Intake Valve Seal
120	—	Valve Spring Retainer
121	—	Valve Spring
122	—	Valve Spring Retainer - Exhaust
123	—	Valve Spring Retainer- Intake
124	—	Exhaust Valve Cap
125	—	Push Rod Guide
126	710-04962	Rocker Stud Bolt
127	—	Rocker Arm
128	751-11123	Pivot Adjusting Nut
129	751-11124	Pivot Locking Nut
131	—	Valve Cover Gasket
137	710-05055	Carburetor Stud, M6 x 8 x 98
138	710-05056	Carburetor Stud, M6 x 8 x 118
139	951-11315	Carb Insulator Gasket
140	951-11353	Carburetor Insulator
—	951-11355	Carburetor Kit - Major
147	—	Main Nozzle
148	—	Needle Valve
149	—	Main Jet
150	—	Needle Valve Spring
151	—	Float
152	—	Bowl Gasket
153	951-11348	Fuel Bowl Gasket
154	—	Fuel Drain Plug Gasket
159	—	Float Pin
158	951-11207	Exhaust Stud Assembly
115	710-04964	Exhaust Stud

Ref.	Part Number	Description
—	951-11362	Gasket Kit - Complete
57	—	Oil Seal - Governor Shaft
66	951-11376	Crankcase Cover Gasket
71	951-11375	Oil Seal
85	736-04440	Oil Drain Washer
112	—	Cylinder Head Gasket
114	951-11212	Muffler Gasket
131	—	Valve Cover Gasket
139	951-11315	Carb Insulator Gasket
140	951-11353	Carburetor Insulator
141	951-11354	Carburetor Gasket
—	951-11363	Gasket Kit - External
85	736-04440	Oil Drain Washer
114	951-11212	Muffler Gasket
131	—	Valve Cover Gasket
139	951-11315	Carb Insulator Gasket
140	951-11353	Carburetor Insulator
141	951-11354	Carburetor Gasket
—	951-11337	Valve Kit
106	—	Exhaust Valve
107	—	Intake Valve
—	951-11333	Valve Cover Kit
131	—	Valve Cover Gasket
132	951-11220	Valve Cover
—	951-11345	Oil Filler Plug Assembly
68	—	O-Ring
69	—	Oil Fill Plug
—	951-10641	Oil Drain Assembly
84	951-11350	Oil Drain Pipe
85	736-04440	Oil Drain Washer
86	710-04906	Drain Plug
—	951-11335	Push Rod Kit
109	—	Push Rod
—	951-11205	Dipstick Assembly
80	—	Dipstick
81	—	Oil Cap
—	951-11357	Cylinder Head Kit
112	—	Cylinder Head Gasket
117	710-05039	Cylinder Head Bolt
118	710-05053	Cylinder Head Bolts
119	—	Valve Seal
131	—	Valve Cover Gasket