


L & Q Style Handle & Frame

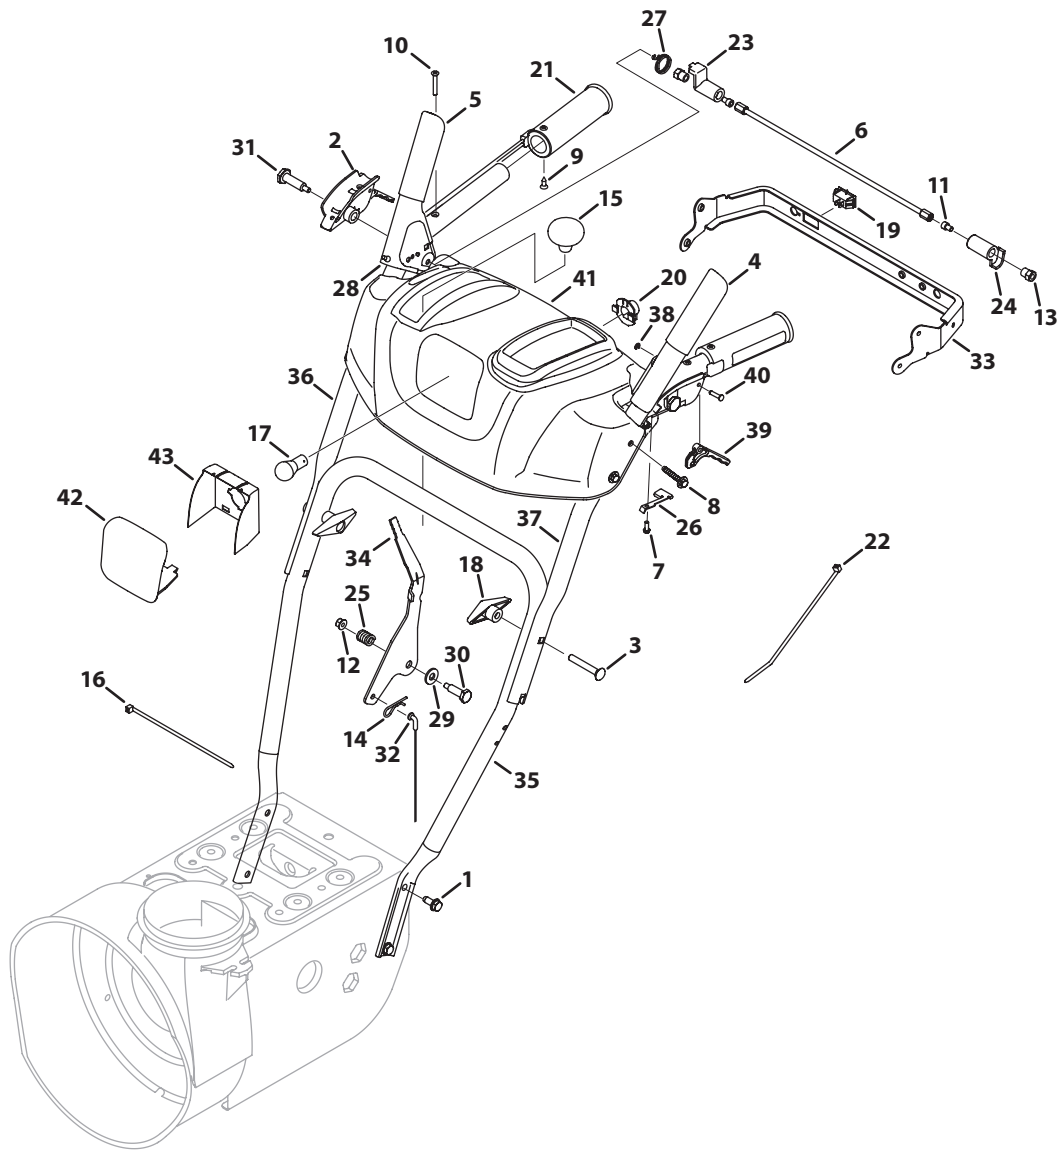


L & Q Style Handle & Frame

Ref.	Part Number	Description
1	710-04484	Screw, Taptite, 5/16-18 x .750
2	631-04134B	Clutch Lock, RH
—	631-04133A	Clutch Lock, LH
3	710-0572	Screw, Carriage, 5/16-18 x 2.25
4	684-04105B	Auger Engage, Black
—	684-04111B	Auger Engage, Red
5	684-04106B	Drive Engage, Black
—	684-04112B	Drive Engage, Red
6	684-04250	Pivot Rod
7	710-04326	Screw, Plastite, 8-16 x .50
8	710-04586	Screw, Taptite, 1/4-20 x 1.625
9	710-0837	Screw, 10-16 x 0.625
10	710-1233	Screw, 10-24 x 1.375
11	710-3069	Screw, 1/4-20 x .50
12	712-04064	Nut, Flangelock, 1/4-20
13	712-04081A	Nut, Hex, 1/4-20
14	914-0145	Click Pin, .092 x 1.64
15	720-04039	Shift Knob
16	725-0157	Cable Tie, 7"
17	925-04213	Lamp, 12.5V
18	720-04072A	Star Knob, 5/16-18
19	725-04393	Heated Grip Switch
20	925-1649	Lamp Socket
21	725-1757	Heated Grip
22	926-0154	Cable Tie, Push Mount
23	731-04894D	Plate, Lock

Ref.	Part Number	Description
24	731-04896B	Cam, Clutch Lock
25	732-0193	Compression Spring, .39 x .60 x .88
26	732-04219C	Clutch Lock Spring
27	732-04238	Torsion Spring, 0.8156 x .3038
28	935-0199A	Rubber Bumper
29	936-0267	Washer, Flat, .385 x .87
30	738-04125	Screw, Shield, .374 x 1.05
31	738-04348	Screw, Shoulder, .437 x 1.345 x 1/4-20
32	946-04396A	Speed Selector Cable
33	790-00248B-0637	Panel Bracket
34	790-00311A-0637	Shift Lever
35	749-04138A-0637	Lower Handle - Black
—	749-04138A-4033	Lower Handle - Flint Mica
36	749-04190A-0637	Upper RH Handle - Black
—	749-04190A-4033	Upper RH Handle - Flint Mica
37	749-04191A-0637	Upper LH Handle - Black
—	749-04191A-4033	Upper LH Handle - Flint Mica
38	716-04036	E-Ring
39	731-04913	Steering Trigger Control
—	731-06113	Steering Trigger Control, Red
40	738-04126	Steering Trigger Pin, 3/16
41	931-05348	Handle Panel, includes 42 & 43
—	931-05332	Handle Panel, Troy-Bilt
42	731-05320	Lens Panel
43	777X41803	Lens Label
—	725-04216B	Heated Grips Harness (Not Shown)


Drive System

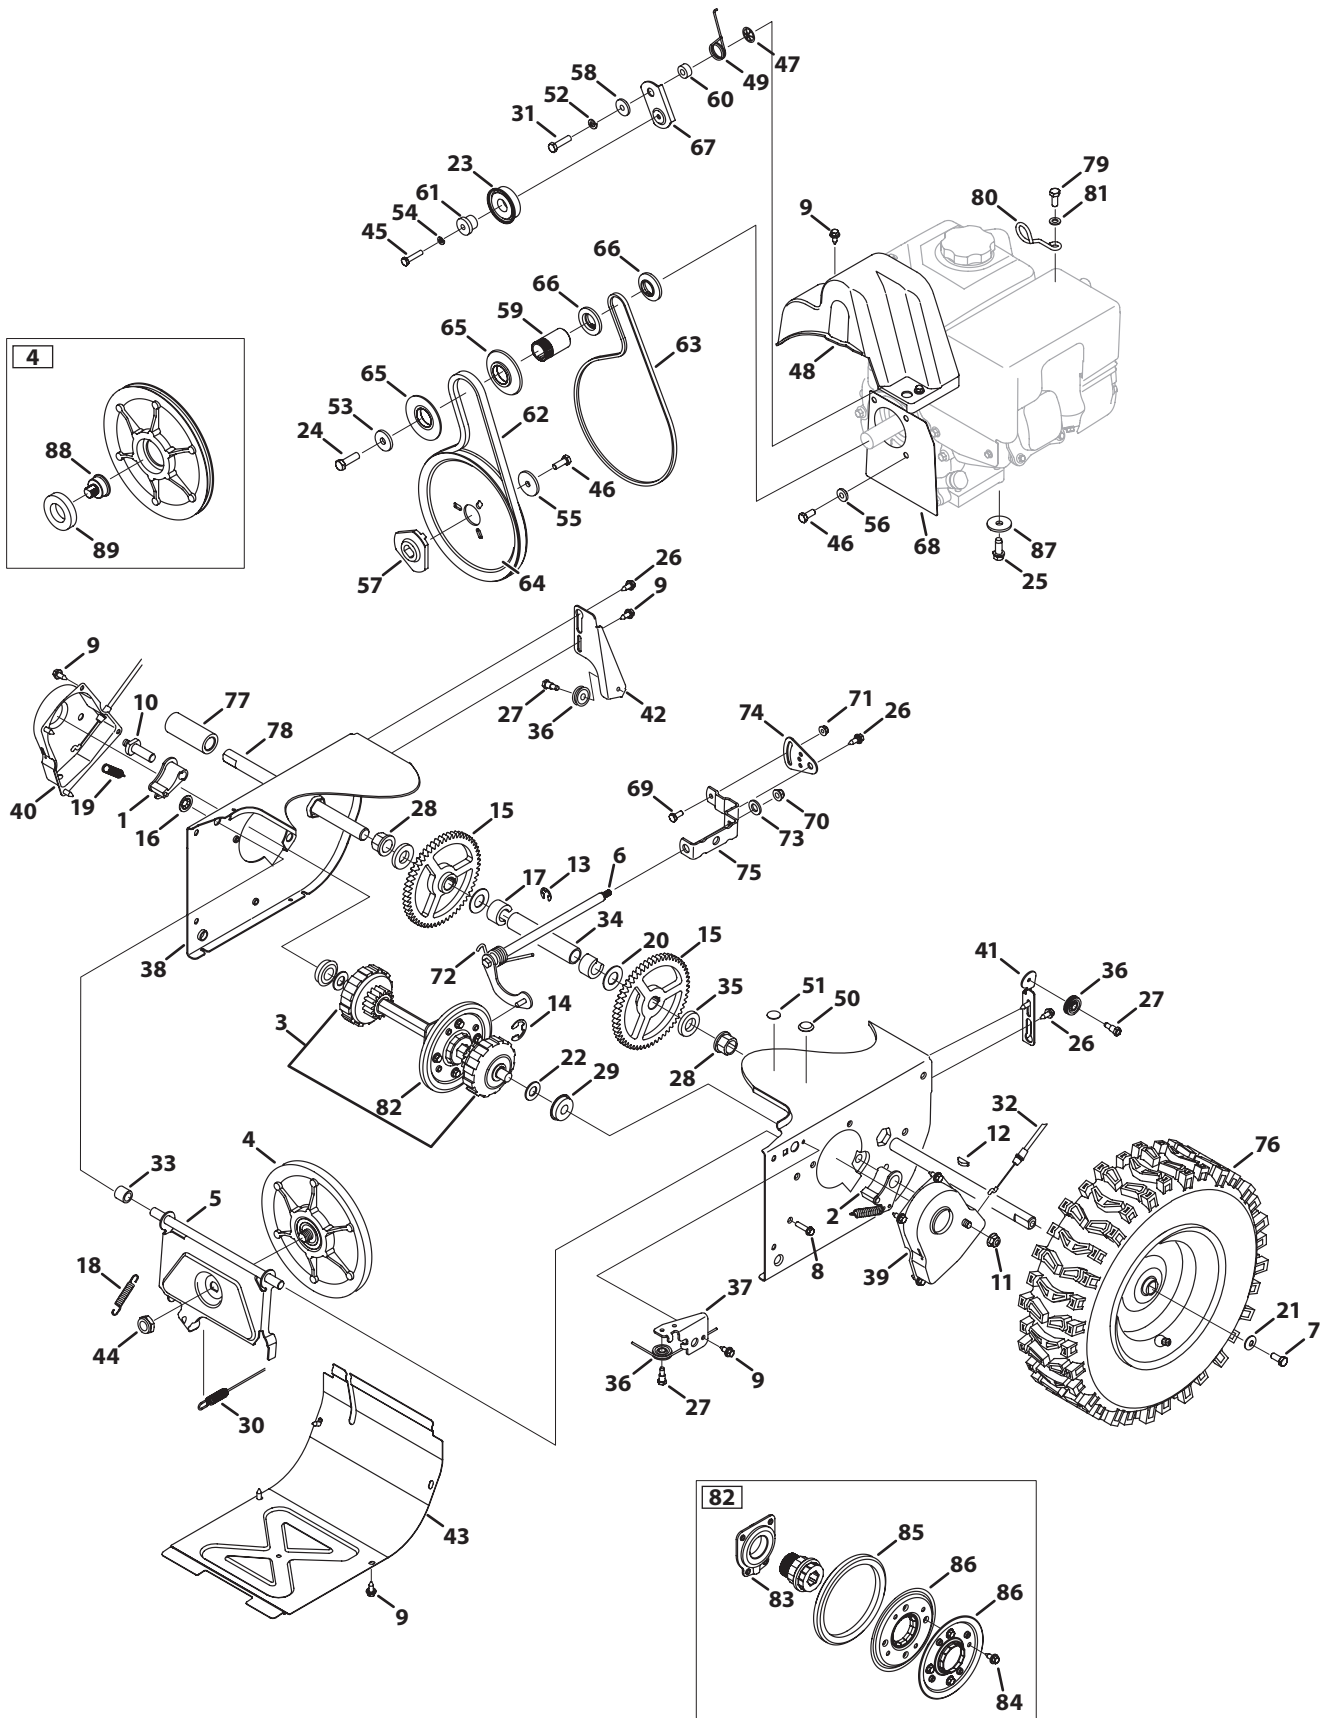

Ref.	Part Number	Description
1	618-04287	Dogg Assembly, RH
2	618-04288	Dogg Assembly, LH
3	918-04322A	Drive Shaft Assembly
4	656-04025A	Friction Wheel Disc Assembly
5	684-04154-0637	Friction Wheel Support
6	684-04156A	Rod Shift Assembly
7	710-0627	Hex Head Screw, 5/16-24 x .750
8	710-0788	Screw, 1/4-20 x 1.000
9	710-1652	Screw, 1/4-20 x .625
10	711-1268B	Actuator Shaft
11	712-04065	Nut, Flangelock, 3/8-16
12	914-0126	Hi-Pro Key, 3/16 x 3/4 DIA
13	916-0104	E-Ring
14	716-0136	Retainer Ring
15	917-04210	Gear, 56T
16	726-0221	Nut, Speed, .500
17	731-05297	Spacer, .76 x .75
18	932-0264	Extension Spring, .380 x 2.500
19	732-04345	Extension Spring, .500 x 1.71
20	736-0188	Washer, Flat, .76 x 1.49
21	736-0242	Washer, Bell, .340 x .872
22	736-0626	Washer, Flat, .58 x 1.125
23	684-04169	Pulley Assembly
24	710-0191	Hex Head Screw, 3/8-24 x 1.25
25	710-0654A	Taptite Sems Screw, 3/8-16 x 1.000
26	738-04184A	Screw, Shoulder, .368 x .113 x 1/4-20
27	738-0924A	C Screw, Shoulder, .340 x .335 x 1/4-28
28	941-0245	Hex Flange Bearing, .75 ID
29	741-04076	Ball Bearing, .5625 x 1.375 x .4375
30	746-04229	Drive Clutch Cable
31	710-0672	Hex Head Screw, 5/16-24 x 1.25
32	946-0956B	Steering Cable
33	748-0190	Spacer, .508 x .75
34	750-04474	Axle Support Tube
35	750-0767	Spacer, Axle
36	756-0625	Roller Cable
37	790-00096-0637	Auger Cable Guide Bracket
38	790-00183B-0637	Wheel Drive Frame
39	790-00185-0691	Shaft Retainer, LH
40	790-00186-0691	Shaft Retainer, RH
41	790-00206A-0637	Auger Clutch Cable Guide Bracket
42	790-00207B	Drive Clutch Cable Guide Bracket
43	790-00316-0637	Frame Cover
44	712-0417A	Nut, Flange, 5/8-18
45	710-0809	Taptite Screw, 1/4-20 x 1.250

Ref.	Part Number	Description
46	710-1245B	Hex Head Screw, 5/16-24 x .875
47	926-04012	Nut, Push-On, .25 DIA
48	731-06401	Belt Cover
49	732-04308A	Spring, Torsion, .850 x .333
50	735-04099	Plug, 3/8 ID
51	735-04100	Plug, 1/2 ID
52	936-0119	Washer, Lock, 5/16
53	736-0247	Washer, Flat, .406 x 1.25
54	936-0329	Washer, Lock, 1/4
55	736-0505	Washer, Flat, .34 x 1.50
56	748-0234	Shoulder Spacer
57	748-04053A	Pulley Adapter, .75 DIA
58	748-04112B	Spacer, Shoulder, .3175 x .500
59	750-04303	Spacer, .875 x 1.185
60	750-04477A	Spacer, .340 x .750
61	750-04571	Spacer, Shoulder, .260 x .785
62	954-04195	Belt, .500 x 37.00
63	954-04201	V Belt, 3/8 x 35.68"
64	756-04109	Auger Pulley, 8.1 x .5
65	756-04113	Pulley, Half, 4L-V x 2.600
66	756-04252	Pulley, Half, 3/8-V x 1.7160
67	790-00208C	Drive Idler Bracket
68	790-00332-0637	Cover Plate
69	710-0751	Hex Head Screw, 1/4-20 x .620
70	712-04063	Nut, Flangelock, 5/16-18
71	712-04064	Nut, Flangelock, 1/4-20
72	732-04311	Spring, Torsion, .750 x .968
73	936-3015	Washer, Flat, .469 x .875 x .105
74	790-00217A-0637	Speed Selector Pivot Bracket
75	790-00218A-0637	Speed Selector Shift Bracket
76	634-04136-0911	Wheel, LH
—	634-04137-0911	Wheel, RH
77	731-04873	Spacer, 1.25 x .75 x 3.00
78	938-04180	Axle, .75 x 11.12
79	710-04022	Hex Head Screw, 1.25 x 20
80	732-04677	Cable Guide
81	936-0264	Washer, Flat, .330 x .630
82	684-04159	Friction Wheel Assembly
83	618-0063A	Bearing Assembly, Friction Wheel
84	710-0896	Screw, 1/4-14 x .625
85	935-04054	Friction Wheel, 5.5 OD
86	790-00174	Friction Wheel Plate
87	736-0320	Washer, Flat, .38 x 1.38
88	738-04164A	Friction Pin, Disc Bearing
89	741-04098	Ball Bearing, 30 x 55 x 13

Auger & Auger Housing

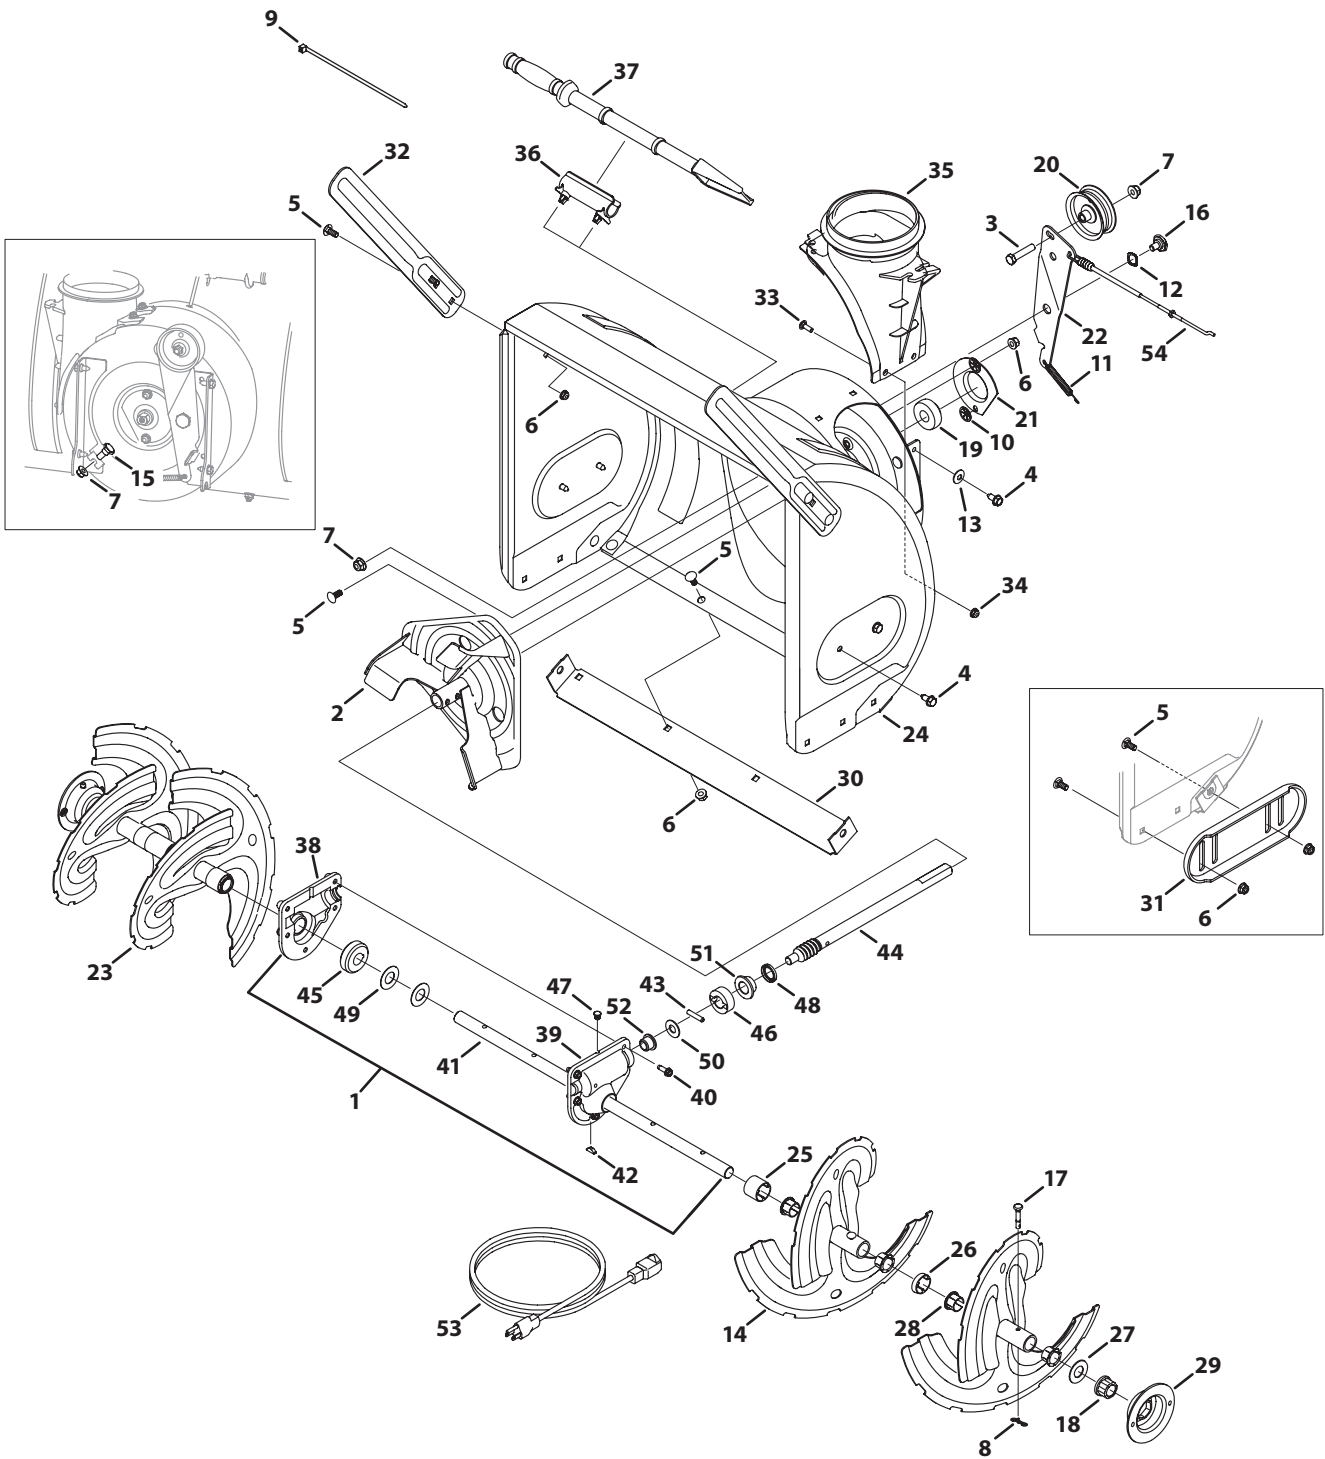


Auger & Auger Housing

Ref.	Part Number	Description
1	918-04165A	Auger Gearbox, includes 38-52
2	684-04057A-0637	Impellor Assembly, 12" DIA
3	710-0347	Hex Head Screw, 3/8-16 x 1.75
4	710-04484	Screw, 5/16-18 x .750
5	710-0451	Bolt, Carriage, 5/16-18 x .750
6	712-04063	Nut, Flangelock, 5/16-18
7	712-04065	Nut, Flangelock, 3/8-16
8	714-04040	Bow-Tie Cotter Pin
9	725-0157	Cable Tie, 7"
10	926-04012	Nut, Push-on, .25 DIA
11	732-04460	Extension Spring, .38 x 4.59
12	736-0174	Washer, Wave, .625 x .885
13	736-0242	Washer, Bell, .340 x .872
14	684-04107-0638	Spiral Assembly, LH - Red
—	684-04107-0662	Spiral Assembly, LH - Gray
15	738-0143	Bolt, Shoulder, .496 x .336 x 3/8-16
16	938-0281	Screw, Shoulder, .625 x .17 x 3/8-16
17	738-04124A	Shear Pin, .25 x 1.50
18	941-0245	Bearing, Hex Flange, .75
19	941-0309	Bearing, Ball, .75 x 1.85
20	756-04224	Pulley, Idler, Flat, 2.75
21	790-00075	Bearing, 1.85 ID
22	790-00080A-0637	Auger Idler Bracket
23	684-04108-0638	Spiral Assembly, RH - Red
—	684-04108-0662	Spiral Assembly, RH - Gray
24	684-04267-0691	Auger Housing Assembly
—	684-04273-4033	Auger Housing Assembly, Troy-Bilt
25	731-04870	Spacer, 1.25 x .75 x 1.00
26	731-04871	Spacer, 1.25 x .75 x 2.00
27	736-0188	Washer, Flat, .76 x 1.49


Ref.	Part Number	Description
28	741-0493A	Bushing, Flange, .800 x .910
29	790-00087A-0637	Bearing, 1" Hex
30	790-00119-0691	Shave Plate, 2.25 x 29.66 - Black
—	790-00119-4033	Shave Plate, 2.25 x 29.66 - Flint Mica
31	790-00091-0691	Deluxe Shoe Slide - Black
—	790-00091-4033	Deluxe Shoe Slide - Flint Mica
32	790-00181-0691	Blade Guide
33	710-0703	Screw, Carriage, 1/4-20 x .75
34	712-04064	Nut, Flangelock, 1/4-20
35	731-04705C	Chute Adapter
36	731-2635	Cleanout Tool Mount
37	731-2643	Cleanout Tool
38	918-0123A	Reducer, RH
39	918-0124A	Reducer, LH
40	710-0642	Screw, 1/4-20 x 0.750
41	711-04282	Auger Axle, 30"
42	914-0161	Key, Hi-Pro, 3/16 x 5/8
43	715-04021	Dowel Pin, .25 x 1.25
44	917-04126	Worm Shaft, .75
45	917-0528A	Gear Worm, 20T
46	718-04071	Collar Thrust, .756 x .600
47	721-0325	Plug, 1/4 x .437
48	721-0327	Oil Seal, .75 x 1.131 x .188
49	936-0351	Washer, Flat, .760 x 1.50
50	736-3084	Washer, Flat, .51 x 1.12
51	741-0662	Bearing, Flange, .75 x 1.00 x .59
52	741-0663	Bearing, Flange, .50 x .75 x .59
53	929-0071	Extension Cord, 110V
54	746-04230	Auger Drive Clutch Cable

Chute Control

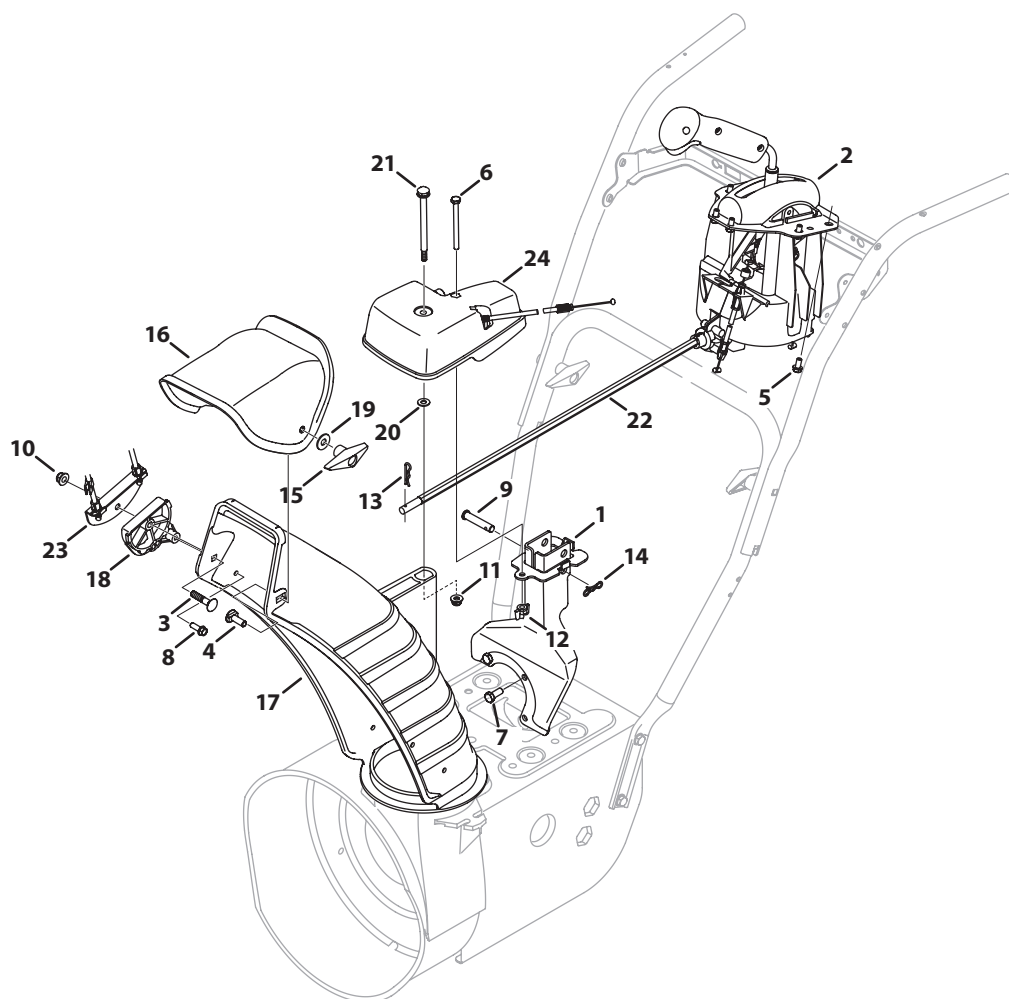

Ref.	Part Number	Description
1	684-04310A-0637	Chute Support Bracket
2	753-06151	Chute Control
3	710-0262	Bolt, Carriage, 5/16-18 x 1.50
4	710-04071	Bolt, Carrier, 5/16-18 x 1.00
5	710-04187	Screw, HL, 1/4-15 x 0.50
6	710-04370	Hex Head Screw, 1/4-20 x 3.00
7	710-0627	Hex Head Screw, 5/16-24 x .750
8	710-0895	Screw, HL, 1/4-15 x 0.750
9	711-04469A	Clevis Pin, 3/8 x 1.87
10	712-04063	Nut, Flangelock, 5/16-18
11	712-04064	Nut, Flangelock, 1/4-20
12	712-3087	Wing Nut, 1/4-20
13	914-0101	Internal Cotter Pin
14	714-04040	Bow-Tie Cotter Pin
15	720-04072A	Star Knob, 5/16-18
16	731-04427A	Chute, Upper
17	731-06440A	Chute, Lower
18	731-06451	Cable Guide, Chute Tilt
19	936-0159	Washer, Flat, .349 x .879
20	736-04446	Washer, Flat, .25 x .630
21	738-04367	Screw, Shoulder, .312 x 3.5 x 1/4-20
22	747-05116	Chute Rod, 3/8 Hex
23	784-5594-0637	Cable Bracket
24	918-04801	Gearbox Assembly, Chute Rotation

357cc ZS 483-SU Engine

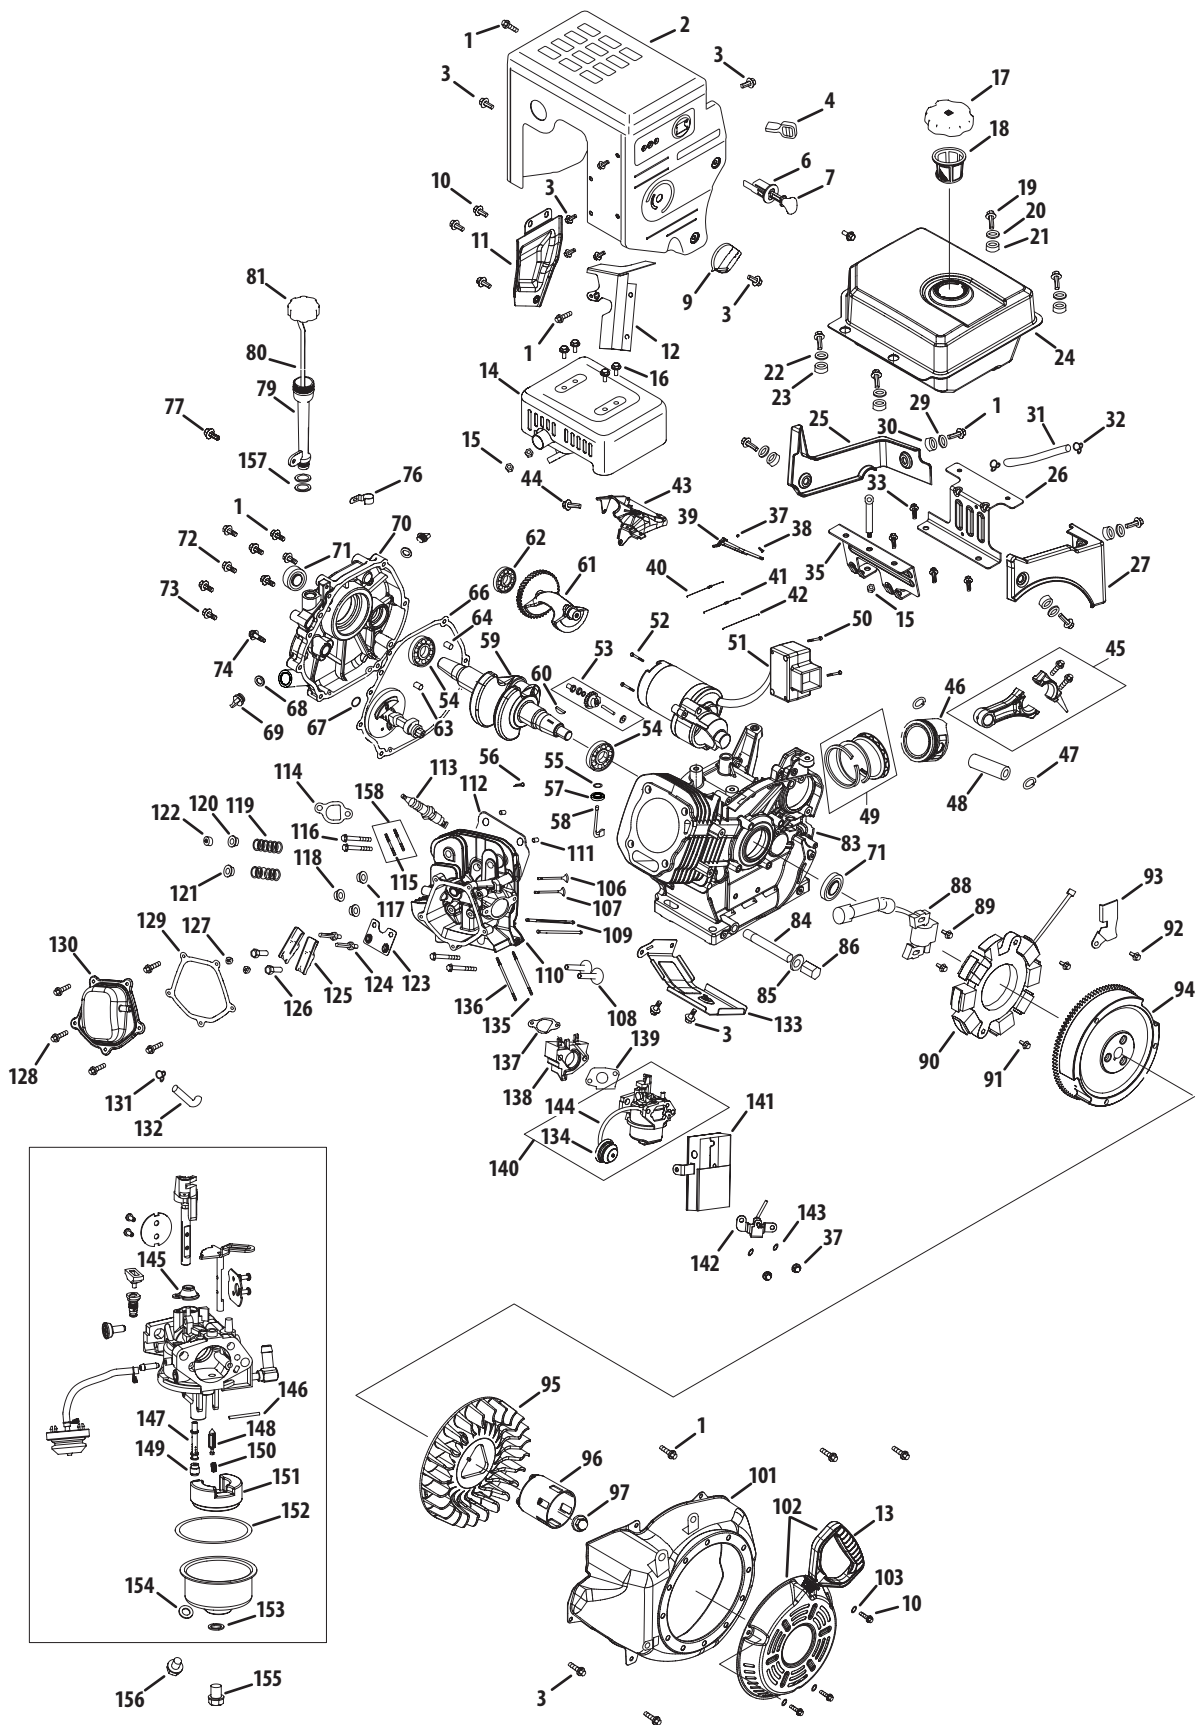

Ref.	Part Number	Description
1	951-11012	Bolt, M6 X 16
2	951-11339	Muffler Shield
3	710-04915	Bolt, M6x12, Zinc Coating
4	951-11224	Throttle Control Knob
6	951-10637	Ignition Switch Assembly
7	731-05632	Key
9	951-11302	Choke Knob
10	710-04914	Bolt, Flange, M6x10
11	951-11181	Muffler Baffle
12	951-11321	Carburetor Heat Shield
13	731-05696	Starter Handle
14	951-11338	Muffler Assembly
15	712-04219	Nut, M8 - 1.25
16	710-05051	Bolt
17	951-10649	Fuel Cap
18	951-10652	Fuel Filter
19	710-04970	Flange Bolt, M8 X 20
20	736-04450	Flat Washer
21	750-05312	Bushing
22	736-04451	Flat Washer
23	750-05313	Bushing
24	951-11201	Fuel Tank
25	951-11319	Fuel Tank Shroud
26	951-11318	Fuel Tank Mounting Bracket
27	951-11189	Engine Shroud
29	736-04452	Flat Washer
30	750-05314	Bushing
33	710-04921	Bolt, Flange, M8x14
35	951-11182	Fuel Tank Mounting Bracket
37	712-04211	Nut, Flange, M6
38	710-04908	Bolt, M6x21, Governor Arm
39	951-11307	Governor Arm Bracket
40	951-11306	Governor Spring
41	951-11203	Throttle Return Spring
42	951-11309	Governor Rod
43	951-11311	Throttle Control Assembly
44	710-04916	Bolt, Flange, M6 x 14
50	710-04965	Screw, M4 X 55
51	951-11196	Electric Starter
52	710-04967	Flange Bolt, M8 X 55

Ref.	Part Number	Description
54	751-11373	Bearing
55	736-04453	Governor Shaft Washer
56	714-04077	Governor Shaft Clip
58	751-11365	Governor Arm Shaft
60	951-10307	Flywheel Key
63	715-04102	Dowel Pin
64	715-04096	Dowel Pin, 7 X 14
66	751-11376	Crankcase Cover Gasket
67	736-04476	Washer
71	751-11375	Oil Seal
72	710-04971	Flange Bolt, M8 X 38
73	710-04972	Bolt, M8 X 45
74	710-05052	Bolt, M8 X 35
76	951-11320	Oil Tube Support Bracket
77	710-04968	Flange Bolt M6 X 16
79	951-11206	Dipstick Tube
84	951-11350	Oil Drain Pipe
85	736-04440	Oil Drain Washer
86	710-04906	Oil Drain Plug
88	951-11305	Ignition Coil
89	710-04920	Bolt, Flange, M6x28
90	951-11216	Stator
91	710-04969	Flange Bolt, M6 X 30
92	710-04966	Flange Bolt, M6 X 8
93	951-11186	Alternator Wire Clamp Bracket
94	951-11312	Flywheel
95	951-11313	Cooling Fan
96	951-11314	Starter Cup
97	712-04220	Nut, M16 - 1.5
101	951-11211	Blower Housing
102	951-11310	Recoil Starter Assembly
103	736-04455	Flat Washer Recoil
111	715-04097	Dowel Pin, 12 X 20
113	951-10292	Spark Plug
114	951-11212	Muffler Gasket
115	710-04964	Exhaust Stud
116	710-05053	Flange Bolt, M10-1.25 X 87
124	710-04962	Rocker Stud Bolt
126	751-11123	Pivot Adjusting Nut
127	751-11124	Pivot Locking Nut

357cc ZS 483-SU Engine

Ref.	Part Number	Description	Ref.	Part Number	Description
128	710-05054	Bolt - Valve Cover, M6 X 16	—	951-11328	Shortblock Assembly
130	951-11220	Valve Cover	45	—	Connecting Rod Ass'y Complete
131	726-04101	Breather Hose Clip	46	—	Piston
132	951-11221	Breather Hose	47	—	Piston Pin Clip
133	951-11317	Cylinder Baffle	48	—	Piston Pin
134	951-10639	Primer	49	—	Piston Ring Set - Complete
135	710-05055	Carburetor Stud, M6 X 8 X 98	53	—	Governor Assembly
136	710-05056	Carburetor Stud, M6 X 8 X 118	54	951-11373	Bearing
137	951-11315	Intake Gasket	55	736-04453	Governor Shaft Washer
138	951-11316	Carburetor Insulator	56	714-04077	Governor Shaft Clip
139	951-11223	Carburetor Gasket	57	—	Oil Seal -Governor Shaft
140	951-11303	Carburetor Assembly	58	951-11365	Governor Arm Shaft
141	951-11304	Heater Box	59	—	Crankshaft Assembly
142	951-11192	Choke Assembly	60	951-10307	Flywheel Key
143	736-04477	Lock Washer	61	—	Camshaft Assembly
144	951-10324	Primer Hose	62	—	Bearing
153	951-11348	Fuel Bowl Gasket	63	715-04102	Dowel Pin
154	951-11349	Fuel Drain Plug Gasket	64	715-04096	Dowel Pin, 7 x 14
155	710-04945	Fuel Bowl Mounting Bolt	66	951-11376	Crankcase Cover Gasket
156	710-04903	Fuel Drain Plug	67	736-04476	Washer
157	951-11381	O-Ring	70	—	Crankcase Cover
	951-10651	Fuel Tank Nipple (Not Shown)	71	951-11375	Oil Seal
	752Z483-SU	Engine Complete	72	710-04971	Bolt
—	951-11340	Crankcase Cover Kit	73	710-04972	Bolt, M8 X 45
54	951-11373	Bearing	74	710-05052	Bolt, M8 X 35
66	951-11376	Crankcase Cover Gasket	83	—	Crankcase
67	736-04476	Washer	84	951-11350	Oil Drain Pipe
70	—	Crankcase Cover	85	736-04440	Oil Drain Washer
71	751-11375	Oil Seal	86	710-04906	Oil Drain Plug
72	710-04971	Flange Bolt, M8 X 38	108	—	Valve Lifter (Tappet)
73	710-04972	Bolt, M8 X 45	111	715-04097	Dowel Pin
—	951-11342	Crankshaft Kit	112	—	Cylinder Head Gasket
54	951-11373	Bearing	114	951-11212	Muffler Gasket
59	—	Crankshaft Assembly	116	710-05053	Flange Bolt, M10-1.25 X 87
60	951-10307	Flywheel Key	129	—	Valve Cover Gasket
71	951-11375	Oil Seal	137	951-11315	Intake Gasket
—	951-11341	Crankcase Kit	138	951-11316	Carburetor Insulator
54	951-11373	Bearing	—	951-11335	Push Rod Kit
57	—	Oil Seal -Governor Shaft	109	—	Push Rod
71	951-11375	Oil Seal	158	951-11207	Muffler Stud Assembly
83	—	Crankcase	115	710-04964	Exhaust Stud

Ref.	Part Number	Description
—	951-10641	Oil Drain Assembly
84	951-11350	Oil Drain Pipe
85	736-04440	Drain Plug Washer
86	710-04906	Drain Plug
—	951-11329	Cylinder Head Ass'y
106	—	Exhaust Valve
107	—	Intake Valve
110	—	Cylinder Head
112	—	Cylinder Head Gasket
114	951-11212	Muffler Gasket
115	710-04964	Exhaust Stud
116	710-05053	Flange Bolt, M10-1.25 X 87
117	—	Intake Valve Seal
118	—	Valve Spring Retainer
119	—	Valve Spring
120	—	Valve Spring Retainers - Exhaust
121	—	Valve Spring Retainer- Intake
122	—	Exhaust Valve Cap
123	—	Push Rod Guide
124	710-04962	Rocker Stud Bolt
125	—	Rocker Arm
126	751-11123	Pivot Adjusting Nut
127	751-11124	Pivot Locking Nut
129	—	Valve Cover Gasket
135	710-05055	Carburetor Stud, M6 X 8 X 98
136	710-05056	Carburetor Stud, M6 X 8 X 118
137	951-11315	Intake Gasket
138	951-11316	Carburetor Insulator
—	951-11330	Gasket Kit - Complete
57	—	Oil Seal -Governor Shaft
66	951-11376	Crankcase Cover Gasket
71	951-11375	Oil Seal
85	736-04440	Oil Drain Washer
112	—	Cylinder Head Gasket
114	951-11212	Muffler Gasket
129	—	Valve Cover Gasket
137	951-11315	Intake Gasket
138	951-11316	Carburetor Insulator
139	951-11223	Carburetor Gasket

Ref.	Part Number	Description
—	951-11205	Dipstick Assembly
80	—	Dipstick
81	—	Oil Cap
—	951-11331	Gasket Kit - External
85	736-04440	Oil Drain Washer
114	951-11212	Muffler Gasket
129	—	Valve Cover Gasket
137	951-11315	Intake Gasket
138	951-11316	Carburetor Insulator
139	951-11223	Carburetor Gasket
—	951-11336	Fuel Line Kit
31	—	Fuel Line
32	—	Fuel Line Clamp
—	951-11345	Oil Filler Plug Assembly
68	—	O-Ring
69	—	Oil Fill Plug
—	951-11332	Carburetor Kit - Major
145	—	Throttle Pressure Plate
146	—	Float Pin
147	—	Main Nozzle
148	—	Needle Valve
149	—	Main Jet
150	—	Needle Valve Spring
151	—	Float
152	—	Bowl Gasket
153	951-11348	Fuel Bowl Gasket
154	951-11349	Fuel Drain Plug Gasket
—	951-11334	Cylinder Head Kit
112	—	Cylinder Head Gasket
116	710-05053	Flange Bolt, M10-1.25 X 87
117	—	Intake Valve Seal
129	—	Valve Cover Gasket
—	951-11333	Valve Cover Kit
129	—	Valve Cover Gasket
130	951-11220	Valve Cover
—	951-11337	Valve Kit
106	—	Exhaust Valve
107	—	Intake Valve