


Operator's Manual




LAWN TRACTOR
26 HP, 50" Tractor
Electric Start

PYT9000

Model No. 247.28981

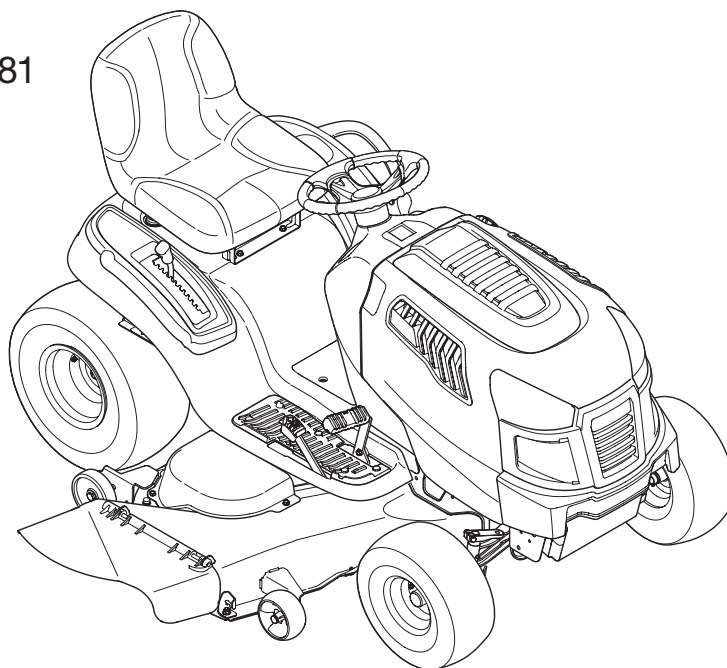

• Español, p. 62

 

This product has a low emission engine which operates differently from previously built engines. Before you start the engine, read and understand this Operator's Manual.

IMPORTANT:
Read and follow all Safety
Rules and Instructions before
operating this equipment.

For answers to your questions about
this product, Call:

1-800-659-5917

Craftsman Tractor Help Line


5am - 5 pm, Mon - Sat

Sears Brands Management Corp., Hoffman Estates, IL 60179 U.S.A.
Visit our website: www.craftsman.com

Form No. 769-05600
(August 3, 2010)

PARTS LIST

Steering and Axle — Model No. 247.28981

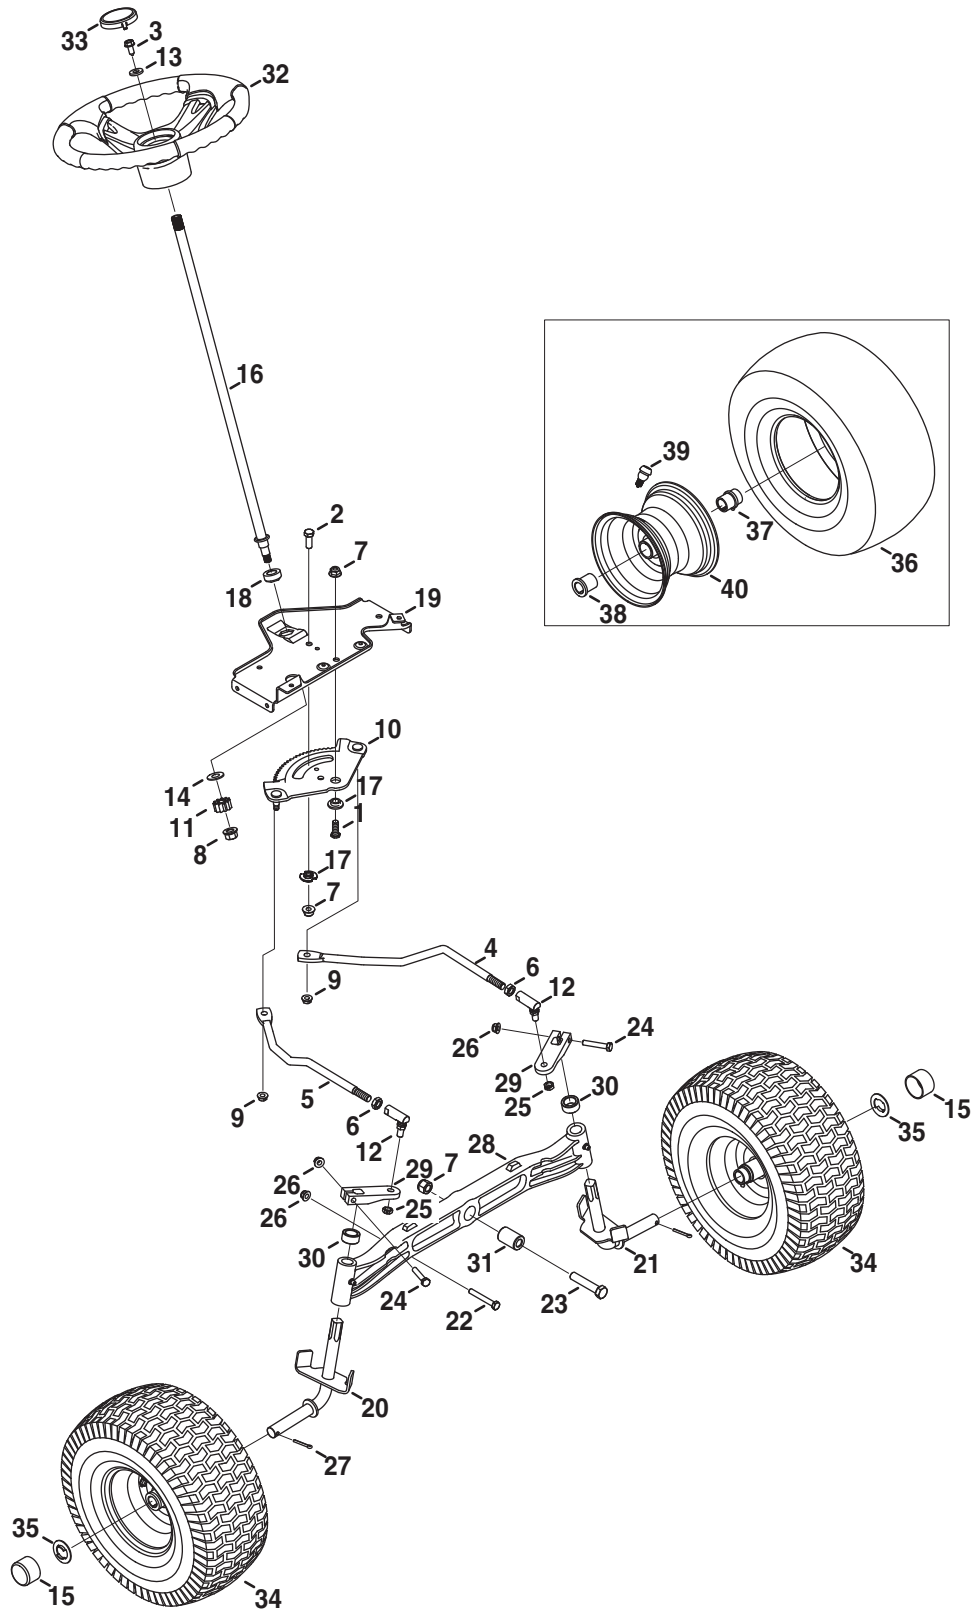

PARTS LIST


Steering and Axle — Model No. 247.28981

Ref. No.	Part No.	Description
1	710-04095	Hex Head Screw, 3/8-16:1.00
2	710-0514	Hex Head Screw, 3/8-16:1.00
3	710-0643	Hex Head Screw, 5/16-18:1.00
4	711-04998	LH Drag Link
5	711-04999	RH Drag Link
6	912-0240	Jam Nut, 7/16-20
7	712-04065	Flangelock Nut, 3/8-16
8	712-0459	Flangelock Nut, 7/16-20
9	712-3004A	Flangelock Nut, 5/16-18
10	717-1550F	Steering Gear
11	717-1554	Steering Pinion Gear
12	923-0448A	Ball Joint, 7/16-20
13	936-3004	Flat Washer, .406 X .875 X .105
14	736-3084	Flat Washer, .51 X 1.12 X .06:HT
15	731-05674	Bumper Cap
16	738-04263	Steering Shaft, .625 OD X 24.25 LG
17	738-04363	Shoulder Spacer, .385X 1.25 X .3025
18	741-04237B	Hex Flange Bearing 5/8 PM
19	783-06043-0637	Steering Support Bracket
20	638-04022-0637	RH Axle Assembly

Ref. No.	Part No.	Description
21	638-04028-0637	LH Axle Assembly
22	710-0395	Hex Head Screw, 5/16-18:2.25
23	710-0859	Hex Head Screw, 3/8-16:2.50
24	710-3180	Hex Head Screw, 5/16-18:1.75
25	912-0214	Hexlock Nut, 3/8-24
26	712-04063	Flangelock Nut, 5/16-18
27	714-0162	Cotter Pin, 5/32:1.25
28	719-04413A	Pivot Bar Axle
29	748-04065-0637	Steering Block
30	748-04068	Spacer, .71 ID X .125 OD X .56LG
31	750-05280	Spacer, .385 X 1.00 X 1.5075
32	631-04415	Steering Wheel
33	731-06825	Steering Wheel Cap
34	634-04406-0961	Wheel Assembly
35	736-04228A	Flat Washer, .781ID x 1.590OD
36	734-1731-0901	Tire
37	741-0990B	Flange Bearing, .760ID
38	741-0516B	Flange Bearing, .760 x 1.00 x 1.20LG
39	934-0255	Tubeless Air Valve
40	634-04405-4042	Rim Assembly

PARTS LIST

Hood and Dash — Model No. 247.28981

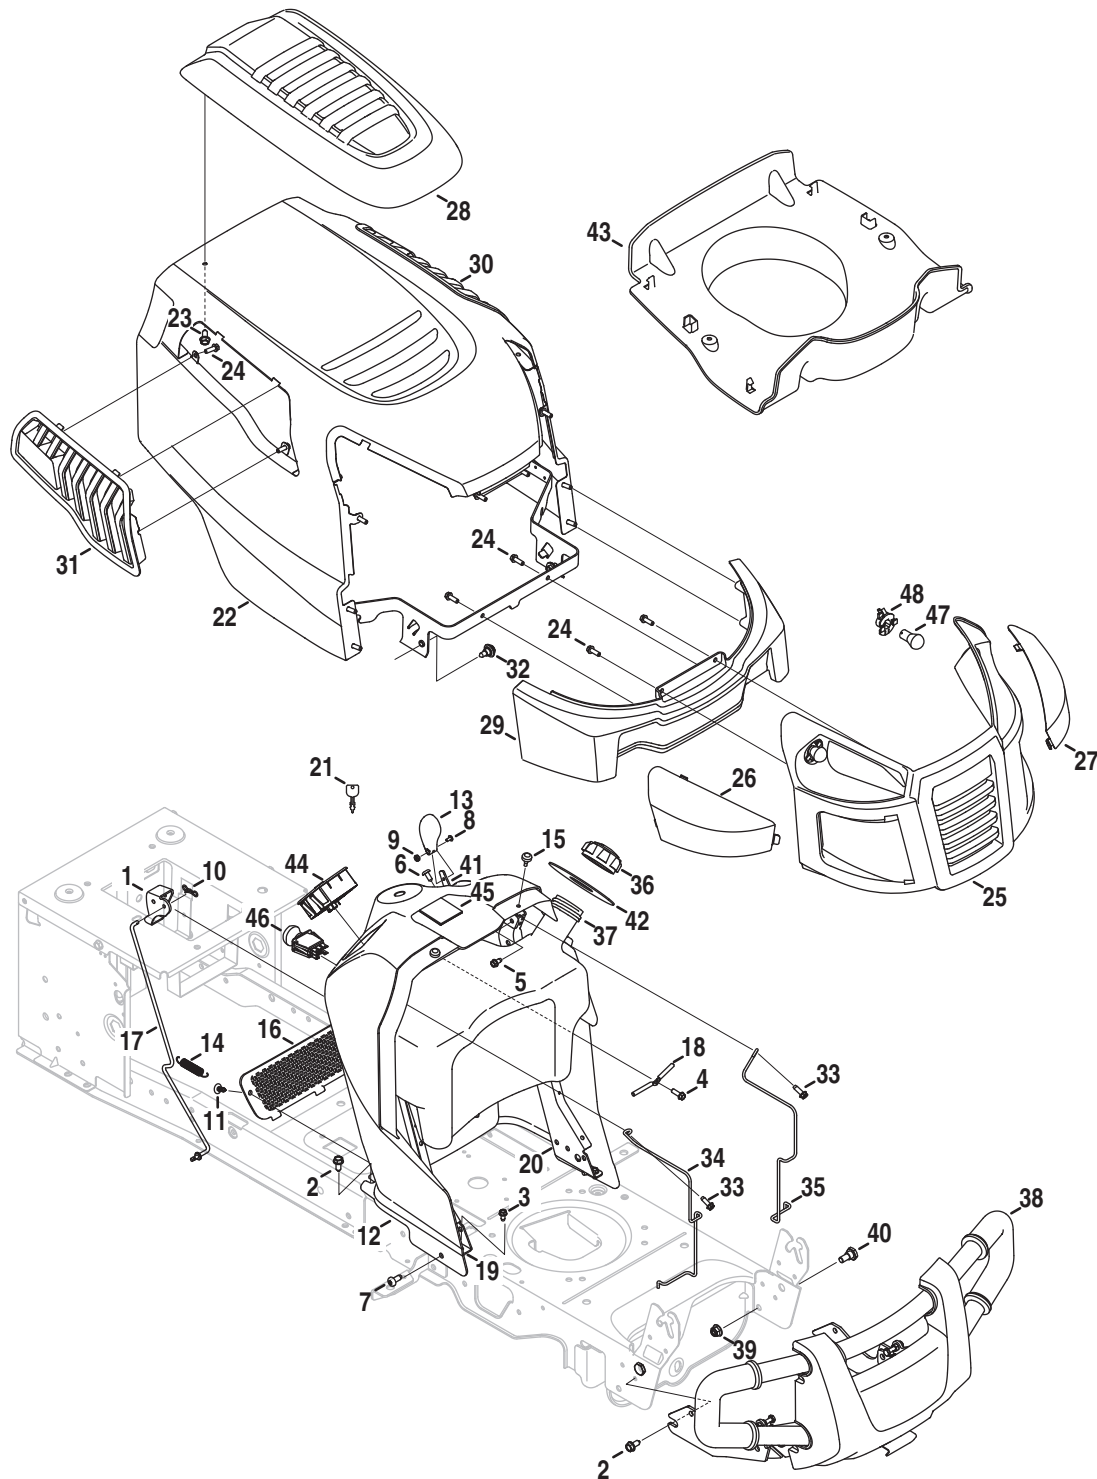

PARTS LIST


Hood and Dash — Model No. 247.28981

Ref. No.	Part No.	Description
1	631-04353P	Dash Lever
2	710-04484	Taptite Screw, Lock Washer, 5/16-18:.750
3	710-0599	Taptite Screw, Lock Washer, 1/4-20:0.500
4	710-0895	Hi-Lo Screw, Lock Washer, 1/4-15:0.750
5	710-0896	Screw, Lock Washer, 1/4-14:0.625
6	710-1017	Screw, 1/4-14:0.625
7	710-1611B	Taptite Screw, 5/16-18:0.750
8	710-3217	Machine Screw, #8-32:0.375
9	712-0142	Hex Nut, #8-32:GRA
10	714-04040	Bow-tie Cotter Pin
11	726-3046	Ratchet Clip:.250 DIA
12	731-07456	Dash
13	731-07550	Control Knob
14	732-04580	Extension Spring, .500 DIA X 2.733 LG
15	735-0271A	Bumper
16	735-04076	Accessory Net
17	747-05280	Control Rod Latch
18	747-1196	Lever Rod
19	783-04285F-0637	RH Dash Support Plate
20	783-04323F-0637	LH Dash Support Plate
21	625-04124	Key (Set of 2)
22	683-04618-0691	Hood Assembly
23	710-04187	Hi-lo Screw, Lock Washer, 1/4-15:0.50
24	710-05108	Screw, Lock Washer, 1/4 DIA:.750

Ref. No.	Part No.	Description
25	931-07457	Grill
26	731-07458	RH Lens
27	731-07459	LH Lens
28	931-07461	Hood Scoop
29	731-07467	Lower Grill
30	731-07469	LH Hood Scoop
31	731-07470	RH Hood Scoop
32	738-04091A	Shoulder Screw, .43X.29:TT:5/16-18
33	710-0642	Taptite Screw, 1/4-20:0.750
34	747-05049	RH Tank Support Rod
35	747-05050	LH Tank Support Rod
36	751-0603A	Fuel Cap
37	951-10573	Fuel Tank, 2.75 Gallons
38	689-00157	Guard Assembly
39	712-04065	Flangelock Nut, 3/8-16
40	738-0143	Shoulder Bolt, .496 x .336:3/8-16
41	946-04556	Throttle/Choke Control
42	735-04170	Fuel Tank Gasket
43	731-07495	P-Style Plen
44	725-04992	Switch Key Module
45	925-04036C	Hour Meter
46	725-04258	PTO Switch
47	925-0963	Miniature Lamp, 12V
48	925-1649	Lamp Socket

PARTS LIST

Seat and Fender — Model No. 247.28981

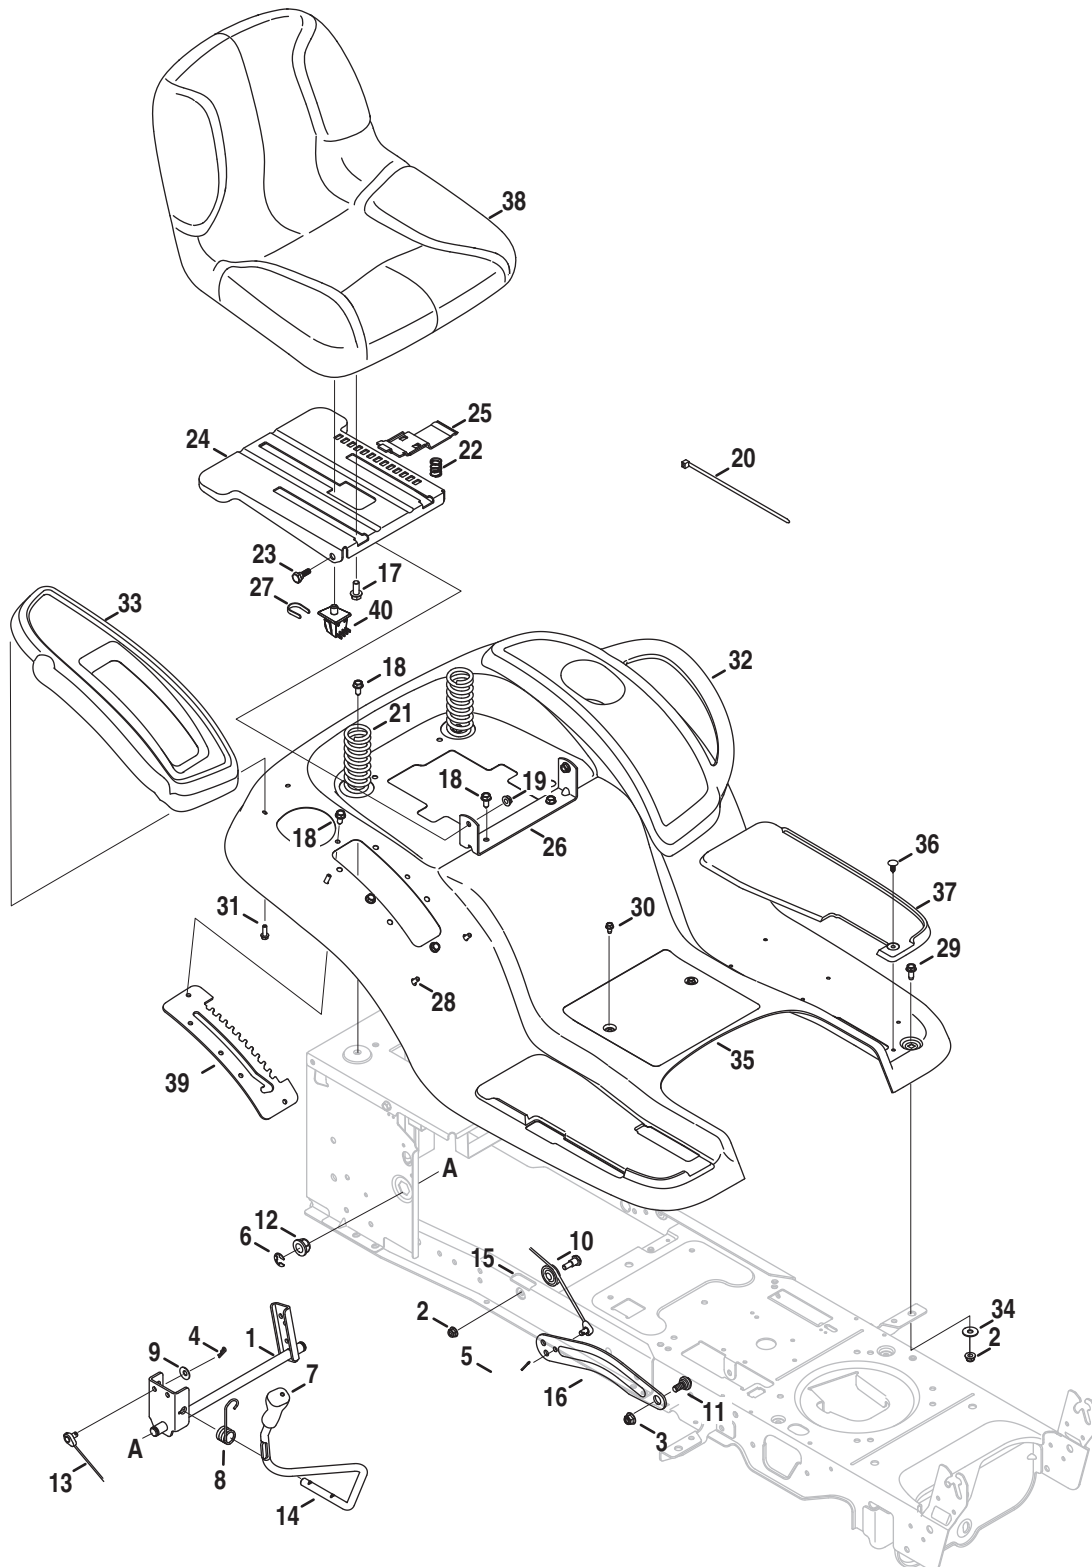

PARTS LIST


Seat and Fender — Model No. 247.28981

Ref. No.	Part No.	Description
1	683-04223-0637	Lift Shaft Assembly
2	712-04063	Flangelock Nut, 5/16-18
3	712-04065	Flangelock Nut, 3/8-16
4	914-0104	Cotter Pin, .072 DIA. X 1.13 LG
5	714-04040	Bow-Tie Cotter Pin
6	716-0106A	E-Ring, .625 DIA. SHAFT
7	720-04150	Handle Grip
8	732-0874	Torsion Spring
9	736-0105	Spring Washer, .401 X .870 X .063
10	738-0138A	Shoulder Screw, .437 X .470:5/16-18
11	938-0380	Shoulder Bolt, .500 x .270:3/8-16
12	941-0225	Hex Flange Bearing
13	746-0968	Lift Cable, 16.16 LG
14	747-04962A	Lift Handle
15	756-04331	Pulley Roller Cable
16	783-05546A-0637	Lift Arm
17	710-04482	Hex Head Flange, 3/8-16:.875
18	710-04484	Taptite Screw, Lock Washer, 5/16-18:.750
19	712-3004A	Flangelock Nut, 5/16-18
20	725-0157	Cable Tie, 3/16 X .05 X 7.4
21	732-04561	Compression Spring, 1.71 X 3.735 X .238

Ref. No.	Part No.	Description
22	732-04563	Compression Spring, .68 X 1.065 X .055
23	938-0296	Shoulder Screw, .437 X .268:5/16-18
24	783-06049-0691	Seat Mounting Bracket
25	783-06050	Seat Adjustment Lever
26	783-06088-0691	Seat Pivot Bracket
27	783-06448	Switch Retainer Clip
28	710-04187	Hi-Lo Screw, Lock Washer, 1/4-15:0.50
29	710-0451	Carriage Bolt, 5/16-18:.750
30	710-0599	Taptite Screw, Lock Washer, 1/4-20:0.500
31	710-0895	Hi-Lo Screw, Lock Washer, 1/4-15:0.750
32	731-05837	LH Fender Cover
33	731-06754	RH Fender Cover
34	736-3078	Flat Washer, .344 X 1.00 X .063 HDN
35	783-06118-0691	Fender
36	726-3046	Ratchet Clip
37	735-04137	LH Foot Pad
—	735-04139	RH Foot Pad
38	757-04127	Seat
39	783-06181-0637	Lift Bracket
40	925-05013	Seat Switch

PARTS LIST

Drive and Rear Wheels — Model No. 247.28981

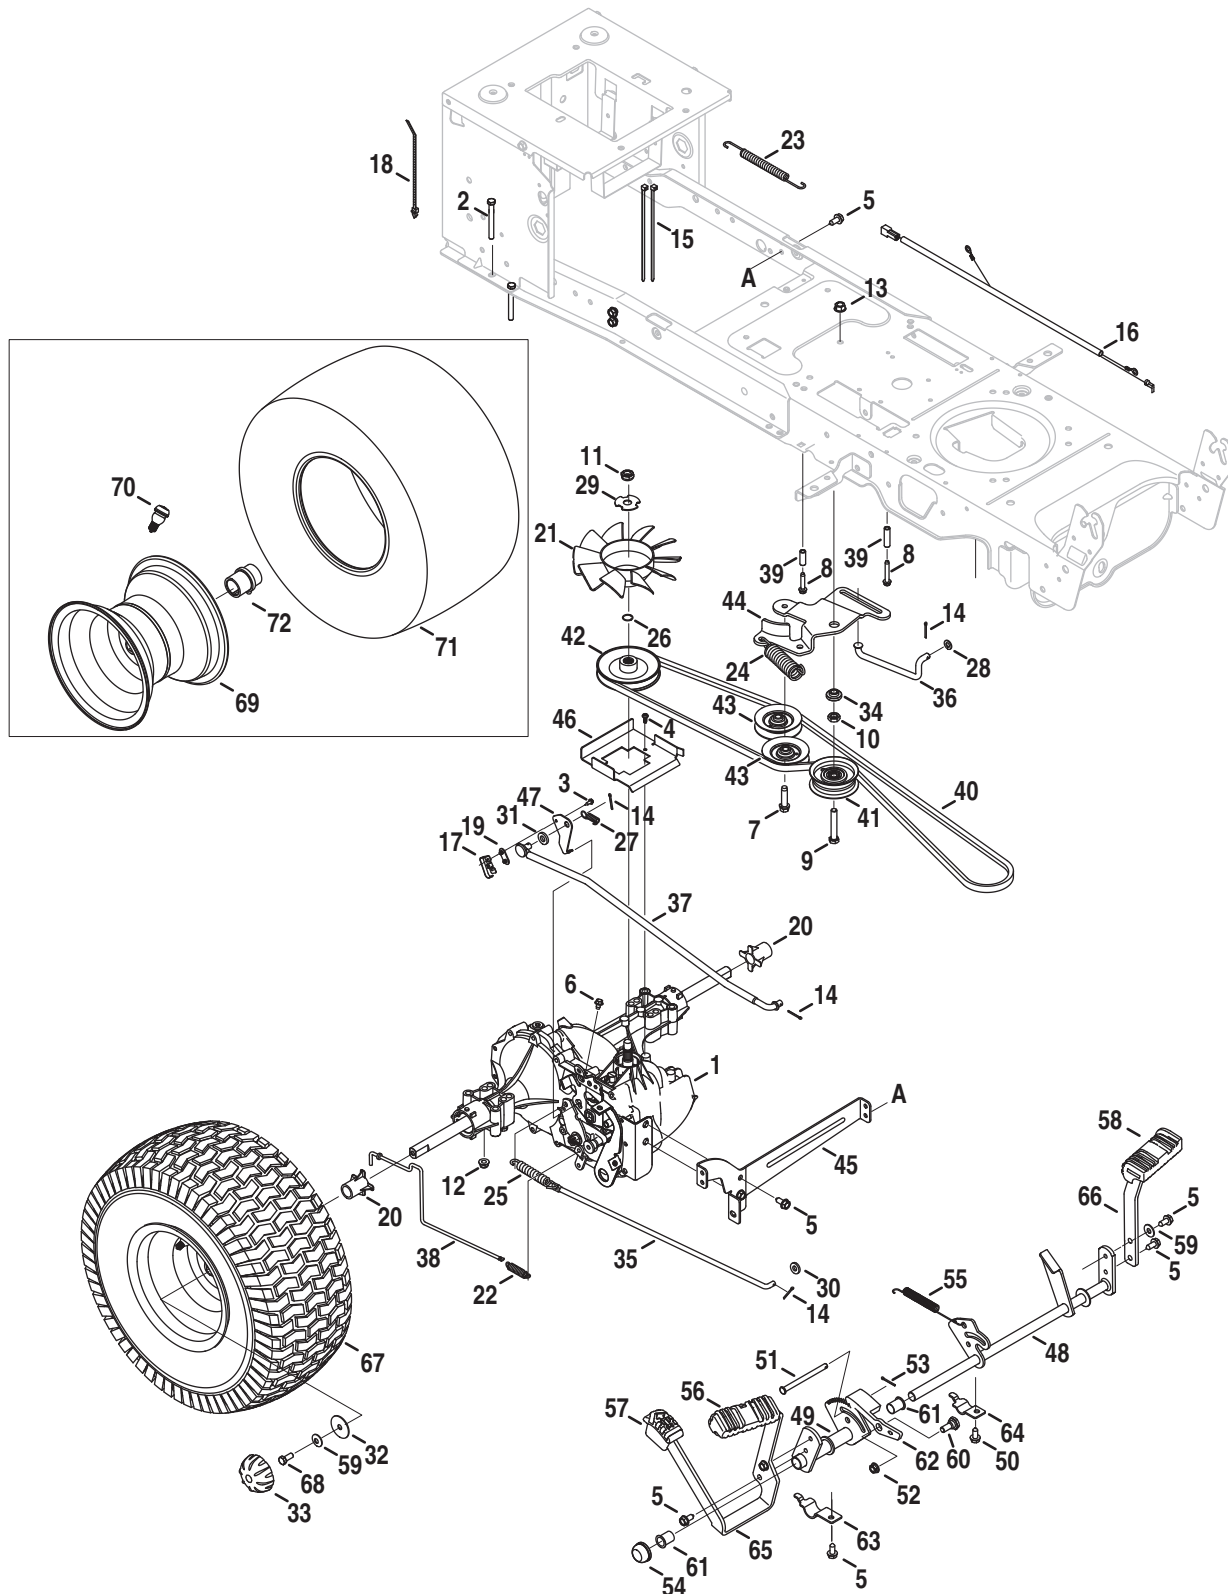

PARTS LIST


Drive and Rear Wheels — Model No. 247.28981

Ref. No.	Part No.	Description
1	918-0319	Hydro Transmission
2	710-0176	Hex Head Screw, 5/16-18:2.75
3	710-0227	Screw, Indented Washer, #8-18:0.500
4	710-0351	Screw, #10-16:0.500
5	710-04484	Taptite Screw, Indented Washer, 5/16-18:.750
6	710-0653	Taptite Screw, Indented Washer, 1/4-20:0.375
7	710-1007	Taptite Sems Screw, :3/8-16:1.500
8	710-1325	Taptite Screw, Indented Washer, 1/4-20:1.625
9	710-3011	Hex Head Screw, 3/8-16:2.25
10	912-0240	Jam Nut, 7/16-20
11	912-0346	Jamlock Nut, 1/2-20
12	712-04063	Flangelock Nut, 5/16-18
13	912-0431	Flangelock Nut, 3/8-16
14	914-0111	Cotter Pin, 3/32:1.0
15	725-0157	Cable Tie. 3/16 X .05 X 7.4
16	725-04791A	Jumper Harness
17	725-1644	Short Spring Switch
18	926-0154	Push Mount Cable Tie 7.5 LG
19	926-0320	Insulator Nut Plate
20	731-05299A	Sleeve, .765 ID X 1.500 LG
21	731-06098	Hydro Fan
22	932-0209	Extension Spring, .48 OD X 2.03
23	732-04606	Extension Spring, .500 DIA X 12.6 LG
24	732-04624	Extension Spring, 1.00 DIA X 4.75
25	732-0716D	Extension Spring, .59 OD X 4.00 LG
26	732-0729	Wire Ring
27	732-3118	Extension Spring, .375 OD X 1.44 LG
28	936-0264	Flat Washer, .330 X .630 X .0635
29	736-04263	Lock Washer
30	936-3008	Flat Washer, .344 X .750 X .120
31	736-3010	Flat Washer, .407 X .812 X .135
32	736-0430	Flat Washer, .50 x 1.59 x .062
33	731-2290A	Hub Cap
34	738-04420	Shoulder Spacer, 1.375 X .380 X .183
35	747-04139	Brake Rod
36	747-04957A	Footpedal Bypass Transmission Rod

Ref. No.	Part No.	Description
37	747-04979	Hydro Control Rod
38	747-04991	Hydro Bypass Rod
39	750-04456	Spacer, 260 X .372 X 1.420 LG
40	954-04207	V-Belt, 4L X 78.9 POLY
41	756-04224	Flat Idler Pulley, 2.75 OD
42	756-04308	Input Pulley, 4.13 DIA
43	756-04325	V Idler Pulley, X 3.06
44	783-06027A	Center Idler Bracket
45	783-06133-0637	Hydro Mounting Bracket
46	783-06260-0637	Belt Disengage Support Bracket
47	783-1019B	Switch Actuator Bracket
48	647-04152A	Brake Control Assembly
49	683-04488	Hydro Pedal Bracket Assembly
50	710-0604A	Taptite Screw, Indented Washer, 5/16-18:0.625
51	711-05068	Clevis Pin, 5/16 X 3.985
52	712-04065	Flangelock Nut, 3/8-16
53	714-04040	Bow-Tie Cotter Pin
54	726-0214	Push Cap
55	732-04587	Extension Spring, .63 DIA X 4.95 LG
56	735-04118A	Forward Pedal Pad
57	735-04135	Reverse Pedal Pad
58	735-04136	Brake Pedal Pad
59	736-0242	Bell Washer, .340 X .872 X .060
60	938-0380	Shoulder Bolt, .500 X .270:3/8-16
61	741-0495	Flange Bearing, .630 ID X .695 OD X .60
62	748-04203	Cruise Latch
63	783-05914	Pedal Support Bracket
64	783-05940	Pedal Support Bracket, 5/8
65	783-06059-0637	Drive Pedal Bracket
66	783-06103A-0637	Brake Pedal Bracket
67	634-0177-0961	Wheel Assembly
68	710-0627	Hex Head Screw, 5/16-24:.750
69	634-04369-4042	Rim Assembly
70	934-0255	Tubeless Air Valve
71	734-1873-0901	Tire
72	941-0490	Axle Hub

PARTS LIST

Engine Accessories — Model No. 247.28981

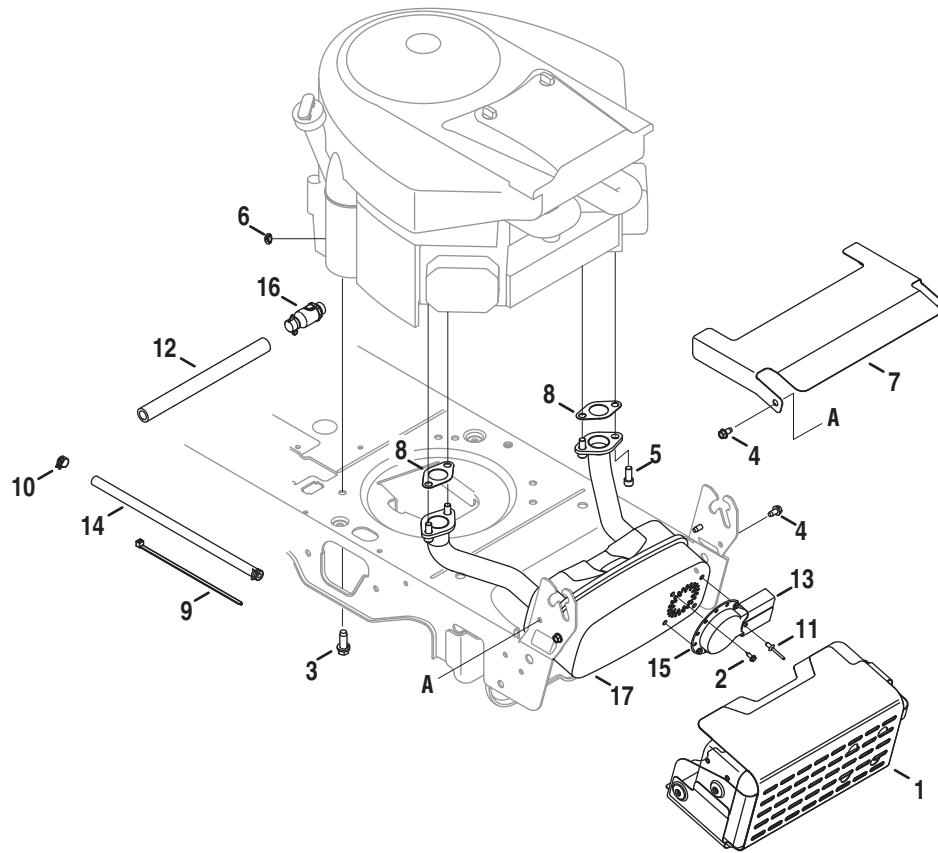


PARTS LIST

Engine Accessories — Model No. 247.28981

Ref. No.	Part No.	Description
1	683-04549-0637	Muffler Shield Assembly
2	710-0227	Screw, Indented Washer, #8-18:0.500
3	710-04683	Taptite Screw, Indented Washer, 3/8-16:1.000
4	710-0599	Taptite Screw, Indented Washer, 1/4-20:0.500
5	710-1314A	Socket Head Screw, 5/16-18:.750
6	712-0271	Sems Nut, 1/4-20
7	783-06378	Heat Shield
8	721-0460	Exhaust Gasket
9	725-0157	Cable Tie, 3/16 X .05 X 7.4
10	726-0205	Hose Clamp, .490 DIA.
11	728-04000	Rivet, .188 DIA X .300 L
12	751-3141-14	Oil Drain Extension Hose
13	751-0564B	Muffler Deflector
14	751-10349	Fuel Hose
15	751-10353	Long Muffler Deflector
16	951-10517A	Oil Drain
17	751-10542A	Muffler Deflector

PARTS LIST

PTO and Battery — Model No. 247.28981

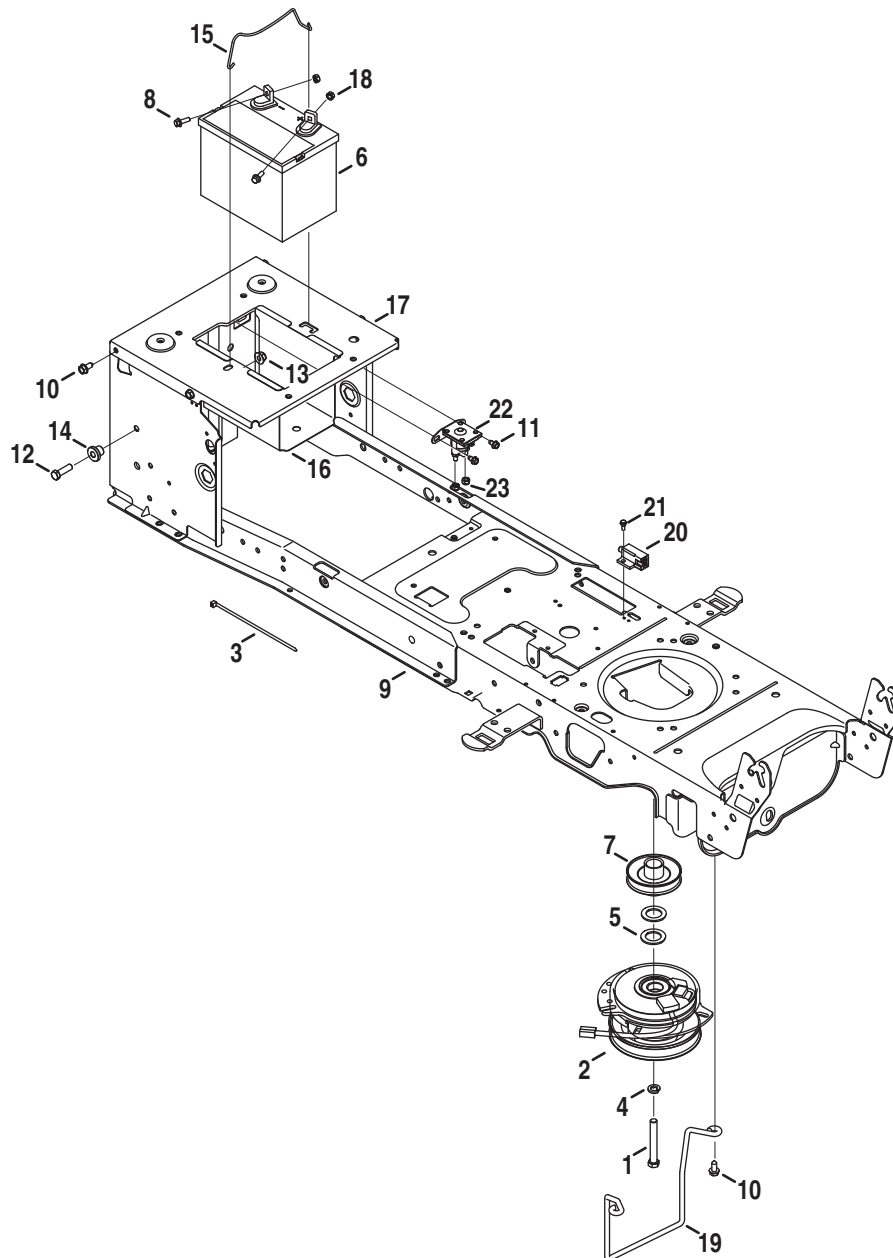


PARTS LIST

PTO and Battery — Model No. 247.28981

Ref. No.	Part No.	Description
1	710-04379A	Hex Head Screw, 7/16-20:3.50
2	917-04174A	Electric PTO Clutch
3	725-0157	Cable Tie, 3/16 x .05 x 7.4
4	936-0171	Lock Washer, 7/16
5	736-0277	Flat Washer, 1.031 x 1.620 x .095
6	725-05088	Battery
7	756-0978B	Electric PTO Engine Pulley
8	710-04666	Hex Head Flange, 1/4-20:.75
9	683-04469A-0691	Frame
10	710-04484	Taptite Screw, Indented Washer, 5/16-18:.750
11	710-0599	Taptite Screw, Indented Washer, 1/4-20:0.500
12	710-3005	Hex Head Screw, 3/8-16:1.25
13	712-04065	Flangelock Nut, 3/8-16
14	738-04058	Shoulder Spacer, .38 X 1.0 X .70
15	747-04121A	Battery Holder Rod
16	783-0349-0637	Battery Tray
17	783-06089-0637	Seat Frame Bracket
18	712-0271	Sems Nut, 1/4-20
19	747-05195	Belt Keeper Rod
20	725-04363	Interlock Switch
21	738-04237A	Shoulder Screw, #10-32:.500
22	725-04439	Solenoid, 12 V
23	712-04064	Flangelock Nut, 1/4-20
NS	925-04093	Wire Harness Assembly

PARTS LIST

Deck — Model No. 247.28981

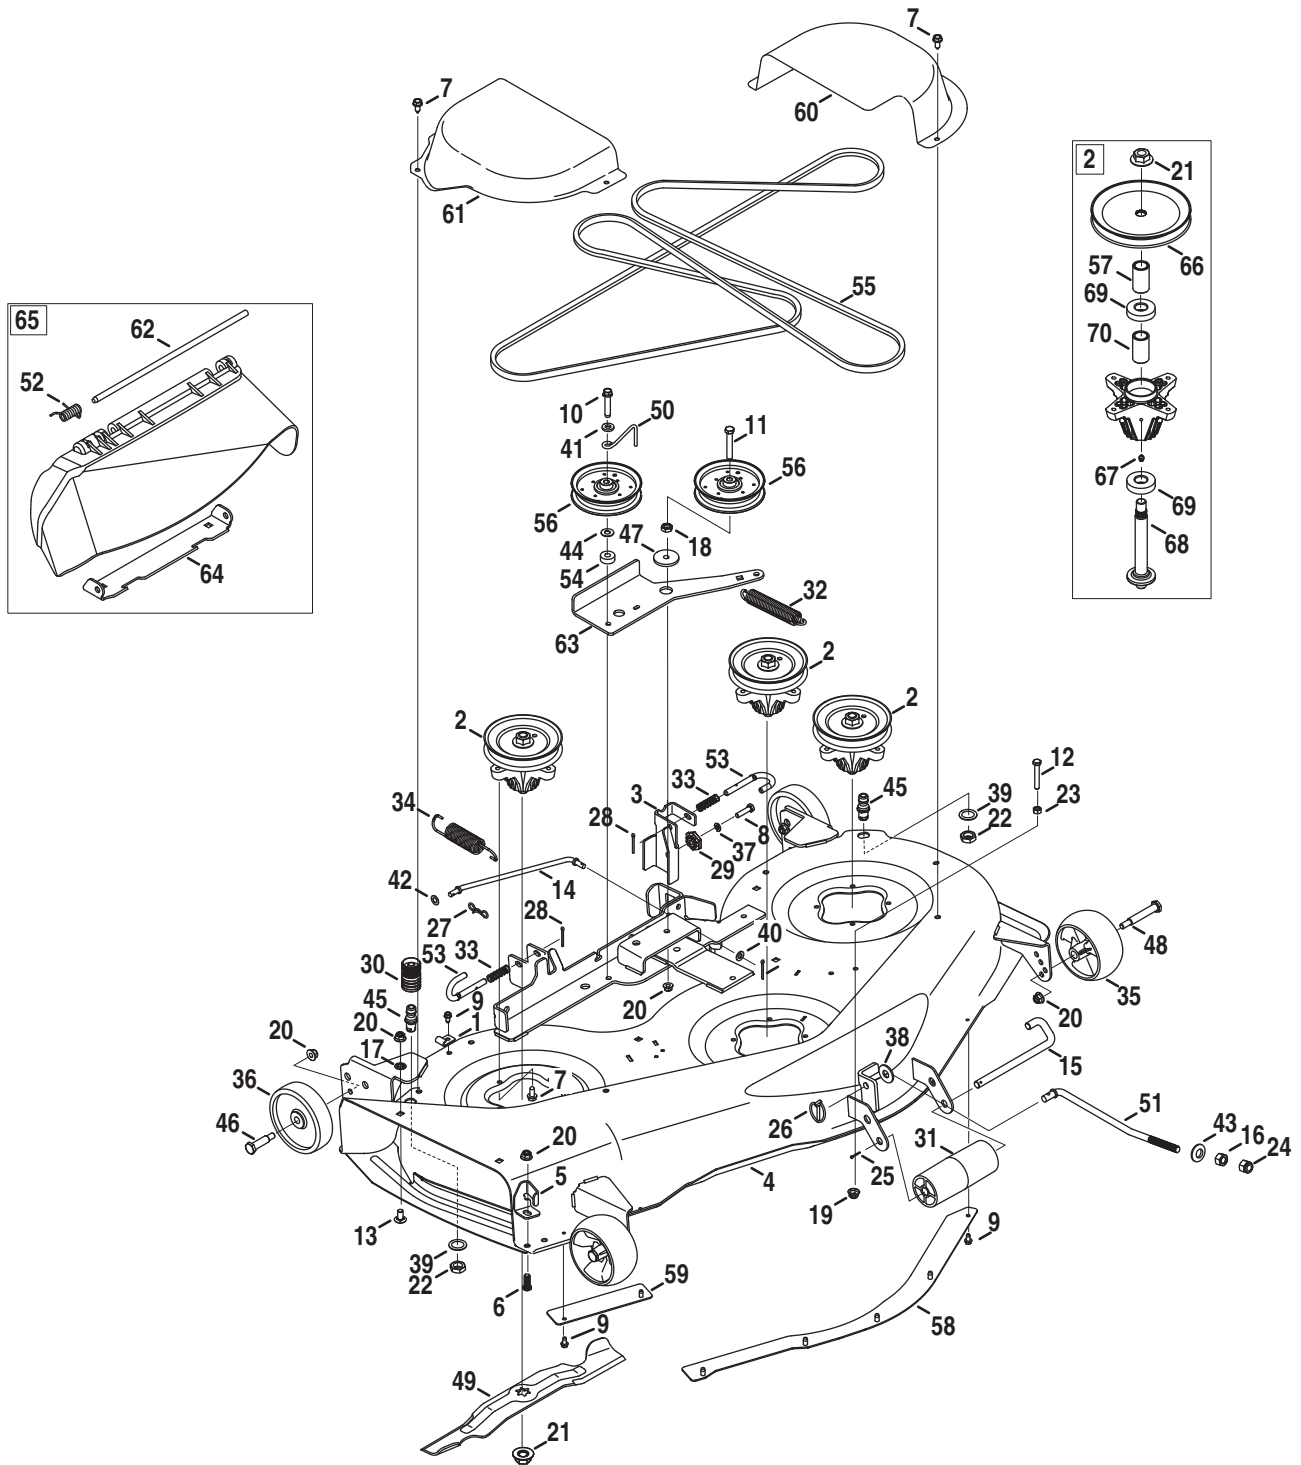

PARTS LIST


Deck — Model No. 247.28981

Ref. No.	Part No.	Description
1	96606	Retainer Hook Bracket
2	918-04825B	Spindle Assembly
3	683-0254B-4028	Deck Hanger Bracket Assembly
4	983-04561-4028	Deck Assembly
5	703-3279-4028	Deflector Chute Stop
6	710-04095	Hex Head Screw, 3/8-16:1.00
7	710-04484	Taptite Screw, Indented Washer, 5/16-18:.750
8	710-0528	Hex Head Screw, 5/16-18:1.25
9	710-0599	Taptite Screw, Indented Washer, 1/4-20:0.500
10	710-1008	Taptite Sems Screw, 3/8-16:1.875
11	710-3011	Hex Head Screw, 3/8-16:2.25
12	710-3103	Hex Head Screw, 5/16-18:2.00
13	710-3178	Carriage Bolt, 3/8-16:0.75
14	711-05078	Deck Support Rod
15	911-3314	Roller Pin
16	912-0206	Hex Nut, 1/2-13
17	712-0229	Push Nut, 3/8
18	912-0240	Jam Nut, 7/16-20
19	712-04063	Flangelock Nut, 5/16-18
20	712-04065	Flangelock Nut, 3/8-16
21	712-0417A	Flange Nut, 5/8-18
22	912-0641	Hex Nut, M16-1.5 DIN 936
23	912-3010	Hex Nut, 5/16-18
24	712-3083	Hexlock Nut, 1/2-13
25	914-0111	Cotter Pin, 3/32:1.0
26	753-04070	Lynch Pin, .1875
27	714-04043	Bow-Tie Cotter Pin
28	914-0470	Cotter Pin, 1/8 X 1.25
29	917-04074	Deck Gear
30	921-04041	Water Nozzle Adaptor
31	731-05679	Front Roller
32	732-04649	Extension Spring, 1.0 OD X 6.10 LG
33	732-04652	Compression Spring, .535 OD X 1.751 LG
34	732-0934	Extension Spring, 1.15 OD X 5.99 LG
35	734-04155	Front Deck Wheel

Ref. No.	Part No.	Description
36	734-0973	Rear Deck Wheel
37	936-0119	Lock Washer, 5/16
38	936-0179	Flat Washer, .531 X 1.25 X .100
39	736-0225	Lock Washer, 5/8
40	936-0275	Flat Washer, .344 X .688 X .065
41	936-0300	Flat Washer, .406 X .875 X .059
42	936-0314	Thrust Washer, .375X.70X.030
43	736-0317	Bell Washer, .63 X 1.25 X .18
44	736-3010	Flat Washer, .407X.812X.135
45	737-04003D	Water Nozzle
46	938-0373	Shoulder Bolt, .496 X 1.525:3/8-16
47	738-04162A	Shoulder Spacer, .8840 X .190
48	938-3056	Shoulder Bolt, .496 X 2.50:3/8-16
49	942-04053C	2-in-1 Cutting Blade
50	747-04530	Belt Keeper Rod
51	747-05067A	Deck Lift Rod
52	732-04372	Torsion Spring
53	747-1116	Deck Release Handle Rod
54	750-3119	Spacer, .406 ID X 1.00 OD X .38
55	954-04240	V-Belt
56	756-04129B	Idler Pulley, 4.25"DIA
57	750-1096	Spacer, .800 x 1.100 x 1.53 LG
58	783-04414A-4028	Center Deck Skirt
59	783-04415-4028	RH Deck Skirt
60	783-05280-4028	LH Belt Cover
61	783-05281-4028	RH Belt Cover
62	711-04565	Hinge Pin
63	783-06361-0637	Idler Bracket
64	783-05030	Chute Bracket
65	631-04070A	Chute Deflector
66	756-04216	Deck Pulley, 5.39 DIA
67	937-3000	Lube Fitting
68	738-0976	Spindle Shaft, 4.1250 LG.
69	941-0919	Ball Bearing, .787ID X 1.85 ODX.551
70	748-0434	Spacer, .750 x 1.150 x .230 LG


PARTS LIST

Engine — Model No. 247.28981

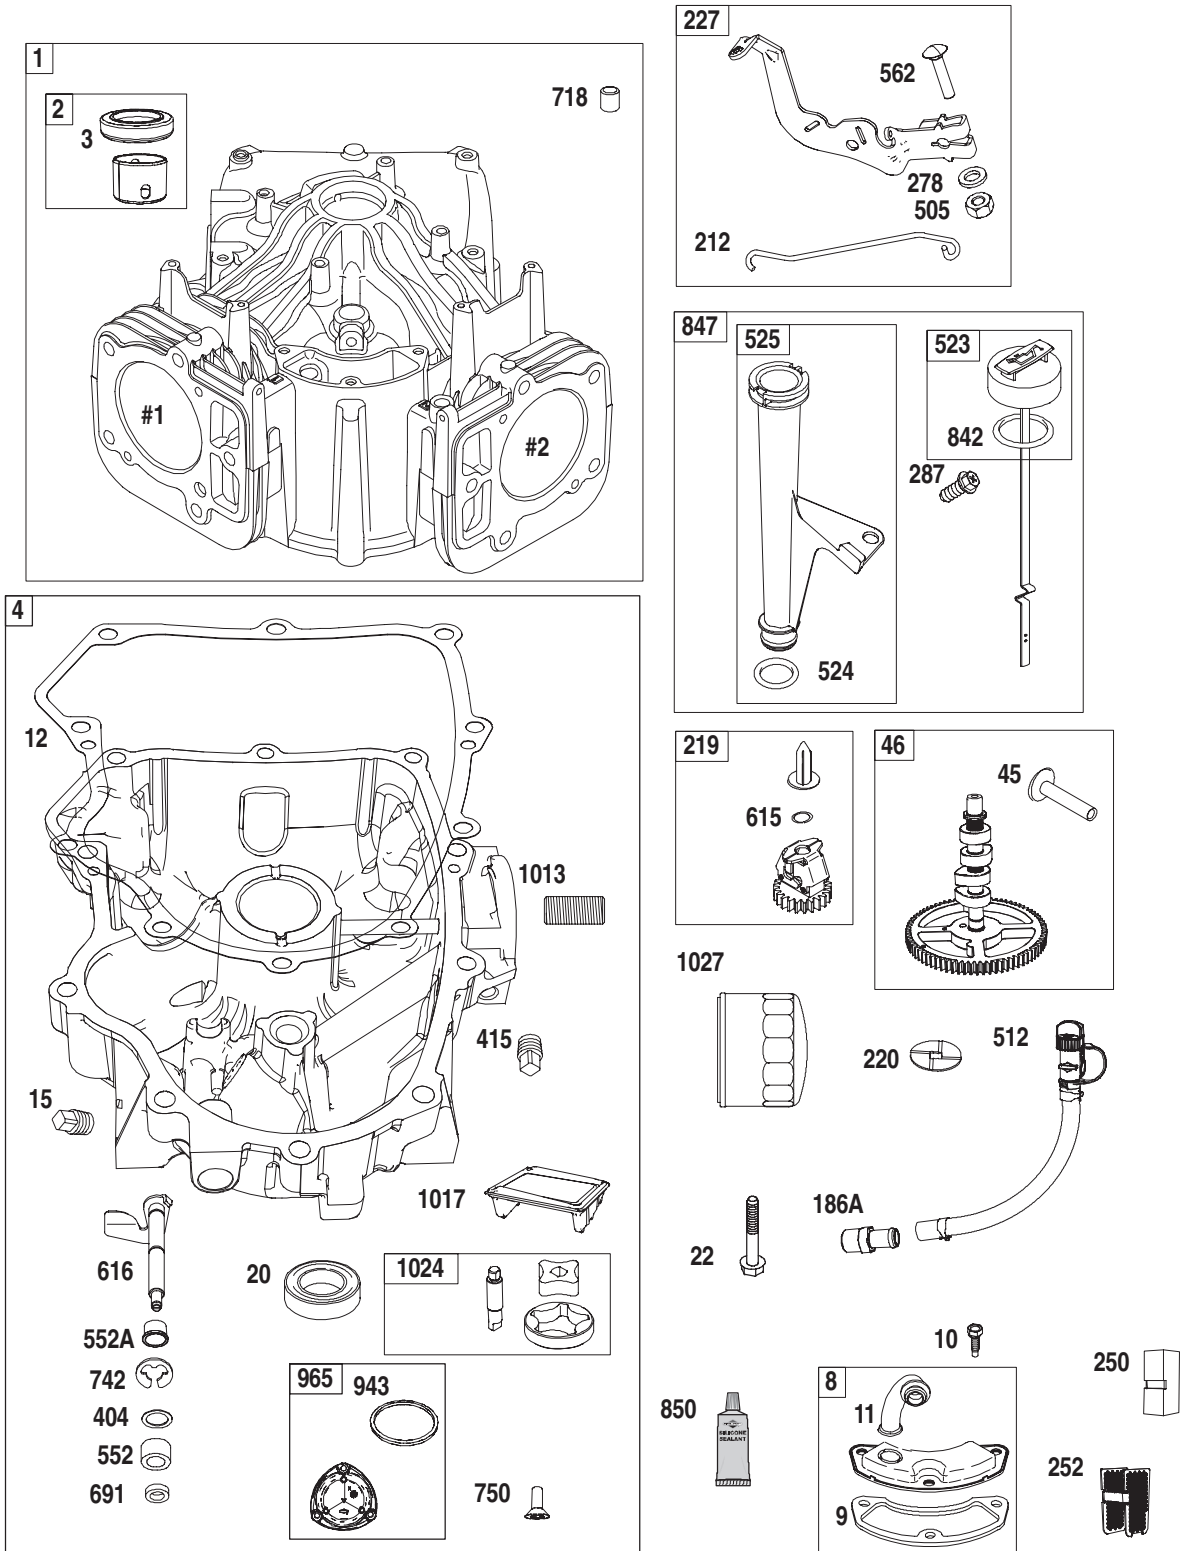


PARTS LIST

Engine — Model No. 247.28981

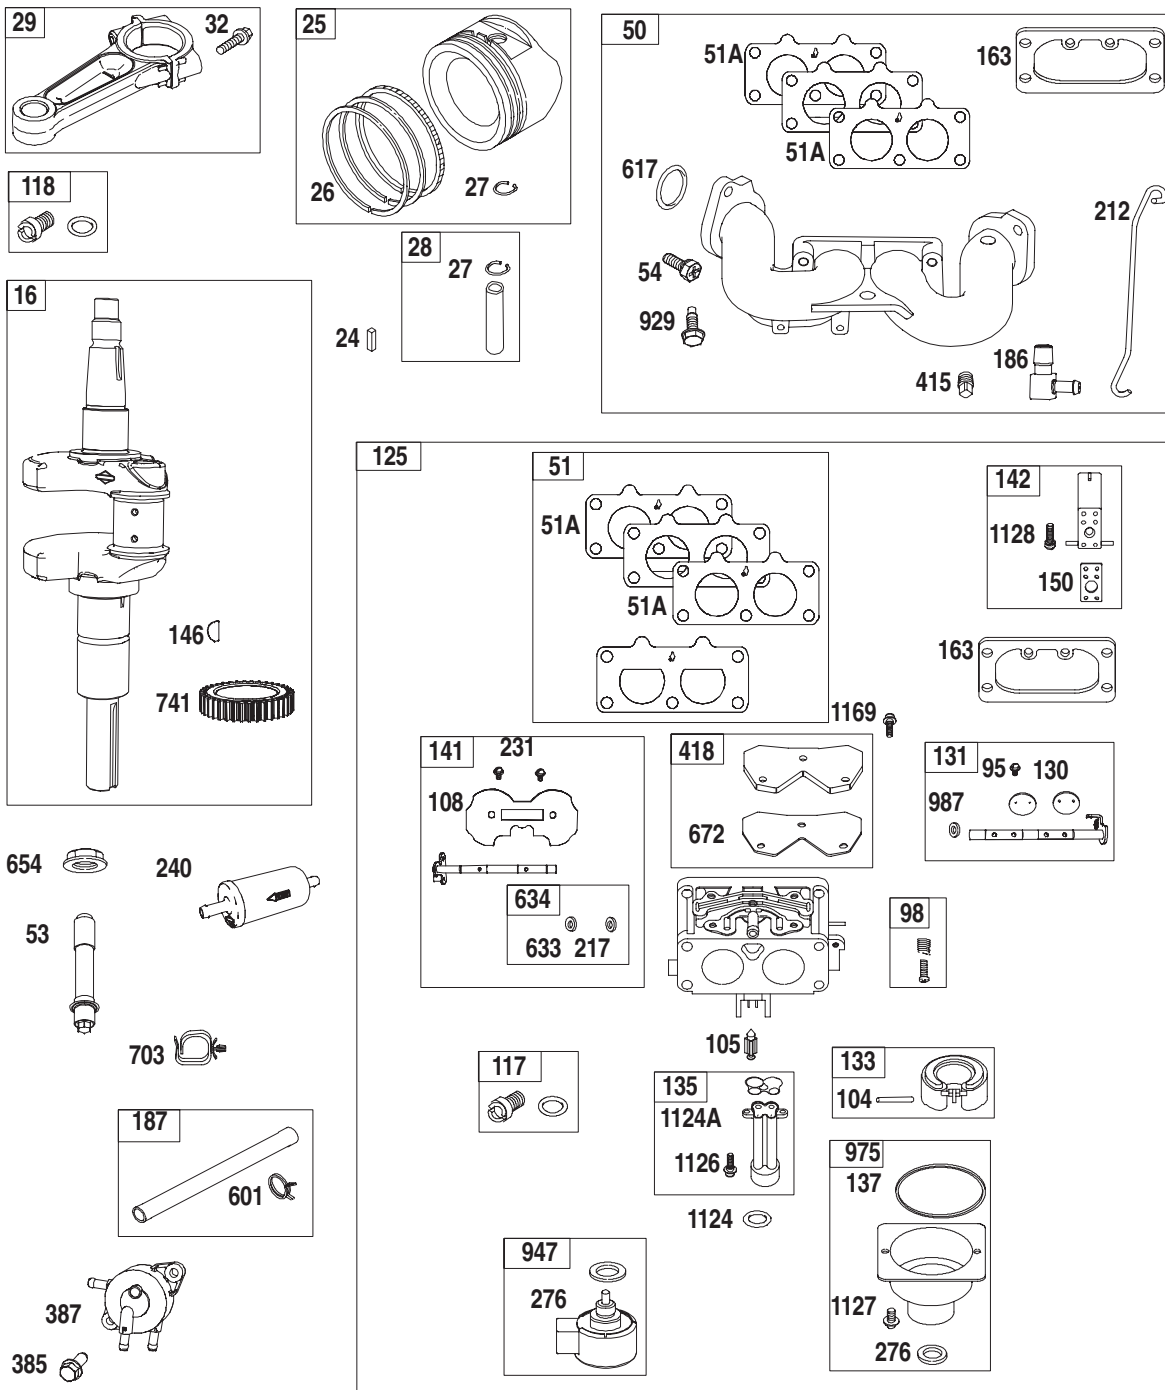





PARTS LIST

Engine — Model No. 247.28981

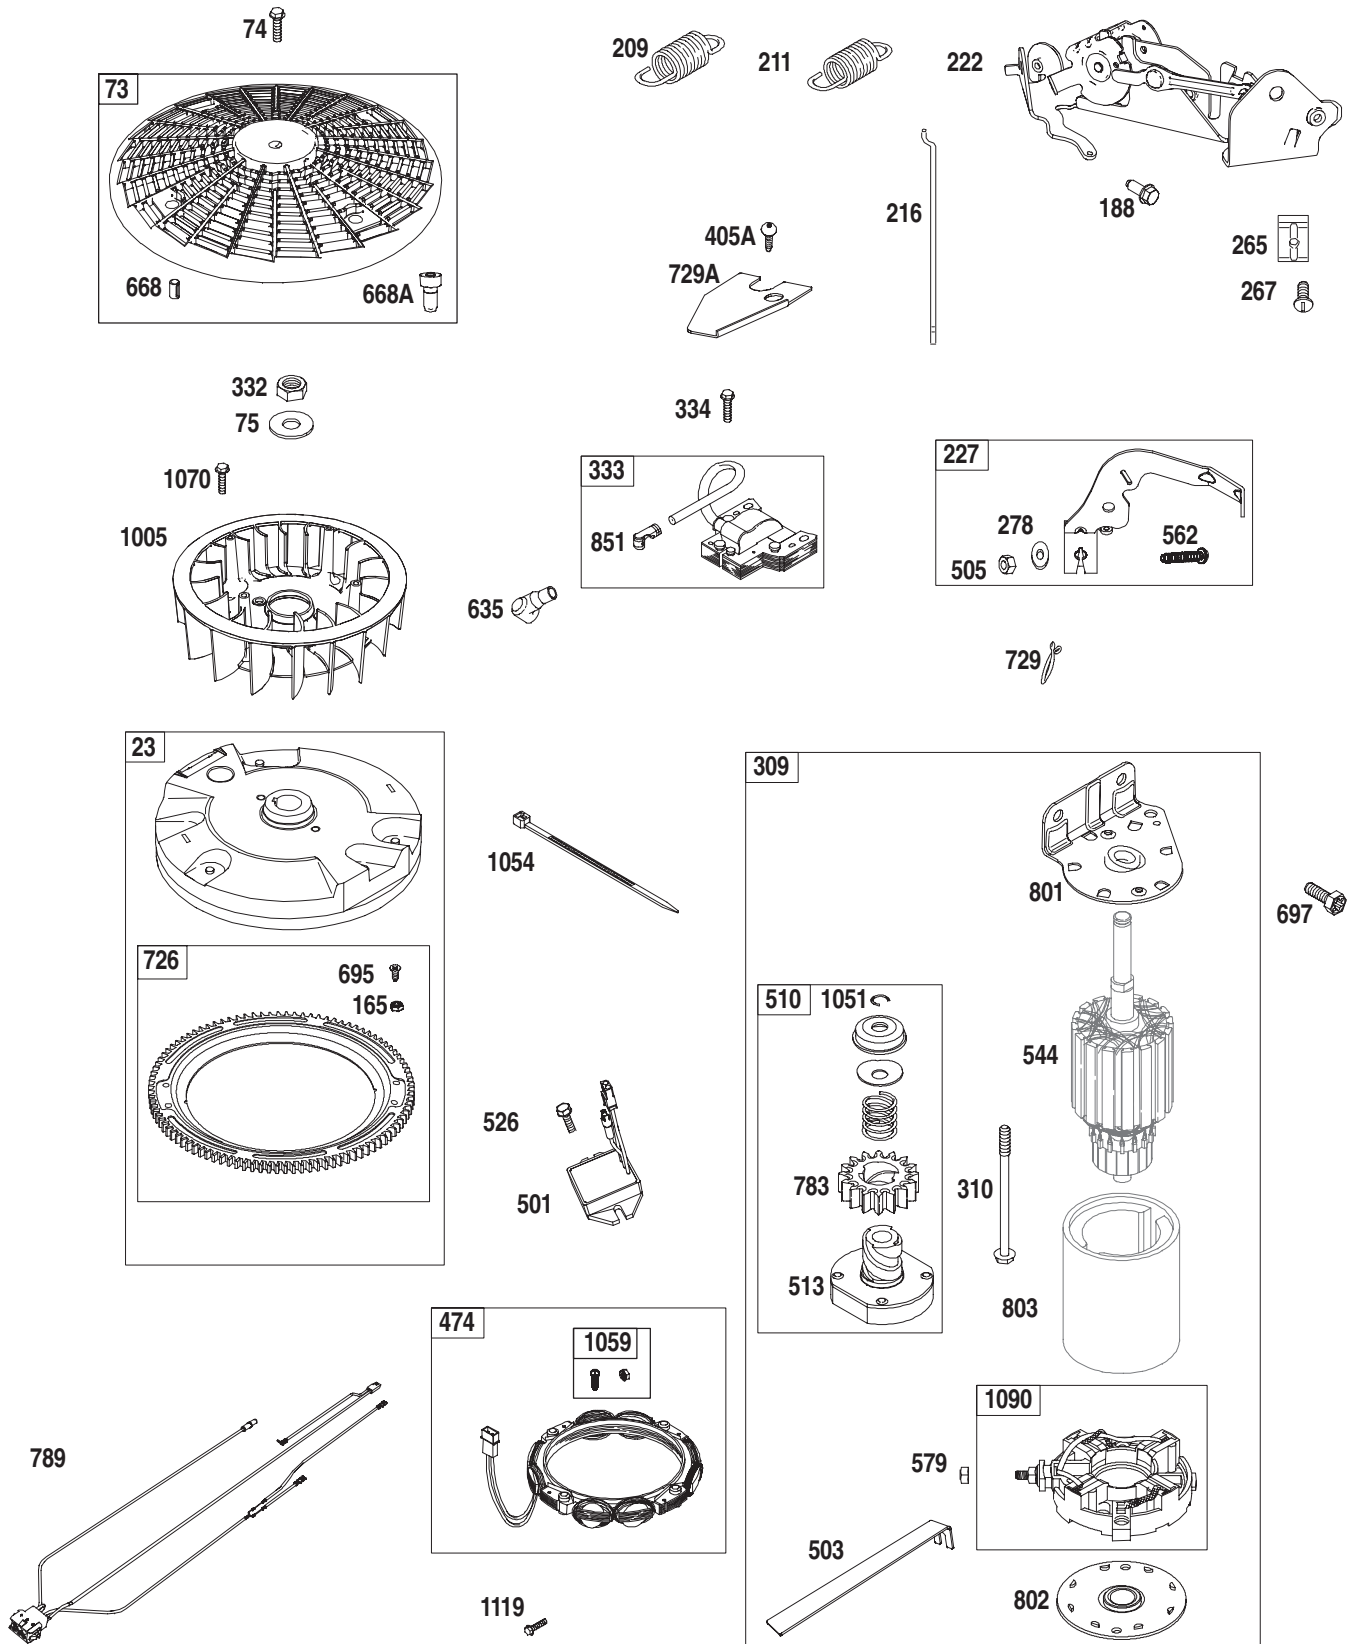


PARTS LIST

Engine — Model No. 247.28981

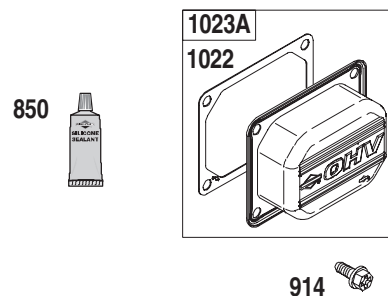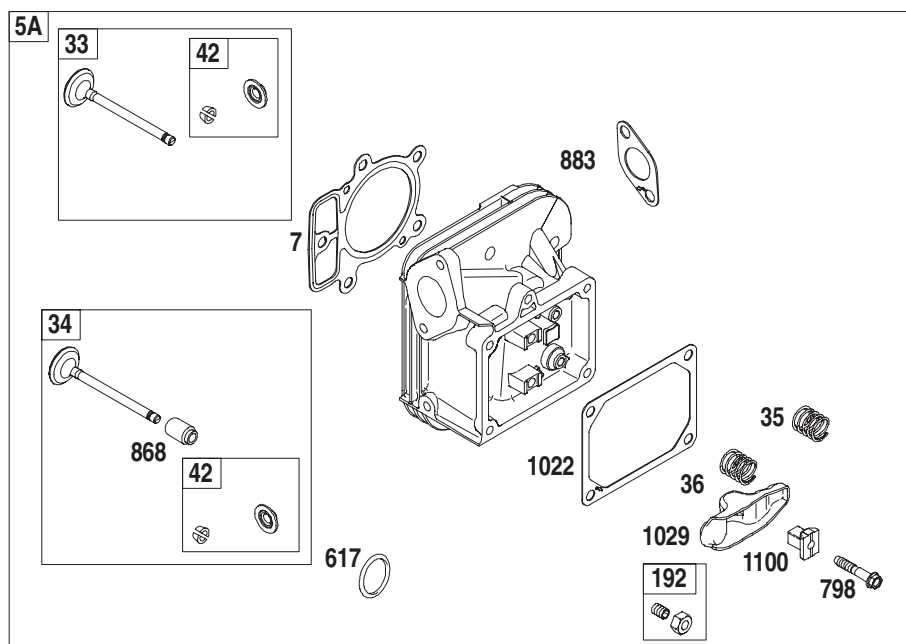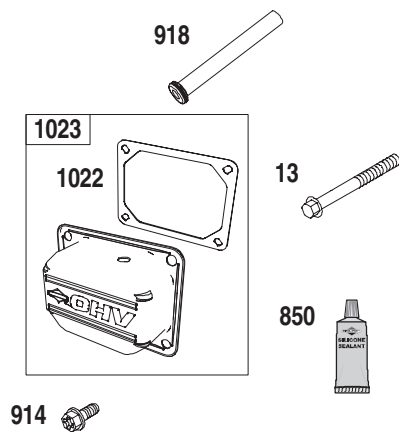
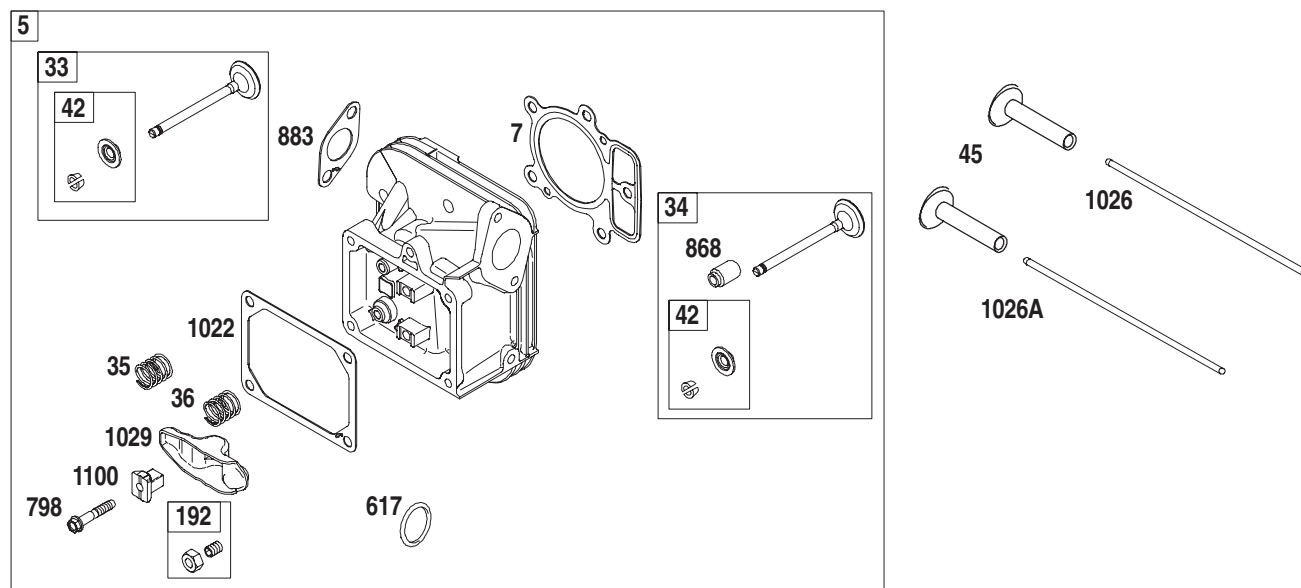


PARTS LIST


Engine — Model No. 247.28981

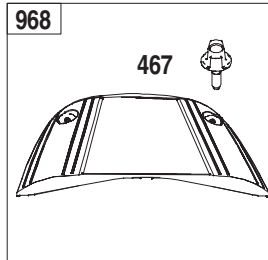


1036 EMISSIONS LABEL

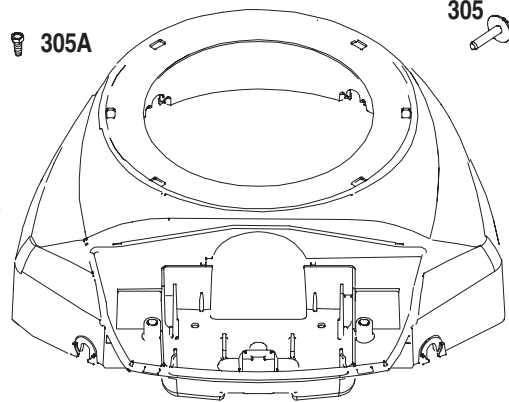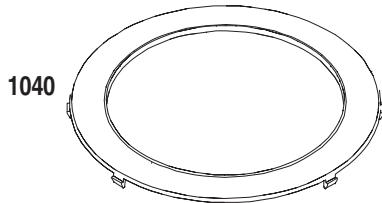


306A

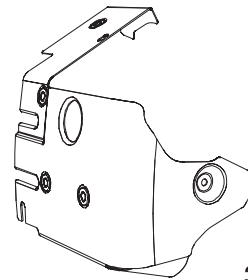




306

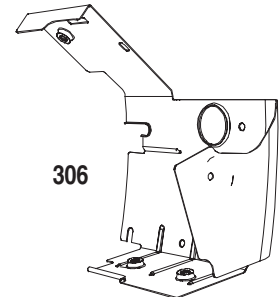

865

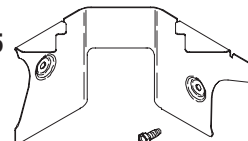

447

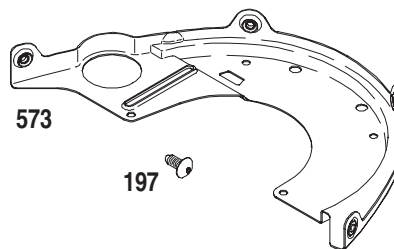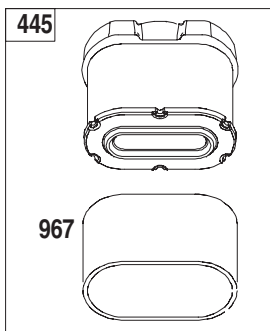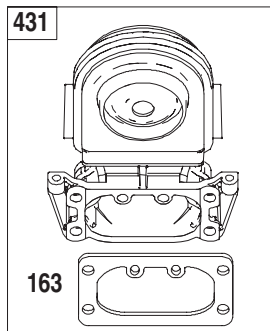

PARTS LIST

Engine — Model No. 247.28981

121 CARBURETOR OVERHAUL KIT

 
150

104

105

137

1124A


672


276


633

987

 1124

163

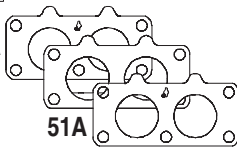
51

 51A


51A


358 ENGINE GASKET SET


3

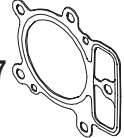
7

9

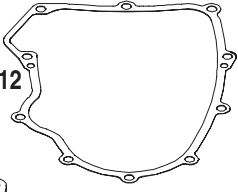12

 163

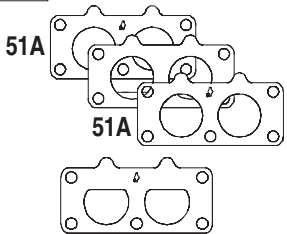51

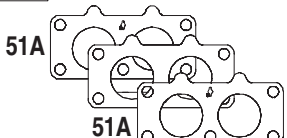51A

51A

524

691


842

20

943

943A


868

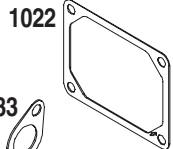
1022

883

51B


1095 VALVE GASKET SET

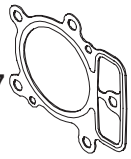7

 163

868

883

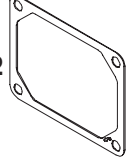1022

PARTS LIST

Engine — Model No. 247.28981

Ref. No.	Part No.	Description
1	BS-793564	Cylinder Assembly
2	BS-499585	Kit-Bushing/Seal (Magneto Side)
3+	BS-391086s	Seal-Oil (Magneto Side)
4	BS-796307	Sump-Engine
5	BS-796270	Head-Cylinder (Cylinder #1)
5A	BS-796271	Head-Cylinder (Cylinder #2)
7+&	BS-693997	Gasket-Cylinder Head
8	BS-792185	Breather Assembly
9+	BS-690937	Gasket-Breather
10	BS-697551	Screw (Breather Assembly)
11	BS-792184	Tube-Breather
12+	BS-697227	Gasket-Crankcase
13	BS-793988	Screw (Cylinder Head)
15	BS-690946	Plug-Oil Drain
16	BS-796540	Crankshaft
20+	BS-795387	Seal-Oil (PTO Side)
22	BS-694966	Screw (Crankcase Cover/Sump)
23	BS-691053	Flywheel
24	BS-222698s	Key-Flywheel
25	BS-793560	Piston Assembly (Standard)
	BS-793563	Piston Assembly (.020" Oversize)
26	BS-793561	Ring Set (Standard)
	BS-792073	Ring Set (.020" Oversize)
27	BS-690975	Lock-Piston Pin
28	BS-696581	Pin-Piston
29	BS-796209	Rod-Connecting
32	BS-690976	Screw (Connecting Rod)
33	BS-793357	Valve-Exhaust
34	BS-793556	Valve-Intake
35	BS-694865	Spring-Valve (Intake)
36	BS-694865	Spring-Valve (Exhaust)
42	BS-499586	Keeper-Valve
45	BS-690977	Tappet-Valve
46	BS-796853	Gear-Cam
48	BS-797093	Short Block
50	BS-695241	Manifold-Intake
51+	BS-795123	Gasket-Intake
51A	BS-690950	Gasket-Intake
51B	BS-690949	Gasket-Intake

Ref. No.	Part No.	Description
53	BS-690951	Stud (Carburetor)
54	BS-699816	Screw (Intake Manifold)
73	BS-494439	Screen-Rotating
74	BS-698425	Screw (Rotating Screen)
75	BS-691056	Washer (Flywheel)
95	BS-690718	Screw (Throttle Valve)
98	BS-699721	Kit-Idle Speed
104%	BS-694918	Pin-Float Hinge
105	BS-698537	Valve-Float Needle
108	BS-699723	Valve-Choke
117	BS-842630	Jet-Main (Standard)
118	BS-797477	Jet-Main (High Altitude)
121	BS-792455	Kit-Carburetor Overhaul
125	BS-796997	Carburetor
130	BS-690993	Valve-Throttle
131	BS-499805	Kit-Throttle Shaft
133	BS-699724	Float-Carburetor
135	BS-699729	Tube-Fuel Transfer
137%	BS-690994	Gasket-Float Bowl
141	BS-796228	Kit-Choke Shaft
142	BS-699726	Nozzle-Carburetor
146	BS-690979	Key-Timing
150	BS-690995	Gasket-Nozzle
163+%	BS-691001	Gasket-Air Cleaner
165	BS-693148	Nut (Ring Gear)
186	BS-795985	Connector-Hose
187	BS-791766	Line-Fuel (Cut to Required Length)
188	BS-697551	Screw (Control Bracket)
192	BS-690083	Adjuster-Rocker Arm
197	BS-697820	Screw (Back Plate)
209	BS-796658	Spring-Governor (Yellow/Brown)
211	BS-796225	Spring-Governed Idle (Orange)
212	BS-695238	Link-Throttle
216	BS-796229	Link-Choke
217	BS-695409	Spring-Choke Return
219	BS-793338	Gear-Governor

+ — Included in Engine Gasket Set, Key. No. 358

& — Included in Valve Gasket Set, Key No. 1095

% — Included in Carburetor Overhaul Kit, Key No. 121

PARTS LIST

Engine — Model No. 247.28981

Ref. No.	Part No.	Description
220	BS-690412	Washer (Governor Gear)
221	BS-841026	Cup-Governor
222	BS-796226	Bracket-Control
227	BS-796223	Lever-Governor Control
231	BS-690718	Screw (Choke Valve)
239	BS-792028	Switch-Oil Pressure
240	BS-695666	Filter-Fuel
250	BS-690957	Retainer-Breather
252	BS-794389	Collector-Oil
265	BS-691024	Clamp-Casing
267	BS-695134	Screw (Casing Clamp)
276%	BS-695410	Washer-Sealing
278	BS-792651	Washer (Governor Control Lever)
287	BS-697551	Screw (Dipstick Tube)
304	BS-797407	Housing-Blower
305	BS-691005	Screw (Blower Housing)
305A	BS-790690	Screw (Blower Housing to Intake Elbow)
306	BS-796541	Shield-Cylinder (Cylinder #2)
306A	BS-796852	Shield-Cylinder (Cylinder #1)
307	BS-697551	Screw (Cylinder Shield)
309	BS-499521	Motor-Starter
310	BS-691263	Screw (Starter Motor)
332	BS-691059	Nut (Flywheel)
333	BS-691060	Armature-Magneto
334	BS-691061	Screw (Magneto Armature)
337	BS-491055s	Plug-Spark
358	BS-694012	Gasket Set-Engine
385	BS-797409	Screw (Fuel Pump)
387	BS-808656	Pump-Fuel
404	BS-690442	Washer (Governor Crank)
415	BS-794903	Plug (Oil Pressure Switch Hole)
418	BS-795912	Plate-Carburetor
431	BS-792297	Elbow-Intake
445	BS-792105	Filter-Air Cleaner Cartridge
447	BS-691003	Screw (Air Guide Cover)
467	BS-790697	Knob-Air Cleaner
474	BS-696458	Alternator
501	BS-797375	Regulator
503	BS-691532	Strap-Starter

Ref. No.	Part No.	Description
505	BS-691029	Nut (Governor Control Lever)
510	BS-794360	Drive-Starter
513	BS-692024	Clutch-Drive
523	BS-691036	Dipstick
524+	BS-691032	Seal-Dipstick Tube
525	BS-691037	Tube-Dipstick
526	BS-697551	Screw (Regulator)
544		Armature-Starter (For Replacement, Order Starter Motor 499521, Reference 309)
552	BS-796638	Bushing-Governor Crank
552A	BS-690553	Bushing-Governor Crank
562	BS-690311	Screw (Governor Control Lever)
573	BS-790444	Plate-Back
579	BS-691029	Nut (Starter Cable)
601	BS-691038	Clamp-Hose (Black)
615	BS-698290	Retainer-Governor Shaft
616	BS-691045	Crank-Governor
617	BS-697891	Seal-O Ring (Intake Manifold) (Red)
633%	BS-699813	Seal-Choke/Throttle Shaft
634	BS-698779	Spring/Seal Assembly
635	BS-66538s	Boot-Spark Plug
654	BS-690958	Nut (Carburetor)
668+	BS-691215	Spacer (Rotating Screen)
668A	BS-691500	Spacer (Rotating Screen)
672	BS-690234	Gasket-Carburetor Plate
691+	BS-790574	Seal-Governor Shaft
695	BS-693149	Screw (Ring Gear)
697	BS-690372	Screw (Drive Cap)
703	BS-691010	Clip
718	BS-690959	Pin-Locating
726	BS-499612	Gear-Ring
729	BS-797454	Clip-Wire
741	BS-690980	Gear-Timing
742	BS-690328	Retainer-E Ring (Governor Crank)
750	BS-796208	Screw (Oil Pump Cover)
783	BS-695708	Gear-Pinion

+ — Included in Engine Gasket Set, Key. No. 358

& — Included in Valve Gasket Set, Key No. 1095

% — Included in Carburetor Overhaul Kit, Key No. 121

PARTS LIST

Engine — Model No. 247.28981


Ref. No.	Part No.	Description
789	BS-797424	Harness-Wiring
798	BS-697890	Screw (Rocker Arm)
801	BS-691283	Cap-Drive
802	BS-691286	Cap-End
803		Housing-Starter (For Replacement, Order Starter Motor 499521, Reference 309)
842	BS-691031	Seal-O Ring (Dipstick Tube)
847	BS-499602	Dipstick/Tube Assembly
850	BS-100106	Sealant-Liquid
851	BS-493880s	Terminal-Spark Plug
865	BS-792286	Cover-Air Guide (Valley)
868+	BS-690968	Seal-Valve
883+&	BS-690970	Gasket-Exhaust
914	BS-691127	Screw (Rocker Cover)
918	BS-797408	Hose-Vacuum
929	BS-695239	Screw (Choke Control Bracket)
943	BS-796222	Seal-O Ring (Oil Pump Cover)
947	BS-841546	Solenoid-Fuel
965	BS-796221	Cover-Oil Pump
967	BS-792303	Filter-Pre Cleaner
968	BS-795120	Cover-Air Cleaner
975	BS-793592	Bowl-Float
987	BS-691000	Seal-Throttle Shaft
1005	BS-791236	Fan-Flywheel
1013	BS-690954	Nipple-Oil Filter
1017	BS-796214	Screen-Oil Pump
1022	BS-690971	Gasket-Rocker Cover
1023	BS-793146	Cover-Rocker (Cylinder #1)
1023A	BS-499600	Cover-Rocker (Cylinder #2)
1024	BS-796220	Pump-Oil
1026	BS-690981	Rod-Push (Exhaust)
1026A	BS-690982	Rod-Push (Intake)
1027	BS-795890	Filter-Oil
1029	BS-690972	Arm-Rocker
1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)
1040	BS-791237	Plate-Trim
1051	BS-691265	Ring-Retaining (Starter Drive)
1054	BS-280275	Tie-Cable

Ref. No.	Part No.	Description
1058	BS-277103	Operator's Manual
1059	BS-698516	Kit-Screw/Washer (Alternator)
1070	BS-791680	Screw (Flywheel Fan)
1090	BS-691293	Retainer-Brush
1095	BS-694013	Gasket Set-Valve
1100	BS-791959	Pivot-Rocker Arm
1119	BS-691183	Screw (Alternator)
1124	BS-841653	Seal-O Ring (Fuel Transfer Tube)
1124A	BS-690988	Seal-O Ring (Fuel Transfer Tube)
1126	BS-690991	Screw (Fuel Transfer Tube)
1127	BS-695407	Screw (Fuel Bowl)
1128	BS-690990	Screw (Carburetor Nozzle)
1169	BS-690990	Screw (Carburetor Plate)
1330	BS-273521	Repair Manual
1329	BS-44Q777-0137-G1	Replacement Engine

+ — Included in Engine Gasket Set, Key. No. 358
 & — Included in Valve Gasket Set, Key No. 1095
 % — Included in Carburetor Overhaul Kit, Key No. 121

LABELS


777S33183

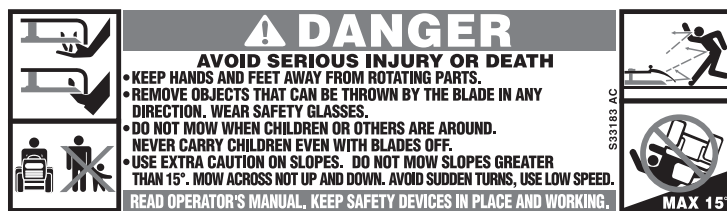


777D14480



777I23132

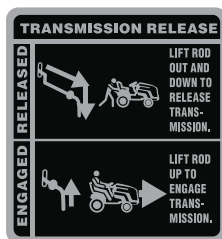

777I23150

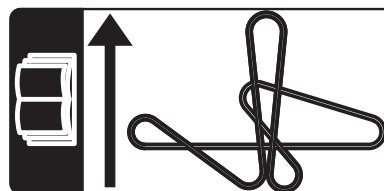

777I23379




777D14485



777I23357




777D14484

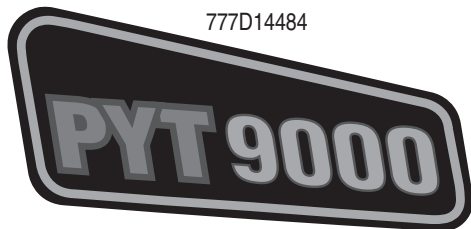

777S30503



777S33593

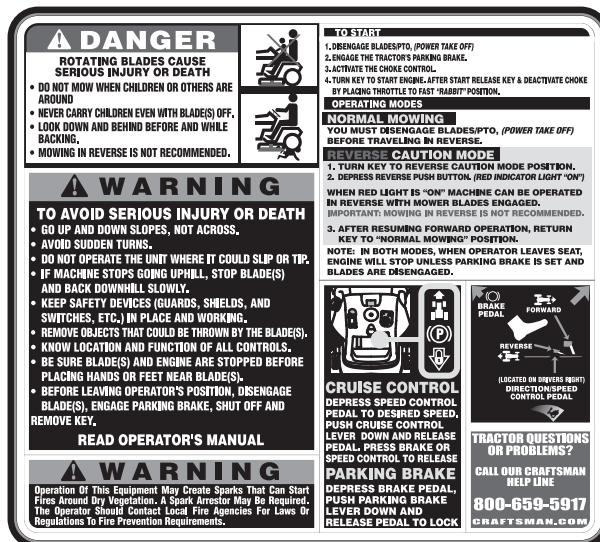

777X43688



777D14491



777X44429



777I23355



777D14477

