


# REPLACEMENT PARTS - MODEL TB6040XP

## 4-CYCLE TRIMMER

PPN 41CD604C966

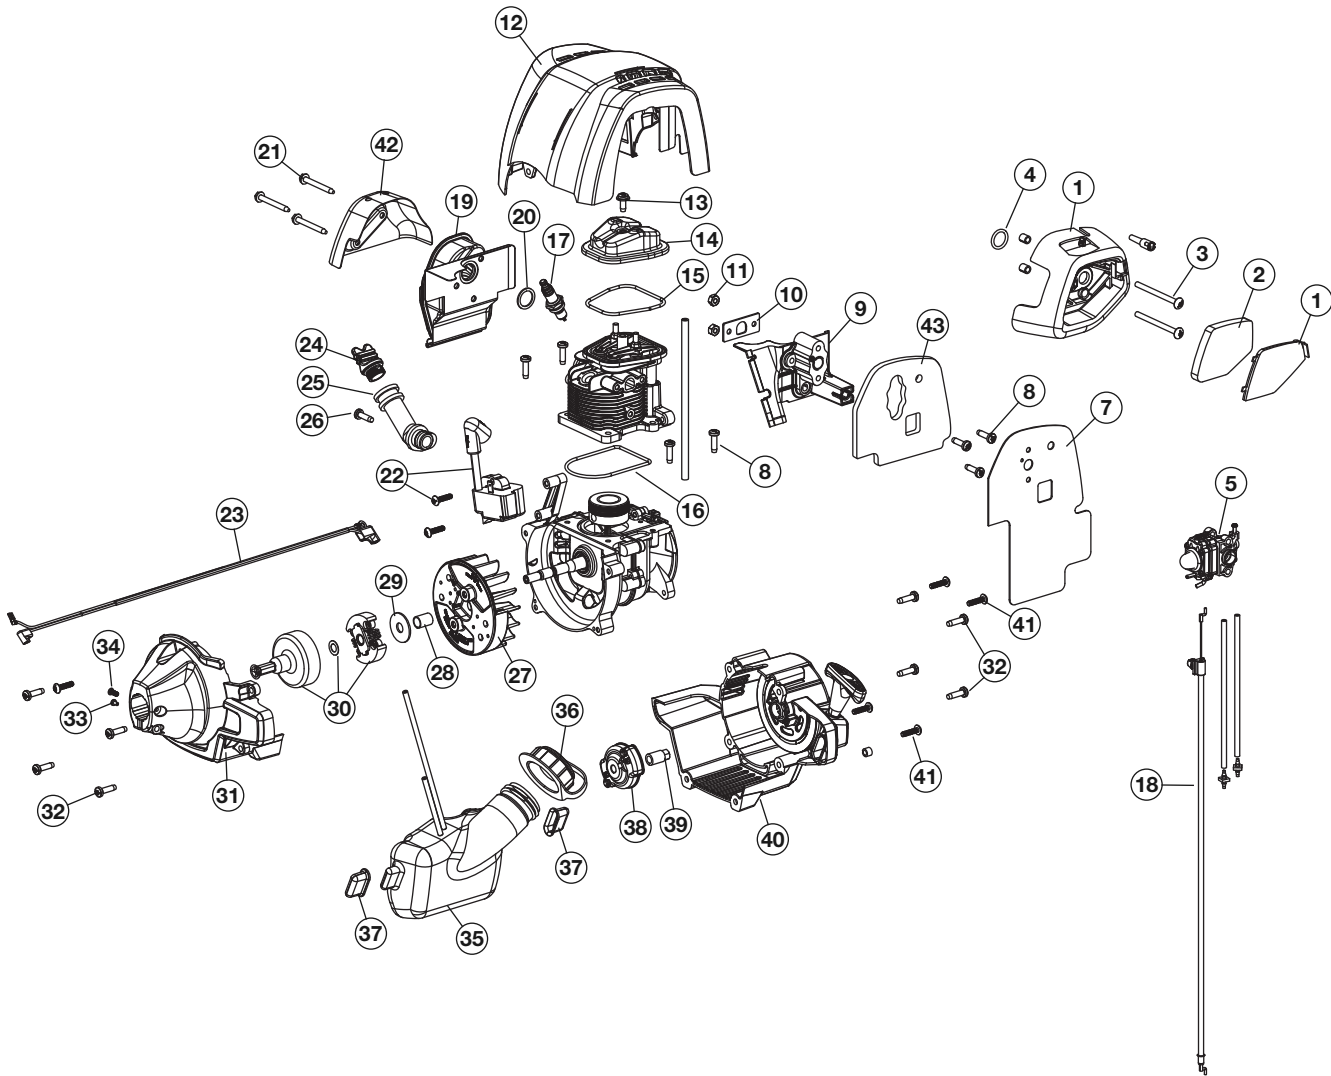


Item	Part No.	Description
1	753-06084	Aircleaner Assembly (includes 2 & 3)
2	753-06085	Air Filter
3	753-05253	Screw
4	791-181751	Carburetor O-Ring
5	753-06083	Carburetor Assembly w/ Fuel Lines
7	753-06082	Carburetor Baffle
8	791-181003	Screw
9	753-05904	Insulator
10	753-05673	Insulator Gasket
11	753-05248	Nut
12	753-06107	Engine Cover
13	791-181025	Screw
14	753-05901	Valve Cover
15	753-05902	Valve O-Ring
16	753-05910	Cylinder O-Ring
17	753-05784	Spark Plug
18	753-06166	Throttle Cable
19	753-06080	Muffler Assembly
20	753-05244	Muffler Gasket
21	753-05246	Muffler Bolt

Item	Part No.	Description
22	753-05907	Module Assembly
23	753-06167	Lead Wires
24	753-05400	Oil Plug Assembly
25	753-06087	Oil Fill Tube Assembly (includes 25)
26	753-05377	Screw
27	753-05815	Flywheel
28	753-05814	Spacer
29	791-182396	Clutch Washer
30	753-05860	Clutch Assembly
31	753-06094	Clutch Cover Assembly
32	753-05377	Screw
33	791-182519	Anti-rotation Screw
34	753-04291	Clamp Screw & Nut
35	753-06093	Fuel Tank (includes 35)
36	753-05289	Fuel Cap
37	753-05259	Fuel Tank Pad
38	753-06091	Pawl Assembly
39	753-06104	Electric Start Adapter
40	753-06108	Starter Cover Assembly
41	753-04595	Screw
42	753-06101	Muffler Shield
43	753-06122	Carburetor Heat Shield
*	753-06088	Short Block Assembly

# REPLACEMENT PARTS - MODEL TB6040XP

## 4-CYCLE TRIMMER

PPN 41CD604C966

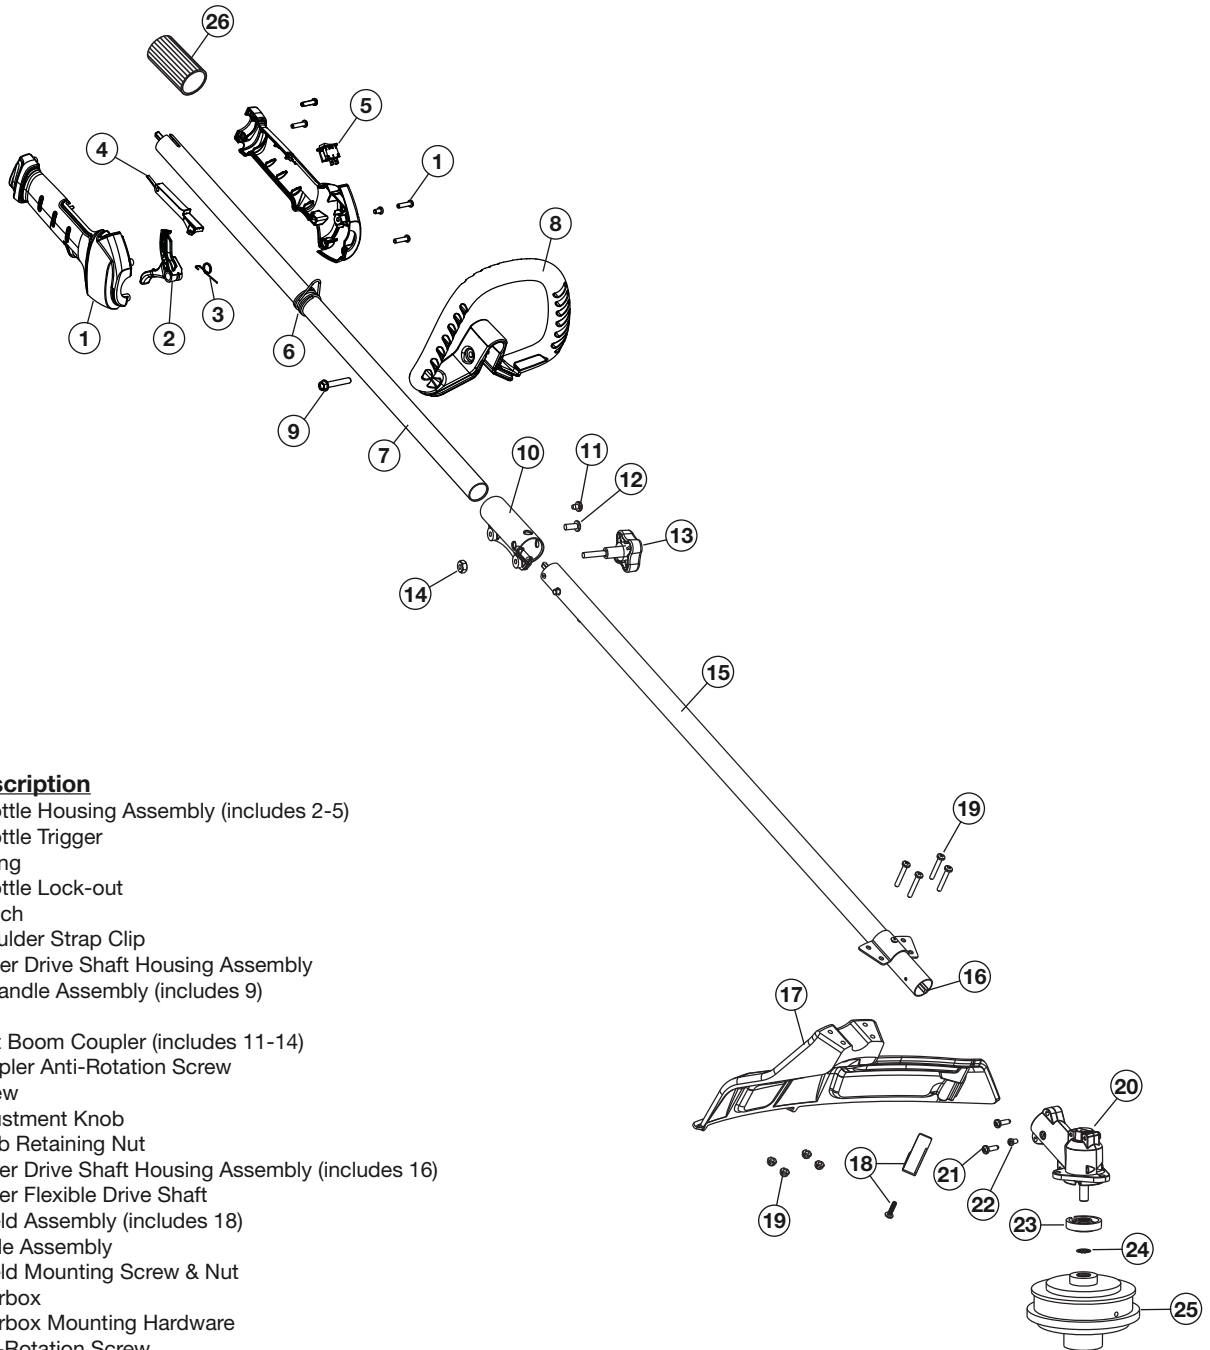

Item	Part No.	Description
1	753-05192	Throttle Housing Assembly (includes 2-5)
2	753-05517	Throttle Trigger
3	753-05007	Spring
4	753-05171	Throttle Lock-out
5	791-182405	Switch
6	791-610327	Shoulder Strap Clip
7	753-04236	Upper Drive Shaft Housing Assembly
8	753-06039	D-Handle Assembly (includes 9)
9	753-06040	Bolt
10	753-1190	Split Boom Coupler (includes 11-14)
11	791-182057	Coupler Anti-Rotation Screw
12	791-181617	Screw
13	791-181987	Adjustment Knob
14	753-04386	Knob Retaining Nut
15	753-06139	Lower Drive Shaft Housing Assembly (includes 16)
16	753-05267	Lower Flexible Drive Shaft
17	753-05820	Shield Assembly (includes 18)
18	753-05821	Blade Assembly
19	753-05822	Shield Mounting Screw & Nut
20	791-182193	Gearbox
21	791-182195	Gearbox Mounting Hardware
22	791-145569	Anti-Rotation Screw
23	791-182196	Blade Driver
24	753-04348	Palnut
25	796-00072	Cutting Head Assembly
26	753-06168	Grip Spacer