


PARTS LIST

Craftsman Snow Thrower Model 247.887801

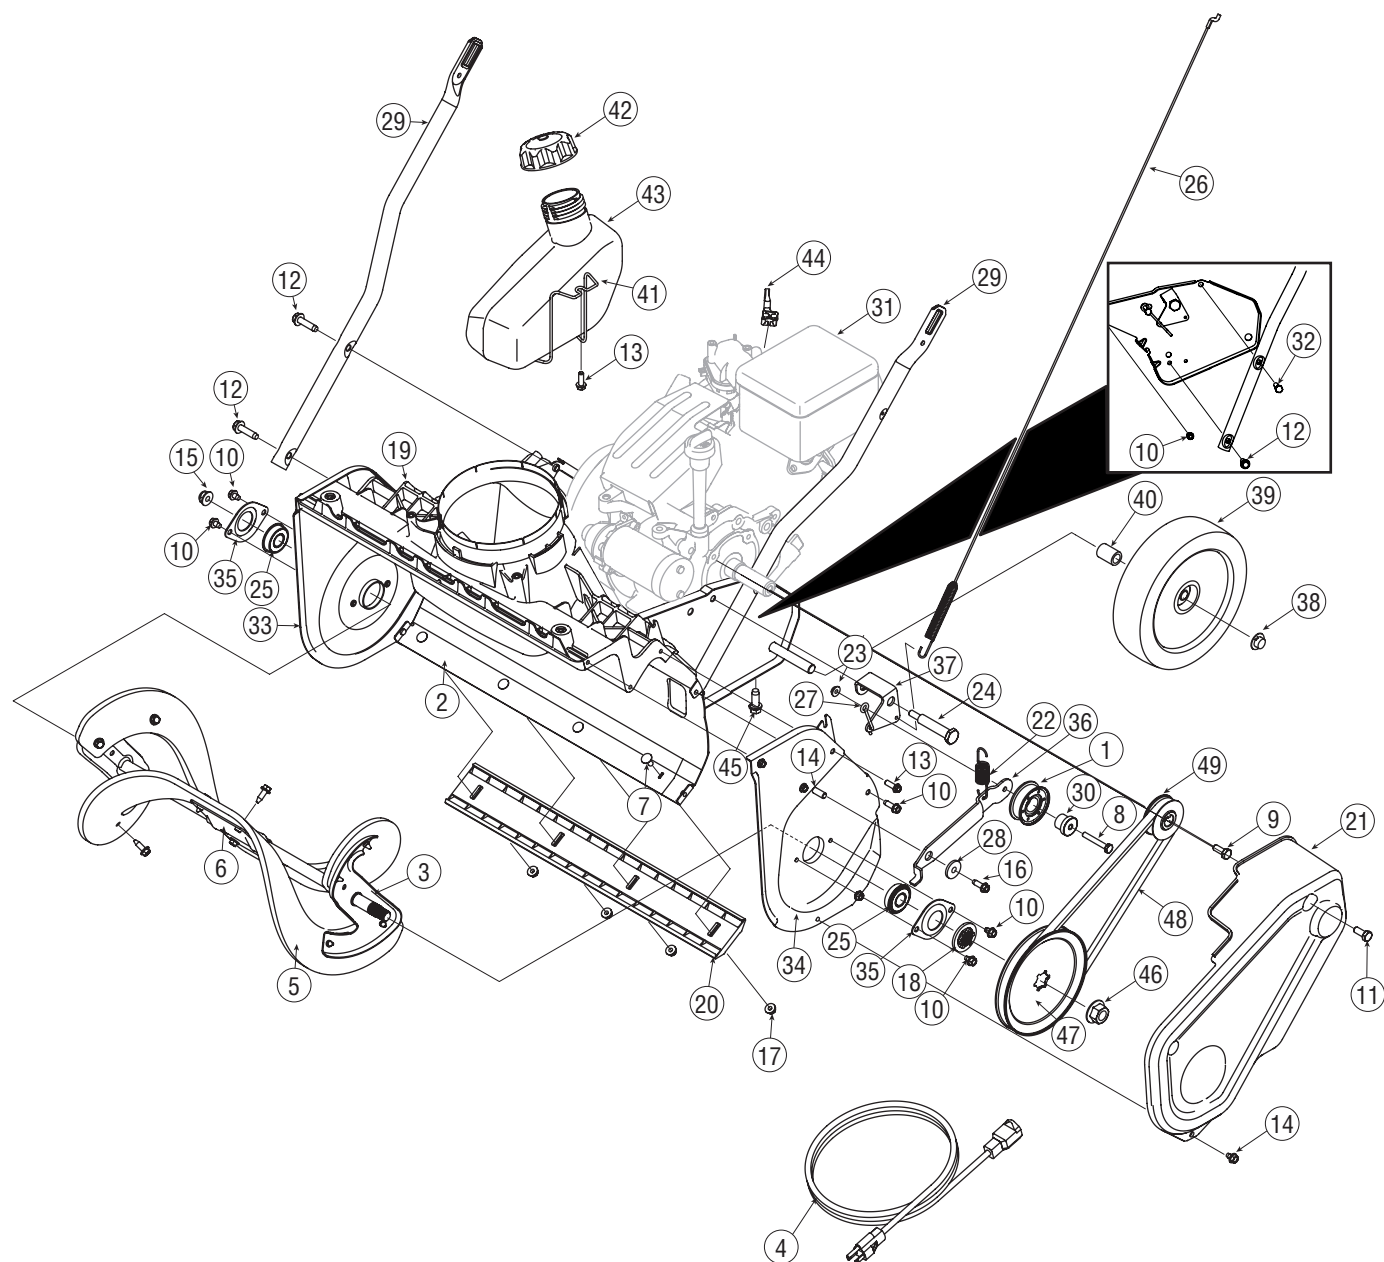

PARTS LIST


Craftsman Snow Thrower Model 247.887801

Ref. No.	Part No.	Description
1.	684-04168	Idler Pulley Assembly
2.	684-04398	Frame
3.	684-04394	Auger Axle Assembly
—	684-04393	Auger Paddle
4.	929-0071A	3-Prong Extension Cord
5.	753-06469	Auger Replacement Kit (Inc. 2 Paddles and 12 Hex Washer Screws)
6.	790-00427-0637	Center Auger Bracket
7.	710-0134	Carriage Screw, 1/4-20 x .62
8.	710-0778	Hex Washer Screw, 1/4-20 x 1.500
9.	710-05339	Hex Screw, 5/16-24 x .750
10.	710-0642	Hex Washer Screw, 1/4-20 x .750
11.	710-05338	Hex Flange Screw, 5/16-24 x .750
12.	710-0817	Hex Washer Screw, 5/16-18 x 1.250
13.	710-0895	Hex Washer Screw, 1/4-15 x .750
14.	710-0599	Hex Washer Screw, 1/4-20 x .500
15.	712-04065	Flange Lock Nut, 3/8-16
16.	710-04484	Hex Washer Screw, 5/16-18 x .750
17.	712-04064	Flange Lock Nut, 1/4-20
18.	718-04836	Pulley Hub
19.	931-07626A	Chute Adapter
20.	731-08171	Shave Plate
21.	731-07737A	Belt Cover
22.	732-04748	Extension Spring, .70 x 3.035
23.	726-0233	Push Nut, .25 x .50
24.	738-04456	Shoulder Bolt, 5/16-24 x .496 x 2.18

Ref. No.	Part No.	Description
25.	741-04517	Ball Bearing
26.	946-04701	Clutch Cable
27.	747-05360	Drive Cable Wire Support
28.	748-0234	Shoulder Spacer
29.	749-04810	Lower Handle
30.	750-04571	Shoulder Spacer, .260 x .785 x .538
31.	952Z265-JU-11	Replacement Engine
32.	710-05183	Hex Screw, 5/16-24 x 1.25
33.	790-00444	RH Auger Plate
34.	790-00445	LH Auger Plate
35.	790-00457	Bearing Cup
36.	790-00461	Idler Bracket
37.	790-00426-0637	Cable Idler Bracket
38.	726-0299	Push Cap, 1/2
39.	734-1781	Wheel, 8 x 1.7
40.	750-05417	Sleeve Spacer, .525 x .78 x 1.00
41.	747-05513	Gas Tank Wire Support
42.	751-10487A	Fuel Cap
43.	751-11648	Fuel Tank
44.	731-07664	Choke Extension Lever
45.	710-0654A	Hex Washer Screw, 3/8-16 x 1.000
46.	912-0702	Flange Nut, 9/16-20
47.	756-04443	Pulley, 1/2 x 6.00
48.	954-04050	Belt, .500 x 35.06
49.	956-0416B	Pulley Half, .625 x 2.25

PARTS LIST

Craftsman Snow Thrower Model 247.887801

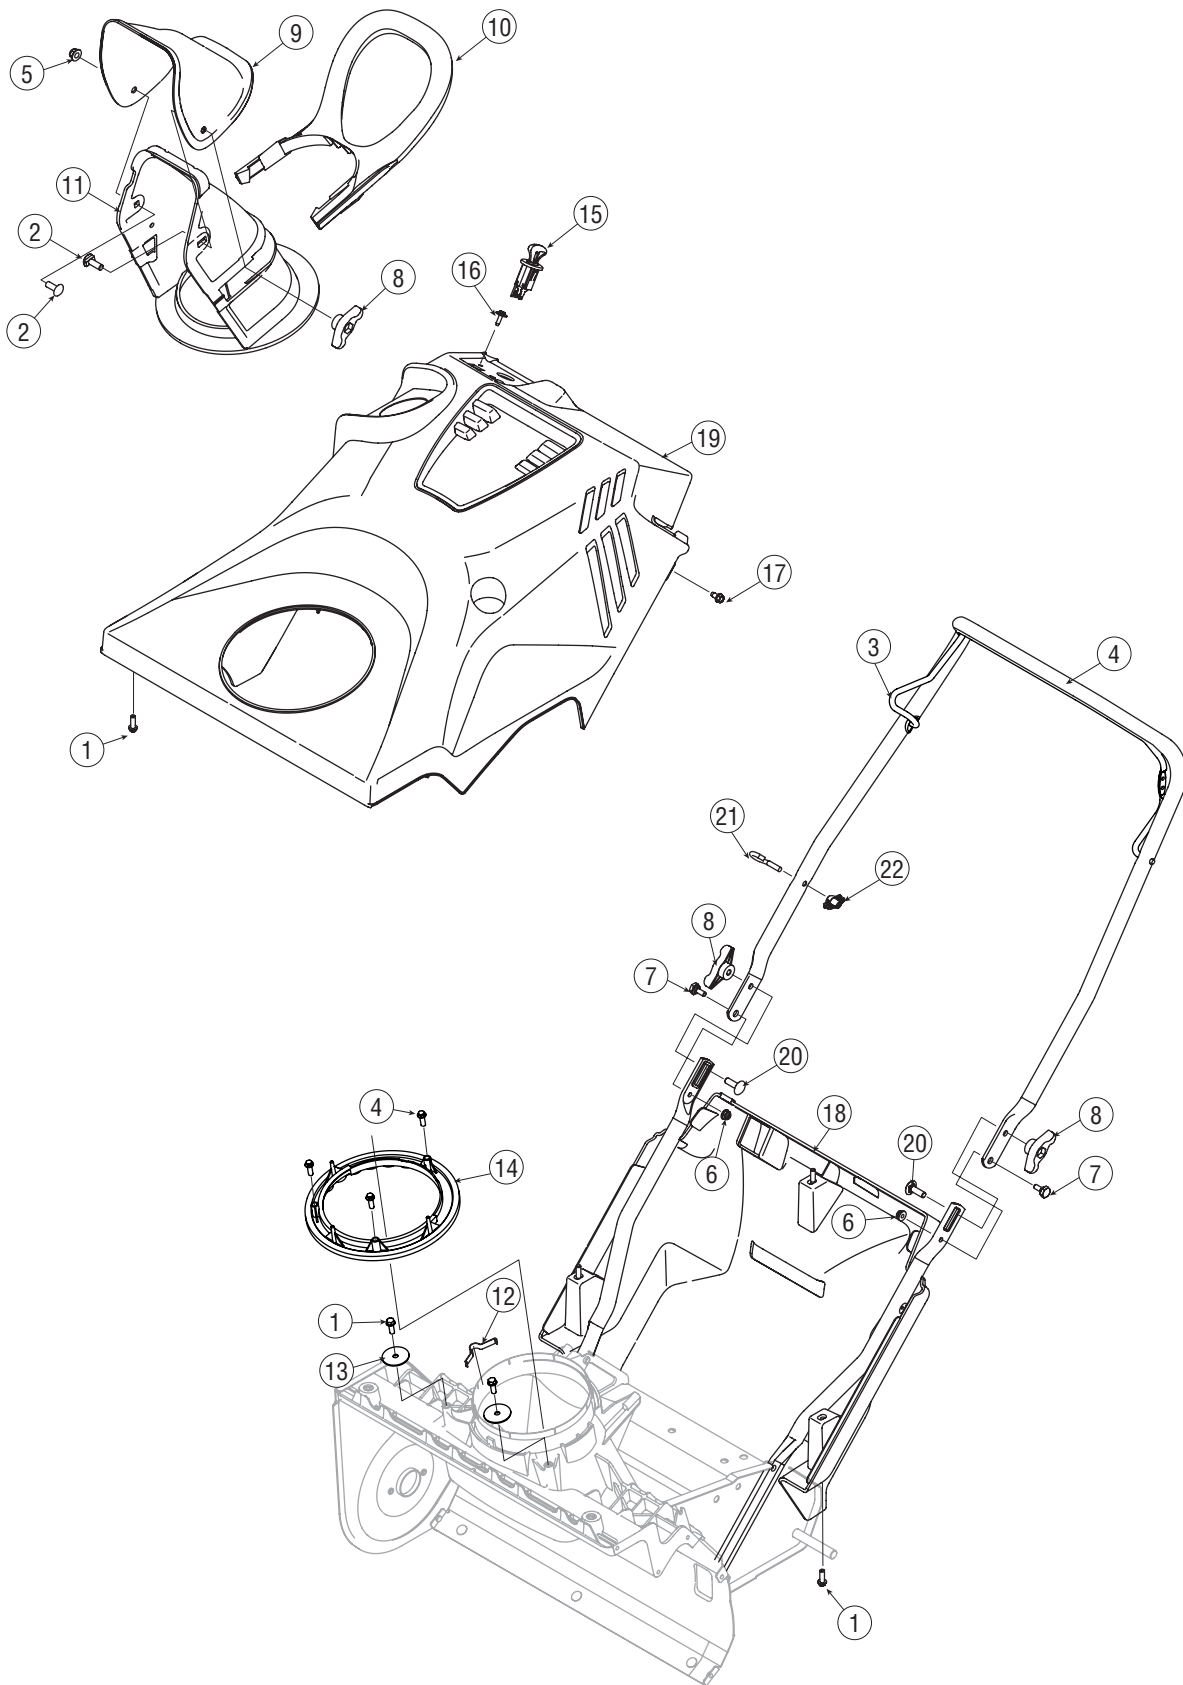

PARTS LIST


Craftsman Snow Thrower Model 247.887801

Ref. No.	Part No.	Description
1.	710-0895	Screw, 1/4-15 x 0.75
2.	710-0451	Carriage Bolt, 5/16-18 x .750
3.	747-05327B-0637	Auger Bail
4.	749-04703B-0637	Upper Handle
5.	712-04063	Flange Lock Nut, 5/16-18
6.	712-04064	Flange Lock Nut, 1/4-20
7.	738-04419A	Shoulder Screw, 1/4-20 x .375 x .148
8.	720-04122	Wing Knob, 5/16-18
9.	731-04426A	Upper Chute
10.	731-07644	Chute Handle
11.	931-07753A	Lower Chute
12.	932-04111	Chute Adjustment Spring
13.	736-04576	Flat Washer, .28 x 1.51 x .066
14.	731-08274	Chute Ring
15.	925-04031A	Ignition Switch Assembly
16.	710-04187	Hex Washer Screw, 1/4-15 x .50
17.	710-0599	Hex Washer Screw, 1/4-20 x .500
18.	631-04579	Bottom Cover
19.	631-04578	Top Cover
20.	710-04998	Carriage Screw, 5/16-18 x 1.00
21.	710-05348	Eye Bolt, 1/4-20
22.	720-0279	Handle Knob

PARTS LIST

Craftsman Snow Thrower Model 247.887801

777S34027

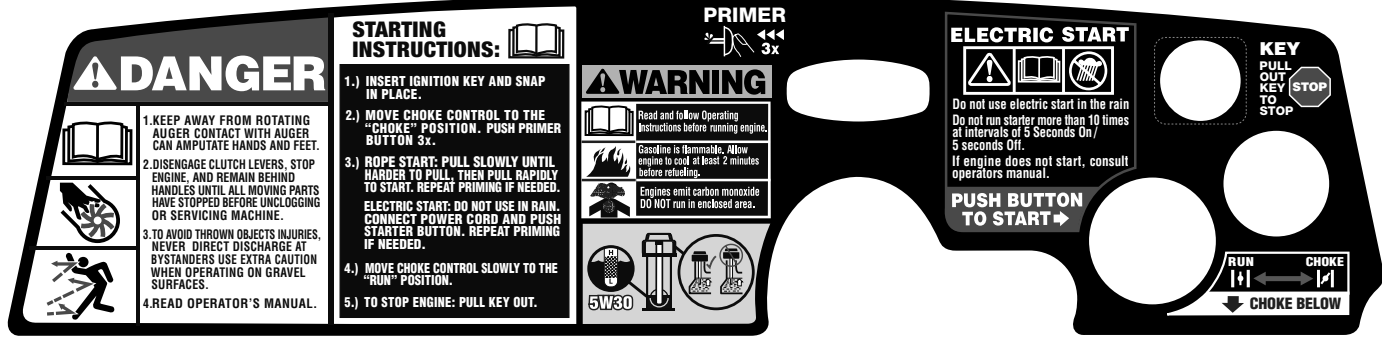

777D16345



777S32236



777S33118



777I22139



777I23463



777D16367



777X43688

