


L & Q Style Handle & Frame

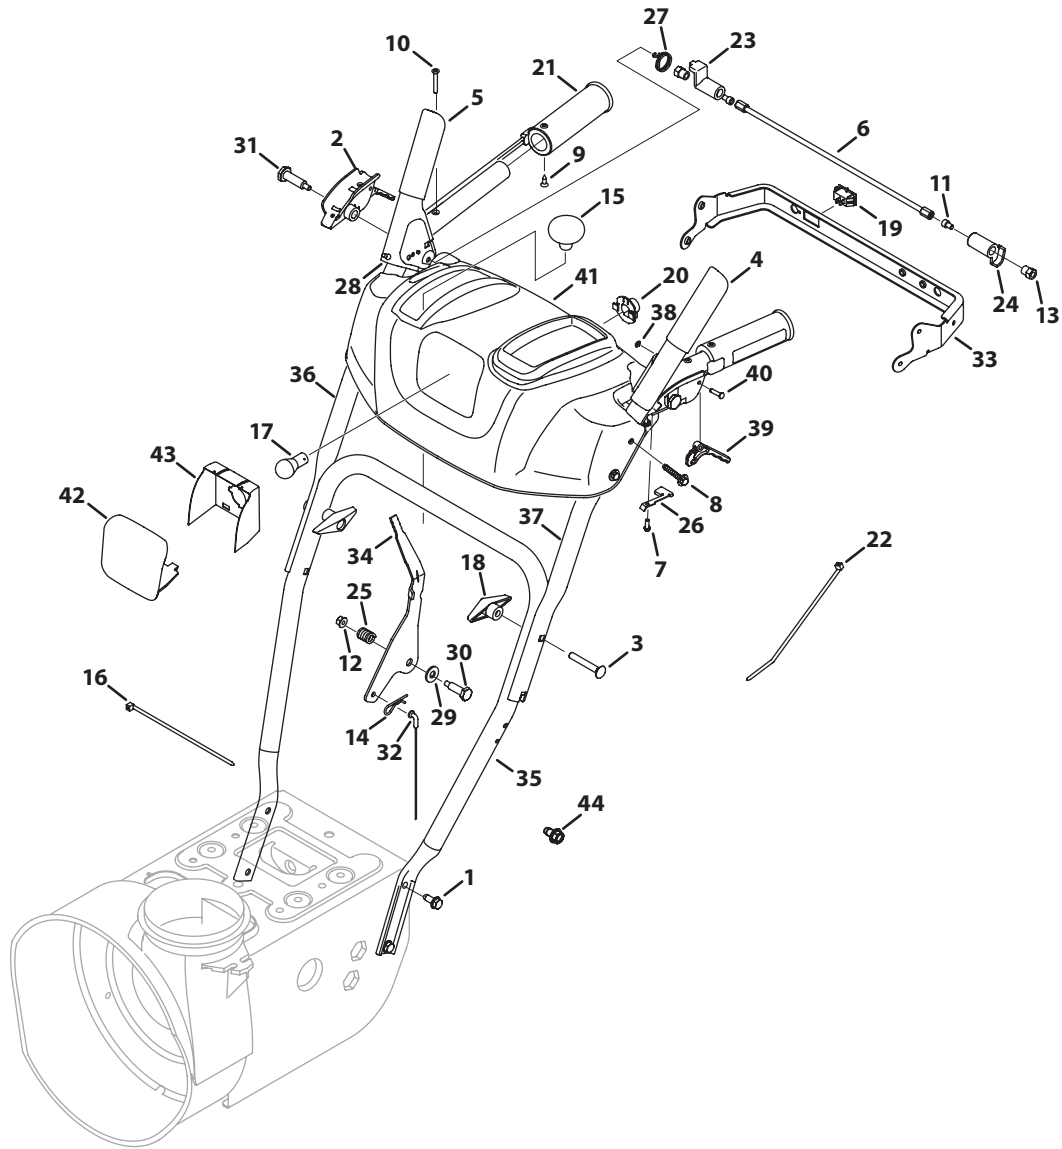


L & Q Style Handle & Frame

Ref.	Part Number	Description
1	710-04484	Screw, Taptite, 5/16-18 x .750
2	631-04134B	Clutch Lock, RH
—	631-04133A	Clutch Lock, LH
3	710-0572	Screw, Carriage, 5/16-18 x 2.50
4	684-04105B	Auger Engage, Black, LH
—	684-04111B	Auger Engage, Red, LH
5	684-04106B	Drive Engage, Black, RH
—	684-04112B	Drive Engage, Red, RH
6	684-04250	Pivot Rod
7	710-04326	Screw, Plastite, 8-16 x .50
8	710-04586	Screw, Taptite, 1/4-20 x 1.625
9	710-0837	Screw, 10-16 x 0.625
10	710-1233	Screw, 10-24 x 1.375
11	710-3069	Screw, 1/4-20 x .50
12	712-04064	Nut, Flangelock, 1/4-20
13	712-04081A	Nut, Hex, 1/4-20
14	914-0145	Click Pin, .092 x 1.64
15	720-04039	Shift Knob
16	725-0157	Cable Tie, 7"
17	725-1629	Lamp
18	720-04072A	Star Knob, 5/16-18
19	725-04393	Heated Grip Switch
20	925-1649	Lamp Socket
21	725-05149	Heated Grip
22	926-0154	Cable Tie, Push Mount
23	731-04894D	Plate, Lock
24	731-04896B	Cam, Clutch Lock


Ref.	Part Number	Description
25	732-0193	Compression Spring, .39 x .60 x .88
26	732-04219C	Clutch Lock Spring
27	732-04238	Torsion Spring, 0.8156 x .3038
28	935-0199A	Rubber Bumper
29	936-0267	Washer, Flat, .385 x .87
30	738-04125	Screw, Shield, .374 x 1.05
31	738-04348	Screw, Shoulder, .437 x 1.345 x 1/4-20
32	946-04396A	Speed Selector Cable
33	790-00248B-0637	Panel Bracket
34	790-00311A-0637	Shift Lever
35	749-04138A	Lower Handle
36	749-04190A-0637	Upper RH Handle
37	749-04191A-0637	Upper LH Handle
38	716-04036	E-Ring
39	731-04913	Steering Trigger Control
—	731-06113	Steering Trigger Control, Red
40	738-04126	Steering Trigger Pin, 3/16
41	931-05348	Handle Panel
—	931-05332A	Handle Panel, Troy-Bilt
42	731-05320	Lens Panel
—	731-05319	Lens Panel, Troy-Bilt
43	777X41803	Lens Label
—	777X41805	Lens Label, Troy-Bilt
44	710-0599	Screw, TT, 1/4-20 x .500 (For ground wire)
—	725-05148	Heated Grips Harness (Not Shown)

Drive System

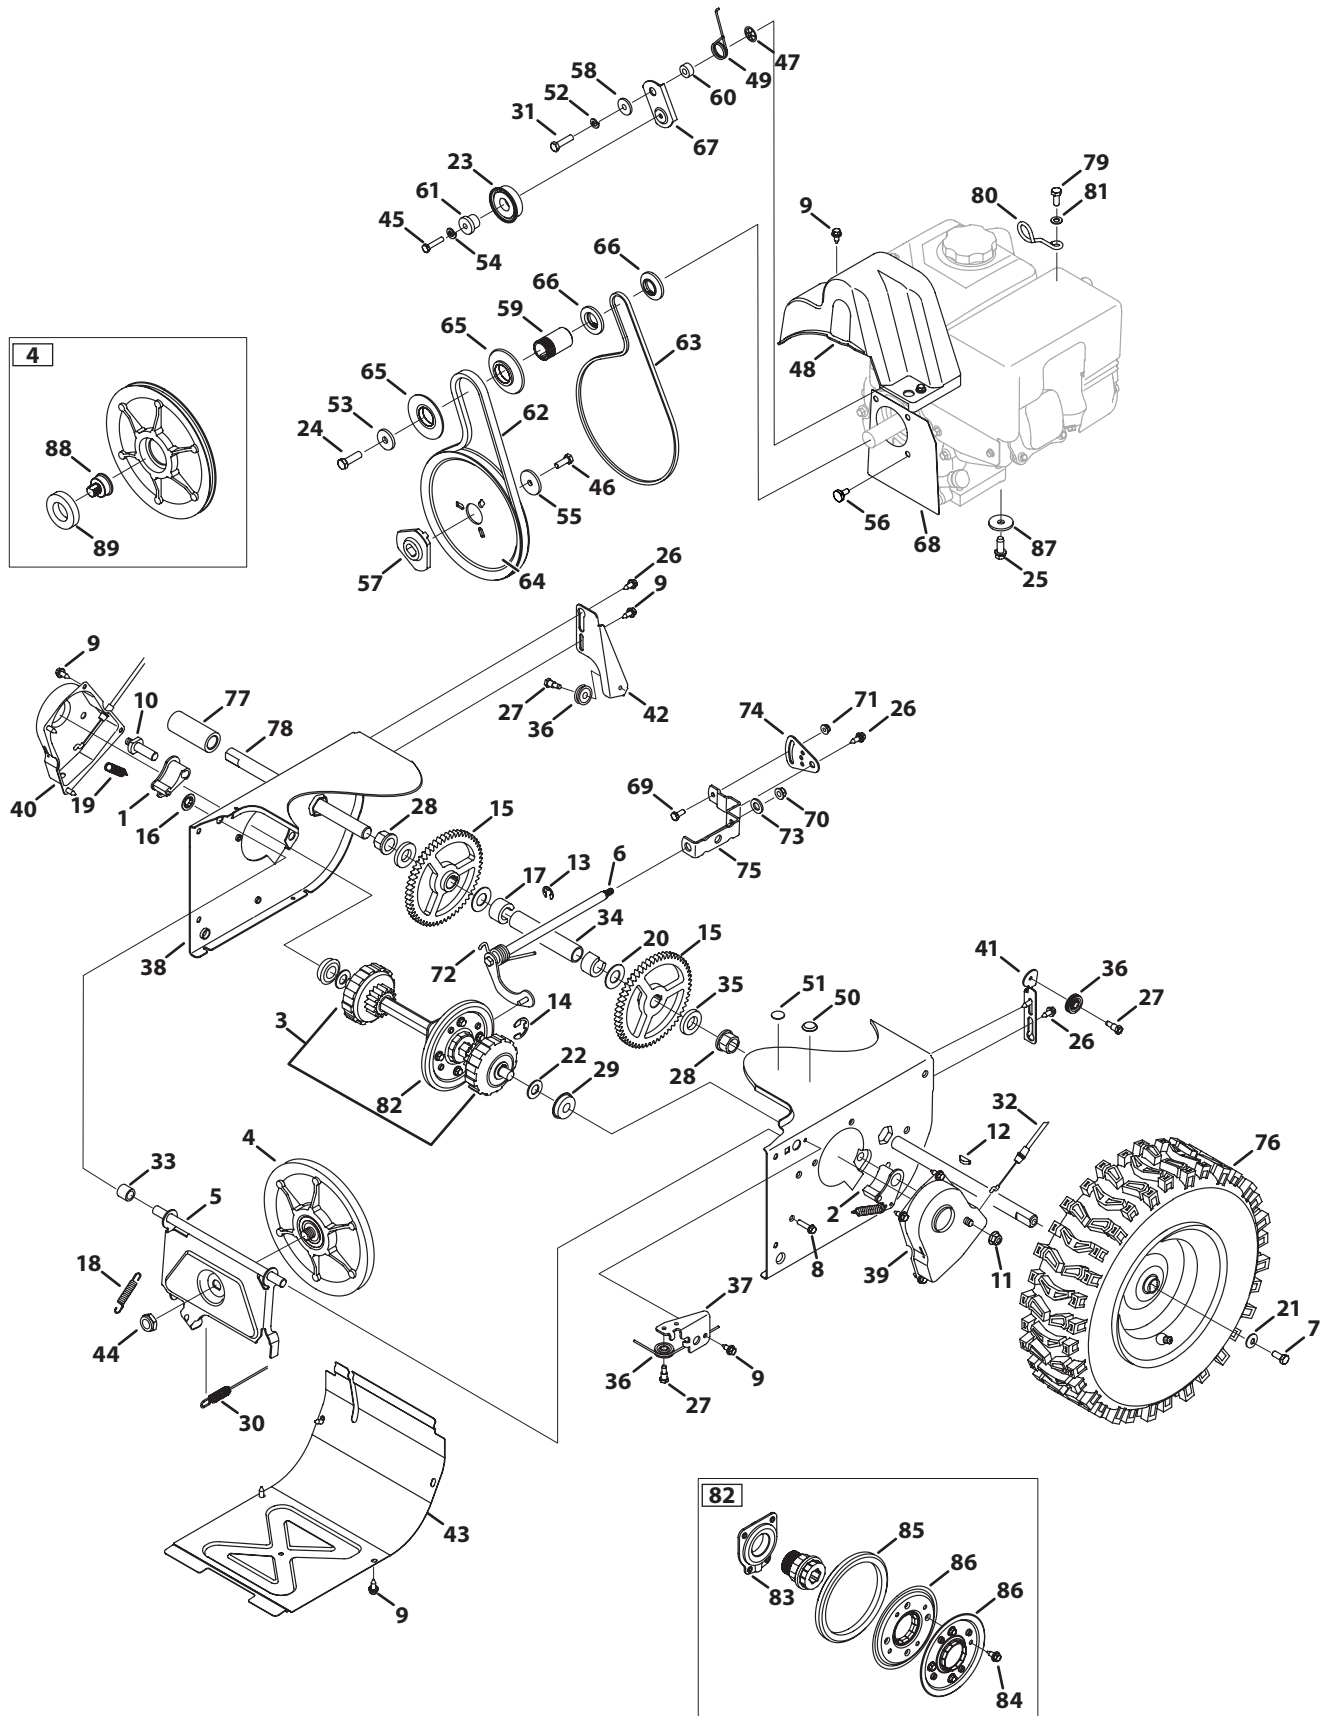

Ref.	Part Number	Description	Ref.	Part Number	Description
1	618-04287	Dogg Assembly, RH	46	710-1245B	Hex Head Screw, 5/16-24 x .875
2	618-04288	Dogg Assembly, LH	47	926-04012	Nut, Push-On, .25 DIA
3	918-04322A	Drive Shaft Assembly	48	731-06401	Belt Cover
4	656-04055	Friction Wheel Disc Assembly	49	732-04308A	Spring, Torsion, .850 x .333
5	684-04154B-0637	Friction Wheel Support	50	735-04099	Plug, 3/8 ID
6	684-04156A	Rod Shift Assembly	51	735-04100	Plug, 1/2 ID
7	710-0627	Hex Head Screw, 5/16-24 x .750	52	936-0119	Washer, Lock, 5/16
8	710-0788	Screw, 1/4-20 x 1.000	53	736-0247	Washer, Flat, .406 x 1.25
9	710-1652	Screw, 1/4-20 x .625	54	936-0329	Washer, Lock, 1/4
10	711-1268B	Actuator Shaft	55	736-0505	Washer, Flat, .34 x 1.50
11	712-04065	Nut, Flangelock, 3/8-16	56	738-04439	Screw, Shoulder
12	914-0126	Hi-Pro Key, 3/16 x 3/4 DIA	57	748-04053A	Pulley Adapter, .75 DIA
13	916-0104	E-Ring	58	748-04112B	Spacer, Shoulder, .3175 x .500
14	716-0136	Retainer Ring	59	750-04303	Spacer, .875 x 1.185
15	917-04210	Gear, 56T	60	750-04477A	Spacer, .340 x .750
16	726-0221	Nut, Speed, .500	61	750-04571	Spacer, Shoulder, .260 x .785
17	731-05297	Spacer, .76 x .75	62	954-04195	Belt, .500 x 37.00
18	932-0264	Extension Spring, .380 x 2.500	63	954-04201A	V Belt, 3/8 x 35.68"
19	732-04345	Extension Spring, .500 x 1.71	64	756-04109	Auger Pulley, 8.1 x .5
20	736-0188	Washer, Flat, .76 x 1.49	65	756-04113	Pulley, Half, 4L-V x 2.600
21	736-0242	Washer, Bell, .340 x .872	66	756-04252	Pulley, Half, 3/8-V x 1.7160
22	736-0626	Washer, Flat, .58 x 1.125	67	790-00208C	Drive Idler Bracket
23	684-04169	Pulley Assembly	68	790-00332-0637	Cover Plate
24	710-0191	Hex Head Screw, 3/8-24 x 1.25	69	710-0751	Hex Head Screw, 1/4-20 x .620
25	710-0654A	Taptite Sems Screw, 3/8-16 x 1.000	70	712-04063	Nut, Flangelock, 5/16-18
26	738-04184A	Screw, Shoulder, .368 x .113 x 1/4-20	71	712-04064	Nut, Flangelock, 1/4-20
27	738-0924A	C Screw, Shoulder, .340 x .335 x 1/4-28	72	732-04311	Spring, Torsion, .750 x .968
28	941-0245	Hex Flange Bearing, .75 ID	73	936-3015	Washer, Flat, .469 x .875 x .105
29	741-04076	Ball Bearing, .5625 x 1.375 x .4375	74	790-00217A-0637	Speed Selector Pivot Bracket
30	746-04229	Drive Clutch Cable	75	790-00218A-0637	Speed Selector Shift Bracket
31	710-0672	Hex Head Screw, 5/16-24 x 1.25	76	634-04136-0911	Wheel, LH
32	946-0956B	Steering Cable	—	634-04137-0911	Wheel, RH
33	748-0190	Spacer, .508 x .75	77	731-04873	Spacer, 1.25 x .75 x 3.00
34	750-04474	Axle Support Tube	78	938-04180	Axle, .75 x 11.12
35	750-0767	Spacer, Axle	79	710-04022	Hex Head Screw, 1.25 x 20
36	756-0625	Roller Cable	80	732-04677	Cable Guide
37	790-00096-0637	Auger Cable Guide Bracket	81	936-0264	Washer, Flat, .330 x .630
38	790-00183B-0637	Wheel Drive Frame	82	684-04159	Friction Wheel Assembly
39	790-00185	Shaft Retainer, LH	83	618-0063A	Bearing Assembly, Friction Wheel
40	790-00186	Shaft Retainer, RH	84	710-0896	Screw, 1/4-14 x .625
41	790-00206A-0637	Auger Clutch Cable Guide Bracket	85	935-04054	Friction Wheel, 5.5 OD
42	790-00207B	Drive Clutch Cable Guide Bracket	86	790-00174	Friction Wheel Plate
43	790-00316-0637	Frame Cover	87	736-0320	Washer, Flat, .38 x 1.38
44	712-0417A	Nut, Flange, 5/8-18	88	738-04164A	Friction Pin, Disc Bearing
45	710-0809	Taptite Screw, 1/4-20 x 1.250	89	741-04098	Ball Bearing, 30 x 55 x 13

Auger & Auger Housing

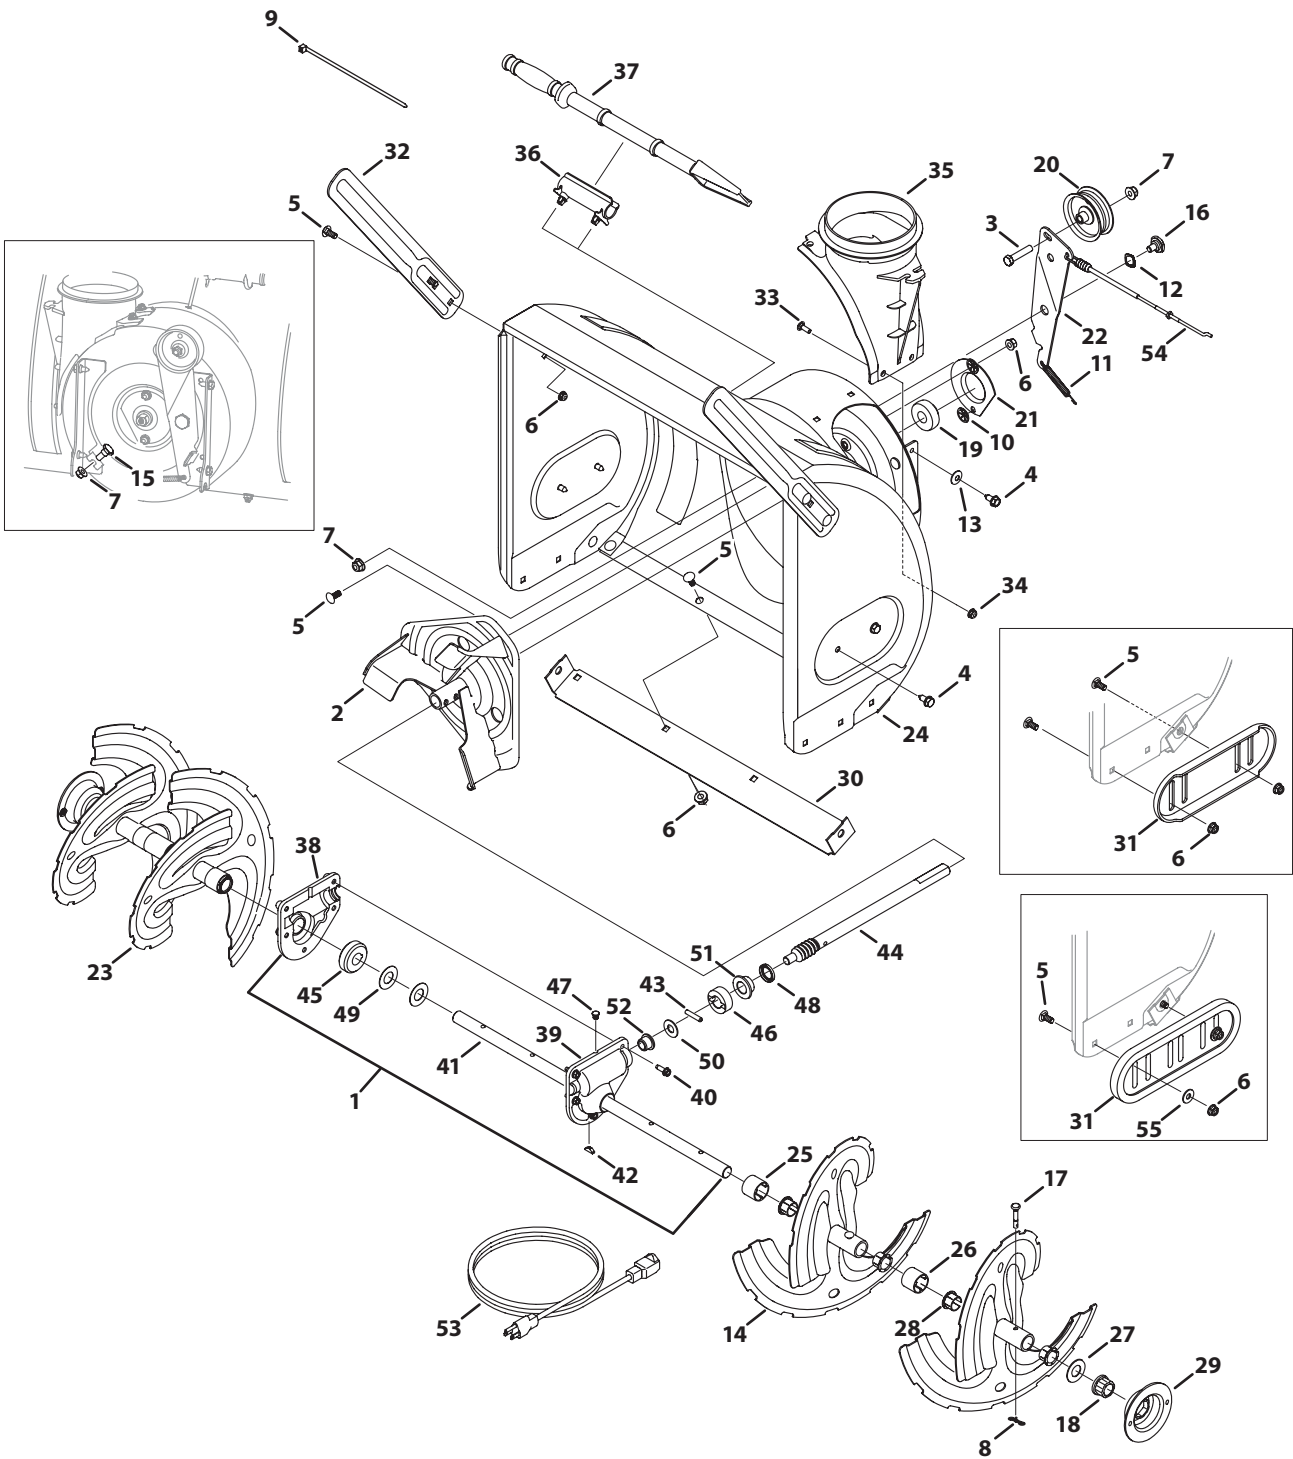


Auger & Auger Housing

Ref.	Part Number	Description
1	918-04165A	Auger Gearbox, includes 38-52
2	684-04057A-0637	Impeller Assembly, 12" Dia.
3	710-0347	Hex Head Screw, 3/8-16 x 1.75
4	710-04484	Screw, 5/16-18 x .750
5	710-0276	Screw, Carriage, 5/16-18 x 1.00
—	710-0451	Bolt, Carriage, 5/16-18 x .750 (Troy)
6	712-04063	Nut, Flange lock, 5/16-18
7	712-04065	Nut, Flange lock, 3/8-16
8	714-04040	Bow-Tie Cotter Pin
9	725-0157	Cable Tie, 7"
10	926-04012	Nut, Push-on, .25 Dia.
11	732-04460	Extension Spring, .38 x 4.59
12	736-0174	Washer, Wave, .625 x .885
13	736-0242	Washer, Bell, .340 x .872
14	684-04107	Spiral Assembly, LH
15	738-0143	Bolt, Shoulder, .496 x .336 x 3/8-16
16	938-0281	Screw, Shoulder, .625 x .17 x 3/8-16
17	738-04124A	Shear Pin, .25 x 1.50
18	941-0245	Bearing, Hex Flange, .75
19	941-0309	Bearing, Ball, .75 x 1.85
20	756-04224	Pulley, Idler, Flat, 2.75
21	790-00075	Bearing, 1.85 ID
22	790-00080A-0637	Auger Idler Bracket
23	684-04108	Spiral Assembly, RH
24	684-04267	Auger Housing Assembly
—	684-04273	Auger Housing Assembly, Troy-Bilt
25	731-04870	Spacer, 1.25 x .75 x 1.00
26	731-04871	Spacer, 1.25 x .75 x 2.00
27	736-0188	Washer, Flat, .76 x 1.49

Ref.	Part Number	Description
28	741-0493A	Bushing, Flange, .800 x .910
29	790-00087A-0637	Bearing, 1" Hex
30	790-00119	Shave Plate, 2.25 x 29.66
31	731-05984A	Polymer Slide Shoe
—	790-00091	Deluxe Slide Shoe - Troy-Bilt
32	790-00181-0691	Blade Guide
33	710-0703	Screw, Carriage, 1/4-20 x .75
34	712-04064	Nut, Flange lock, 1/4-20
35	731-07525	Chute Adapter
36	731-2635	Clean-Out Tool Mount
37	931-2643	Clean-Out Tool
38	918-0123A	Reducer, RH
39	918-0124A	Reducer, LH
40	710-0642	Screw, 1/4-20 x 0.750
41	711-04282	Auger Axle, 30"
42	914-0161	Key, Hi-Pro, 3/16 x 5/8
43	715-04021	Dowel Pin, .25 x 1.25
44	917-04126	Worm Shaft, .75
45	917-0528A	Gear Worm, 20T
46	718-04071	Collar Thrust, .756 x .600
47	721-0325	Plug, 1/4 x .437
48	721-0327	Oil Seal, .75 x 1.131 x .188
49	936-0351	Washer, Flat, .760 x 1.50
50	736-3084	Washer, Flat, .51 x 1.12
51	741-0662	Bearing, Flange, .75 x 1.00 x .59
52	741-0663	Bearing, Flange, .50 x .75 x .59
53	929-0071A	Extension Cord, 110V
54	746-04230	Auger Drive Clutch Cable
55	936-0159†	Washer, Flat, .349 x .879 x .063

† If Equipped

Chute Control

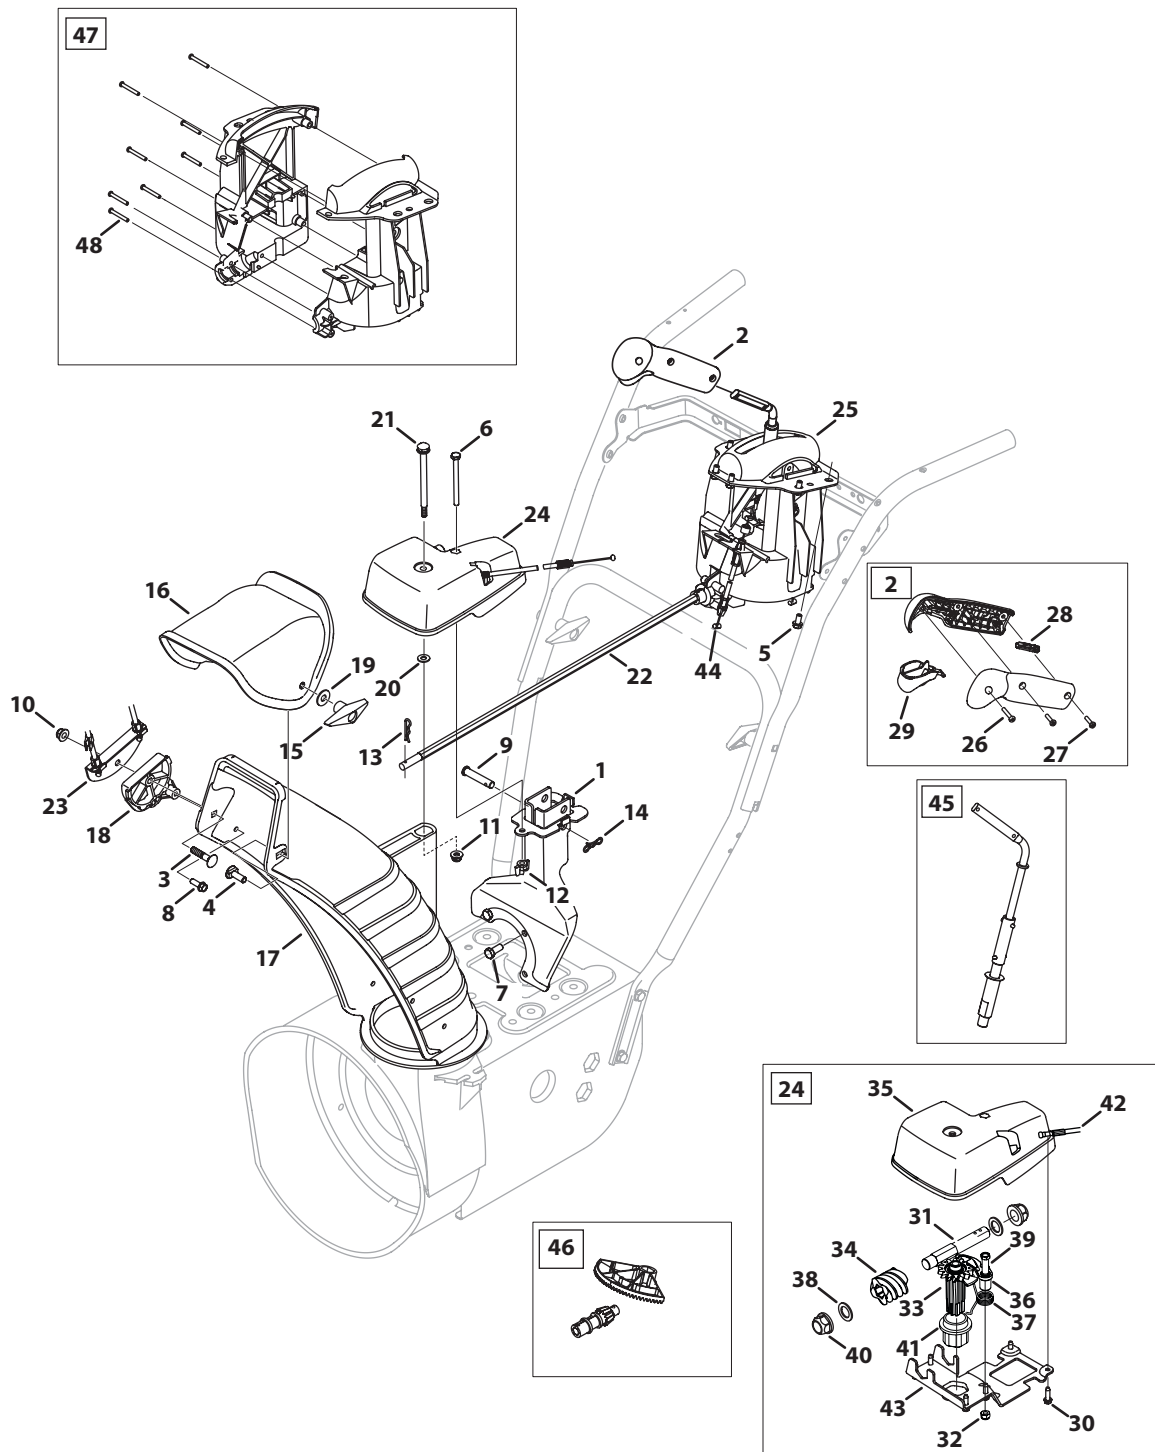


Ref.	Part Number	Description
1	684-04310A-0637	Chute Support Bracket
2	753-06151	Handle Assembly
3	710-0262	Bolt, Carriage, 5/16-18 x 1.50
4	710-04071	Bolt, Carrier, 5/16-18 x 1.00
5	710-04187	Screw, HL, 1/4-15 x 0.50
6	710-04370	Hex Head Screw, 1/4-20 x 3.00
7	710-0627	Hex Head Screw, 5/16-24 x .750
8	710-0895	Screw, HL, 1/4-15 x 0.750
9	711-04469A	Clevis Pin, 3/8 x 1.87
10	712-04063	Nut, Flangelock, 5/16-18
11	712-04064	Nut, Flangelock, 1/4-20
12	712-3087	Wing Nut, 1/4-20
13	914-0101	Internal Cotter Pin
14	714-04040	Bow-Tie Cotter Pin
15	720-04072A	Star Knob, 5/16-18
16	731-04427A	Chute, Upper
17	731-06440A	Chute, Lower
18	731-06451	Cable Guide, Chute Tilt
19	936-0159	Washer, Flat, .349 x .879
20	736-04446	Washer, Flat, .25 x .630
21	738-04367	Screw, Shoulder, .312 x 3.5 x 1/4-20
22	747-05116	Chute Rod, 3/8 Hex
23	784-5594-0637	Cable Bracket
24	918-04801A	Gearbox Assembly, Chute Rotation
25	984-04338	Chute Control, 4-Way

Ref.	Part Number	Description
26	710-04353	Screw, #8 x 1.00
27	710-04879	Screw, 8-32 x .750
28	731-04893A	Joystick Plug
29	731-07031	Joystick Trigger
30	710-04373A	Screw, 12-16 x .75
31	711-05186	Hex Shaft
32	712-0896	Hexlock Nut, 1/4-28
33	717-04667	Gear, 14 T
34	717-04672	Worm
35	731-06906	Gear Cover
36	731-06943	Pawl Lock
37	732-04638C	Torsion Spring, .721 ID x .474
38	736-0290	Washer, Flat, .625 x 1.0 x .067
39	738-04391	Screw, Shoulder, .340 x .950 x 1/4-28
40	941-0225	Hex Bearing
41	741-04388	Flange Bearing
42	946-04619B	Cable Lock
43	790-00342B-0637	Gear Bracket
44	946-04528A	4-Way Cable
	946-04477†	4-Way Cable w/Clip
45	984-04324A	Shift Assembly
46	753-06152	Gear Set Assembly
47	753-06153	Handle Housing Assembly
48	710-1256	Screw, #8-18 x 1.250

† Not Shown

357cc 483-SU Engine

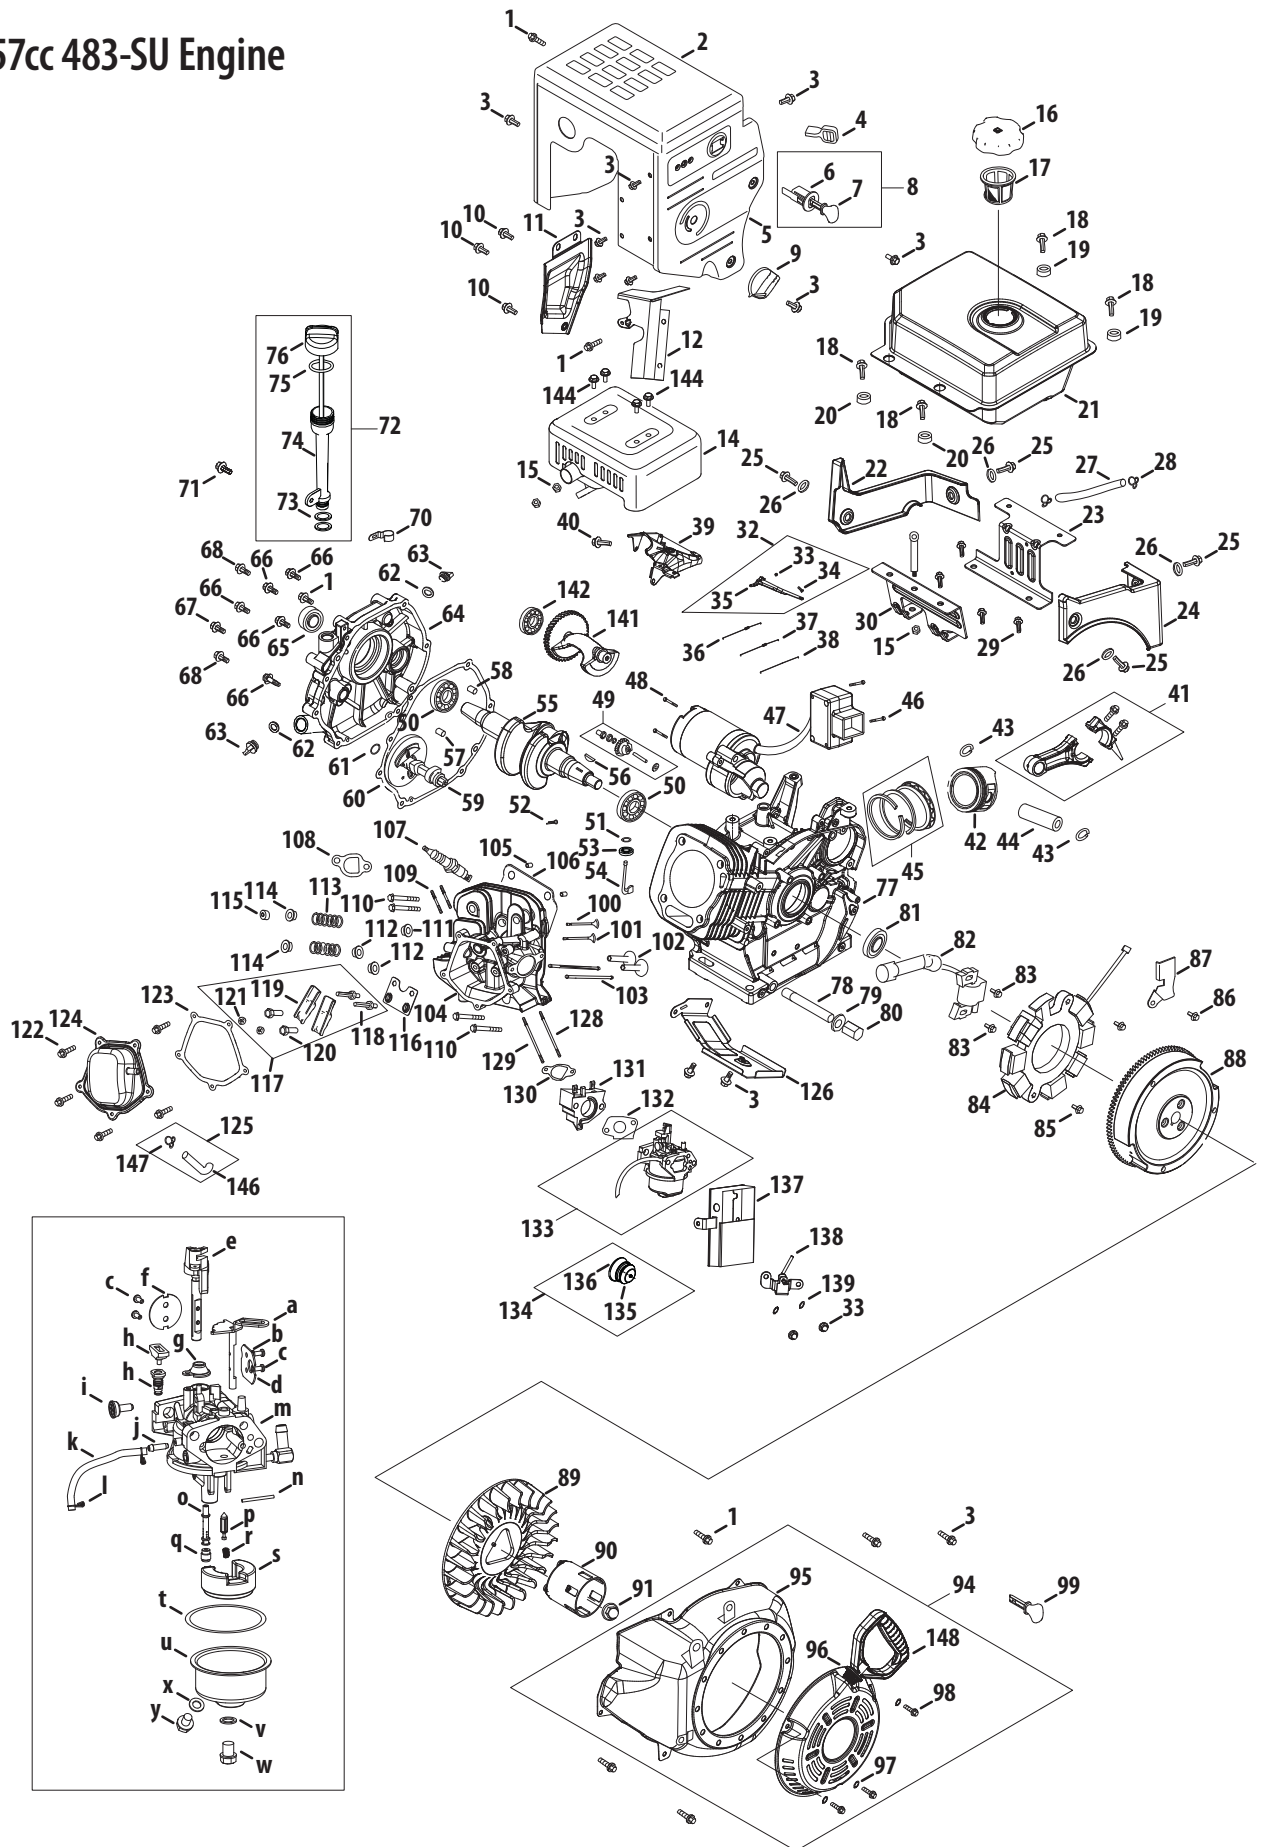

Ref.	Part Number	Description
1	710-11012	Bolt, M6 x 16
2	951-11339	Muffler Shield
3	710-04915	Bolt, M6 x 12
4	951-10757	Throttle Control Knob
5	951-11595	Control Panel
7	731-05632	Key
8	951-10637	Key Switch Ass'y
9	951-11302	Choke Knob
10	710-04914	Bolt, Flange, M6 x 10
11	951-11181	Muffler Baffle
12	951-11321	Carb Isolator Bracket
14	951-11338	Muffler Ass'y
15	712-04219	Nut, M8 - 1.25
16	951-10649	Fuel Cap Ass'y
17	951-11933	Fuel Level Indicator
18	710-04970	Flange Bolt, M8 x 20
19	750-05312	Bushing, Gas Tank
20	750-05313	Bushing, Gas Tank
21	951-11201	Fuel Tank Ass'y
22	951-11319	Fuel Tank Shroud
23	951-11318	Rear Mounting Bracket Ass'y
24	951-11351	Engine Shroud
25	951-11012	Bolt, M6 x 16
26	736-04452	Bush - Washer
28	951-11731	Fuel Line Clamp
29	710-04921	Bolt, M8 x 14
30	951-11182	Fuel Tank Mounting Bracket
33	712-04212	Nut, M6
34	710-04908	Governor Arm Bolt
35	951-11307	Governor Arm
36	951-11306	Governor Spring
37	951-11203	Throttle Linkage Spring
38	951-11309	Throttle Linkage
39	951-11311	Primer Bracket
40	710-04916	Bolt, Flange, M6 x 14
41	951-11951	Connecting Rod Ass'y
42	951-11952	Piston
43	951-11953	Piston Pin Snap Ring
44	951-11954	Piston Pin

Ref.	Part Number	Description
45	951-11955	Piston Ring Set
46	710-04965	Bolt, M4 x 55
47	951-11196	Startup Electromotor
48	710-04967	Bolt, M8 x 55
49	951-11956	Governor Gear/Shaft Ass'y
50	951-11957	Radial Ball Bearing
51	736-04453	Washer
52	714-04077	Cotter Pin
53	951-11958	Governor Seal
54	951-11365	Governor Arm Shaft
56	951-10307	Woodruff Key
57	715-04102	Dowel Pin, 9 x 12
58	715-04092	Dowel Pin, 7 x 14
59	951-11959	Camshaft Ass'y
60	951-11376	Crankcase Cover Gasket
61	736-04476	Washer
62	951-11960	O-Ring
65	951-11375	Oil Seal
66	710-04971	Bolt, M8 x 38
67	710-04972	Bolt, M8 x 45
68	710-05052	Bolt, M8 x 35
70	951-11320	Dipstick Clamp
71	710-04966	Bolt, M6 x 8
73	951-11903	Oil Fill Tube O-Ring
75	951-11904	Dipstick O-Ring
78	951-11350	Oil Drain Pipe Ass'y
79	736-04440	Oil Drain Washer
80	710-04906	Oil Drain Plug
81	951-11499	Oil Seal
82	951-11305	Ignition Coil Ass'y
83	710-04920	Ignition Coil Bolt
84	951-11961	Coil Assy. Charge
85	710-04969	Bolt, M6 x 30
86	710-04966	Bolt, M6 x 8
87	951-11186	Alternator Wire Clamp Bracket
88	951-11312	Flywheel
89	951-11313	Fan, Cooling
90	951-11314	Starter Cup
91	712-04220	Nut, Special, M16 x 1.5

357cc 483-SU Engine

Ref.	Part Number	Description
95	951-11211	Blower Housing
96	951-11310	Recoil Starter
97	736-04455	Gasket
98	710-04974	Bolt, M6 x 10
99	731-05632	Key
102	951-11962	Tappet
103	951-11335	Push Rod (2X)
105	715-04097	Dowel Pin, 12 x 20
106	951-11963	Gasket, Cylinder Head
107	951-10292	Spark Plug/F6rtc
108	951-11212	Exhaust Pipe Gasket
109	710-04964	Stud, M8 x 48.5
110	710-05053	Bolt, M10 x 1.25 x 87
111	751-11964	Intake Valve Seal
116	951-11965	Push Rod Guide
117	951-11981	Rocker Arm Ass'y
118	710-04962	Bolt, Pivot
119	951-11966	Rocker Arm
120	751-11123	Adjusting Nut, Valve
121	751-11124	Nut, Pivot Locking
122	710-05054	Valve Cover Bolt
123	951-11967	Valve Cover Gasket
124	951-11220	Valve Cover
126	951-11317	Cylinder Baffle
128	710-05055	Stud, M6 x 8 x 98
129	710-05056	Stud, M6 x 8 x 118
130	951-11315	Carburetor Insulator Gasket
131	951-11316	Carburetor Insulator Plate
132	951-11223	Carburetor Gasket
133	951-11303A	Carburetor Ass'y
134	951-10639A	Primer Ass'y
135	951-11824	Primer Bulb
137	951-11304	Heater Box
138	951-11192	Choke Control
139	736-04477	Lock Washer
141	951-11968	Camshaft Gear Ass'y
142	951-11969	Bearing
144	710-05051	Bolt
146	951-11221	Breather Hose

Ref.	Part Number	Description
147	726-04101	Clamp
148	731-05696	Starter Handle
k	751-11991	Primer Hose
t	951-11970	Bowl Gasket
v	951-11348	Main Bowl Bolt Gasket
w	710-04945	Fuel Bowl Mounting Bolt
x	951-11349	Fuel Drain Plug Gasket
y	710-04903	Fuel Drain Plug
—	951-10651	Fuel Tank Nipple (Not Shown)
—	952Z483-SU-10	Replacement Engine
—	951-11207	Muffler Stud Ass'y
109	710-04964	Muffler Stud
—	951-11329A	Cylinder Head Ass'y
100	—	Exhaust Valve
101	—	Intake Valve
104	—	Cylinder Head
106	951-11963	Gasket, Cylinder Head
108	951-11212	Exhaust Pipe Gasket
109	710-04964	Stud, M8 x 48.5
110	710-05053	Bolt, M10 x 1.25 x 87
111	751-11964	Intake Valve Seal
112	—	Intake Valve Seal
113	—	Valve Spring
114	—	Valve Spring Retainers - Exhaust
115	—	Exhaust Valve Adjuster
116	951-11965	Push Rod Guide
118	710-04962	Bolt, Pivot
119	951-11966	Rocker Arm
120	751-11123	Adjusting Nut, Valve
121	751-11124	Nut, Pivot Locking
123	951-11967	Valve Cover Gasket
128	710-05055	Stud, M6 x 8 x 98
129	710-05056	Stud, M6 x 8 x 118
130	951-11315	Carburetor Insulator Gasket
131	951-11316	Carburetor Insulator Plate
—	951-10641	Oil Drain Ass'y
78	951-11350	Oil Drain Pipe Ass'y
79	736-04440	Oil Drain Washer
80	710-04906	Oil Drain Plug

Ref.	Part Number	Description
—	951-11328A	Short Block Ass'y
41	951-11951	Connecting Rod Ass'y
42	951-11952	Piston
43	951-11953	Piston Pin Snap Ring
44	951-11954	Piston Pin
45	951-11955	Piston Ring Set
49	951-11956	Governor Gear/Shaft Ass'y
50	951-11957	Radial Ball Bearing
51	736-04453	Washer
52	714-04077	Cotter Pin
53	951-11958	Governor Seal
54	951-11365	Governor Arm Shaft
55	—	Crankshaft Ass'y
56	951-10307	Woodruff Key
57	715-04102	Dowel Pin, 9 x 12
58	715-04092	Dowel Pin, 7 x 14
59	951-11959	Camshaft Ass'y
60	951-11376	Crankcase Cover Gasket
61	736-04476	Washer
63	—	Oil Drain Plug Ass'y
64	—	Crankcase Cover
65	951-11375	Oil Seal
66	710-04971	Bolt, M8 x 38
67	710-04972	Bolt, M8 x 45
68	710-05052	Bolt, M8 x 35
77	—	Crankcase Complete
78	951-11350	Oil Drain Pipe Ass'y
79	736-04440	Oil Drain Washer
81	951-11499	Oil Seal
102	951-11962	Tappet
105	715-04097	Dowel Pin, 12 x 20
106	951-11963	Gasket, Cylinder Head
108	951-11212	Exhaust Pipe Gasket
110	710-05053	Bolt, M10 x 1.25 x 87
123	951-11967	Valve Cover Gasket
130	951-11315	Carburetor Insulator Gasket
131	951-11316	Carburetor Insulator Plate
141	951-11968	Camshaft Gear Ass'y
142	951-11969	Bearing

Ref.	Part Number	Description
—	951-11330A	Gasket Kit - Complete
53	951-11958	Governor Seal
60	951-11376	Crankcase Cover Gasket
65	951-11375	Oil Seal
79	736-04440	Oil Drain Washer
81	951-11499	Oil Seal
106	951-11963	Gasket, Cylinder Head
108	951-11212	Exhaust Pipe Gasket
123	951-11967	Valve Cover Gasket
130	951-11315	Carburetor Insulator Gasket
131	951-11316	Carburetor Insulator Plate
132	951-11223	Carburetor Gasket
—	951-11333	Valve Cover Kit
123	951-11967	Valve Cover Gasket
124	951-11220	Valve Cover
—	951-11331	Gasket Kit - External
79	736-04440	Oil Drain Washer
108	951-11212	Exhaust Pipe Gasket
123	951-11967	Valve Cover Gasket
130	951-11315	Carburetor Insulator Gasket
131	951-11316	Carburetor Insulator Plate
132	951-11223	Carburetor Gasket
—	951-11337	Valve Kit
100	—	Exhaust Valve
101	—	Intake Valve
—	951-11345	Oil Filler Plug Ass'y
62	951-11960	O-Ring
63	—	Oil Drain Plug Ass'y
—	751-11971	Dipstick Ass'y
75	951-11904	Dipstick O-Ring
76	—	Dipstick / Cap
—	951-11336	Fuel Line Kit
27	—	Fuel Line
28	951-11731	Fuel Line Clamp
—	951-11334	Cylinder Head Kit
106	951-11963	Gasket, Cylinder Head
110	710-05053	Bolt, M10 x 1.25 x 87
111	751-11964	Intake Valve Seal
123	951-11967	Valve Cover Gasket

357cc 483-SU Engine

Ref.	Part Number	Description
—	951-11342	Crankshaft Kit
50	951-11957	Radial Ball Bearing
55	—	Crankshaft Ass'y
56	951-10307	Woodruff Key
65	951-11375	Oil Seal
81	951-11499	Oil Seal
—	951-11332	Carburetor Kit - Major
g	—	Throttle Pressure Lock Plate
n	—	Float Pin
o	—	Main Nozzle
p	—	Needle Valve
q	—	Main Jet
r	—	Needle Valve Spring
s	—	Float
t	951-11970	Bowl Gasket
v	951-11348	Main Bowl Bolt Gasket
x	951-11349	Fuel Drain Plug Gasket
—	951-11340	Crankcase Cover Kit
50	951-11957	Radial Ball Bearing
60	951-11376	Crankcase Cover Gasket
61	736-04476	Washer
64	—	Crankcase Cover
65	951-11375	Oil Seal
66	710-04971	Bolt, M8 x 38
67	710-04972	Bolt, M8 x 45
68	710-05052	Bolt, M8 x 35
—	751-11341A	Crankcase Kit
50	951-11957	Radial Ball Bearing
53	951-11958	Governor Seal
77	—	Crankcase
81	951-11499	Oil Seal
—	951-11972	Oil Fill Tube Assembly
73	951-11903	Oil Fill Tube O-Ring
74	—	Oil Fill Tube