 
 


Labels

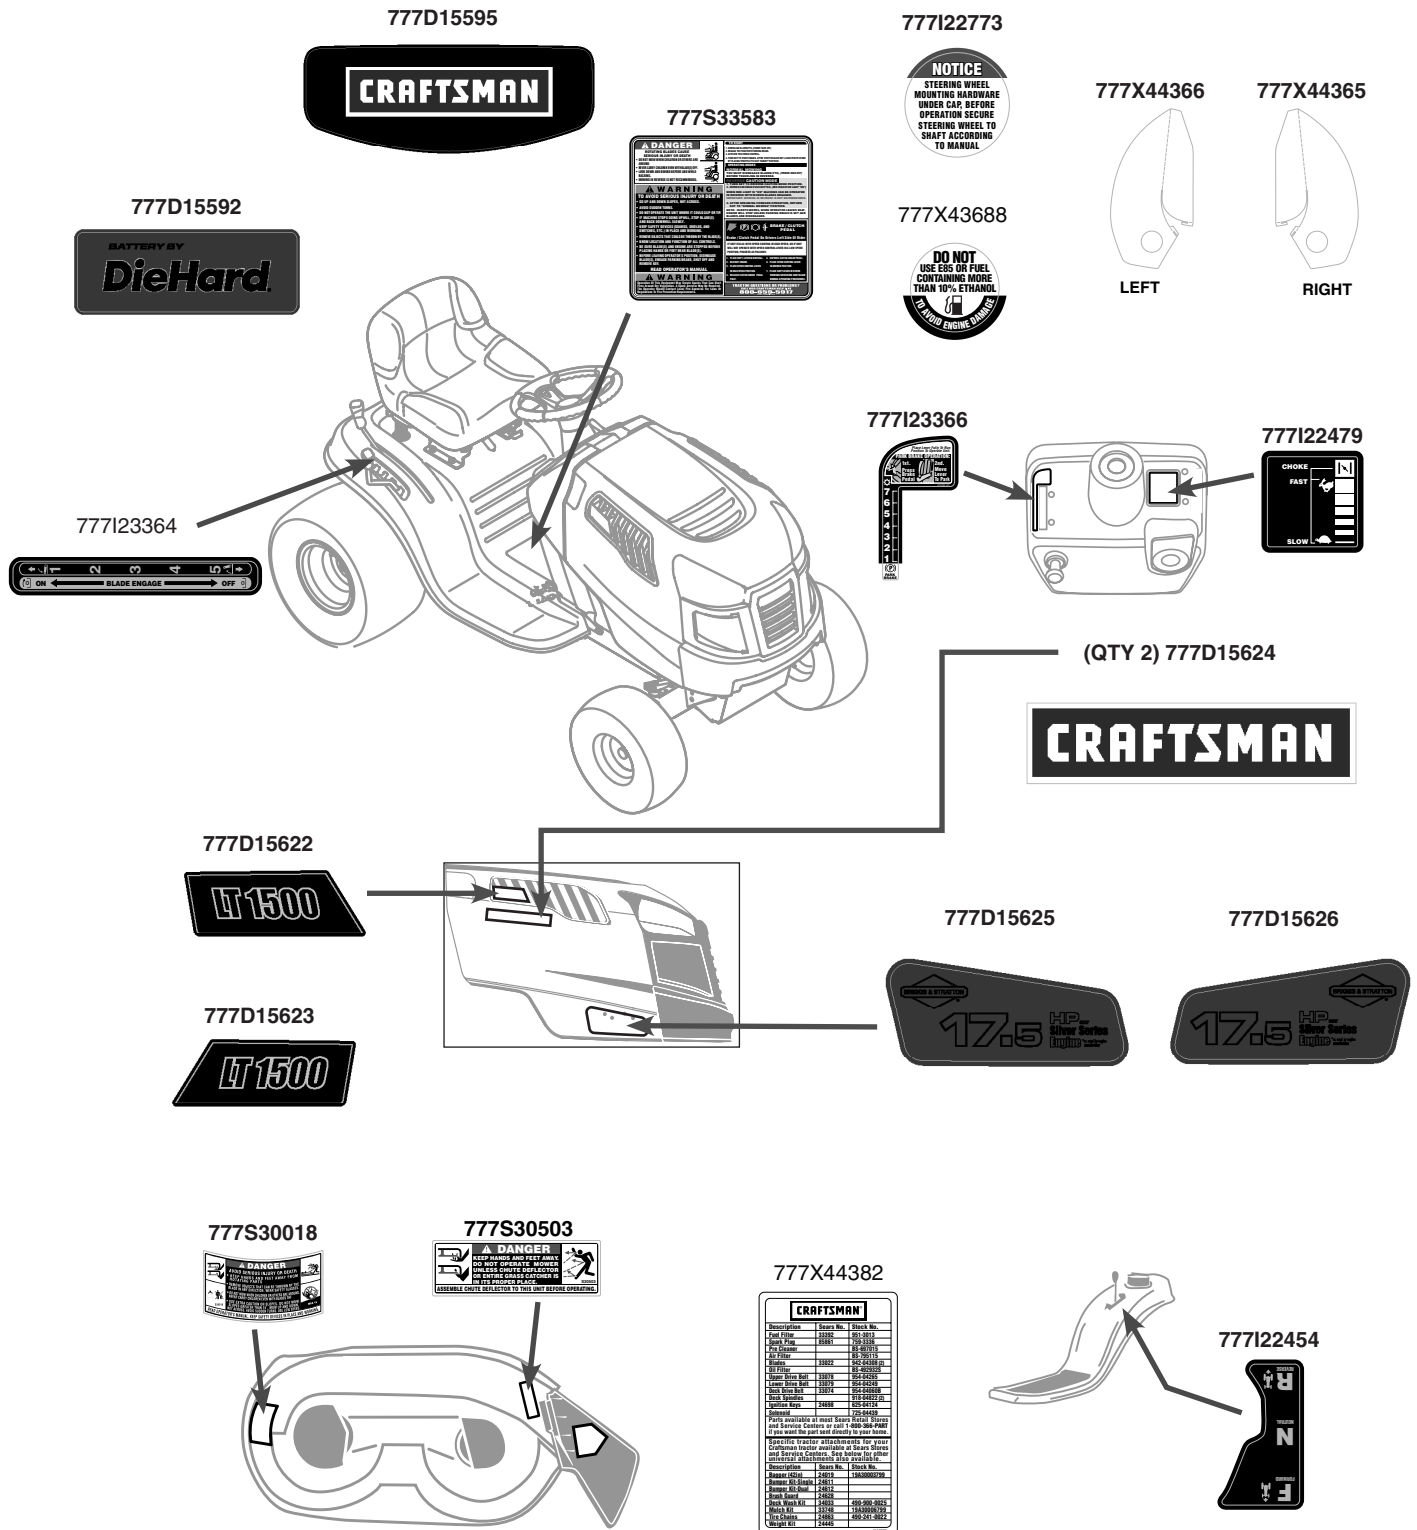

PARTS LIST

Craftsman Model 247.28881

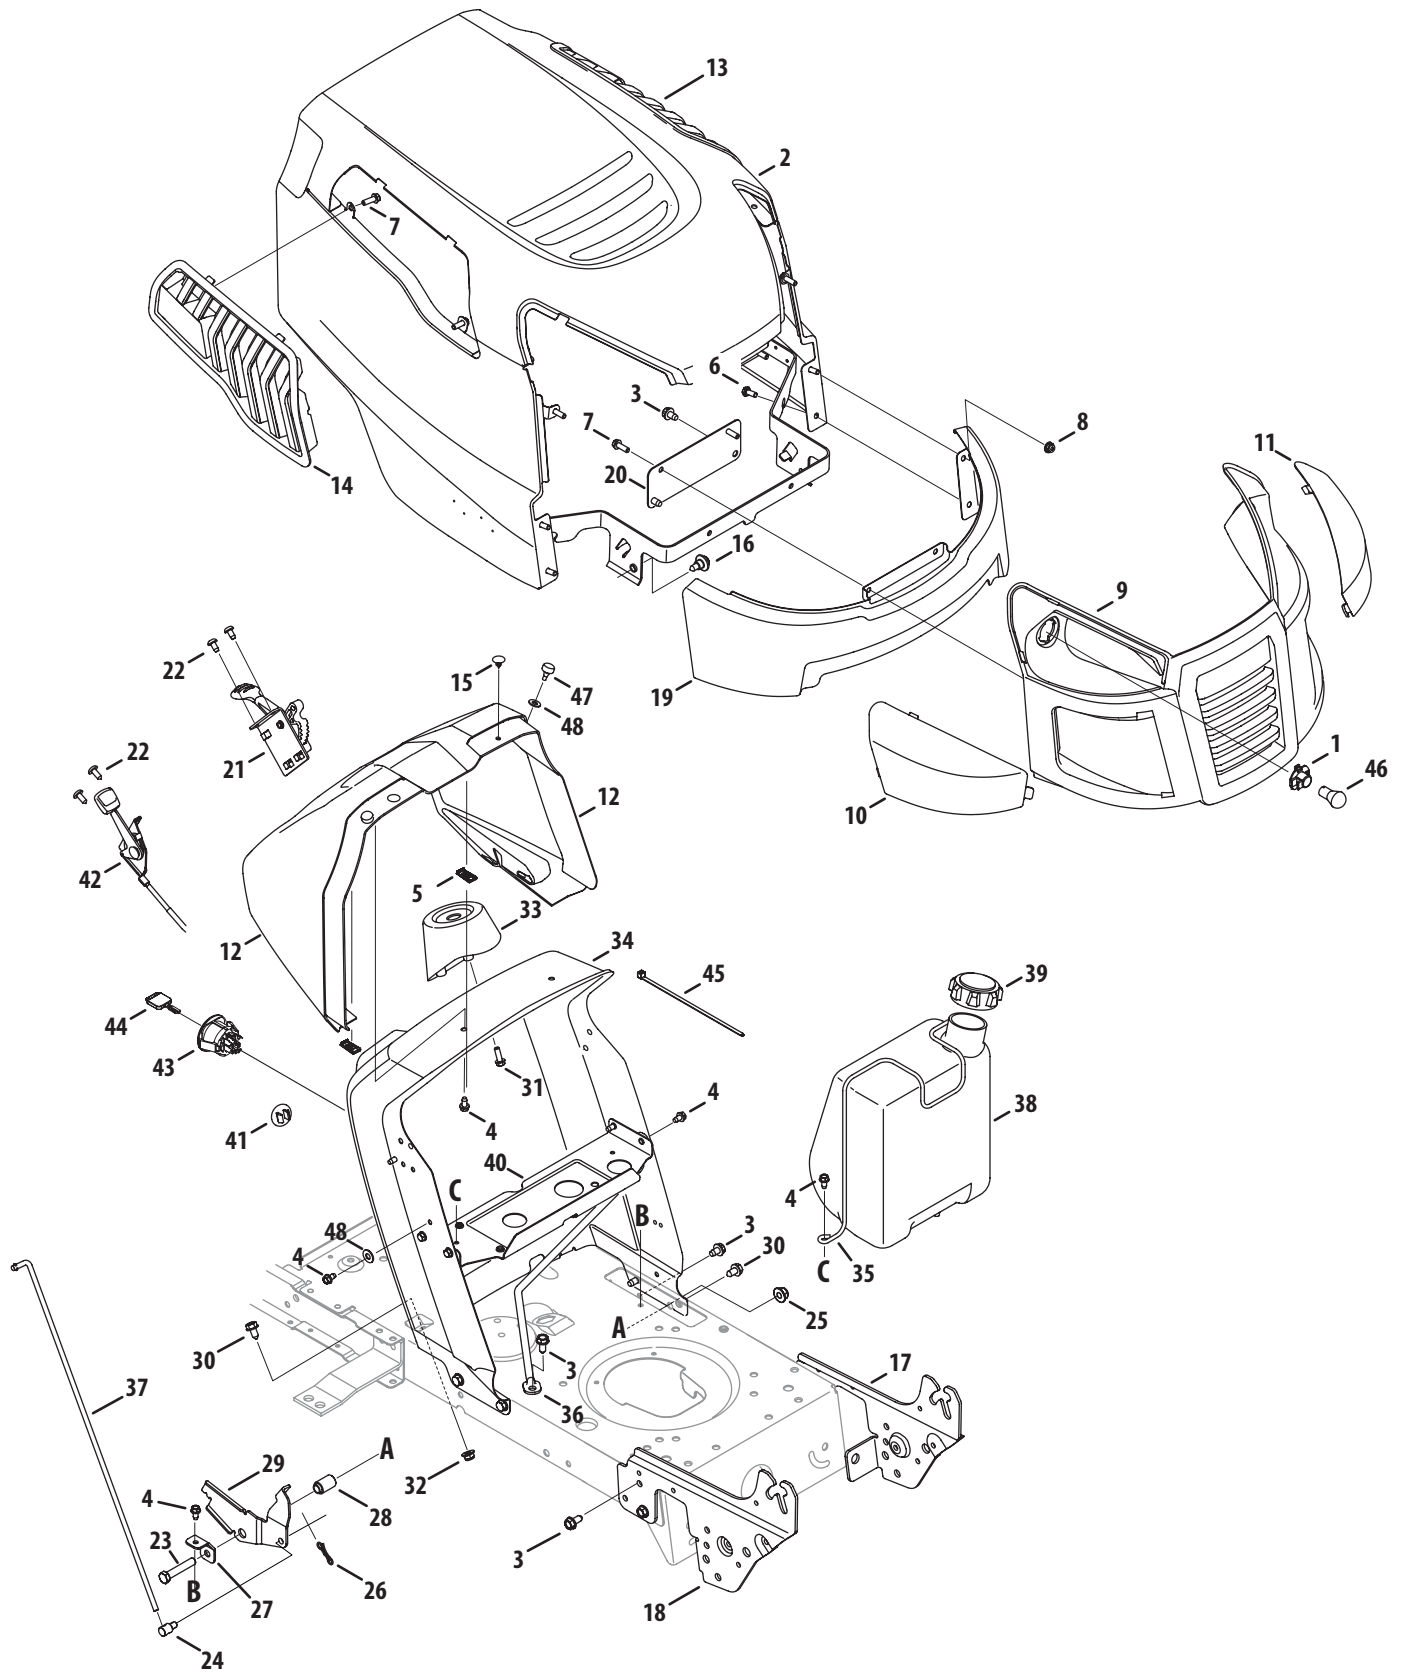


PARTS LIST

Craftsman Model 247.28881

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	925-1649	Bulb Socket	25	712-04065	Nut, Hex Flange Insert Lock, 3/8-16
2	683-04619-4043	Hood Assembly	26	714-04040	Cotter Pin
3	710-04484	Screw, 5/16-18 x .750	27	783-06823	Speed Latch Support Tab
4	710-0599	Hex Washer Screw, 1/4-20 x .500	28	750-04465B	Flange Spacer
5	712-0292	Tin Clip Nut, 1/4-20	29	783-04903A	Speed latch
6	710-0751	Hex Screw, 1/4-20 x .620	30	710-0604A	Self-Tap Screw, 5/16-18
7	710-05108	Screw, 1/4 x .750	31	710-05108	Hex Screw, 1/4 x .750
8	712-04064	Nut, Hex Flange Insert Lock, 1/4-20	32	712-04063	Nut, Hex Flange Lock, 5/16-18
9	931-07668	Grill	33	731-04945	Steering Support
10	731-07458	Headlight Lens, RH	34	783-04873B-0637	Dash
11	731-07459	Headlight Lens, LH	35	747-05371	Fuel Tank Support Rod
12	731-07460	Dash Collar	36	747-05326	Dash support Rod
13	731-07711	Hood Scoop, LH	37	747-04430	Speed Selector Control Rod
14	731-07712	Hood Scoop, RH	38	751-0555B	1.5 Gallon Fuel Tank
15	735-0271A	Bumper	39	751-0603A	Fuel Cap
16	738-04091A	Shoulder Screw, 5/16-18	40	783-04584B-0637	Gas Tank Support Bracket
17	783-05327B-0637	Left Support Pivot Bracket	41	731-05265	Choke Plug
18	783-05328A-0637	Right Support Pivot Bracket	42	746-04364	Throttle/Choke Assembly
19	783-06598-4043	Lower Grill	43	925-04659	Key Switch Module
20	783-06610-0637	Lower Grill Bracket	44	625-04124	Key (2 pack)
21	983-04503	Speed Selector, 7-Speed	45	725-0157	Cable Tie
22	710-05280	Self-Tap Screw, 1/4-20	46	925-0963	Headlight Bulb
23	710-3144	Hex Head Screw, 3/8-16	47	726-04072A	Ratchet Clip: .250 x .500
24	711-0736	Ferrule, 1/4-20 x 1.00	48	936-0463	Flat Washer, .25 x .630 x .0515

PARTS LIST

 Craftsman Model 247.28881

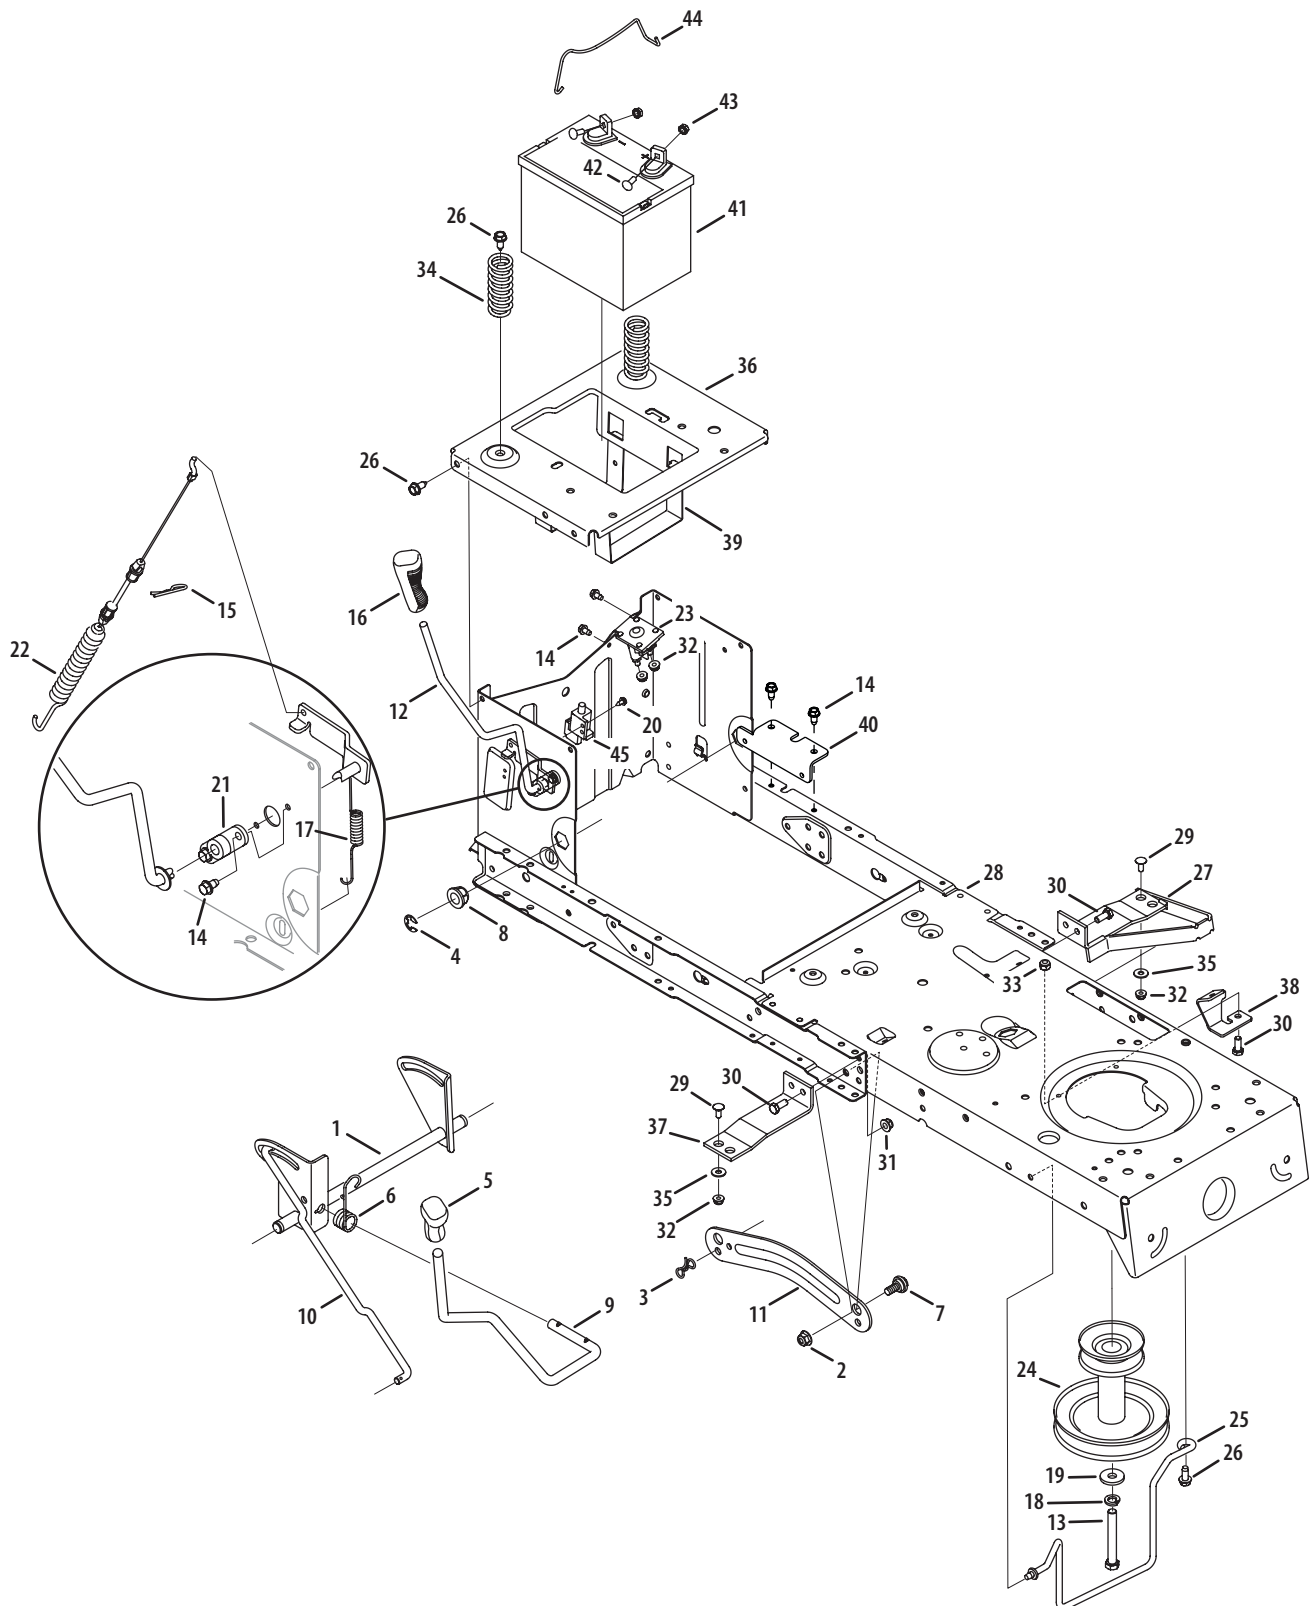


PARTS LIST

Craftsman Model 247.28881

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	683-04155A-0637	Shaft, Lift	23	725-04439	12v. Solenoid
2	712-04065	Nut, Hex Flange Insert Lock, 3/8-16	24	756-04196A	Engagement Pulley
3	714-04040	Bow-Tie Pin, 91, RH	25	747-04857	Belt Keeper Rod Assembly
4	716-0106A	E-ring, .625 Shaft	26	710-04484	Screw, Hd. Tapp, 5/16-18 x .75
5	720-0311	Grip, Handle	27	683-04195-0637	Support Bracket Assembly
6	732-04225	Spring, Lift Handle Torsion	28	683-04649	Rider Frame Assembly
7	738-04130	Bolt, Shoulder, .625 x .175:3/8-16	29	710-0134	Carriage Screw, 1/4-20 x .62
8	941-0225	Bearing, Hex Flange,	30	710-3008	Screw, Hx. Hd., 5/16-18 x .75
9	747-05296	Handle, Lift	31	712-04063	Nut, Hex Flange Insert Lock, 5/16-18
10	747-04393	Lift Rod, 13.68	32	712-04064	Nut, Hex Flange Insert Lock, 1/4-20
11	783-04494C-0637	Arm, Deck Lift RH	33	912-0429	Hexlock Nut, 5/16-18
	783-04711C-0637	Arm, Deck Lift LH	34	732-04035	Spring, Compress., 1.28 x 3.125
12	647-04096-0637	PTO Handle Assembly	35	736-0173	Flat Washer, .28 x .74 x .063
13	710-04608	Screw, Hx. Hd., 7/16-20 x 3.25	36	783-04548D-0637	Seat Bracket Frame
14	710-0599	Screw, Hd. Tapp, 1/4-20 x .5	37	783-04637-0637	Running Board Bracket
15	714-04040	Click Pin	38	783-04753-0637	Frame Support Bracket
16	720-04049A	Handle Grip	39	783-04869A-0637	Battery Bracket
17	732-04276A	PTO Spring, Extension	40	783-05389A-0637	Frame Brace Bracket
18	936-0171	Washer, Flat, 7/16	41	725-05090	Die Hard Battery
19	736-0322	Washer, Flat, .450 x .250 x .164	42	738-1132	Screw, Shoulder, .250 x .150
20	738-04237A	Shoulder Screw, #10-32 x .500	43	712-0271	Nut, Sems, 1/4-20
21	741-04119A	PTO Bearing	44	683-04448-0637	Battery Rod
22	946-04173C	Deck Engagement Cable	45	725-04363	Interlock Switch

PARTS LIST

 Craftsman Model 247.28881

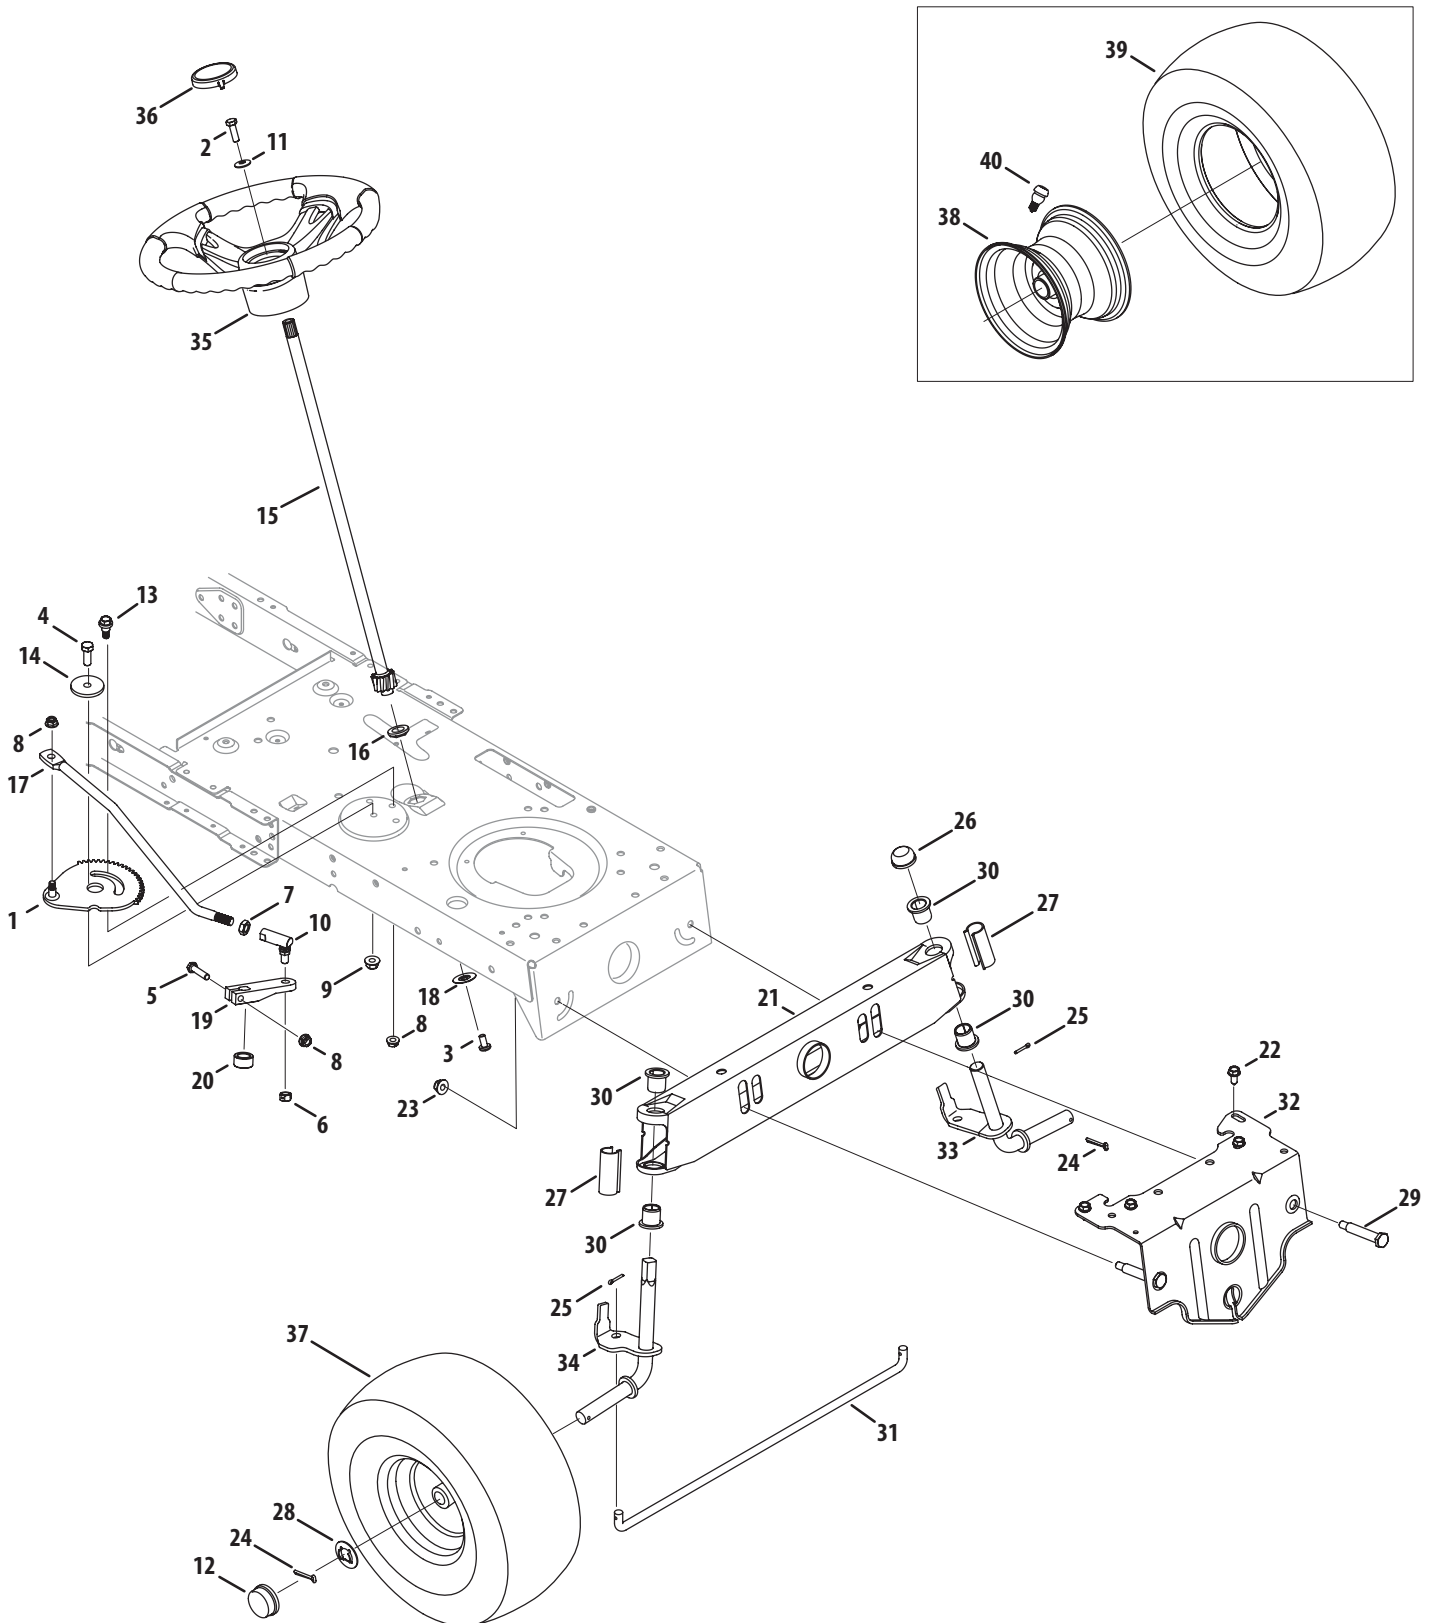

PARTS LIST


Craftsman Model 247.28881

Ref. No.	Part No.	Description
1	617-04094	Gear Assembly, Steering
2	710-0643	Screw, 5/16-18, 1.00, Gr5, Lock
3	710-1309	Screw, Mach, 5/16-18, 0.750
4	710-3094A	Hex Head Screw, 3/8-16 x 1.00
5	710-3180	Screw, 5/16-18, 1.75, Gr5
6	912-0214	Nut, Jam Lock, 3/8-24
7	912-0240	Nut, Jam, 7/16-20, Gr2
8	712-04063	Nut, Flange Lock, 5/16-18, Grf
9	712-04065	Nut, Flange Lock, 3/8-16, Grf
10	923-0448A	Ball Joint, 7/16-20, Lock
11	736-0242	Washer, Bell, .340 x .872 x .060
12	931-0484A	Hub Cap
13	738-04141	Shoulder Screw, 5/16-18
14	738-04162A	Shoulder Spacer, .8840 x .190
15	738-0919A	Steering Shaft, 5/8 Spline x 21.86
16	941-04124	Bearing, Flange, Hex 5/8
17	747-05385	Drag Link, Steering
18	948-0389	Cap, 1.25 x .16
19	748-04065-0637	Steering, Block
20	748-04068	Spacer, .710 ID x .125 OD x .56

Ref. No.	Part No.	Description
21	683-0128B-0637	Pivot Bar Axle Assembly
22	710-04484	Screw, 5/16-18, 0.750
23	712-04065	Nut, Flange Lock, 3/8-16, GrF
24	714-04039A	Pin, Cotter, 5/32, 1.25
25	914-0474	Pin, Cotter, 1/8 x 0.75
26	736-0341	Push Cap, 3/4
27	731-04057A	Axle Cap
28	736-04228A	Washer, Flat, .781 x 1.59
29	738-04128	Screw, Shlder, .500 x 2.380, 3/8-16
30	741-0660A	Flange Bearing
31	747-04299A	Tie Rod
32	783-05326B-0637	Pivot Bar Bracket
33	938-04007A-0637	Axle Assembly LH
34	638-04008P	Axle Assembly RH
35	631-04028	Steering Wheel, Standard Grip
36	731-06825	Cap, Steering Wheel (Crafts. logo)
37	634-04086-0961	Wheel Assembly
38	934-04081-4042	Rim
39	734-1731-0901	Tire, 15 x 6 x 6 Sq. Shoulder
40	934-0255	Valve Stem

PARTS LIST

 Craftsman Model 247.28881

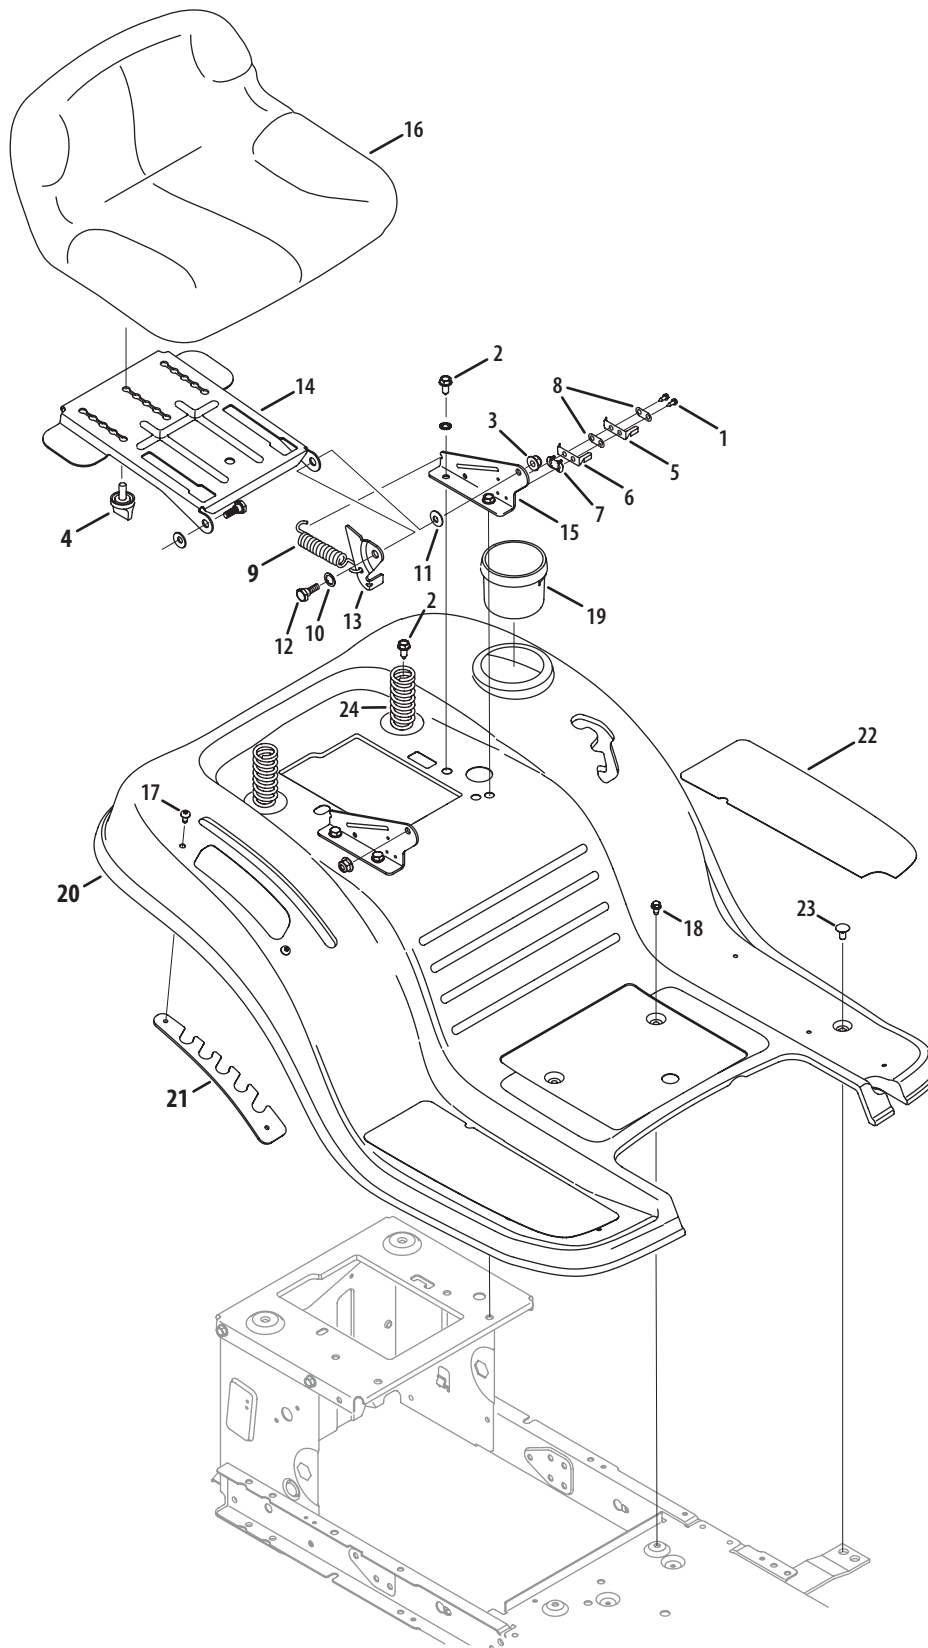


PARTS LIST

Craftsman Model 247.28881

Ref. No.	Part No.	Description
1	710-0227	Screw, 8-18 x .500
2	710-04484	Screw, 5/16-18 x .750
3	712-04063	Flange Lock Nut, 5/16-18
4	720-04061	Knob, 3/8-16 x .875
5	925-1303	Outer Seat Spring
6	725-1439	Inner Seat Spring
7	726-0278	Insulator Boss Plate
8	726-0279	Insulator Plate
9	732-1184	Extension Spring
10	936-0108	Flat Washer, .510 x .750 x .033
11	736-0242	Flat Washer, .340 x .872 x .060
12	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
13	783-0209D	Lift Seat Bracket
14	783-04081D-0637	Seat Pivot Bracket
15	783-1489D-0637	Seat Mounting Bracket
16	757-04124	Low Back Seat
17	710-05280	Screw, 1/4-20 x .500
18	710-0599	Screw Pan Torx Head, 1/4-20 x .500
19	731-04591A	Cup Holder
20	783-04587C-4043	Fender
21	783-04843-0637	Lift Adjuster Bracket
22	723-04025	Abrasive Foot Pad, LH
	723-04026	Abrasive Foot Pad, RH
23	710-0134	Carriage Screw, .62: 1/4-20
24	732-04035	Spring, Compress., 1.28 x 3.125

PARTS LIST

 Craftsman Model 247.28881

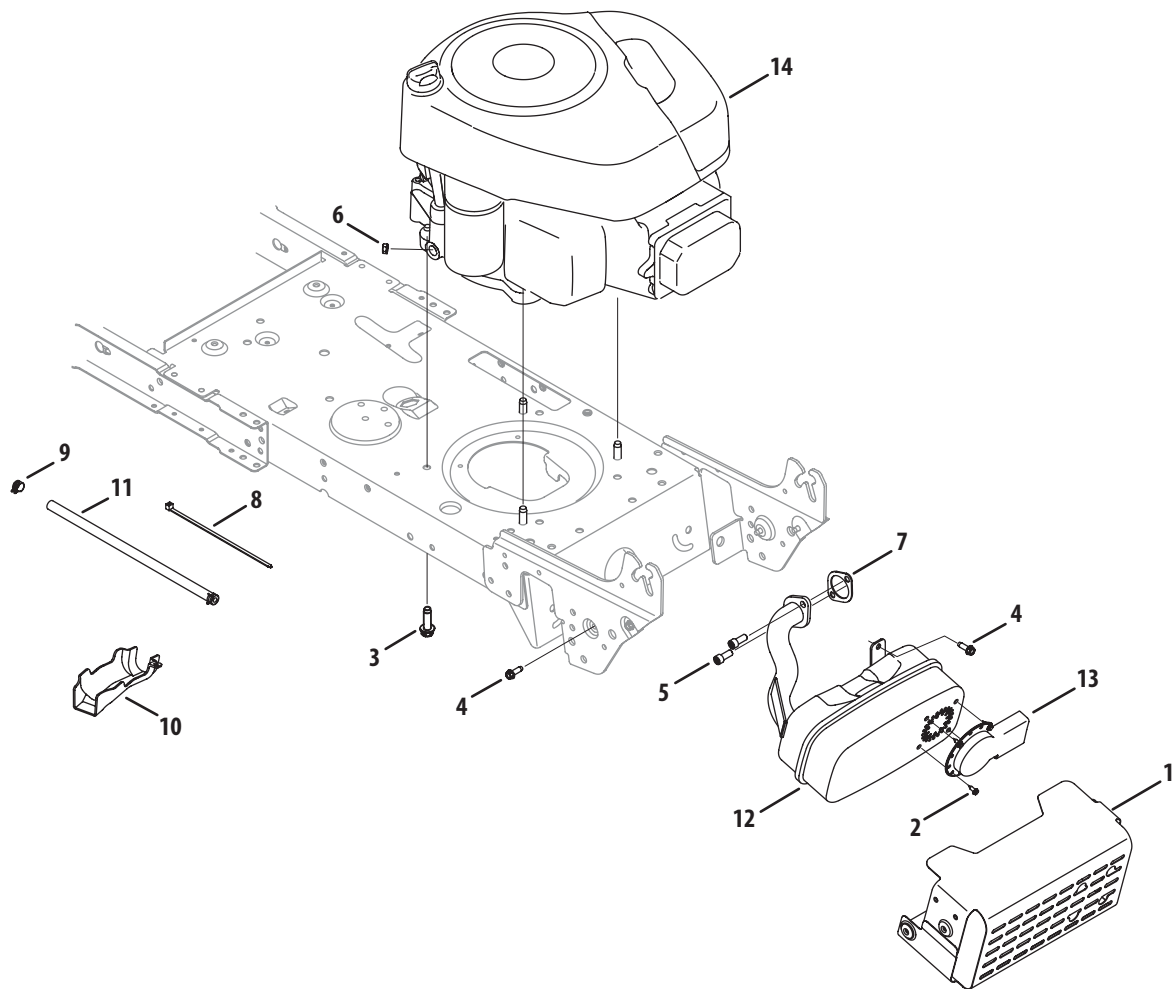


PARTS LIST

Craftsman Model 247.28881

Ref.	Part No.	Description
1	683-04549-0637	Muffler Shield Assembly
2	710-0227	Screw, AB #8-18 0.500
3	710-04683	Tap Screw, 3/8-16 1.000
4	710-0642	Tap Screw, 1/4-20 0.750
5	710-1314A	Screw, Socket Head, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	BS-692236	Exhaust Gasket
8	725-0157	Cable Tie, 3/16 X .05 X 7.4
9	726-0205	Hose Clamp, .490 Dia.
10	731-05628	Oil Drain Sleeve
11	751-10349	Low Permeation Fuel Hose, 1/4
12	751-10448B	Briggs Single Muffler
13	751-10353	Long Muffler Deflector
14	31C707-3346-G2/G6	Engine

PARTS LIST

 Craftsman Model 247.28881

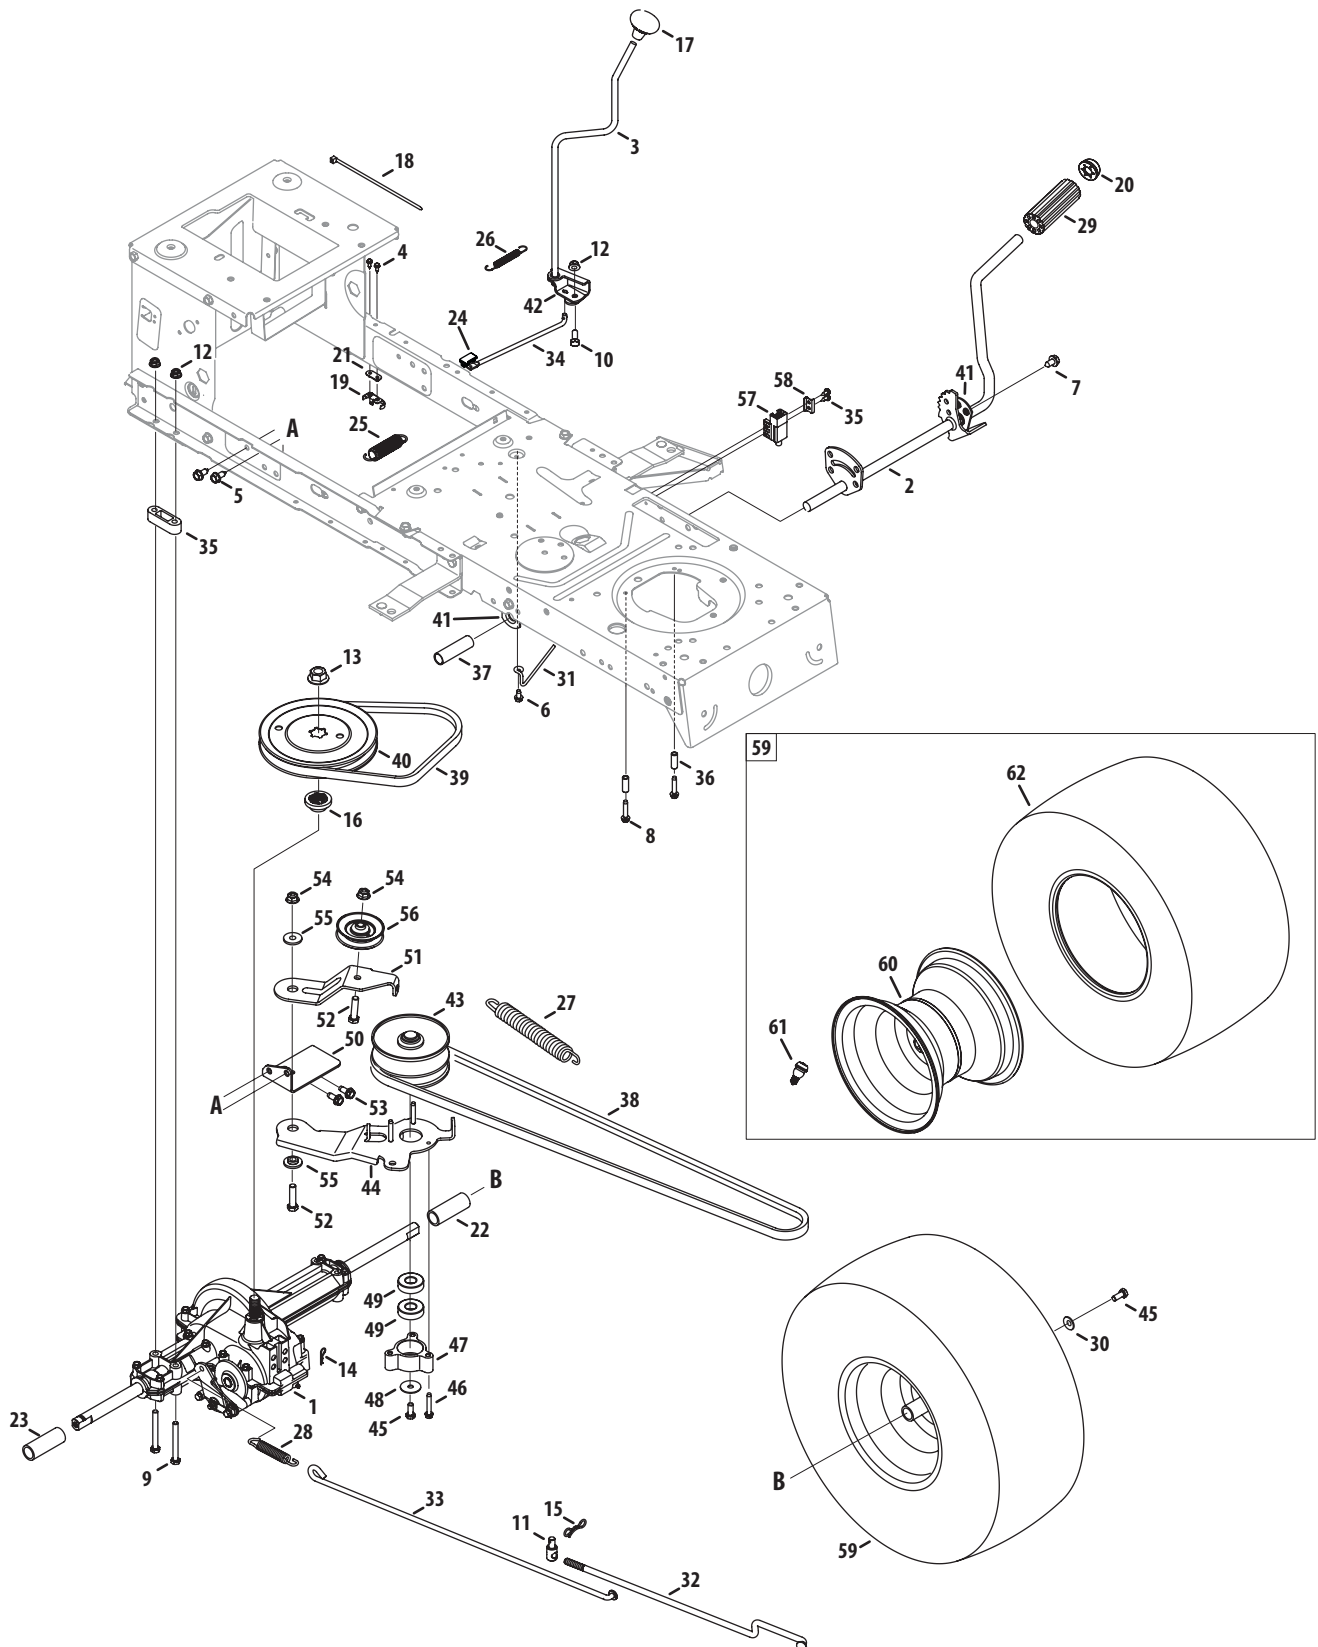


PARTS LIST

Craftsman Model 247.28881

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	918-04566	Transmission Drive Assembly	33	747-05188	Brake Rod
2	647-04034C-0637	Pedal Assembly	34	747-05244	Shift Rod
3	647-04035	Shaft Lever Assembly	35	738-04237A	Shoulder Screw, #10-32 x .500
4	710-0227	Screw, 8-18:0.500	36	750-0566A	Spacer, .260 x .375 x 1.030 LG
5	710-04484	Screw, 5/16-18 x .750	37	750-0802	Spacer, .640 ID x .76 OD x 2.63
6	710-0599	Screw, 1/4-20 x 0.500	38	954-04249	V Belt, 5L: 70.90 POLY
7	710-0604A	Screw, 5/16-18 x 0.625	39	954-0241A	V Belt, 5L: 35.25 POLY
8	710-0809	Screw, 1/4-20 x 1.250	40	956-04002	Trans. Pulley
9	710-0176	Hex Screw, 5/16-18 x 2.75	41	783-04536B-0637	Pedal Support Bracket
10	710-3008	Hex Screw, 5/16-18 x .75	42	783-04595A	Shaft Adjust Bracket
11	911-04075A	Ferrule, 3/8-24 X .375 DIA.	43	956-04015A	Variable Speed Pulley Assembly
12	712-04063	Flangelock Nut, 5/16-18	44	683-04206	Bracket Assembly
13	712-0700	Flange Nut, 9/16-18	45	710-0627	Hex Screw, 5/16-24 x .750
14	914-0209	Cotter Pin INT- .125 DIA	46	710-0778	Screw, 1/4-20 x 1.500
15	714-04040	Bow-Tie Cotter Pin	47	718-04261	Bearing Cup
16	718-04407	Pulley Hub, 5/8 SPLINE	48	736-0362	Flat Washer, .330 x 1.25 x .06:HT
17	720-04028	Shift Knob	49	941-0600	Ball Bearing, 17 x 40 x 12
18	725-0157	Cable Tie	50	683-04176A	Transmission Bracket Assembly
19	725-1644	Short Spring Switch	51	683-04207	Idler Bracket Assembly
20	726-0214	Push Cap, 5/8	52	710-0347	Hex Screw, 3/8-16 x 1.75
21	926-0320	Plate Insulator Nut	53	710-1260A	Screw, 5/16-18 x 0.750
22	731-04602	Sleeve, .758 x .821 x 3.3125	54	712-04065	Flange Lock Nut, 3/8-16
23	731-04604	Sleeve, .758 x .821 x 2.4375	55	938-0347	Shoulder Spacer, .625 ID x .169
24	731-06894	Shift Bearing Plate	56	756-04325	Idler Pulley
25	732-04306	Spring Extension, .80 OD x 3.28 LG	57	725-04363	Switch Interlock
26	732-04488	Spring Extension, .38 OD x 3.25 LG	58	17962	Plate Switch
27	732-04746	Spring Extension, .94 OD x 6.75 LG	59	634-0104	Wheel Assembly, 20 x 8 x 8 Sq. Sh.
28	732-0716D	Spring Extension, .59 OD x 4.00 LG	60	634-04369-4042	Rim Assembly
29	735-0239	Foot Pad, 4.0 LONG	61	934-0255	Valve Stem
30	736-0242	Bell Washer, .340 x .872 x .060	62	734-1730	Tire, 20 x 8 x 8 Sq. Sh.
31	747-04969	Belt Keeper Rod	—	925-04082	Wiring Harness (Not Shown)
32	747-05186	Variable Speed Control Rod			

PARTS LIST

 Craftsman Model 247.28881

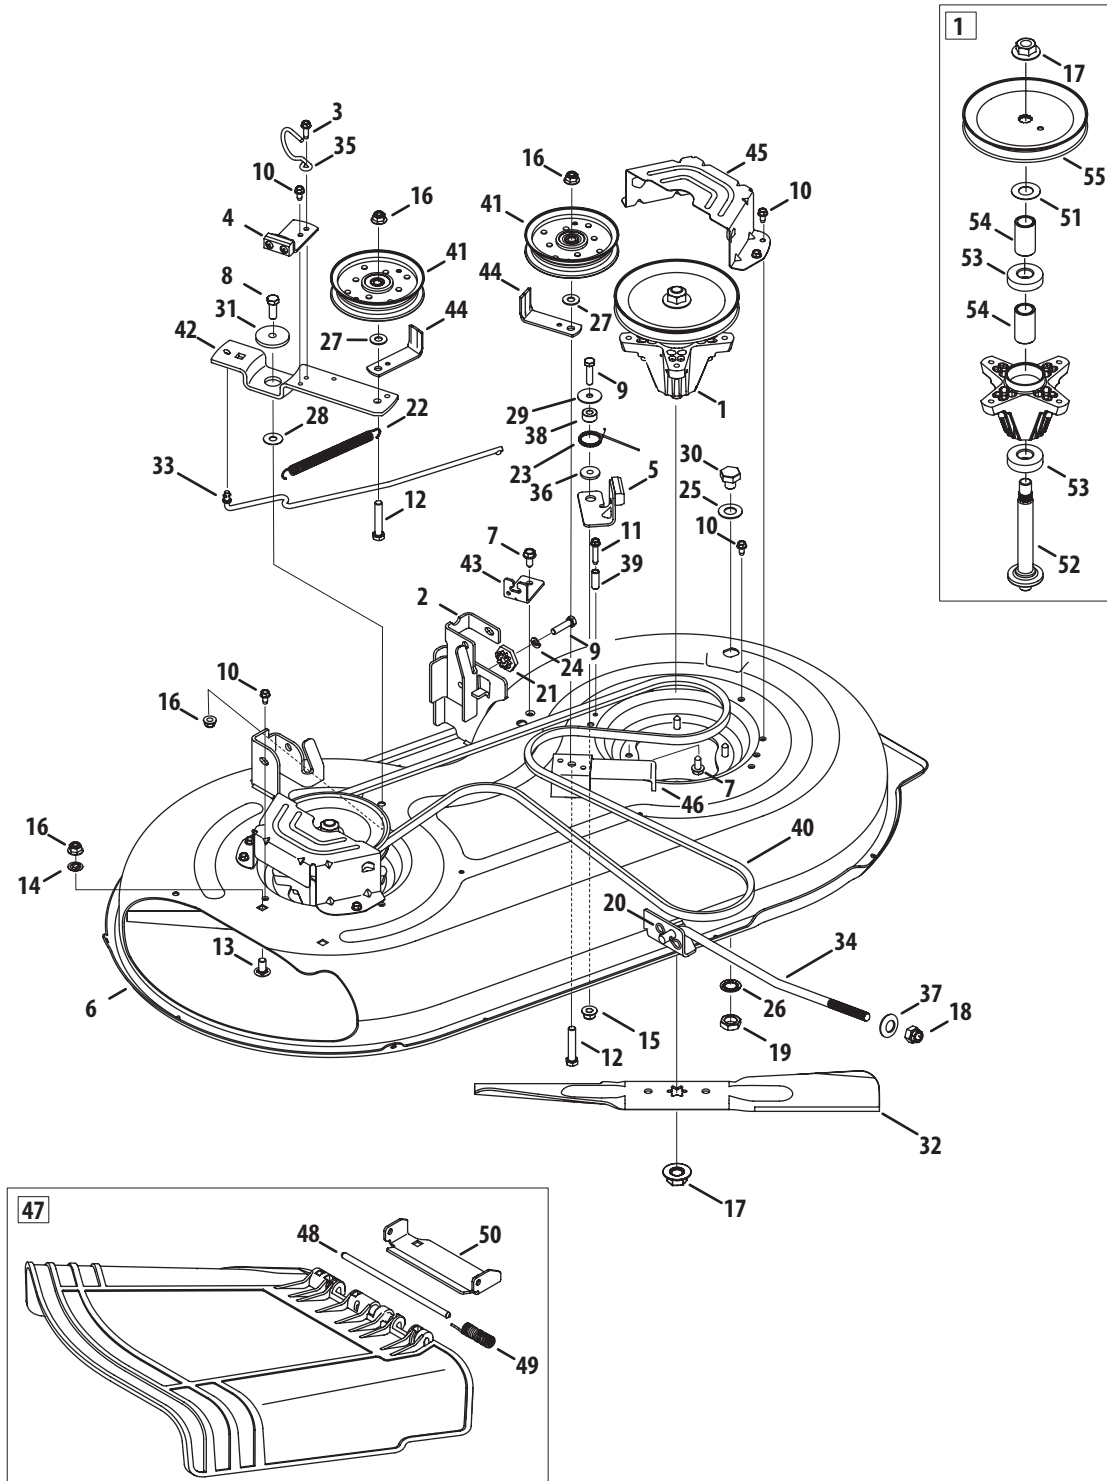

PARTS LIST

Craftsman Model 247.28881

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	918-04822A	Spindle Pulley Assembly	29	736-0362	Flat Washer, .330 x 1.25 x .06
2	683-0254B-0637	Deck Hanger Bracket Assembly	30	738-04146	Bolt Plug, M16 x 1.5
3	710-0642	Screw, 1/4-20 x .750	31	738-04162A	Shoulder Spacer, .8840 x .190
4	983-04511	Brake Assembly	32	942-04308	Cutting Blade, 21.23": 2 in 1
5	983-04525	Brake Assembly	33	747-05105	Brake Control Rod
6	983-04570-0637	Deck	34	747-05141A	Deck Lift Rod
7	710-04484	Screw, 5/16-18 x .750	35	747-05323	Belt Keeper Rod
8	710-0514	Screw, 3/8-16 x 1.00	36	748-0234	Shoulder Spacer
9	710-0528	Hex Screw, 5/16-18 x 1.25	37	748-04069	Deck Lift Pivot Cup
10	710-0599	Screw, 1/4-20 x .500	38	750-0258	Spacer
11	710-0778	Screw, 1/4-20 x 1.50	39	750-0566A	Spacer
12	710-3144	Hex Head Screw, 3/8-16	40	954-04060B	V-Type Belt, 96.5
13	710-3178	Carriage Bolt, 3/8-16 x .75	41	756-04129B	Idler Pulley, 4.25 Diameter
14	712-0229	Push Nut, 3/8	42	783-05946	Idler Pivot Bracket
15	712-04063	Flangelock Nut, 5/16-18	43	783-06243-0637	Deck Cable Engagement Bracket
16	712-04065	Flangelock Nut, 3/8-16	44	783-06368A-0637	Belt Pulley Guard
17	712-0417A	Flange Nut, 5/8-18	45	783-06424A-0637	Deck Belt Cover
18	712-04243	Flangelock Nut, 1/2-13	46	783-06643-0637	Deck Support Bracket
19	912-0641	Hex Nut, M16 - 1.5	47	631-04460	Chute Deflector Assembly
20	714-04043	Cotter Pin, Bow-Tie	48	711-04847B	Hinge Pin
21	917-04074	Deck Adjuster Gear	49	732-04372	Torsion Spring, .44 x 2.0
22	932-0384	Extension Spring, .62 x 6.12	50	783-06074A	Chute Bracket
23	732-04727	Torsion Spring, 1.0 x 1.17	51	936-0351	Flat Washer, .760 x 1.50
24	936-0119	Lock Washer, 5/16	52	738-1186A	Spindle Shaft
25	736-0187	Flat Washer, .64 x 1.24 x .06	53	941-0919	Ball Bearing, .787 x 1.85 x .551
26	736-0225	Flat Washer, .5/8 Int. Tth.	54	750-04936	Spacer, .792 x 1.060 x 1.860
27	736-0262	Flat Washer, .385 x .870 x .092	55	956-1227	Deck Pulley, 6.3 dia.
28	936-0344	Flat Washer, .385 x 1.0 x .030			

PARTS LIST

 
Craftsman Engine Model 31C707-3346-G2/G6 For Model 247.28881

48 SHORT BLOCK

1058 OPERATOR'S MANUAL


1329 REPLACEMENT ENGINE

1330 REPAIR MANUAL

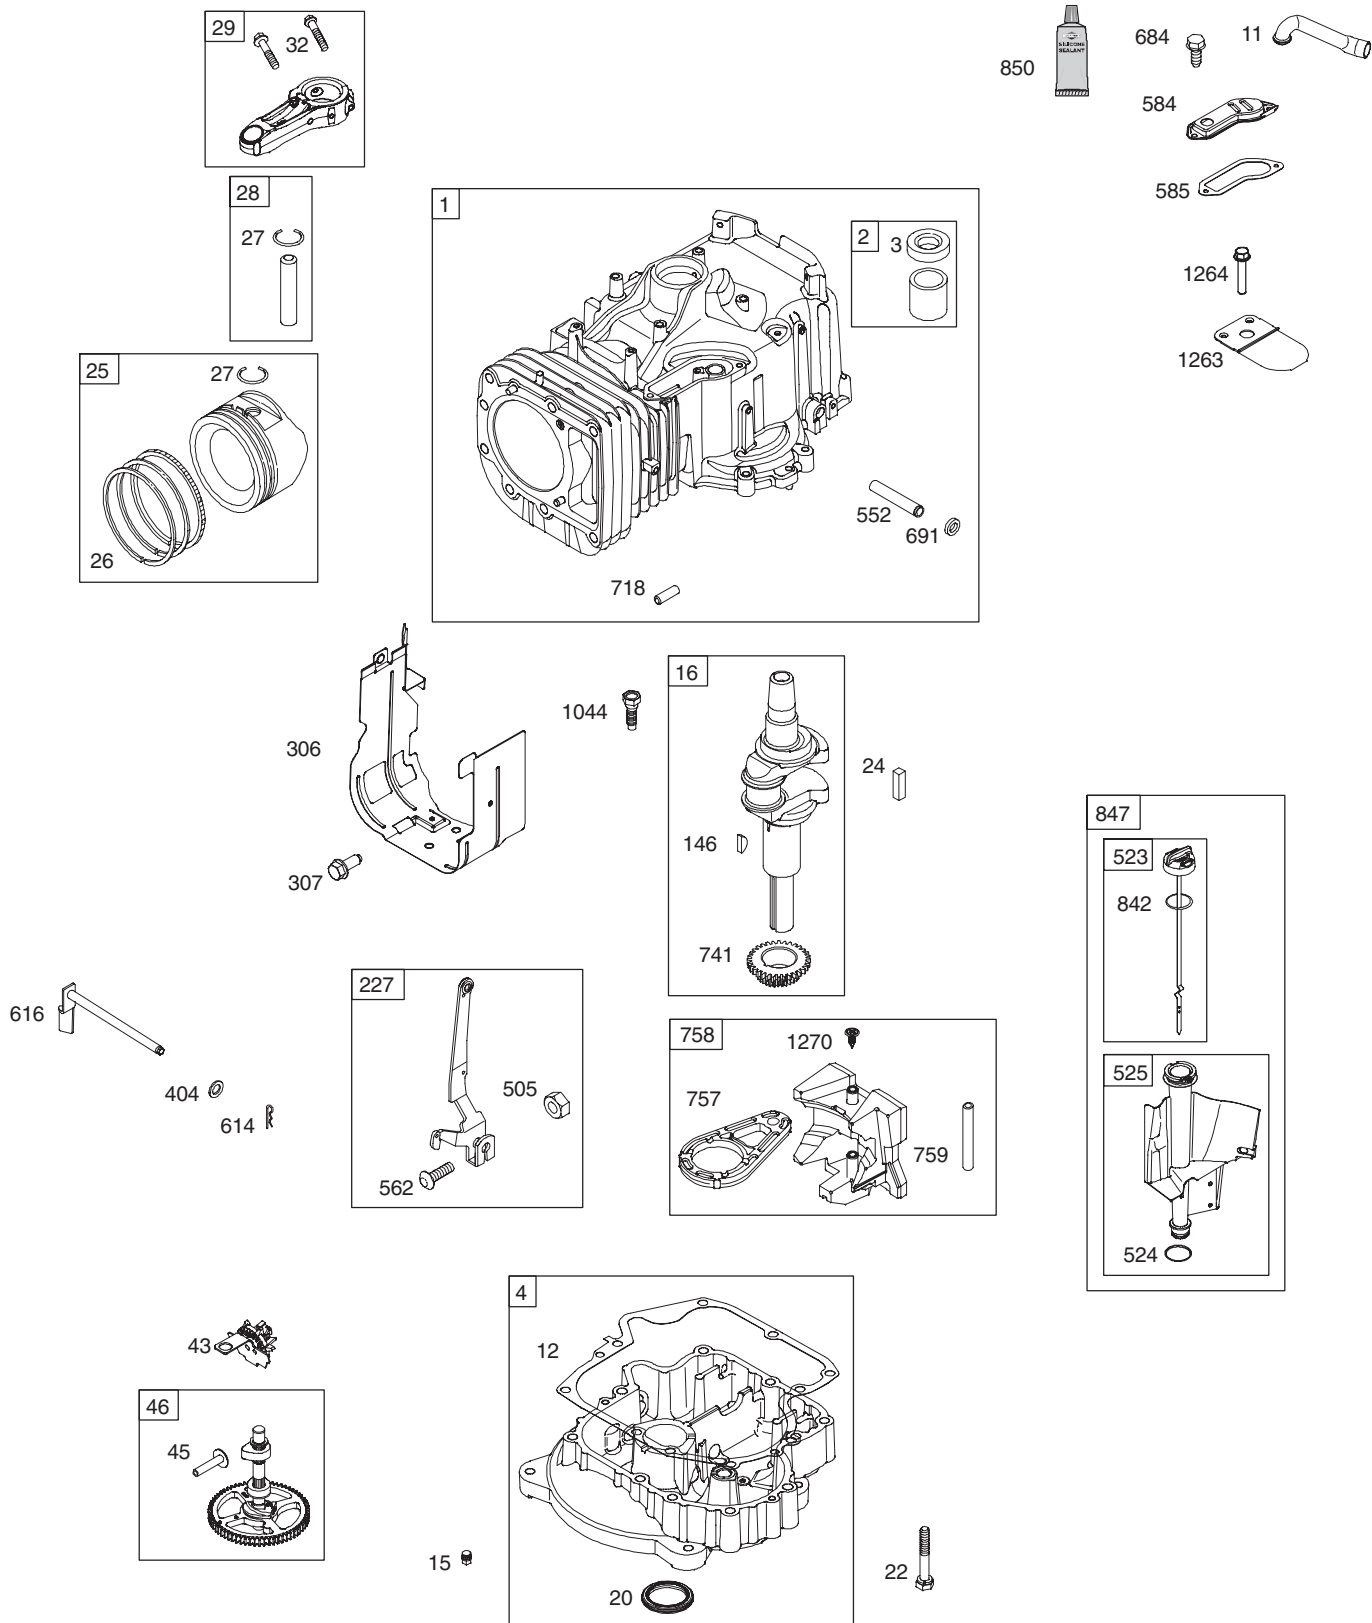


PARTS LIST

 Craftsman Engine Model 31C707-3346-G2/G6 For Model 247.28881

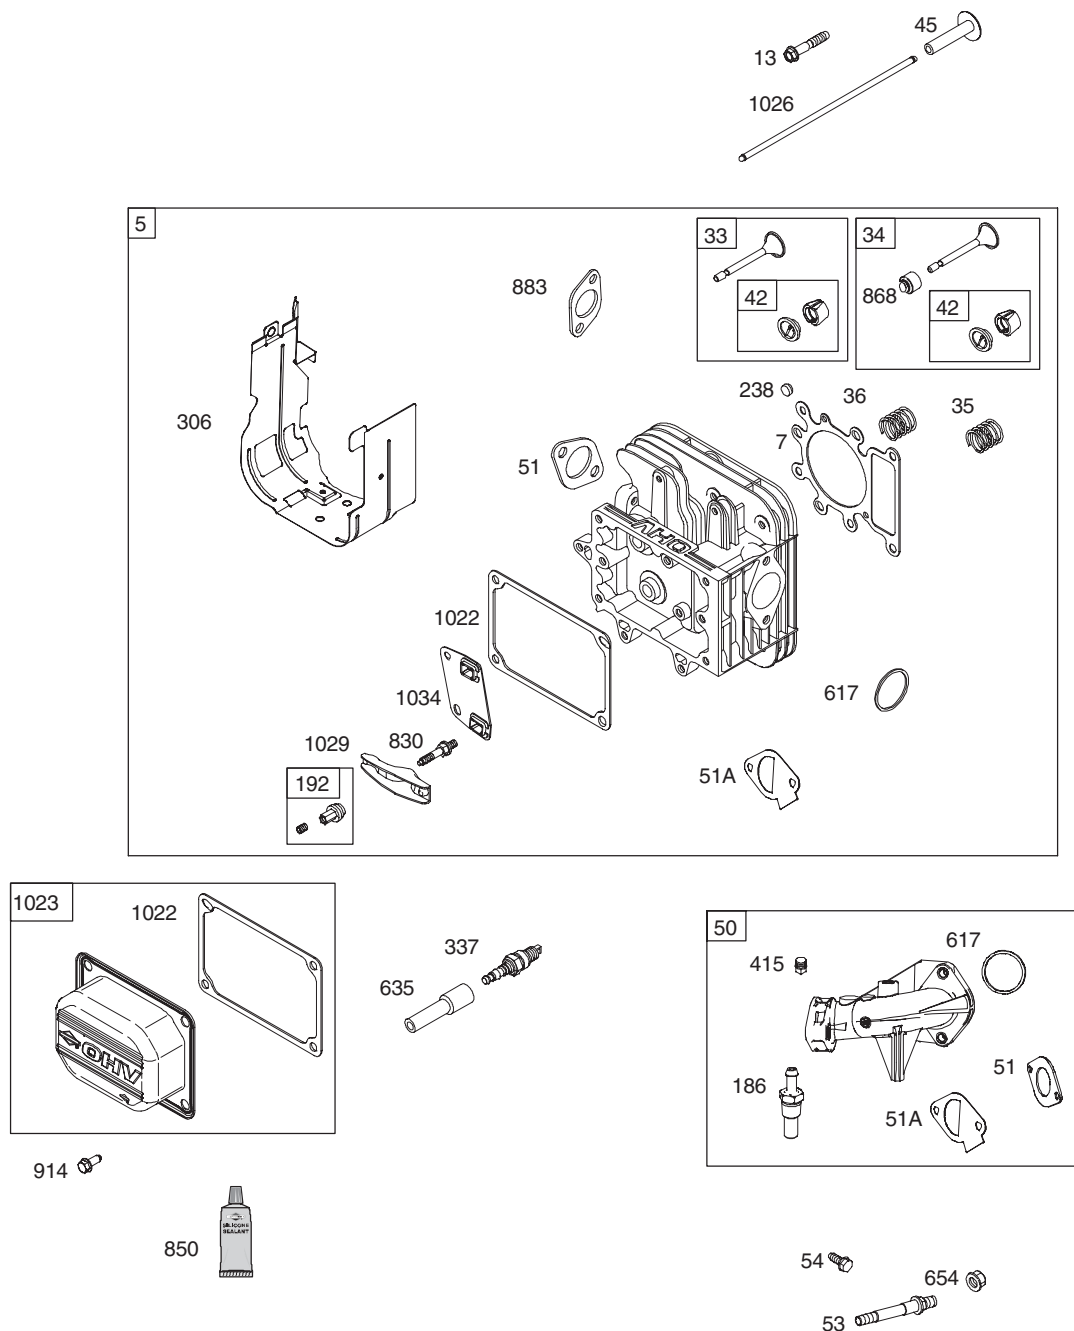

PARTS LIST





 
Craftsman Engine Model 31C707-3346-G2/G6 For Model 247.28881

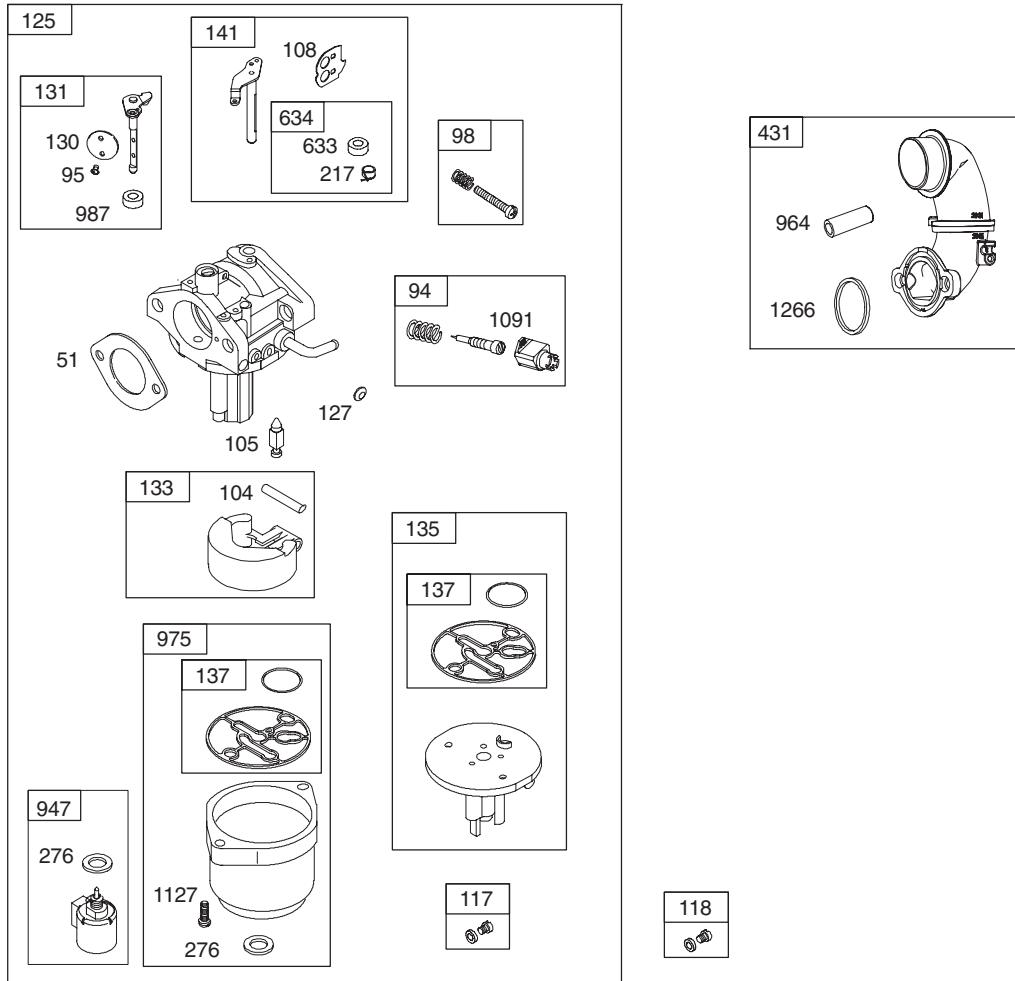

PARTS LIST









Craftsman Engine Model 31C707-3346-G2/G6 For Model 247.28881

     1036 EMISSIONS LABEL

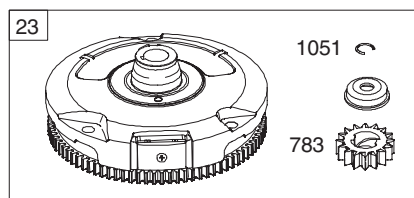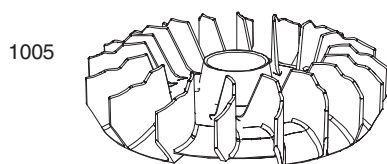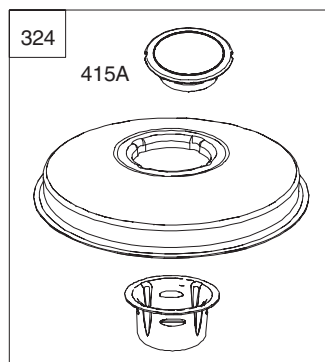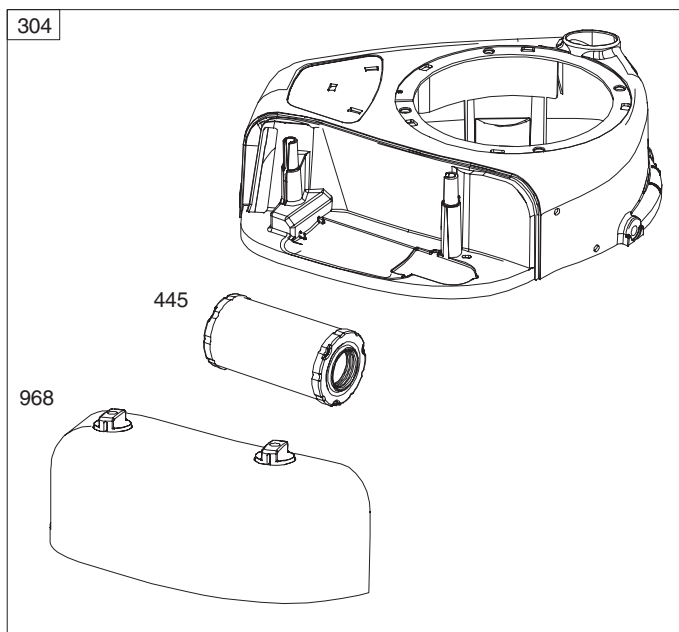




PARTS LIST

        Craftsman Engine Model 31C707-3346-G2/G6 For Model 247.28881

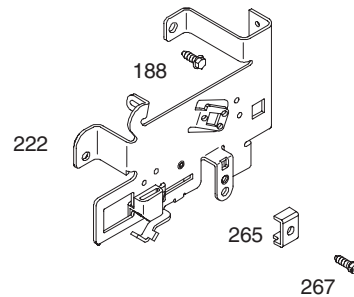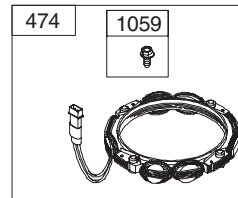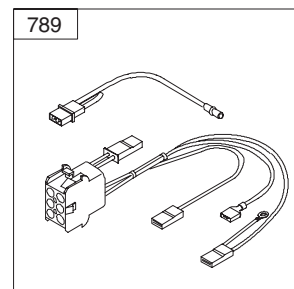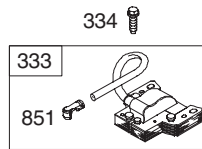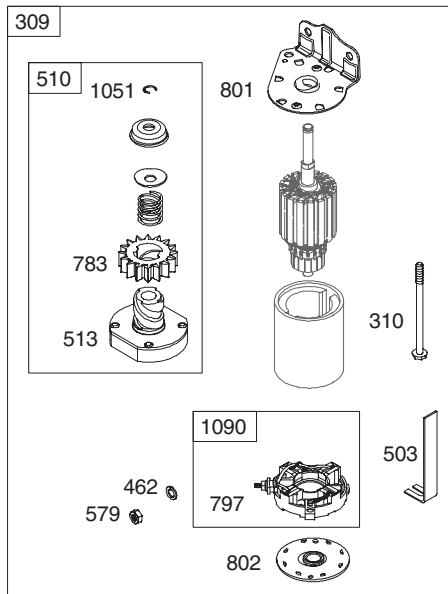

PARTS LIST

   Craftsman Engine Model 31C707-3346-G2/G6 For Model 247.28881

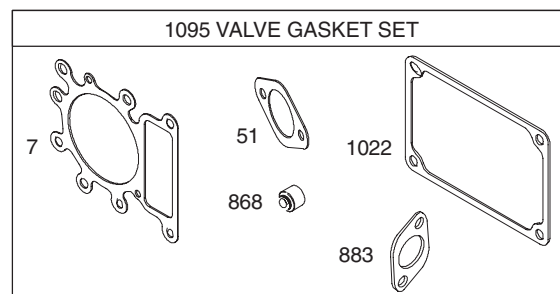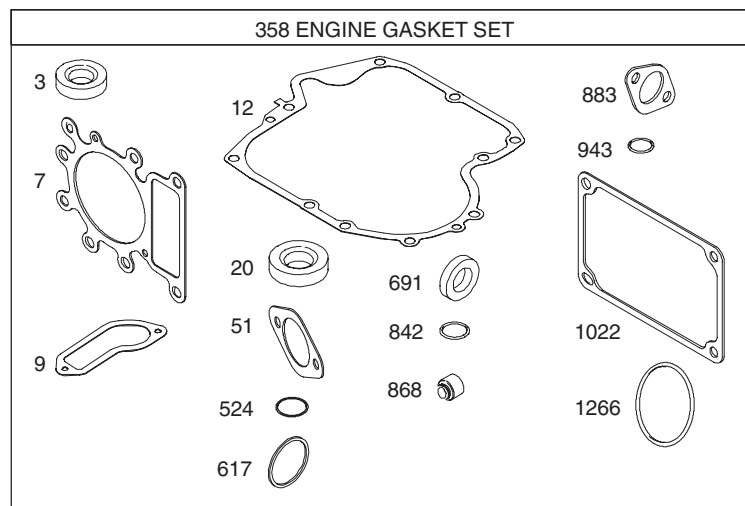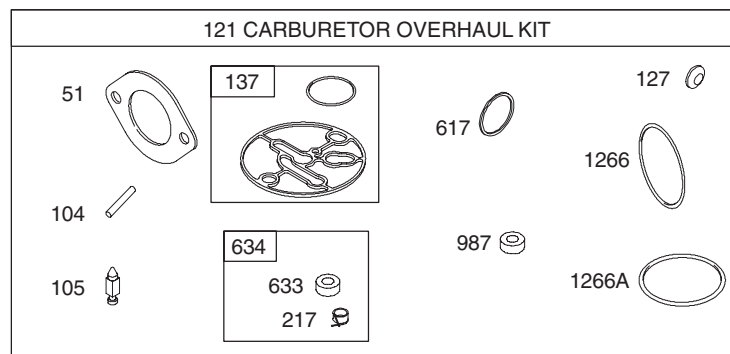

PARTS LIST

Craftsman Engine Model 31C707-3346-G2/G6 For Model 247.28881

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	796010	Cylinder Assembly	104	694918	Pin-Float Hinge
2	399265	Bushing/Seal Kit (Magneto Side)	105	696136	Valve-Float Needle
3	391086s	Seal-Oil (Magneto Side)	108	695419	Valve-Choke
4	697106	Sump-Engine	117	843099	Jet-Main (Standard)
5	796026	Head-Cylinder	118	790890	Jet-Main (High Altitude)
7	796584	Gasket-Cylinder Head	121	796184	Kit-Carburetor Overhaul
11	794683	Tube-Breather	125	796109	Carburetor
12	697110	Gasket-Crankcase	127	690727	Plug-Welch
13	793988	Screw (Cylinder Head)	130	699500	Valve-Throttle
15	690946	Plug-Oil Drain	131	699501	Kit-Throttle Shaft
16	797579	Crankshaft	133	694914	Float-Carburetor
20	795387	Seal-Oil (PTO Side)	135	698780	Tube-Fuel Transfer
22	692125	Screw (Crankcase Cover/Sump)	137	698781	Gasket-Float Bowl
23	698281	Flywheel	141	792777	Kit-Choke Shaft
24	796335	Key-Flywheel (Steel)	146	691639	Key-Timing
25	796172	Piston Assembly (Standard)	186	794873	Connector-Hose (Intake Manifold)
	796173	Piston Assembly (.020" Oversize)	187	791805	Line-Fuel (Formed) (Cut to Required Length)
26	791936	Ring Set (Standard)	188	691693	Screw (Control Bracket)
	792649	Ring Set (.020" Oversize)	192	691986	Adjuster-Rocker Arm
27	698469	Lock-Piston Pin	202	691841	Link-Mechanical Governor
28	796007	Pin-Piston	209	692208	Spring-Governor (Green)
29	794122	Rod-Connecting	216	691840	Link-Choke
32	791118	Screw (Connecting Rod)	217	695409	Spring-Choke Return
33	792868	Valve-Exhaust	222	694042	Bracket-Control
34	791935	Valve-Intake	227	691374	Lever-Governor Control
35	691279	Spring-Valve (Intake)	232	691842	Spring-Governor Link
36	691279	Spring-Valve (Exhaust)	238	691843	Cap-Valve
37	697352	Guard-Flywheel	240	394358s	Filter-Fuel
42	499586	Keeper-Valve	265	691024	Clamp-Casing
43	691968	Slinger-Governor/Oil	267	794904	Screw (Casing Clamp)
45	690564	Tappet-Valve	276	695410	Washer-Sealing
46	793880	Gear-Cam	304	797900	Blower Housing
48	697761	Short Block	305	697102	Screw (Blower Housing) (1/4-20x1.14)
50	796180	Manifold-Intake	305A	793376	Screw (Blower Housing) (1/4-20x.68)
51	692137	Gasket-Intake	305B	795891	Screw (Blower Housing) (10-16x.43)
51A	796081	Gasket-Intake	306	796006	Shield-Cylinder
53	690227	Stud (Carburetor)	307	691693	Screw (Cylinder Shield)
54	691148	Screw (Intake Manifold)	309	693551	Motor-Starter
78	691693	Screw (Flywheel Guard)			
94	793610	Kit-Idle Mixture			
95	690718	Screw (Throttle Valve)			
98	695408	Kit-Idle Speed			

PARTS LIST

Craftsman Engine Model 31C707-3346-G2/G6 For Model 247.28881

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
310	690323	Screw (Starter Motor)	724	697478	Link-Starter Switch
324	796308	Screen/Cup Assembly	729	691224	Clip-Wire
333	795315	Armature-Magneto	741	697128	Gear-Timing
334	691061	Screw (Magneto Armature)	757	793242	Link-Counterweight
337	491055s	Plug-Spark	758	793763	Counterweight
358	796187	Gasket Set-Engine	759	697392	Pin-Counterweight
404	691691	Washer (Governor Crank)	783	693713	Gear-Pinion
415	794903	Plug (Intake Manifold)	789	698329	Harness-Wiring
415A	794129	Plug (Cover/Retainer)	797	693167	Nut (Brush Retainer)
431	797901	Elbow-Intake	801	691283	Cap-Drive
445	796031	Filter-Air Cleaner Cartridge	802	691286	Cap-End
462	691261	Washer (Starter Cable)	830	691095	Stud-Rocker Arm
474	696459	Alternator	842	691031	Seal-O Ring (Dipstick Tube)
503	691532	Strap-Starter	847	790442	Dipstick/Tube Assembly
505	691251	Nut (Governor Control Lever)	850	100106	Sealant-Liquid
510	693699	Drive-Starter	851	692424	Terminal-Spark Plug
513	692024	Clutch-Drive	868	690968	Seal-Valve
523	699908	Dipstick	883	692236	Gasket-Exhaust
524	691032	Seal-Dipstick Tube	914	697551	Screw (Rocker Cover)
525	697184	Tube-Dipstick	947	699915	Solenoid-Fuel
552	697144	Bushing-Governor Crank	964	799159	Cap-Connector
562	691119	Screw (Governor Control Lever)	968	797902	Cover-Air Cleaner
579	691029	Nut (Starter Cable)	975	699502	Bowl-Fuel
584	794682	Cover-Breather Passage	987	698777	Seal-Throttle Shaft
585	697109	Gasket-Breather Passage	1005	796201	Fan-Flywheel
601	791850	Hose-Clamp (Green)	1022	272475s	Gasket-Rocker Cover
614	691620	Pin-Cotter (Governor Crank)	1023	797421	Cover-Rocker
616	692012	Crank-Governor	1026	692003	Rod-Push (Intake)
617	692138	Seal-O Ring (Intake Manifold) (Red)		692011	Rod-Push (Exhaust)
633	699813	Seal-Choke/Throttle Shaft (Choke Shaft)	1029	691751	Arm-Rocker
634	698779	Spring/Seal Assembly (Choke Shaft)	1034	690822	Guide-Push Rod
635	691909	Boot-Spark Plug	1036	Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)	
654	690958	Nut (Carburetor)	1040	698368	Plate-Trim
684	697157	Screw (Breather Assembly)	1044	698139	Screw (Flywheel)
691	692407	Seal-Governor Shaft	1051	691265	Ring-Retaining
697	791680	Screw (Drive Cap)	1054	280275	Tie-Cable
718	690959	Pin-Locating	1058	276344	Operator's Manual

PARTS LIST

Craftsman Engine Model 31C707-3346-G2/G6 For Model 247.28881

Ref. No.	Part No.	Description
1059	698516	Kit-Screw/Washer (Alternator)
1090	691293	Retainer-Brush
1091	691333	Cap-Limiter
1095	794152	Gasket Set-Valve
1119	691183	Screw (Alternator)
1127	695407	Screw (Float Bowl)
1263	697124	Reed-Breather
1264	697104	Screw (Breather Reed)
1266	691917	Seal-O Ring (Intake Elbow) (Red)
1266A	697123	Seal-O Ring (Intake Elbow)
1267	697419	Latch-Blower Housing
1270	793243	Plug-AVS Counterweight
1329	31C707-3346-G2/G6	Replacement Engine
1330	272147	Repair Manual

Engine Gasket Set

Key No. 358

Valve Gasket Set

Key No. 1095

Carburetor Overhaul Kit

Key No. 121