


Operator's Manual



LAWN TRACTOR 26 HP, 46" Tractor


PYT9000

 Model No. 247.288881

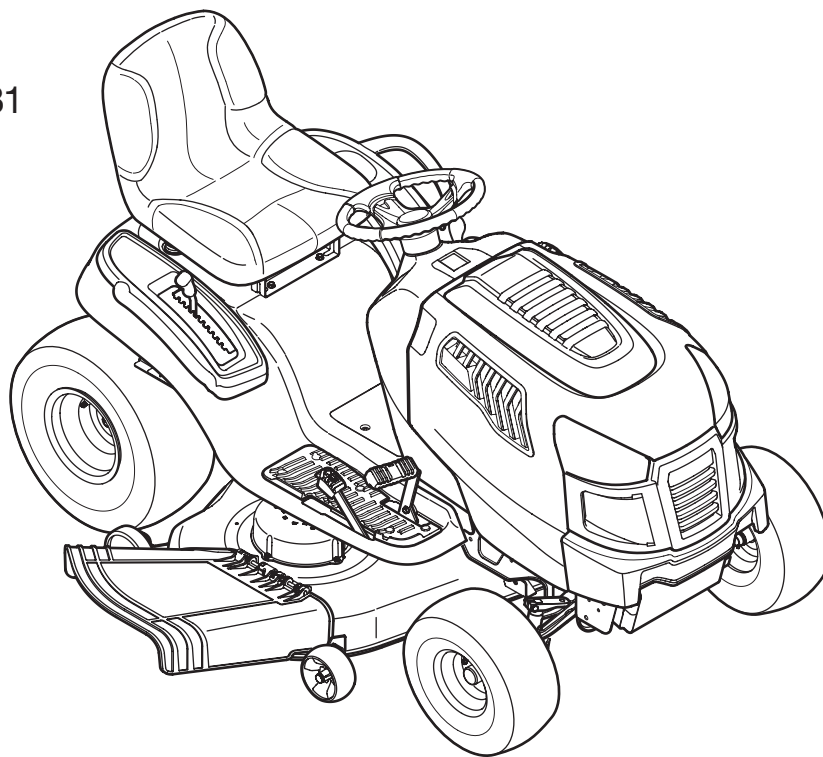

PARTS LIST

 Steering and Axle — Model No. 247.288881

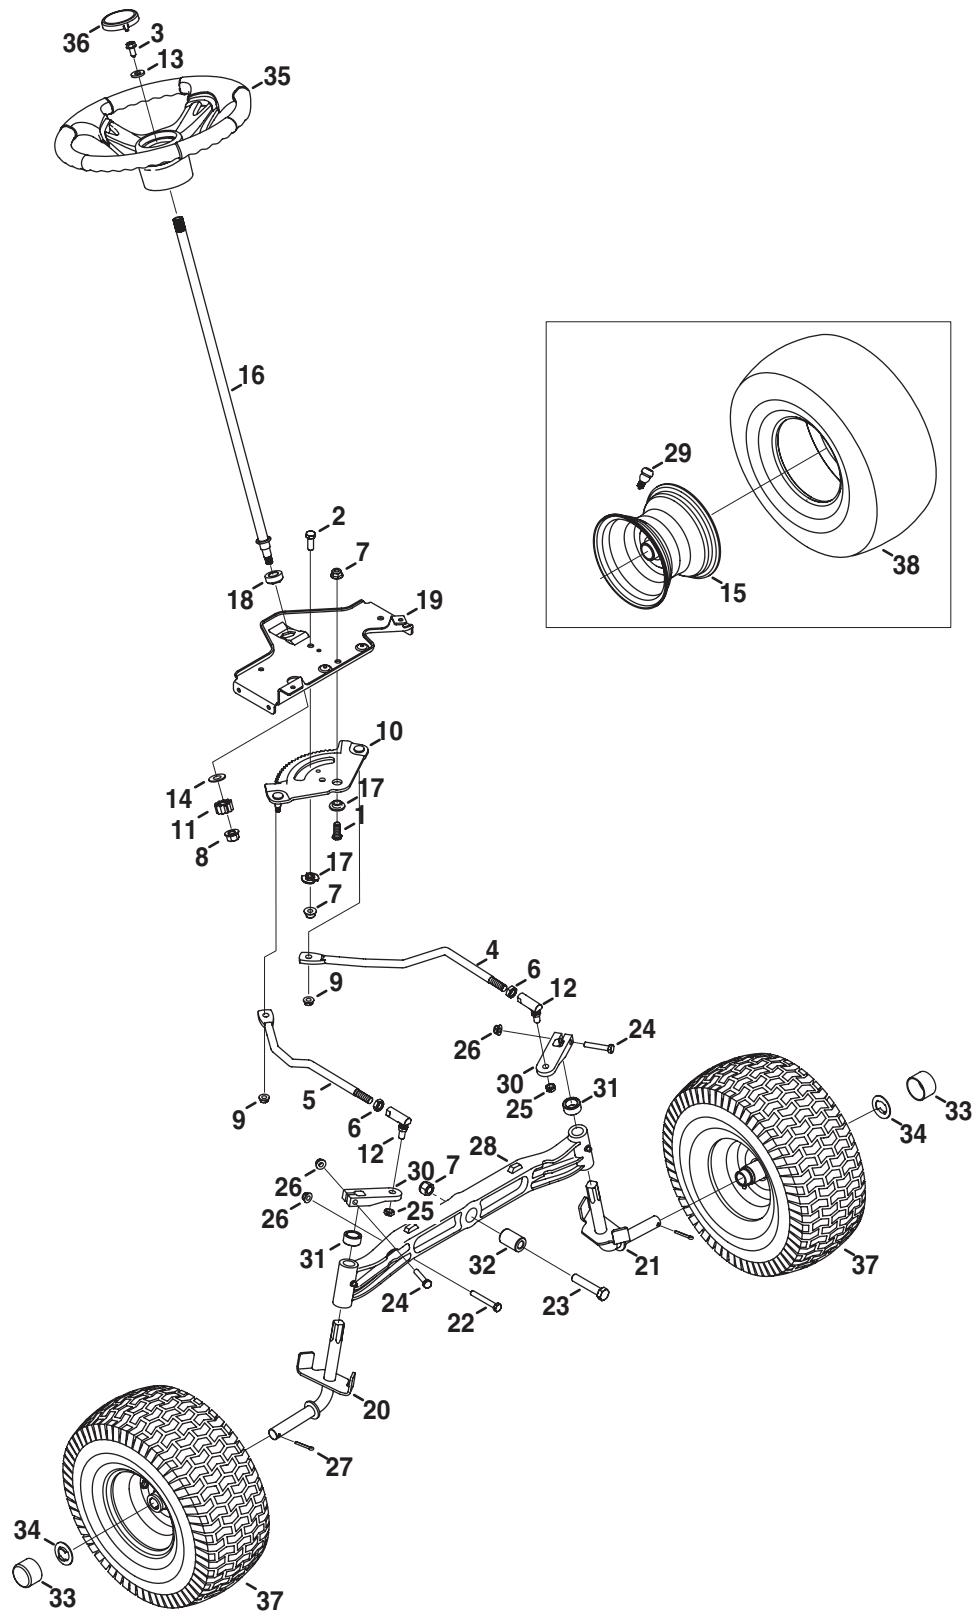

PARTS LIST


Steering and Axle — Model No. 247.288881

Ref. No.	Part No.	Description
1	710-04095	Hex Head Screw, 3/8-16:1.00
2	710-0514	Hex Head Screw, 3/8-16:1.00
3	710-0643	Hex Head Screw, 5/16-18:1.00
4	711-04998	LH Drag Link
5	711-04999	RH Drag Link
6	912-0240	Jam Nut, 7/16-20
7	712-04065	Flangelock Nut, 3/8-16
8	712-0459	Flangelock Nut, 7/16-20
9	712-3004A	Flangelock Nut, 5/16-18
10	717-1550F	Steering Gear
11	717-1554	Steering Pinion Gear
12	923-0448A	Ball Joint, 7/16-20
13	936-3004	Flat Washer, .406 X .875 X .105
14	736-3084	Flat Washer, .51 X 1.12 X .06:HT
15	634-04405-4042	Rim Assembly
16	738-04263	Steering Shaft, .625 OD X 24.25 LG
17	738-04363	Shoulder Spacer, .385X 1.25 X .3025
18	741-04237B	Hex Flange Bearing 5/8 PM
19	783-06043-0637	Steering Support Bracket

Ref. No.	Part No.	Description
20	638-04022-0637	RH Axle Assembly
21	638-04028-0637	LH Axle Assembly
22	710-0395	Hex Head Screw, 5/16-18:2.25
23	710-0859	Hex Head Screw, 3/8-16:2.50
24	710-3180	Hex Head Screw, 5/16-18:1.75
25	912-0214	Hexlock Nut, 3/8-24
26	712-04063	Flangelock Nut, 5/16-18
27	714-0162	Cotter Pin, 5/32:1.25
28	719-04413A	Pivot Bar Axle
29	934-0255	Tubeless Air Valve
30	748-04065-0637	Steering Block
31	748-04068	Spacer, .71 ID X .125 OD X .56LG
32	750-05280	Spacer, .385 X 1.00 X 1.5075
33	731-05674	Bumper Cap
34	736-04228A	Flat Washer, .781ID x 1.590OD
35	631-04415	Steering Wheel
36	731-06825	Steering Wheel Cap
37	634-04406-0961	Wheel Assembly
38	734-1731-0901	Tire

PARTS LIST

 Hood and Dash — Model No. 247.288881

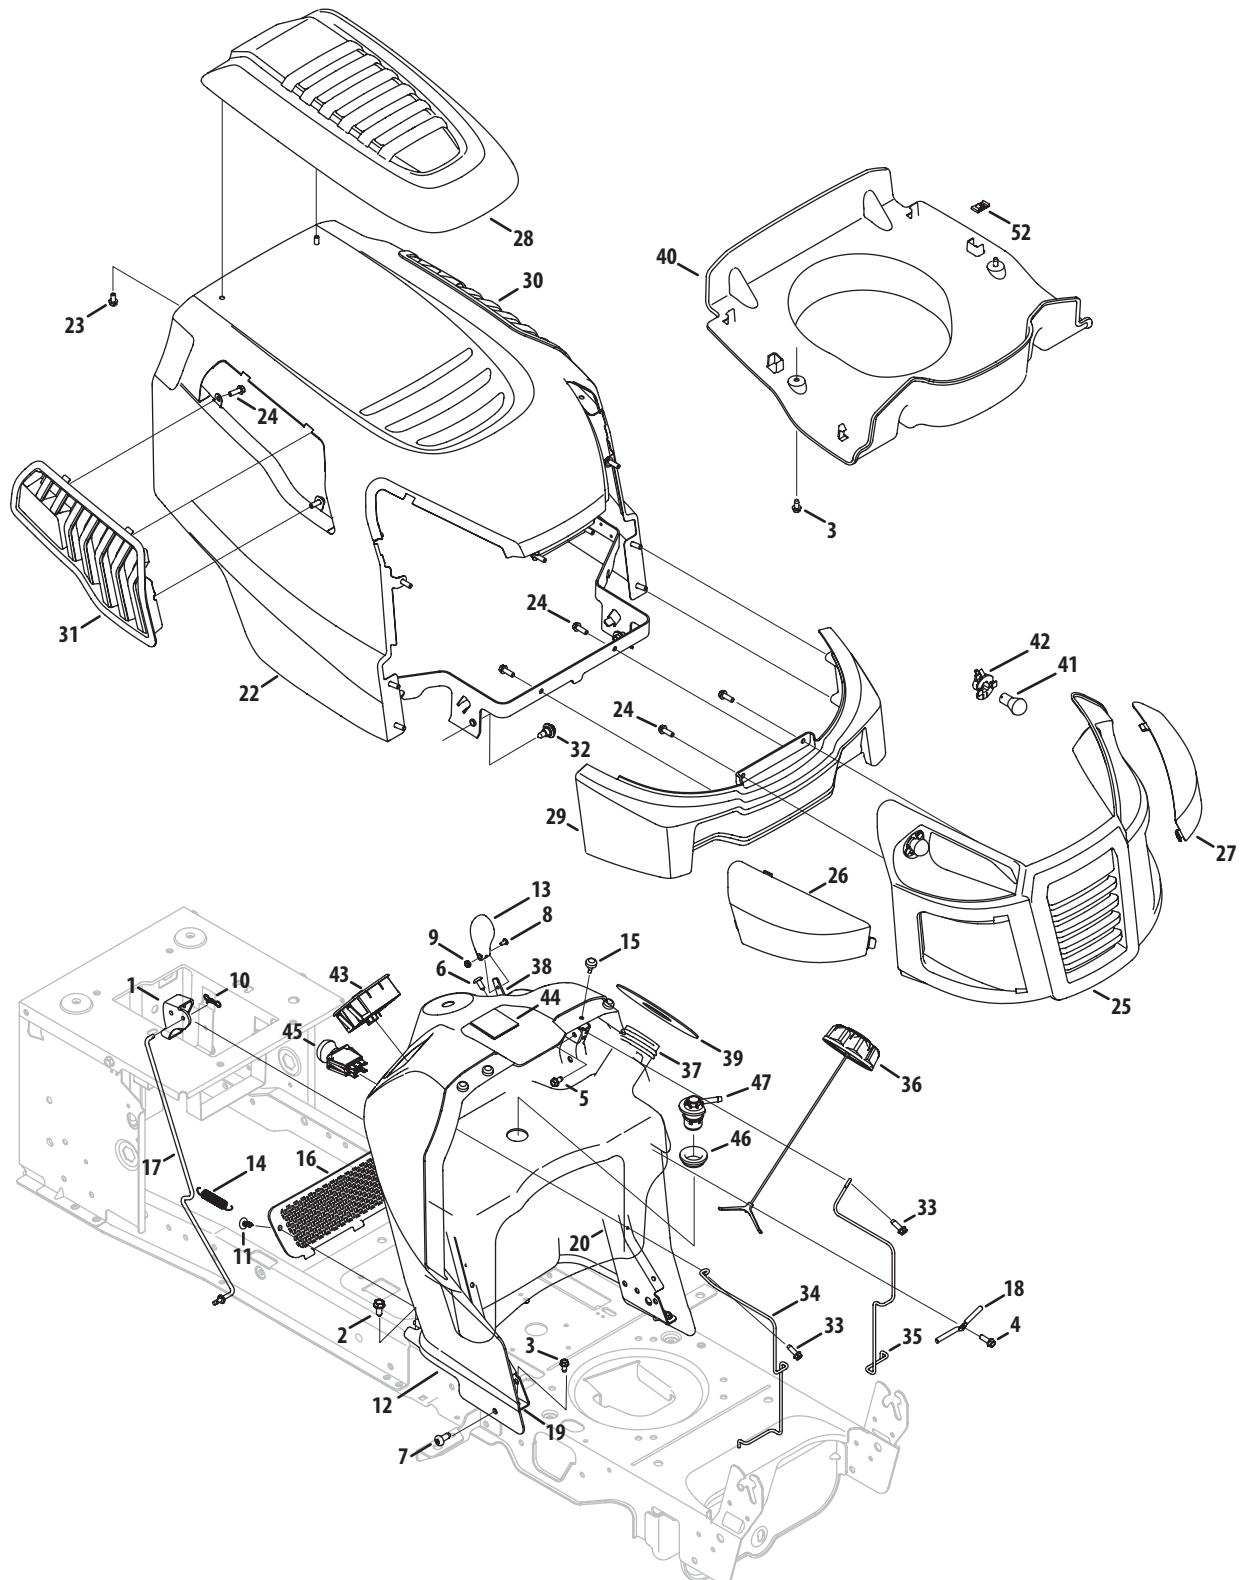

PARTS LIST


Hood and Dash — Model No. 247.288881

Ref. No.	Part No.	Description
1	631-04353A	Dash Lever
2	710-04484	Taptite Screw, Lock Washer, 5/16-18:.750
3	710-0599	Taptite Screw, Lock Washer, 1/4-20:0.500
4	710-0895	Hi-Lo Screw, Lock Washer, 1/4-15:0.750
5	710-1652	Screw, Lock Washer, 1/4-20:0.625
6	710-1017	Screw, 1/4-14:0.625
7	710-1611B	Taptite Screw, 5/16-18:0.750
8	710-3217	Machine Screw, #8-32:0.375
9	712-0142	Hex Nut, #8-32:GRA
10	714-04040	Bow-tie Cotter Pin
11	726-3046	Ratchet Clip:.250 DIA
12	731-07456	Dash
13	731-07550	Control Knob
14	732-04580	Extension Spring, .500 DIA X 2.733 LG
15	735-0271A	Bumper
16	735-04076	Accessory Net
17	747-05280	Control Rod Latch
18	747-1196	Lever Rod
19	783-04285F-0637	RH Dash Support Plate
20	783-04323F-0637	LH Dash Support Plate
21	625-04124	Keys (Set of 2) <i>not shown</i>
22	683-04618-0691	Hood Assembly
23	710-04187	Hi-lo Screw, Lock Washer, 1/4-15:0.50
24	710-05108	Screw, Lock Washer, 1/4 DIA:.750

Ref. No.	Part No.	Description
25	931-07457	Grill
26	731-07458	RH Lens
27	731-07459	LH Lens
28	931-07461	Hood Scoop
29	731-07467	Lower Grill
30	731-07469	LH Hood Scoop
31	731-07470	RH Hood Scoop
32	738-04091A	Shoulder Screw, .43X.29:TT:5/16-18
33	710-0642	Taptite Screw, 1/4-20:0.750
34	747-05049	RH Tank Support Rod
35	747-05050	LH Tank Support Rod
36	951-12179	Fuel Cap
37	951-11650	Fuel Tank, 2.06 Gallons CARB
38	946-04621	Throttle/Choke Control
39	735-04170	Fuel Tank Gasket
40	731-07495	P-Style Plen
41	925-0963	Miniature Lamp, 12V
42	925-1649	Lamp Socket
43	725-04992	Switch Key Module
44	925-04036C	Hour Meter
45	725-04258	PTO Switch
46	735-04081	Rubber Grommet
47	751-12118	Fuel Rollover Valve

PARTS LIST

 Seat and Fender — Model No. 247.288881

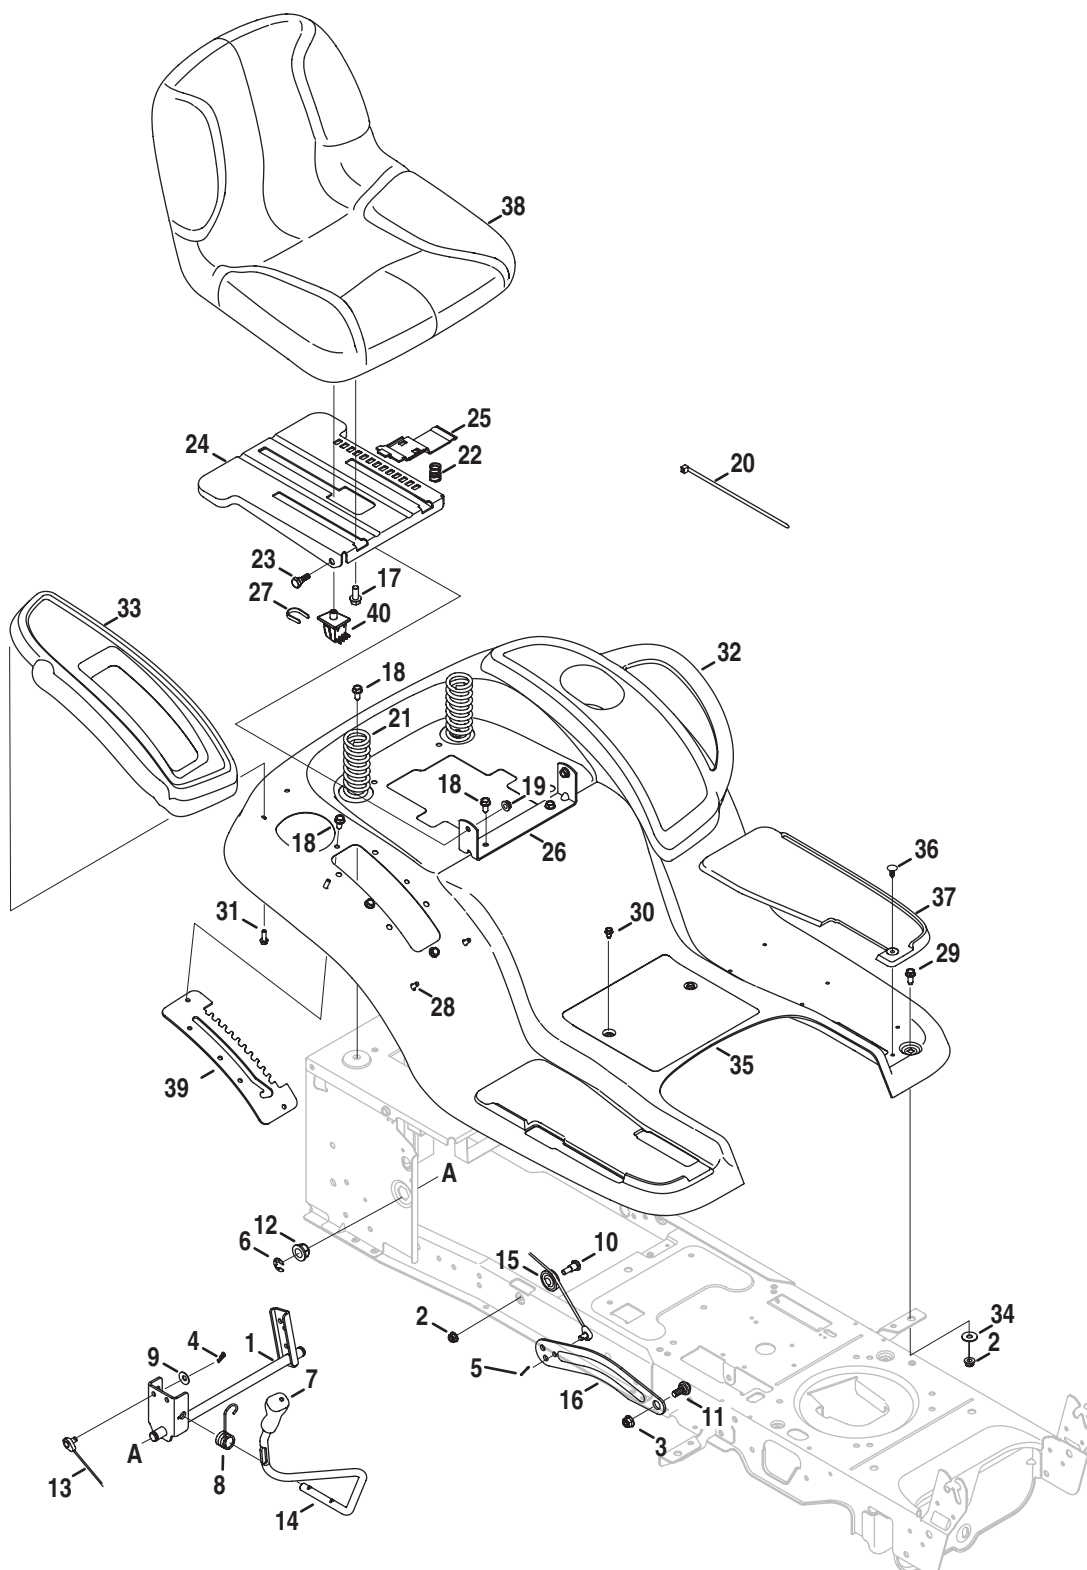

PARTS LIST


Seat and Fender — Model No. 247.288881

Ref. No.	Part No.	Description
1	683-04223-0637	Lift Shaft Assembly
2	712-04063	Flangelock Nut, 5/16-18
3	712-04065	Flangelock Nut, 3/8-16
4	914-0104	Cotter Pin, .072 DIA. X 1.13 LG
5	714-04040	Bow-Tie Cotter Pin
6	716-0106A	E-Ring, .625 DIA. SHAFT
7	720-04150	Handle Grip
8	732-0874	Torsion Spring
9	736-0105	Spring Washer, .401 X .870 X .063
10	738-0138A	Shoulder Screw, .437 X .470:5/16-18
11	938-0380	Shoulder Bolt, .500X.270:3/8-16
12	941-0225	Hex Flange Bearing
13	746-0968	Lift Cable, 16.16 LG
14	747-04962A	Lift Handle
15	756-04331	Pulley Roller Cable
16	783-05546A-0637	Lift Arm
17	710-04482	Hex Head Flange, 3/8-16:.875
18	710-04484	Taptite Screw, Lock Washer, 5/16-18:.750
19	712-3004A	Flangelock Nut, 5/16-18
20	725-0157	Cable Tie, 3/16 X .05 X 7.4
21	732-04561	Compression Spring, 1.71 X 3.735 X .238

Ref. No.	Part No.	Description
22	732-04563	Compression Spring, .68 X 1.065 X .055
23	938-0296	Shoulder Screw, .437 X .268:5/16-18
24	783-06049-0691	Seat Mounting Bracket
25	783-06050	Seat Adjustment Lever
26	783-06088-0691	Seat Pivot Bracket
27	783-06448	Switch Retainer Clip
28	710-04187	Hi-Lo Screw, Lock Washer, 1/4-15:0.50
29	710-0451	Carriage Bolt, 5/16-18:.750
30	710-0599	Taptite Screw, Lock Washer, 1/4-20:0.500
31	710-0895	Hi-Lo Screw, Lock Washer, 1/4-15:0.750
32	731-05837	LH Fender Cover
33	731-06754	RH Fender Cover
34	736-3078	Flat Washer, .344 X 1.00 X .063 HDN
35	783-06118-0691	Fender
36	726-3046	Ratchet Clip
37	735-04137	LH Foot Pad
—	735-04139	RH Foot Pad
38	757-04127	Seat
39	783-06181-0637	Lift Bracket
40	925-05013	Seat Switch

PARTS LIST

 Drive and Rear Wheels — Model No. 247.288881

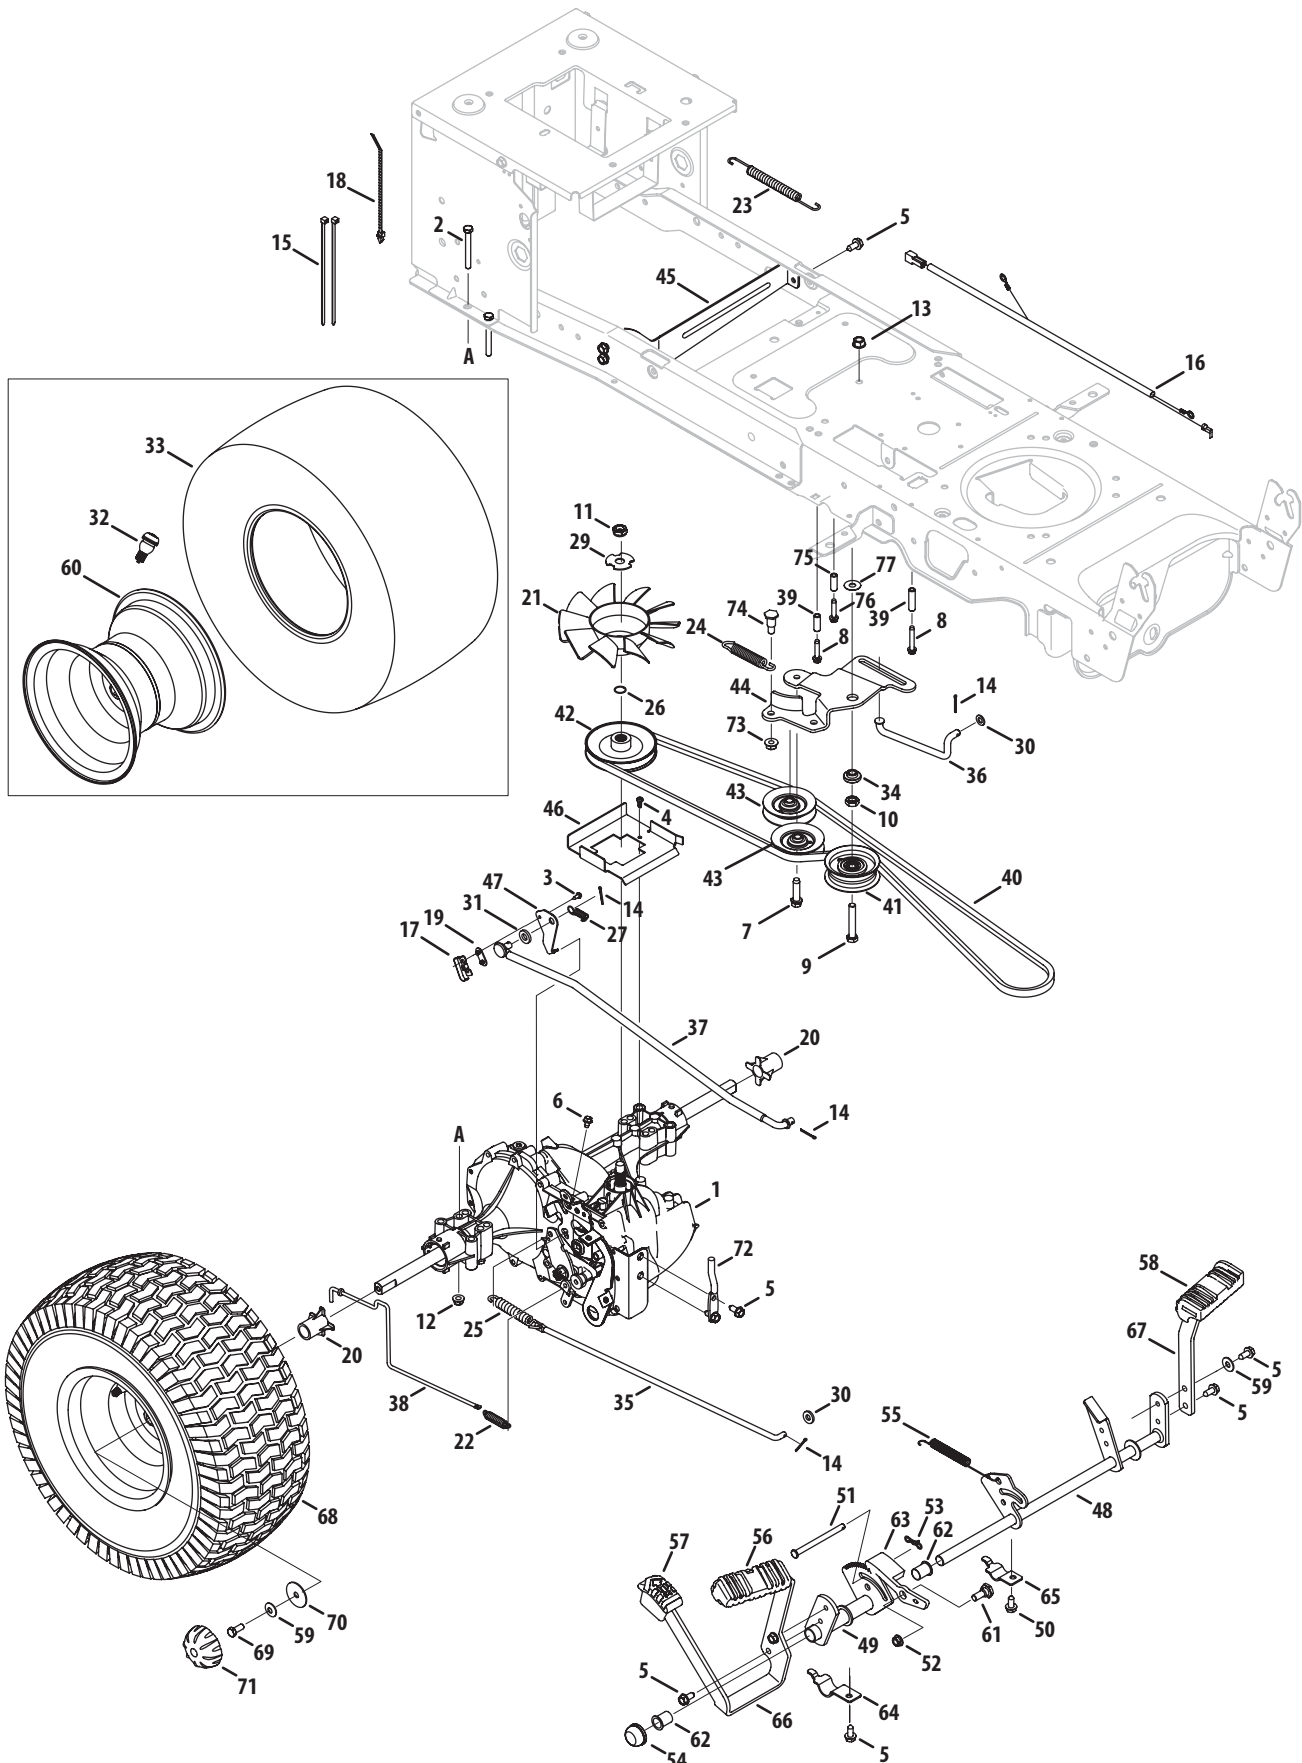

PARTS LIST


Drive and Rear Wheels — Model No. 247.288881

Ref. No.	Part No.	Description
1	918-0319	Hydro Transmission
2	710-0176	Hex Head Screw, 5/16-18:2.75
3	710-0227	Screw, Indented Washer, #8-18:0.500
4	710-0351	Screw, #10-16:0.500
5	710-04484	Taptite Screw, Indented Washer, 5/16-18:.750
6	710-0653	Taptite Screw, Indented Washer, 1/4-20:0.375
7	710-1007	Taptite Sems Screw, :3/8-16:1.500
8	710-1325	Taptite Screw, Indented Washer, 1/4-20:1.625
9	710-3011	Hex Head Screw, 3/8-16:2.25
10	912-0240	Jam Nut, 7/16-20
11	912-0346	Jamlock Nut, 1/2-20
12	712-04063	Flangelock Nut, 5/16-18
13	912-0431	Flangelock Nut, 3/8-16
14	914-0111	Cotter Pin, 3/32:1.0
15	725-0157	Cable Tie. 3/16 X .05 X 7.4
16	725-04791A	Jumper Harness
17	725-1644	Short Spring Switch
18	926-0154	Push Mount Cable Tie 7.5 LG
19	926-0320	Insulator Nut Plate
20	731-05299A	Sleeve, .765 ID X 1.500 LG
21	731-06098	Hydro Fan
22	932-0209	Extension Spring, .48 OD X 2.03
23	732-04606	Extension Spring, .500 DIA X 12.6 LG
24	732-04792	Extension Spring, 1.00 DIA X 4.75
25	732-0716D	Extension Spring, .59 OD X 4.00 LG
26	732-0729	Wire Ring
27	732-3118	Extension Spring, .375 OD X 1.44 LG
28	936-0264	Flat Washer, .330 X .630 X .0635
29	736-04263	Lock Washer
30	936-3008	Flat Washer, .344 X .750 X .120
31	736-3010	Flat Washer, .407 X .812 X .135
32	934-0255	Tubeless Air Valve
33	734-1730-0901	Tire
34	738-04420	Shoulder Spacer, 1.375 X .380 X .183
35	747-04139	Brake Rod
36	747-04957A	Footpedal Bypass Transmission Rod
37	747-04979	Hydro Control Rod
38	747-04991	Hydro Bypass Rod
39	750-04456	Spacer, 260 X .372 X 1.420 LG

Ref. No.	Part No.	Description
40	954-04207	V-Belt, 4L X 78.9 POLY
41	756-04224	Flat Idler Pulley, 2.75 OD
42	756-04308	Input Pulley, 4.13 DIA
43	756-04325	V Idler Pulley, X 3.06
44	783-06027A	Center Idler Bracket
45	783-06133-0637	Hydro Mounting Bracket
46	783-06260-0637	Belt Disengage Support Bracket
47	783-1019B	Switch Actuator Bracket
48	647-04152B	Brake Control Assembly
49	683-04488	Hydro Pedal Bracket Assembly
50	710-0604A	Taptite Screw, Indented Washer, 5/16-18:0.625
51	711-05068	Clevis Pin, 5/16 X 3.985
52	712-04065	Flangelock Nut, 3/8-16
53	714-04040	Bow-Tie Cotter Pin
54	726-0214	Push Cap
55	732-04587	Extension Spring, .63 DIA X 4.95 LG
56	735-04118A	Forward Pedal Pad
57	735-04135	Reverse Pedal Pad
58	735-04136	Brake Pedal Pad
59	736-0242	Bell Washer, .340 X .872 X .060
60	634-04369-4042	Rim Assembly
61	938-0380	Shoulder Bolt, .500 X .270:3/8-16
62	741-0495	Flange Bearing, .630 ID X .695 OD X .60
63	748-04203	Cruise Latch
64	783-05914	Pedal Support Bracket
65	783-05940	Pedal Support Bracket, 5/8
66	783-06059-0637	Drive Pedal Bracket
67	783-06103A-0637	Brake Pedal Bracket
68	634-0104-0961	Wheel Assembly
69	710-0627	Hex Head Screw, 5/16-24:.750
70	736-0430	Flat Washer, .350 x 1.59 x .062
71	731-2290A	Hub Cap
72	747-05444	Belt Keeper Rod
73	712-04065	Flangelock Nut, 3/8-16
74	738-0430	Shoulder Screw, .50 x .685:3/8-16
75	750-0566A	Spacer, 260 X .375 X 1.030 LG
76	710-0809	Taptite Screw, Indented Washer, 1/4-20:0.375
77	936-0344	Flat Washer, .385 X 1.00 X .030

PARTS LIST

 Engine Accessories — Model No. 247.288881

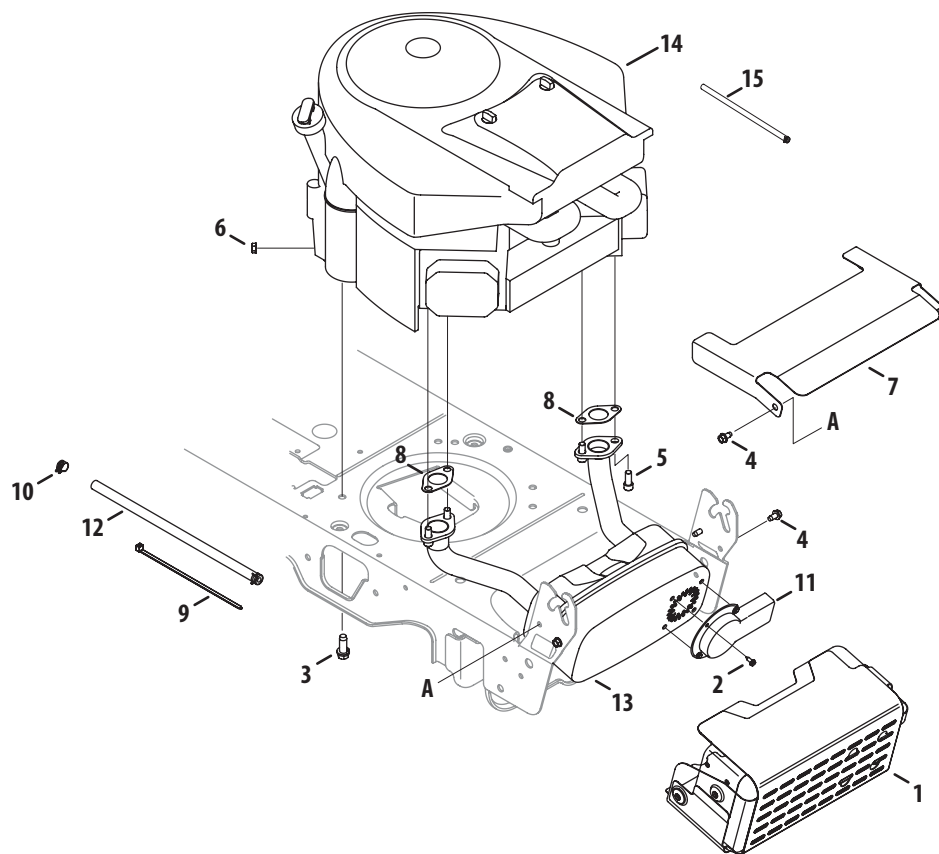


PARTS LIST

Engine Accessories — Model No. 247.288881

Ref. No.	Part No.	Description
1	683-04549-0637	Mulffler Shield Assembly
2	710-0227	Screw, Indented Washer, #8-18:0.500
3	710-04683	Taptite Screw, Indented Washer, 3/8-16:1.000
4	710-0599	Taptite Screw, Indented Washer, 1/4-20:0.500
5	710-1314A	Socket Head Screw, 5/16-18:0.750
6	712-0271	Sems Nut, 1/4-20
7	783-06378A	Heat Shield
8	721-0460	Exhaust Gasket
9	725-0157	Cable Tie, 3/16 X .05 X 7.4
10	726-0205	Hose Clamp, .490 DIA.
11	751-11053	Long Muffler Deflector
12	751-10349	Fuel Hose
13	751-10542A	Muffler
14	44P777-2799-G1/G5	Replacement Engine
15	751-12089-28	Vent Hose, 3/16 Red

PARTS LIST

 PTO and Battery — Model No. 247.288881

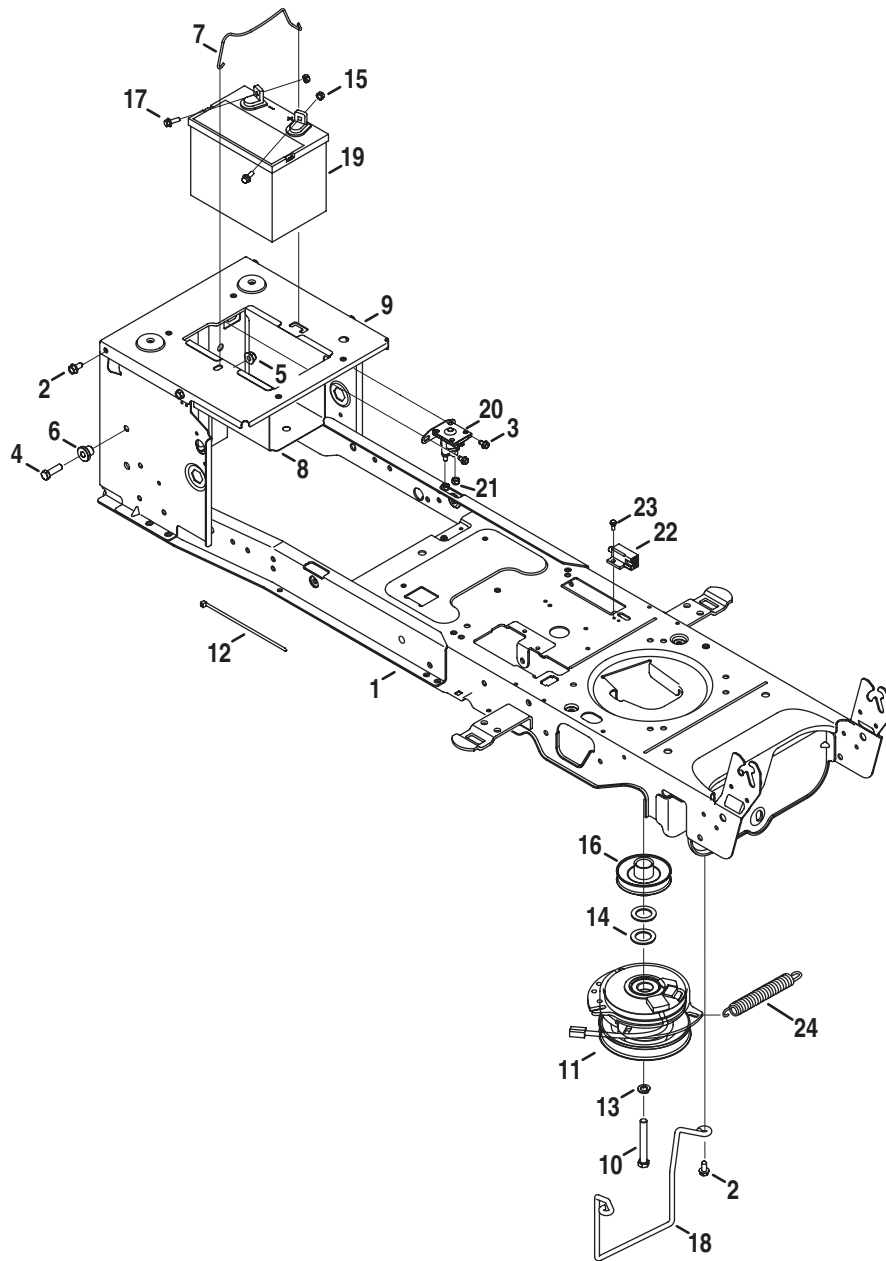


PARTS LIST

PTO and Battery — Model No. 247.288881

Ref. No.	Part No.	Description
1	683-04469B-0691	Frame
2	710-04484	Taptite Screw, Indented Washer, 5/16-18:.750
3	710-0653	Taptite Screw, Indented Washer, 1/4-20:0.375
4	710-3005	Hex Head Screw, 3/8-16:1.25
5	712-04065	Flangelock Nut, 3/8-16
6	738-04058	Shoulder Spacer, .38 X 1.0 X .70
7	747-04121A	Battery Holder Rod
8	783-0349-0637	Battery Tray
9	783-06089-0637	Seat Frame Bracket
10	710-04379A	Hex Head Screw, 7/16-20:3.50
11	917-04552	Electric PTO Clutch
12	725-0157	Cable Tie, 3/16 x .05 x 7.4
13	936-0171	Lock Washer, 7/16
14	736-0277	Flat Washer, 1.031 x 1.620 x .095
15	712-0271	Sems Nut, 1/4-20
16	756-0978B	Electric PTO Engine Pulley
17	710-04666	Hex Head Flange, 1/4-20:.75
18	747-05171	Belt Guard
19	725-05088	Battery
20	725-04439	Solenoid, 12 V
21	712-04064	Flangelock Nut, 1/4-20
22	725-04363	Interlock Switch
23	738-04237A	Shoulder Screw, #10-32:.500
24	732-0814	Extension Spring, .56 Od. x 5.52 Lg.
NS	925-04093	Wire Harness Assembly

PARTS LIST

 Deck — Model No. 247.288881

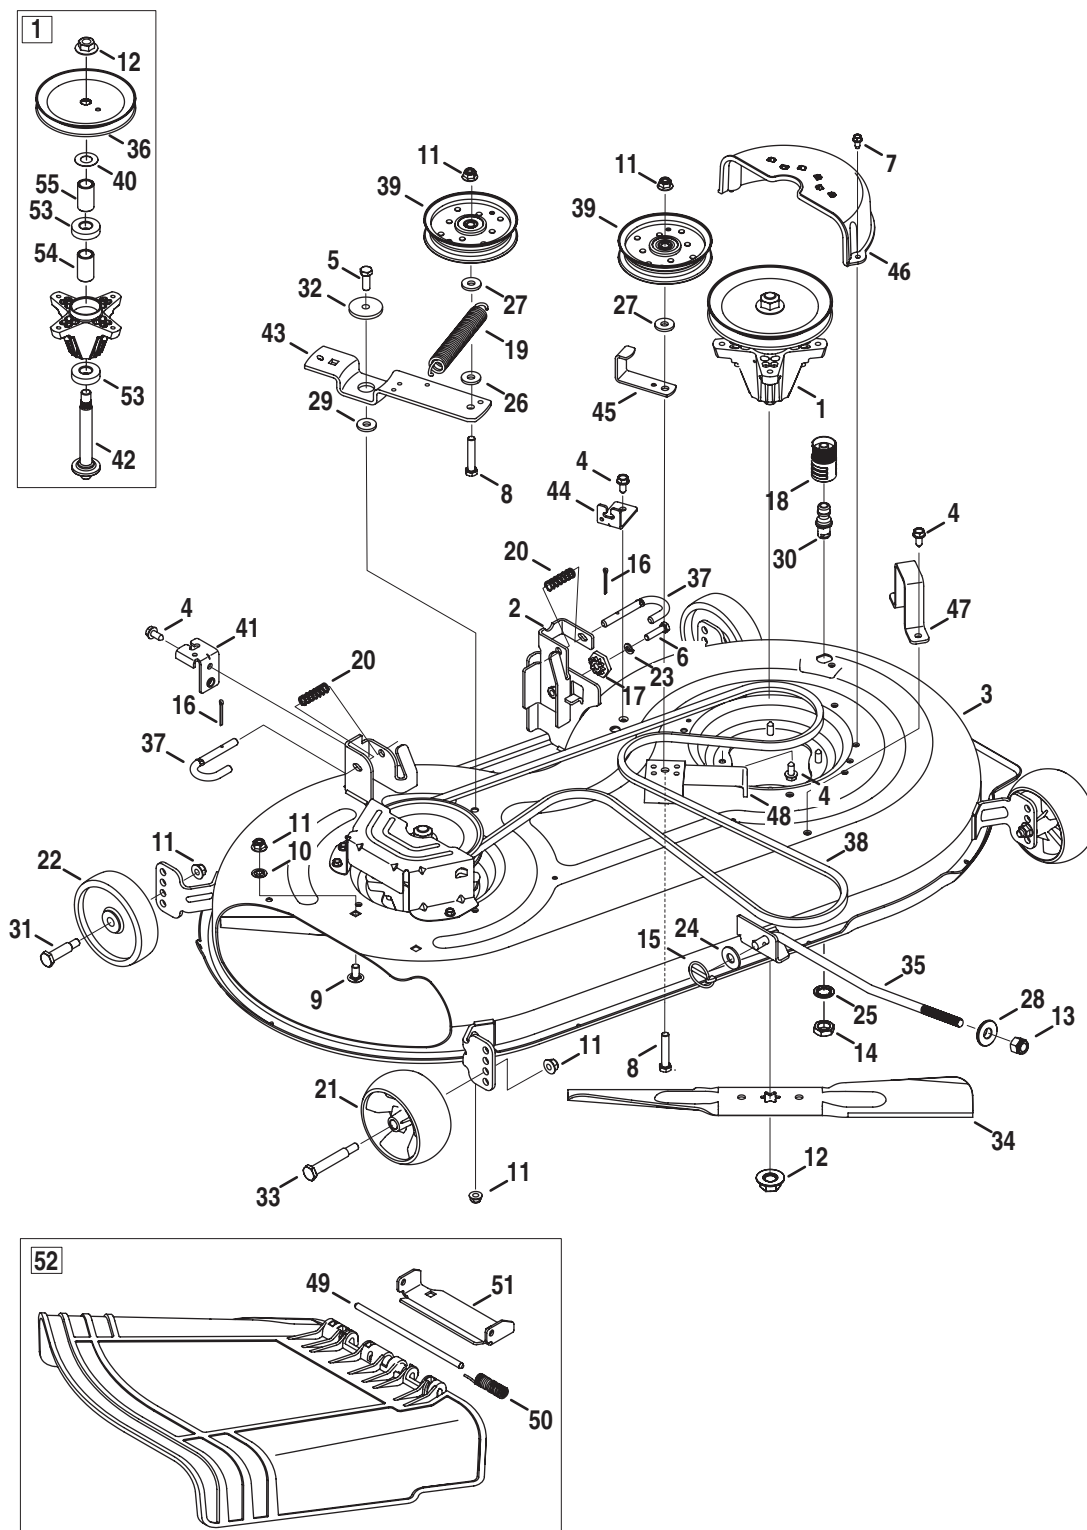

PARTS LIST

Deck — Model No. 247.288881

Ref. No.	Part No.	Description
1	918-04636A	Spindle Assembly
2	683-0254B-4028	Deck Hanger Bracket Assembly
3	983-04468A-4028	Deck Assembly
4	710-04484	Taptite Screw, Indented Washer, 5/16-18:.750
5	710-0514	Hex Head Screw, 3/8-16:1.00
6	710-0528	Hex Head Screw, 5/16-18:1.25
7	710-0599	Taptite Screw, Indented Washer, 1/4-20:0.500
8	710-3144	Hex Head Screw, 3/8-16:2.00
9	710-3178	Carriage Bolt, 3/8-16:0.75
10	712-0229	Push Nut, 3/8
11	712-04065	Flangelock Nut, 3/8-16
12	712-0417A	Flange Nut, 5/8-18
13	712-04243	Lock Nut, 1/2-13
14	912-0641	Hex Nut, M16-1.5 DIN 936
15	753-04070	Lynch Pin, .1875
16	914-0470	Cotter Pin, 1/8 X 1.25
17	917-04074	Deck Gear
18	921-04041	Water Nozzle Adaptor
19	732-0459C	Extension Spring, .94 DIA. X 6.74 LG
20	732-04652	Compression Spring, .535 OD X 1.751 LG
21	734-04155	Front Deck Wheel
22	734-0973	Rear Deck Wheel
23	936-0119	Lock Washer, 5/16
24	936-0179	Flat Washer, .531 X 1.25 X .100
25	736-0225	Lock Washer, 5/8
26	736-0258	Flat Washer, .385 X 1.0 X .135
27	736-0262	Flat Washer, .385 X .870 X .092
28	736-0317	Bell Washer, .63 X 1.25 X .18

Ref. No.	Part No.	Description
29	936-0344	Flat Washer, .385 X 1.0 X .030
30	737-04003D	Water Nozzle
31	938-0373	Shoulder Bolt, .496 X 1.525:3/8-16
32	738-04162A	Shoulder Spacer, .8840 X .190
33	938-3056	Shoulder Bolt, .496 X 2.50:3/8-16
34	942-04290	2-in-1 Cutting Blade
35	747-04944B	Deck Lift Rod
36	756-04356	Deck Pulley, 6.93 DIA
37	747-1116	Deck Release Handle Rod
38	954-04219	V-Belt
39	756-04129B	Idler Pulley, 4.25"DIA
40	936-0351	Flat Washer, .760 IDX1.50 OD
41	783-04740-0637	Deck Engage Cable Bracket
42	738-1186A	Spindle Shaft, 6.05 LG.
43	783-05946	Idler Bracket
44	783-06243-0637	Deck Engage Cable Bracket
45	783-06368A-0637	4.25 Pulley Belt Guard Bracket
46	731-06496	Belt Cover
47	783-06632-4028	Deck Stop
48	783-06643-4028	Deck Idler Support Bracket
49	711-04847B	Hinge Pin
50	732-04372	Torsion Spring
51	783-06074A	Chute Bracket
52	631-04460	Chute Deflector
53	941-0919	Ball Bearing, .787ID X 1.85 ODX.551
54	750-04936	Spacer, .792 X 1.060 X 1.860 LG
55	750-0952	Spacer, .792 X 1.060 X 1.800 LG

PARTS LIST

 
Craftsman Engine Model 44P777-2799-G1/G5 For Model 247.288881

48 SHORT BLOCK

1058 OPERATOR'S MANUAL




1329 REPLACEMENT ENGINE

1330 REPAIR MANUAL

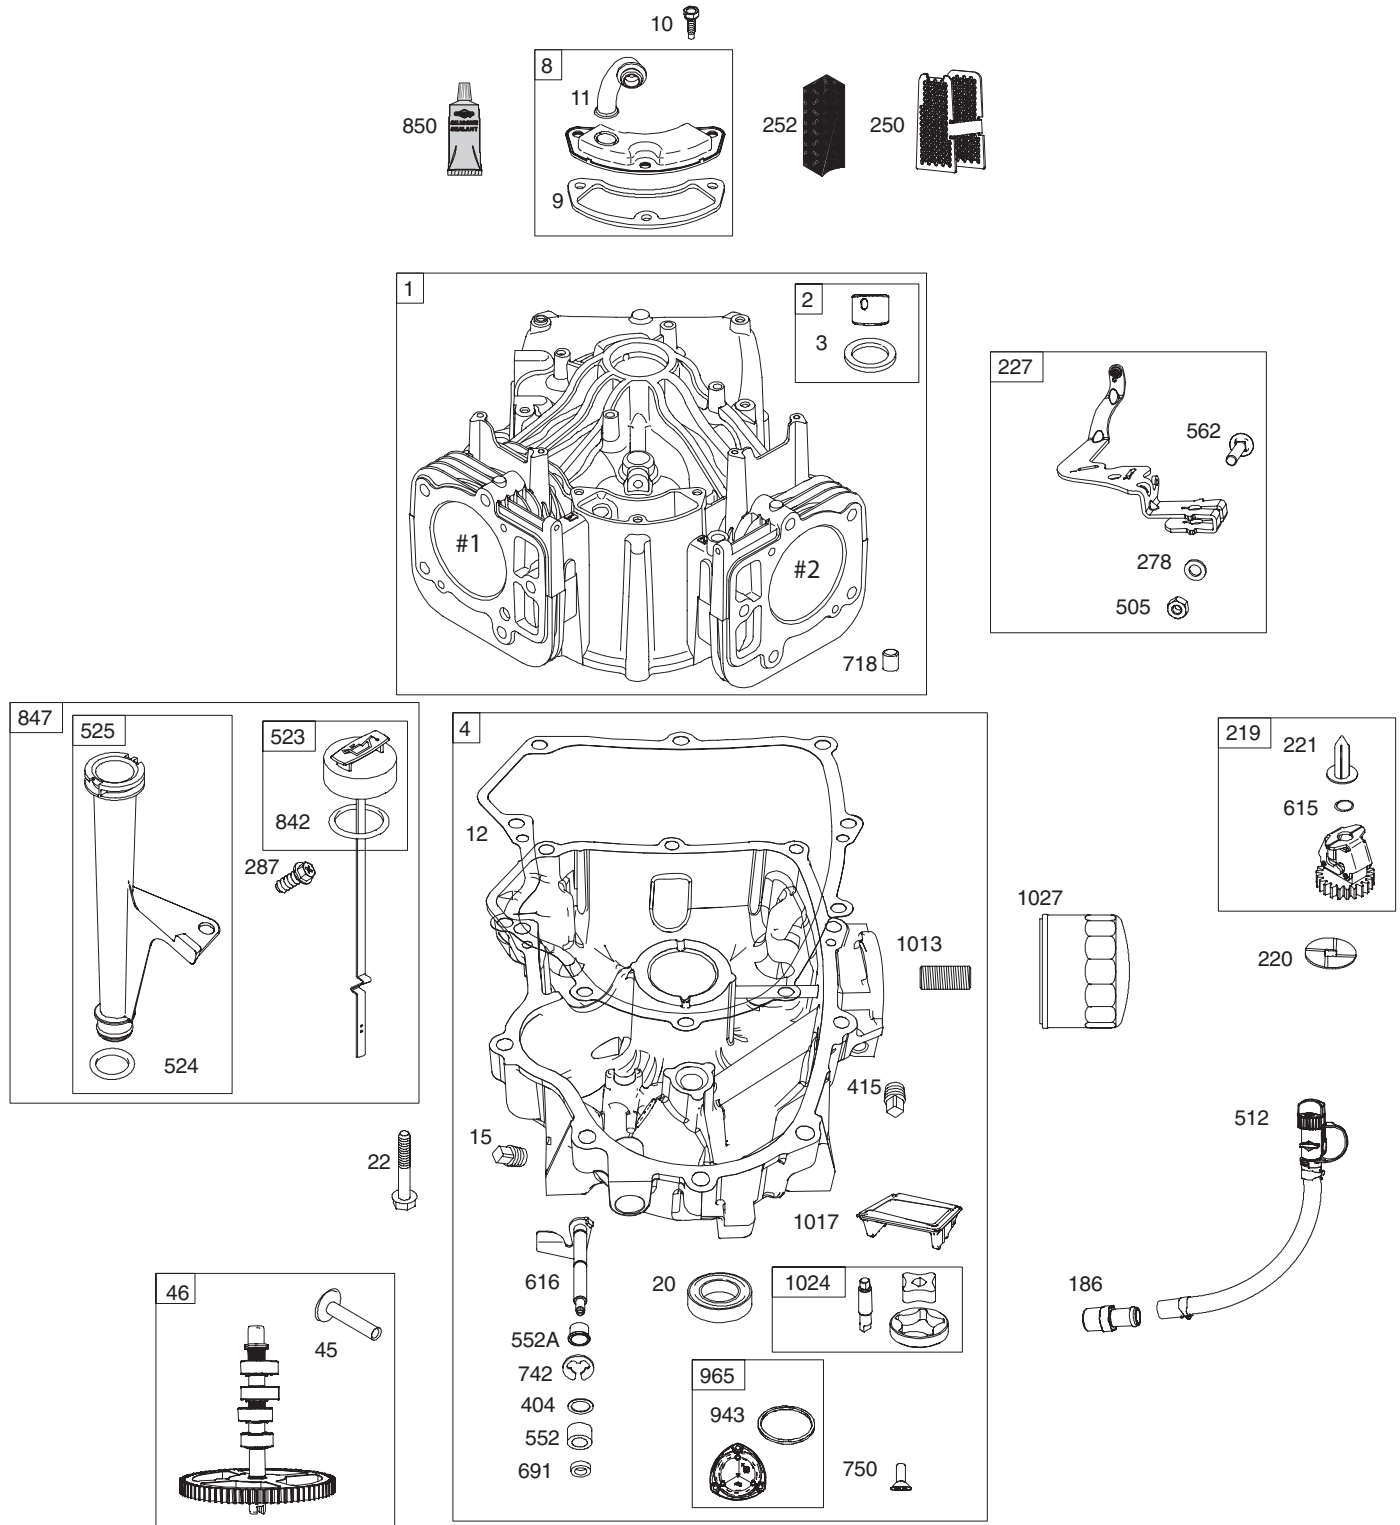


PARTS LIST

   Craftsman Engine Model 44P777-2799-G1/G5 For Model 247.288881

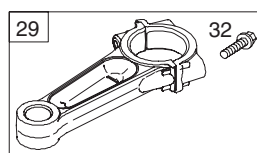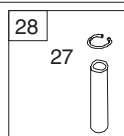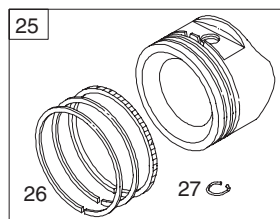


24 

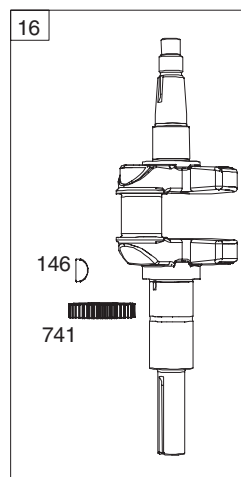 






PARTS LIST

 Craftsman Engine Model 44P777-2799-G1/G5 For Model 247.288881

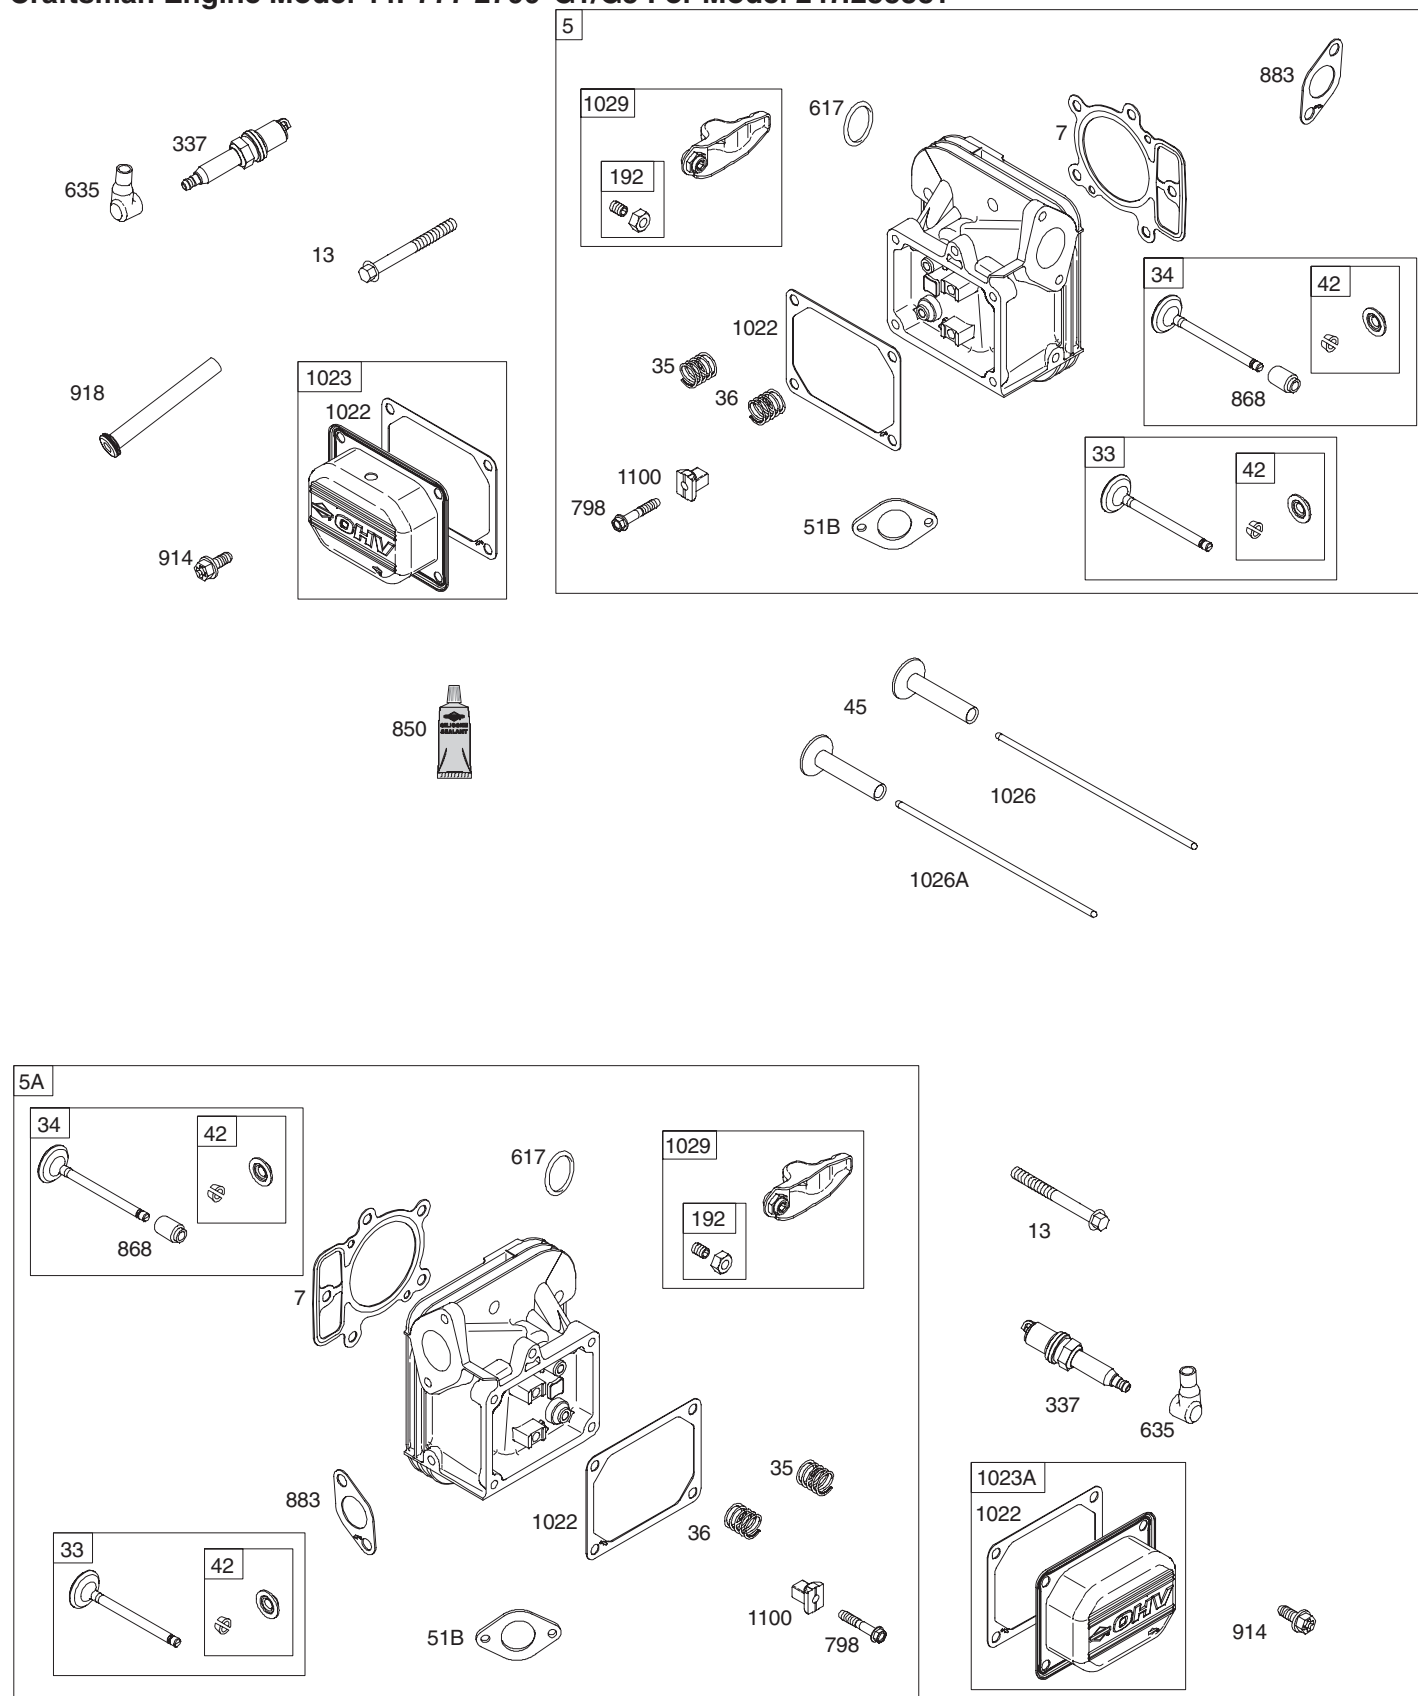


PARTS LIST

     Craftsman Engine Model 44P777-2799-G1/G5 For Model 247.288881





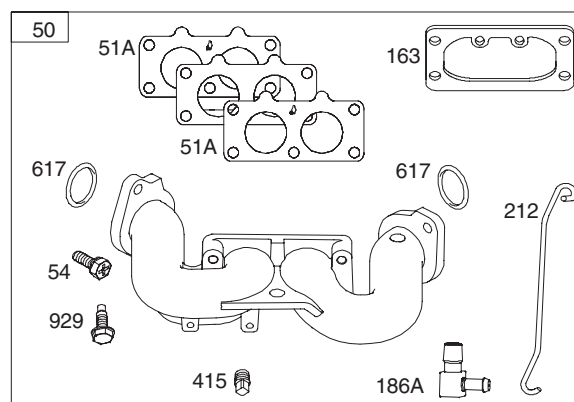
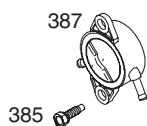
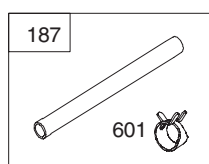
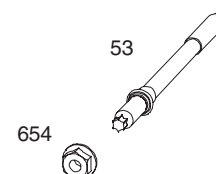
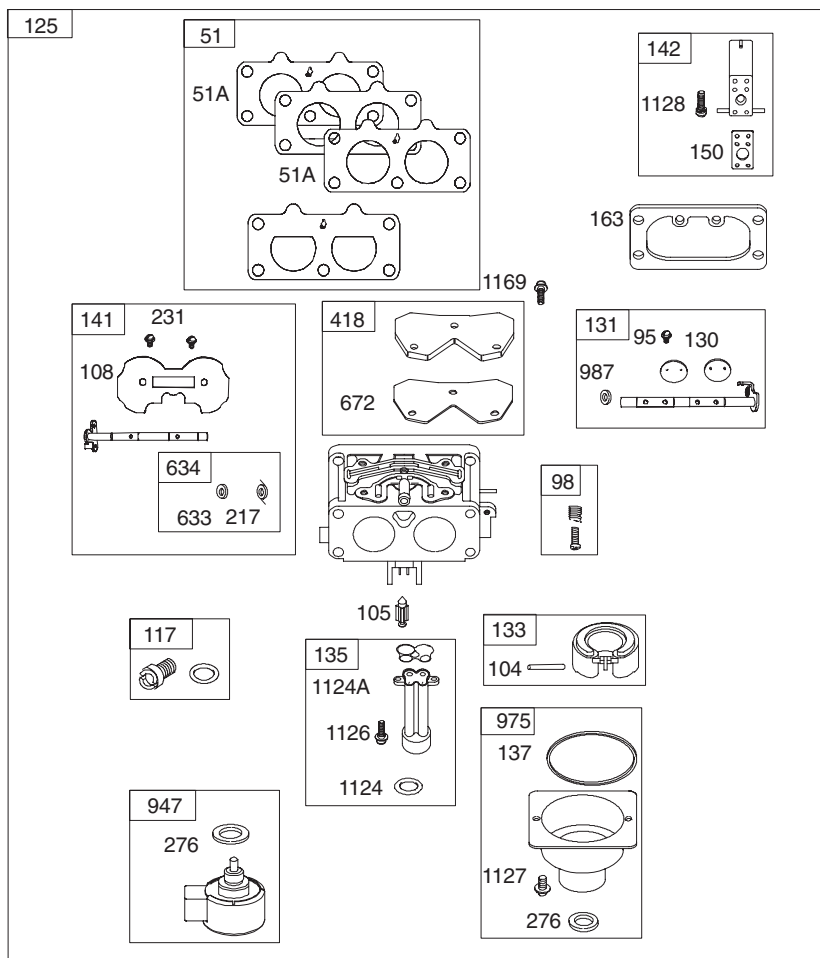


PARTS LIST

 Craftsman Engine Model 44P777-2799-G1/G5 For Model 247.288881

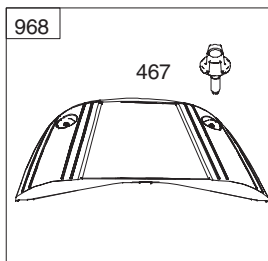


1036 EMISSIONS LABEL

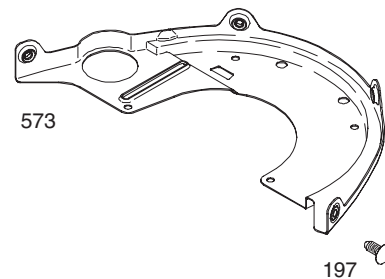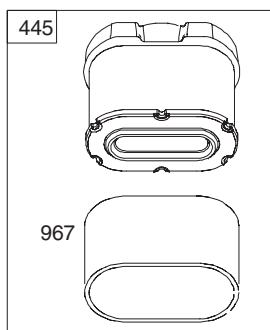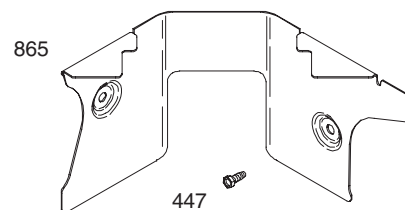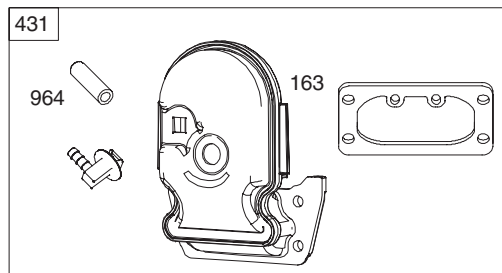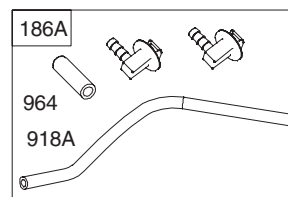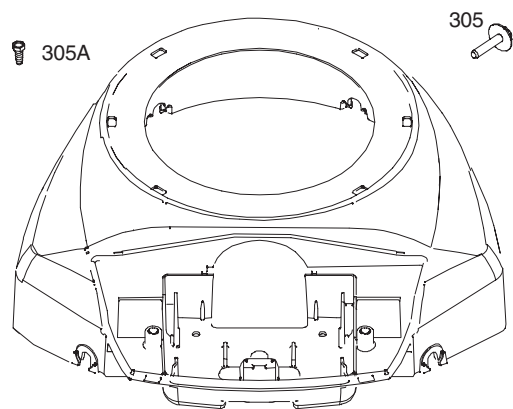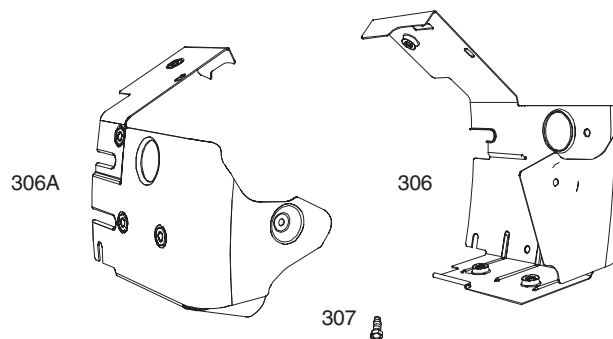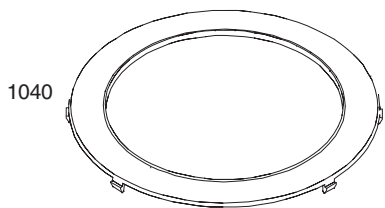         




PARTS LIST

 Craftsman Engine Model 44P777-2799-G1/G5 For Model 247.288881

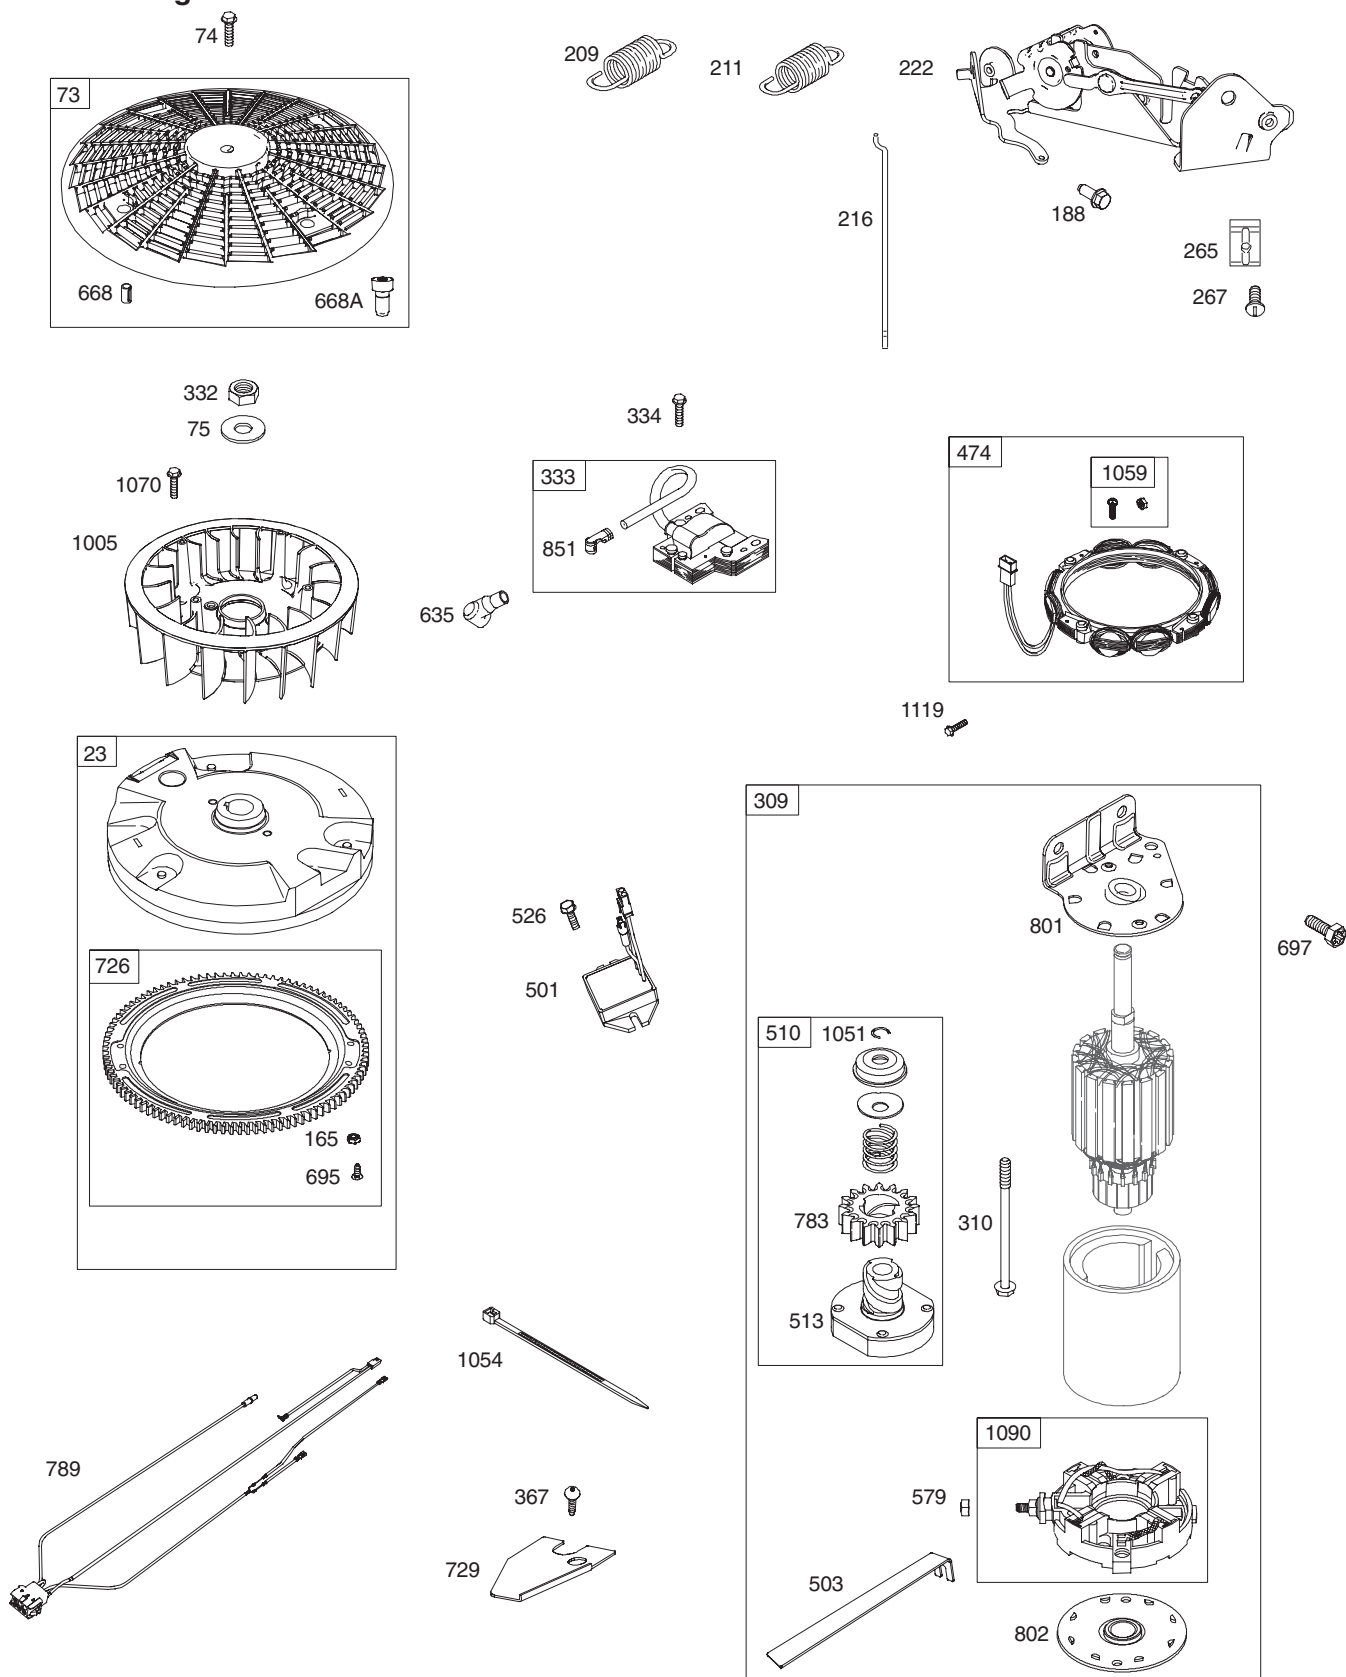

PARTS LIST

   Craftsman Engine Model 44P777-2799-G1/G5 For Model 247.288881

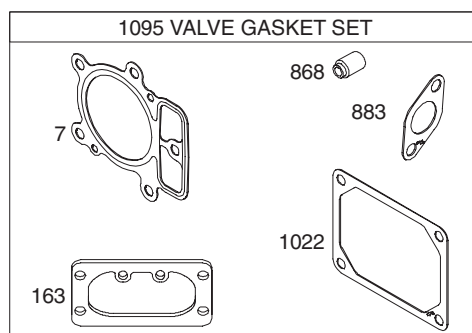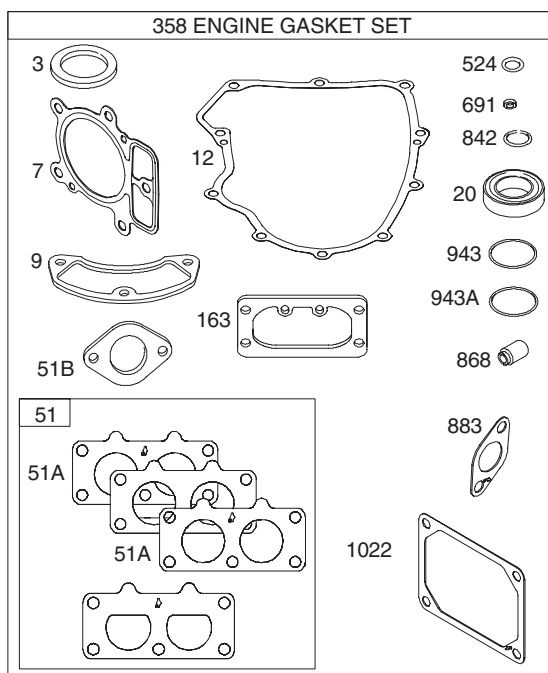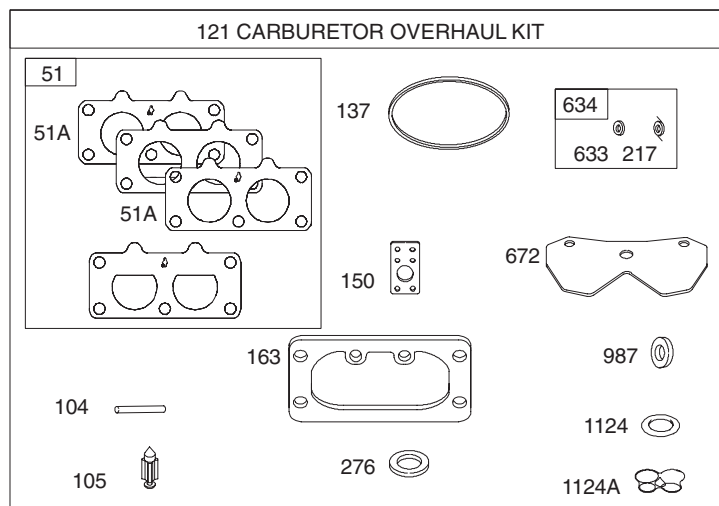

PARTS LIST

Craftsman Engine Model 44P777-2799-G1/G5 For Model 247.288881

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	793564	Cylinder Assembly	54	699816	Screw (Intake Manifold)
2	499585	Kit-Bushing/Seal (Magneto Side)	73	494439	Screen-Rotating
3	391086s	Seal-Oil (Magneto Side)	74	698425	Screw (Rotating Screen)
4	796307	Sump-Engine	75	691056	Washer (Flywheel)
5	799088	Head-Cylinder (Cylinder #1)	95	690718	Screw (Throttle Valve)
5A	799089	Head-Cylinder (Cylinder #2)	98	699721	Kit-Idle Speed
7	693997	Gasket-Cylinder Head	104	694918	Pin-Float Hinge
8	792185	Breather Assembly	105	797410	Valve-Float Needle
9	690937	Gasket-Breather	108	699723	Valve-Choke
10	697551	Screw (Breather Assembly)	117	842585	Jet-Main (Standard) (Left and Right Jet)
11	792184	Tube-Breather	118	791502	Jet-Main (High Altitude) (Left and Right Jet)
12	697227	Gasket-Crankcase	121	792455	Kit-Carburetor Overhaul
13	793988	Screw (Cylinder Head)	125	796997	Carburetor
15	690946	Plug-Oil Drain	130	690993	Valve-Throttle
16	796540	Crankshaft	131	499805	Kit-Throttle Shaft
20	795387	Seal-Oil (PTO Side)	133	699724	Float-Carburetor
22	694966	Screw (Crankcase Cover/Sump)	135	699729	Tube-Fuel Transfer
23	691053	Flywheel	137	690994	Gasket-Float Bowl
24	222698s	Key-Flywheel	141	796228	Kit-Choke Shaft
25	793560	Piston Assembly (Standard)	142	699726	Nozzle-Carburetor
	793563	Piston Assembly (.020" Oversize)	146	690979	Key-Timing
26	793561	Ring Set (Standard)	150	690995	Gasket-Nozzle
	792073	Ring Set (.020" Oversize)	163	691001	Gasket-Air Cleaner
27	690975	Lock-Piston Pin	165	693148	Nut (Ring Gear)
28	696581	Pin-Piston	186	796532	Connector-Hose (Oil Drain Hose)
29	796209	Rod-Connecting	186A	799158	Connector-Hose (EVAP System)
32	690976	Screw (Connecting Rod)	186B	795985	Connector-Hose (Intake Manifold)
33	793357	Valve-Exhaust	187	791766	Line-Fuel (Cut to Required Length)
34	793556	Valve-Intake	188	697551	Screw (Control Bracket)
35	690963	Spring-Valve (Intake)	192	690083	Adjuster-Rocker Arm
36	690963	Spring-Valve (Exhaust)	197	697820	Screw (Back Plate)
42	499586	Keeper-Valve	209	798921	Spring-Governor (Orange)
45	690977	Tappet-Valve	211	691019	Spring-Governed Idle (No Color)
46	796853	Gear-Cam	212	695238	Link-Throttle
48	797093	Short Block	216	796229	Link-Choke
50	695241	Manifold-Intake	217	695409	Spring-Choke Return
51	795123	Gasket-Intake	219	793338	Gear-Governor
51A	690950	Gasket-Intake	220	690412	Washer (Governor Gear)
51B	690949	Gasket-Intake	221	841026	Cup-Governor
53	690951	Stud (Carburetor)	222	798915	Bracket-Control

PARTS LIST

Craftsman Engine Model 44P777-2799-G1/G5 For Model 247.288881

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
227	798856	Lever-Governor Control	523	691036	Dipstick
231	690718	Screw (Choke Valve)	524	691032	Seal-Dipstick Tube
240	695666	Filter-Fuel	525	691037	Tube-Dipstick
250	690957	Retainer-Breather	526	697551	Screw (Regulator)
252	794389	Collector-Oil	552	796638	Bushing-Governor Crank
265	691024	Clamp-Casing	552A	690553	Bushing-Governor Crank
267	695134	Screw (Casing Clamp)	562	690311	Screw (Governor Control Lever)
276	695410	Washer-Sealing	573	790444	Plate-Back
278	792651	Washer (Governor Control Lever)	579	691029	Nut (Starter Cable)
287	697551	Screw (Dipstick Tube)	601	691038	Clamp-Hose (Black)
304	797407	Housing-Blower	615	698290	Retainer-Governor Shaft
305	691005	Screw (Blower Housing)	616	691045	Crank-Governor
305A	790690	Screw (Blower Housing to Intake Elbow)	617	697891	Seal-O Ring (Intake Manifold) (Red)
306	798855	Shield-Cylinder (Cylinder #2)	633	699813	Seal-Choke/Throttle Shaft (Choke Shaft)
306A	796852	Shield-Cylinder (Cylinder #1)	634	698779	Spring/Seal Assembly
307	697551	Screw (Cylinder Shield)	635	66538s	Boot-Spark Plug
309	795121	Motor-Starter	654	690958	Nut (Carburetor)
310	691263	Screw (Starter Motor)	668	691215	Spacer (Rotating Screen)
332	691059	Nut (Flywheel)	668A	691500	Spacer (Rotating Screen)
333	691060	Armature-Magneto	672	690234	Gasket-Carburetor Plate
334	691061	Screw (Magneto Armature)	691	790574	Seal-Governor Shaft
337	491055s	Plug-Spark	695	693149	Screw (Ring Gear)
358	694012	Gasket Set-Engine	697	690372	Screw (Drive Cap)
367	697820	Screw (Wire Clip)	703	691010	Clip
385	797409	Screw (Fuel Pump)	718	690959	Pin-Locating
387	808656	Pump-Fuel	726	499612	Gear-Ring
404	690442	Washer (Governor Crank)	729	797454	Clip-Wire
415	794903	Plug (Oil Pressure Switch Hole)	741	690980	Gear-Timing
418	795912	Plate-Carburetor	742	690328	Retainer-E Ring (Governor Crank)
431	798860	Elbow-Intake	750	796208	Screw (Oil Pump Cover)
445	792105	Filter-Air Cleaner Cartridge	783	695708	Gear-Pinion
447	691003	Screw (Air Guide Cover)	789	797424	Harness-Wiring
467	790697	Knob-Air Cleaner	798	697890	Screw (Rocker Arm)
474	696458	Alternator	801	691283	Cap-Drive
501	797375	Regulator	802	691286	Cap-End
503	691532	Strap-Starter	842	691031	Seal-O Ring (Dipstick Tube)
505	691029	Nut (Governor Control Lever)	847	499602	Dipstick/Tube Assembly
510	794360	Drive-Starter	850	100106	Sealant-Liquid
512	796530	Hose-Oil Drain	851	493880s	Terminal-Spark Plug
513	692024	Clutch-Drive	865	792286	Cover-Air Guide (Valley)

PARTS LIST

Craftsman Engine Model 44P777-2799-G1/G5 For Model 247.288881

Ref. No.	Part No.	Description
868	690968	Seal-Valve
883	690970	Gasket-Exhaust
914	691127	Screw (Rocker Cover)
918	797408	Hose-Vacuum (Rocker Cover)
918A	799160	Hose-Vacuum (EVAP System)
929	695239	Screw (Choke Control Bracket)
943	796222	Seal-O Ring (Oil Pump Cover)
947	798779	Solenoid-Fuel
964	799159	Cap-Connector
965	796221	Cover-Oil Pump
967	792303	Filter-Pre Cleaner
968	795120	Cover-Air Cleaner
975	798778	Bowl-Float
987	691000	Seal-Throttle Shaft
1005	791236	Fan-Flywheel
1013	690954	Nipple-Oil Filter
1017	796214	Screen-Oil Pump
1022	690971	Gasket-Rocker Cover
1023	793146	Cover-Rocker (Cylinder #1)
1023A	499600	Cover-Rocker (Cylinder #2)
1024	796220	Pump-Oil
1026	690981	Rod-Push (Exhaust) (Steel)
1026A	690982	Rod-Push (Intake) (Aluminum)
1027	795890	Filter-Oil
1029	690972	Arm-Rocker
1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)
1040	791237	Plate-Trim
1051	691265	Ring-Retaining (Starter Drive)
1054	280275	Tie-Cable
1058	278776TRI	Operator's Manual
1059	698516	Kit-Screw/Washer (Alternator)
1070	791680	Screw (Flywheel Fan)
1090	691293	Retainer-Brush
1095	694013	Gasket Set-Valve
1100	791959	Pivot-Rocker Arm
1119	691183	Screw (Alternator)
1124	841653	Seal-O Ring (Fuel Transfer Tube)
1124A	690988	Seal-O Ring (Fuel Transfer Tube)
1126	690991	Screw (Fuel Transfer Tube)

Ref. No.	Part No.	Description
1127	695407	Screw (Fuel Bowl)
1128	690990	Screw (Carburetor Nozzle)
1169	690990	Screw (Carburetor Plate)
1329	44P777-2799-G1/G5	Replacement Engine
1330	273521	Repair Manual
Key No. 358		Engine Gasket Set
Key No. 1095		Valve Gasket Set
Key No. 121		Carburetor Overhaul Kit

LABELS

