 


PARTS LIST

Steering and Axle — Model No. 247.289841

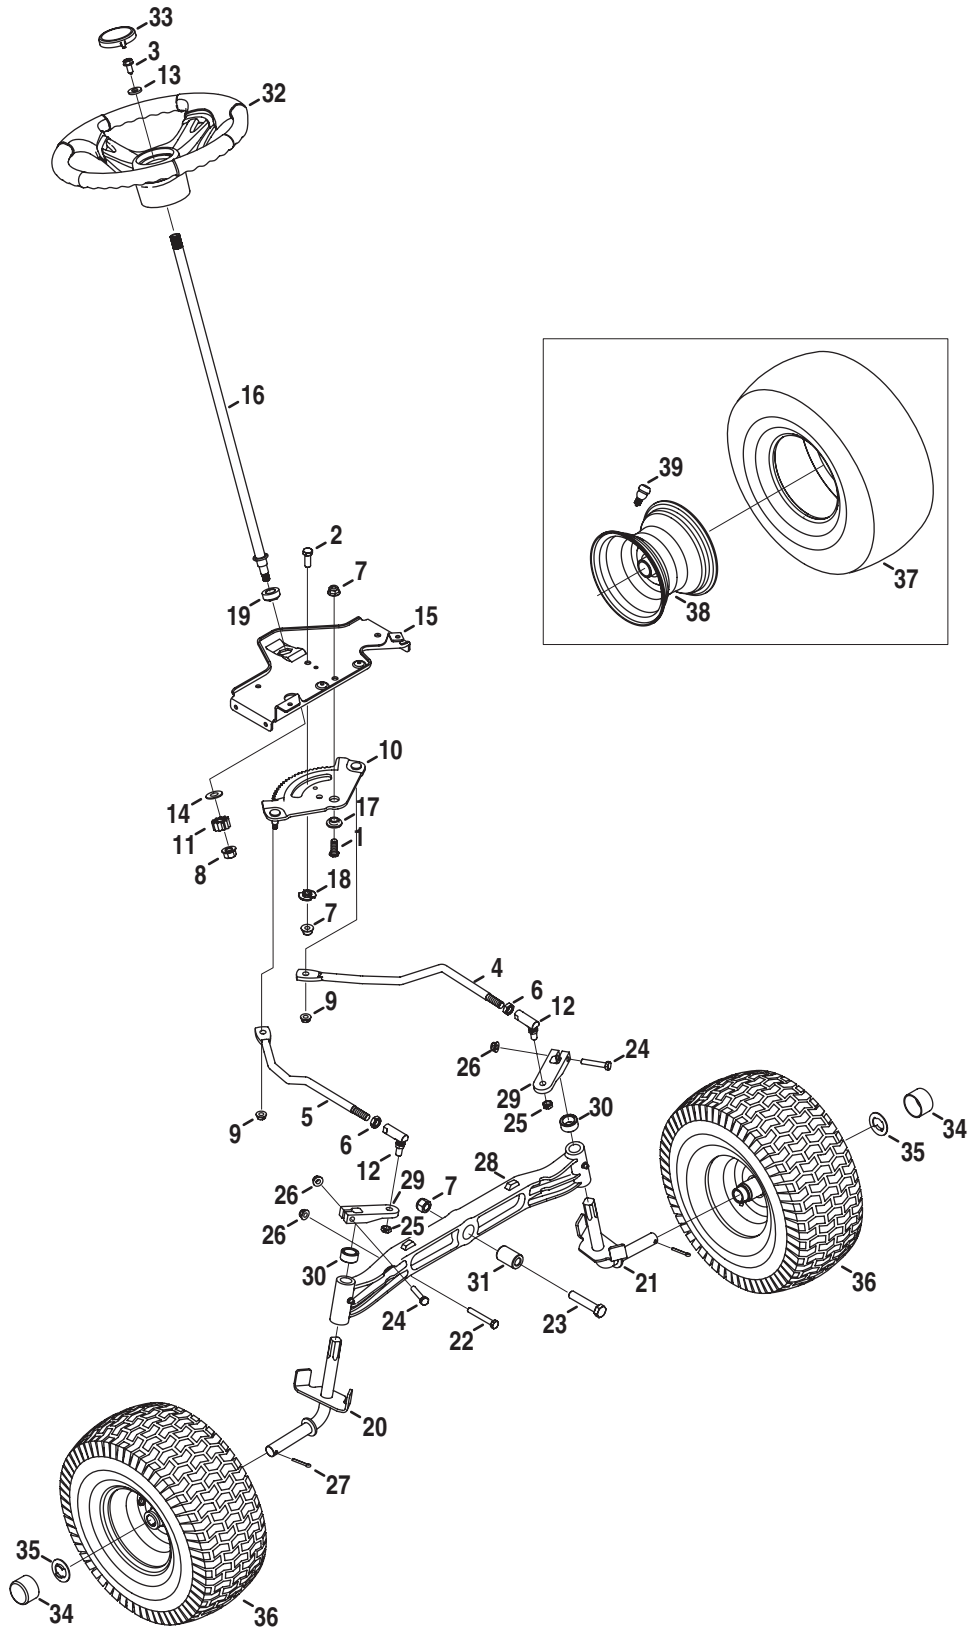

PARTS LIST


Steering and Axle — Model No. 247.289841

Ref. No.	Part No.	Description
1	710-04095	Hex Head Screw, 3/8-16:1.00
2	710-0514	Hex Head Screw, 3/8-16:1.00
3	710-0643	Hex Head Screw, 5/16-18:1.00
4	711-04998	LH Drag Link
5	711-04999	RH Drag Link
6	912-0240	Jam Nut, 7/16-20
7	712-04065	Flangelock Nut, 3/8-16
8	712-0459	Flangelock Nut, 7/16-20
9	712-3004A	Flangelock Nut, 5/16-18
10	717-1550F	Steering Gear
11	717-1554	Steering Pinion Gear
12	923-0448A	Ball Joint, 7/16-20
13	936-3004	Flat Washer, .406 x .875 x .105
14	736-3084	Flat Washer, .51 x 1.12 x .06
15	783-06043-0637	Steering Support Bracket
16	738-04263	Steering Shaft, .625 OD x 24.25 LG
17	738-04363	Shoulder Spacer, .385 x 1.25 x .3025
18	738-04364B	Spacer, .38 x 1.375
19	741-04237B	Hex Flange Bearing 5/8 PM
20	938-04040-0637	RH Axle Assembly

Ref. No.	Part No.	Description
21	938-04041-0637	LH Axle Assembly
22	710-0395	Hex Head Screw, 5/16-18:2.25
23	710-0859	Hex Head Screw, 3/8-16:2.50
24	710-3180	Hex Head Screw, 5/16-18:1.75
25	912-0214	Hexlock Nut, 3/8-24
26	712-04063	Flangelock Nut, 5/16-18
27	714-0162	Cotter Pin, 5/32:1.25
28	719-04413A	Pivot Bar Axle
29	748-04065-0637	Steering Block
30	748-04068	Spacer, .71 ID x .125 OD x .56LG
31	750-05280	Spacer, .385 x 1.00 x 1.5075
32	631-04415	Steering Wheel
33	731-06825	Steering Wheel Cap
34	731-05674	Bumper Cap
35	736-04228A	Flat Washer, .781ID x 1.590OD
36	634-04466-0961	Wheel Assembly
37	734-1727	Tire
38	934-04082-4042	Rim Assembly
39	934-0255	Tubeless Air Valve

PARTS LIST

 Hood and Dash — Model No. 247.289841

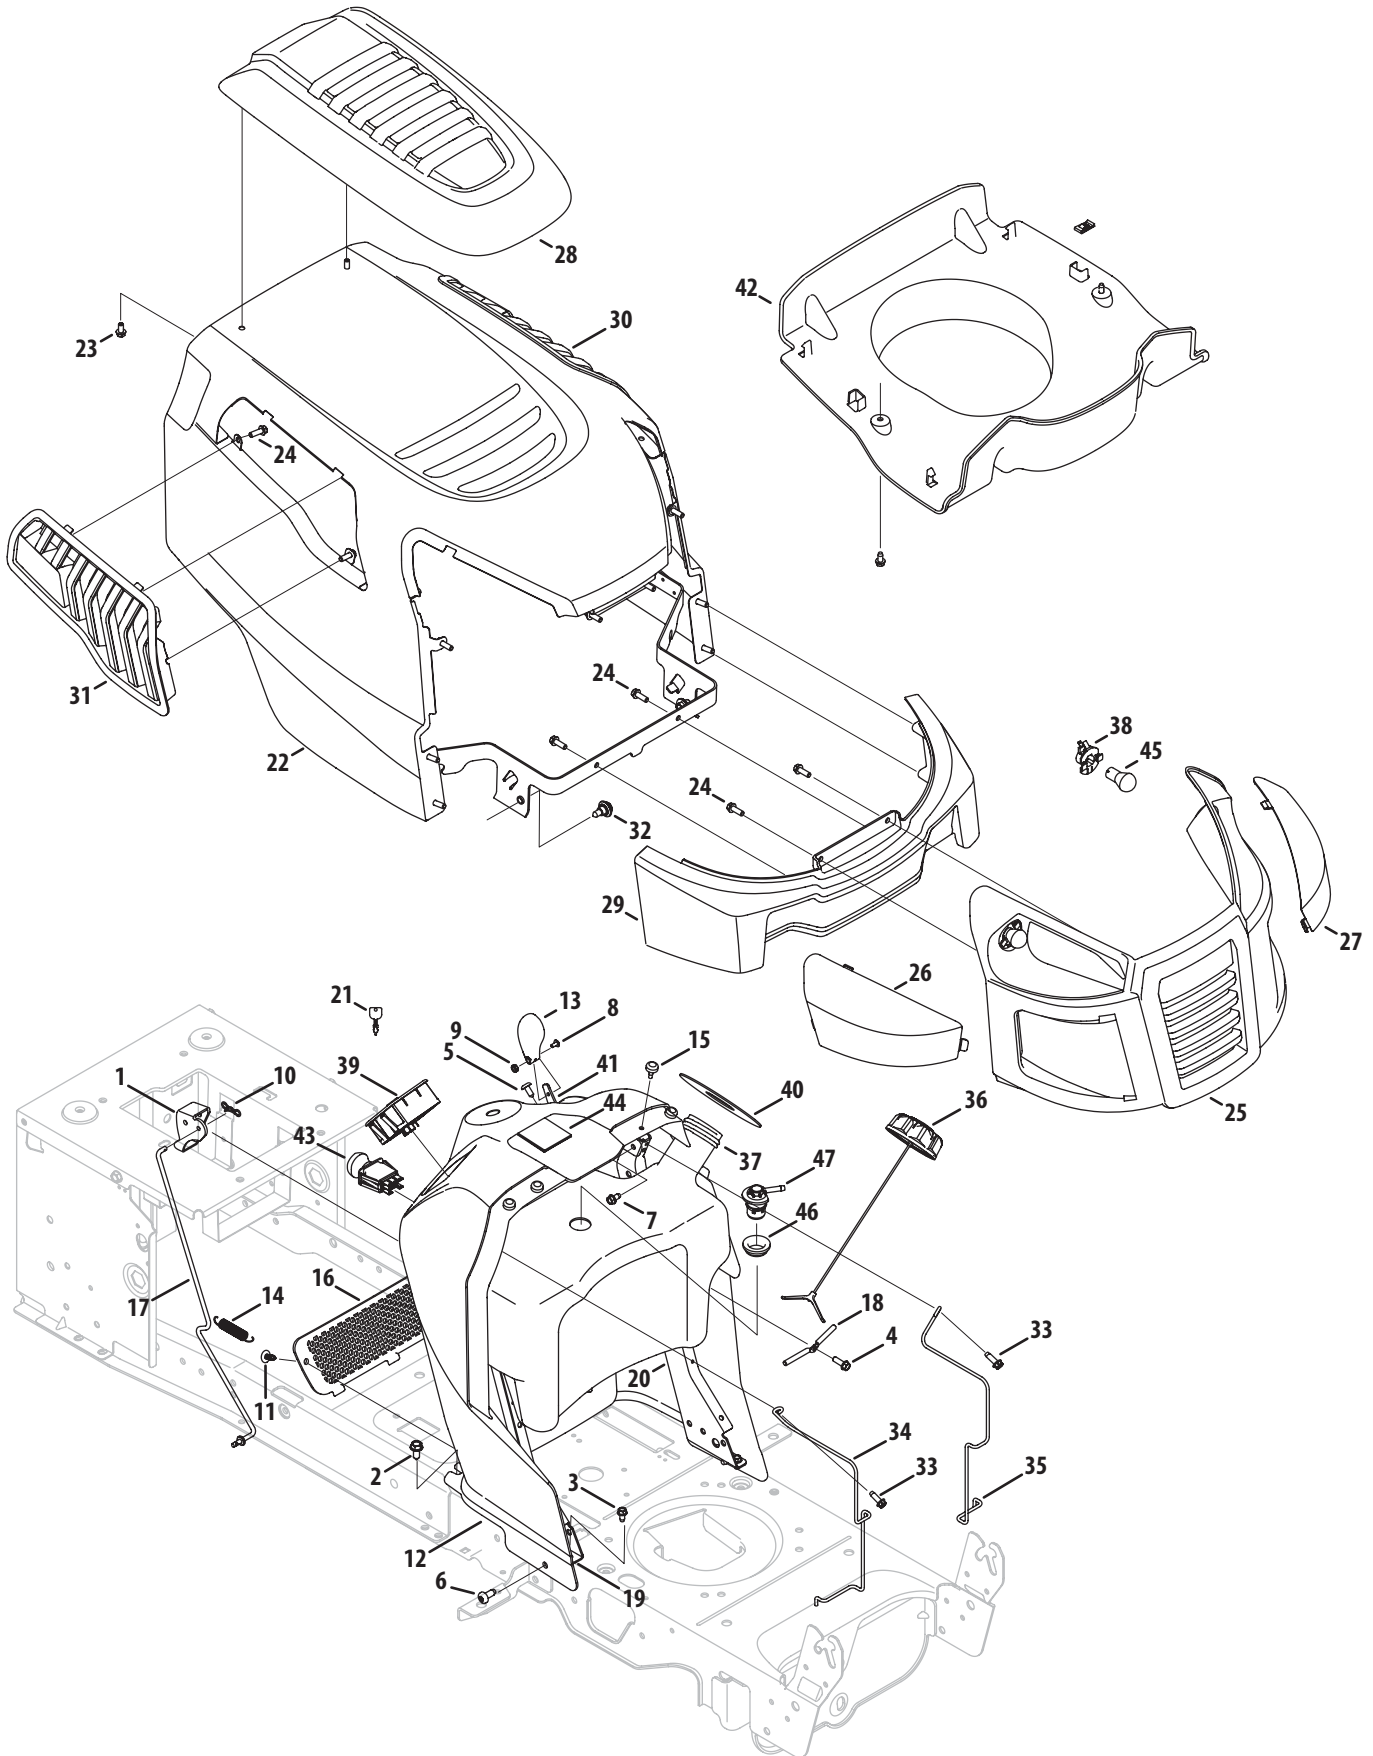

PARTS LIST


Hood and Dash — Model No. 247.289841

Ref. No.	Part No.	Description
1	631-04353P	Dash Lever
2	710-04484	Taptite Screw, Lock Washer, 5/16-18:.750
3	710-0599	Taptite Screw, Lock Washer, 1/4-20:0.500
4	710-0895	Hi-Lo Screw, Lock Washer, 1/4-15:0.750
5	710-1017	Screw, 1/4-14:0.625
6	710-1611B	Taptite Screw, 5/16-18:0.750
7	710-1652	Taptite Screw, 1/4-20 x .625
8	710-3217	Machine Screw, #8-32:0.375
9	712-0142	Hex Nut, #8-32:GRA
10	714-04040	Bow-tie Cotter Pin
11	726-3046	Ratchet Clip:.250 DIA
12	731-07456	Dash
13	731-07550	Control Knob
14	732-04580	Extension Spring, .500 DIA x 2.733 LG
15	735-0271A	Bumper
16	735-04076	Accessory Net
17	747-05280	Control Rod Latch
18	747-1196	Lever Rod
19	783-04285F-0637	RH Dash Support Plate
20	783-04323F-0637	LH Dash Support Plate
21	625-04124	Key (Set of 2)
22	683-04618-0691	Hood Assembly
23	710-04187	Hi-lo Screw, Lock Washer, 1/4-15:0.50
24	710-05108	Screw, Lock Washer, 1/4 DIA:.750
25	931-07457	Grill

Ref. No.	Part No.	Description
26	731-07458	RH Lens
27	731-07459	LH Lens
28	931-07461	Hood Scoop
29	731-07467	Lower Grill
30	731-07711A	LH Hood Scoop
31	731-07712A	RH Hood Scoop
32	738-04091A	Shoulder Screw, .43 x .29:TT:5/16-18
33	710-0642	Taptite Screw, 1/4-20:0.750
34	747-05049	RH Tank Support Rod
35	747-05050	LH Tank Support Rod
36	951-12179	Fuel Cap
37	951-11650	Fuel Tank
38	925-1649	Lamp Socket
39	725-04992	Key Switch Module
40	735-04170	Fuel Tank Gasket
41	946-1100	Throttle Control
42	731-07495	P-Style Plen
43	725-04258	PTO Switch
44	925-04036C	Hour Meter
45	925-0963	Miniature Lamp, 12V
46	735-04081	Rubber Grommet
47	751-12118	Fuel Rollover Valve
—	777X44365	RH Reflector Label (Not Shown)
—	777X44366	LH Reflector Label (Not Shown)

PARTS LIST

 Seat and Fender — Model No. 247.289841

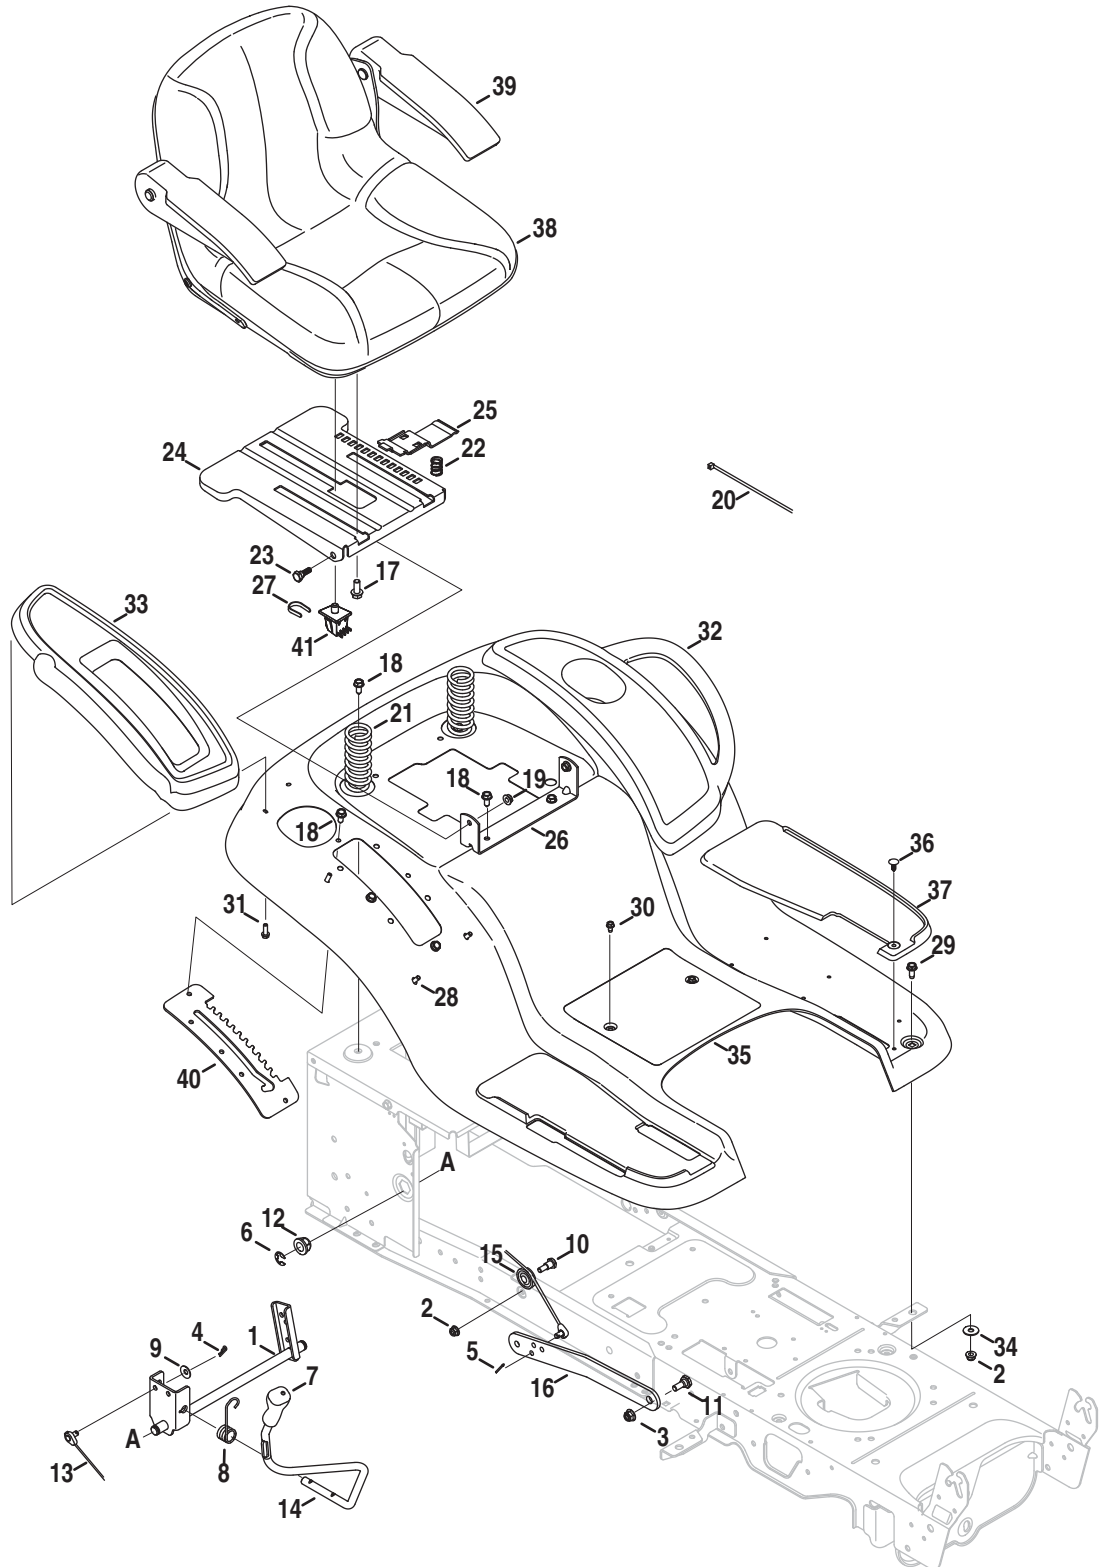

PARTS LIST


Seat and Fender — Model No. 247.289841

Ref. No.	Part No.	Description
1	683-04301-0637	Lift Shaft Assembly
2	712-04063	Flangelock Nut, 5/16-18
3	712-04065	Flangelock Nut, 3/8-16
4	914-0104	Cotter Pin, .072 DIA. x 1.13 LG
5	714-04040	Bow-Tie Cotter Pin
6	716-0106A	E-Ring, .625 DIA. SHAFT
7	720-04150	Handle Grip
8	732-0874	Torsion Spring
9	736-0105	Spring Washer, .401 x .870 x .063
10	738-0138A	Shoulder Screw, .437 x .470:5/16-18
11	938-0380	Shoulder Bolt, .500 x .270:3/8-16
12	941-0225	Hex Flange Bearing
13	746-0968	Lift Cable, 16.16 LG
14	747-04962A	Lift Handle
15	756-04331	Pulley Roller Cable
16	783-05546A-0637	Lift Arm
17	710-04482	Hex Head Flange, 3/8-16:.875
18	710-04484	Taptite Screw, Lock Washer, 5/16-18:.750
19	712-3004A	Flangelock Nut, 5/16-18
20	725-0157	Cable Tie, 3/16 x .05 x 7.4
21	732-04849	Compression Spring, 1.71 x 3.735 x .238

Ref. No.	Part No.	Description
22	732-04563	Compression Spring, .68 x 1.065 x .055
23	938-0296	Shoulder Screw, .437 x .268:5/16-18
24	783-06049-0691	Seat Mounting Bracket
25	783-06050	Seat Adjustment Lever
26	783-06088-0691	Seat Pivot Bracket
27	783-06448	Switch Retainer Clip
28	710-04187	Hi-Lo Screw, Lock Washer, 1/4-15:0.50
29	710-0451	Carriage Bolt, 5/16-18:.750
30	710-0599	Taptite Screw, Lock Washer, 1/4-20:0.500
31	710-0895	Hi-Lo Screw, Lock Washer, 1/4-15:0.750
32	731-05837	LH Fender Cover
33	731-06754	RH Fender Cover
34	736-3078	Flat Washer, .344 x 1.00 x .063 HDN
35	783-06118-0691	Fender
36	726-3046	Ratchet Clip
37	735-04137	LH Foot Pad
—	735-04139	RH Foot Pad
38	757-04128	Seat
39	957-04134	Armrests
40	783-06181-0637	Lift Bracket
41	925-05013	Seat Switch

PARTS LIST

 Drive and Rear Wheels — Model No. 247.289841

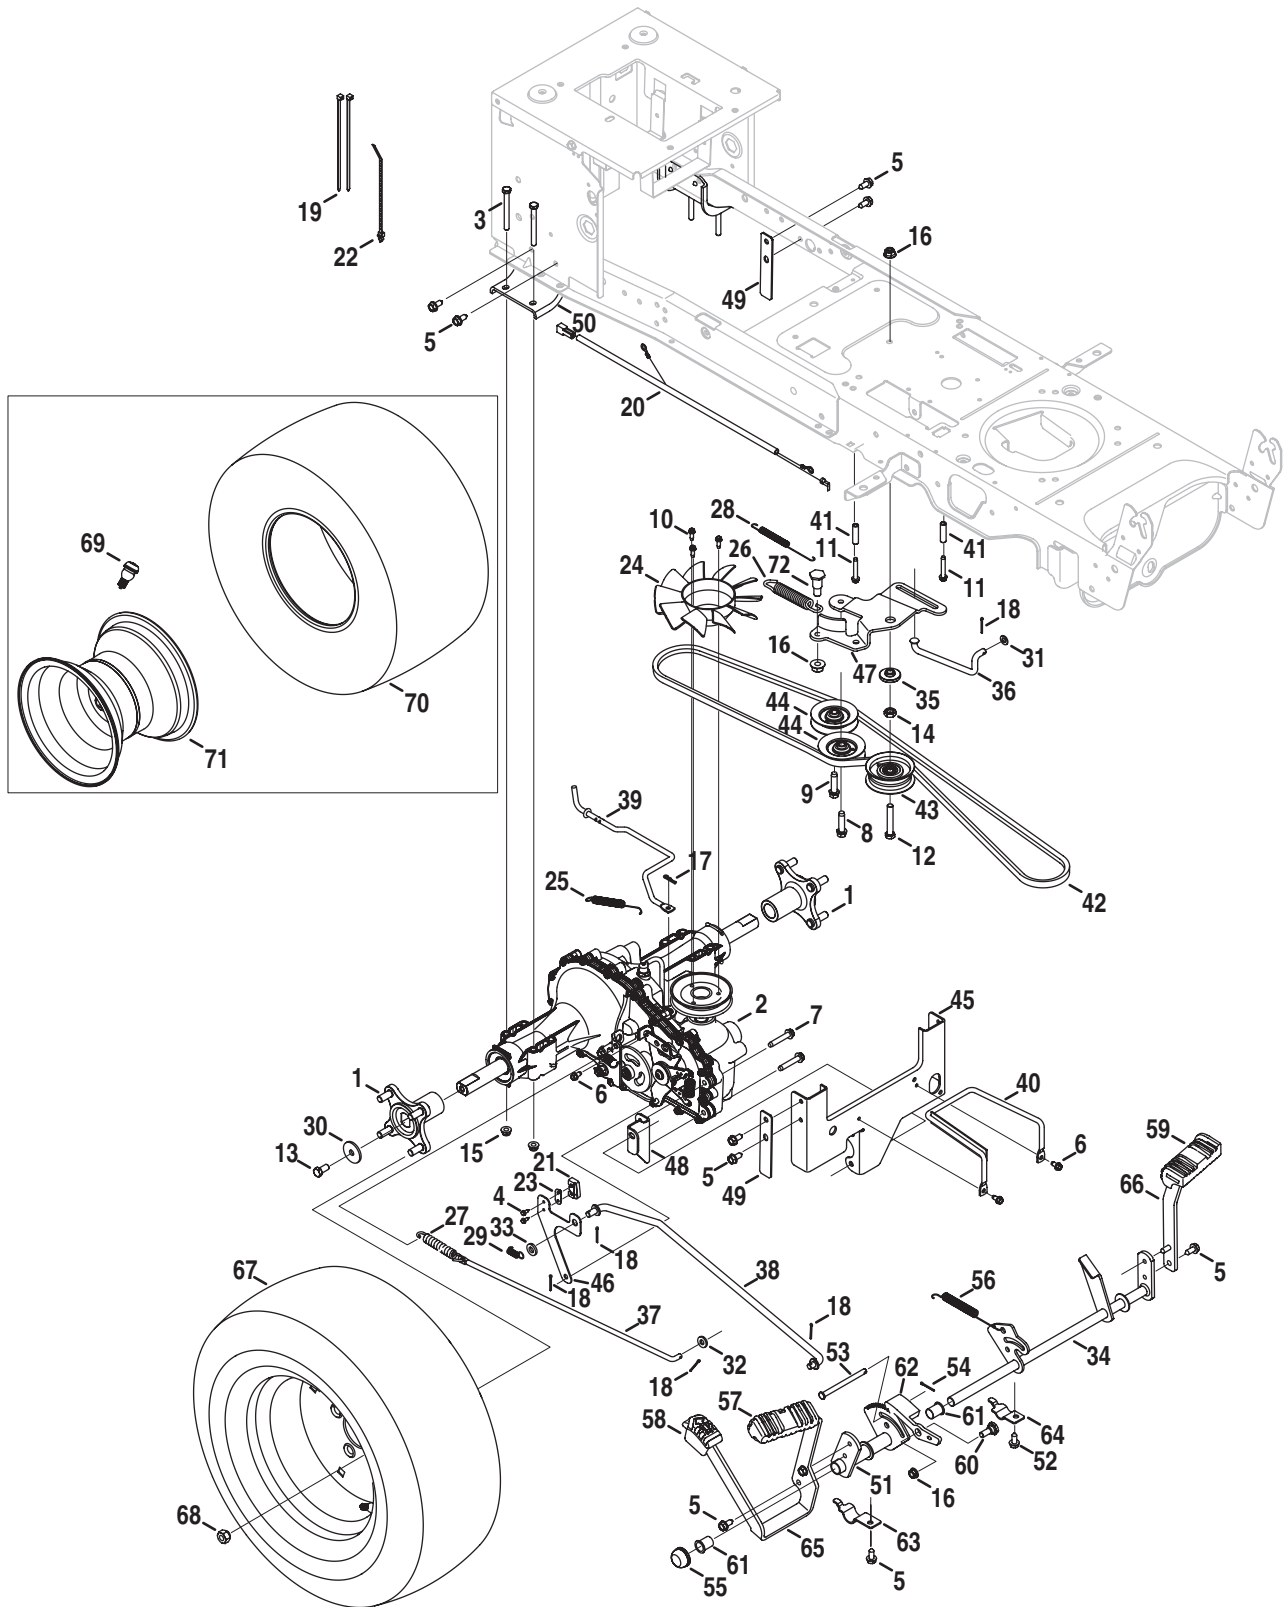

PARTS LIST


Drive and Rear Wheels — Model No. 247.289841

Ref. No.	Part No.	Description
1	918-04317	Wheel Assembly Hub
2	918-04917	Transmission
3	710-0189	Hex Screw, 5/16-18:3.00
4	710-0227	Screw, #8-18:0.500
5	710-04484	Taptite Screw, 5/16-18:.750
6	710-0599	Taptite Screw, 1/4-20:0.500
7	710-0909A	Taptite Screw, 5/16-18:1.750
8	710-1007	Taptite Sems Screw, 3/8-16:1.500
9	710-1008	Taptite Sems Screw, 3/8-16:1.875
10	710-1189	Screw, #12-24:0.625
11	710-1325	Taptite Screw, 1/4-20:1.625
12	710-3011	Hex Screw, 3/8-16:2.25
13	710-3119	Hex Screw, 3/8-16:.750
14	912-0240	Jam Nut, 7/16-20
15	712-04063	Flangelock Nut, 5/16-18
16	712-04065	Flangelock Nut, 3/8-16
17	914-0104	Cotter Pin, .072 DIA. x 1.13 LG
18	914-0111	Cotter Pin, 3/32:1.0
19	725-0157	Cable Tie, 3/16 x .05 x 7.4
20	725-04791A	Jumper Harness
21	725-1644	Short Spring Switch
22	926-0154	Push Mount Cable Tie 7.5 LG
23	926-0320	Insulator Nut Plate
24	931-1449A	Blade Fan
25	732-04528	Extension Spring, .50 DIA x 5.0 LG
26	732-04792	Extension Spring, 1.00 DIA x 4.75
27	732-0716D	Extension Spring, .59 OD x 4.00 LG
28	732-0932	Extension Spring, .38 DIA x 5.6
29	732-3118	Extension Spring, .375 OD x 1.44 LG
30	936-0227	Flat Washer, .390 x 1.500 x .134
31	936-0344	Flat Washer, .330 x .630 x .0635
32	936-3008	Flat Washer, .344 x .750 x .120
33	736-3010	Flat Washer, .407 x .812 x .135
34	647-04152B	Brake Control Assembly
35	738-04420	Shoulder Spacer, 1.375 x .380 x .183
36	747-04957A	Foot Pedal Bypass Transmission Rod

Ref. No.	Part No.	Description
37	747-05124	Brake Rod
38	747-05125A	Control Rod
39	747-05130	Disengage Rod
40	747-05181	Belt Keeper, 5/16
41	750-04456	Spacer, 260 x .372 x 1.420 LG
42	954-04244A	V Belt, 4L x 77.0
43	756-04224	Flat Idler Pulley, 2.75 OD
44	756-04325	V Idler Pulley, 3.06
45	783-05443A-0637	Torque Bracket
46	783-05841	Switch Bracket
47	783-06027A	Center Idler Bracket
48	783-06501A-0637	Deck Bracket
49	783-06503	Plate Bracket
50	783-0693A-0637	Axle Bracket
51	683-04571	Pedal Bracket Assembly
52	710-0604A	Taptite Screw, 5/16-18:0.625
53	711-05068	Clevis Pin, 5/16 x 3.985
54	714-04040	Bow-Tie Cotter Pin
55	726-0214	Push Cap
56	732-04587	Extension Spring, .63 DIA x 4.95 LG
57	735-04118A	Forward Pedal Pad
58	735-04135	Reverse Pedal Pad
59	735-04136	Brake Pedal Pad
60	938-0380	Shoulder Bolt, .500 x .270:3/8-16
61	741-0495	Flange Bearing, .630 ID x .695 OD x .60
62	748-04203	Cruise Latch
63	783-05914	Pedal Support Bracket
64	783-05940	Pedal Support Bracket, 5/8
65	783-06059-0637	Drive Pedal Bracket
66	783-06103A-0637	Brake Pedal Bracket
67	634-0202A-0961	Complete Wheel
68	712-3050	Lug Nut, 7/16-14
69	934-0255	Air Valve
70	734-04147-0901	Tire
71	634-04238-4042	Rim Assembly
72	738-1229A	Shldr. Screw, .625 x 2.50:1/2-13

PARTS LIST

 Engine Accessories — Model No. 247.289841

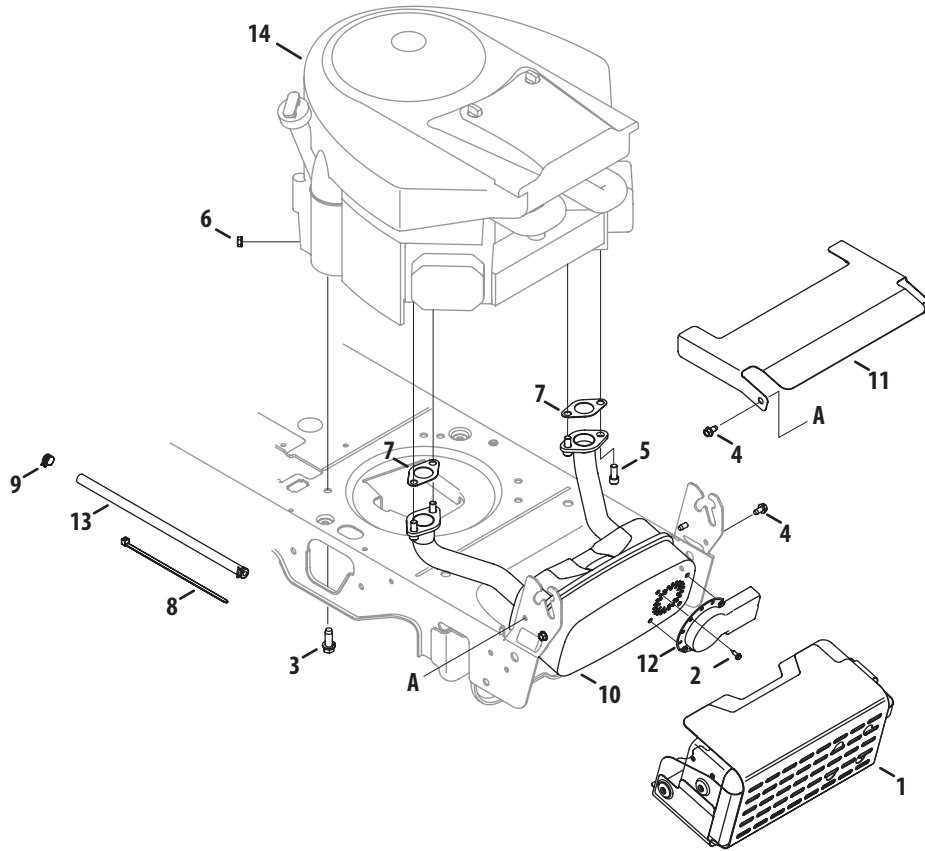


PARTS LIST

Engine Accessories — Model No. 247.289841

Ref. No.	Part No.	Description
1	683-04549-0637	Muffler Shield Assembly
2	710-0227	Screw, Indented Washer, #8-18:0.500
3	710-04683	Taptite Screw, Indented Washer, 3/8-16:1.000
4	710-0599	Taptite Screw, Indented Washer, 1/4-20:0.500
5	710-1314A	Socket Head Screw, 5/16-18:.750
6	712-0271	Sems Nut, 1/4-20
7	721-0460	Exhaust Gasket
8	725-0157	Cable Tie, 3/16 x .05 x 7.4
9	726-0205	Hose Clamp, .490 DIA.
10	751-10542A	Muffler
11	783-06378A	Heat Shield
12	751-0564B	Muffler Deflector
13	751-10349	Fuel Hose
14	BS-49M877-1047-G5	Replacement Engine

PARTS LIST

 PTO and Battery — Model No. 247.289841

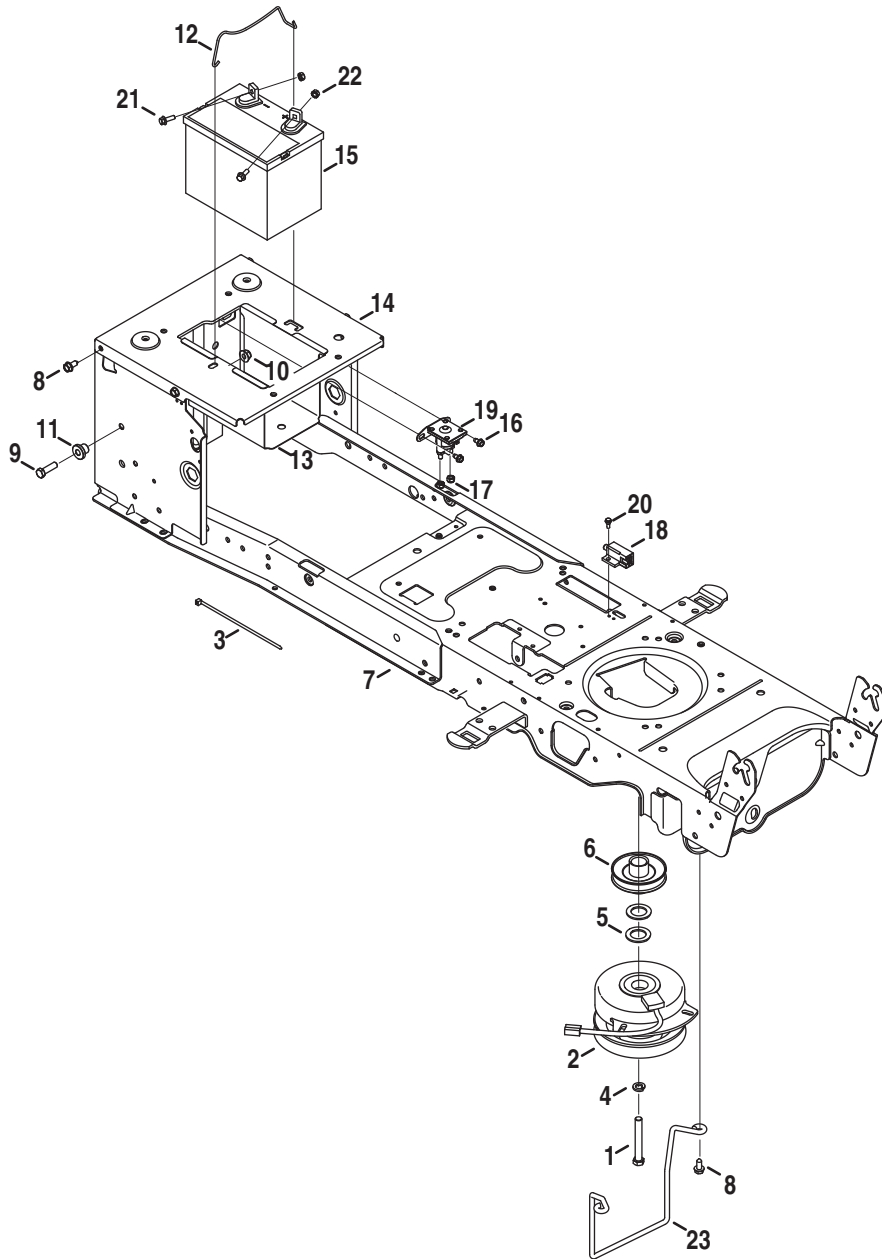


PARTS LIST

PTO and Battery — Model No. 247.289841

Ref. No.	Part No.	Description
1	710-04379A	Hex Head Screw, 7/16-20:3.50
2	917-1774C	Electric PTO Clutch
3	725-0157	Cable Tie, 3/16 x .05 x 7.4
4	936-0171	Lock Washer, 7/16
5	736-0277	Flat Washer, 1.031 x 1.620 x .095
6	756-0978B	Electric PTO Engine Pulley
7	683-04469B-0691	Frame
8	710-04484	Taptite Screw, Indented Washer, 5/16-18:.750
9	710-3005	Hex Head Screw, 3/8-16:1.25
10	712-04065	Flangelock Nut, 3/8-16
11	738-04058	Shoulder Spacer, .38 x 1.0 x .70
12	747-04121A	Battery Holder Rod
13	783-0349-0637	Battery Tray
14	783-06089-0637	Seat Frame Bracket
15	725-05088	Battery
16	710-0653	Taptite Screw, 1/4-20:0.375
17	712-04064	Flangelock Nut, 1/4-20
18	725-04363	Interlock Switch
19	725-04439	Solenoid, 12 V
20	738-04237A	Shoulder Screw, #10-32:.500
21	710-04666	Hex Head Flange, 1/4-20:.75
22	712-0271	Sems Nut, 1/4-20
23	747-05195	Belt Keeper Rod
NS	925-04093	Wire Harness Assembly

PARTS LIST

 Deck — Model No. 247.289841

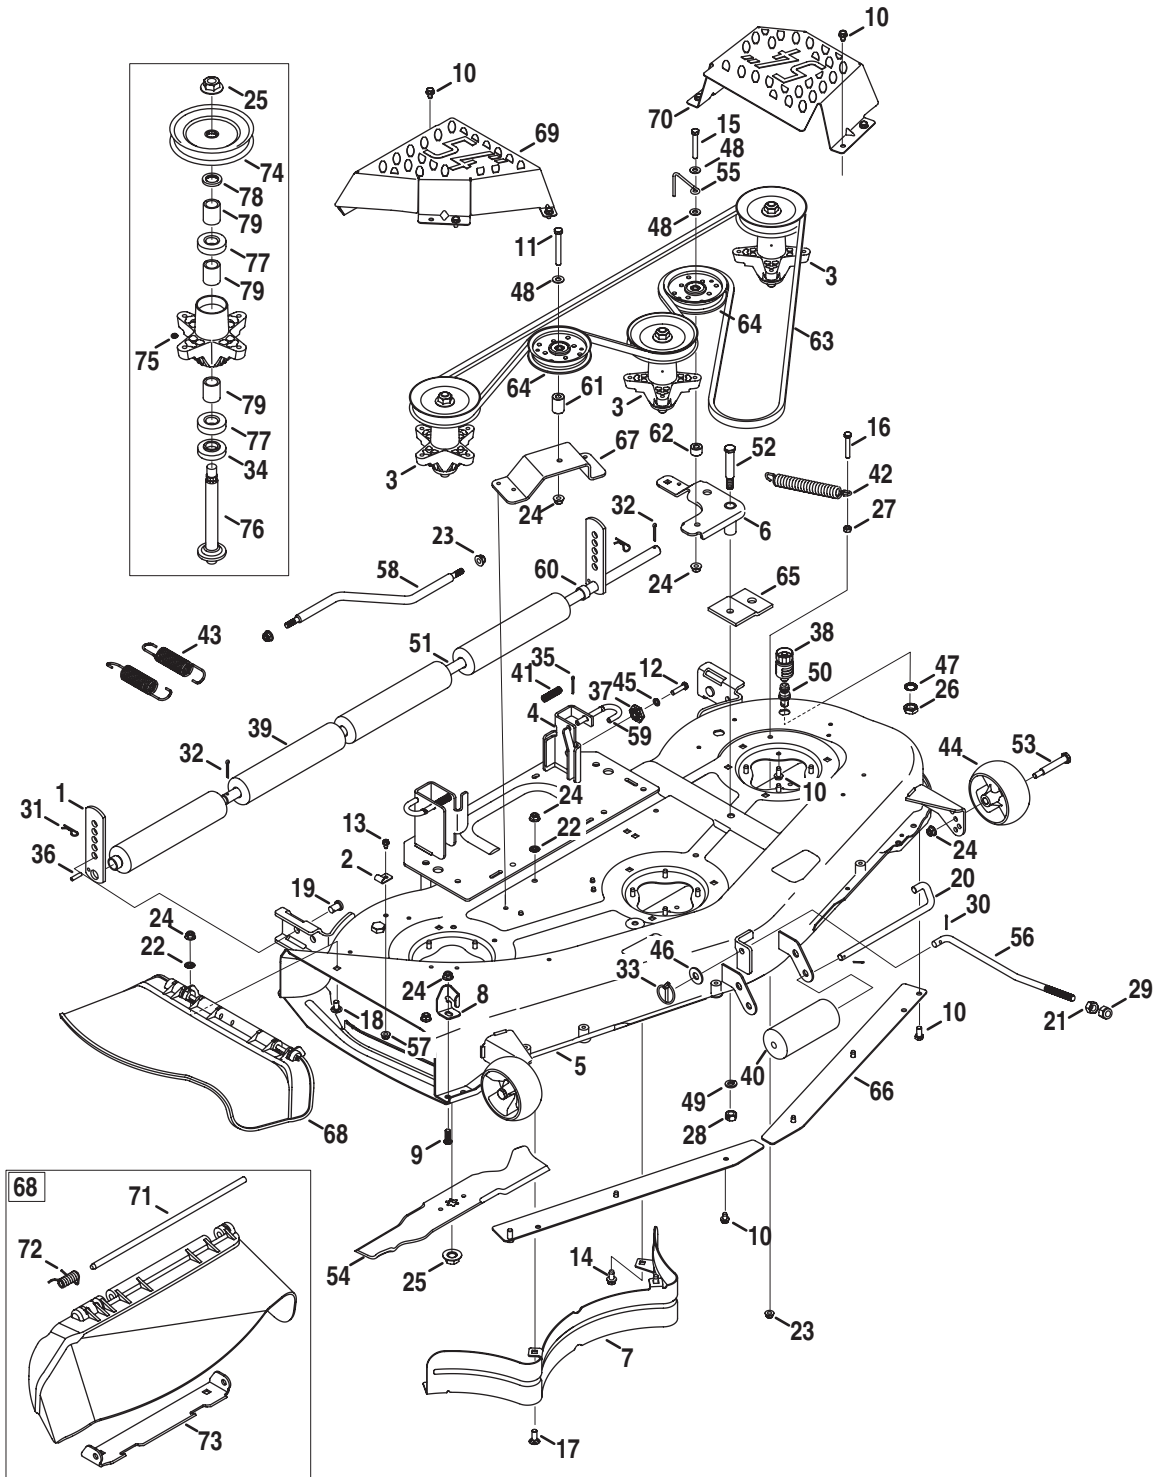

PARTS LIST

Deck — Model No. 247.289841

Ref. No.	Part No.	Description
1	12650	Height Adjust Bracket
2	96606	Retainer Hook Bracket
3	918-04608A	Spindle Assembly
4	683-0254B-4028	Deck Hanger Bracket Assembly
5	983-04585-4028	Deck Assembly
6	683-0459-0637	Idler Assembly
7	703-2093-0637	Inner Baffle
8	703-3279-4028	Deflector Chute Stop
9	710-04095	Hex Screw, 3/8-16:1.00
10	710-04484	Taptite Screw, 5/16-18:.750
11	710-0521	Hex Screw, 3/8-16:3.00
12	710-0528	Hex Screw, 5/16-18:1.25
13	710-0597	Hex Screw, 1/4-20:1.00
14	710-0623	Taptite Screw, 3/8-16:0.750
15	710-0859	Hex Screw, 3/8-16:2.50
16	710-3103	Hex Screw, 5/16-18:2.00
17	710-3168	Carriage Bolt, 3/8-16:1.00
18	710-3178	Carriage Bolt, 3/8-16:0.75
19	911-0332	Clevis Pin, .50 DIA x .78 LG
20	911-3314	Roller Pin, 1/2 DIA x 7.31 LG
21	912-0206	Hex Nut, 1/2-13
22	712-0229	Push Nut, 3/8
23	712-04063	Flangelock Nut, 5/16-18
24	712-04065	Flangelock Nut, 3/8-16
25	712-0417A	Flange Nut, 5/8-18
26	912-0641	Hex Nut, M16-1.5 DIN 936
27	912-3010	Hex Nut, 5/16-18
28	712-3022	Hexlock Nut, Counterlock, 1/2-13
29	712-3083	Hexlock Nut, 1/2-13
30	914-0111	Cotter Pin, 3/32:1.0
31	914-0145	Click Pin, .092 x 1.64 LG
32	714-0162	Cotter Pin, 5/32:1.25
33	753-04070	Lynch Pin, .1875
34	750-1349A	Spacer, .79 x 1.82 x .55 LG
35	914-0470	Cotter Pin, 1/8 x 1.25
36	715-0108	Spring Pin, 1/4 DIA x 1.00 LG
37	917-04074	Deck Gear
38	921-04041	Water Nozzle Adaptor
39	731-0335	Deck Roller
40	731-05679	Front Roller

Ref. No.	Part No.	Description
41	732-04652	Compression Spring, .535 OD x 1.751 LG
42	732-04692	Extension Spring, .85 OD x 5.915 LG
43	732-0934	Extension Spring, 1.15 OD x 5.99 LG
44	734-04155	Deck Wheel
45	936-0119	Lock Washer, 5/16
46	936-0179	Flat Washer, .531 x 1.25 x .100
47	736-0225	Lock Washer, 5/8
48	936-0300	Flat Washer, .406 x .875 x .059
49	936-0921	Lock Washer, 1/2
50	737-04003D	Deck Water Nozzle
51	738-0295	Shaft, .750 x .4712
52	738-1229A	Shldr. Screw, .625 x 2.50:1/2-13
53	938-3056	Shoulder Bolt, .496 x 2.50:3/8-16
54	942-0677B	Blade
55	747-04938	Belt Keeper Rod
56	747-05141A	Deck Lift Rod
57	712-04064	Flangelock Nut, 1/4-20
58	747-05462	Anti-sway Rod
59	747-1116	Deck Release Handle Rod
60	950-0212	Spacer, .82 ID x 1.00 OD x .53
61	750-04597	Spacer, .380 x .900 x 1.313
62	750-0933	Spacer, .385 ID x .88 x .64
63	954-04083	V Belt
64	756-04129B	Idler Pulley, 4.25"DIA
65	783-04013A-0637	Pulley Stabilizer Bracket
66	783-04690B-0637	Deck Skirt
67	783-04726-0637	Stationary Idler Bracket
68	631-04070A	Chute Assembly
69	783-1470A-4028	RH Spindle Cover
70	783-1471-4028	LH Spindle Cover
71	711-04565	Hinge Pin
72	732-04372	Torsion Spring, .44 ID x 2.0
73	783-05030	Chute Bracket
74	756-04213	Deck Pulley
75	937-3000	Lube Fitting
76	738-1197	Spindle Shaft, 6.95 LG
77	941-0919	Ball Bearing, .787 ID x 1.85 OD x .551
78	748-0160A	Spacer, .790 ID x 1.25 OD x .175
79	750-1000	Spacer, .80 x 1.10 x 1.322 LG

PARTS LIST

 
Craftsman Engine Model 49M777-0853-G5 For Model 247.289841

48 SHORT BLOCK

1058 OPERATOR'S MANUAL





1329 REPLACEMENT ENGINE

1330 REPAIR MANUAL


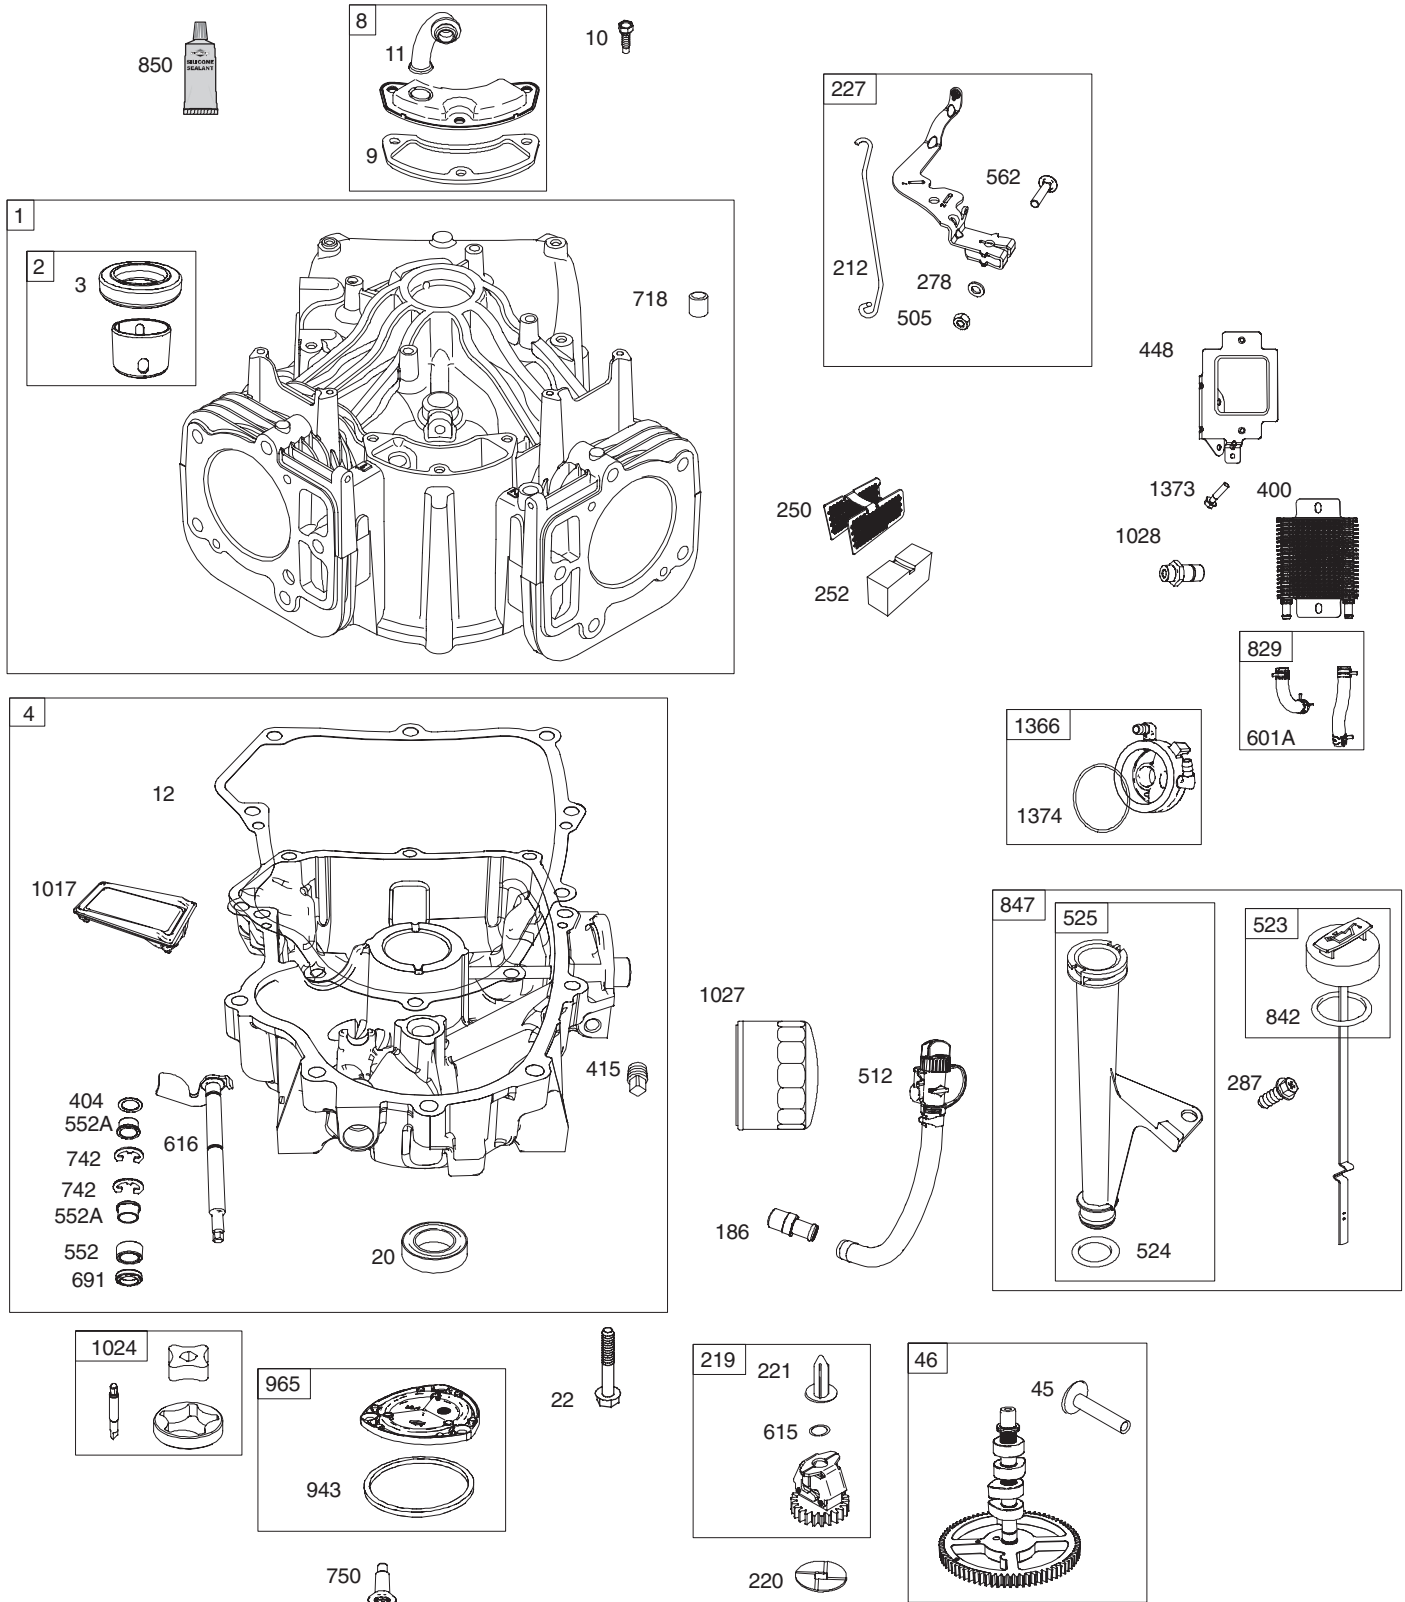


PARTS LIST

    Craftsman Engine Model 49M777-0853-G5 For Model 247.289841

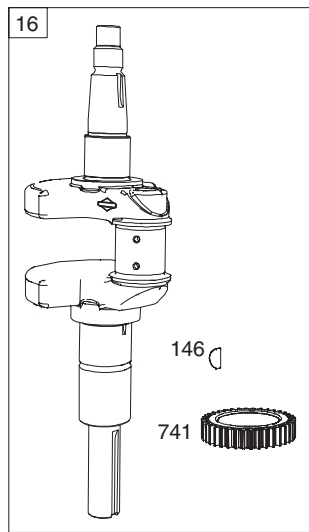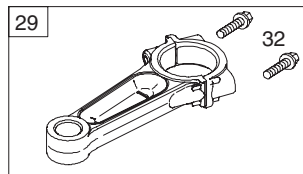

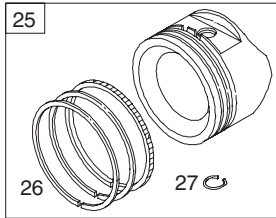


24

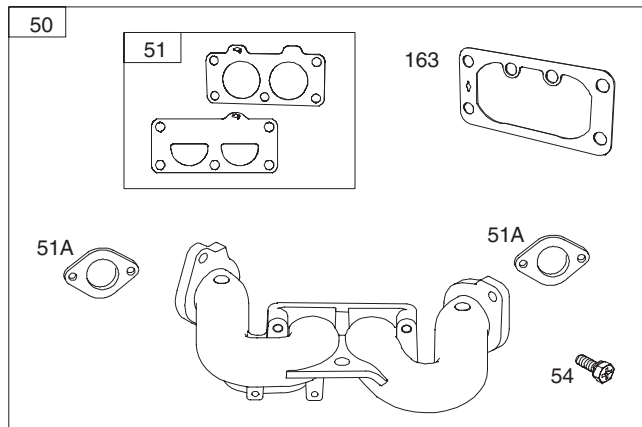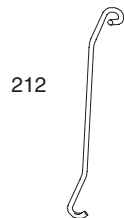  



PARTS LIST

   Craftsman Engine Model 49M777-0853-G5 For Model 247.289841

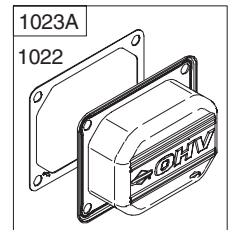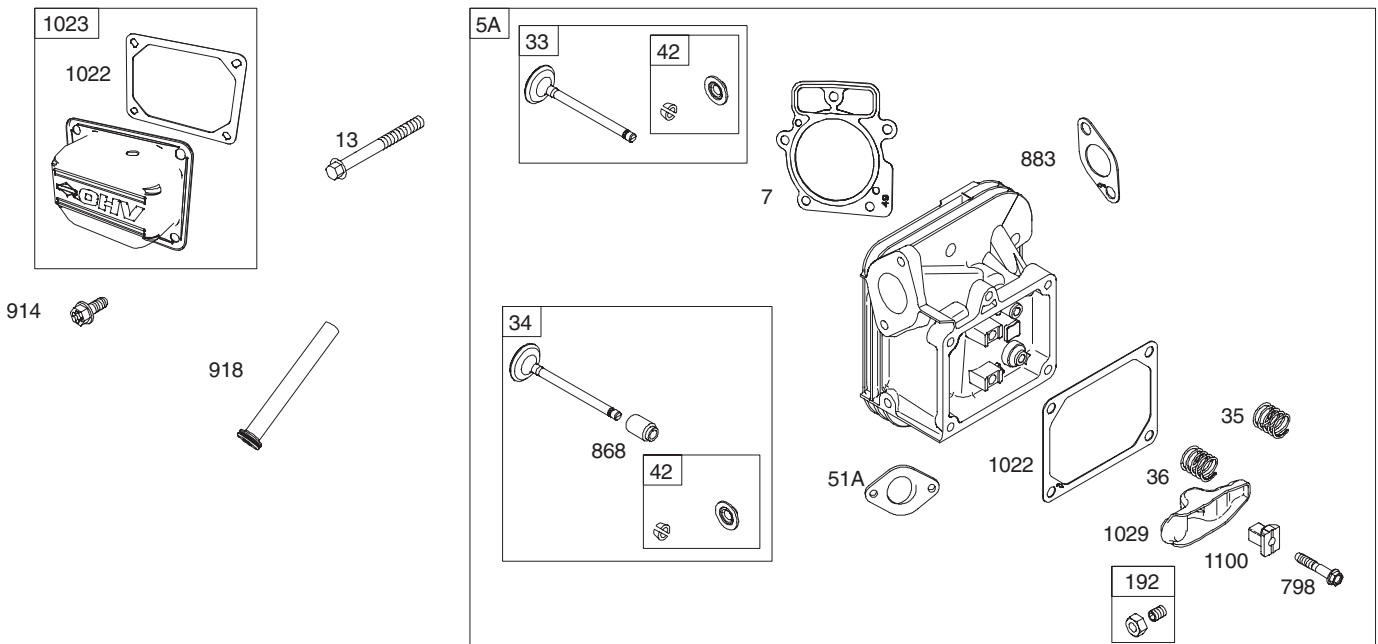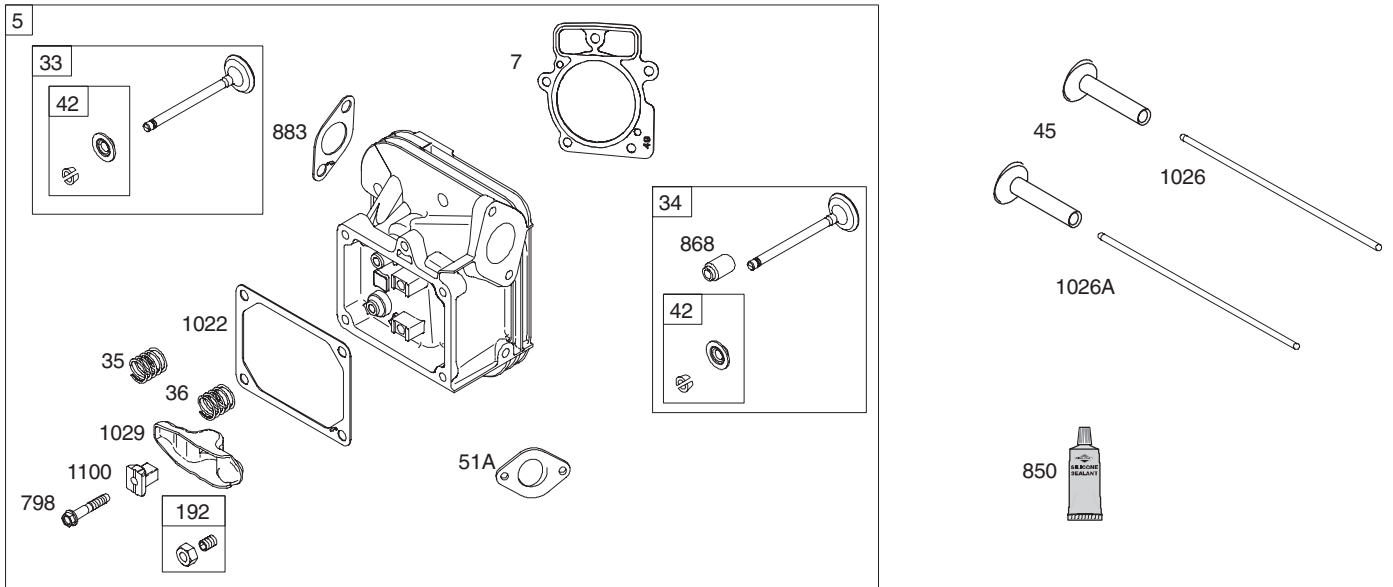


PARTS LIST

  
Craftsman Engine Model 49M777-0853-G5 For Model 247.289841

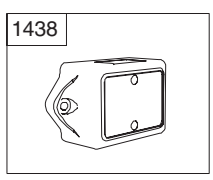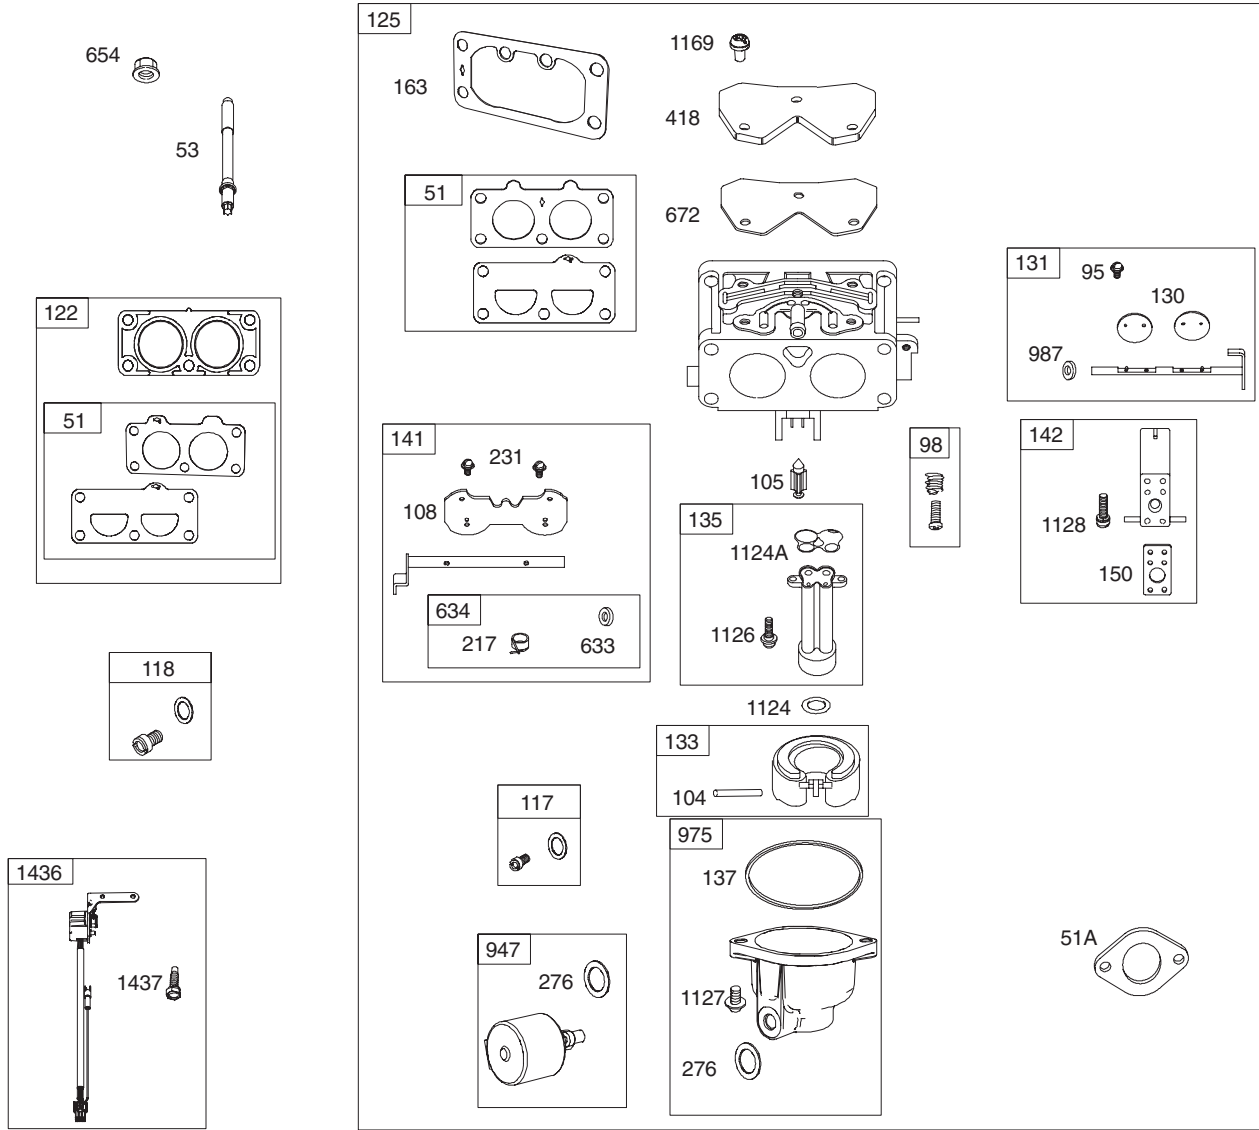


318

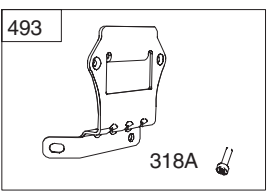 


318A

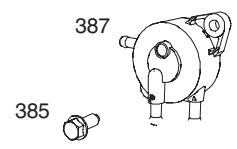 

385

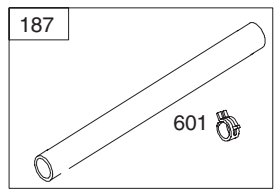 











601

 

PARTS LIST


Craftsman Engine Model 49M777-0853-G5 For Model 247.289841

          1036 EMISSIONS LABEL

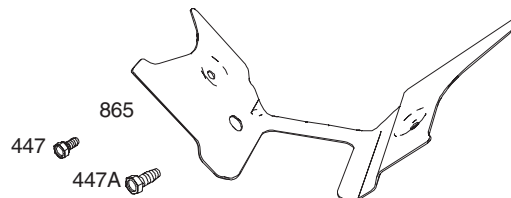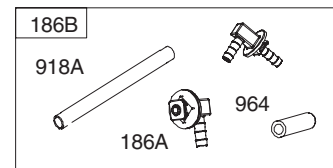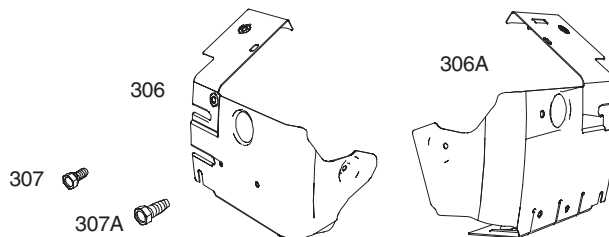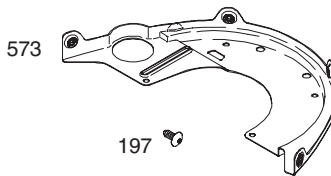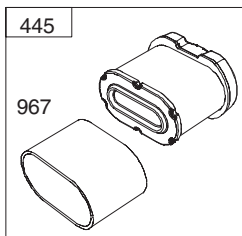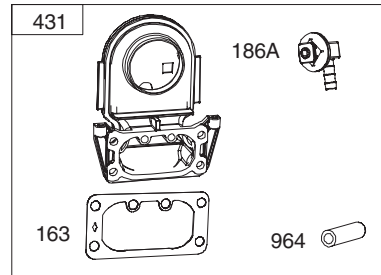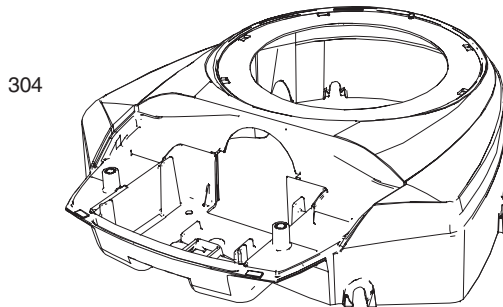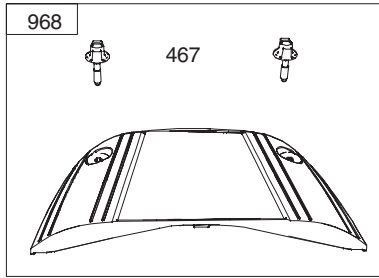




PARTS LIST

 Craftsman Engine Model 49M777-0853-G5 For Model 247.289841

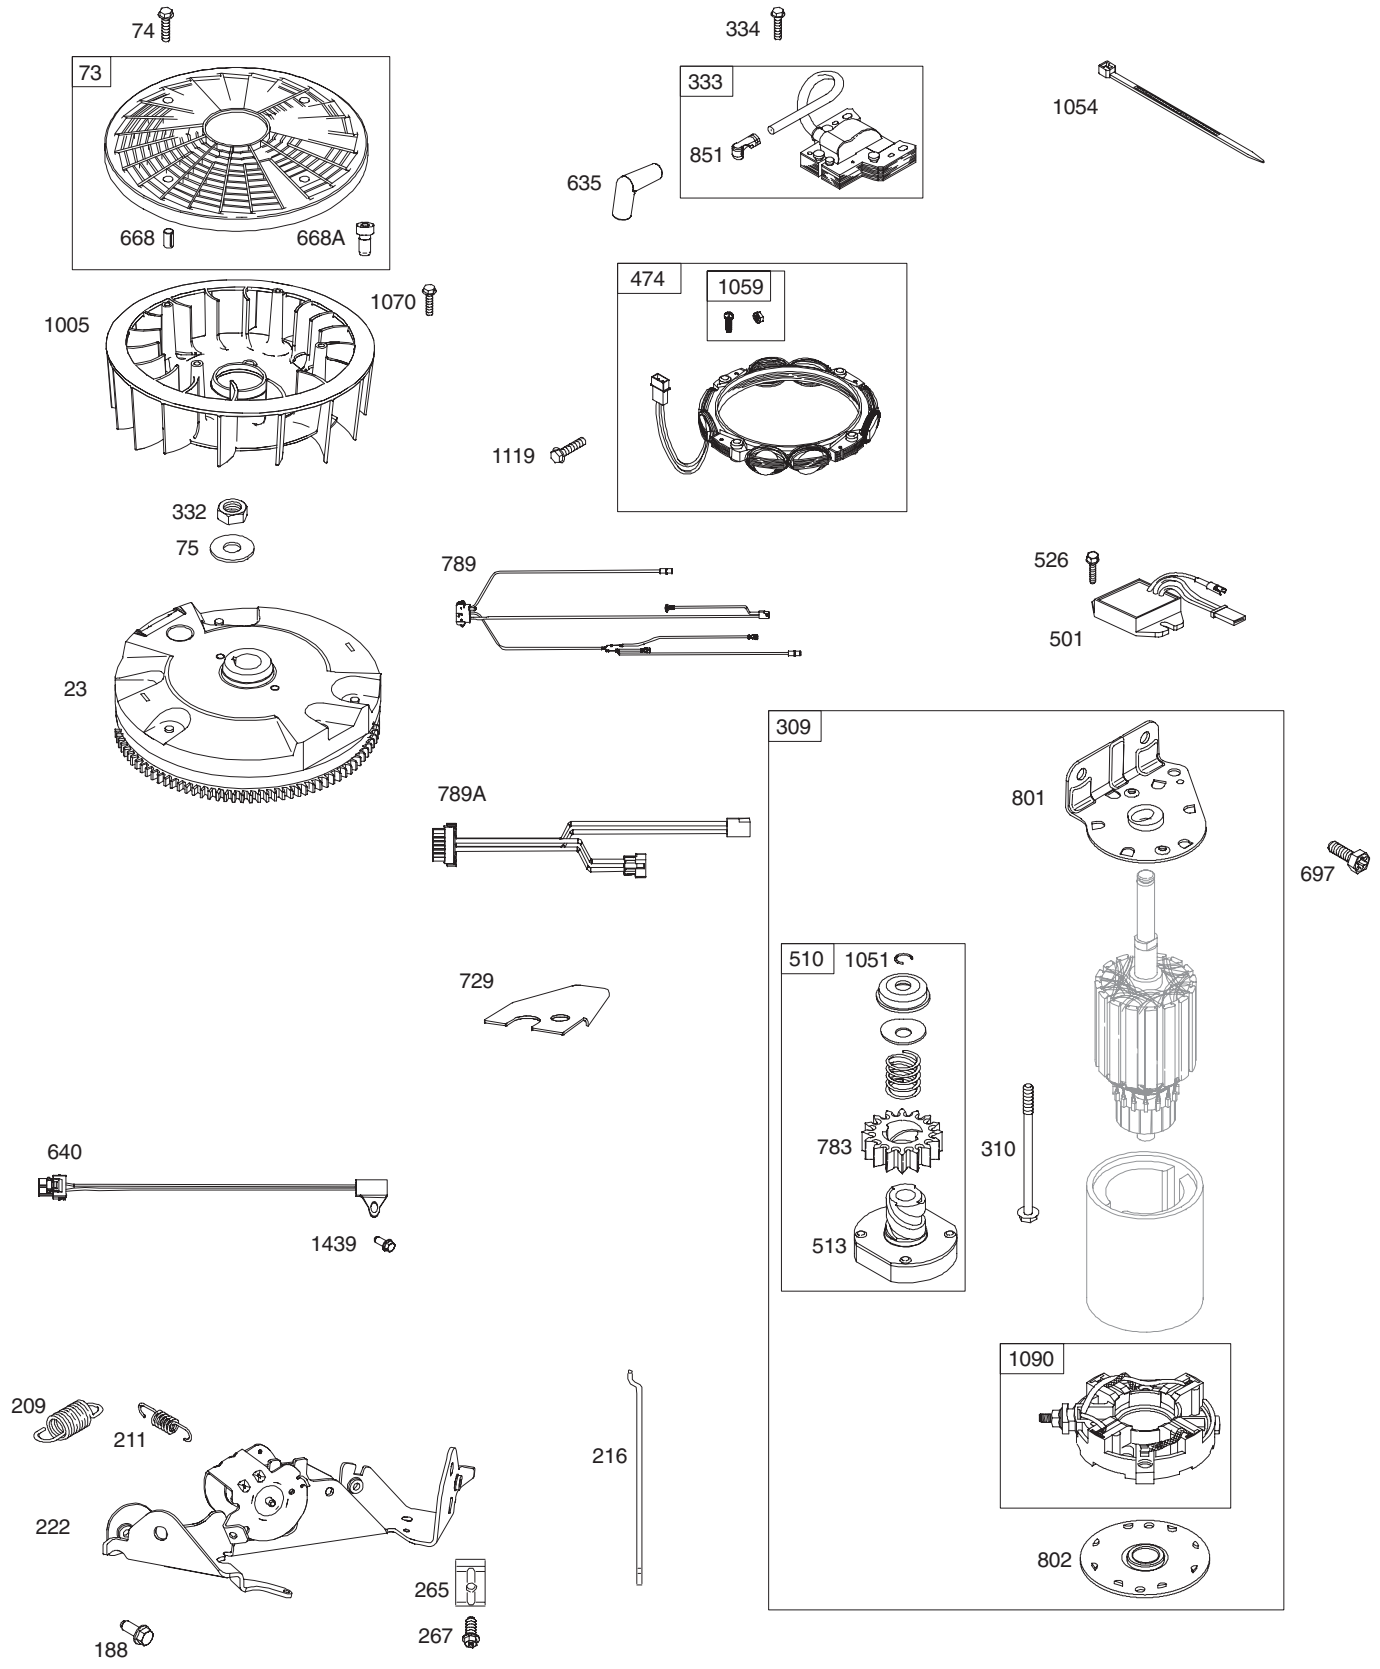

PARTS LIST

   Craftsman Engine Model 49M777-0853-G5 For Model 247.289841

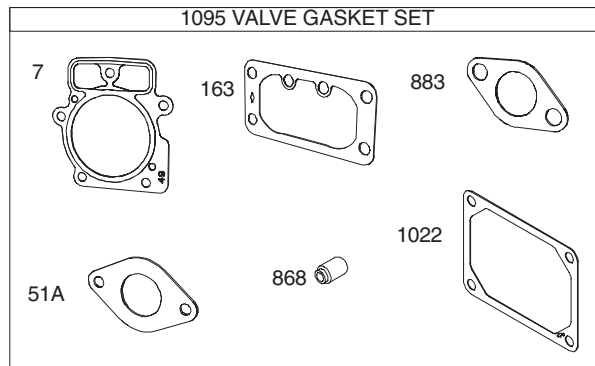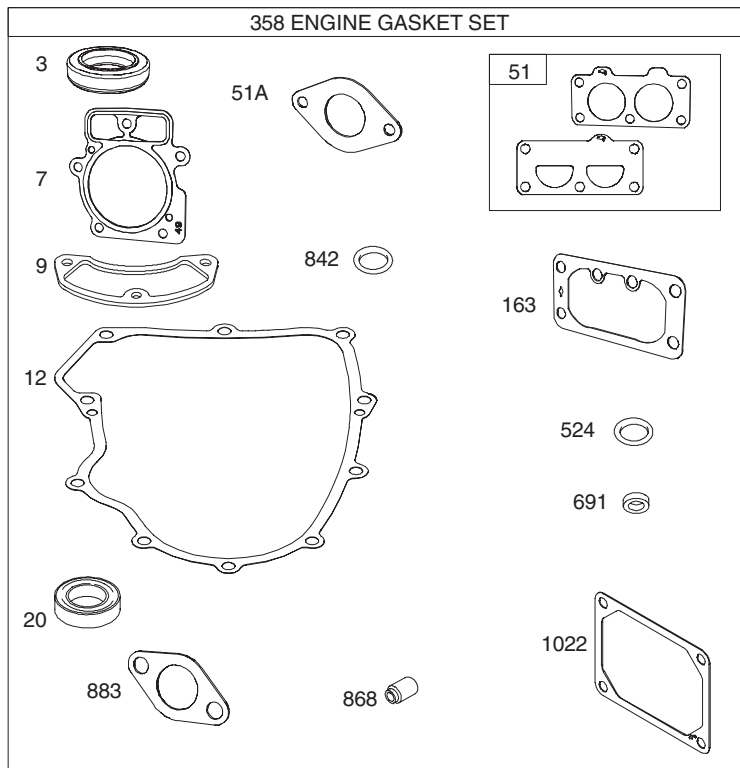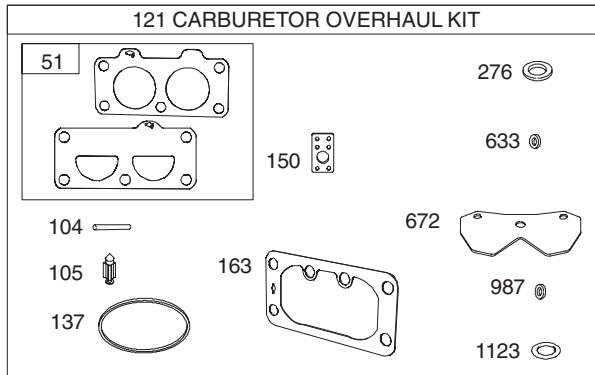

PARTS LIST

Craftsman Engine Model 49M777-0853-G5 For Model 247.289841

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	96908	Cylinder Assembly	75	691056	Washer (Flywheel)
2	499585	Bushing/Seal Kit (Magneto Side)	95	690718	Screw (Throttle Valve)
3	391086s	Seal-Oil (Magneto Side)	98	699721	Kit-Idle Speed
4	797502	Sump-Engine	104	694918	Pin-Float Hinge
5	799088	Head-Cylinder (Cylinder 1)	105	797410	Valve-Float Needle
5A	799089	Head-Cylinder (Cylinder 2)	108	699723	Valve-Choke
7	796851	Gasket-Cylinder Head	117	842633	Jet-Main (Standard) (Left and Right Jet)
8	792185	Breather Assembly	118	842082	Jet-Main (High Altitude) (Left and Right Jet)
9	690937	Gasket-Breather	121	796919	Kit-Carburetor Overhaul
10	697551	Screw (Breather Assembly)	122	796877	Spacer-Carburetor
11	792184	Tube-Breather	125	796870	Carburetor
12	697227	Gasket-Crankcase	130	796875	Valve-Throttle
13	793988	Screw (Cylinder Head)	131	796872	Kit-Throttle Shaft
16	796857	Crankshaft	133	699724	Float-Carburetor
20	795387	Seal-Oil (PTO Side)	135	699729	Tube-Fuel Transfer
22	694966	Screw (Crankcase Cover/Sump)	137	690994	Gasket-Float Bowl
23	691053	Flywheel	141	796228	Kit-Choke Shaft
24	796335	Key-Flywheel (Steel)	142	796871	Nozzle-Carburetor
25	796909	Piston Assembly (Standard)	146	690979	Key-Timing
	796910	Piston Assembly (.020" Oversize)	150	690995	Gasket-Nozzle
26	796911	Ring Set (Standard)	163	691001	Gasket-Air Cleaner
	796912	Ring Set (.020" Oversize)	186	796532	Connector-Hose (Oil Drain Hose)
27	690975	Lock-Piston Pin	186A	845141	Connector-Hose (EVAP System)
28	696581	Pin-Piston	186B	799158	Connector-Hose (EVAP System)
29	796209	Rod-Connecting	187	791766	Line-Fuel (Cut to Required Length)
32	690976	Screw (Connecting Rod)	188	697551	Screw (Control Bracket)
33	793557	Valve-Exhaust	192	690083	Adjuster-Rocker Arm
34	793556	Valve-Intake	197	697820	Screw (Back Plate)
35	694865	Spring-Valve (Intake)	209	798921	Spring-Governor (Orange)
36	694865	Spring-Valve (Exhaust)	211	691019	Spring-Governed Idle (No Color)
42	499586	Keeper-Valve	212	695238	Link-Throttle
45	690977	Tappet-Valve	216	796879	Link-Choke
46	796853	Camshaft	217	695409	Spring-Choke Return
48	797511	Short Block	219	793338	Gear-Governor
50	796878	Manifold-Intake	220	690412	Washer (Governor Gear)
51	796876	Gasket-Intake	221	841026	Cup-Governor
51A	690949	Gasket-Intake	222	798916	Bracket-Control
53	690951	Stud (Carburetor)	227	798856	Lever-Governor Control
54	699816	Screw (Intake Manifold)	231	690718	Screw (Choke Valve)
73	494439	Screen-Rotating	240	695666	Filter-Fuel
74	698425	Screw (Rotating Screen)	250	690957	Retainer-Breather

PARTS LIST

Craftsman Engine Model 49M777-0853-G5 For Model 247.289841

Ref. No.	Part No.	Description
252	794389	Collector-Oil
265	691024	Clamp-Casing
267	792629	Screw (Casing Clamp)
276	695410	Washer-Sealing
278	792651	Washer (Governor Control Lever)
287	697551	Screw (Dipstick Tube)
304	797407	Housing-Blower
305	691005	Screw (Blower Housing)
305A	790690	Screw (Blower Housing) (Blower Housing to Intake Elbow)
306	796852	Shield-Cylinder (Cylinder 1)
306A	796541	Shield-Cylinder (Cylinder 2)
307	691003	Screw (Cylinder Shield) (10-24x.43)
307A	697551	Screw (Cylinder Shield) (1/4-20x.62)
309	795121	Motor-Starter
310	691263	Screw (Starter Motor)
318	792629	Screw (Mounting Bracket) (Electronic Choke Module) (10-32x.70)
318A	691127	Screw (Mounting Bracket) (Electronic Choke Module) (1/4-20x.81)
332	691059	Nut (Flywheel)
333	691060	Armature-Magneto
334	691061	Screw (Magneto Armature)
337	491055s	Plug-Spark
358	796917	Gasket Set-Engine
385	797409	Screw (Fuel Pump)
387	808656	Pump-Fuel
400	796882	Cooler-Oil
404	690442	Washer (Governor Crank)
415	794903	Plug (Oil Pressure Switch Hole)
418	795912	Plate-Carburetor
431	798860	Elbow-Intake
445	792105	Filter-Air Cleaner Cartridge
447	691003	Screw (Air Guide Cover) (10-24x.43)
447A	697551	Screw (Air Guide Cover) (1/4-20x.62)
448	796865	Bracket-Oil Cooler
467	790697	Knob-Air Cleaner
474	696458	Alternator
493	797176	Bracket-Mounting (Electronic Choke Module)
501	797375	Regulator
505	691029	Nut (Governor Control Lever)

Ref. No.	Part No.	Description
510	696541	Drive-Starter
512	796530	Hose-Oil Drain
513	692024	Clutch-Drive
523	691036	Dipstick
524	691032	Seal-Dipstick Tube
525	691037	Tube-Dipstick
523	697551	Screw (Regulator)
552	796638	Bushing-Governor Crank
552A	690553	Bushing-Governor Crank
562	690311	Screw (Governor Control Lever)
573	790444	Plate-Back
601	691038	Hose-Clamp (Black)
601A	841597	Hose-Clamp (Oil Cooler Hose)
615	698290	Retainer-Governor Shaft
616	691045	Crank-Governor
633	699813	Seal-Choke/Throttle Shaft (Choke Shaft)
634	698779	Spring/Seal Assembly (Choke Shaft)
635	692076	Boot-Spark Plug
640	796913	Wire-Thermistor
654	690958	Nut (Carburetor)
668	691215	Spacer (Rotating Screen)
668A	691500	Spacer (Rotating Screen)
672	690234	Gasket-Carburetor Plate
691	790574	Seal-Governor Shaft
697	690372	Screw (Drive Cap)
703	691010	Clip
718	690959	Pin-Locating
729	797454	Clip-Wire
741	690980	Gear-Timing
742	690328	Retainer-E Ring
750	796208	Screw (Oil Pump Cover)
783	695708	Gear-Pinion
789	796860	Harness-Wiring
789A	796914	Harness-Wiring
798	697890	Screw (Rocker Arm)
801	691283	Cap-Drive
802	691286	Cap-End
829	796867	Hose-Oil Cooler
842	691031	Seal-O Ring (Dipstick Tube)
847	499602	Dipstick/Tube Assembly
850	100106	Sealant-Liquid

PARTS LIST

Craftsman Engine Model 49M777-0853-G5 For Model 247.289841

Ref. No.	Part No.	Description
851	493880s	Terminal-Spark Plug
865A	792286	Cover-Air Guide (Valley)
868	690968	Seal-Valve
883	690970	Gasket-Exhaust
914	691127	Screw (Rocker Cover)
918	797408	Hose-Vacuum (Rocker Cover)
918A	799160	Hose-Vacuum (EVAP System)
943	796222	Seal-O Ring (Oil Pump Cover)
947	798779	Solenoid-Fuel
964	799159	Cap-Connector
965	796221	Cover-Oil Pump
967	792303	Filter-Pre Cleaner
968	795120	Cover-Air Cleaner
975	798778	Bowl-Fuel
987	691000	Seal-Throttle Shaft
1005	791236	Fan-Flywheel
1017	796214	Screen-Oil Pump
1022	690971	Gasket-Rocker Cover
1023	793146	Cover-Rocker (Cylinder 1)
1023A	499600	Cover-Rocker (Cylinder 2)
1024	796220	Pump-Oil
1026	690981	Rod-Push (Steel) (Exhaust)
1026A	690982	Rod-Push (Aluminum) (Intake)
1027	696854	Filter-Oil
1028	796864	Adapter-Oil Filter
1029	690972	Arm-Rocker
1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)
1040	791237	Plate-Trim
1051	691265	Ring-Retaining
1054	280275	Tie-Cable
1058	278776	Operator's Manual
1059	698516	Kit-Screw/Washer (Alternator)
1070	791680	Screw (Flywheel Fan)
1090	691293	Retainer-Brush
1095	796920	Gasket Set-Valve
1000	791959	Pivot-Rocker Arm
1119	691183	Screw (Alternator)
1124	841653	Seal-O Ring (Fuel Transfer Tube)
1124A	690988	Seal-O Ring (Fuel Transfer Tube)
1126	690661	Screw (Fuel Transfer Tube)

Ref. No.	Part No.	Description
1127	695407	Screw (Float Bowl)
1128	690990	Screw (Carburetor Nozzle)
1169	690990	Screw (Carburetor Cover Plate)
1329	49M877-1047-G5	Replacement Engine
1330		Repair Manual (Not Available At This Printing)
1366	796866	Diverter-Oil Cooler
1373	695629	Screw (Oil Cooler Bracket)
1374	796863	Seal-O Ring (Oil Cooler Diverter)
1436	796918	Motor-Stepper/Bracket
1437	699891	Screw (Stepper/Bracket Motor)
1438	796532s	Module-Electronic Choke
1439	690635	Screw (Thermistor Wire Assembly)

Engine Gasket SetKey No. 358
 Valve Gasket Set Key No. 1095
 Carburetor Overhaul Kit Key No. 121

LABELS

 
777123379




777D14493




777123356

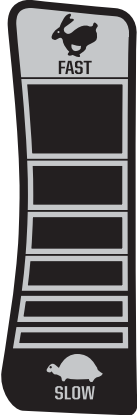

777123323

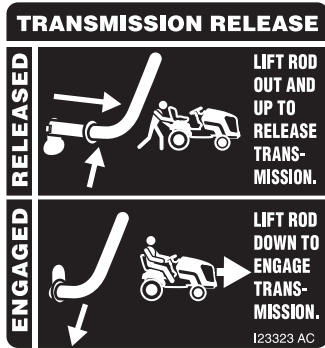 

777X43688

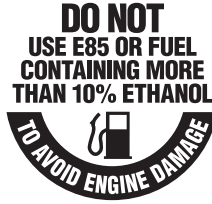 

777D14480



777S30503



 
777X44429



777S33183




777122265

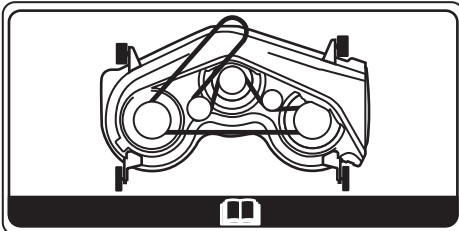

777S33660

 777123357

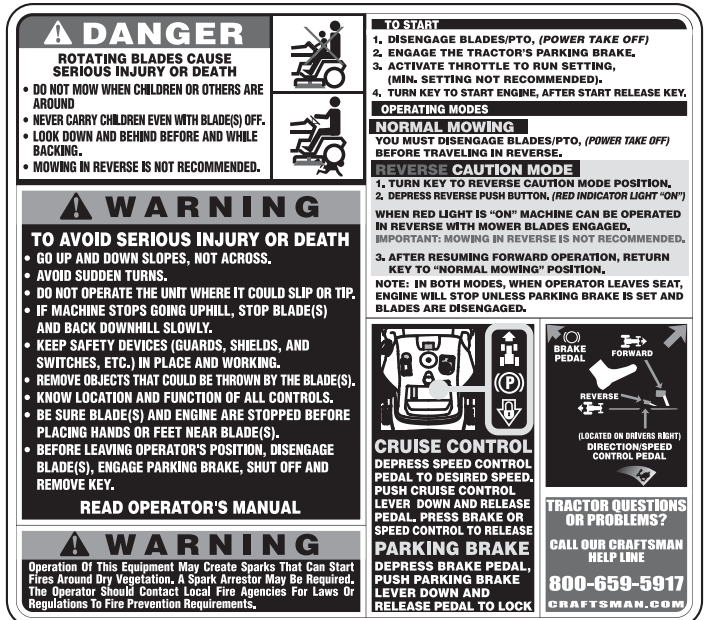

777D14486



777D14487

