

Operator's Manual

 
CRAFTSMAN®

4-Cycle

Lawn Edger

Model No. 316.773800

INCREDI-PULL™
UNBELIEVABLE STARTING EASE™

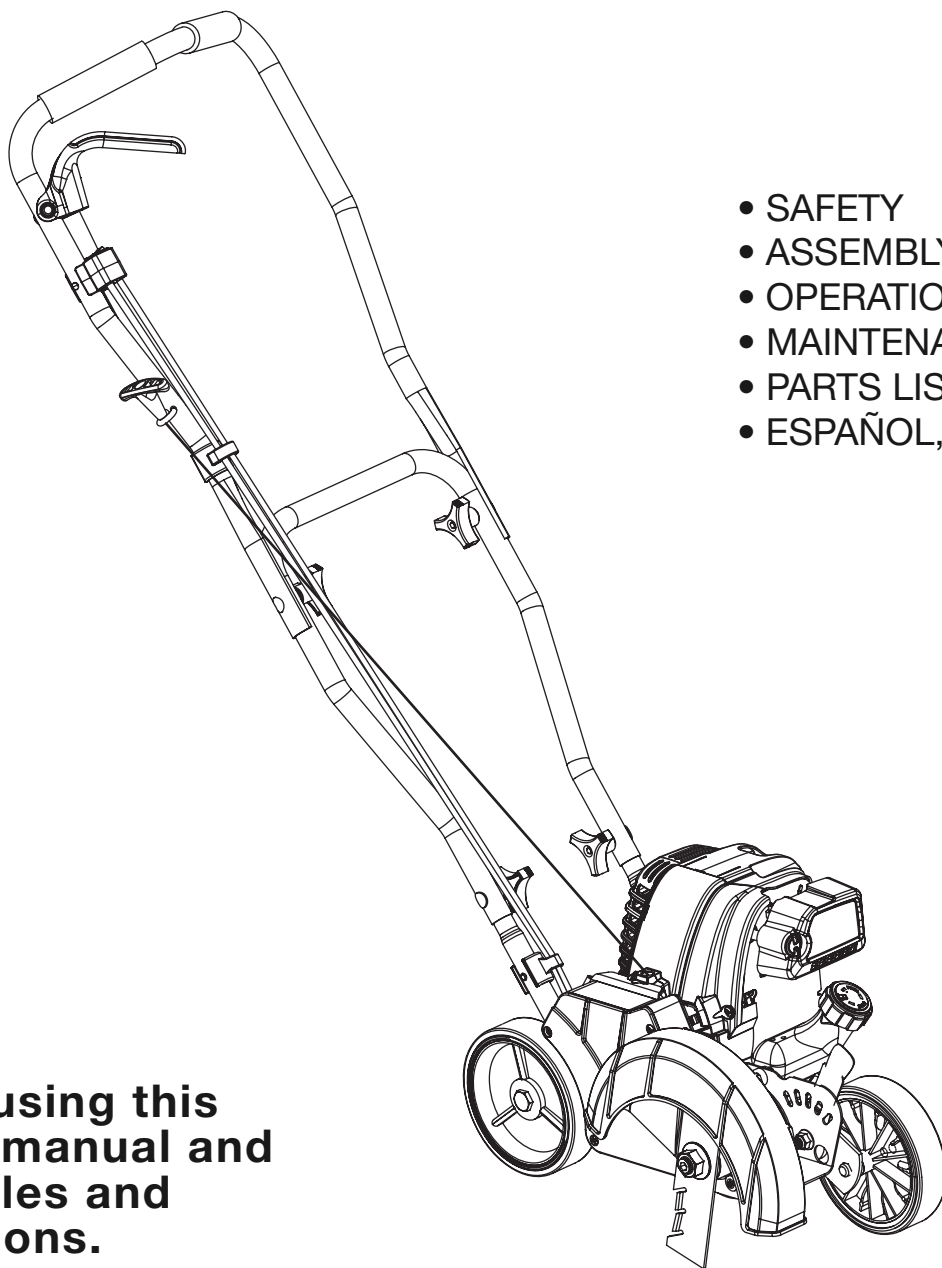

- SAFETY
- ASSEMBLY
- OPERATION
- MAINTENANCE
- PARTS LIST
- ESPAÑOL, P. 13

 
CAUTION: Before using this product, read this manual and follow all safety rules and operating instructions.

Sears Brands Management Corporation, Hoffman Estates, IL 60179 U.S.A.


Visit our website: www.craftsman.com

REPLACEMENT PARTS - MODEL 316.773800

4-CYCLE LAWN EDGER

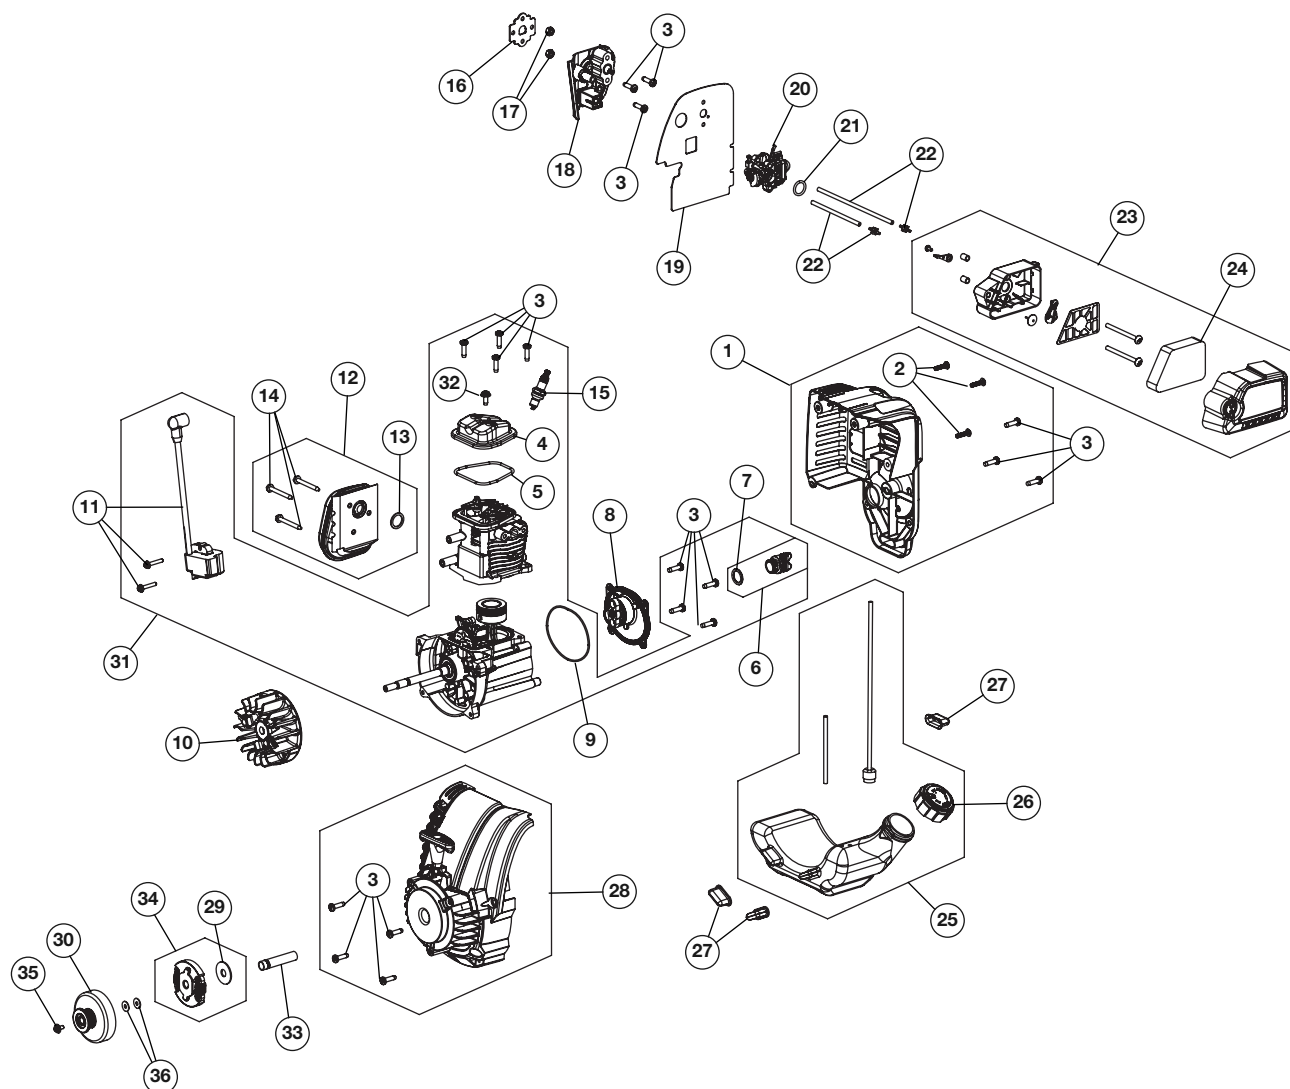

Item	Part No.	Description	Item	Part No.	Description
1	753-06134	Engine Cover Assembly (includes 2 & 3)	19	753-05366	Carburetor Gasket
2	753-04595	Cover Screw	20	753-06258	Carburetor w/Primer
3	753-05377	Starter Screw	21	791-181751	O-Ring
4	753-05901	Rocker Cover	22	753-05253	Screw
5	753-05902	Rocker Cover O-Ring	23	753-06541	Air Cleaner Cover Assembly (includes 24)
6	753-05408	Oil Plug (includes 7)	24	753-05996	Air Filter
7	791-182290	Oil Plug O-Ring	25	753-06240	Fuel Tank Assembly w/Fuel Lines (includes 26)
8	753-06111	Crankcase Cover	26	753-1229	Fuel Cap
9	753-05238	Crankcase Cover O-ring	27	753-05259	Fuel Tank Pads
10	753-06221	Flywheel Assembly	28	753-06651	Starter Housing Assembly (includes 3)
11	753-05836	Module Assembly	29	791-182396	Washer
12	753-05245	Muffler Assembly (includes 13 & 14)	30	753-06573	Clutch Drum w/Pulley
13	753-05244	Muffler Gasket	31	753-06663	Shortblock Assembly (includes Crankcase, Cylinder, 3-7, 9, 11 & 15)
14	753-05246	Muffler Screw	32	791-181025	Screw
15	753-05784	Spark Plug	33	753-05078	Spacer
16	753-05247	Insulator Gasket	34	753-1238	Clutch (includes 29)
17	753-05248	Nut	35	791-182468	Screw
18	753-05249	Insulator	36	791-182569	Washer

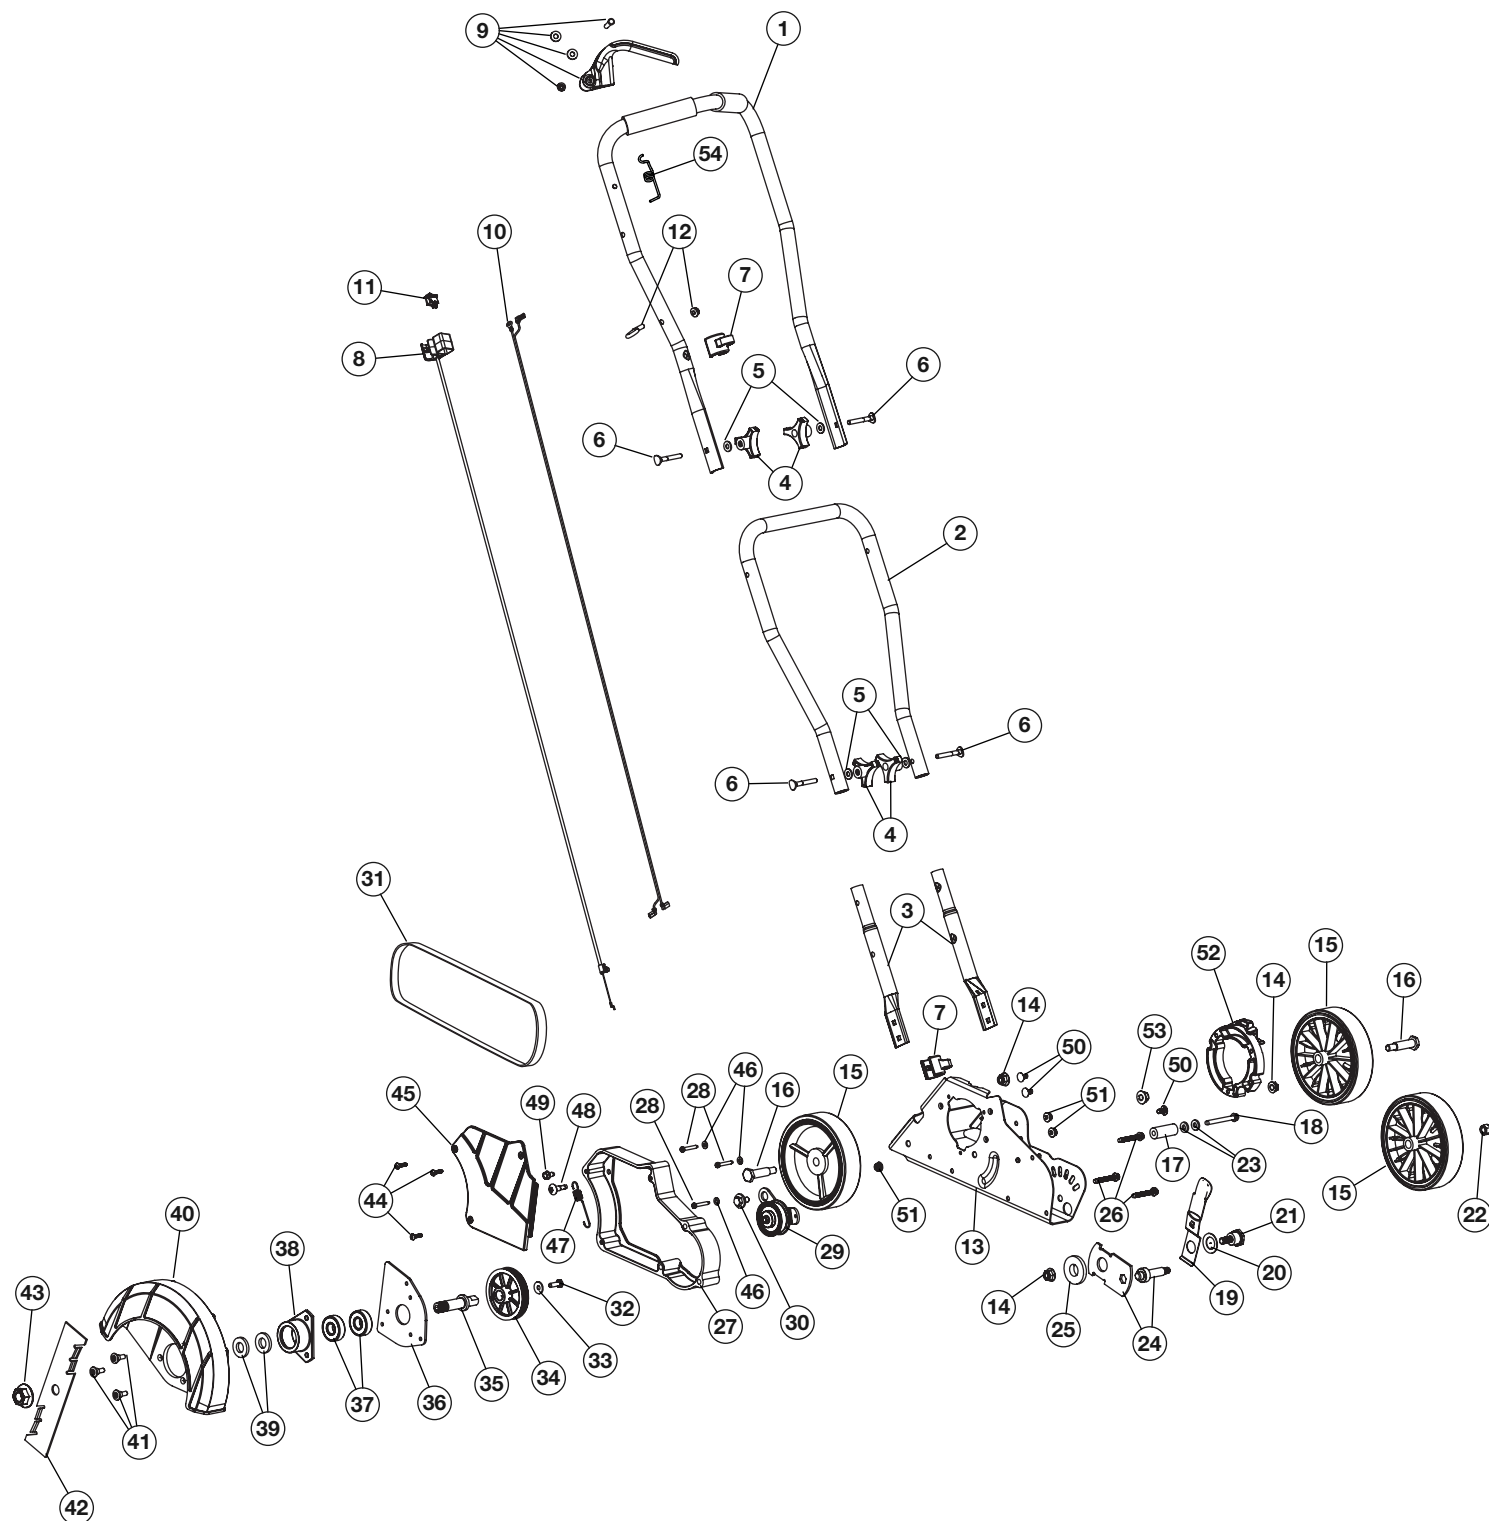 REPLACEMENT PARTS - MODEL 316.773800
4-CYCLE LAWN EDGER

PARTS LIST

REPLACEMENT PARTS - MODEL 316.773800 4-CYCLE LAWN EDGER

<u>Item</u>	<u>Part No.</u>	<u>Description</u>
1	753-06542	Upper Handle
2	753-06543	Middle Handle
3	753-06544	Handle Extension
4	791-182677	Handle Knob
5	791-182678	Washer
6	791-182899	Bolt
7	753-04429	Cable Guide
8	753-06546	Throttle Cable
9	753-06545	Throttle Lever w/Hardware
10	791-182665	Lead Wire
11	791-182405	On/Off Switch
12	753-05524	Starter Rope Guide
13	753-06547	Edger Frame
14	753-05525	Lock Nut
15	753-05530	Wheel
16	753-05529	Wheel Bolt
17	753-05556	Spacer
18	753-05538	Spacer Screw
19	753-05531	Height Adjustment Lever Assembly
20	753-05532	Washer
21	753-05534	Shoulder Screw
22	753-05535	Nut
23	753-05646	Washer
24	753-05536	Pivot Arm
25	753-06287	Height Adjustment Spacer
26	753-04202	Spindle Plate Screw
27	753-06556	Spindle Spacer

<u>Item</u>	<u>Part No.</u>	<u>Description</u>
28	753-06559	Screw
29	753-05540	Idler Pulley Assembly
30	753-05541	Shoulder Screw
31	753-05560	Belt
32	753-05554	Screw
33	753-05555	Washer
34	753-05542	Pulley
35	753-05543	Blade Spindle
36	753-05544	Spindle Plate
37	753-05550	Bearing
38	753-05545	Bearing Cup
39	753-05546	Washer
40	753-05547	Blade Guard
41	753-05548	Screw
42	753-06561	Edger Blade
43	753-05549	Nut
44	753-04595	Screw
45	753-05552	Belt Cover
46	791-182451	Washer
47	753-06562	Spring
48	753-06563	Bolt
49	753-05528	Screw
50	753-06565	Bolt
51	753-05383	Nut
52	753-06566	Spacer
53	753-06577	Nut
54	753-06636	Spring