



Model 16CG5AMQ

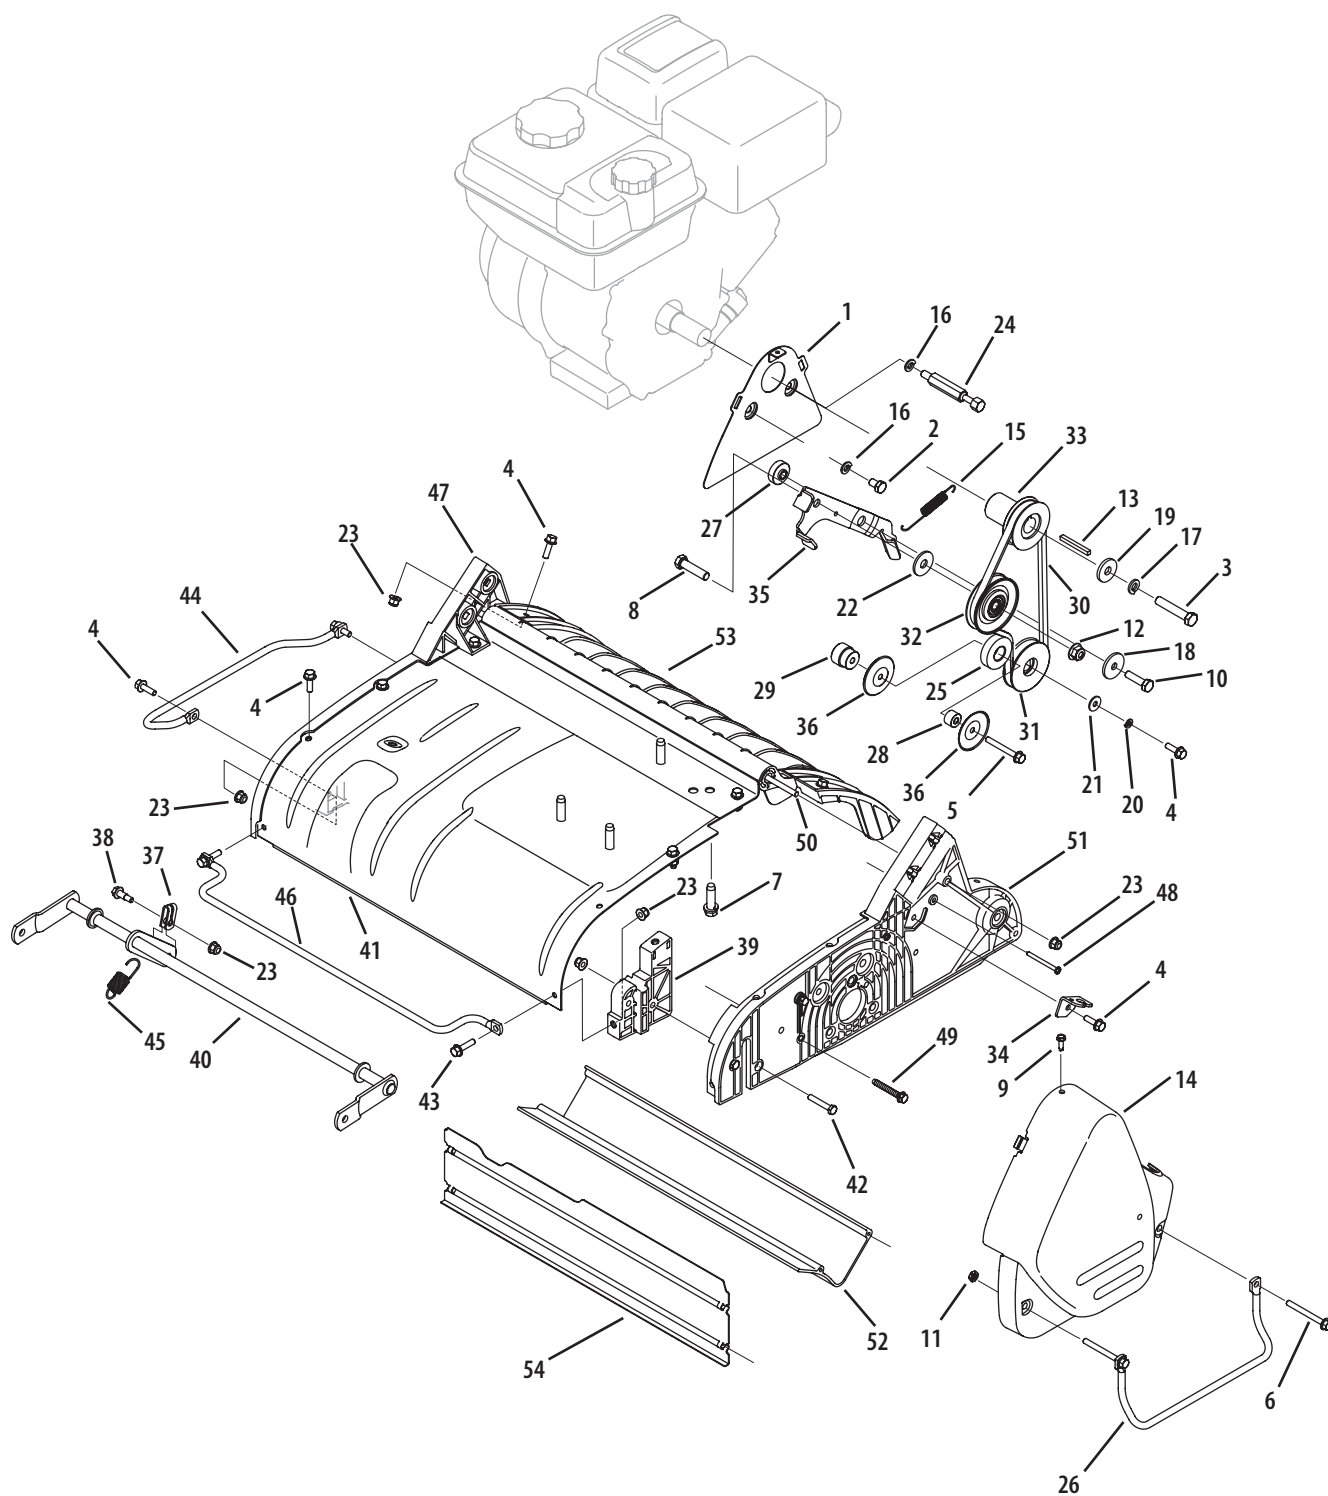


Ref.	Part Number	Description
1	681-04035-0637	Pulley Guard Assembly
2	710-0107	Hex Screw, 5/16 - 24
3	710-0151	Hex Screw, 3/8 - 24
4	710-04189	Screw, M6 - 1 x 20.0
5	710-04192	Screw, M6 - 1
6	710-04866	Screw, M6 - 1
7	710-0502A	Sems Screw, 3/8 - 16
8	710-0520	Hex Screw, 3/8 - 16
9	710-1237	Screw, .625
10	710-1683	Hex Screw, M8 - 1.25
11	912-0298	Jam Nut, 1/4 - 20
12	712-04065	Flange Lock Nut, 3/8 - 16
13	914-04029	Square Key, 3/16 x 1.75
14	731-05123	Pulley Cover
15	732-04224	External Spring
16	936-0119	Lock Washer, 5/16
17	936-0169	Lock Washer, 3/8
18	736-0343	Flat Washer, .330 x 1.25 x .120
19	736-04005	Flat Washer, .395 x 1.12 x .14
20	736-0648	Lock Washer
21	736-0685	Flat Washer, 6.4 ID
22	736-0702	Flat Washer, 10.5 ID
23	712-0713	Flange Lock Nut
24	738-04114A	Belt Retainer Screw
25	941-0124	Ball Bearing
26	747-05100	Bumper Side
27	750-04233A	Idler Spacer

Ref.	Part Number	Description
28	750-04391	Bearing Spacer, 6.6 x 16.7 x 11.6
29	750-04394	Idler Spacer, 6.5 x 22.3 x 23
30	954-04028	V Belt
31	756-04112A	Pulley
32	756-04133	Pulley, 2 x 2.75 x .625
33	756-04275	Pulley, .75 ID x 2.14
34	781-04053	Cable Bracket Mount
35	781-04089	Idler Arm
36	781-04096	Washer Bearing
37	781-04064	Cable Retainer Bracket
38	738-04079	Shoulder Spacer, 7.13 x 11.50
39	681-04014A	Wheel Cradle Bracket Assembly
40	981-04105	Height Adj. Bracket Assembly
41	781-04263-0721	Frame
42	710-04197	Screw, M6-1 x 35.0
43	710-04865	Screw, M6 - 1 x 25.0
44	747-05098-0637	Right Hand Bumper Side
45	732-04518	Spring, 17.6mm x 54.0mm
46	747-05097-0637	Front Bumper
47	681-04162	Right Hand Frame Assembly
48	710-04384	Tap Screw
49	710-1026	Screw, 1/4 - 20
50	711-04204A	Deflector Mounted Rod
51	681-04161	Left Hand Frame Assembly
52	731-05049	Rear Baffle
53	731-06907	Deflector
54	781-04051A-0637	Baffle

Model 16CG5AMQ

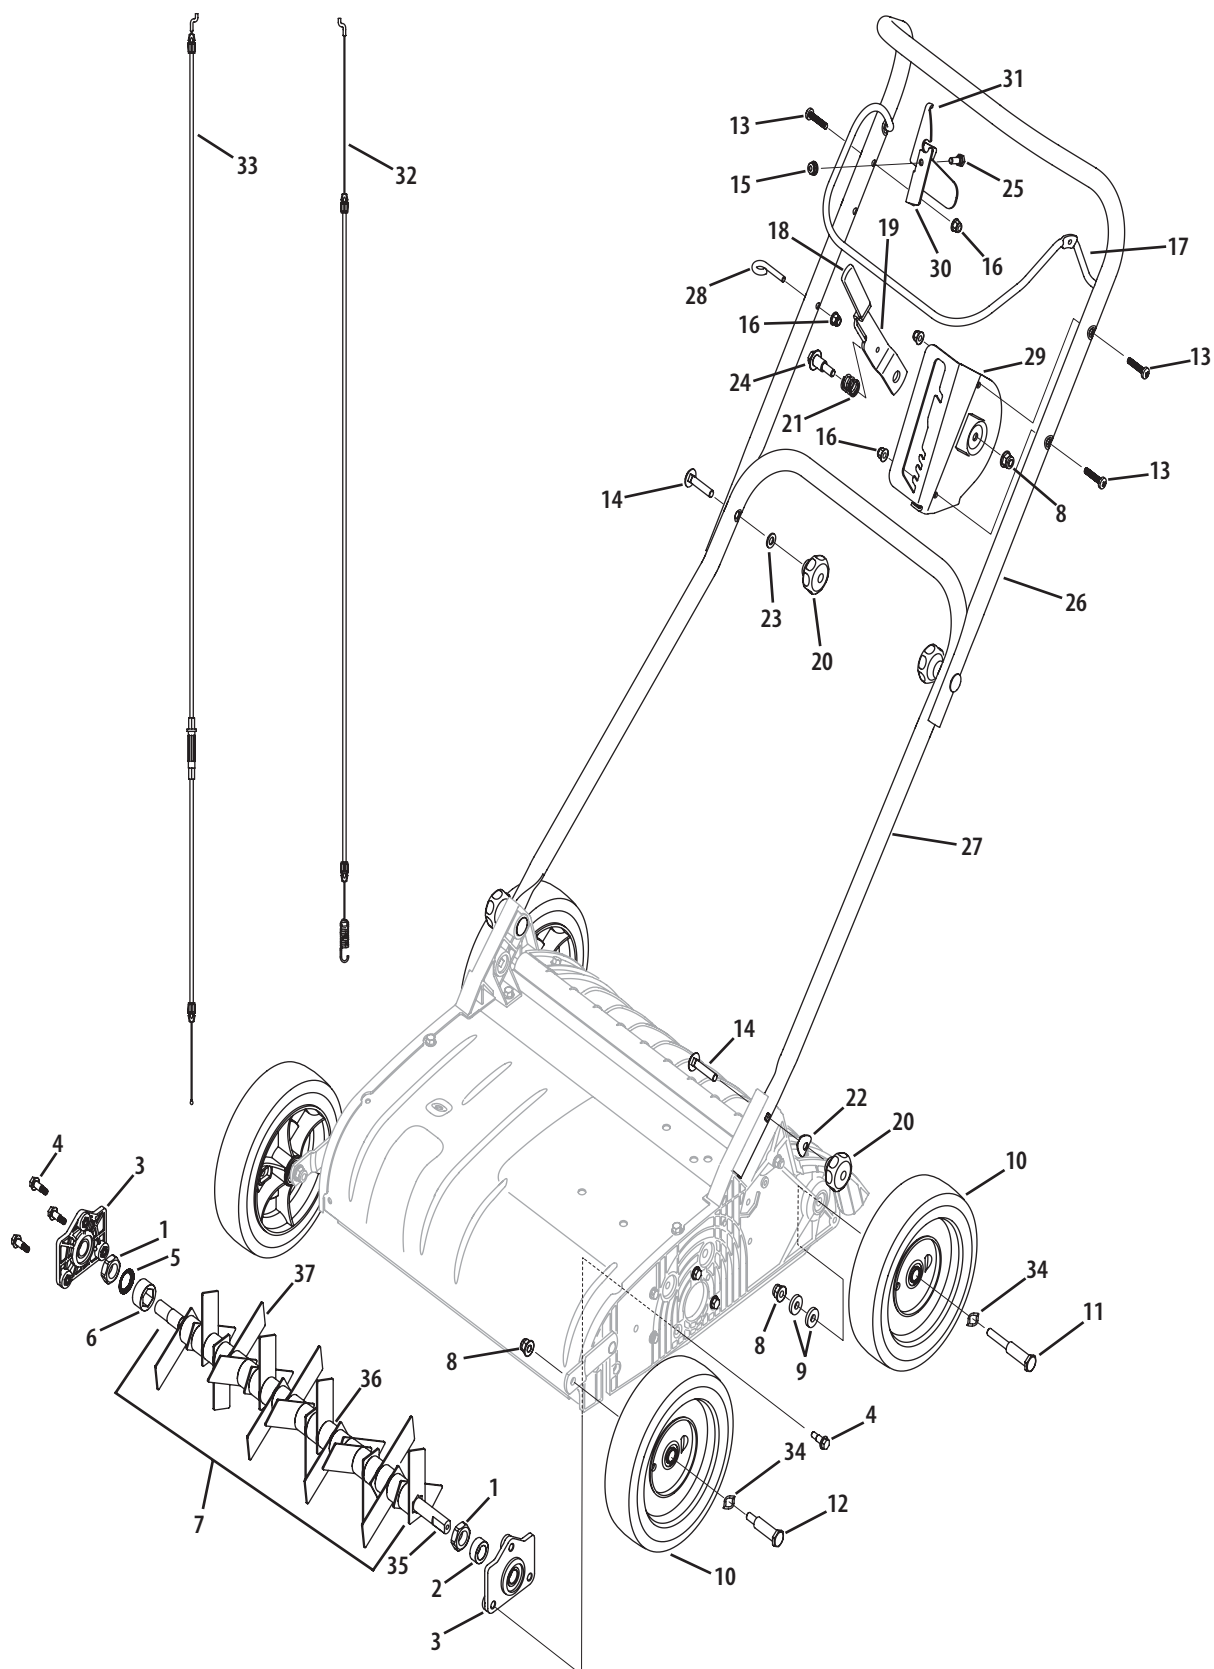

Ref.	Part Number	Description
1	712-04053A	Nut, M18 x 1.5
2	750-04201	Bearing Spacer
3	681-04018A	Bearing Assembly
4	738-04079	Should Screw, 7.13 x 11.5
5	736-04114	Safety Washer
6	750-04196	Hex Spacer Shaft
7	681-04164	Blade Assembly
8	712-0714	Flange Lock Nut, M8 - 1.25
9	736-04176	Flat Washer, 8.20 x 20.93 x 4.00
10	734-2004A	Wheel, 8 x 2.125
11	738-04384	Shoulder Screw, 12.63 x 37.98
12	738-04385	Shoulder Screw, 12.63 x 37.98
13	710-04283	Spacer, M6 - 1.30
14	710-1700	Carrier Spacer, M8 - 1.25
15	712-04064	Flange Lock Nut, 1/4 - 20
16	712-0713	Flange Lock Nut, M6 - 1
17	747-04861-0637	Bail
18	720-0270A	Handle Grip
19	781-04258-0637	Height Adjustment Lift Handle
20	720-04041	Turning Knob, M8 x 1.25
21	732-04190A	Compression Spacer, .087 x .715 x .688
22	936-0451	Saddle Washer, .320 x .93 x .060
23	736-0700	Flat Washer, 8.4 x 16 x 1.60
24	738-04092	Shoulder Spacer, 11.87 x 15.5
25	938-0952A	Shoulder Bolt, .375 x .125
26	749-04464-0637	Upper Handle
27	749-04117B-0637	Lower Handle
28	782-7627A	Eye Bolt
29	781-04261-0637	Height Adjustment Bracket Mount
30	781-04267-0637	Bail Interlock Bracket Mount
31	781-04268-0637	Bail Interlock Pivot Bracket
32	946-04444	Clutch Cable
33	946-04443	Height Cable Adjustment
34	736-0504	Wave Washer
35	911-04146	40 CM Shaft
36	750-04190	Fixed Blade Spacer
37	781-04016B	Fixed Blade

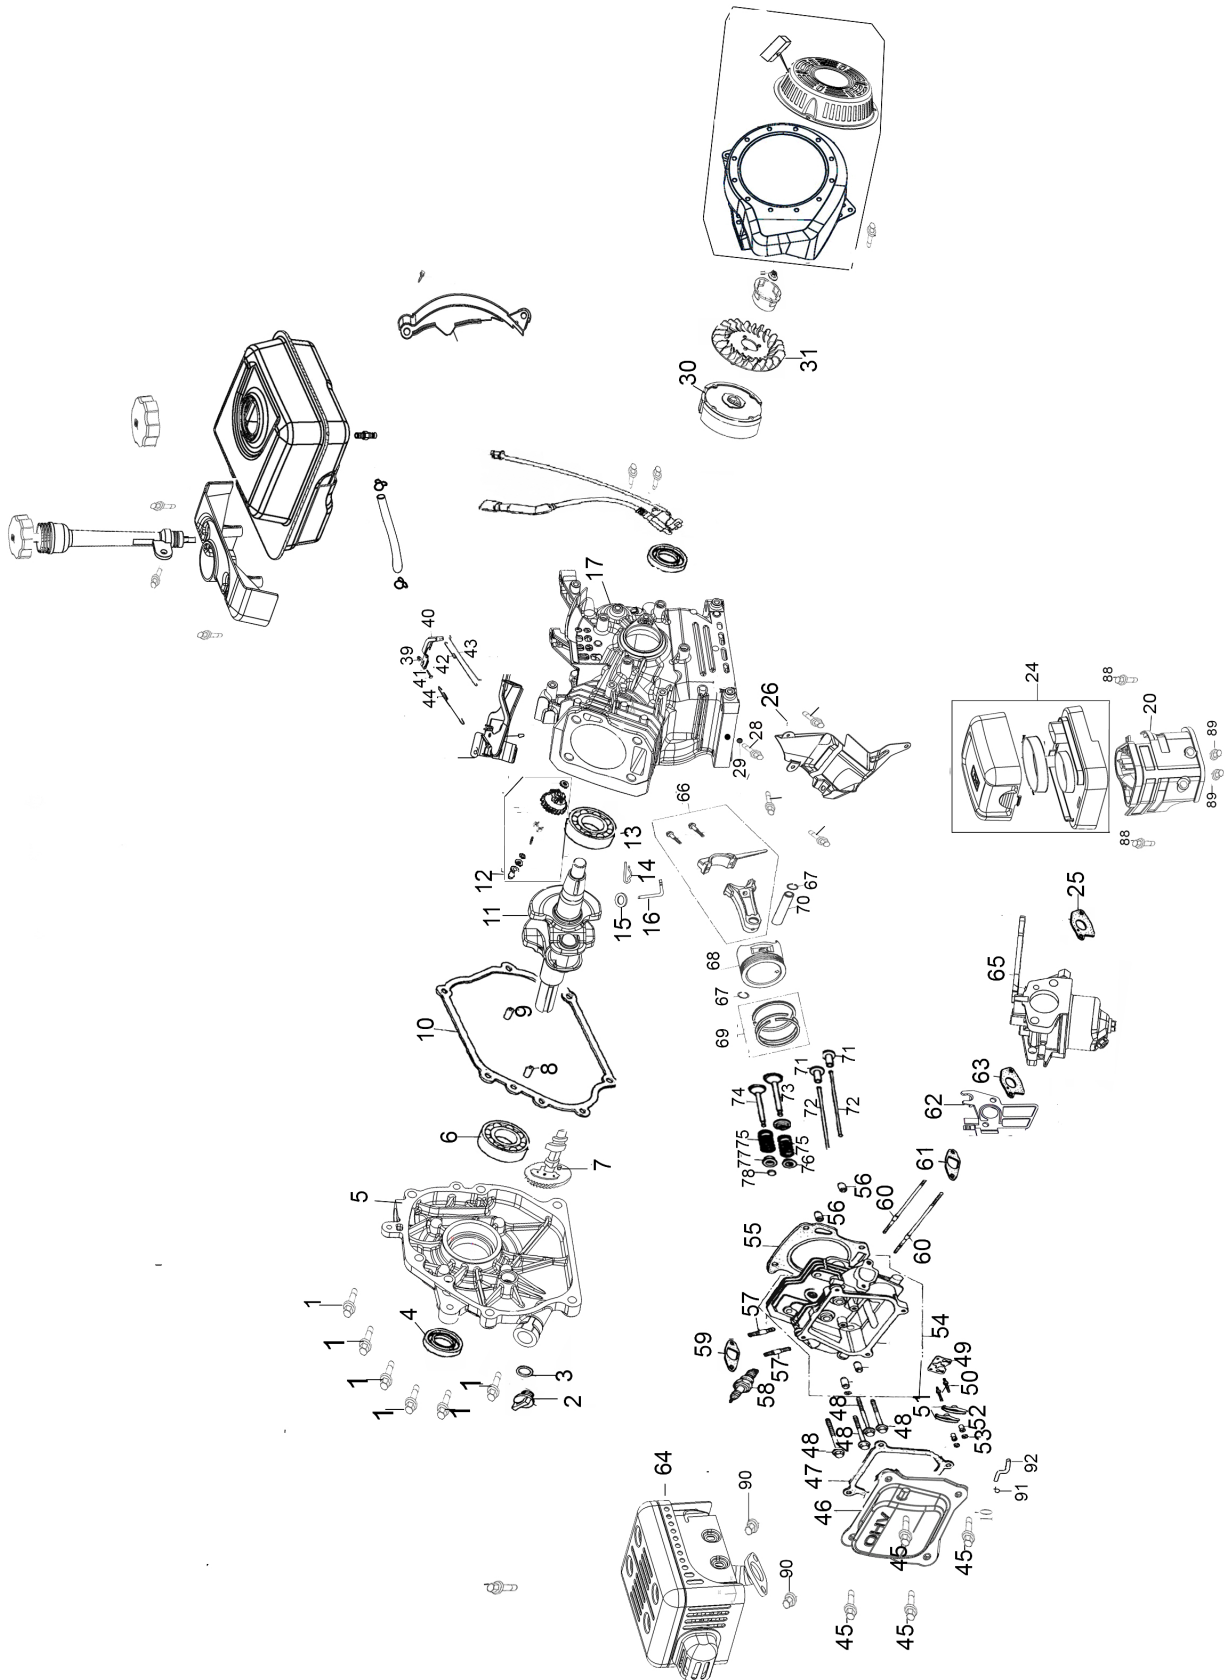

Part Number	Description	Ref.
951-10902 Short Block	Bolt Flange ×28	1
	Dipstick Comp	2
	O-Ring	3
	Oil Seal 25×41.25×6	4
	Cover Comp Left Crankcase	5
	Bearing 6205	6
	Camshaft Assy.	7
	Pin Dowel 7×14	8
	Pin Dowel 9×14	9
	Gasket Case Cover	10
	Crankshaft Comp	11
	Governor Gear Kit	12
	Radial Ball Bearing(6205)	13
	Pin Lock	14
	O-Ring	15
	Governor Arm	16
	Crankcase Comp.	17
	Oil Seal 22×35×7	21
	Packing	25
	Bolt Drain Plug	28
	Washer.10×16×1.5	29
	Gasket Cover Head	47
	Gasket, Cylinder Head	55
	Packing	59
	Packing,Insulator	61
	Packing,Insulator	62
	Connecting Rod Comp	66
	Clip Piston Pin 18mm	67
	Piston	68
	Ring Set Comp Piston	69
	Pin Piston	70
	Lifter Valve	71
951-10922 Gasket Kit External	O-Ring	3
	Bolt Flange 6×14	45
	Cover Comp Head	46
	Gasket Cover Head	47
	Bolt Flange 8×50	48
	Gasket Cylinder Head	55
	Packing,Insulator	61
951-10923	Packing	63
	O-Ring	3

Part Number	Description	Ref.
Gasket Kit Complete	Oil Seal 25×41.25×6	4
	Gasket Case Cover	10
	O-Ring	15
	Oil Seal 22×35×7	21
	Packing	25
	Washer.10×16×1.5	29
	Gasket Cover Head	47
	Gasket Cylinder Head	55
	Packing	59
	Packing,Insulator	61
951-10903 Cylinder Head Assembly	Packing,Insulator	62
	Packing	63
	Gasket, Cover Head	47
	Plate Push Rod Guide	49
	Bolt Pivot	50
	Arm Valve Rocker	51
	Adjusting Nut ,Valve	52
	Nutt Pivot Locking	53
	Gasket Cylinder Head	55
	Packing	59
	Packing,Insulator	61
	Packing,Insulator	62
	Packing	63
	Valve Inlet	73
	Valve Exhaust	74
	Spring Valve	75
	Intake Valve Spring Seat	76
	Exhaust Valve Spring Seat	77
951-10918 Fuel Line Kit	Adjuster Ex. Valve	78
	Clip,Tube	80
951-10912 Valve Kit	Tube,Fuel	81
	Valve Inlet	73
951-11157 Crankcase Kit	Valve Exhaust	74
	Radial Ball Bearing(6205)	13
	O-Ring	15
	Crankcase Comp.	17
951-11158 Oil Plug Assembly	Oil Seal 22×35×7	21
	Dipstick Comp	2
	O-Ring	3

Model 161-VH

Part Number	Description	Ref.
951-11155	Bolt Flange x28	1
Crankcase Cover Kit	Dipstick Comp	2
	O-Ring	3
	Oil Seal 25x41.25x6	4
	Cover Comp Left Crankcase	5
	Bearing 6205	6
	Gasket Case Cover	10
	Radial Ball Bearing(6205)	13
	Oil Seal 22x35x7	21
951-11156	Oil Seal 25x41.25x6	4
Crankshaft Kit	Bearing 6205	6
	Crankshaft Comp	11
	Radial Ball Bearing(6205)	13
	Oil Seal 22x35x7	21
951-10925	Gasket, Cover Head	47
Cylinder Head Kit	Bolt	48
	Gasket, Cylinder Head	55
710-04920	Bolt	1
710-04092	Dowel Pin	8
715-04089	Dowel Pin	9
714-04074	Locking Pin	14
951-11102	Flywheel Baffle	18
710-04918	Flange Bolt	19
951-10806	Intake Heatening Pipe Seat	20
951-10916	Ignition Coil	22
710-04919	Flange Bolt	23
951-10818	Air Cleaner Housing Assembly	24
951-11151	Air Baffle	26
710-04906	Drain Plug	28
736-04440	Washer	29
951-10908	Flywheel	30
951-10910	Cooling Fan	31
951-10911	Starter Cup	32
712-04209	Flywheel Nut	33
951-11107	Fan Housing Cover	36
951-10914	Recoil Starter Assembly	37
710-04914	Bolt	38
712-04211	Nut	39
951-11106	Governor Arm	40

Part Number	Description	Ref.
710-04908	Bolt	41
951-10954	Throttle Return Spring	42
951-11152	Governor Rod	43
951-10915	Governor Return Spring	44
710-04916	Bolt	45
710-04922	Bolt	48
710-04902	Pivot Bolt	50
751-11123	Valve Adjusting Nut	52
751-11124	Pivot Locking Nut	53
715-04090	Dowel Pin	56
951-10657	Muffler Stud Assembly	57
951-10292	Spark Plug	58
710-04909	Stud Bolt	60
951-10901	Muffler Complete	64
951-10921	Carburetor Assembly	65
951-10913	Push Rod Kit	72
951-10651	Fuel Tank Filter	79
951-10920	Fuel Tank	82
951-11128	Engine Cover	83
710-04928	Bolt	84
951-10917	Cap Comp,Fuel	85
951-10656	Dipstick Tube	86
951-10655	Dipstick Assembly	87
710-04948	Bolt	88
710-04949	Bolt	89
712-04214	Flange Nut	90
726-04101	Hose Clamp	91
731-07059	Breather Hose	92
710-04950	Panel Bolt	93
712-04212	Nut	95
710-04927	Bolt	96
951-11071	Throttle Control Assembly	97
951-11067	Throttle Control Knob	98
951-10829	Spark Arrestor	99
951-10794	Air Cleaner	100
951-10307	Flywheel Key	101
951-11048	Carburetor Kit	
951-10826	Recoil Spring and Pulley	