


2 Style Hood

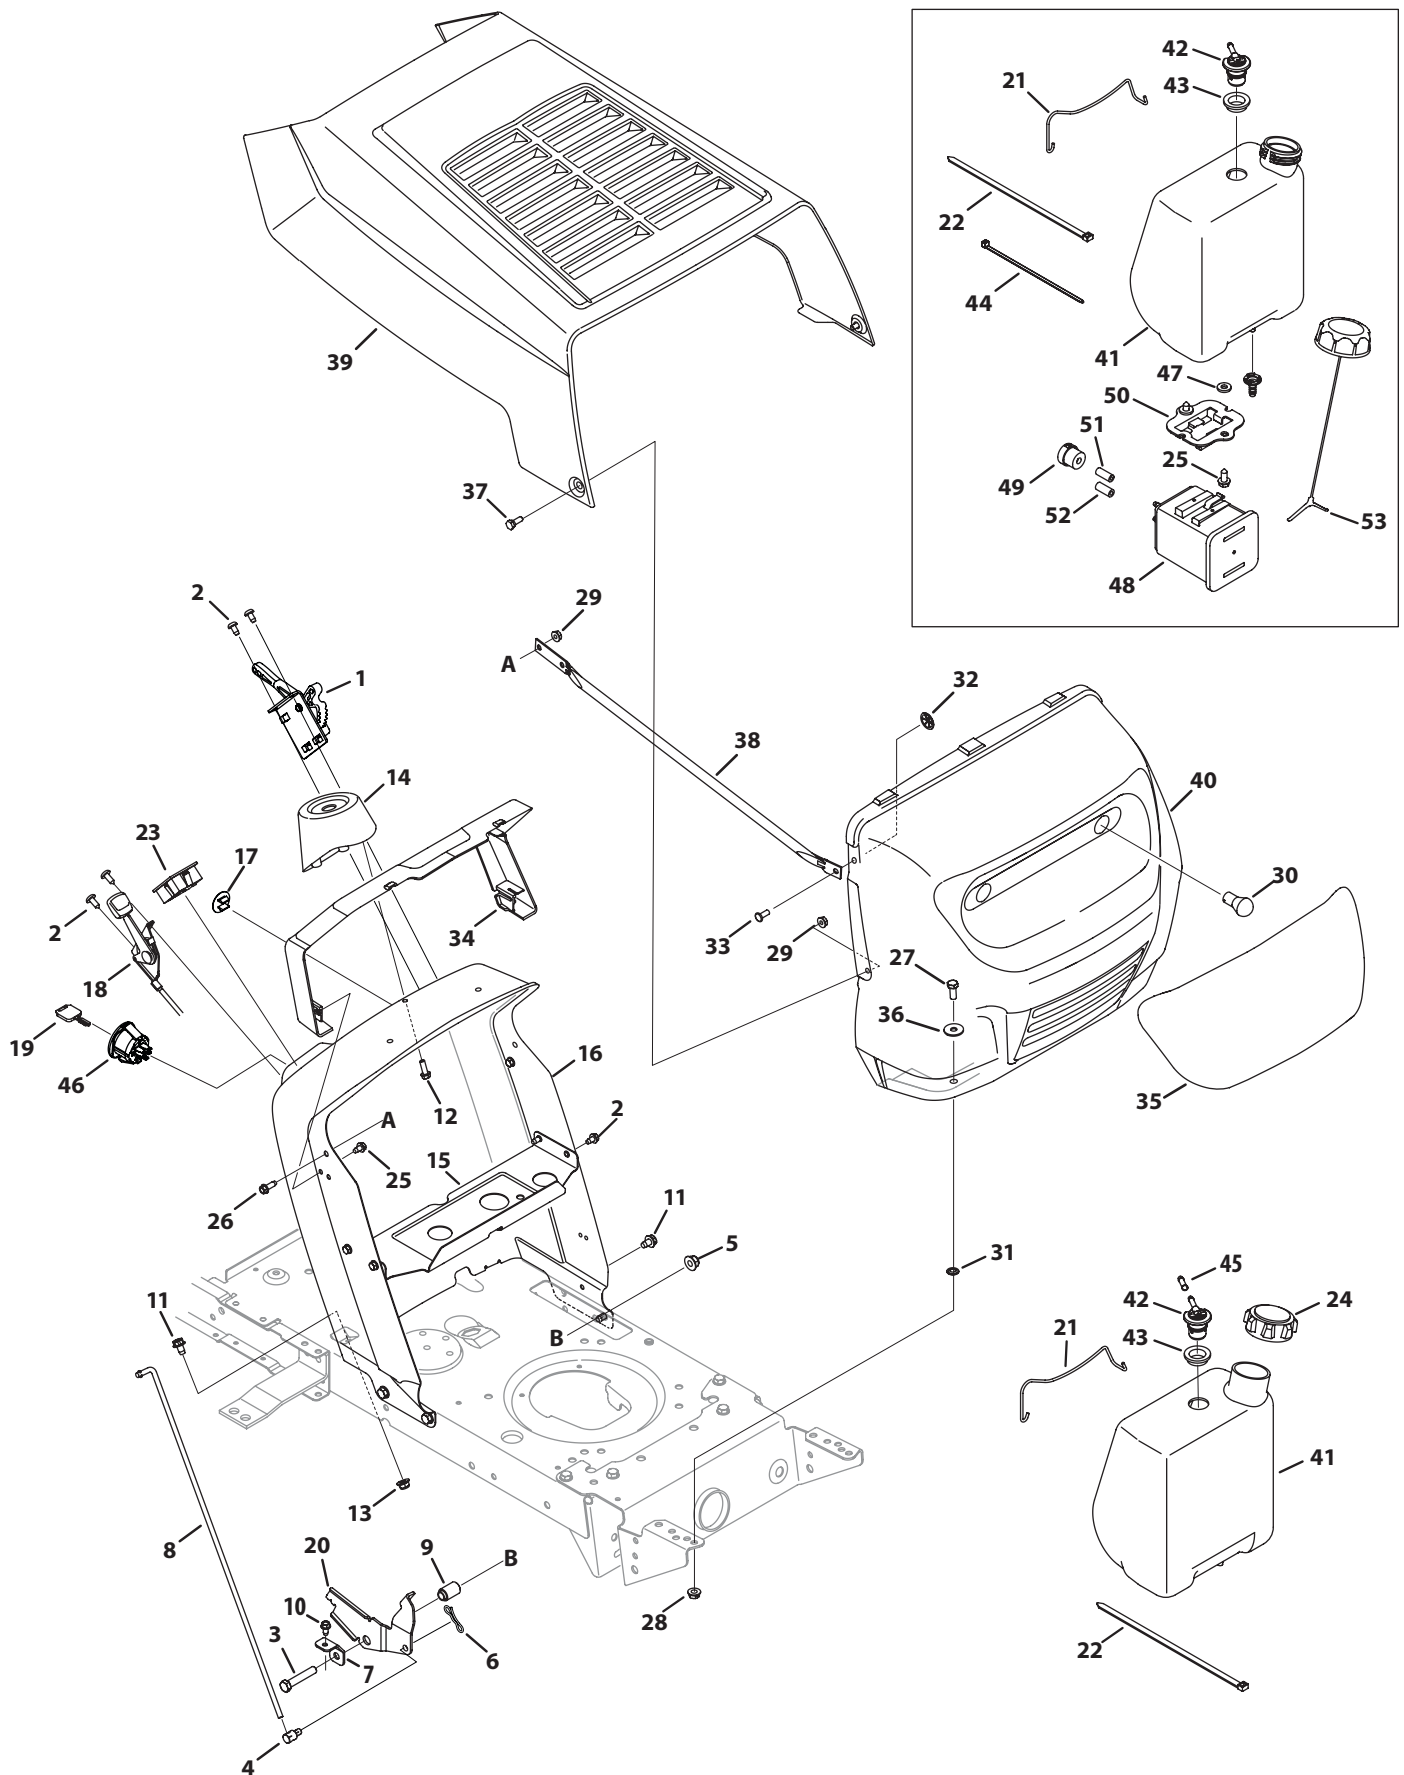


Ref.	Part Number	Description
1	983-04216	7-Speed Control Assembly
	983-04225	6-Speed Control Assembly
2	710-05070	Screw, 1/4-20 x .500
3	710-3144	Hex Screw, 3/8-16 x 2.0
4	711-0736	Ferrule, 1/4-20 x 1.00
5	710-04065	Flangelock Nut, 3/8-16
6	714-04040	Bow Tie Cotter Pin, 72
7	783-06823	Speed Latch Tab
8	747-04430	Speed Selector
9	750-04465B	Flange Spacer, .390 x .671 x 1.095
10	710-0599	Hex Washer Screw, 1/4-20 x .500
11	710-0604A	Screw, 5/16-18 x .625
12	710-05108	Screw, 1/4 x .750
13	712-04063	Flangelock Nut, 5/16-18
14	731-04945	Steering Support
15	783-04584A	Gas Tank Support Bracket
16	783-04873B	Dash, No RMC
	983-04889B	Dash, RMC
17	731-05265	Choke Plug
18	746-04364	Throttle/Choke Cable
19	925-1745A	Key
20	783-04862B	Speed Latch. RMC
	783-04903A	Speed Latch, No RMC
21	683-04448	Battery Assembly Rod
22	726-0230	Cable Tie
23	925-04156	Ammeter
24	751-0603A	Fuel Cap
	951-12179	Fuel Cap
25	710-04484	Screw, 5/16-18 x .750

Ref.	Part Number	Description
26	710-0642	Screw, 1/4-20 x .750
27	710-3008	Hex Screw, 5/16-18 x .75
28	712-04063	Flangelock Nut, 5/16-18
29	712-04064	Flangelock Nut, 1/4-20
30	925-0963	Miniature Lamp 12V Socket
31	726-0201	Speed Nut, .3125
32	926-04012	Push-On Nut, .25
33	728-0162	Flat Head Rivet, 1/4"
34	731-05012B	Dash
35	731-06042	Lens
36	736-3078	Flat Washer, .344 x 1.0 x .063
37	938-0952A	Shoulder Bolt, 1/4-20 x .375 x .125
38	749-04220	Grill Support Rod
39	783-04608	Hood
40	783-05656	Grill
41	751-0555B	1.5 Gallon Fuel Tank
	951-04304	1.36 Gallon Fuel Tank
42	751-12118	Rollover Valve
43	735-04081	Rubber Grommet, 23 x 3.55
44	725-0157	Cable Tie
45	751-12089-28	Hose Vent, 3/16
46	925-04659	Key Switch
47	936-3008	Flat Washer, .344 x .750 x .120
48	951-10589	5 Gallon Carbon Canister
49	951-10590	Vent Filter Canister
50	951-10610	Canister Adaptor Bracket
51	751-10749-30	Hose, Fuel, Low Perm., White
52	751-10750	Hose, Fuel, Low Perm., Yellow
53	951-10947	Fuel Cap, 2.25"

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Frame and PTO Lift

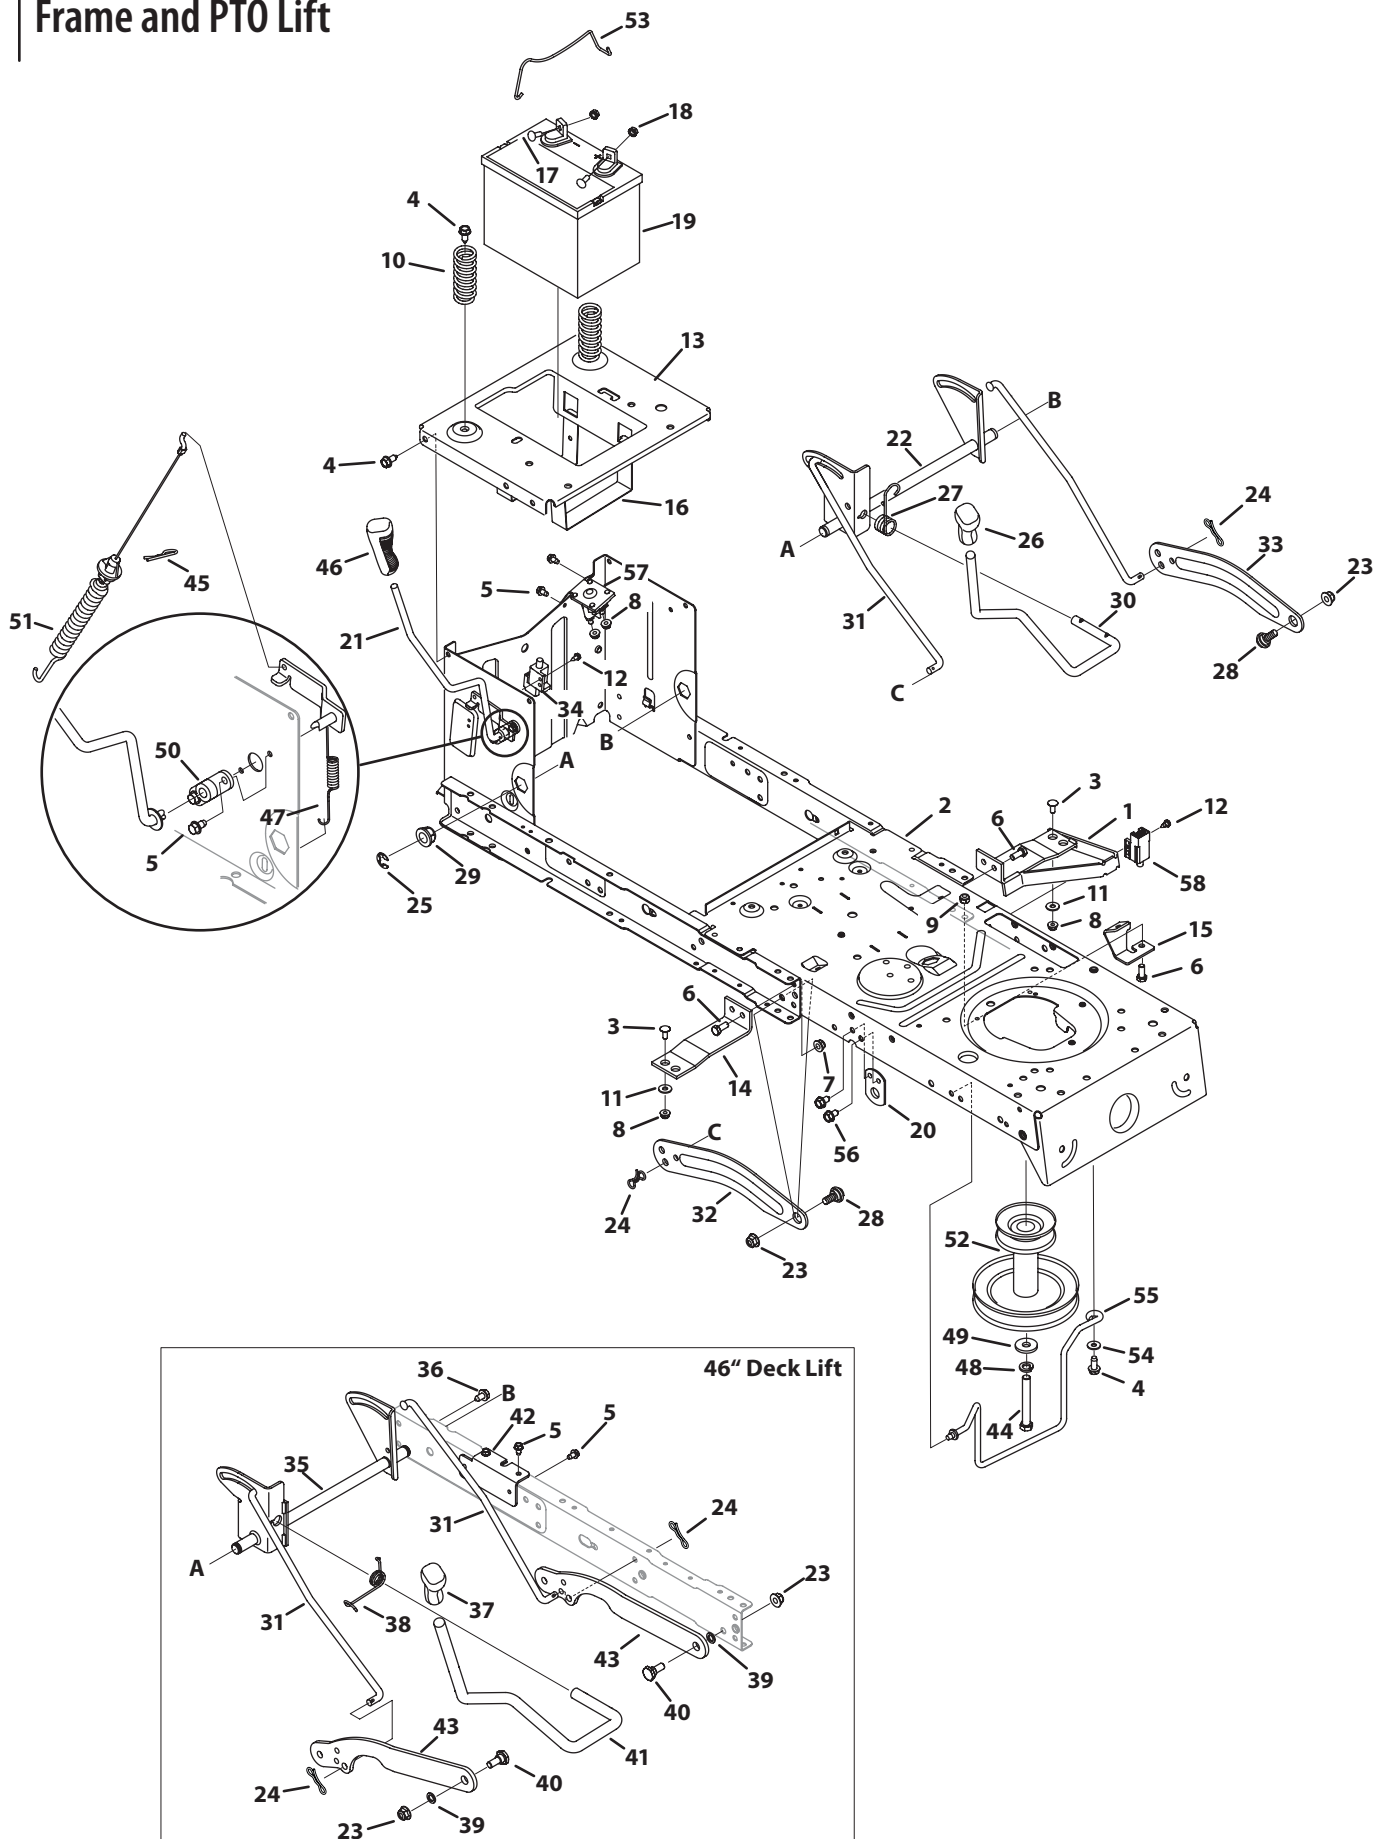


Ref.	Part Number	Description
1	683-04195	Support Bracket
2	683-04649	Frame Assembly
3	710-0134	Screw Carriage, 1/4-20 x .62
4	710-04484	Screw 5/16-18 x .750
5	710-0599	Screw, 1/4-20 x .500
6	710-3008	Hex Screw, 5/16-18 x .75
7	712-04063	Flangelock Nut, 5/16-18
8	712-04064	Flangelock Nut, 1/4-20
9	912-0429	Hexlock Nut, 5/16-18
10	732-04035	Compression Spacer, 1.28 x 3.125
11	736-0173	Flat Washer, .28 x .74 x .063
12	738-04237A	Shoulder Spacer, 10-32 x .500
13	783-04548D	Seat Frame Bracket
14	783-04637	Running Board Bracket
15	783-04753	Support Frame Bracket
16	783-04869A	Battery Bracket
17	710-04666	Hex Head Flange, 1/4-20 x .75
18	712-0271	Sems Nut, 1/4-20
19	925-1707D	230 CCA Battery
20	783-04536B	Support Bracket
21	647-04096	PTO Handle Assembly
22	683-04155A	Lift Assembly, 38/42"
23	712-04065	Flangelock Nut, 3/8-16
24	714-04040	Bow-tie Cotter Pin
25	716-0106A	E Ring
26	720-0311	Handle Grip, 1/2
27	732-04225	Torsion Spring
28	738-04130	Shoulder Bolt, 3/8-16 x .625 x .175
29	941-0225	Hex Flange Bearing
30	747-04282	Deck Lift Handle 38"
	747-05296	Deck Lift Handle 42"
31	747-04393	Lift Rod

Ref.	Part Number	Description
32	783-04494C	38/42" Lift Arm, RH
33	783-04711C	38/42" Lift Arm, LH
34	725-04363	Switch Interlock
35	683-04334	Lift Assembly, 46"
36	710-0604A	Screw, 5/16-18 x .625
37	720-0298	Handle Grip, 5/8
38	732-04438	Torsion Spring Handle, 46"
39	936-0140	Flat Washer, .385 x .62 x .063
40	938-0380	Shoulder Bolt, 3/8-16 x .500 x .270
41	747-04653	46" Lift Handle
42	783-05389A	Frame Brace Bracket
43	783-0678C	Lift Deck Link
44	710-04607	Hex Screw, 7/16-20 x 2.75, 46"
	710-04608	Hex Screw, 7/16-20 x 3.25, 38/42"
45	914-0145	Click Pin, .092 x 1.64
46	720-04049A	Handle Grip, 3/8
47	732-04276A	PTO Spring Extension
48	936-0171	Regular Duty Washer Lock, 7/16
49	736-0322	Flat Washer, .450 x 1.250 x .164
50	741-04119A	PTO Bearing
51	946-04173C	Deck Engage Cable
52	756-04207A	Engine Pulley, 3.39 x 6.12, 46"
	756-04196A	Engine Pulley, 3.39 x 6.12, 38/42"
53	683-04448	Battery Hold Down Rod
54	936-0300	Flat Washer, .406 x .875 x .059
55	747-04332A	38" Belt Keeper
	747-04857	42" Belt Keeper
	683-04414	46" Belt Keeper
56	710-0604A	Screw, 5/16-18.0 x .625
57	725-04439	12V Solenoid
58	925-04039	Screw Mount Interlock Switch

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Front End Steering

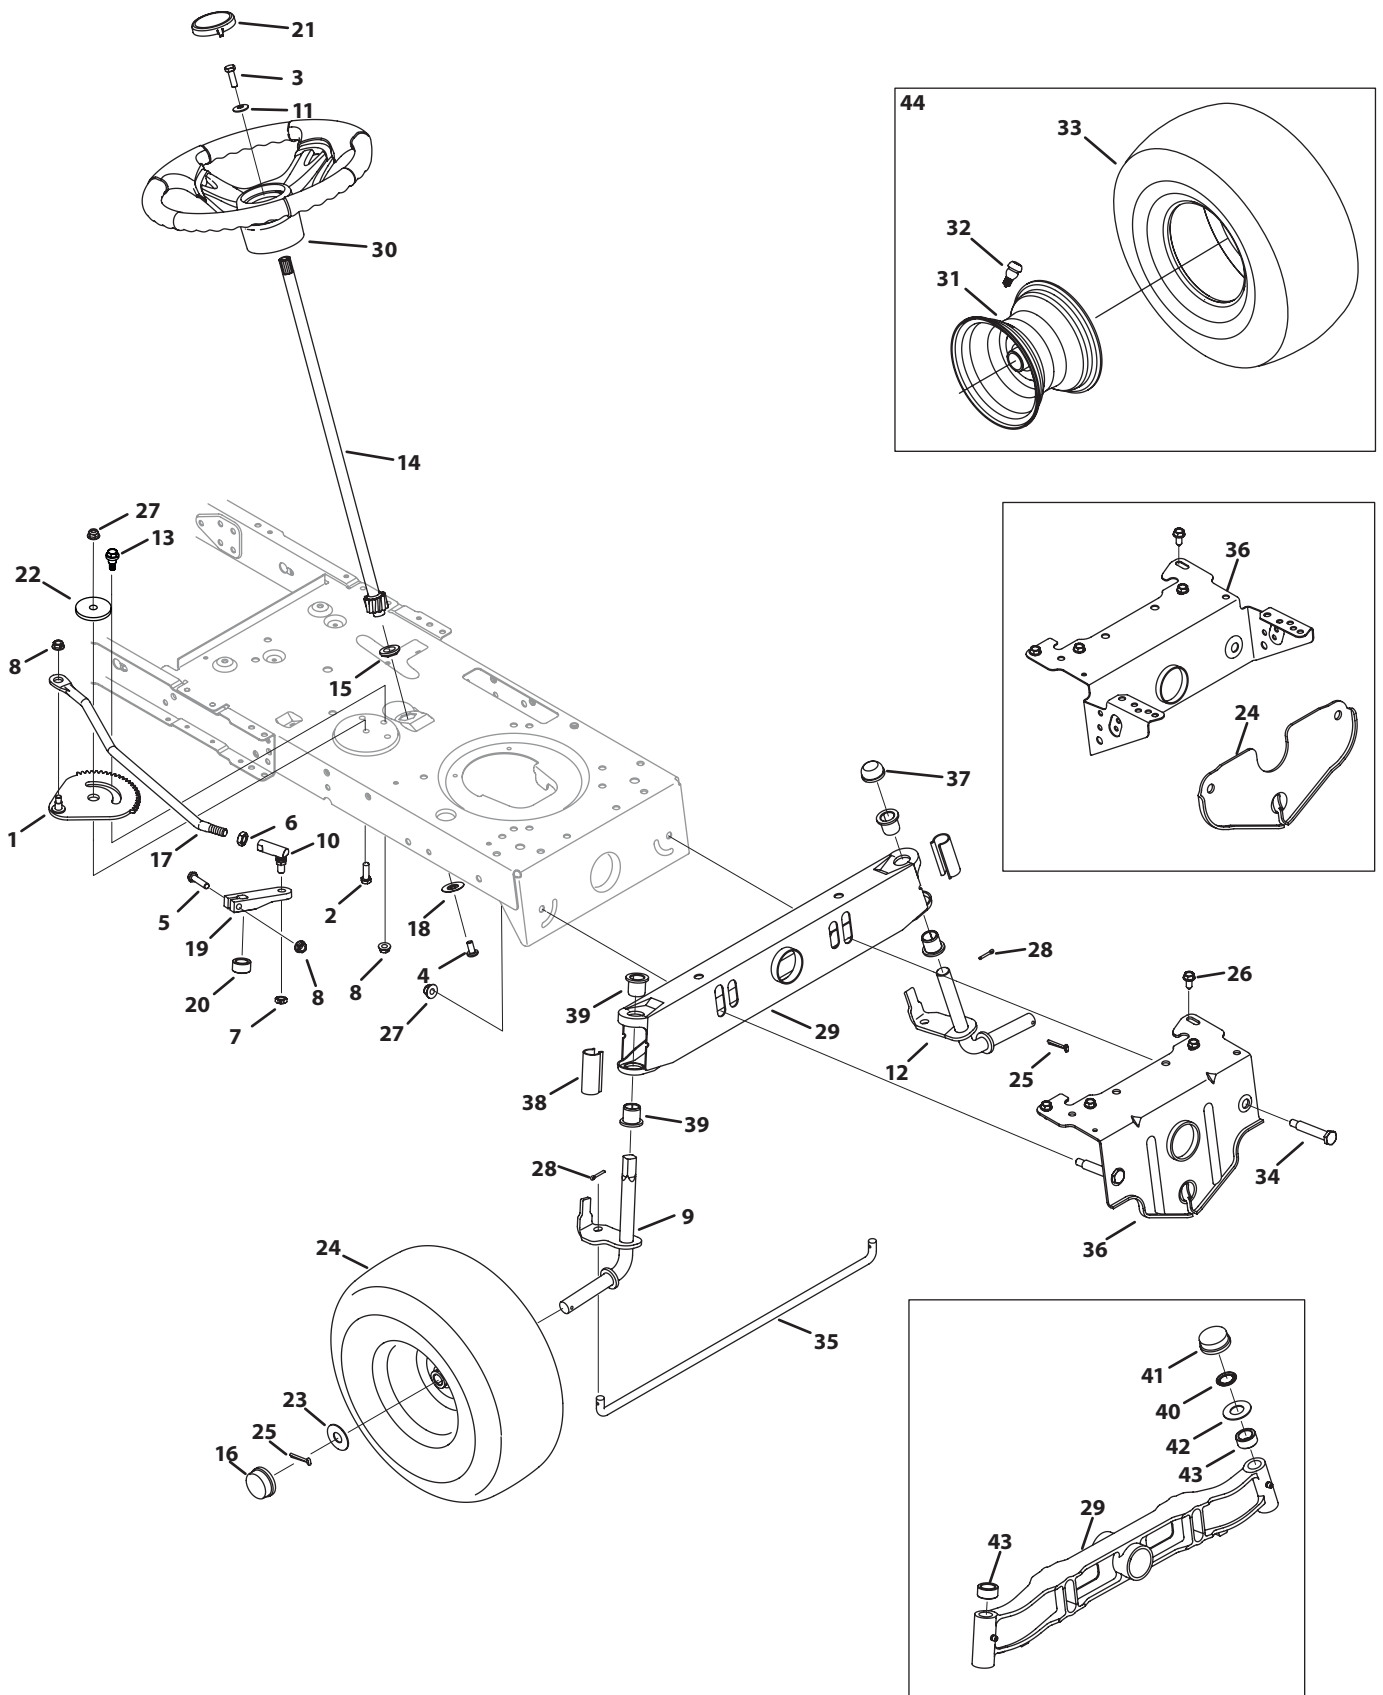


Front End Steering

Ref.	Part Number	Description
1	617-04094	Front Steering Gear Assembly
2	710-0514	Hex Screw, 3/8-16 x 1.00
3	710-0643	Hex Screw, 5/16-18 x 1.00, Lock
4	710-1309	Machine Screw, 5/16-18 x .750
5	710-3180	Hex Screw, 5/16-18 x 1.75
6	912-0240	Jam Nut, 7/16-20
7	912-0214	Jamlock Nut, 3/8-24
8	712-04063	Flangelock Nut, 5/16-18
9	638-04008P	Front RH Axle
	938-04013	46" Front RH Axle
10	923-0448A	Ball Joint, 7/16-20
11	736-0242	Bell Washer, .340 x .872 x .060
12	938-04007A	Front LH Axle
	938-04014A	46" Front LH Axle
13	738-04141	Shoulder Bolt, 5/16-18 x .435 x .350
14	738-0919A	Steering Shaft, 5/8 x 22.08
15	941-04124	Flange Bearing, 5/8
16	931-0484A	Hub Cap
17	747-05385	Steering Link
18	948-0389	Cap, 1.25 x .16
19	748-04065	Steering Block
20	748-04068	Spacer, .71 x .125 x .56
21	731-04681	Cap, Troy-Bilt
	731-04039	Cap
	731-04040	Sprig Cap
22	738-04162A	Shoulder Spacer, .884 x .190
23	736-04228A	Flat Washer, .781 x 1.590
24	783-04568	Front Deck Hanger Bracket

Ref.	Part Number	Description
25	714-04039A	Cotter Pin, 5/32 x 1.25
26	710-04484	Screw, 5/16-18 x .750
27	712-04065	Flangelock Nut, 3/8-16
28	914-0474	Cotter Pin, .125 x .75
29	683-0128B	Pivot Axle
	919-04177A	Pivot Axle
30	631-04028	Steering Wheel
	631-04560	Steering Wheel Soft Grip
31	934-04081	Rim Asm, 6.0 x 4.5, 42/38" Deck
	634-04634	Rim Asm, 6.0 x 4.5, 46" Deck
32	934-0255	Valve, tubeless Air
33	734-1731	Tire, 15 X 6 X 6 Sq Shldr 42/46"
	734-04240A	Tire, 15 X 6 X 6 Rd Shldr, 38"
34	738-04128	Shoulder Bolt, 3/8-16 x .500 x 2.38
35	747-04299A	Fixed Rod
36	783-05326B	Pivot Bar Bracket
	783-04601C	Pivot Bar Bracket
37	726-0341	Push Cap, 3/4
38	731-04057A	Standard Axle Cap
39	741-0660A	Flange Bearing, .760 x .941 x 1.0
40	726-04035	Push Nut, 3/4
41	731-04693	Hub Cap
42	936-0316	Flat Washer, .78 x 1.59 x .060
43	748-04068	Spacer, .71 x .125 x .56
44	634-04086	Wheel Assembly, 42"
	634-04325	Wheel Assembly, 38"
	634-04639	Wheel Assembly, 46"

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Seat and Fender

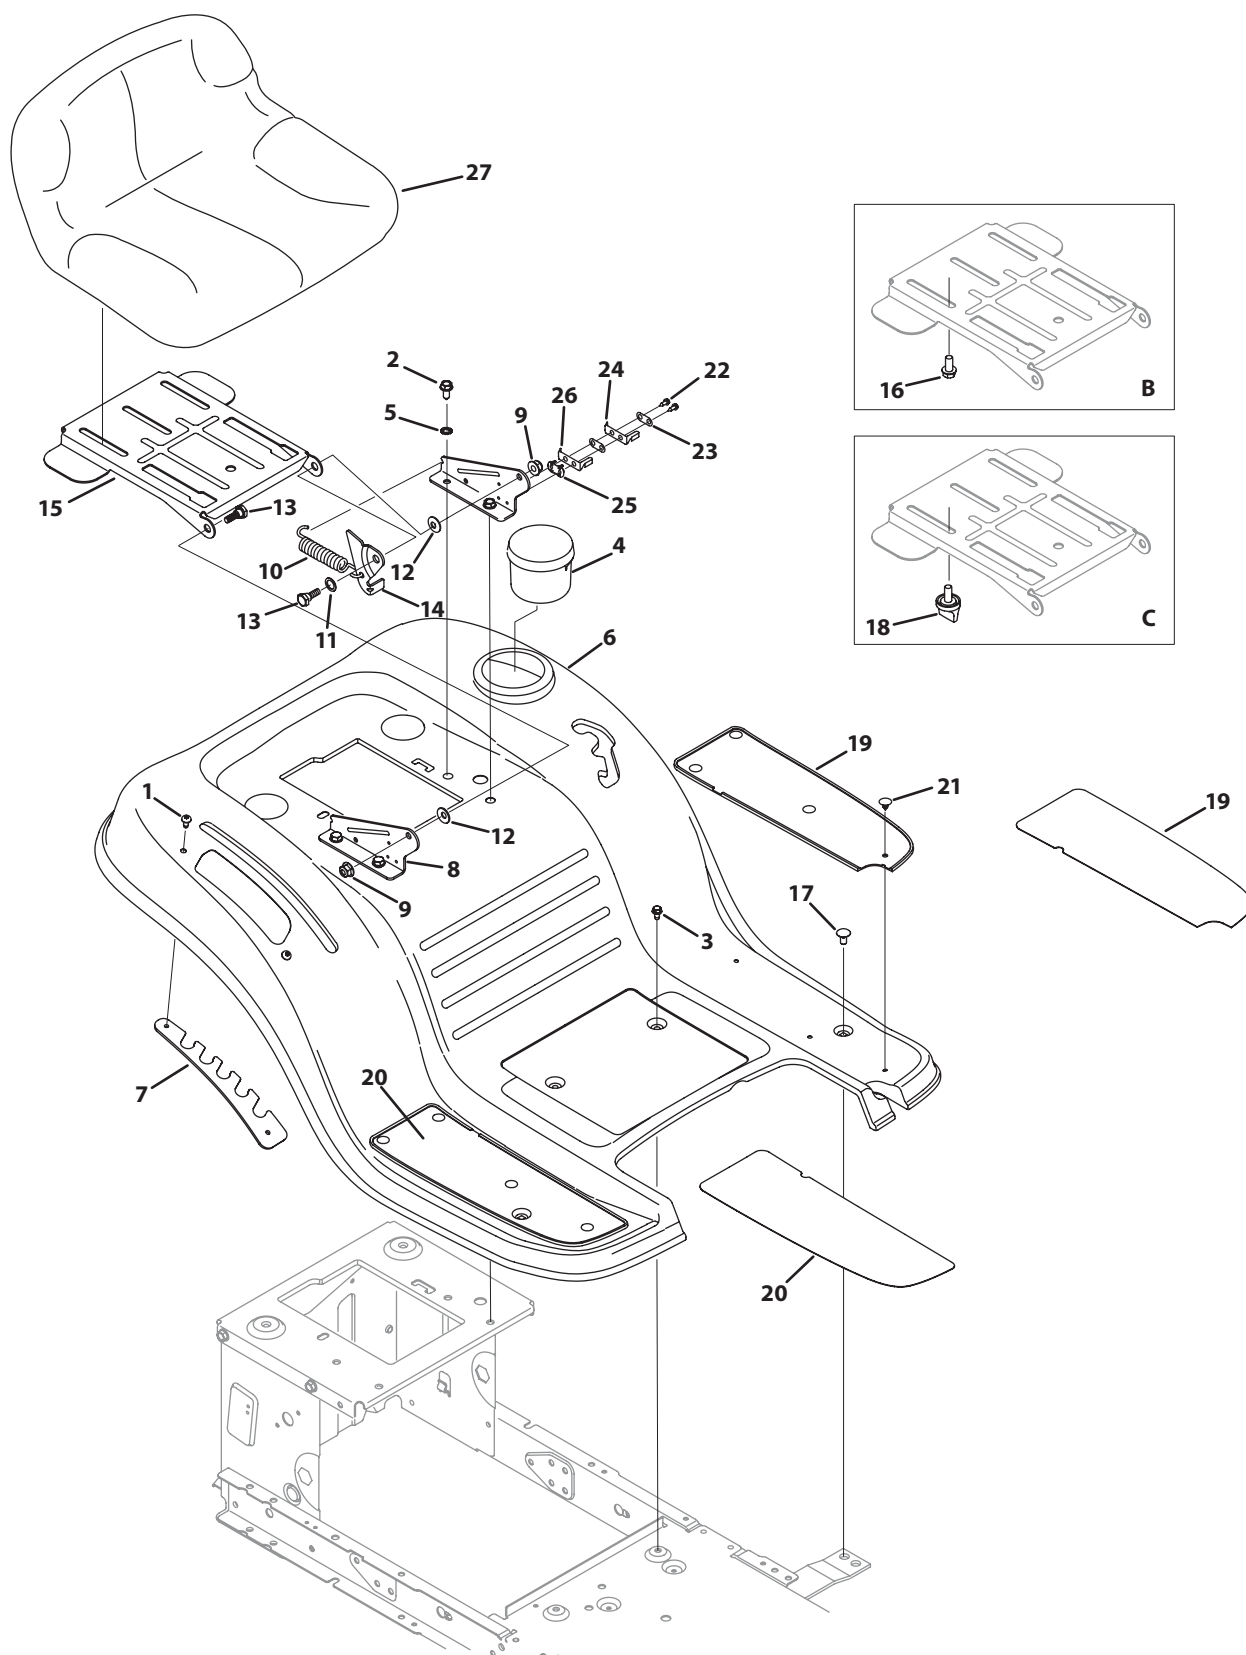

Ref.	Part Number	Description
1	710-05070	Screw, 1/4-20 x .500
2	710-04484	Screw, 5/16-18 x .750
3	710-0599	Screw Pan Torx Head, 1/4-20 x .500
4	731-04591A	Cup Holder
5	736-0607	Loack Washer, 5/16
6	783-04587D	Fender - Red
7	783-04843	Lift Adjuster Bracket - Powder Black
8	783-1489D	Seat Mount Bracket - Powder Black
9	712-04063	Flangelock Nut, 5/16-18
10	732-1184	Extension Spring
11	936-0108	Flat Washer, .510x .750 x .033
12	736-0242	Bell Washer, .340 x .872 x .060
13	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
14	783-0209D	Lift Seat Bracket
15	783-04081D	Pivot Seat Manual Adjust Bracket
16	710-04482	Hex Head Flange, 3/8-16 x .875
17	710-0134	Screw Carriage, 1/4-20 x .62
18	720-04061	Knob, 3/8-16 x .875
19	735-04047	Foot Pad, LH
	723-04026	Foot Pad, Abrasive, LH
20	735-04048	Foot Pad, RH
	723-04025	Foot Pad, Abrasive, RH
21	726-3046	Ratchet Clip, .250 x .500
22	710-0227	Screw, 8-18 x .500
23	726-0279	Insulator Plate
24	925-1303	Outer Seat Spring
25	726-0278	Insulator Boss Plate
26	725-1439	Inner Seat Spring
27	757-04083	Medium Back Seat, Black, Set-up B
	757-04099	Low Back Seat, Black, Set-up B or C
	757-04088	High Back Seat, Set-up B


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

This diagram illustrates the exploded view of a mechanical assembly, likely a pump or motor unit. The components are numbered 1 through 63. Key parts include a main housing (1), a motor or actuator (14), a drive shaft (23), a pulley (36), a belt (37), a roller (41), a spring (52), and two large wheels (55). Callout A points to a specific assembly area on the left, and callout B points to a specific assembly area on the right. The diagram shows the relative positions and assembly sequence of the various components.

Ref.	Part Number	Description	Ref.	Part Number	Description
1	918-04566	Transmission Drive Assembly	33	948-0334	Spacer, T-Axle, 46" Only
2	647-04034C	Pedal Assembly	34	750-0566A	Spacer, .260 x .375 x 1.030 LG
3	647-04035	Shaft Lever Assembly	35	750-0802	Spacer, .640 ID x .76 OD x 2.63
4	710-0227	Screw, 8-18:0.500	36	954-0241A	V Belt, 5L 35.25 POLY
5	710-04484	Screw, 5/16-18 x .750	37	954-04249A	V Belt, 5L 70.90 POLY
6	710-0599	Screw, 1/4-20 x 0.500	38	956-04002	V Pulley 7.25 DIA SPUN
7	710-0604A	Screw, 5/16-18 x 0.625	39	783-04536B	Pedal Support Bracket
8	710-0809	Screw, 1/4-20 x 1.250	40	783-04595A	Shaft Adjust Bracket
9	710-1266	Hex Screw, 5/16-18 x .625	41	956-04015A	Variable Speed Pulley Assembly
	710-0176	Hex Screw, 5/16-18 x 2.75	42	683-04176A	Transmission Bracket Assembly
10	710-3008	Hex Screw, 5/16-18 x .75	43	683-04207	Idler Bracket Assembly
11	911-04075A	Ferrule, 3/8-24 X .375 DIA.	44	710-0347	Hex Screw, 3/8-16 x 1.75
12	712-04063	Flangelock Nut, 5/16-18	45	710-1260A	Screw, 5/16-18 x 0.750
13	712-0700	Flange Nut, 9/16-18	46	712-04065	Flangelock Nut, 3/8-16
14	914-0209	Cotter Pin INT- .125 DIA	47	938-0347	Shoulder Spacer, .625 ID x .169
15	714-04040	Bow-Tie Cotter Pin, 72	48	683-04206	Bracket Assembly
16	718-04407	Pulley Hub, 5/8 SPLINE	49	710-0627	Hex Screw, 5/16-24 x .750
17	720-04028	Shift Knob	50	710-0778	Screw, 1/4-20 x 1.500
18	725-0157	Cable Tie	51	718-04261	Bearing Cup
19	725-1644	Short Spring Switch	52	732-04746	Extension Spring, .94 OD x 6.75 LG
20	726-0214	Push Cap, 5/8	53	736-0362	Flat Washer, .330 x 1.25 x .06:HT
21	926-0320	Plate Insulator Nut	54	941-0600	Ball Bearing, 17 x 40 x 12
22	731-04602	Sleeve, .758 x .821 x 3.3125	55	634-04324	Wheel, 20 x 8 x 8, 38"
23	731-04604	Sleeve, .758 x .821 x 2.4375		634-0104	Wheel, 20 x 8 x 8, 42/46"
24	732-04306	Spring Extension, .80 OD x 3.28 LG	56	736-0242	Bell Washer, .340 x .872 x .060
25	732-04488	Spring Extension, .38 OD x 3.25 LG	57	725-04363	Switch Interlock
26	732-0716D	Spring Extension, .59 OD x 4.00 LG	58	17962	Plate Switch
27	735-0239	Foot Pad, 4.0 LONG	59	738-04237A	Shoulder Screw, #10-32 x .500
28	756-04325	Idler Pulley	60	731-06894	Shift Plate Bearing
29	747-05243	Shift Rod, 46"	61	634-04369	Rim, 8.0 x 7.0 x .750, 38/42/46"
	747-05244	Shift Rod, 38/42"	62	934-0255	Valve, tubeless Air
30	747-05186	Variable Speed Control Rod	63	734-1730	Tire, 20 X 8 X 8 Sq Shldr, 42/46"
31	747-05188	Brake Rod		734-04241	Tire, 20 X 8 X 8 Rd Shldr, 38"
32	747-04969	Belt Keeper Rod			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


42" Deck

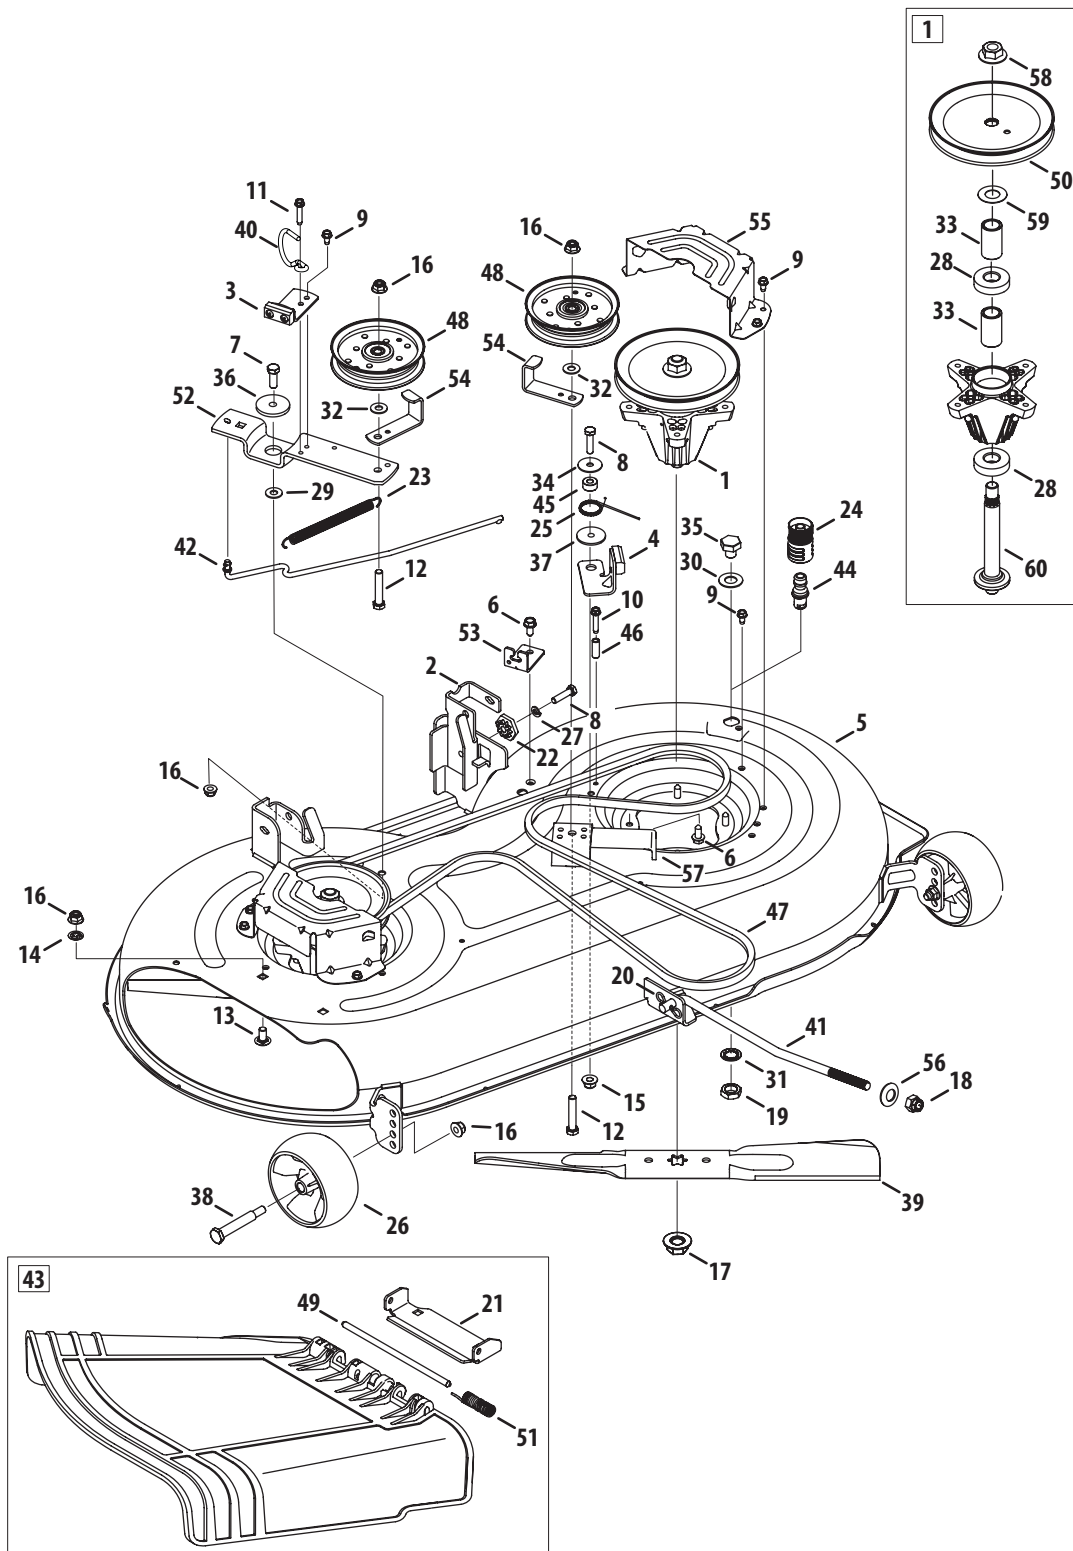

Ref.	Part Number	Description
1.	918-04822A	Spdl Asm, Pul, 6.3 Dia
2.	683-0254B	Brkt Asm, Deck, Hngr Lh Lt
3.	983-04511	Brake Asm, Deck, 42/46
4.	983-04525	Brake Asm, Deck, 46"
5.	983-04570	Deck Asm, Sd, Offset, 42 W/O whl
	983-04572	Deck Asm, Sd, Offset, 42 W/ 2whl
6.	710-04484	Scr, Tt, 5/16-18, .750, Hxindwsh
7.	710-0514	Hhcs, 3/8-16, 1.00, Gr5, Std
8.	710-0528	Hhcs, 5/16-18, 1.25, Gr5, Std
9.	710-0599	Scr, Tt, 1/4-20, 0.500, Hxindwsh
10.	710-0778	Scr, Tt, 1/4-20, 1.500, Hxindwsh
11.	710-0642	Screw, Self-tapping, 1/4-20, .750
12.	710-3144	Hhcs, 3/8-16, 2.00, Gr5, Std
13.	710-3178	Bolt, Crg, 3/8-16, 0.75, Gr1
14.	712-0229	Nut, Push, 3/8
15.	712-04063	Nut, Flglk, 5/16-18, Grf, Nylon
16.	712-04065	Nut, Flglk, 3/8-16, Grf, Nylon
17.	712-0417A	Nut, Flg, 5/8-18
18.	712-04243	Nut, Flxlk, 1/2-13
19.	912-0641	Nut, Hex, M16-1.5 Din 936
20.	714-04043	Bow-Tie Cotter Pin
21.	783-06074A	Chute Bracket
22.	917-04074	Gear, Deck, Adj
23.	932-0384	Spr, Extn, .62 Dia X 6.12 Lg
24.	921-04041	Water Nozzle Adapter
25.	732-04727	Spr, Torsn, .992 I.D X 1.17 O.D
26.	734-04155	Whl, Deck, 5.0 Dia Ball
27.	936-0119	Wash, Lock, 5/16, Regular Duty
28.	941-0919	Brg, Ball, .787id X 1.85 Odx.551
29.	936-0344	Wash, Flat, .385 X 1.0 X .030
30.	736-0187	Wash, Flat, .64 X 1.24 X .06, Ht

Ref.	Part Number	Description
31.	736-0225	Wash, Lock, 5/8, Int Tooth
32.	736-0262	Wash, Flat, .385 X .870 X .092
33.	750-04936	Spcr, .792 X 1.060 X 1.860 Lg
34.	736-0362	Wash, Flat, .330 X 1.25 X .06, Ht
35.	738-04146	Plug, Bolt, M16 X 1.5
36.	738-04162A	Spcr, Shldr, .8840 X .190
37.	748-0234	Spacer, Shoulder
38.	938-3056	Bolt, Shldr, .496 X 2.50, 3/8-16
39.	942-04308	Blade, Cut, 21.23" 2-In-1, Econ
40.	747-05323	Rod, Belt Keepr, 42 Idler
41.	747-05141A	Rod, Lift, Deck, Frt, 12.7
42.	747-05105	Rod, Cont, Brake 42"
43.	631-04288	Chut Asm, 42" Deck, Exp
44.	737-04003D	Deck Water Nozzle
45.	750-0258	Spcr, .315 X .750 X .375 Lg
46.	750-0566A	Spcr, .260 X .375 X 1.030 Lg
47.	954-04060B	Belt, V Typ, A Sec X 96.5
48.	756-04129B	Pul, Idlr, 4.25"Dia
49.	711-04847B	Pin, Hinge, Dia .3125 X 7.96 Lg
50.	956-1227	Pul, Deck, 6.3 Dia
51.	732-04372	Spr, Torsion, .44 I.D. X 2.0
52.	783-05946	Brkt, Idlr, Piv, 46
53.	783-06243	Brkt, Cbl, Deck Engage
54.	783-06368	Brkt, Guard, Belt, 4.25 Pulley
55.	783-06424A	Cvr, Belt, Deck, 42
56.	748-04069	Deck Lift Pivot Cup
57.	783-06643	Brkt, Supt, Deck Stationary Idlr
58.	712-0417A	Nut, Flg, 5/8-18
59.	936-0351	Wash, Flat, .760 Idx1.50 Od
60.	738-1186A	Shft, Spdl, 6.11 Lg.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

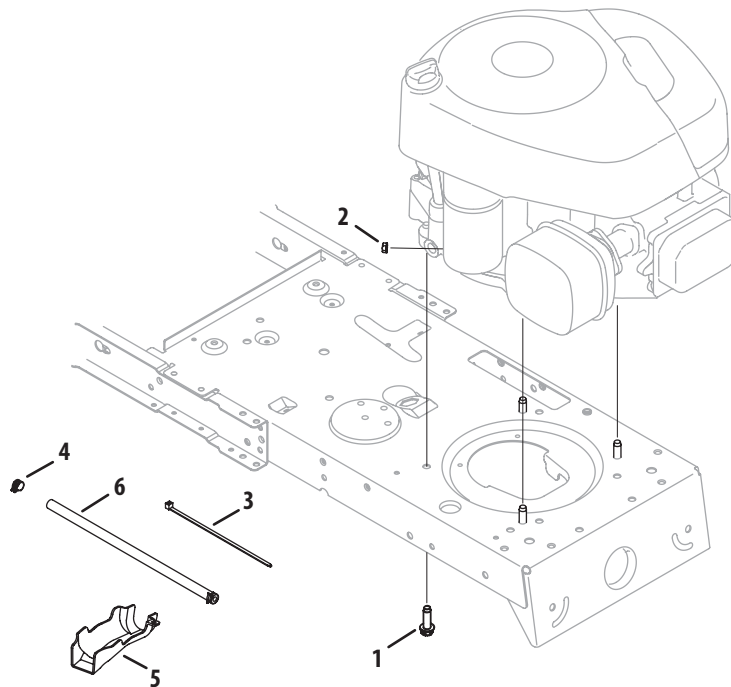

Ref.	Part Number	Description
1	710-04683	Screw, 3/8-16 x 1.0
2	712-0271	Sems Nut, 1/4-20
3	725-0157	Cable Tie
4	726-0205	Clamp Hose, .490 diameter
5	731-05628	Oil Drain Sleeve
6	751-10349	Fuel Hose, Low Permeation

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

