


K Style Hood

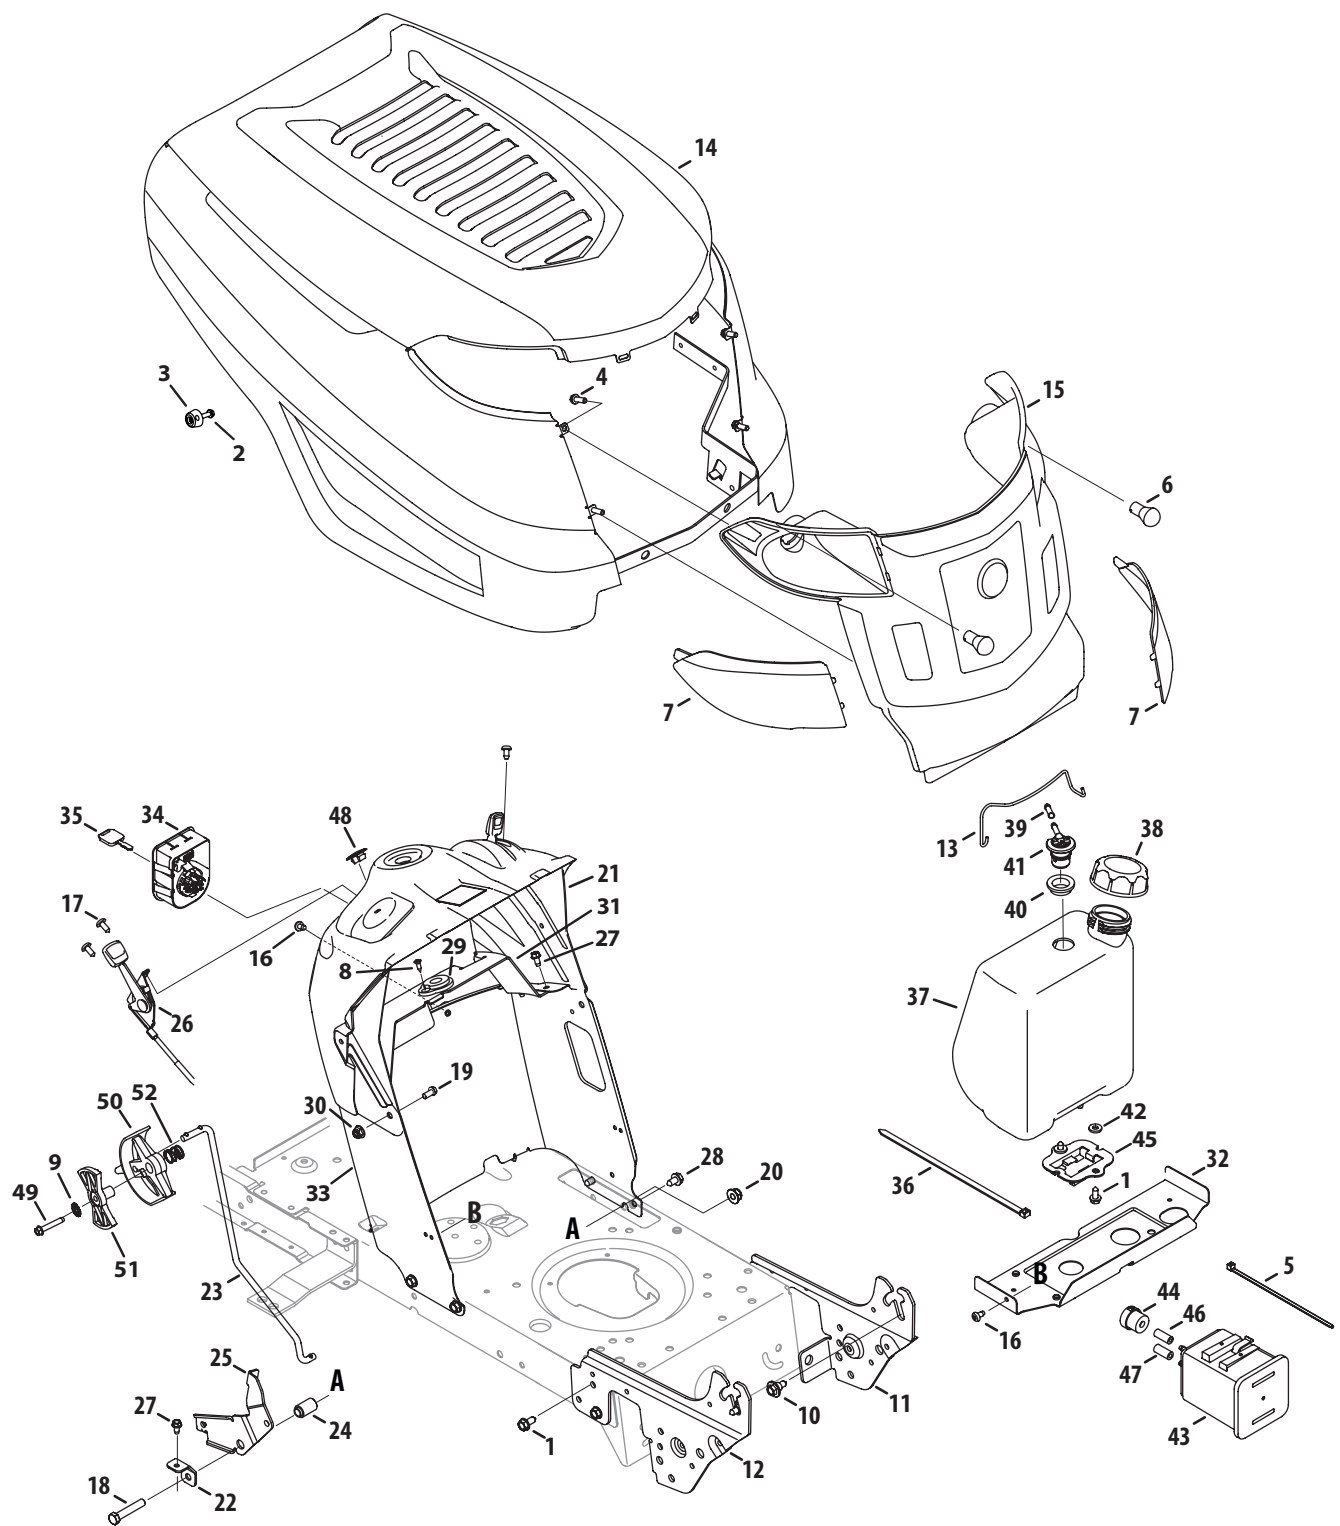


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	710-04484	Screw 5/16-18 x .750	28	710-0604A	Screw 5/16-18 x .625
2	710-05281	Screw, #12-16 x 1.25	29	741-0587	Bearing, .628 ID x 1.36
3	731-06404	K-Style Bumper	30	712-04063	Flange lock Nut 5/16-18
4	710-05108	Screw, 1/4 x .750	31	783-06785	Bracket, Steering Support
5	725-0157	Cable Tie	32	783-04584B	Gas Tank Support Bracket
6	925-0963	Miniature lamp 12V socket	33	783-06811	Dash, Lower NWNDW
7	731-06095	Grill Lens - LH	34	925-04659	Key Switch Module
	731-06096	Grill Lens - RH	35	925-1745A	Key
8	910-0224	Screw, #10-16 x .500	36	726-0230	Cable Tie
9	736-3006	Lock Washer, 1/4	37	751-0555B	Fuel Tank, 1.5 Gallons
10	738-04091A	Shoulder Screw .43 x .29		951-04304	Fuel Tank, 1.36 Gallon, CARB
11	783-05327B	Support Bracket LH	38	951-12179	Fuel Cap
12	783-05328A	Support Bracket RH		751-0603A	Fuel Cap, 1.5 Gallon
13	683-04448	Battery Rod		951-10947	Fuel Cap, CARB
14	683-04441	Hood	39	751-12089-28	Hose Vent, 3/16
15	631-04272	Grill	40	735-04081††	Rubber Grommet
16	710-05070	Screw, 1/4-20 x .500	41	751-12118††	Rollover Valve
17	710-04483	Screw 1/4-20 x .500	42	936-3008††	Washer, Flat, .344 x .750 x .120
18	710-3144	Hex Screw 3/8-16 x 2.00	43	951-10589††	Canister, Carbon, 5 Gallon
19	710-3025	Hex Screw, 5/16-18 x .625	44	951-10590††	Filter, Vent, Canister
20	712-04065	Flange Lock Nut 3/8-16	45	951-10610††	Bracket., Adapter, Canister
21	931-08054	Dash, Upper	46	751-10749-14††	Hose, Fuel, Low Perm., White
22	783-06823	Speed Latch Tab	47	751-10750-28††	Hose, Fuel, Low Perm., Yellow
23	747-05398	Speed Control Rod	48	731-05265	Choke Plug
24	750-04465B	Flange Spacer .39 x .671 x 1.095	49	710-0778	Hex Washer Screw, 1/4-20 x 1.50
25	783-04903A	Transmission Speed Latch	50	731-07885	Shift Lever
	783-06991	Transmission Speed Latch	51	731-07895	Index Control
26	746-04367	Throttle/Choke Control Cable	52	732-04800	Compr. Spring, .72 OD x .78
27	710-0599	Hex Screw Washer 1/4-20 x .500	—	925-04082	Harness, LT-5, NRMC, Dual

†† Equipped with CARB Fuel Tank

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Frame and PTO Lift

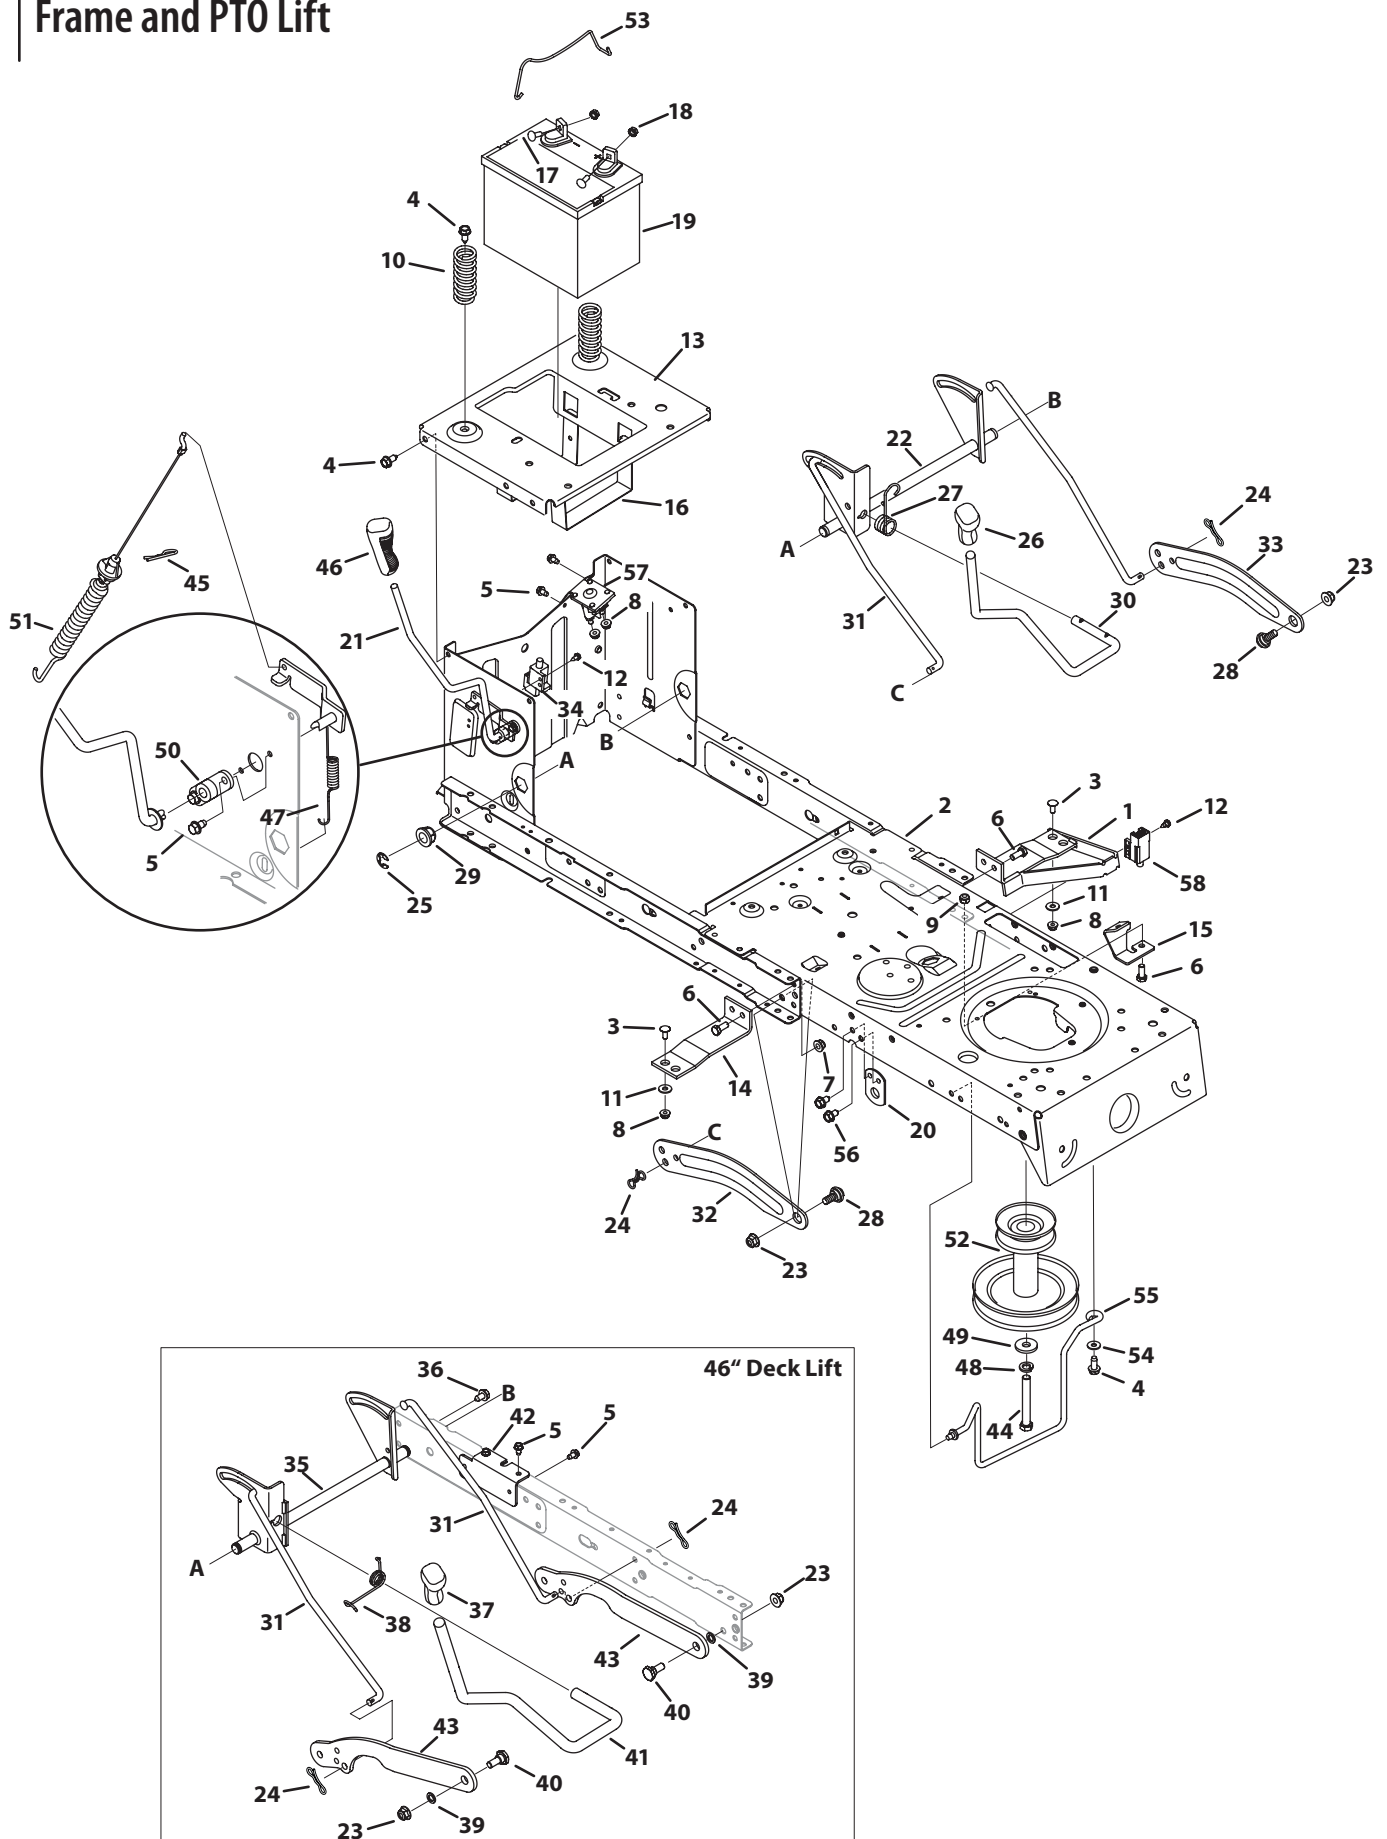

Ref.	Part Number	Description	Ref.	Part Number	Description
1	683-04195	Support Bracket	32	783-04494C	38/42" Lift Arm, RH
2	683-04649	Frame Assembly	33	783-04711C	38/42" Lift Arm, LH
3	710-0134	Screw Carriage, 1/4-20 x .62	34	725-04363	Switch Interlock
4	710-04484	Screw 5/16-18 x .750	35	683-04334	Lift Assembly, 46"
5	710-0599	Screw, 1/4-20 x .500	36	710-0604A	Screw, 5/16-18 x .625
6	710-3008	Hex Screw, 5/16-18 x .75	37	720-0298	Handle Grip, 5/8
7	712-04063	Flangelock Nut, 5/16-18	38	732-04438	Torsion Spring Handle, 46"
8	712-04064	Flangelock Nut, 1/4-20	39	936-0140	Flat Washer, .385 x .62 x .063
9	912-0429	Hexlock Nut, 5/16-18	40	938-0380	Shoulder Bolt, 3/8-16 x .500 x .270
10	732-04035	Compression Spacer, 1.28 x 3.125	41	747-04653	46" Lift Handle
11	736-0173	Flat Washer, .28 x .74 x .063	42	783-05389A	Frame Brace Bracket
12	738-04237A	Shoulder Spacer, 10-32 x .500	43	783-0678C	Lift Deck Link
13	783-04548D	Seat Frame Bracket	44	710-04607	Hex Screw, 7/16-20 x 2.75, 46"
14	783-04637	Running Board Bracket		710-04608	Hex Screw, 7/16-20 x 3.25, 38/42"
15	783-04753	Support Frame Bracket	45	914-0145	Click Pin, .092 x 1.64
16	783-04869A	Battery Bracket	46	720-04049A	Handle Grip, 3/8
17	710-04666	Hex Head Flange, 1/4-20 x .75	47	732-04276A	PTO Spring Extension
18	712-0271	Sems Nut, 1/4-20	48	936-0171	Regular Duty Washer Lock, 7/16
19	925-1707D	230 CCA Battery	49	736-0322	Flat Washer, .450 x 1.250 x .164
20	783-04536B	Support Bracket	50	741-04119A	PTO Bearing
21	647-04096	PTO Handle Assembly	51	946-04173C	Deck Engage Cable
22	683-04155A	Lift Assembly, 38/42"	52	756-04207A	Engine Pulley, 3.39 x 6.12, 46"
23	712-04065	Flangelock Nut, 3/8-16		756-04196A	Engine Pulley, 3.39 x 6.12, 38/42"
24	714-04040	Bow-tie Cotter Pin	53	683-04448	Battery Hold Down Rod
25	716-0106A	E Ring	54	936-0300	Flat Washer, .406 x .875 x .059
26	720-0311	Handle Grip, 1/2	55	747-04332A	38" Belt Keeper
27	732-04225	Torsion Spring		747-04857	42" Belt Keeper
28	738-04130	Shoulder Bolt, 3/8-16 x .625 x .175		683-04414	46" Belt Keeper
29	941-0225	Hex Flange Bearing	56	710-0604A	Screw, 5/16-18.0 x .625
30	747-04282	Deck Lift Handle 38"	57	725-04439	12V Solenoid
	747-05296	Deck Lift Handle 42"	58	925-04039	Screw Mount Interlock Switch
31	747-04393	Lift Rod			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Front End Steering

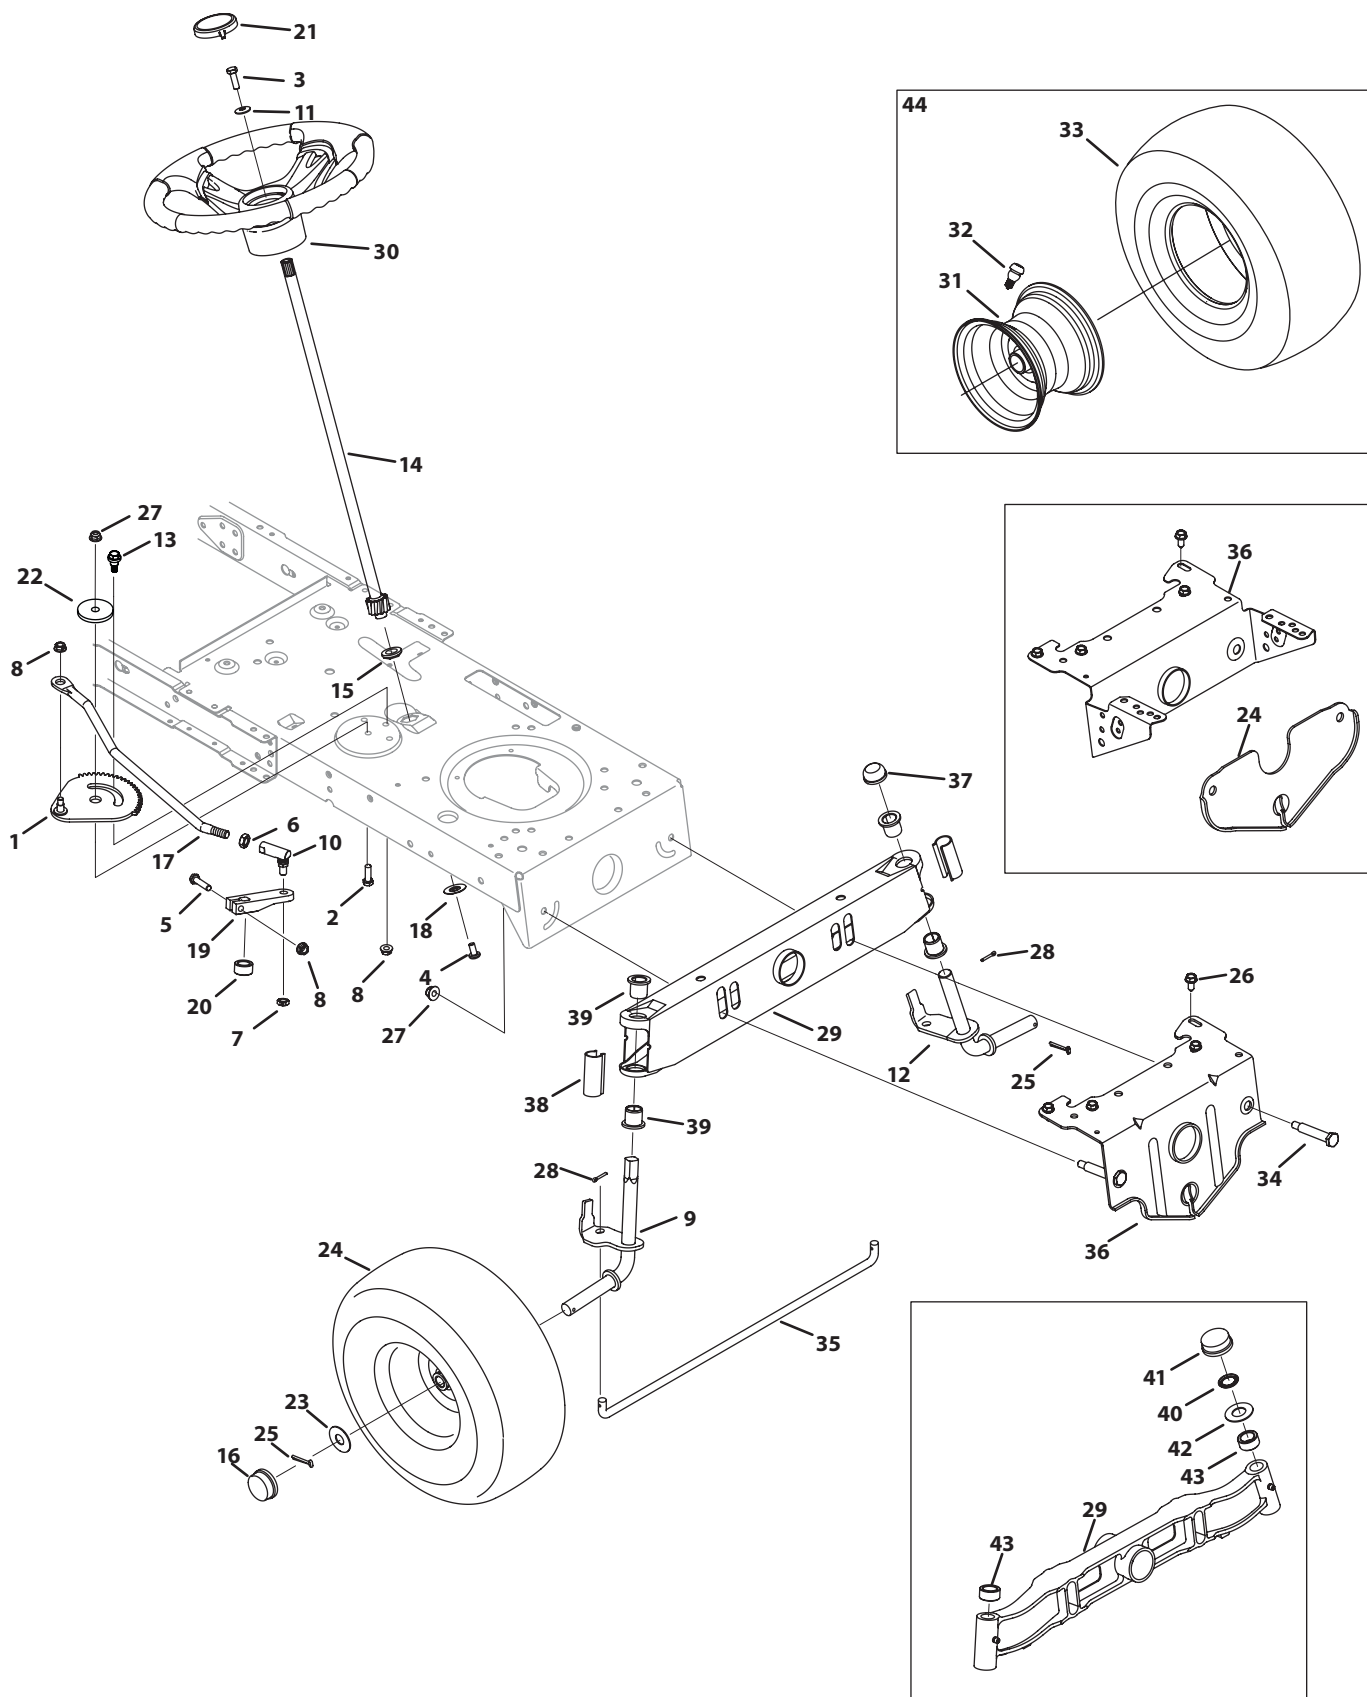


Front End Steering

Ref.	Part Number	Description
1	617-04094	Front Steering Gear Assembly
2	710-0514	Hex Screw, 3/8-16 x 1.00
3	710-0643	Hex Screw, 5/16-18 x 1.00, Lock
4	710-1309	Machine Screw, 5/16-18 x .750
5	710-3180	Hex Screw, 5/16-18 x 1.75
6	912-0240	Jam Nut, 7/16-20
7	912-0214	Jamlock Nut, 3/8-24
8	712-04063	Flangelock Nut, 5/16-18
9	638-04008P	Front RH Axle
	938-04013	46" Front RH Axle
10	923-0448A	Ball Joint, 7/16-20
11	736-0242	Bell Washer, .340 x .872 x .060
12	938-04007A	Front LH Axle
	938-04014A	46" Front LH Axle
13	738-04141	Shoulder Bolt, 5/16-18 x .435 x .350
14	738-0919A	Steering Shaft, 5/8 x 22.08
15	941-04124	Flange Bearing, 5/8
16	931-0484A	Hub Cap
17	747-05385	Steering Link
18	948-0389	Cap, 1.25 x .16
19	748-04065	Steering Block
20	748-04068	Spacer, .71 x .125 x .56
21	731-04681	Cap, Troy-Bilt
	731-04039	Cap
	731-04040	Sprig Cap
22	738-04162A	Shoulder Spacer, .884 x .190
23	736-04228A	Flat Washer, .781 x 1.590
24	783-04568	Front Deck Hanger Bracket

Ref.	Part Number	Description
25	714-04039A	Cotter Pin, 5/32 x 1.25
26	710-04484	Screw, 5/16-18 x .750
27	712-04065	Flangelock Nut, 3/8-16
28	914-0474	Cotter Pin, .125 x .75
29	683-0128B	Pivot Axle
	919-04177A	Pivot Axle
30	631-04028	Steering Wheel
	631-04560	Steering Wheel Soft Grip
31	934-04081	Rim Asm, 6.0 x 4.5, 42/38" Deck
	634-04634	Rim Asm, 6.0 x 4.5, 46" Deck
32	934-0255	Valve, tubeless Air
33	734-1731	Tire, 15 X 6 X 6 Sq Shldr 42/46"
	734-04240A	Tire, 15 X 6 X 6 Rd Shldr, 38"
34	738-04128	Shoulder Bolt, 3/8-16 x .500 x 2.38
35	747-04299A	Fixed Rod
36	783-05326B	Pivot Bar Bracket
	783-04601C	Pivot Bar Bracket
37	726-0341	Push Cap, 3/4
38	731-04057A	Standard Axle Cap
39	741-0660A	Flange Bearing, .760 x .941 x 1.0
40	726-04035	Push Nut, 3/4
41	731-04693	Hub Cap
42	936-0316	Flat Washer, .78 x 1.59 x .060
43	748-04068	Spacer, .71 x .125 x .56
44	634-04086	Wheel Assembly, 42"
	634-04325	Wheel Assembly, 38"
	634-04639	Wheel Assembly, 46"

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Seat and Fender

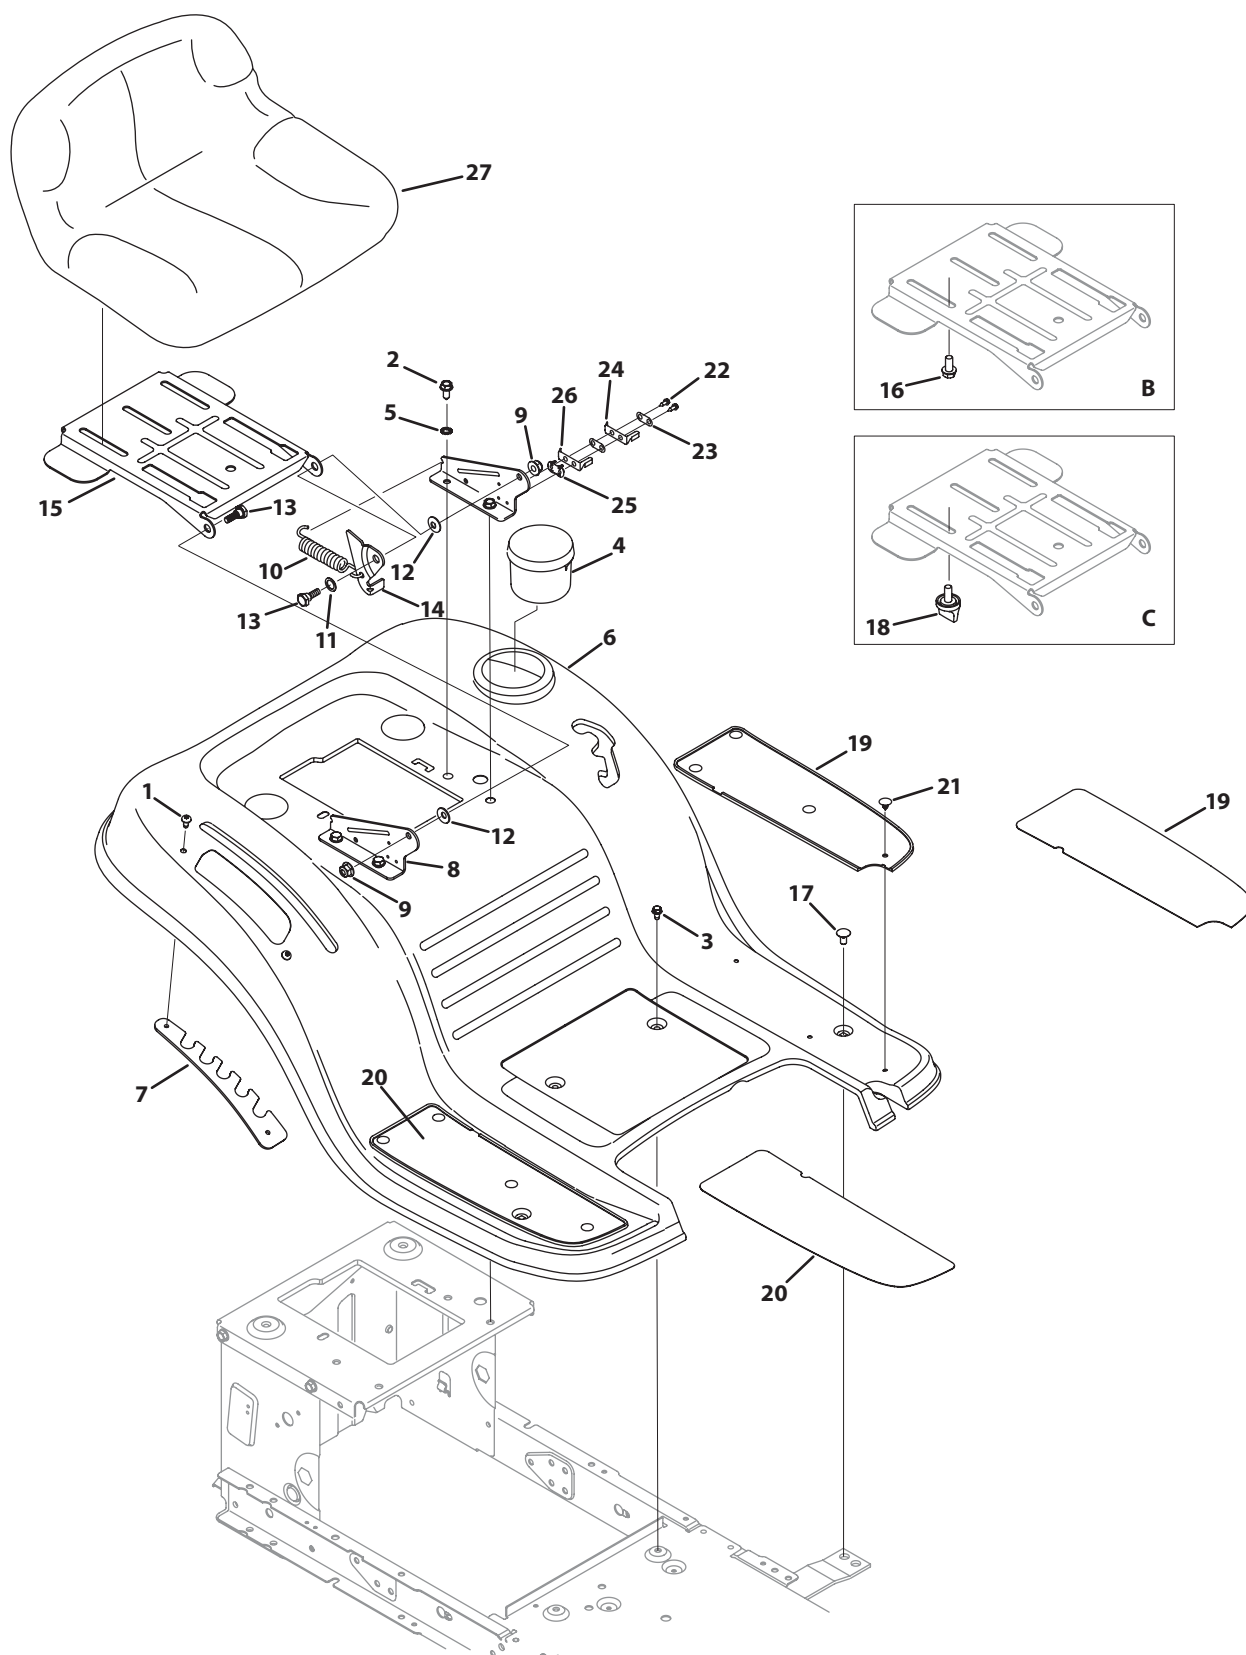

Ref.	Part Number	Description
1	710-05070	Screw, 1/4-20 x .500
2	710-04484	Screw, 5/16-18 x .750
3	710-0599	Screw Pan Torx Head, 1/4-20 x .500
4	731-04591A	Cup Holder
5	736-0607	Loack Washer, 5/16
6	783-04587D	Fender - Red
7	783-04843	Lift Adjuster Bracket - Powder Black
8	783-1489D	Seat Mount Bracket - Powder Black
9	712-04063	Flangelock Nut, 5/16-18
10	732-1184	Extension Spring
11	936-0108	Flat Washer, .510x .750 x .033
12	736-0242	Bell Washer, .340 x .872 x .060
13	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
14	783-0209D	Lift Seat Bracket
15	783-04081D	Pivot Seat Manual Adjust Bracket
16	710-04482	Hex Head Flange, 3/8-16 x .875
17	710-0134	Screw Carriage, 1/4-20 x .62
18	720-04061	Knob, 3/8-16 x .875
19	735-04047	Foot Pad, LH
	723-04026	Foot Pad, Abrasive, LH
20	735-04048	Foot Pad, RH
	723-04025	Foot Pad, Abrasive, RH
21	726-3046	Ratchet Clip, .250 x .500
22	710-0227	Screw, 8-18 x .500
23	726-0279	Insulator Plate
24	925-1303	Outer Seat SPring
25	726-0278	Insulator Boss Plate
26	725-1439	Inner Seat Spring
27	757-04083	Medium Back Seat, Black, Set-up B
	757-04099	Low Back Seat, Black, Set-up B or C
	757-04088	High Back Seat, Set-up B


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Transmission (Single Speed)

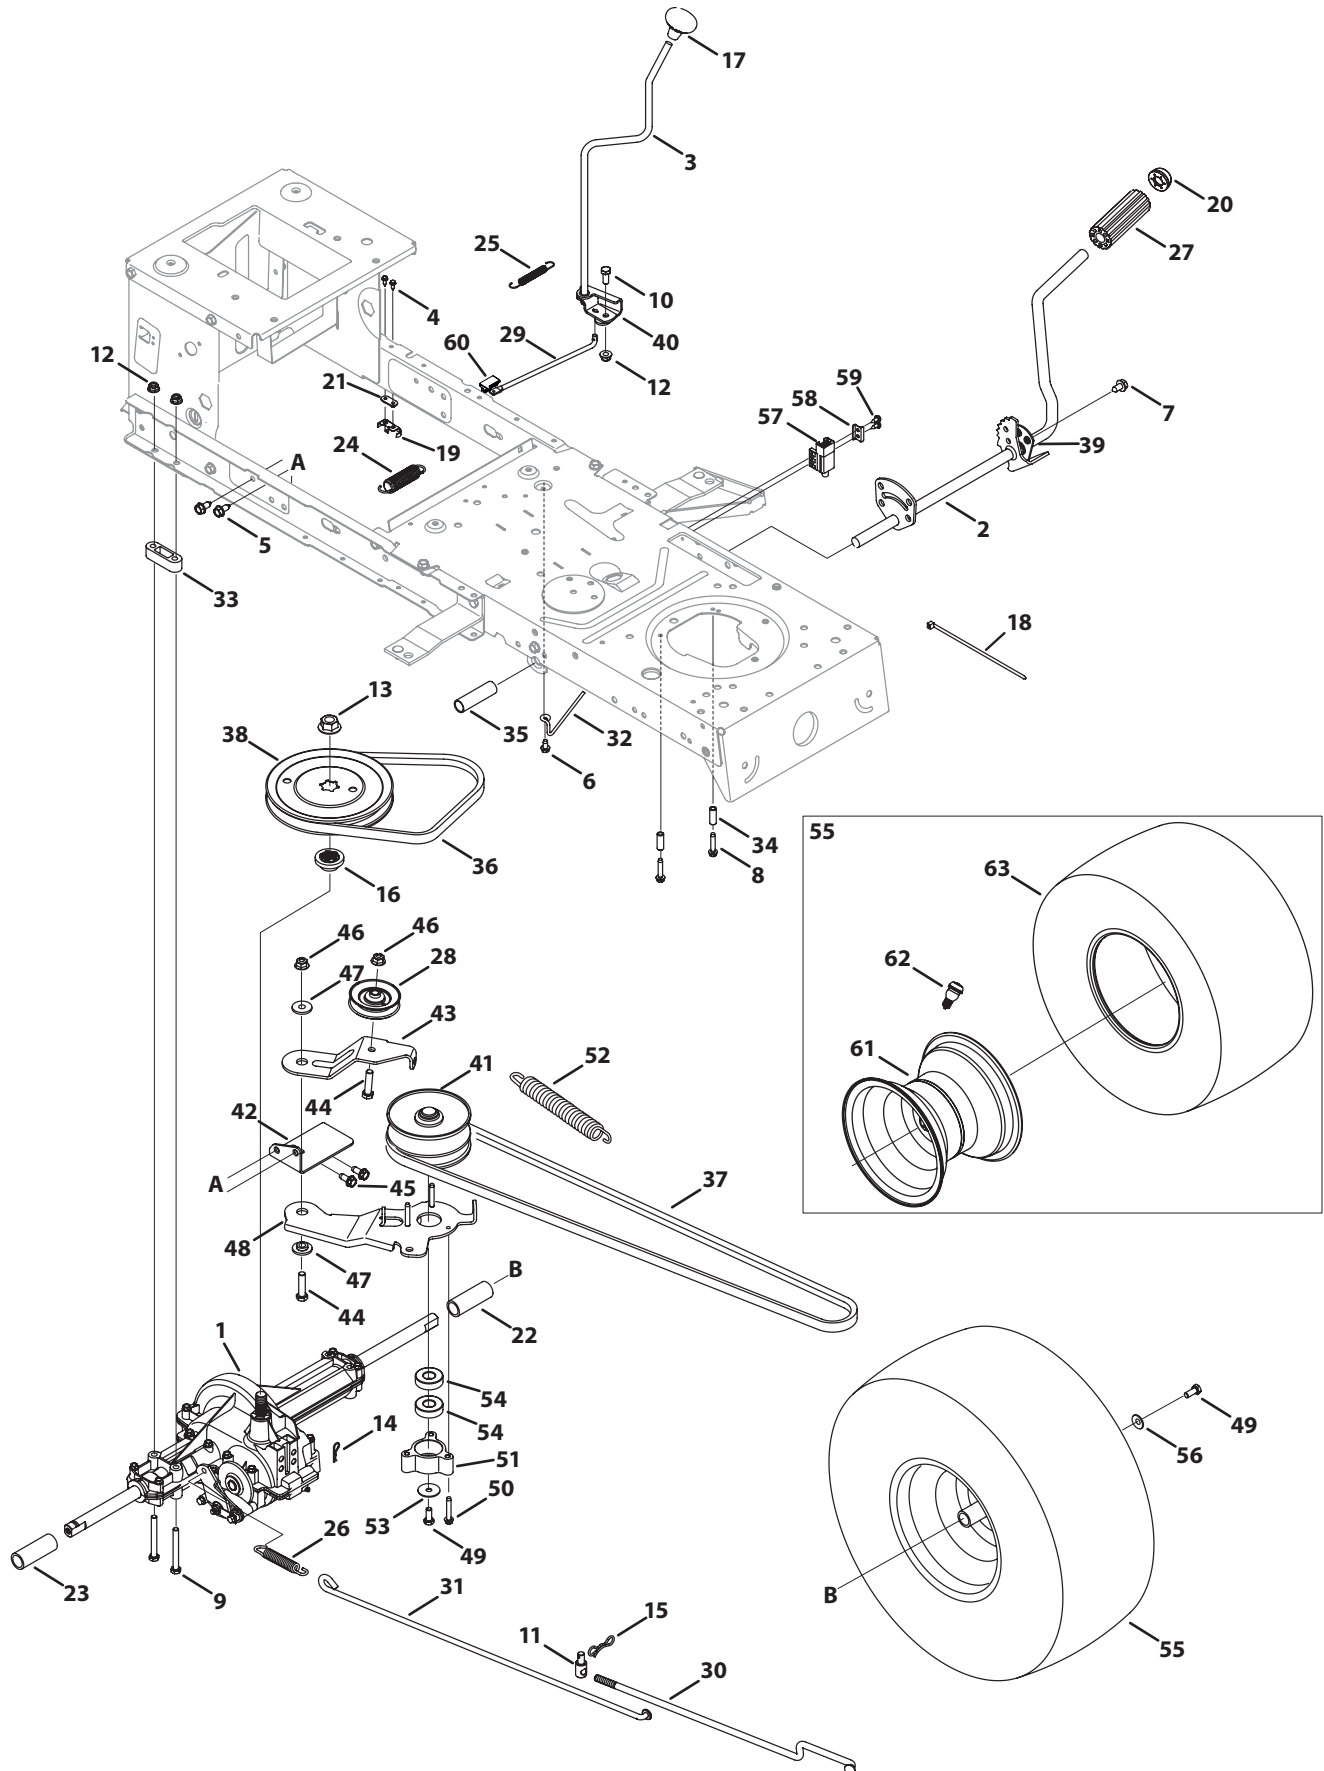

Ref.	Part Number	Description	Ref.	Part Number	Description
1	918-04566	Transmission Drive Assembly	33	948-0334	Spacer, T-Axle, 46" Only
2	647-04034C	Pedal Assembly	34	750-0566A	Spacer, .260 x .375 x 1.030 LG
3	647-04035	Shaft Lever Assembly	35	750-0802	Spacer, .640 ID x .76 OD x 2.63
4	710-0227	Screw, 8-18:0.500	36	954-0241A	V Belt, 5L 35.25 POLY
5	710-04484	Screw, 5/16-18 x .750	37	954-04249A	V Belt, 5L 70.90 POLY
6	710-0599	Screw, 1/4-20 x 0.500	38	956-04002	V Pulley 7.25 DIA SPUN
7	710-0604A	Screw, 5/16-18 x 0.625	39	783-04536B	Pedal Support Bracket
8	710-0809	Screw, 1/4-20 x 1.250	40	783-04595A	Shaft Adjust Bracket
9	710-1266	Hex Screw, 5/16-18 x .625	41	956-04015A	Variable Speed Pulley Assembly
	710-0176	Hex Screw, 5/16-18 x 2.75	42	683-04176A	Transmission Bracket Assembly
10	710-3008	Hex Screw, 5/16-18 x .75	43	683-04207	Idler Bracket Assembly
11	911-04075A	Ferrule, 3/8-24 X .375 DIA.	44	710-0347	Hex Screw, 3/8-16 x 1.75
12	712-04063	Flangelock Nut, 5/16-18	45	710-1260A	Screw, 5/16-18 x 0.750
13	712-0700	Flange Nut, 9/16-18	46	712-04065	Flangelock Nut, 3/8-16
14	914-0209	Cotter Pin INT- .125 DIA	47	938-0347	Shoulder Spacer, .625 ID x .169
15	714-04040	Bow-Tie Cotter Pin, 72	48	683-04206	Bracket Assembly
16	718-04407	Pulley Hub, 5/8 SPLINE	49	710-0627	Hex Screw, 5/16-24 x .750
17	720-04028	Shift Knob	50	710-0778	Screw, 1/4-20 x 1.500
18	725-0157	Cable Tie	51	718-04261	Bearing Cup
19	725-1644	Short Spring Switch	52	732-04746	Extension Spring, .94 OD x 6.75 LG
20	726-0214	Push Cap, 5/8	53	736-0362	Flat Washer, .330 x 1.25 x .06:HT
21	926-0320	Plate Insulator Nut	54	941-0600	Ball Bearing, 17 x 40 x 12
22	731-04602	Sleeve, .758 x .821 x 3.3125	55	634-04324	Wheel, 20 x 8 x 8, 38"
23	731-04604	Sleeve, .758 x .821 x 2.4375		634-0104	Wheel, 20 x 8 x 8, 42/46"
24	732-04306	Spring Extension, .80 OD x 3.28 LG	56	736-0242	Bell Washer, .340 x .872 x .060
25	732-04488	Spring Extension, .38 OD x 3.25 LG	57	725-04363	Switch Interlock
26	732-0716D	Spring Extension, .59 OD x 4.00 LG	58	17962	Plate Switch
27	735-0239	Foot Pad, 4.0 LONG	59	738-04237A	Shoulder Screw, #10-32 x .500
28	756-04325	Idler Pulley	60	731-06894	Shift Plate Bearing
29	747-05243	Shift Rod, 46"	61	634-04369	Rim, 8.0 x 7.0 x .750, 38/42/46"
	747-05244	Shift Rod, 38/42"	62	934-0255	Valve, tubeless Air
30	747-05186	Variable Speed Control Rod	63	734-1730	Tire, 20 X 8 X 8 Sq Shldr, 42/46"
31	747-05188	Brake Rod		734-04241	Tire, 20 X 8 X 8 Rd Shldr, 38"
32	747-04969	Belt Keeper Rod			


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

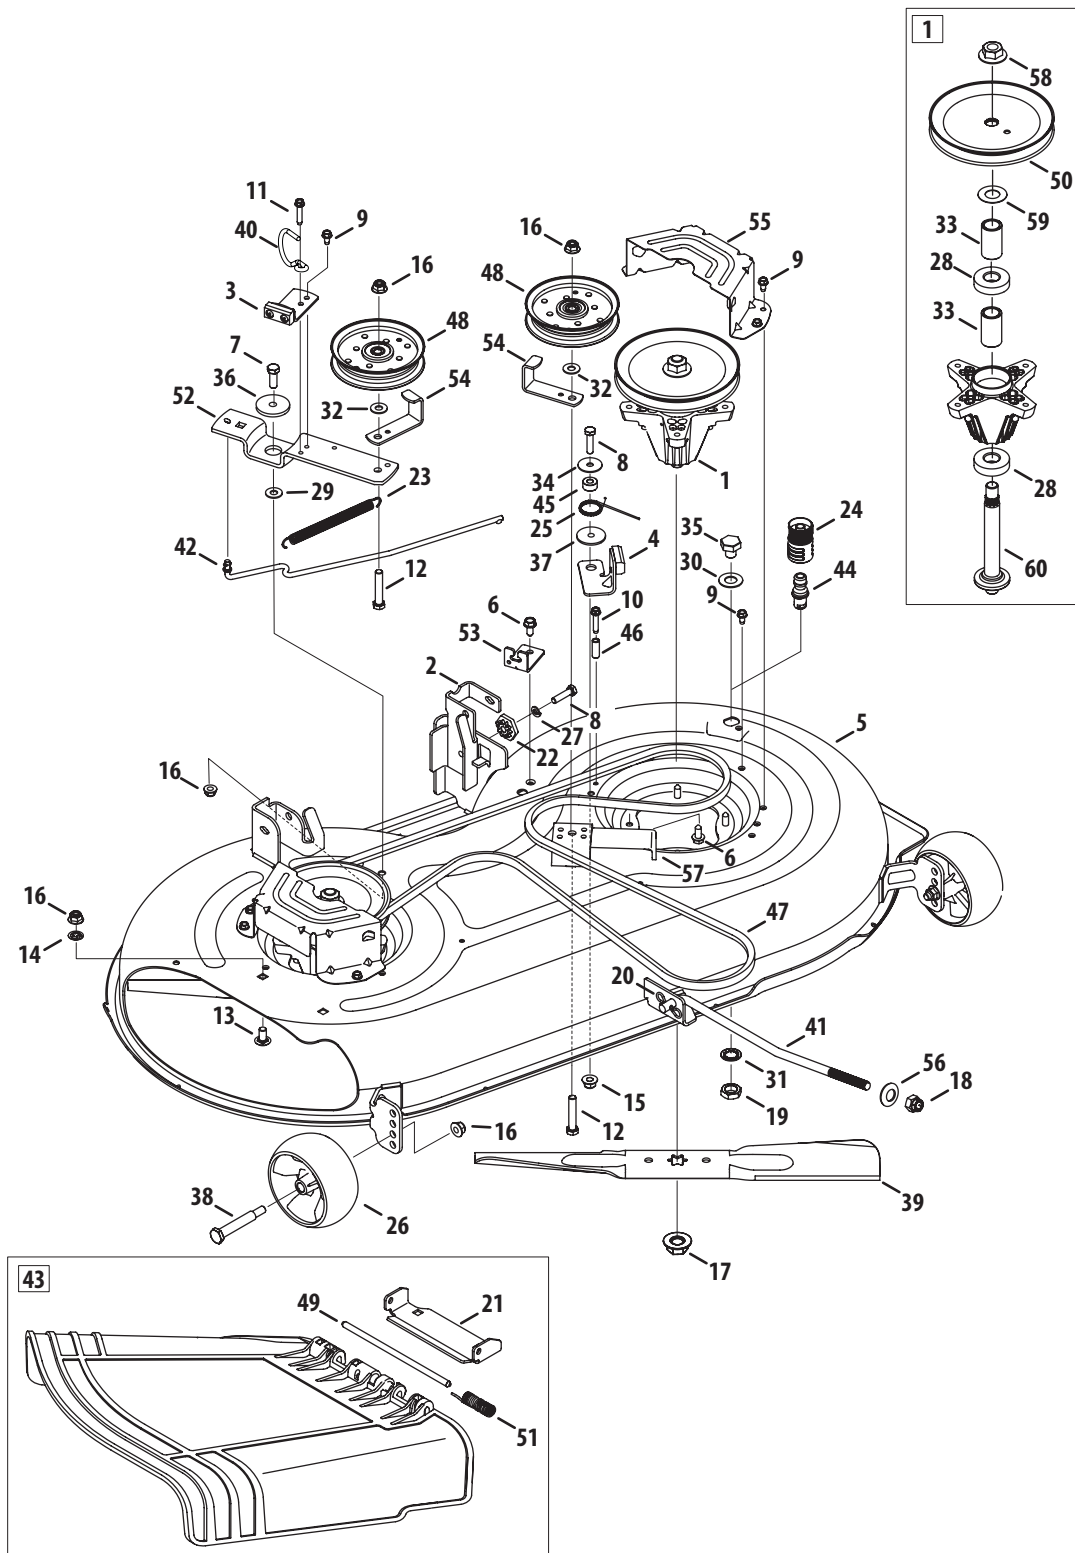

Ref.	Part Number	Description
1.	918-04822A	Spdl Asm, Pul, 6.3 Dia
2.	683-0254B	Brkt Asm, Deck, Hngr Lh Lt
3.	983-04511	Brake Asm, Deck, 42/46
4.	983-04525	Brake Asm, Deck, 46"
5.	983-04570	Deck Asm, Sd, Offset, 42 W/O whl
	983-04572	Deck Asm, Sd, Offset, 42 W/ 2whl
6.	710-04484	Scr, Tt, 5/16-18, .750, Hxindwsh
7.	710-0514	Hhcs, 3/8-16, 1.00, Gr5, Std
8.	710-0528	Hhcs, 5/16-18, 1.25, Gr5, Std
9.	710-0599	Scr, Tt, 1/4-20, 0.500, Hxindwsh
10.	710-0778	Scr, Tt, 1/4-20, 1.500, Hxindwsh
11.	710-0642	Screw, Self-tapping, 1/4-20, .750
12.	710-3144	Hhcs, 3/8-16, 2.00, Gr5, Std
13.	710-3178	Bolt, Crg, 3/8-16, 0.75, Gr1
14.	712-0229	Nut, Push, 3/8
15.	712-04063	Nut, Flglk, 5/16-18, Grf, Nylon
16.	712-04065	Nut, Flglk, 3/8-16, Grf, Nylon
17.	712-0417A	Nut, Flg, 5/8-18
18.	712-04243	Nut, Flxlk, 1/2-13
19.	912-0641	Nut, Hex, M16-1.5 Din 936
20.	714-04043	Bow-Tie Cotter Pin
21.	783-06074A	Chute Bracket
22.	917-04074	Gear, Deck, Adj
23.	932-0384	Spr, Extn, .62 Dia X 6.12 Lg
24.	921-04041	Water Nozzle Adapter
25.	732-04727	Spr, Torsn, .992 I.D X 1.17 O.D
26.	734-04155	Whl, Deck, 5.0 Dia Ball
27.	936-0119	Wash, Lock, 5/16, Regular Duty
28.	941-0919	Brg, Ball, .787id X 1.85 Odx.551
29.	936-0344	Wash, Flat, .385 X 1.0 X .030
30.	736-0187	Wash, Flat, .64 X 1.24 X .06, Ht

Ref.	Part Number	Description
31.	736-0225	Wash, Lock, 5/8, Int Tooth
32.	736-0262	Wash, Flat, .385 X .870 X .092
33.	750-04936	Spcr, .792 X 1.060 X 1.860 Lg
34.	736-0362	Wash, Flat, .330 X 1.25 X .06, Ht
35.	738-04146	Plug, Bolt, M16 X 1.5
36.	738-04162A	Spcr, Shldr, .8840 X .190
37.	748-0234	Spacer, Shoulder
38.	938-3056	Bolt, Shldr, .496 X 2.50, 3/8-16
39.	942-04308	Blade, Cut, 21.23" 2-In-1, Econ
40.	747-05323	Rod, Belt Keepr, 42 Idler
41.	747-05141A	Rod, Lift, Deck, Frt, 12.7
42.	747-05105	Rod, Cont, Brake 42"
43.	631-04288	Chut Asm, 42" Deck, Exp
44.	737-04003D	Deck Water Nozzle
45.	750-0258	Spcr, .315 X .750 X .375 Lg
46.	750-0566A	Spcr, .260 X .375 X 1.030 Lg
47.	954-04060B	Belt, V Typ, A Sec X 96.5
48.	756-04129B	Pul, Idlr, 4.25"Dia
49.	711-04847B	Pin, Hinge, Dia .3125 X 7.96 Lg
50.	956-1227	Pul, Deck, 6.3 Dia
51.	732-04372	Spr, Torsion, .44 I.D. X 2.0
52.	783-05946	Brkt, Idlr, Piv, 46
53.	783-06243	Brkt, Cbl, Deck Engage
54.	783-06368	Brkt, Guard, Belt, 4.25 Pulley
55.	783-06424A	Cvr, Belt, Deck, 42
56.	748-04069	Deck Lift Pivot Cup
57.	783-06643	Brkt, Supt, Deck Stationary Idlr
58.	712-0417A	Nut, Flg, 5/8-18
59.	936-0351	Wash, Flat, .760 Idx1.50 Od
60.	738-1186A	Shft, Spdl, 6.11 Lg.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

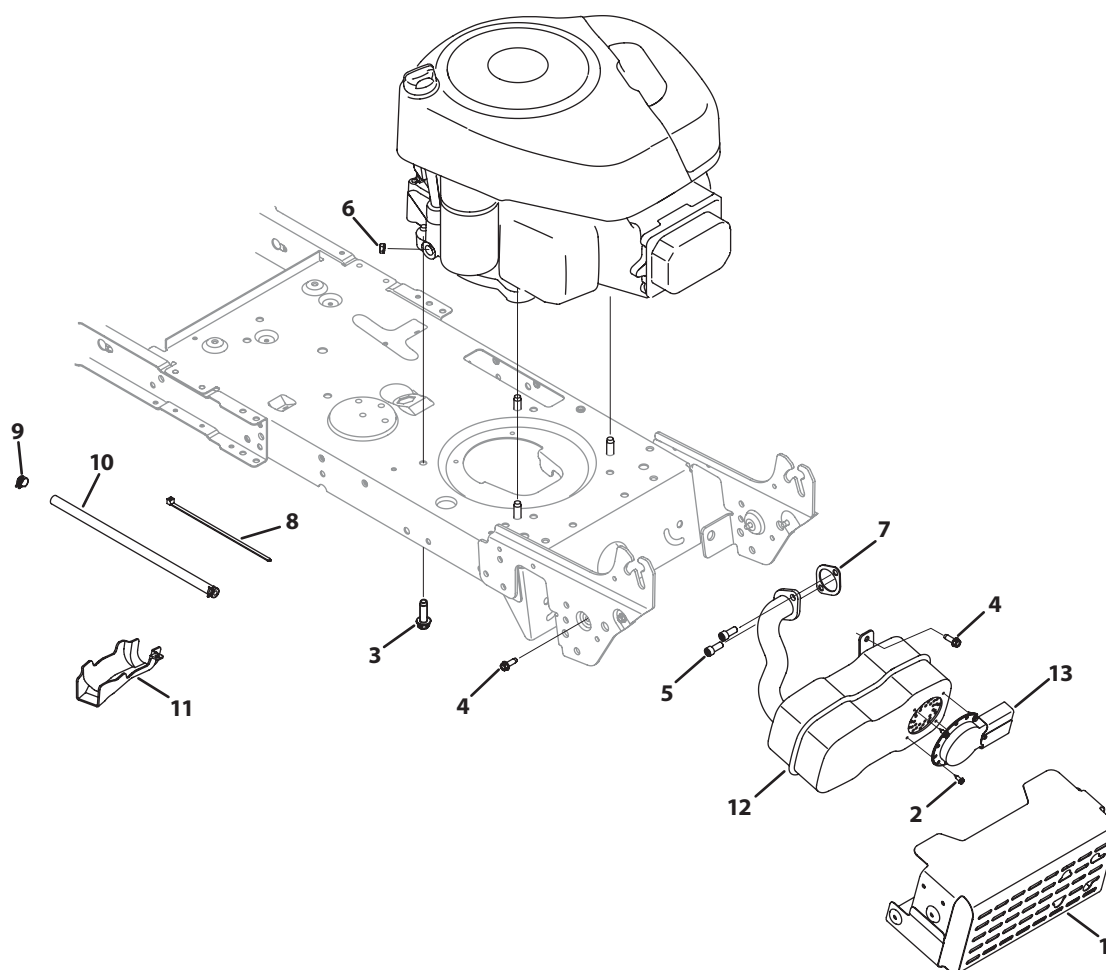

Ref.	Part Number	Description
1	683-04549	Muffler Shield Assembly with Weld
2	710-0227	Screw, 8-18 x .500
3	710-04683	Screw, 3/8-16 x 1.0
4	710-0642	Screw, 1/4-20 x .750
5	710-1314A	Socket Screw, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	BS-692236	Exhaust Gasket, 10 HP Briggs
8	725-0157	Cable Tie
9	726-0205	Clamp Hose, .490 diameter
10	751-10349-28	Fuel Hose, Low Permeation
11	731-05628	Oil Drain Sleeve
12	751-10448C	Muffler, Single Inlet
13	751-11053	Muffler Deflector Long

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

Wiring Harness Schematic - 725-04567F

