


PARTS LIST

Craftsman Snow Thrower Model 247.88782

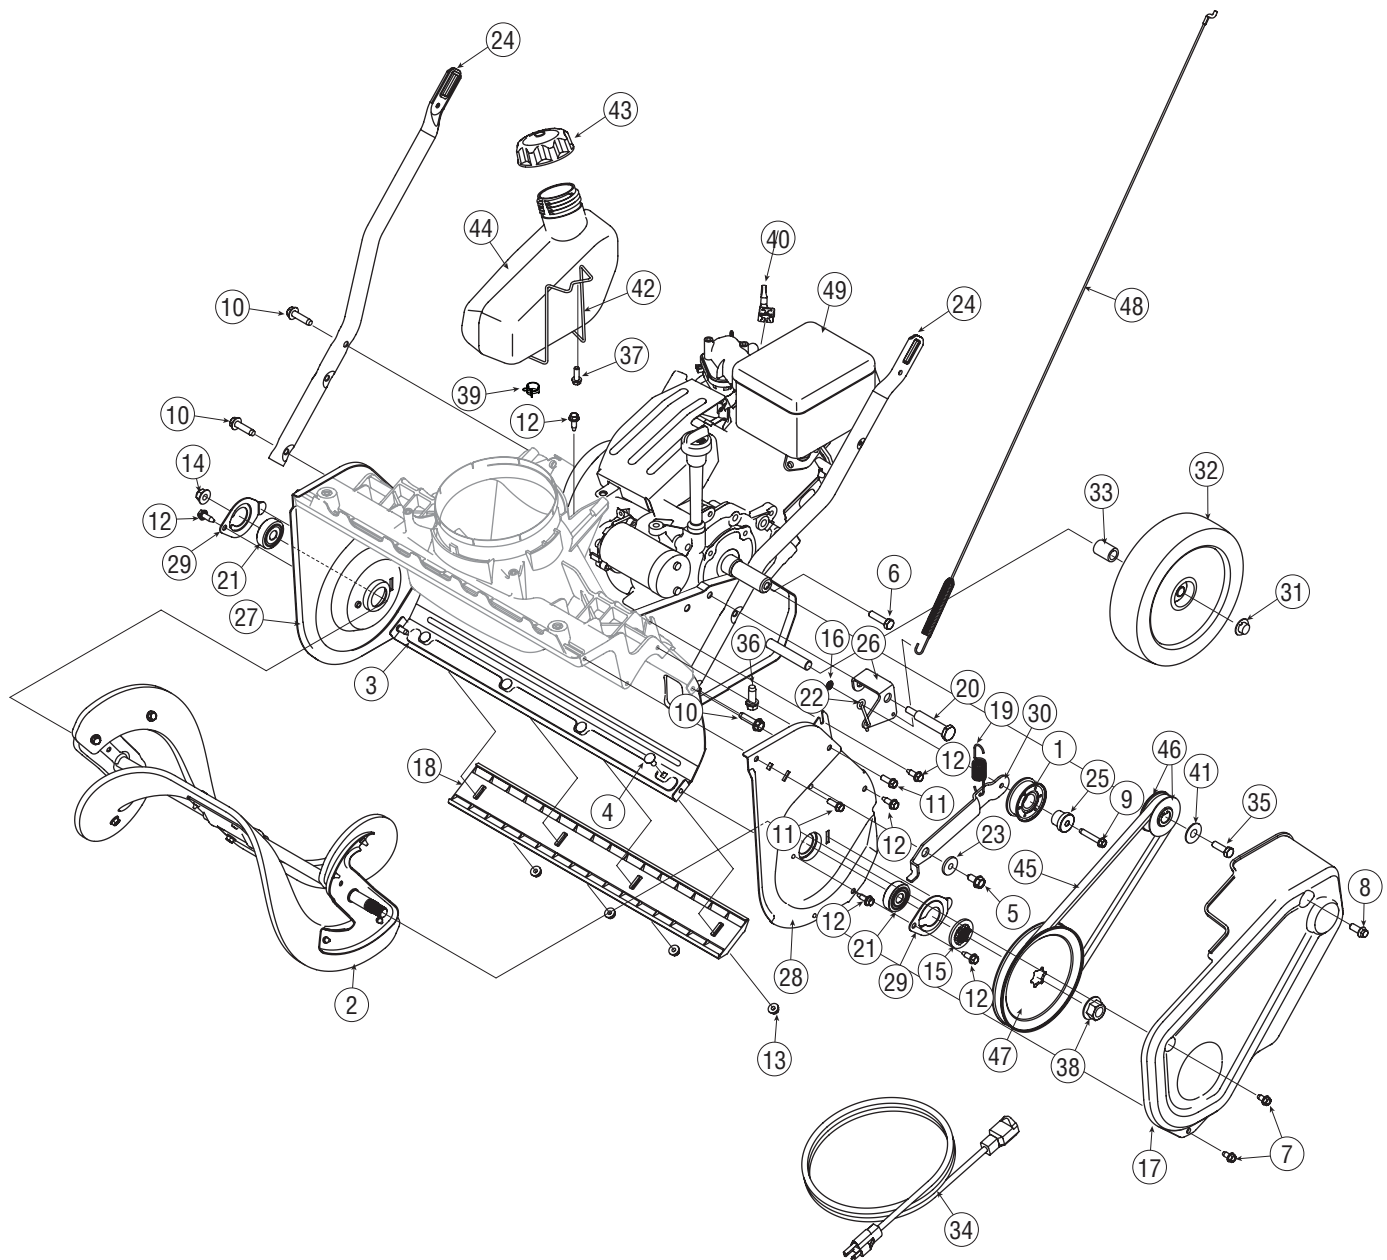

PARTS LIST


Craftsman Snow Thrower Model 247.88782

Ref. No.	Part No.	Description
1.	684-04168	Idler Pulley Assembly
2.	984-04393	Auger Assembly
—	753-06469	Rubber Auger Paddle Kit (Includes 2 paddles and 12 hex washer screws)
3.	684-04398-4044	Frame Assembly
4.	710-0134	Carriage Screw, 1/4-20 x .62
5.	710-04484	Hex Washer Screw, 5/16-18 x .750
6.	710-05183	Hex Screw, 5/16-24 x 1.25
7.	710-0599	Hex Washer Screw, 1/4-20 x .500
8.	710-0627	Hex Lock Screw, 5/16-24 x .750
9.	710-0778	Hex Washer Screw, 1/4-20 x 1.500
10.	710-0817	Hex Washer Screw, 5/16-18 x 1.250
11.	710-0895	Hex Washer Screw, 1/4-15 x .750
12.	710-1652	Hex Washer Screw, 1/4-20 x .625
13.	712-04064	Flange Lock Nut, 1/4-20
14.	712-04065	Flange Lock Nut, 3/8-16
15.	718-04836	Pulley Hub
16.	726-0233	Push Nut, .25 x .50
17.	731-07737A	Belt Cover
18.	731-08171	Shave Plate
19.	732-04748	Extension Spring, .70 x 3.035
20.	738-04456	Shoulder Bolt, 5/16-24 x .496 x 2.18
21.	741-04517	Ball Bearing, .5000 x 1.375 x .4375
22.	747-05360A	Drive Cable Wire Support
23.	748-0234	Shoulder Spacer
24.	749-04810-0637	Lower Handle

Ref. No.	Part No.	Description
25.	750-04571	Shoulder Spacer
26.	790-00426-0637	Idler Cable Bracket
27.	790-00444-4044	RH Side Plate
28.	790-00445-4044	LH Side Plate
29.	790-00457-4044	Bearing Cup
30.	790-00461-0637	Idler Bracket
31.	726-0299	Push Cap, 1/2
32.	734-1781	Wheel, 8 x 1.7
33.	750-05417	Sleeve Spacer, .525 x .78 x 1.07
34.	929-0071A	Extension Cord
35.	710-0627	Hex Lock Screw, 5/16-24 x .750
36.	710-0654A	Hex Washer Screw, 3/8-16 x 1.000
37.	710-0895	Hex Washer Screw, 1/4-15 x .750
38.	912-0702	Flange Nut, 7/16-20
39.	726-0205	Hose Clamp, .490
40.	731-07664	Choke Extension Lever
41.	736-0371	Thrust Washer, .343 x .880 x .062
42.	747-05513	Gas Tank Wire Support
43.	751-10487A	Fuel Cap
44.	751-11648	Fuel Tank
45.	954-04050	Belt, .500 x 35.06
46.	956-0416B	Pulley Half, .625 x 2.25
47.	756-04443	Pulley, 1/2 x 6.00
48.	946-04782	Clutch Cable
49.	952Z370-JU-11	Replacement Engine

PARTS LIST

Craftsman Snow Thrower Model 247.88782

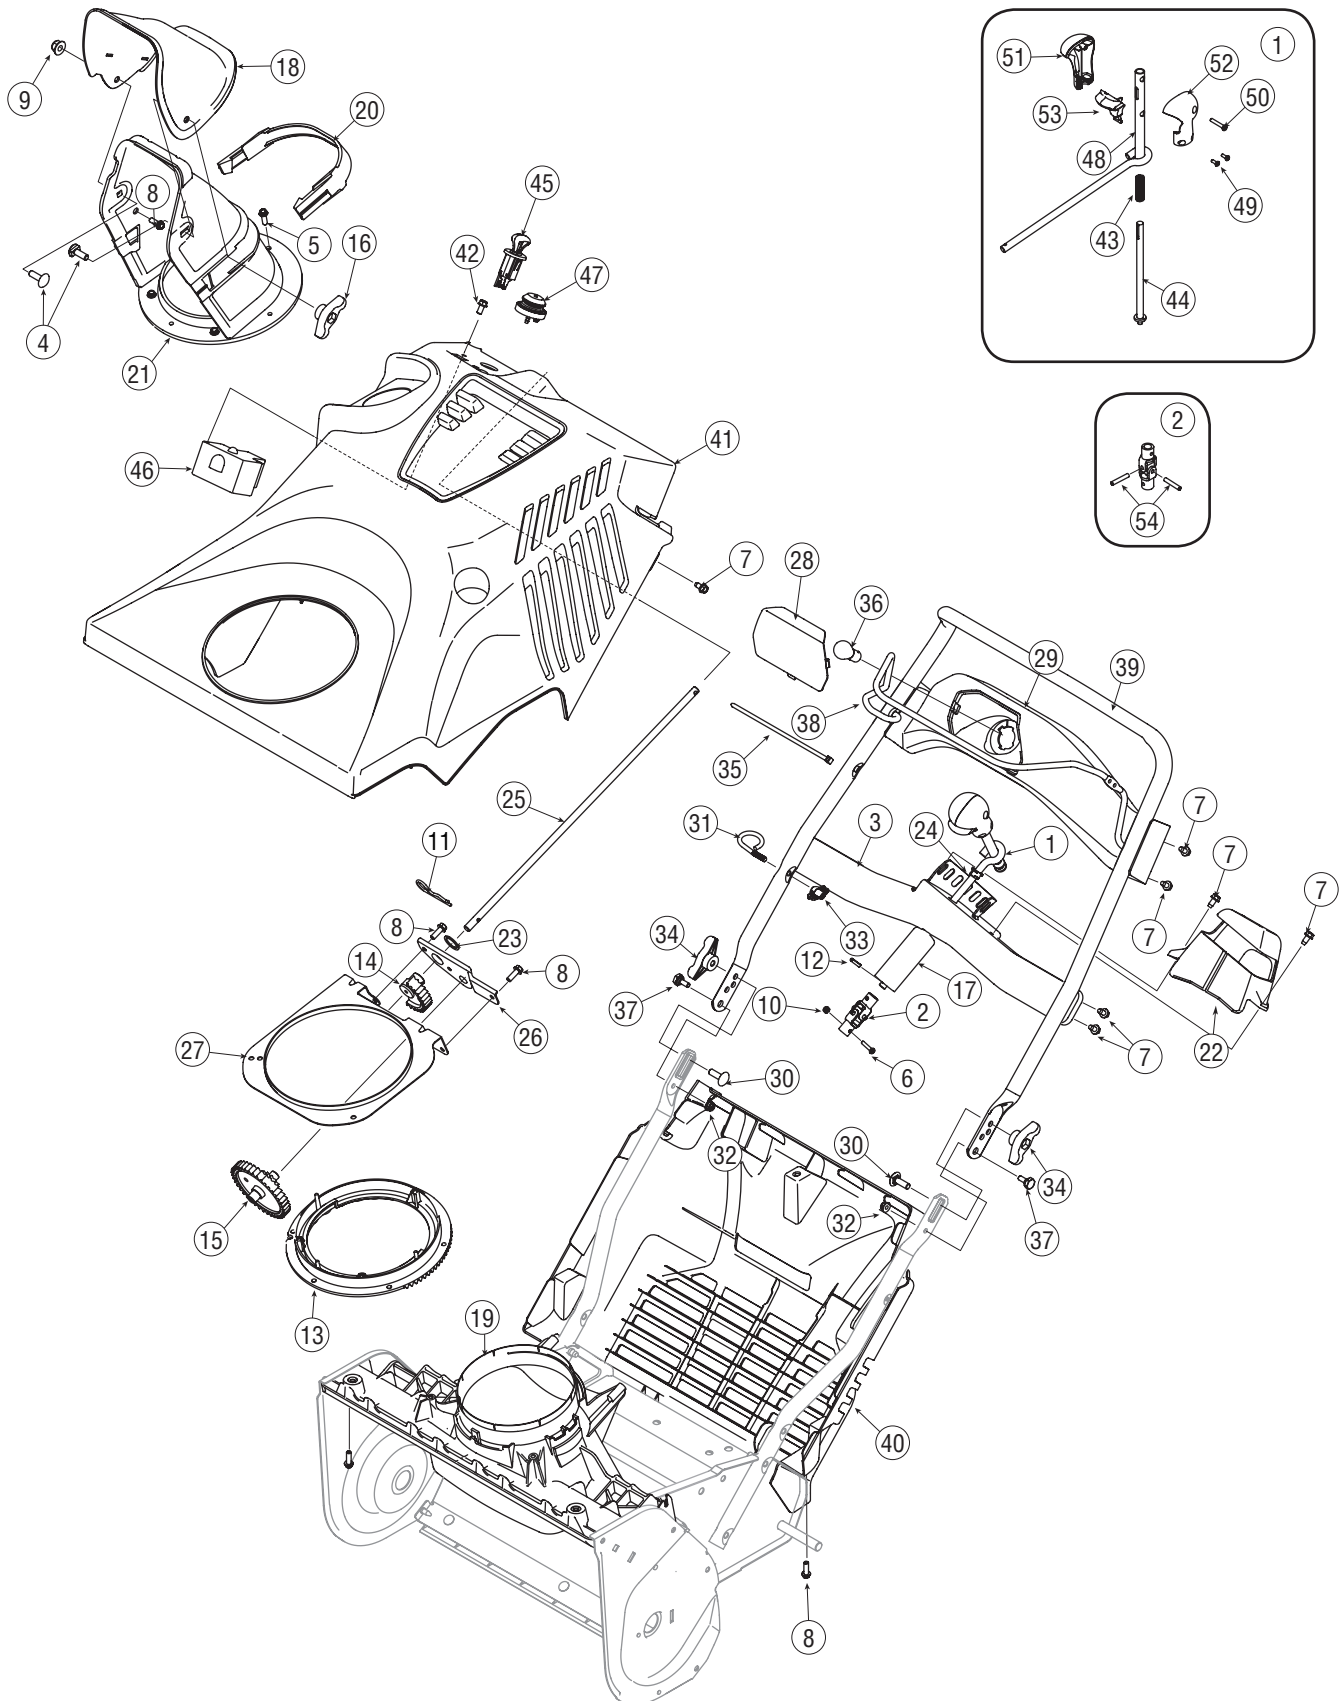

PARTS LIST

Craftsman Snow Thrower Model 247.88782


Ref. No.	Part No.	Description
1.	631-04526P	Chute Rotation Control Assembly
2.	684-04350	Joint Block Assembly
3.	684-04383-0637	Indicator Bracket Assembly
4.	710-0451	Carriage Bolt, 5/16-18 x .750
5.	710-05108	Hex Washer Screw, 1/4 x .750
6.	710-05179A	Machine Screw, #8-32 x .88
7.	710-0599	Hex Washer Screw, 1/4-20 x 0.500
8.	710-0895	Hex Washer Screw, 1/4-15 x 0.750
9.	712-04035	Hex Lock Nut, #8-32
10.	712-04263	Hex Lock Nut, #8-32
11.	714-04003	Cotter Pin, .125 x 2.5
12.	715-04095	Spring Pin, .156 x .85
13.	917-04844B	Bevel Gear, 95T
14.	717-04940	Spur Gear, 35T
15.	717-04941	Spur Gear, 40T/11T
16.	720-04122	Wing Knob, 5/16-18
17.	720-04174	Grip, 1.18 x 3.33
18.	731-04426A	Upper Chute
19.	931-07626A	Chute Adapter
20.	731-07708	Chute Plug
21.	931-07753A	Lower Chute
22.	731-07957	Chute Rotation Cover
23.	736-04161	Flat Washer, .75 x 1.00 x .06
24.	941-0475	Plastic Bushing, .380
25.	747-05299A	Chute Rotation Rod, 3/8
26.	790-00416	Gear Mounting Plate
27.	790-00471	Gear Retainer Bracket
28.	731-07784	Handle Panel Lens

Ref. No.	Part No.	Description
29.	631-04504	Handle Panel
—	777X44559	Light Label
30.	710-04998	Carriage Screw, 5/16-18 x 1.00
31.	710-05348	Eye Bolt, 1/4-20
32.	712-04064	Flange Lock Nut, 1/4-20
33.	720-0279	Wing Knob, 1/4-20
34.	720-04122	Wing Knob, 5/16-18
35.	725-0157	Cable Tie, 3/16 x .05 x 7.4
36.	725-1629	Lamp, #1141
37.	738-04419A	Shoulder Screw, 1/4-20 x .375 x .148
38.	747-05327B-0637	Auger Control
39.	749-04693B-0637	Upper Handle
40.	931-04579	Bottom Cover Assembly
41.	631-04607	Cover Assembly
42.	710-04187	Hex Washer Screw, 1/4-15 x .50
43.	732-04789	Compression Spring, .460 x 1.469
44.	731-08018	Chute Rotation Rod
45.	925-04031A	Ignition Switch Assembly
46.	951-10645A	Electric Starter
47.	951-10639A	Primer
48.	684-04381-0637	Chute Rotation Rod Assembly
49.	710-04352	Screw, #6 x .375
50.	710-04353	Screw, #8 x 1.00
51.	731-04904	RH Control Knob
52.	731-04905	LH Control Knob
53.	731-06525	Joystick Trigger
54.	715-0150	Roll Pin, 3/16 x 1.1
NS	925-04139	Wiring Harness


PARTS LIST

Craftsman Snow Thrower Model 247.88782

777S34027

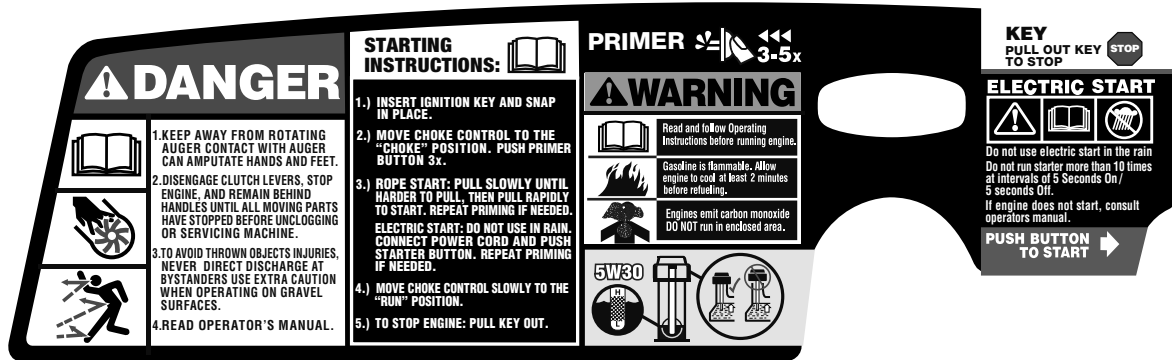

777122139

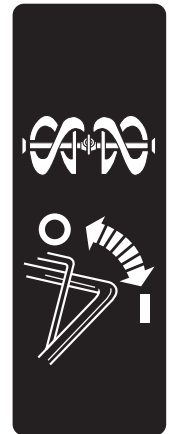

777D16367



777X43688



777S33731



777S33118



777S32236



777122992



777D16345



777123463



777123574

