


# Hood


- Attachments:  
Bagger.....OEM-190-180A  
Bumper Kit.....OEM-190-679  
Mulch Kit.....OEM-190-116  
Snow Blade.....OEM-190-833  
Snow Thrower.OEM-190-032

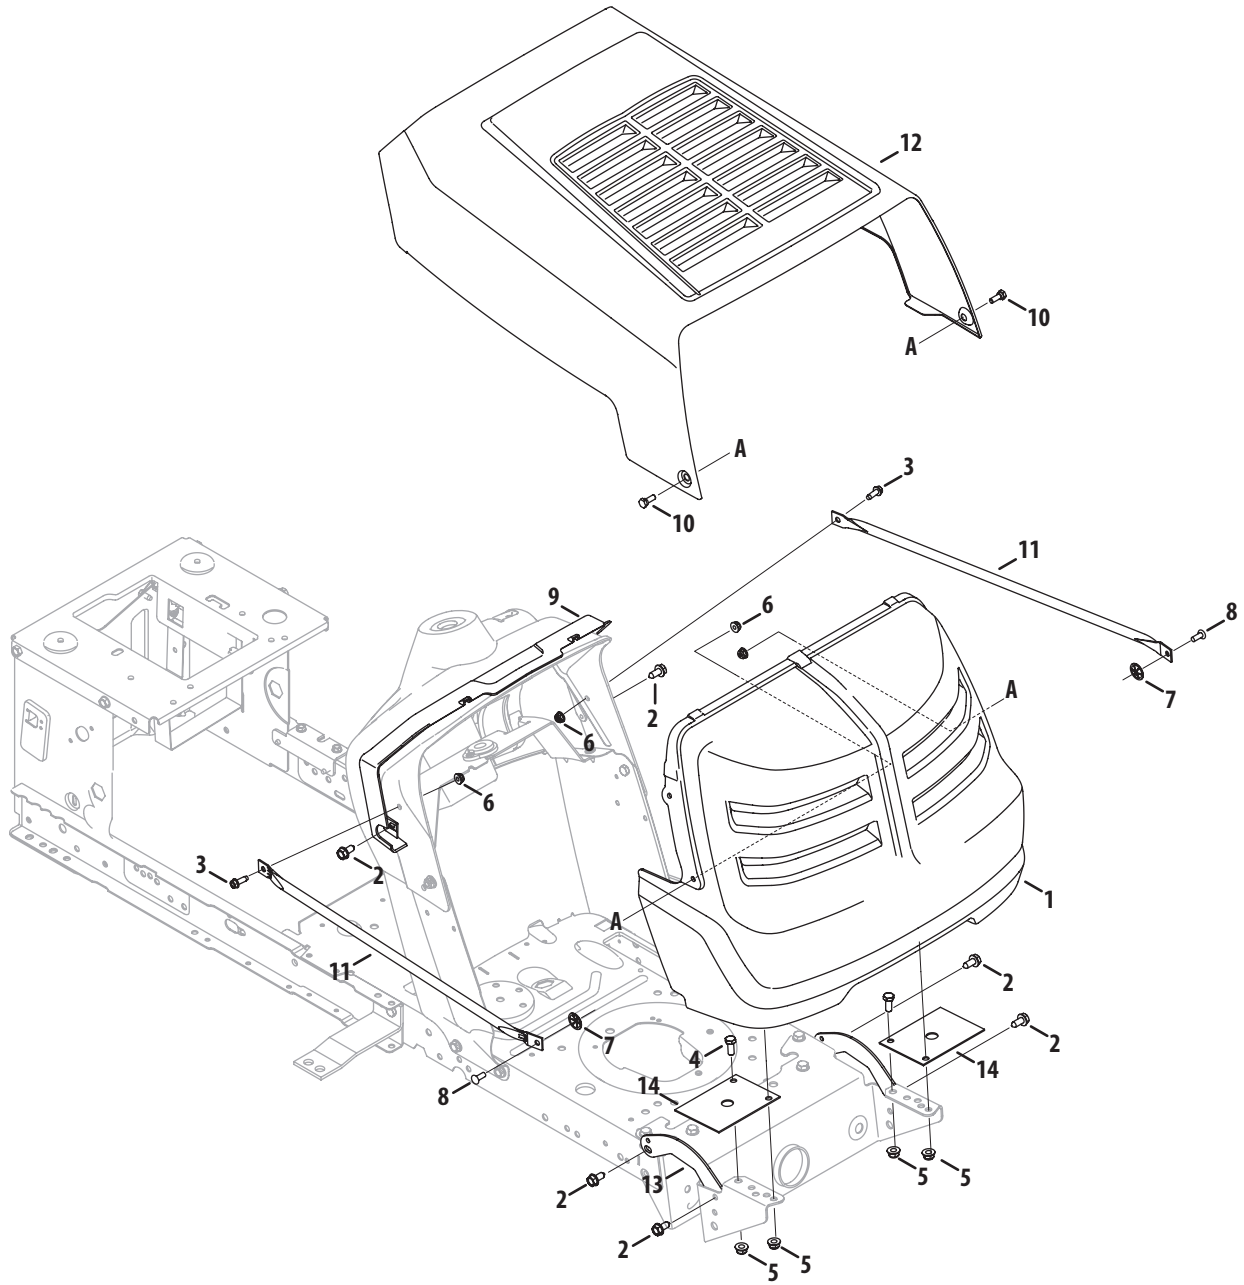

Ref. No.	Part No.	Description
1	931-04472	Grill Assembly
2	710-04484	Screw, Tap, 5/16-18, .750
3	710-0642	Screw, Tap, 1/4-20, 0.750
4	710-3008	Hex Screw, 5/16-18, .75
5	712-04063	Flange Lock Nut, 5/16-18
6	712-04064	Flange Lock Nut, 1/4-20
7	926-04012	Nut, push-On, .25 Dia
8	728-0162	Rivet, flat Head 1/4"
9	731-05012B	Collar, dash, 0/2 Style
10	938-0952A	Bolt, Shoulder, .375 X .125
11	749-04220	Grill Support Rod
12	783-04608	Hood
13	783-05027	Front Pivot Support Bracket
14	783-06682	Support Bracket

**NOTE,** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


# Dash

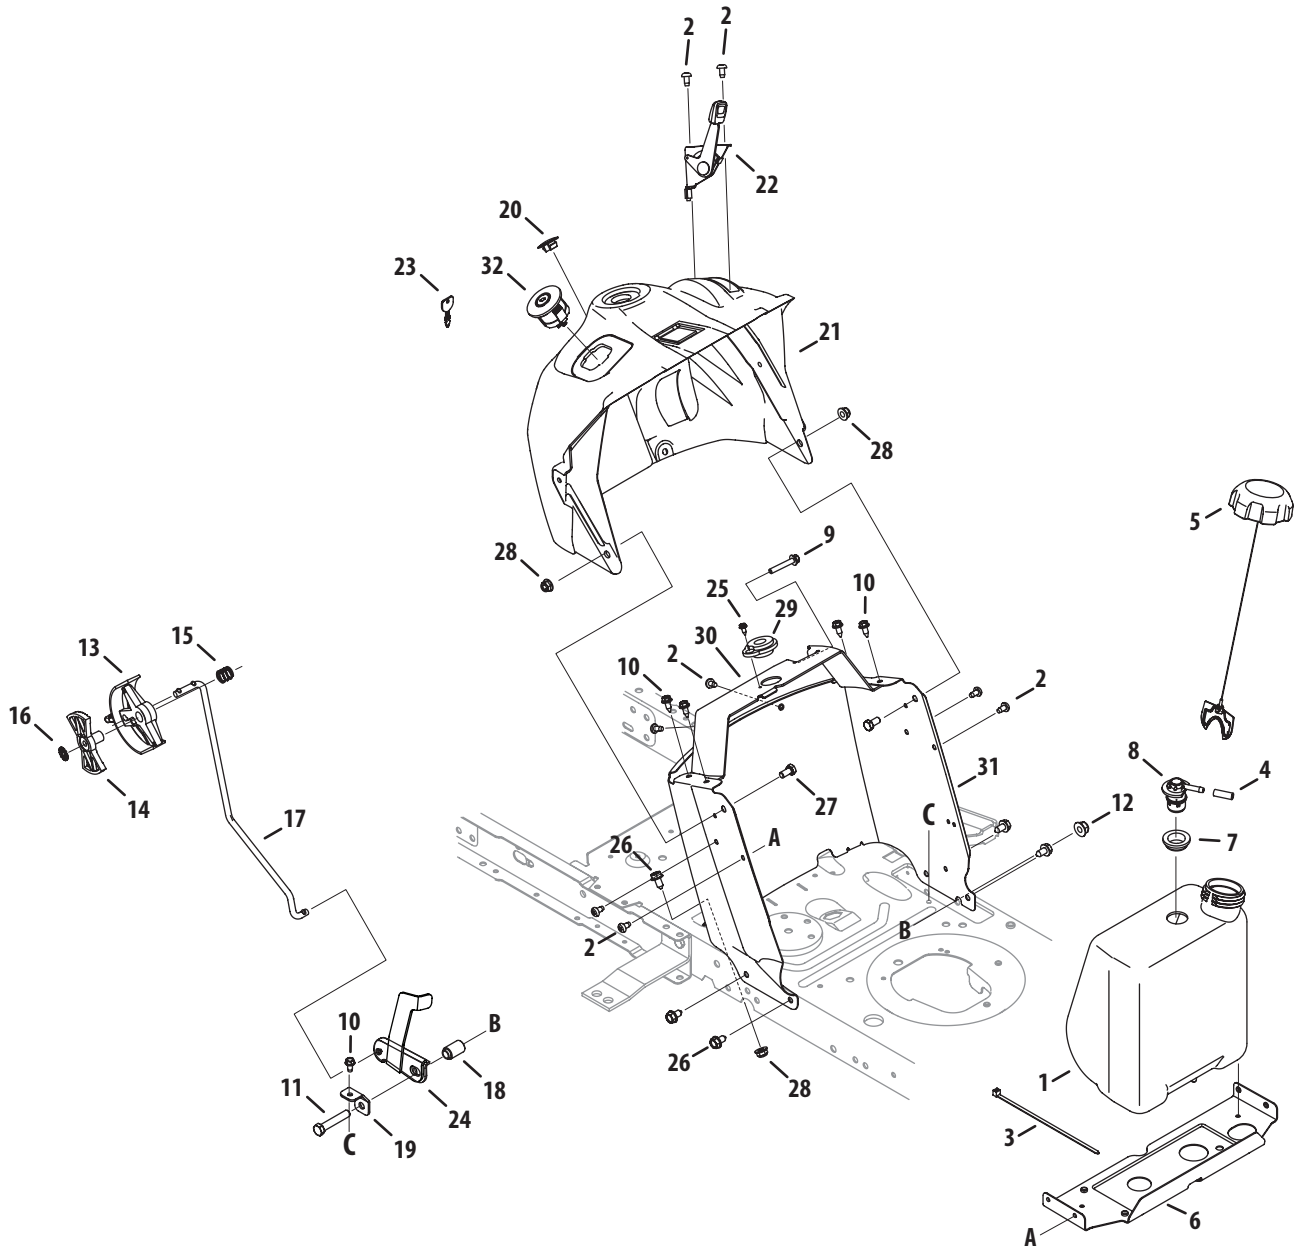

Ref. No.	Part No.	Description
1	951-04304	Fuel Tank, 1.36 Gal.
2	710-05070	Screw, Tap, 1/4-20, 0.500
3	726-0230	Cable Tie, 36.0 Long
4	751-12089-28	Hose Vent
5	951-12179A	Fuel Cap, 2.25"
6	783-07083	Gas Tank Support Bracket
7	735-04081	Rubber Grommet, 23 x 3.55
8	751-12118	Rollover Valve
9	710-05237	Hex Screw, 1/4-20 x 1.50
10	710-1652	Tap Screw, 1/4-20, 0.625
11	710-3144	Hex Screw, 3/8-16, 2.00, Gr5, Std
12	712-04065	Flange Lock Nut, 3/8-16
13	731-07885A	Shift Lever
14	731-07965	Index Control
15	732-04877	Compr. Spring, .685 OD x .63
16	736-3006	Lock Washer, 1/4
17	747-05398	Speed Selector Control Rod
18	750-04465C	Flange Spacer, .390 X .671 X 1.095
19	783-06823	Speed Latch
20	731-05265	Choke Plug
21	931-08542	Dash, Upper
22	746-04367	Throttle/Choke Cable Assembly
23	925-1745A	Key
24	783-06991	Speed Latch - No RMC
25	910-0224	Screw, #10-16 x .500
26	710-0604A	Tap Screw, 5/16-18, 0.625
27	710-3025	Hex Screw, 5/16-18 x .625
28	712-04063	Flange Lock Nut, 5/16-18
29	741-0587	Bearing, .628 ID x 1.36
30	783-06785A	Bracket, Steering Support
31	783-06811	Dash, Lower NWNDW
32	925-04019	Key Switch

**NOTE,** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Frame and PTO Lift

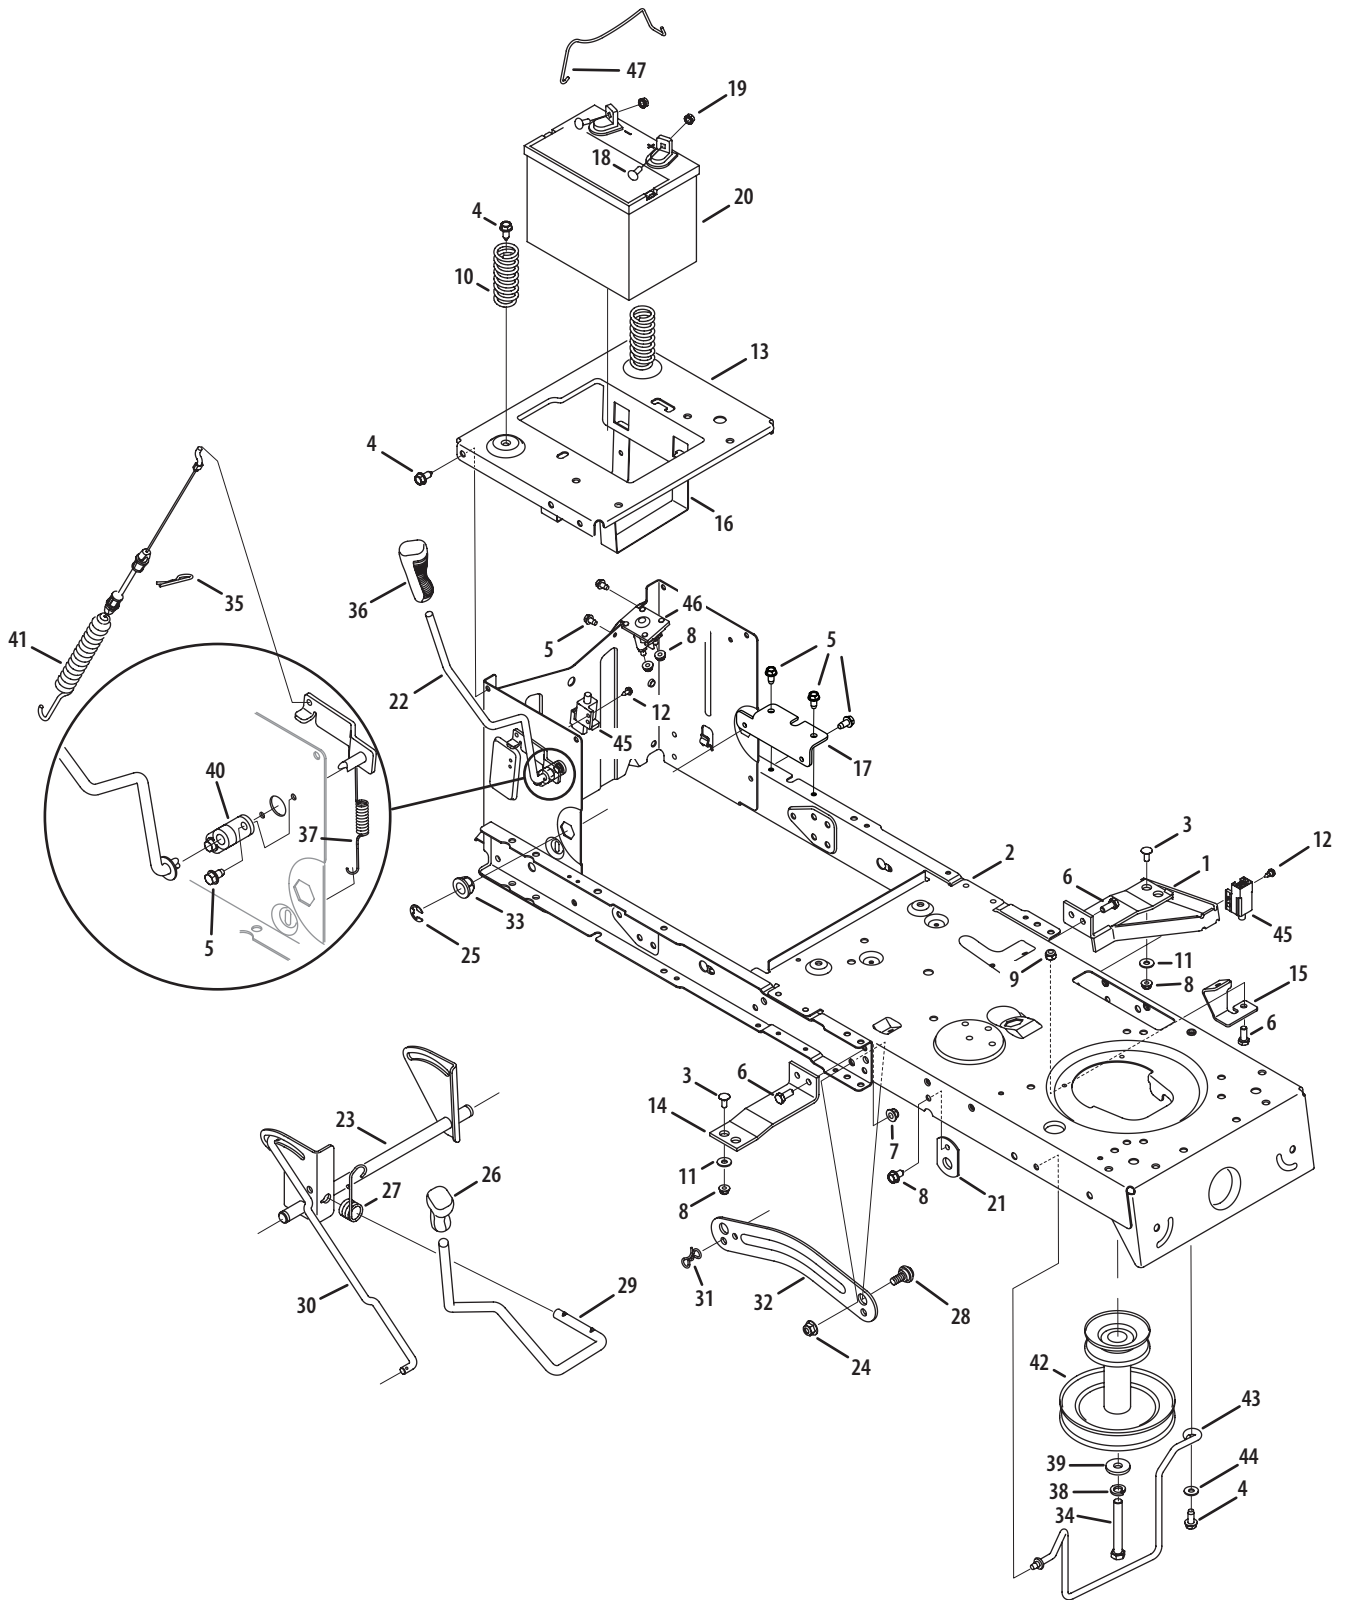

## Frame and PTO Lift

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	683-04195	Support Bracket	25	716-0106A	E Ring
2	683-04649	Frame Assembly	26	720-0311	Handle Grip, 1/2
3	710-0134	Screw Carriage, 1/4-20 x .62	27	732-04225	Torsion Spring
4	710-04484	Screw 5/16-18 x .750	28	738-04130	Shoulder Bolt, 3/8-16 x .625 x .175
5	710-0599	Screw, 1/4-20 x .500	29	747-04282	Deck Lift Handle
6	710-3008	Hex Screw, 5/16-18 x .75	30	747-04393	Lift Rod
7	712-04063	Flange Lock Nut, 5/16-18	31	714-04040	Bow-tie Cotter Pin
8	712-04064	Flange Lock Nut, 1/4-20	32	783-04494C	Lift Arm, RH
9	912-0429	Hexlock Nut, 5/16-18		783-04711C	Lift Arm, LH
10	732-04035	Compression Spacer, 1.28 x 3.125	33	941-0225	Hex Flange Bearing
11	736-0173	Flat Washer, .28 x .74 x .063	34	710-04608	Hex Screw, 7/16-20 x 3.25
12	738-04237A	Shoulder Spacer, 10-32 x .500	35	914-0145	Click Pin, .092 x 1.64
13	783-04548D	Seat Frame Bracket	36	720-04049A	Handle Grip, 3/8
14	783-04637	Running Board Bracket	37	732-04276A	PTO Spring Extension
15	783-04753	Support Frame Bracket	38	936-0171	Regular Duty Washer Lock, 7/16
16	783-04869A	Battery Bracket	39	736-0322	Flat Washer, .450 x 1.250 x .164
17	783-05389A	Brace Frame Bracket	40	741-04119A	PTO Bearing
18	710-04666	Hex Head Flange, 1/4-20 x .75	41	946-04173C	Deck Engage Cable
19	712-0271	Sems Nut, 1/4-20	42	756-04196A	Engine Pulley, 3.39 x 6.12
20	925-1707D	230 CCA Battery	43	747-04332A	Belt Keeper
21	783-04536B	Support Bracket	44	936-0300	Flat Washer, .406 x .875 x .059
22	647-04096	PTO Handle Assembly	45	725-04363	Switch Interlock
23	683-04155A	Lift Assembly	46	725-04439	12V Solenoid
24	712-04065	Flange Lock Nut, 3/8-16	47	683-04448	Rod Asm, Batt, Lt-5

**NOTE,** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.




## Front End Steering

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	617-04094	Front Steering Gear Assembly	20	748-04068	Spacer, .71 x .125 x .56
2	710-0514	Hex Screw, 3/8-16 x 1.00	21	734-04372	Tire, 13 X 5 X 6 Round Shoulder
3	710-0643	Hex Screw, 5/16-18 x 1.00, Lock	22	738-04162A	Shoulder Spacer, .884 x .190
4	710-1309	Machine Screw, 5/16-18 x .750	23	736-04228A	Flat Washer, .781 x 1.590
5	710-3180	Hex Screw, 5/16-18 x 1.75	24	634-04519	Wheel Assembly
6	912-0240	Jam Nut, 7/16-20	25	714-04039A	Cotter Pin, 5/32 x 1.25
7	912-0214	Jamlock Nut, 3/8-24	26	710-04484	Screw, 5/16-18 x .750
8	712-04063	Flange Lock Nut, 5/16-18	27	712-04065	Flange Lock Nut, 3/8-16
9	634-04098A	Rim Assembly, 6.0 x 4.0	28	914-0474	Cotter Pin, .125 x .75
10	923-0448A	Ball Joint, 7/16-20	29	683-0128B	Pivot Axle
11	736-0242	Bell Washer, .340 x .872 x .060	30	726-0341	Push Nut, 3/4
12	938-04014A	Front LH Axle	31	731-04057A	Standard Axle Cap
	938-04013	Front RH Axle	32	738-04128	Shoulder Bolt, 3/8-16 x .500 x 2.38
13	738-04141	Shoulder Bolt, 5/16-18 x .435 x .350	33	741-0660A	Flange Bearing, .760 x .941 x 1.0
14	738-0919A	Steering Shaft, 5/8 x 22.08	34	747-04299A	Fixed Rod
15	941-04124	Flange Bearing, 5/8	35	783-04568	Front Deck Hanger Bracket
16	934-0255	Valve, tubeless Air	36	783-04601C	Pivot Bar Bracket
17	747-05385	Steering Link	37	931-0484A	Hub Cap
18	948-0389	Cap, 1.25 x .16	38	631-04028	Steering Wheel
19	748-04065	Steering Block	39	731-04040	Sprig Cap

**NOTE,** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.



# Seat and Fender

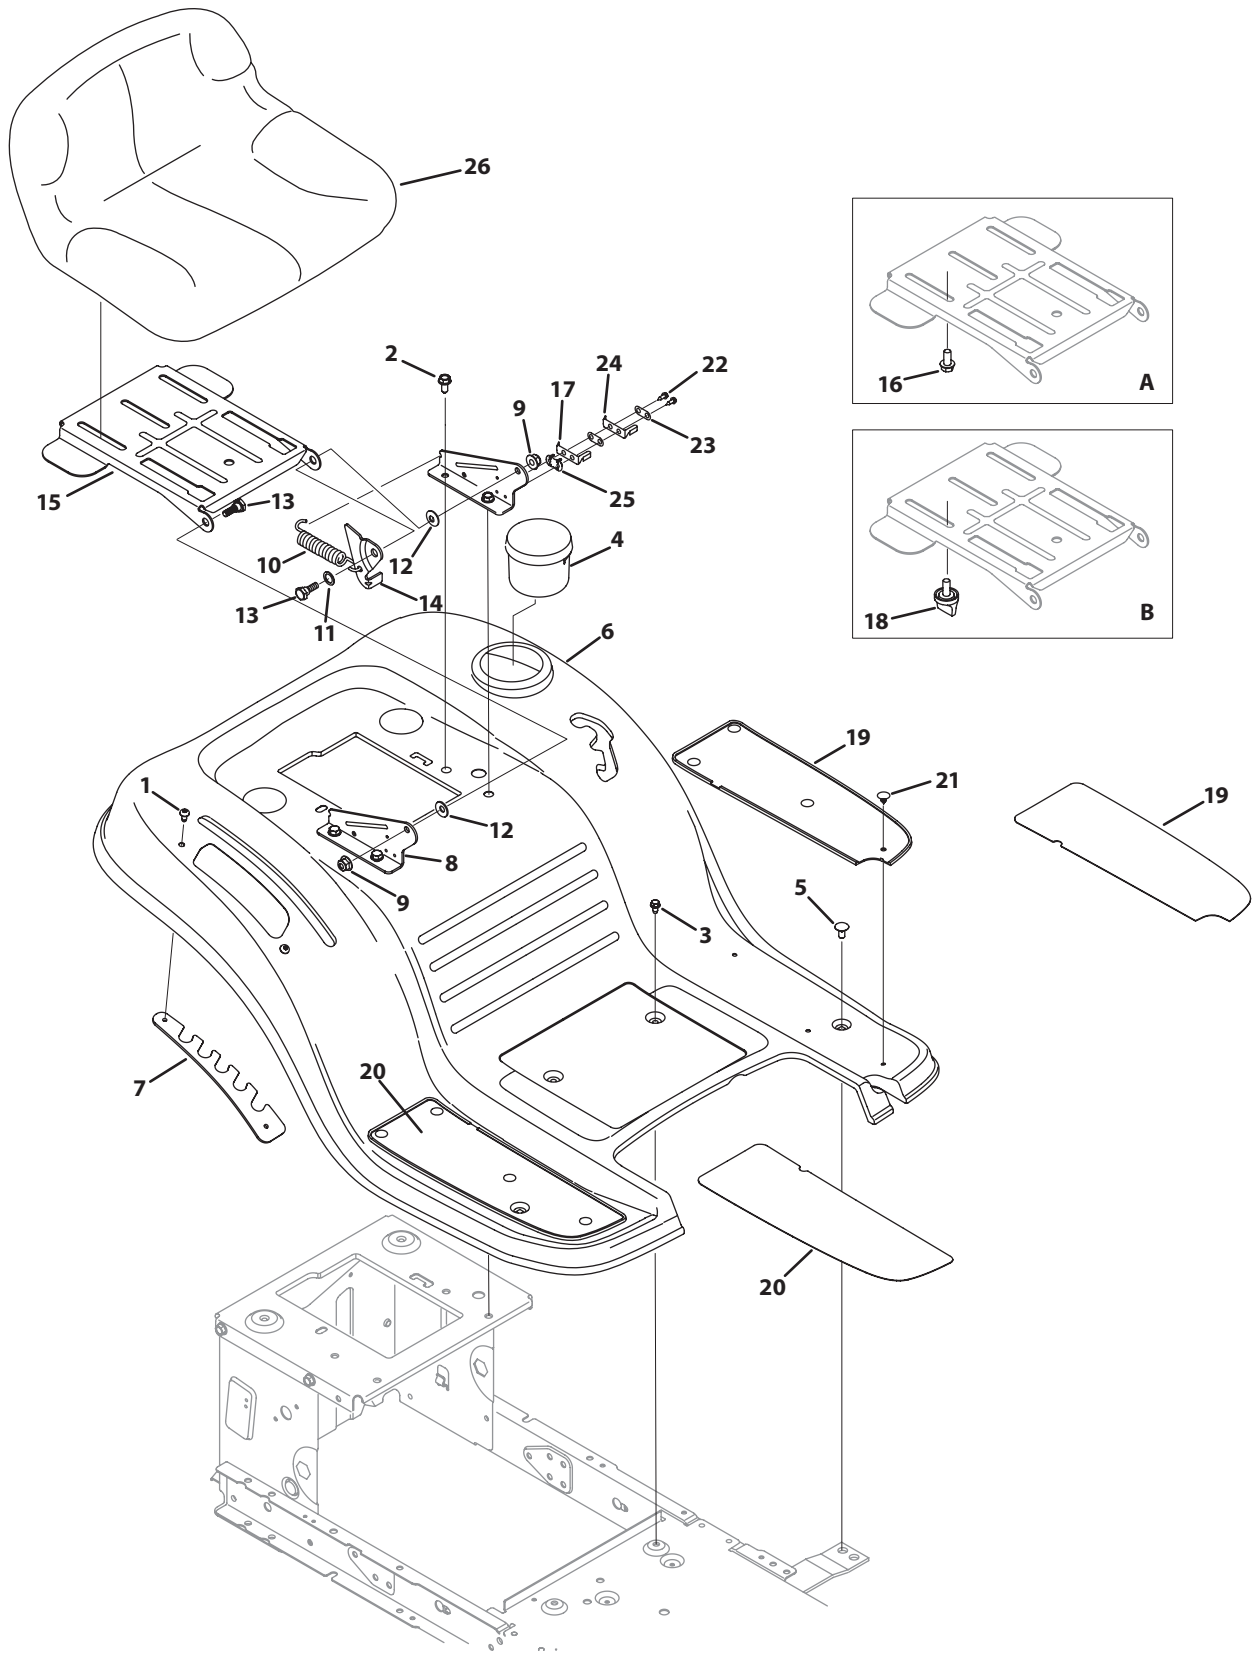


## Seat and Fender

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	710-05070	Screw, 1/4-20 x .500	15	783-04081D	Pivot Seat Manual Adjust Bracket
2	710-04484	Screw, 5/16-18 x .750	16	710-04482	Hex Head Flange, 3/8-16 x .875
3	710-0599	Screw Pan Torx Head, 1/4-20 x .500	17	725-1439	Inner Seat Spring
4	731-04591A	Cup Holder	18	720-04061	Knob, 3/8-16 x .875
5	710-0134	Screw Carriage, 1/4-20 x .62	19	735-04047	Foot Pad, LH
6	783-04587D	Fender - Red		723-04026	Foot Pad, Abrasive, LH
7	783-04843	Lift Adjuster Bracket - Powder Black	20	735-04048	Foot Pad, RH
8	783-1489D	Seat Mount Bracket - Powder Black		723-04025	Foot Pad, Abrasive, RH
9	712-04063	Flange Lock Nut, 5/16-18	21	726-04072A	Ratchet Clip, .250 x .500
10	732-1184	Extension Spring	22	710-0227	Screw, 8-18 x .500
11	936-0108	Flat Washer, .510x .750 x .033	23	726-0279	Insulator Plate
12	736-0242	Bell Washer, .340 x .872 x .060	24	925-1303	Outer Seat Spring
13	938-0296	Shoulder Screw, 5/16-18 x .437 x .268	25	726-0278	Insulator Boss Plate
14	783-0209D	Lift Seat Bracket	26	757-04099	Low Back Seat, Black, Set-up A or B

**NOTE,** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Transmission

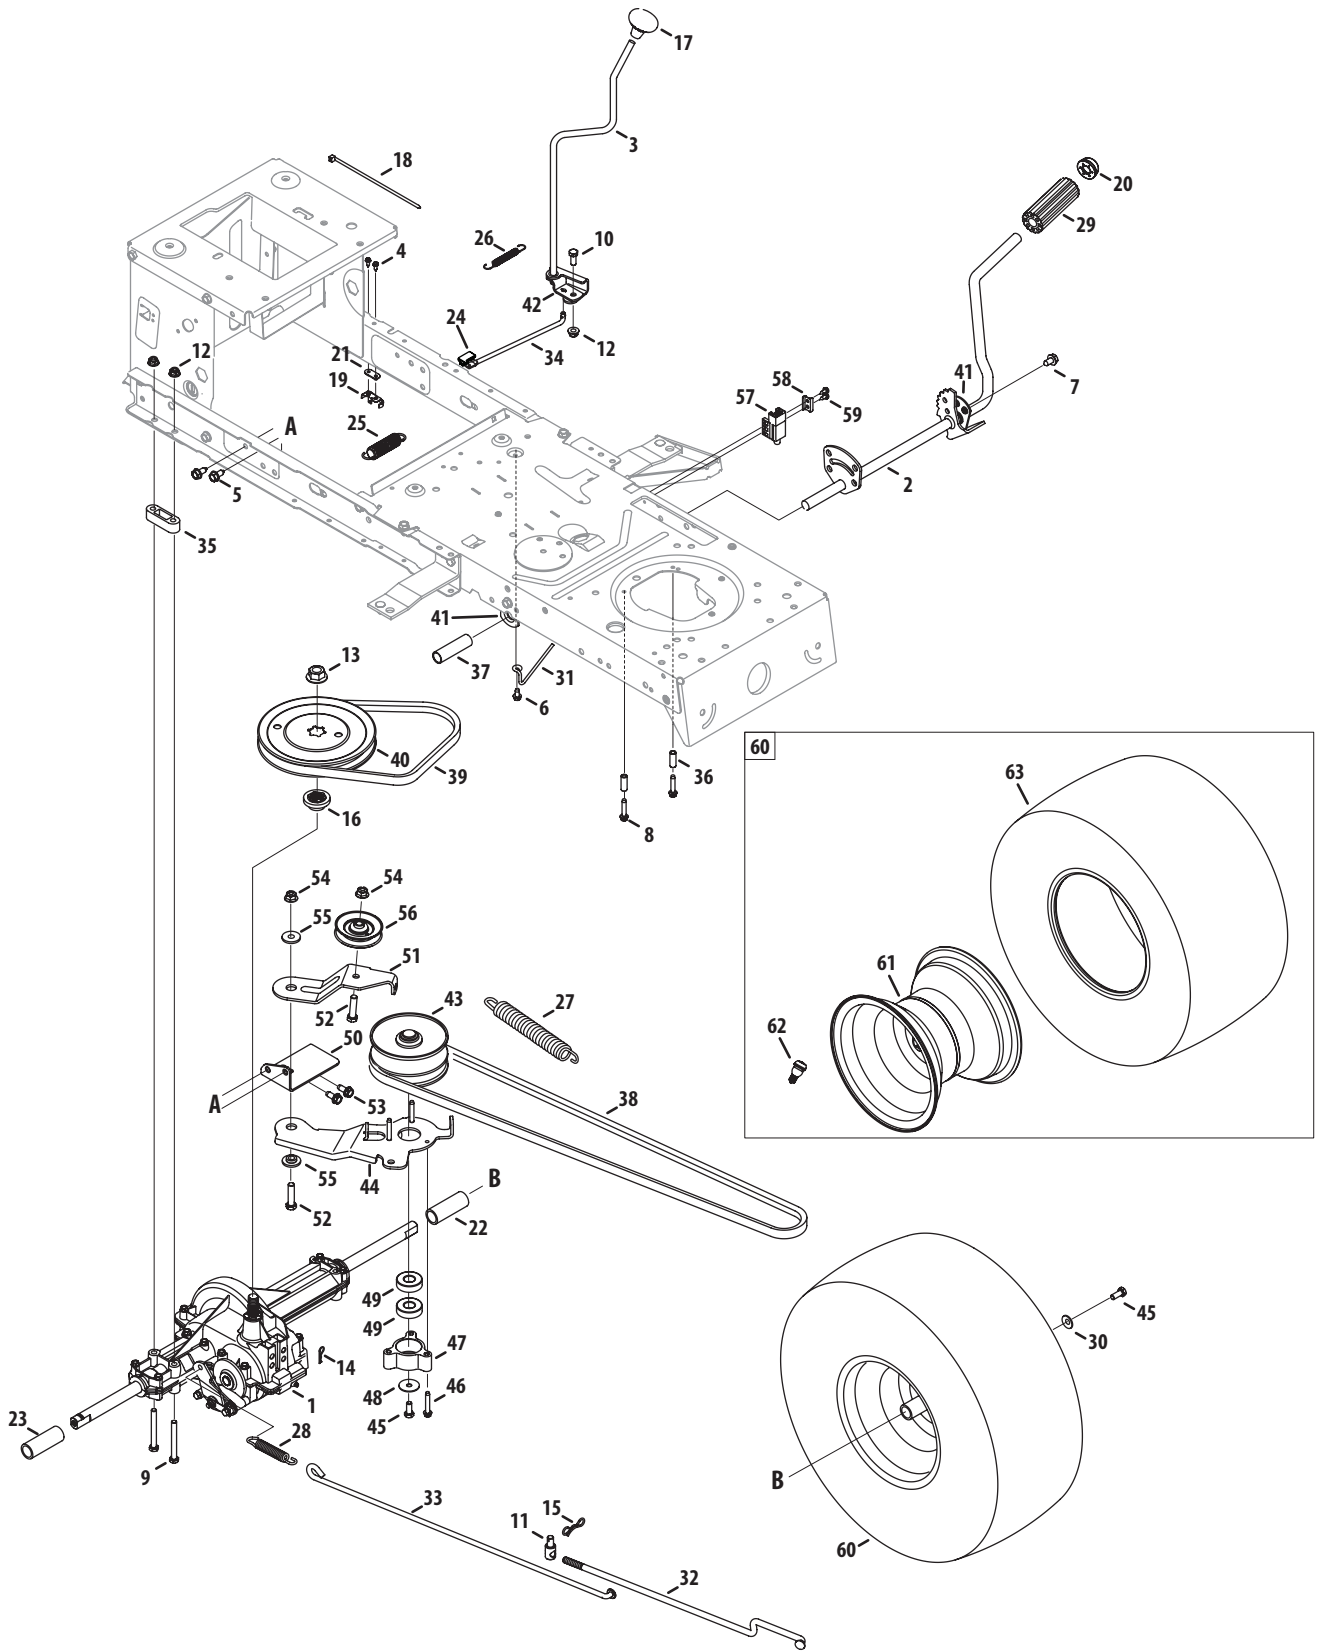


# Transmission

Ref. No.	Part No.	Description
1	918-04566	Transmission Drive Assembly
2	647-04034C-0637	Pedal Assembly
3	647-04266	Shaft Lever Assembly
4	710-0227	Screw, 8-18, 0.500
5	710-04484	Screw, 5/16-18 x .750
6	710-0599	Screw, 1/4-20 x 0.500
7	710-0604A	Screw, 5/16-18 x 0.625
8	710-0809	Screw, 1/4-20 x 1.250
9	710-1266	Hex Screw, 5/16-18 x .625
10	710-3008	Hex Screw, 5/16-18 x .75
11	911-04075A	Ferrule, 3/8-24 X .375 DIA.
12	712-04063	Flange Lock Nut, 5/16-18
13	712-0700	Flange Nut, 9/16-18
14	914-0209	Cotter Pin INT- .125 DIA
15	714-04040	Bow-Tie Cotter Pin
16	718-04407	Pulley Hub, 5/8 SPLINE
17	720-04028	Shift Knob
18	725-0157	Cable Tie
19	725-1644	Short Spring Switch
20	726-0214	Push Cap, 5/8
21	926-0320	Plate Insulator Nut
22	731-04602	Sleeve, .758 x .821 x 3.3125
23	731-04604	Sleeve, .758 x .821 x 2.4375
24	731-06894	Shift Bearing Plate
25	732-04306	Spring Extension, .80 OD x 3.28 LG
26	732-04488	Spring Extension, .38 OD x 3.25 LG
27	732-04746	Spring Extension, .94 OD x 6.75 LG
28	732-0716D	Spring Extension, .59 OD x 4.00 LG
29	735-0239	Foot Pad, 4.0 LONG
30	736-0242	Bell Washer, .340 x .872 x .060
31	747-04969	Belt Keeper Rod
32	747-05186	Variable Speed Control Rod

Ref. No.	Part No.	Description
33	747-05188	Brake Rod
34	747-05243	Shift Rod
35	948-0334	Spacer, T-Axle
36	750-0566A	Spacer, .260 x .375 x 1.030 LG
37	750-0802	Spacer, .640 ID x .76 OD x 2.63
38	954-04249A	V Belt, 5L, 70.90 POLY
39	954-04265	V Belt, 5LX, 33.8 POLY
40	756-04464	Trans. Pulley
41	783-04536B-0637	Pedal Support Bracket
42	783-04595A	Shaft Adjust Bracket
43	956-04015A	Variable Speed Pulley Assembly
44	753-05147	Bracket Assembly
45	710-0627	Hex Screw, 5/16-24 x .750
46	710-0778	Screw, 1/4-20 x 1.500
47	718-04261	Bearing Cup
48	736-0362	Flat Washer, .330 x 1.25 x .06, HT
49	941-0600	Ball Bearing, 17 x 40 x 12
50	683-04176A	Transmission Bracket Assembly
51	683-04207	Idler Bracket Assembly
52	710-0347	Hex Screw, 3/8-16 x 1.75
53	710-1260A	Screw, 5/16-18 x 0.750
54	712-04065	Flange Lock Nut, 3/8-16
55	938-0347	Shoulder Spacer, .625 ID x .169
56	756-04325	Idler Pulley
57	725-04363	Switch Interlock
58	17962	Plate Switch
59	738-04237A	Shoulder Screw, #10-32 x .500
60	734-0592	Wheel Assembly, 18 x 6.5
61	634-04174	Rim Assembly
62	934-0255	Valve Stem
63	734-0294	Tire, 18 x 6.5 x 8 Sq. Sh.
—	725-04849C	Wiring Harness ( <i>Not Shown</i> )

**NOTE,** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# 38" Deck

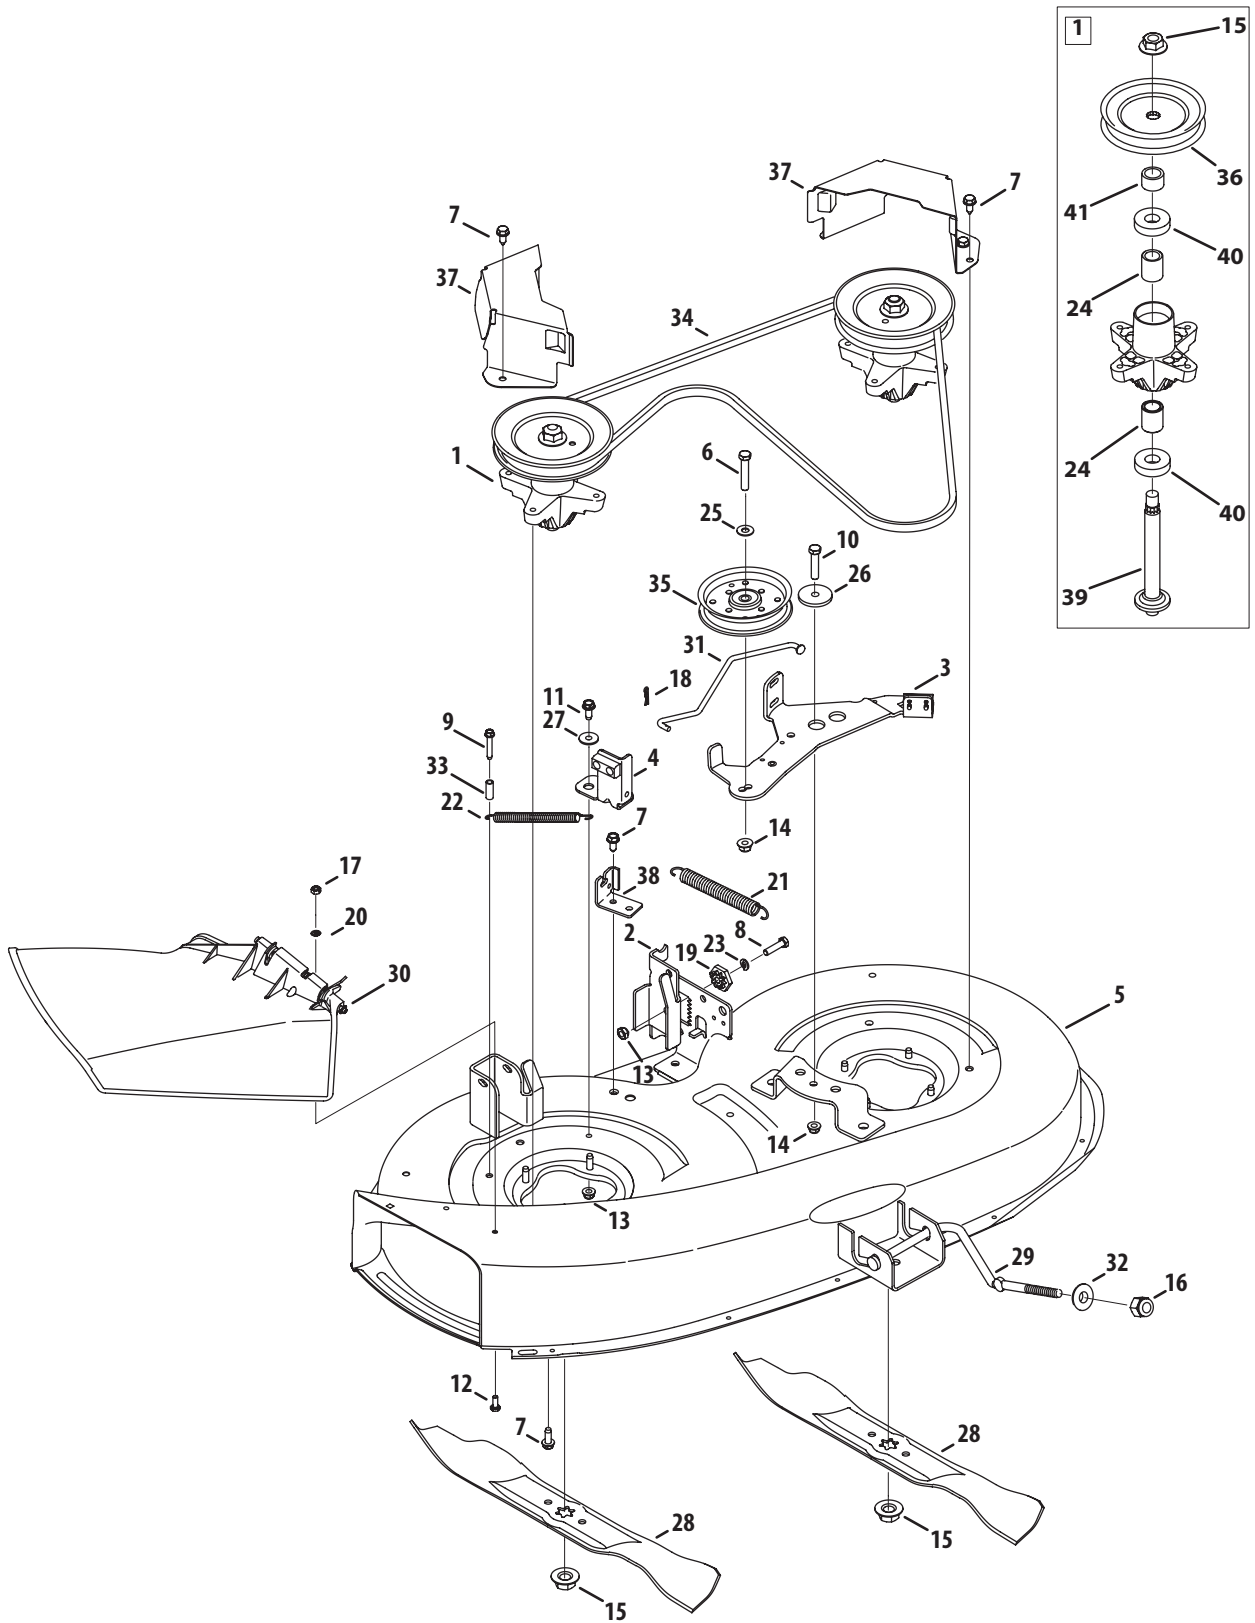


## 38" Deck

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	918-04474A	5.75" Pulley Spindle Assembly	22	732-04287	Extension Spring, .500 x 6.375
2	683-0254B	LH Deck Hanger Bracket	23	936-0119	Lock Washer, 5/16
3	683-04138B	Deck Brake Assembly	24	750-1000	Spacer, .80 X 1.10 X 1.322 Lg
4	983-04167	Deck Brake Assembly	25	936-0300	Flat Washer, .406 x .875 x .059
5	983-04263	38" Deck Assembly	26	738-04162A	Shoulder Spacer, .8840 x .190
6	710-0347	Hex Screw, 3/8-16 x 1.75	27	738-04166	Shoulder Spacer, .5000 x .1475
7	710-04484	Screw, 5/16-18 x .750	28	942-0610A	3 in 1 Blade
8	710-0528	Hex Screw, 5/16-18 x 1.25	29	747-04322	38" Front Adjust Deck Rod
9	710-0778	Screw, 1/4-20 x 1.50	30	931-1032B	Chute Assembly
10	710-3005	Hex Screw, 3/8-16 x 1.25	31	747-04381	38" Brake Control Rod
11	710-3008	Hex Screw, 5/16-18 x .75	32	748-04069	Deck Lift, Pivot Cup
12	710-0751	Hex Screw, 1/4-20 x .62	33	750-0566A	Spacer, .260 x .375 x 1.030
13	712-04063	Flange Lock Nut, 5/16-18	34	954-04062	V Type Belt
14	712-04065	Flange Lock Nut, 3/8-16	35	756-04129B	Idler Pulley
15	712-0417A	Flange Nut, 5/8-18	36	756-1188	Pul, deck, 5.75 Dia
16	712-04243	Hexlock Nut, 1/2-13	37	783-04602A	Belt Cover
17	712-04064	Flange Lock Nut, 1/4-20	38	783-04740	Deck Engage Cable Bracket
18	914-0104	Cotter Pin, .072 Diameter	39	938-04241	Spindle Shaft, 5.50 Lg
19	917-04074	Deck Adjuster Gear	40	941-0919	Ball Bearing, .787id X 1.85 x.551
20	726-0233	Push Nut, .25 x .50	41	750-04739	Spacer, .820x 1.150 X .480 Lg
21	732-04280B	Extension Spring, .75 x 6.375			

**NOTE,** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Engine Accessories

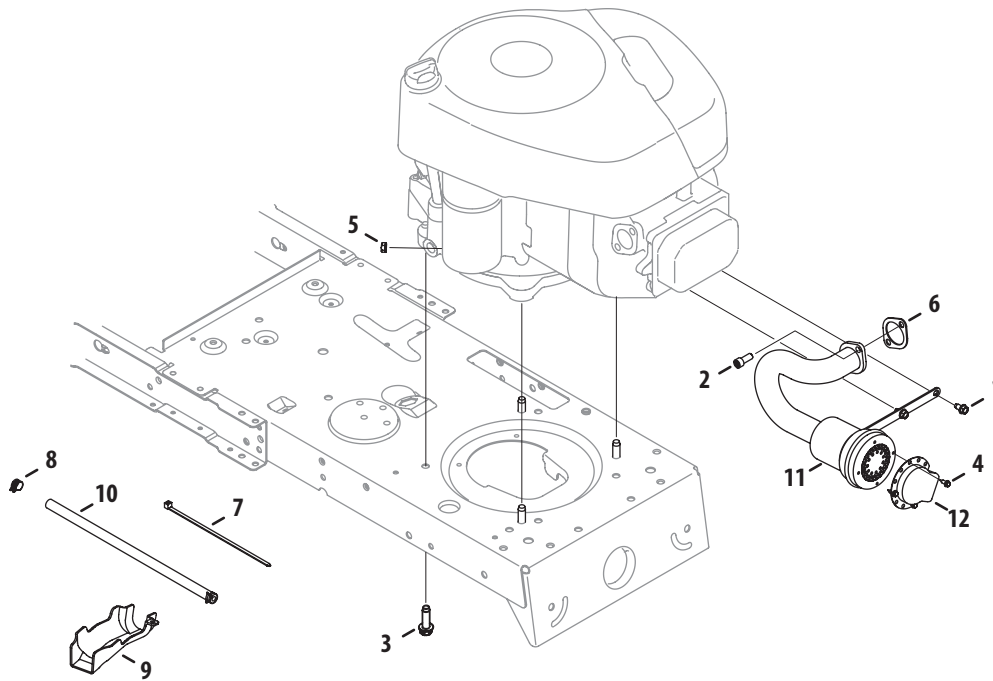

Ref. No.	Part No.	Description
1	710-0227	Screw, ab, #8-18, 0.500
2	710-04683	Tap Screw, 3/8-16, 1.000
3	710-0599	Tap Screw, 1/4-20, 0.500
4	710-1314A	Screw, Socket Head, 5/16-18, .750
5	712-0271	Sems Nut, 1/4-20
6	BS-692236	Exhaust Gasket, 10 HP B&S #272293
7	725-0157	Cable Tie, 3/16 X .05 X 7.4
8	726-0205	Hose Clamp, .490 Dia.
9	731-05628	Oil Drain Sleeve
10	751-10349	Hose, fuel, low Permeation, 1/4
11	751-9986A	Muffler
12	751B222261	Muffler Deflector

NOTE, Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

# Wiring Harness Schematic - 725-04849C

