



2 Style Hood

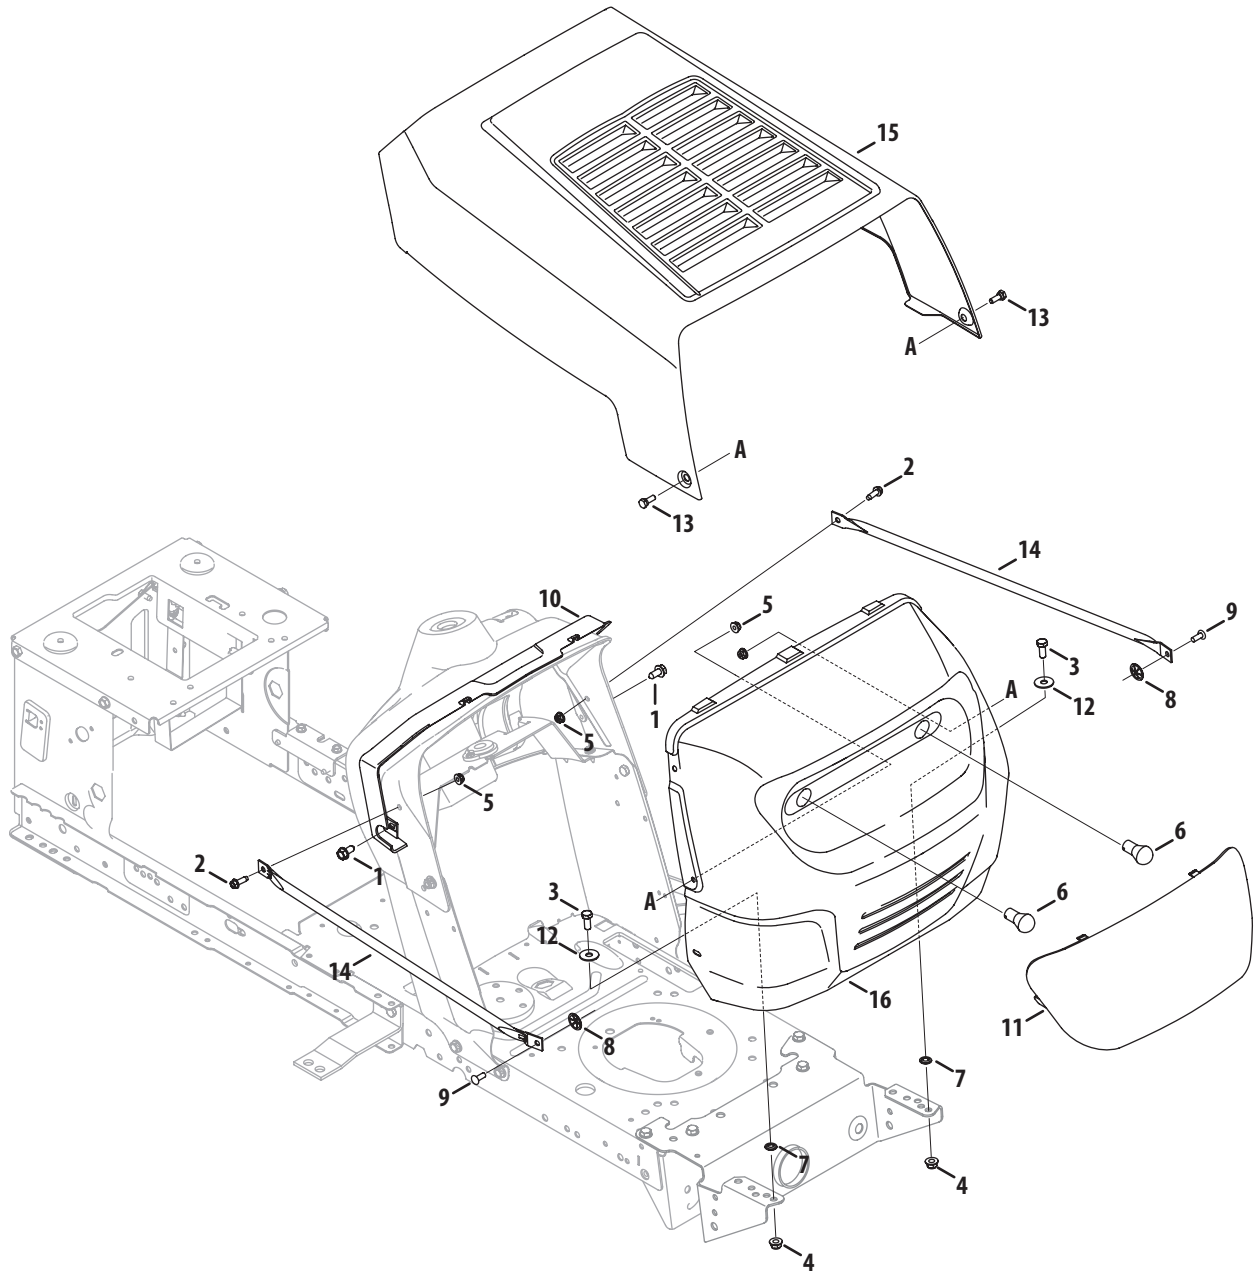

Ref.	Part Number	Description
1	710-04484	Screw, 5/16-18 x .750
2	710-0642	Screw, 1/4-20 x .750
3	710-3008	Hex Screw, 5/16-18 x .75
4	712-04063	Flangelock Nut, 5/16-18
5	712-04064	Flangelock Nut, 1/4-20
6	925-0963	Miniature Lamp 12V Socket
7	726-0201	Speed Nut, .3125
8	926-04012	Push-On Nut, .25
9	728-0162	Flat Head Rivet, 1/4"
10	731-05012B	Dash
11	731-06042	Lens
12	736-3078	Flat Washer, .344 x 1.0 x .063
13	938-0952A	Shoulder Bolt, 1/4-20 x .375 x .125
14	749-04220	Grill Support Rod
15	783-04608	Hood
16	783-05656	Grill

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

2 Style Dash

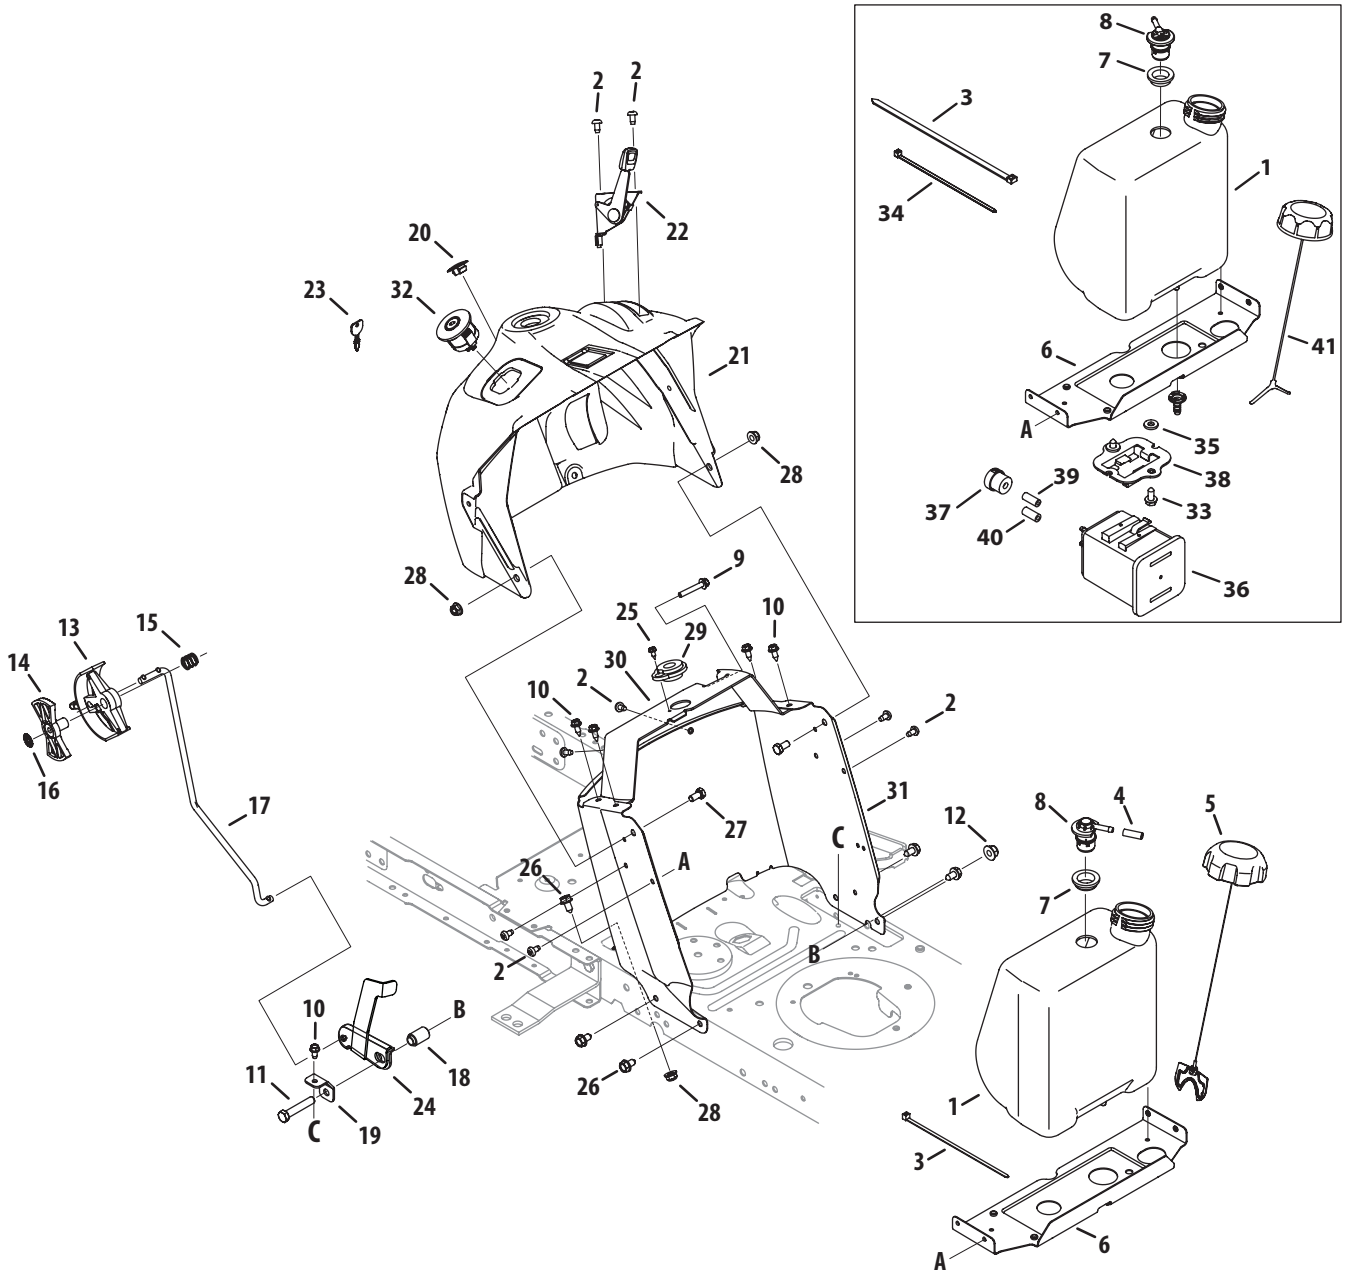


Ref.	Part Number	Description
1	951-04304	Fuel Tank, 1.36 Gal.
2	710-05070	Screw, Tap, 1/4-20, 0.500
3	726-0230	Cable Tie, 36.0 Long
4	751-12089-28	Hose Vent
5	951-12179A	Fuel Cap, 2.25"
6	783-07083	Gas Tank Support Bracket
7	735-04081	Rubber Grommet, 23 x 3.55
8	751-12118	Rollover Valve
9	710-05237	Hex Screw, 1/4-20 x 1.50
10	710-1652	Tap Screw, 1/4-20, 0.625
11	710-3144	Hex Screw, 3/8-16, 2.00, Gr5, Std
12	712-04065	Flange Lock Nut, 3/8-16
13	731-07885A	Shift Lever
14	731-07965	Index Control
15	732-04877	Compr. Spring, .685 OD x .63
16	736-3006	Lock Washer, 1/4
17	747-05398	Speed Selector Control Rod
18	750-04465C	FlnG Spacer, .390 X .671 X 1.095
19	783-06823	Speed Latch
20	731-05265	Choke Plug
21	931-08542	Dash, Upper

Ref.	Part Number	Description
22	746-04367	Throttle/Choke Cable Assembly
23	925-1745A	Key
24	783-06991	Speed Latch - No RMC
25	910-0224	Screw, #10-16 x .500
26	710-0604A	Tap Screw, 5/16-18, 0.625
27	710-3025	Hex Screw, 5/16-18 x .625
28	712-04063	Flange Lock Nut, 5/16-18
29	741-0587	Bearing, .628 ID x 1.36
30	783-06785A	Bracket, Steering Support
31	783-06811	Dash, Lower NWNDW
32	925-04659	Key Switch
33	710-04484	Screw, 5/16-18 x .750
34	725-0157	Cable Tie
35	936-3008	Flat Washer, .344 x .750 x .120
36	951-10589	5 Gallon Carbon Canister
37	951-10590	Vent Filter Canister
38	951-10610	Canister Adaptor Bracket
39	751-10749-30	Hose, Fuel, Low Perm., White
40	751-10750	Hose, Fuel, Low Perm., Yellow
41	951-12426	Fuel Cap, 2.25"
—	725-04567G	Harness, LT-5, NRMC, Dual

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Frame and PTO Lift

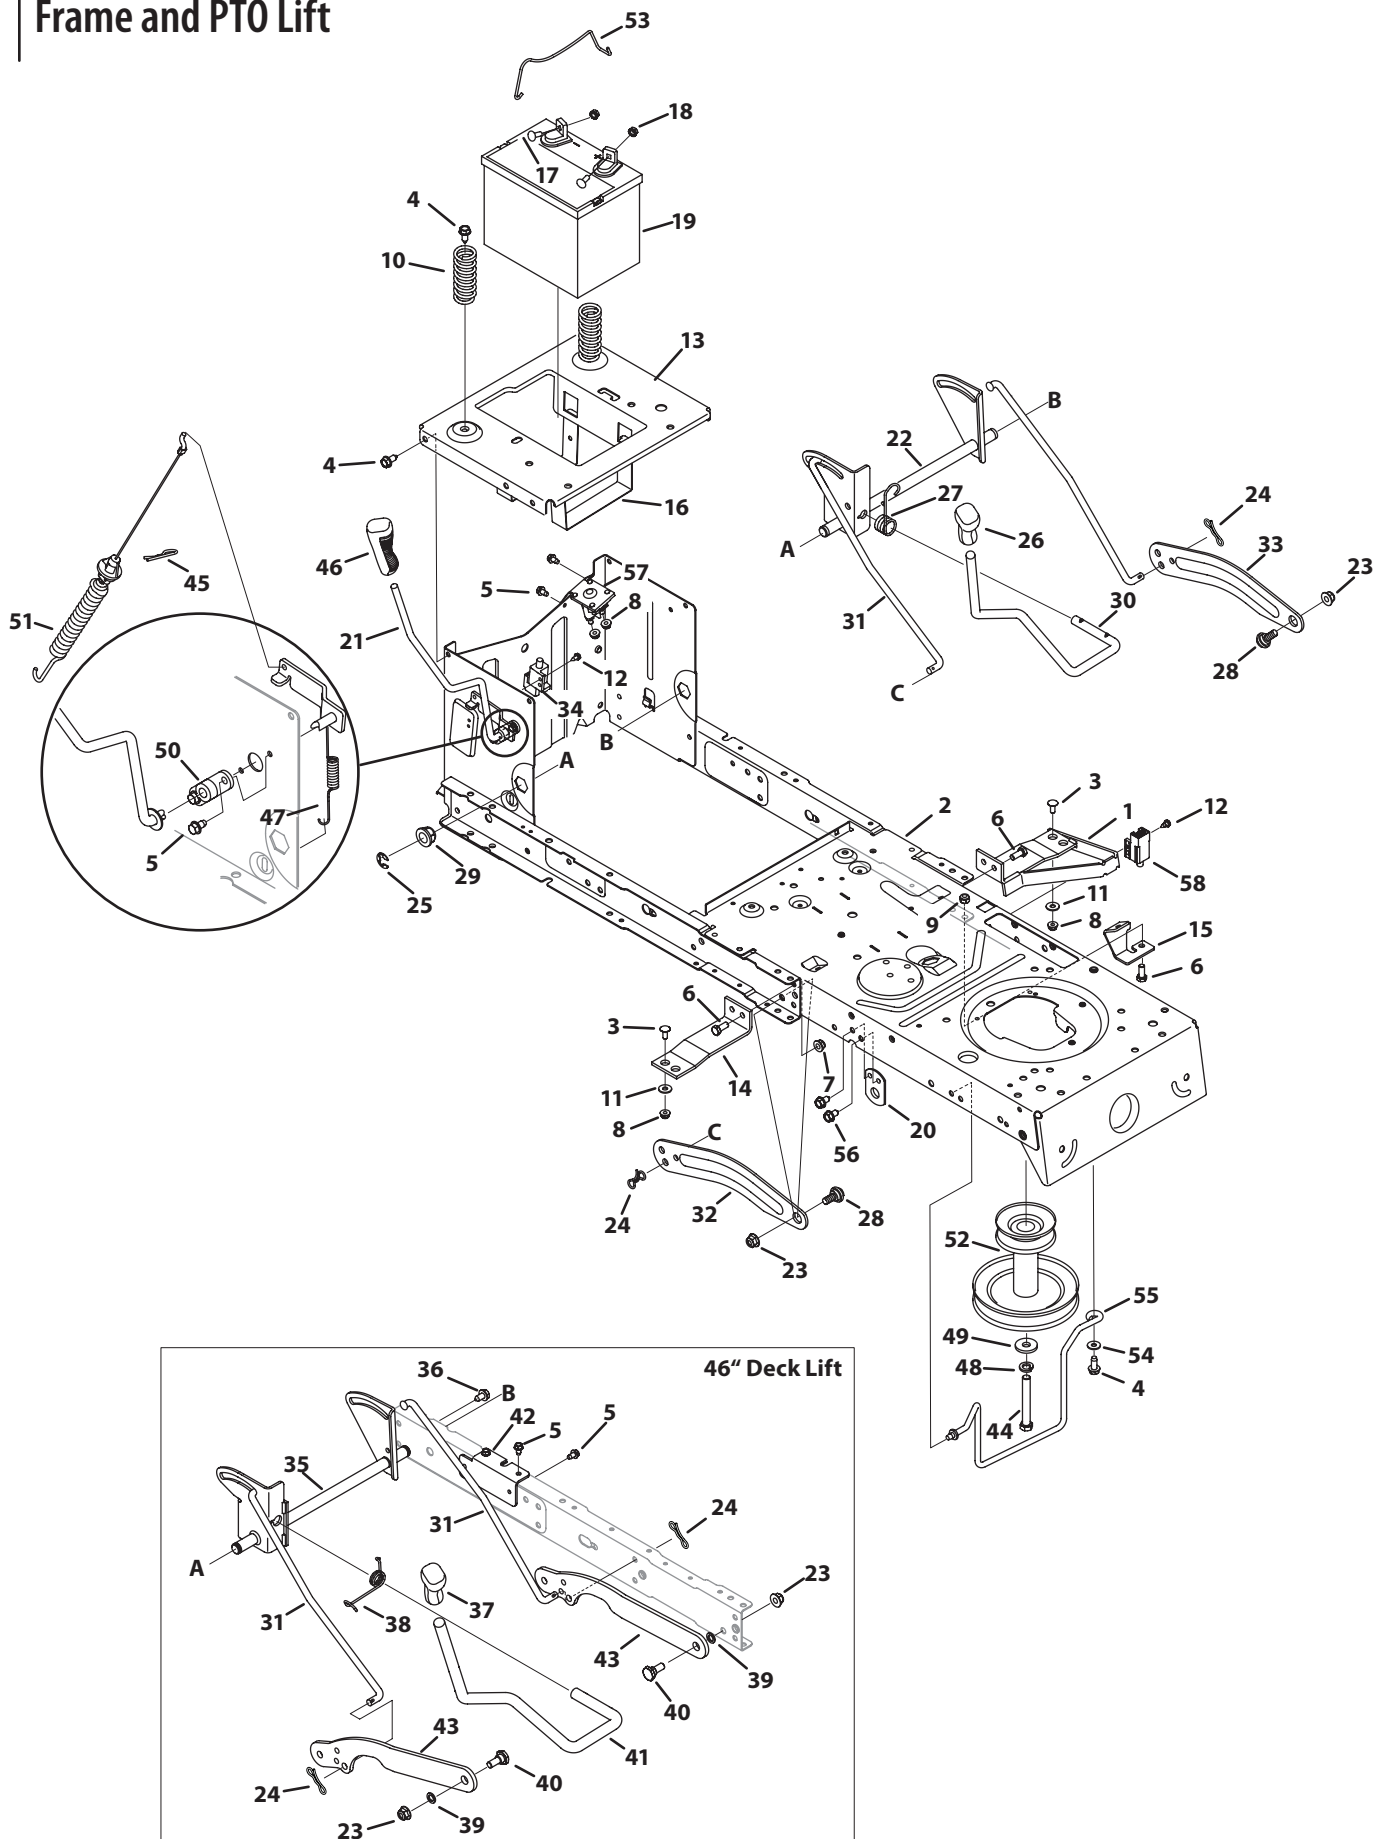


Frame and PTO Lift

Ref.	Part Number	Description	Ref.	Part Number	Description
1	683-04195	Support Bracket	32	783-04494C	38/42" Lift Arm, RH
2	683-04649	Frame Assembly	33	783-04711C	38/42" Lift Arm, LH
3	710-0134	Screw Carriage, 1/4-20 x .62	34	725-04363	Switch Interlock
4	710-04484	Screw 5/16-18 x .750	35	683-04334	Lift Assembly, 46"
5	710-0599	Screw, 1/4-20 x .500	36	710-0604A	Screw, 5/16-18 x .625
6	710-3008	Hex Screw, 5/16-18 x .75	37	720-0298	Handle Grip, 5/8
7	712-04063	Flangelock Nut, 5/16-18	38	732-04438	Torsion Spring Handle, 46"
8	712-04064	Flangelock Nut, 1/4-20	39	936-0140	Flat Washer, .385 x .62 x .063
9	912-0429	Hexlock Nut, 5/16-18	40	938-0380	Shoulder Bolt, 3/8-16 x .500 x .270
10	732-04035	Compression Spacer, 1.28 x 3.125	41	747-04653	46" Lift Handle
11	736-0173	Flat Washer, .28 x .74 x .063	42	783-05389A	Frame Brace Bracket
12	738-04237A	Shoulder Spacer, 10-32 x .500	43	783-0678C	Lift Deck Link
13	783-04548D	Seat Frame Bracket	44	710-04607	Hex Screw, 7/16-20 x 2.75, 46"
14	783-04637	Running Board Bracket		710-04608	Hex Screw, 7/16-20 x 3.25, 38/42"
15	783-04753	Support Frame Bracket	45	914-0145	Click Pin, .092 x 1.64
16	783-04869A	Battery Bracket	46	720-04049A	Handle Grip, 3/8
17	710-04666	Hex Head Flange, 1/4-20 x .75	47	732-04276A	PTO Spring Extension
18	712-0271	Sems Nut, 1/4-20	48	936-0171	Regular Duty Washer Lock, 7/16
19	925-1707D	230 CCA Battery	49	736-0322	Flat Washer, .450 x 1.250 x .164
20	783-04536B	Support Bracket	50	741-04119A	PTO Bearing
21	647-04096	PTO Handle Assembly	51	946-04173C	Deck Engage Cable
22	683-04155A	Lift Assembly, 38/42"	52	756-04207A	Engine Pulley, 3.39 x 6.12, 46"
23	712-04065	Flangelock Nut, 3/8-16		756-04196A	Engine Pulley, 3.39 x 6.12, 38/42"
24	714-04040	Bow-tie Cotter Pin	53	683-04448	Battery Hold Down Rod
25	716-0106A	E Ring	54	936-0300	Flat Washer, .406 x .875 x .059
26	720-0311	Handle Grip, 1/2	55	747-04332A	38" Belt Keeper
27	732-04225	Torsion Spring		747-04857	42" Belt Keeper
28	738-04130	Shoulder Bolt, 3/8-16 x .625 x .175		683-04414	46" Belt Keeper
29	941-0225	Hex Flange Bearing	56	710-0604A	Screw, 5/16-18.0 x .625
30	747-04282	Deck Lift Handle 38"	57	725-04439	12V Solenoid
	747-05296	Deck Lift Handle 42"	58	925-04039	Screw Mount Interlock Switch
31	747-04393	Lift Rod			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Front End Steering

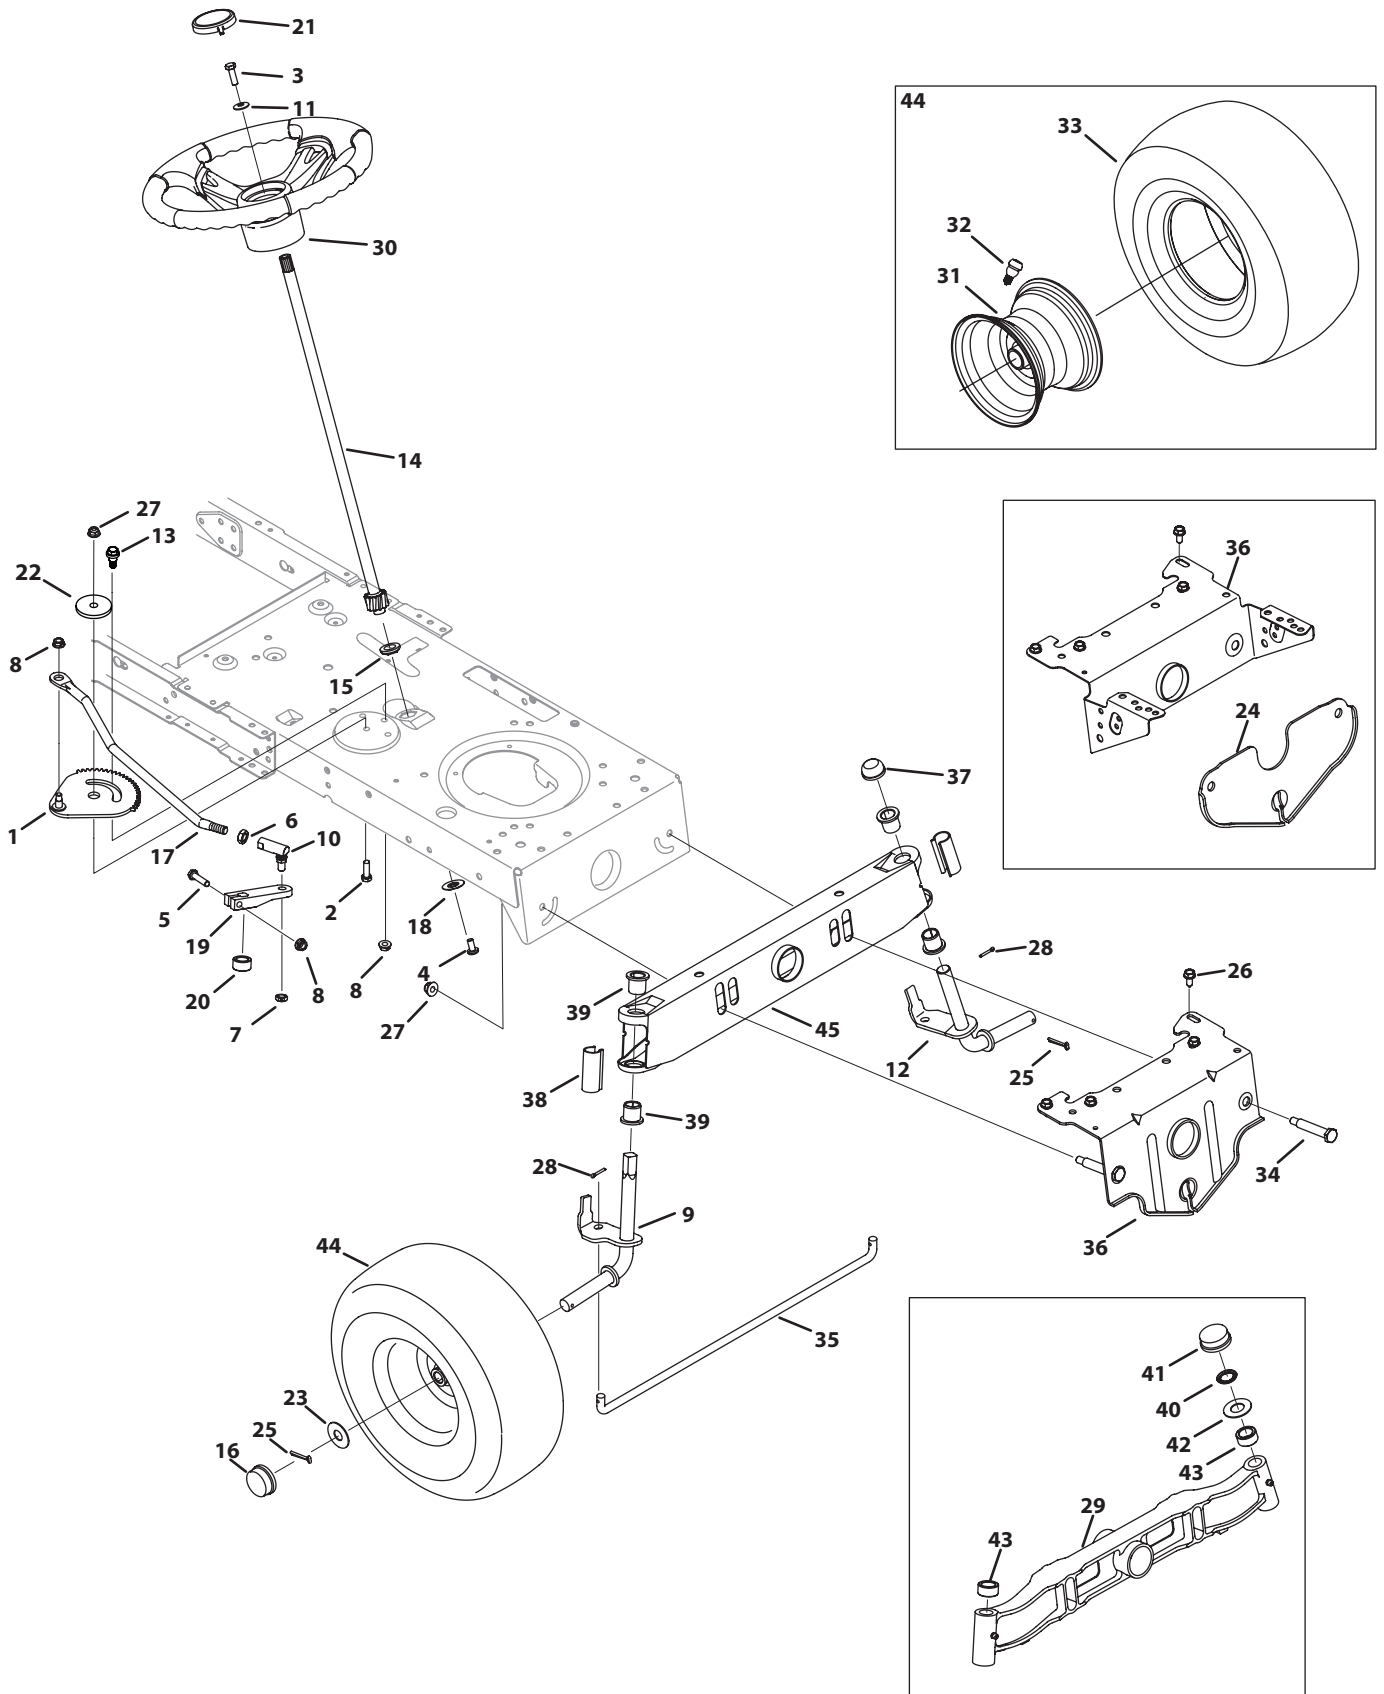


Front End Steering

Ref.	Part Number	Description	Ref.	Part Number	Description
1	617-04094	Front Steering Gear Assembly	25	714-04039A	Cotter Pin, 5/32 x 1.25
2	710-0514	Hex Screw, 3/8-16 x 1.00	26	710-04484	Screw, 5/16-18 x .750
3	710-0643	Hex Screw, 5/16-18 x 1.00, Lock	27	712-04065	Flangelock Nut, 3/8-16
4	710-1309	Machine Screw, 5/16-18 x .750	28	914-0474	Cotter Pin, .125 x .75
5	710-3180	Hex Screw, 5/16-18 x 1.75	29	919-04177A	Pivot Axle, Cast
6	912-0240	Jam Nut, 7/16-20	30	631-04028	Steering Wheel
7	912-0214	Jamlock Nut, 3/8-24		631-04560	Steering Wheel Soft Grip
8	712-04063	Flangelock Nut, 5/16-18	31	934-04081	Rim Asm, 6.0 x 4.5, 42/38" Deck
9	638-04008P	Front RH Axle		634-04634	Rim Asm, 6.0 x 4.5, 46" Deck
	938-04013	46" Front RH Axle	32	934-0255	Valve, tubeless Air
10	923-0448A	Ball Joint, 7/16-20	33	734-1731	Tire, 15 X 6 X 6 Sq Shldr 42/46"
11	736-0242	Bell Washer, .340 x .872 x .060		734-04240A	Tire, 15 X 6 X 6 Rd Shldr, 38"
12	938-04007A	Front LH Axle	34	738-04128	Shoulder Bolt, 3/8-16 x .500 x 2.38
	938-04014A	46" Front LH Axle	35	747-04299A	Fixed Rod
13	738-04141	Shoulder Bolt, 5/16-18 x .435 x .350	36	783-05326B	Pivot Bar Bracket
14	738-0919A	Steering Shaft, 5/8 x 22.08		783-04601C	Pivot Bar Bracket
15	941-04124	Flange Bearing, 5/8	37	726-0341	Push Cap, 3/4
16	931-0484A	Hub Cap	38	731-04057A	Standard Axle Cap
17	747-05385	Steering Link	39	741-0660A	Flange Bearing, .760 x .941 x 1.0
18	948-0389	Cap, 1.25 x .16	40	726-04035	Push Nut, 3/4
19	748-04065	Steering Block	41	731-04693	Hub Cap
20	748-04068	Spacer, .71 x .125 x .56	42	936-0316	Flat Washer, .78 x 1.59 x .060
21	731-04681	Cap, Troy-Bilt	43	748-04068	Spacer, .71 x .125 x .56
	731-04039	Cap	44	634-04086	Wheel Assembly, 42"
	731-04040	Sprig Cap		634-04325	Wheel Assembly, 38"
22	738-04162A	Shoulder Spacer, .884 x .190		634-04639	Wheel Assembly, 46"
23	736-04228A	Flat Washer, .781 x 1.590	45	683-0128B	Pivot Axle
24	783-04568	Front Deck Hanger Bracket			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Seat and Fender

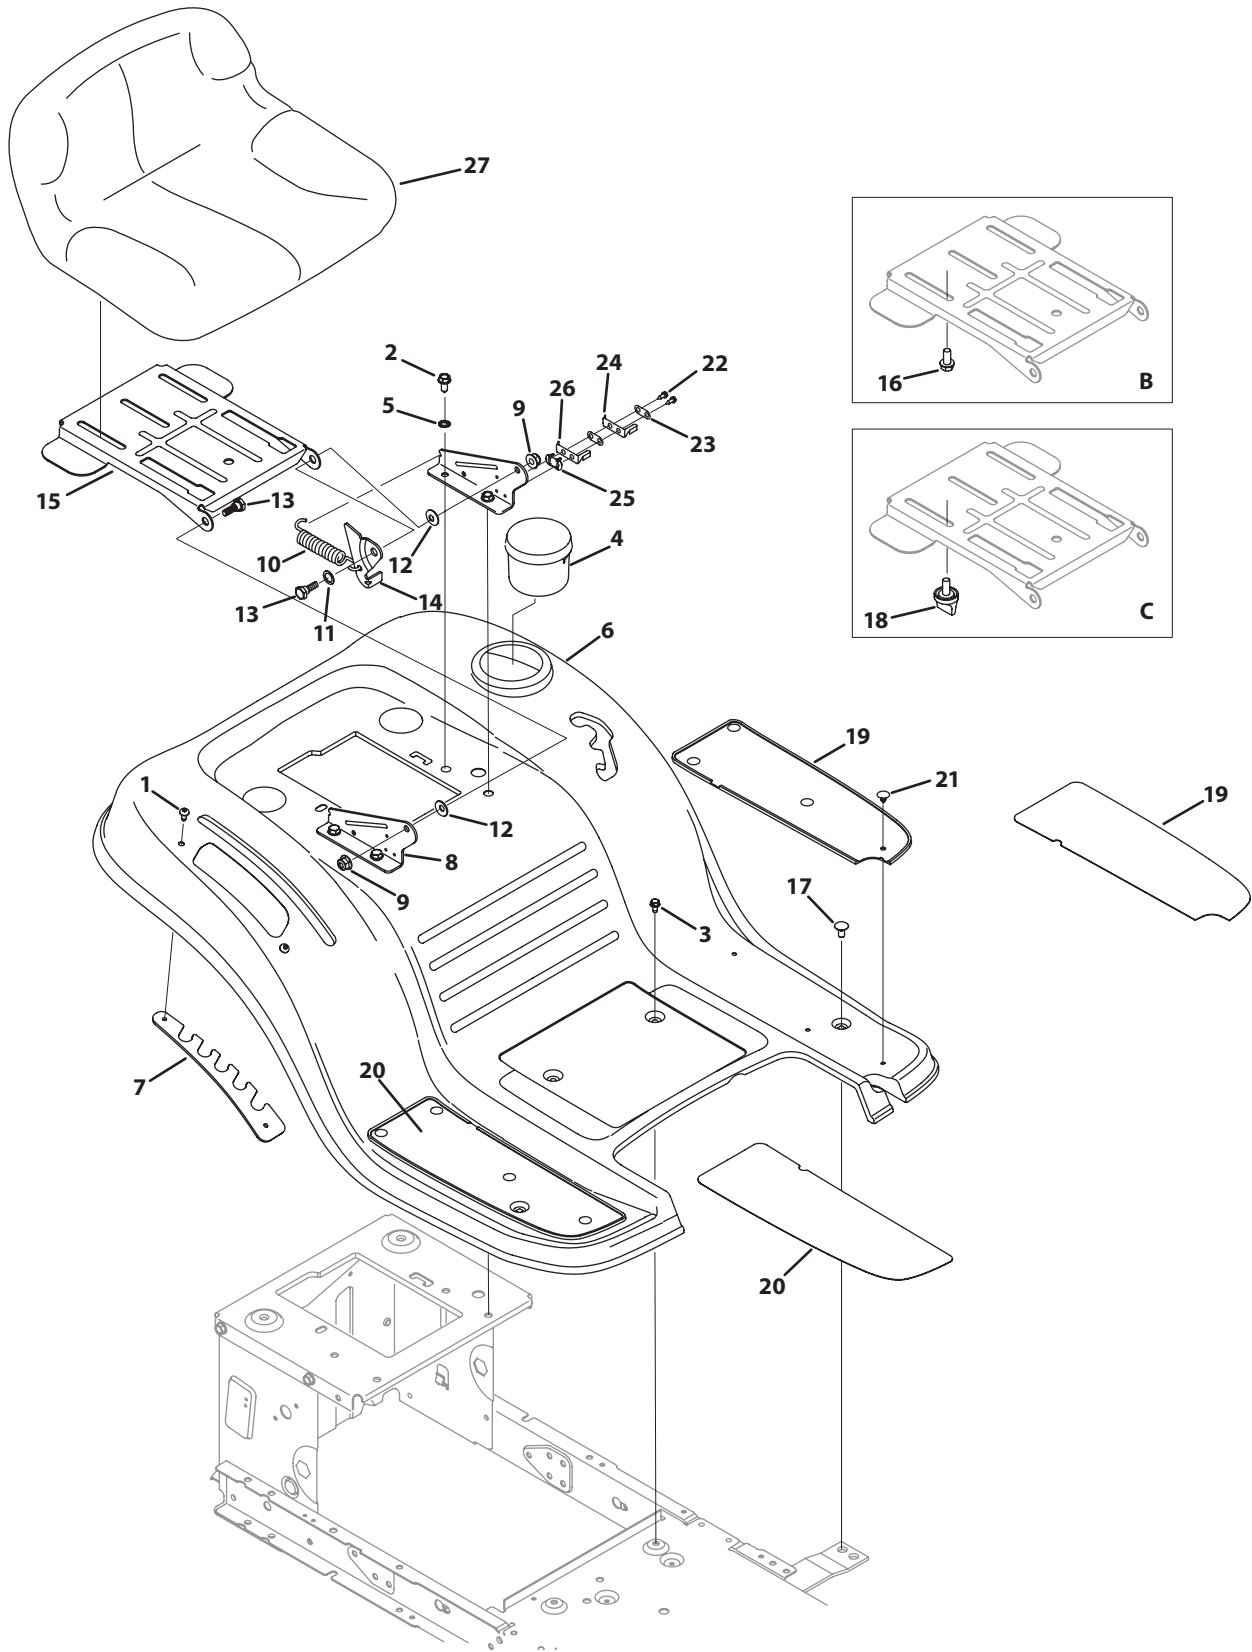

Ref.	Part Number	Description
1	710-05070	Screw, 1/4-20 x .500
2	710-04484	Screw, 5/16-18 x .750
3	710-0599	Screw Pan Torx Head, 1/4-20 x .500
4	731-04591A	Cup Holder
5	736-0607	Loack Washer, 5/16
6	783-04587D	Fender
7	783-04843	Lift Adjuster Bracket
8	783-1489D	Seat Mount Bracket
9	712-04063	Flangelock Nut, 5/16-18
10	732-1184	Extension Spring
11	936-0108	Flat Washer, .510x .750 x .033
12	736-0242	Bell Washer, .340 x .872 x .060
13	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
14	783-0209D	Lift Seat Bracket
15	783-04081D	Pivot Seat Manual Adjust Bracket
16	710-04482	Hex Head Flange, 3/8-16 x .875
17	710-0134	Screw Carriage, 1/4-20 x .62
18	720-04061	Knob, 3/8-16 x .875
19	735-04047	Foot Pad, LH
	723-04026	Foot Pad, Abrasive, LH
20	735-04048	Foot Pad, RH
	723-04025	Foot Pad, Abrasive, RH
21	726-3046	Ratchet Clip, .250 x .500
22	710-0227	Screw, 8-18 x .500
23	726-0279	Insulator Plate
24	925-1303	Outer Seat SPring
25	726-0278	Insulator Boss Plate
26	725-1439	Inner Seat Spring
27	757-04083	Medium Back Seat, Black, Set-up B
	757-04099	Low Back Seat, Black, Set-up B or C
	757-04088	High Back Seat, Set-up B

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Transmission (Single Speed)

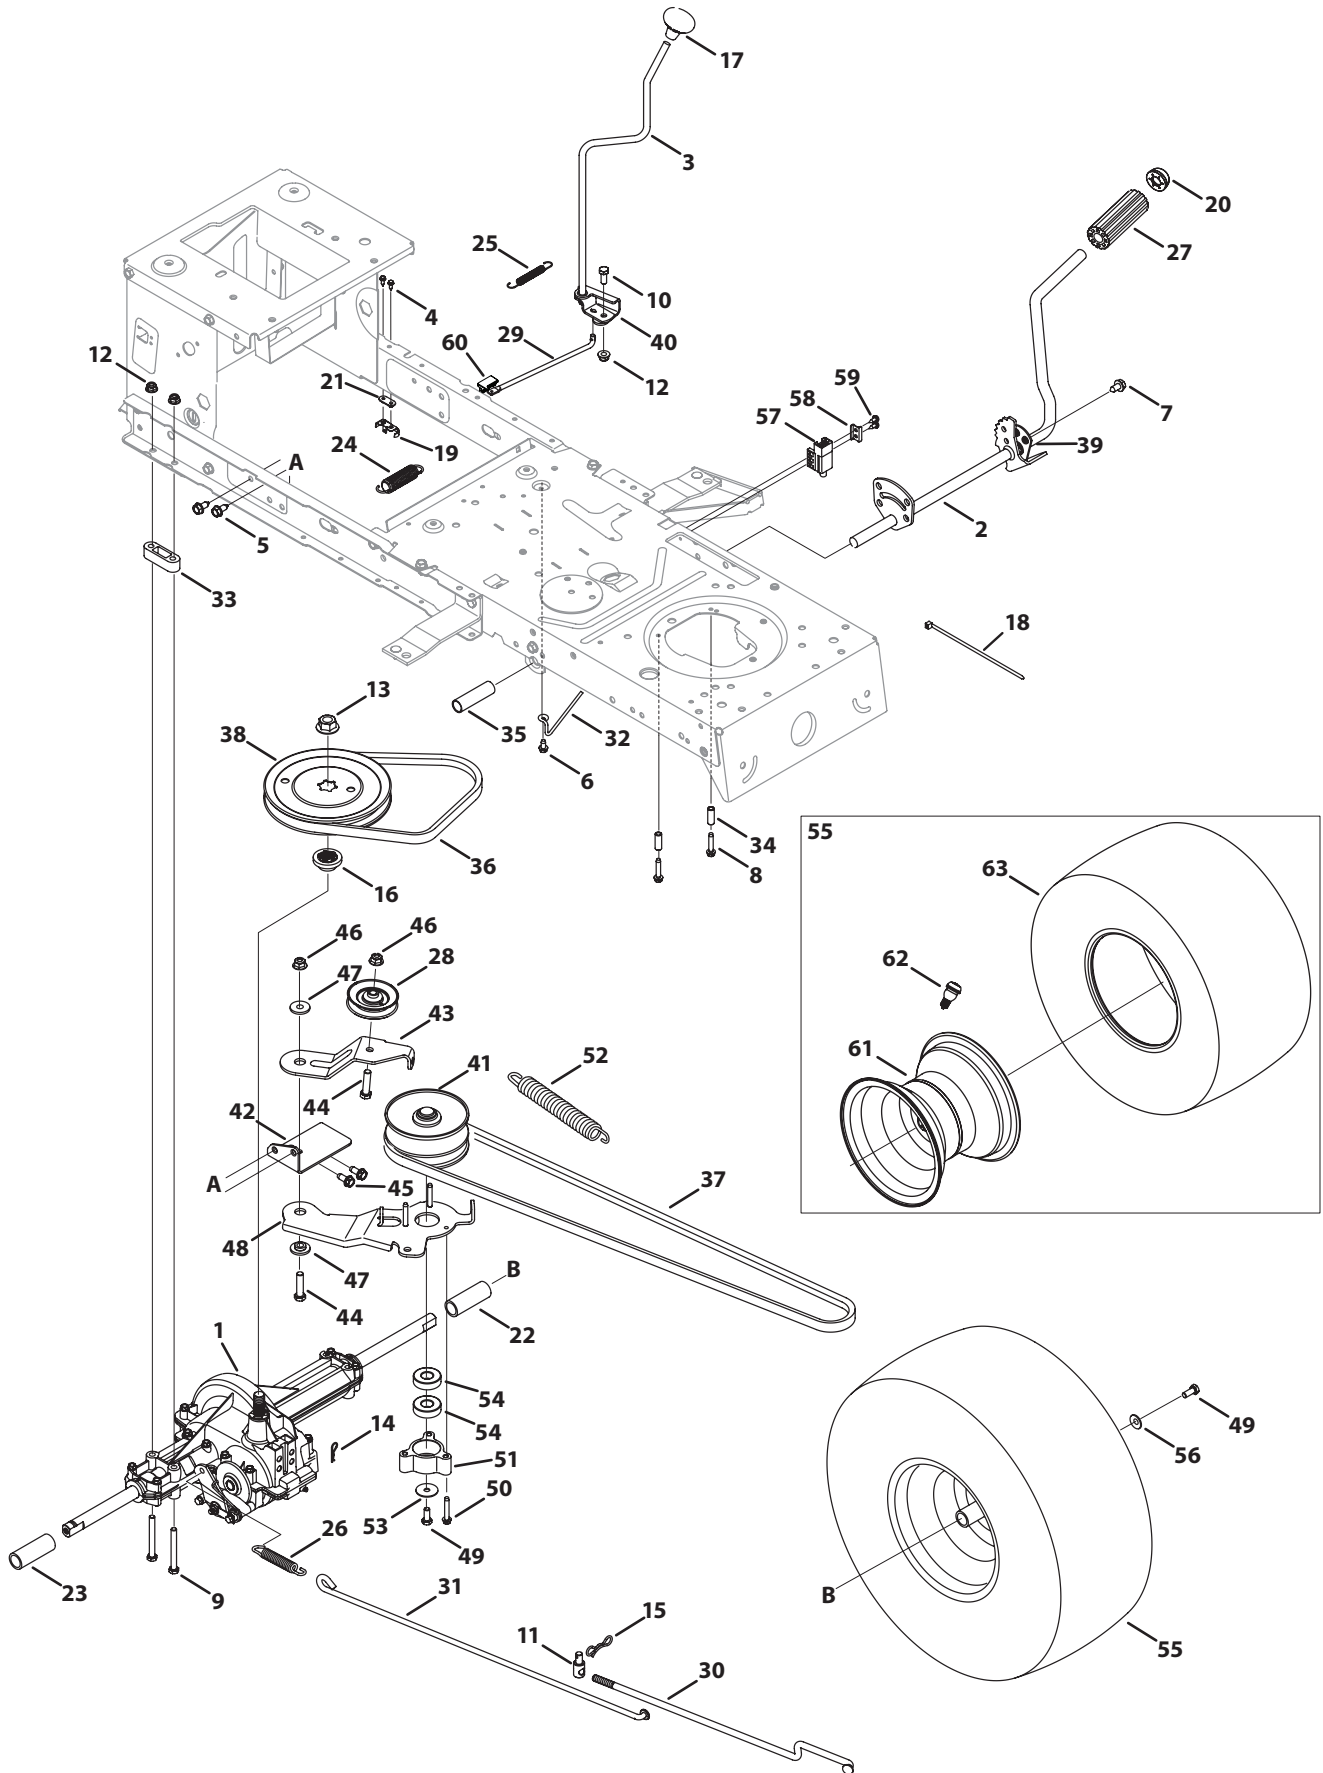


Transmission

Ref.	Part Number	Description	Ref.	Part Number	Description
1	918-04566	Transmission Drive Assembly	33	948-0334	Spacer, T-Axle, 46" Only
2	647-04034C	Pedal Assembly	34	750-0566A	Spacer, .260 x .375 x 1.030 LG
3	647-04266	Shaft Lever Assembly	35	750-0802	Spacer, .640 ID x .76 OD x 2.63
4	710-0227	Screw, 8-18:0.500	36	954-0241A	V Belt, 5L 35.25 POLY
5	710-04484	Screw, 5/16-18 x .750	37	954-04249A	V Belt, 5L 70.90 POLY
6	710-0599	Screw, 1/4-20 x 0.500	38	956-04002	V Pulley 7.25 DIA SPUN
7	710-0604A	Screw, 5/16-18 x 0.625	39	783-04536B	Pedal Support Bracket
8	710-0809	Screw, 1/4-20 x 1.250	40	783-04595A	Shaft Adjust Bracket
9	710-1266	Hex Screw, 5/16-18 x .625	41	956-04015A	Variable Speed Pulley Assembly
	710-0176	Hex Screw, 5/16-18 x 2.75	42	683-04176A	Transmission Bracket Assembly
10	710-3008	Hex Screw, 5/16-18 x .75	43	683-04207	Idler Bracket Assembly
11	911-04075A	Ferrule, 3/8-24 X .375 DIA.	44	710-0347	Hex Screw, 3/8-16 x 1.75
12	712-04063	Flangelock Nut, 5/16-18	45	710-1260A	Screw, 5/16-18 x 0.750
13	712-0700	Flange Nut, 9/16-18	46	712-04065	Flangelock Nut, 3/8-16
14	914-0209	Cotter Pin INT- .125 DIA	47	938-0347	Shoulder Spacer, .625 ID x .169
15	714-04040	Bow-Tie Cotter Pin, 72	48	683-04206	Bracket Assembly
16	718-04407	Pulley Hub, 5/8 SPLINE	49	710-0627	Hex Screw, 5/16-24 x .750
17	720-04028	Shift Knob	50	710-0778	Screw, 1/4-20 x 1.500
18	725-0157	Cable Tie	51	718-04261	Bearing Cup
19	725-1644	Short Spring Switch	52	732-04746	Extension Spring, .94 OD x 6.75 LG
20	726-0214	Push Cap, 5/8	53	736-0362	Flat Washer, .330 x 1.25 x .06:HT
21	926-0320	Plate Insulator Nut	54	941-0600	Ball Bearing, 17 x 40 x 12
22	731-04602	Sleeve, .758 x .821 x 3.3125	55	634-04324	Wheel, 20 x 8 x 8, 38"
23	731-04604	Sleeve, .758 x .821 x 2.4375		634-0104	Wheel, 20 x 8 x 8, 42/46"
24	732-04306	Spring Extension, .80 OD x 3.28 LG	56	736-0242	Bell Washer, .340 x .872 x .060
25	732-04488	Spring Extension, .38 OD x 3.25 LG	57	725-04363	Switch Interlock
26	732-0716D	Spring Extension, .59 OD x 4.00 LG	58	17962	Plate Switch
27	735-0239	Foot Pad, 4.0 LONG	59	738-04237A	Shoulder Screw, #10-32 x .500
28	756-04325	Idler Pulley	60	731-06894	Shift Plate Bearing
29	747-05243	Shift Rod, 46"	61	634-04369	Rim, 8.0 x 7.0 x .750, 38/42/46"
	747-05244	Shift Rod, 38/42"	62	934-0255	Valve, tubeless Air
30	747-05186	Variable Speed Control Rod	63	734-1730	Tire, 20 X 8 X 8 Sq Shldr, 42/46"
31	747-05188	Brake Rod		734-04241	Tire, 20 X 8 X 8 Rd Shldr, 38"
32	747-04969	Belt Keeper Rod			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


38" Deck

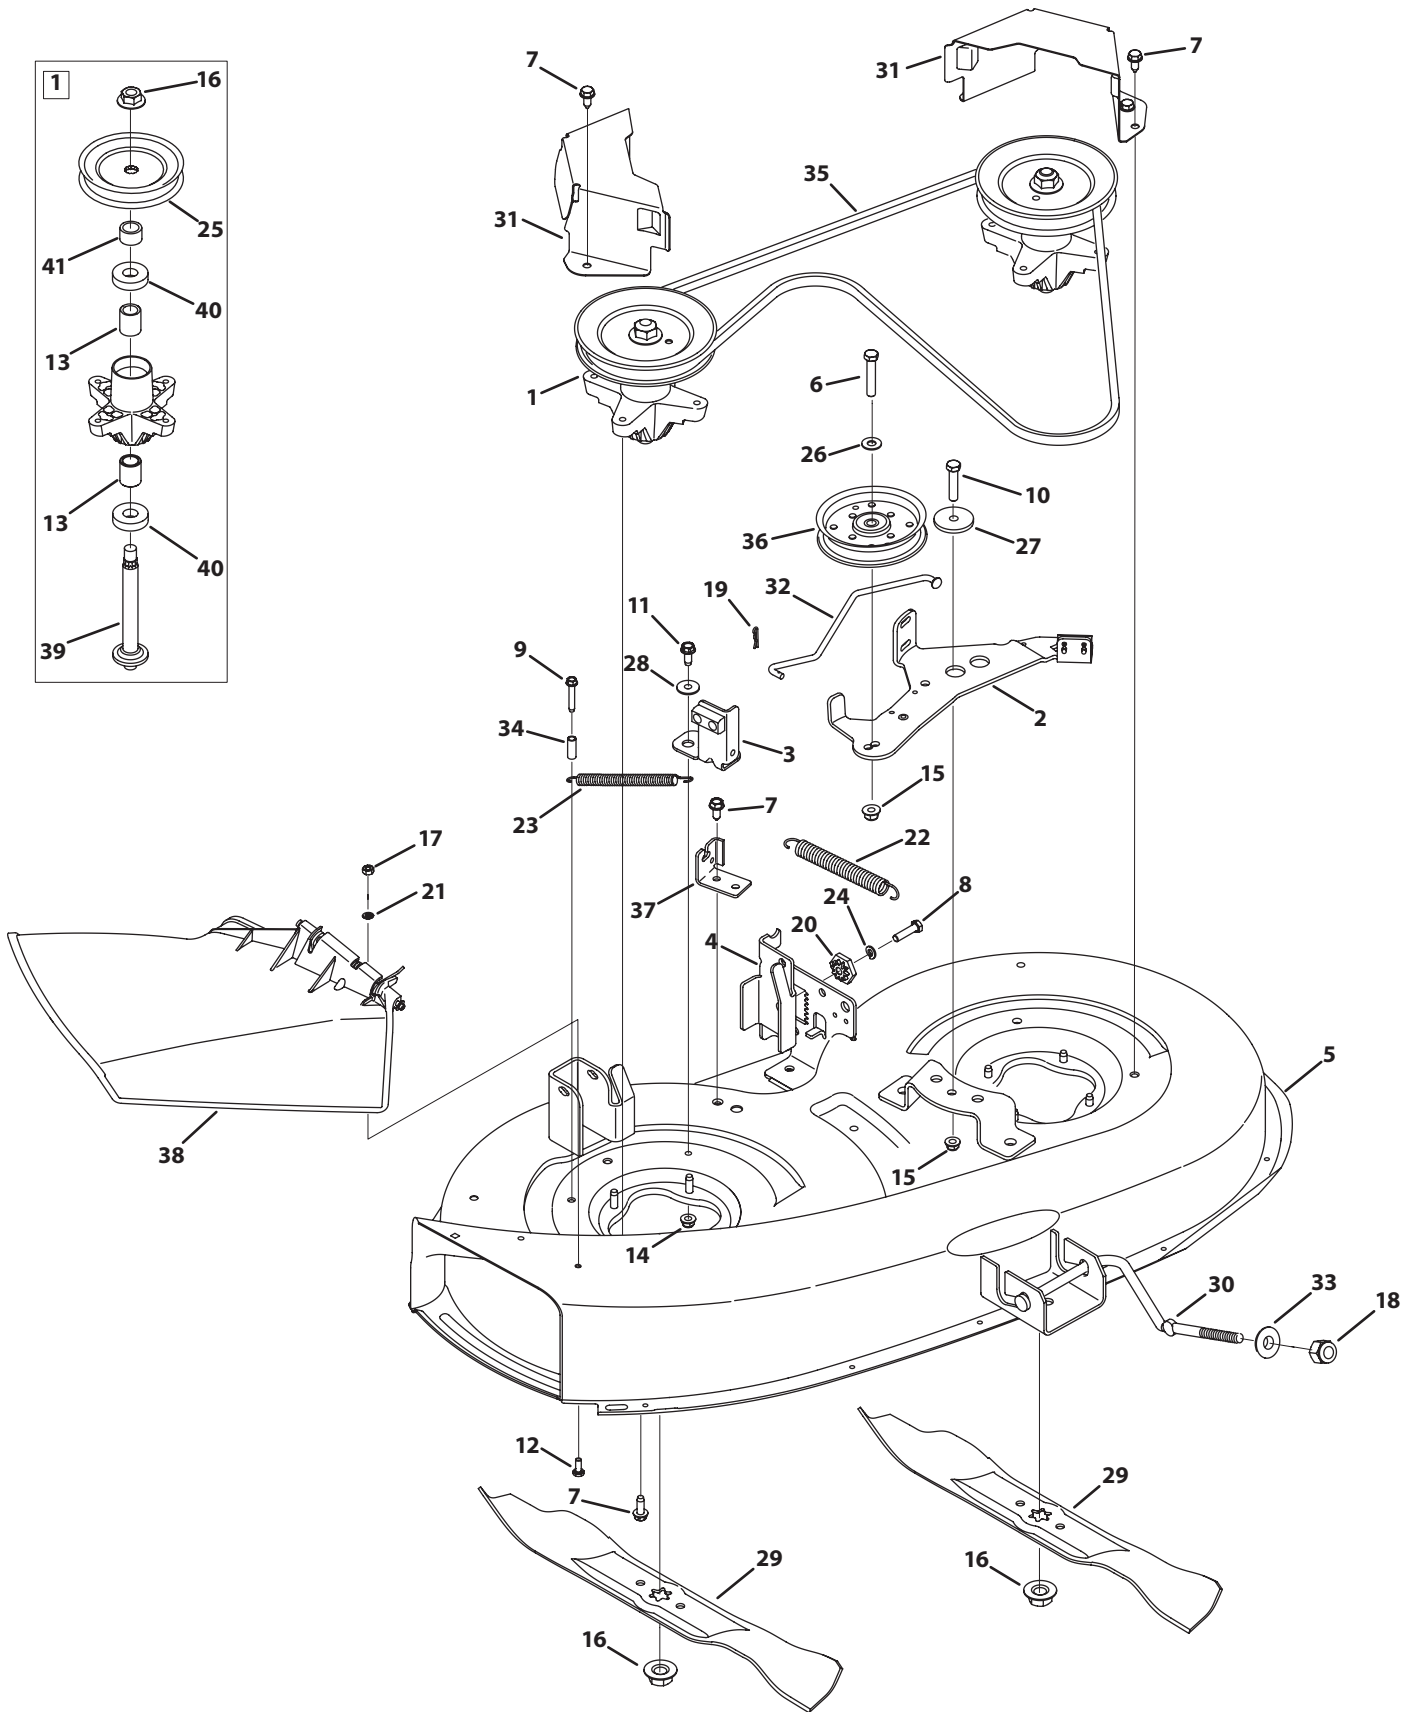

Ref.	Part Number	Description
1	918-04474A	5.75" Pulley Spindle Assembly
2	683-04138B	Deck Brake Assembly
3	983-04167	Deck Brake Assembly
4	683-0254B	LH Deck Hanger Bracket
5	983-04263	38" Deck Assembly
6	710-0347	Hex Screw, 3/8-16 x 1.75
7	710-04484	Screw, 5/16-18 x .750
8	710-0528	Hex Screw, 5/16-18 x 1.25
9	710-0778	Screw, 1/4-20 x 1.50
10	710-3005	Hex Screw, 3/8-16 x 1.25
11	710-3008	Hex Screw, 5/16-18 x .75
12	710-0751	Hex Screw, 1/4-20 x .62
13	750-1000	Spacer, .80 x 1.10 x 1.322 LG
14	712-04063	Flangelock Nut, 5/16-18
15	712-04065	Flangelock Nut, 3/8-16
16	712-0417A	Flange Nut, 5/8-18
17	712-04064	Flangelock Nut, 1/4-20
18	712-04243	Flangelock Nut, 1/2-13
19	914-0104	Cotter Pin, .072 Diameter
20	917-04074	Deck Adjuster Gear
21	726-0233	Push Nut, .25 x .50

Ref.	Part Number	Description
22	732-04280B	Extension Spring, .75 x 6.375
23	732-04287	Extension Spring, .500 x 6.375
24	936-0119	Lock Washer, 5/16
25	756-1188	Deck Pulley, 5.75
26	936-0300	Flat Washer, .406 x .875 x .059
27	738-04162A	Shoulder Spacer, .8840 x .190
28	738-04166	Shoulder Spacer, .5000 x .1475
29	942-0610A	3 in 1 Blade
30	747-04322	38" Front Adjust Deck Rod
31	783-04602A	Belt Cover
32	747-04381	38" Brake Control Rod
33	748-04069	Deck Lift, Pivot Cup
34	750-0566A	Spacer, .260 x .375 x 1.030
35	954-04062	V Type Belt
36	756-04129B	Idler Pulley
37	783-04740	Deck Engage Cable Bracket
38	931-1032B	Chute Assembly
39	938-04241	Spindle Shaft, 5.50
40	941-0919A	Ball Bearing, .787ID x 1.85 OD x .551
41	750-04739	Spacer, .820 x 1.150 x .480 LG

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

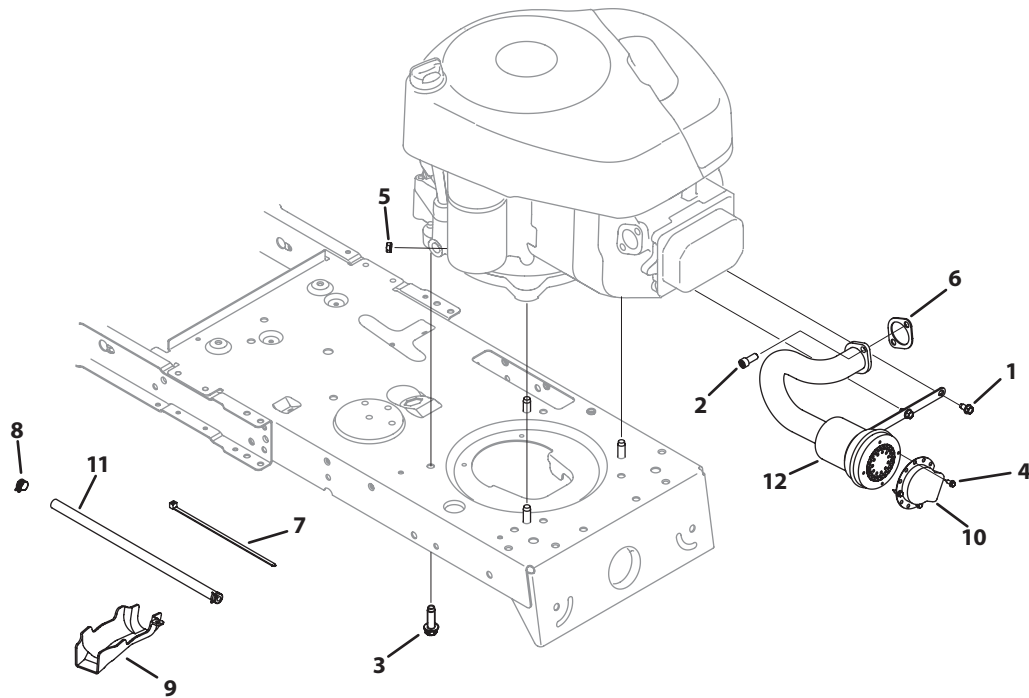

Ref.	Part Number	Description
1	710-0599	Screw, 1/4-20 x .500
2	710-1314A	Socket Screw, 5/16-18 x .750
3	710-04683	Screw, 3/8-16 x 1.0
4	710-0227	Screw, 8-18 x .500
5	712-0271	Sems Nut, 1/4-20
6	BS-692236	Exhaust Gasket, 10 HP Briggs
7	725-0157	Cable Tie
8	726-0205	Clamp Hose, .490 diameter
9	731-05628	Oil Drain Sleeve
10	751B222261	Muffler Deflector
11	751-10349-28	Fuel Hose, Low Permeation
12	751-9986A	Muffler

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

Wiring Harness Schematic - 725-04567G

