



Frame & Drive Idler Assembly

Attachments:	42"	50"	54"
Bagger.....	19A70020OEM	19A70004OEM	19A40002OEM
Bumper Kit.....	19A-115-100	19A-115-100	OEM-190-679
Mulch Kit.....	19A30006OEM	OEM-190-193	OEM-190-841

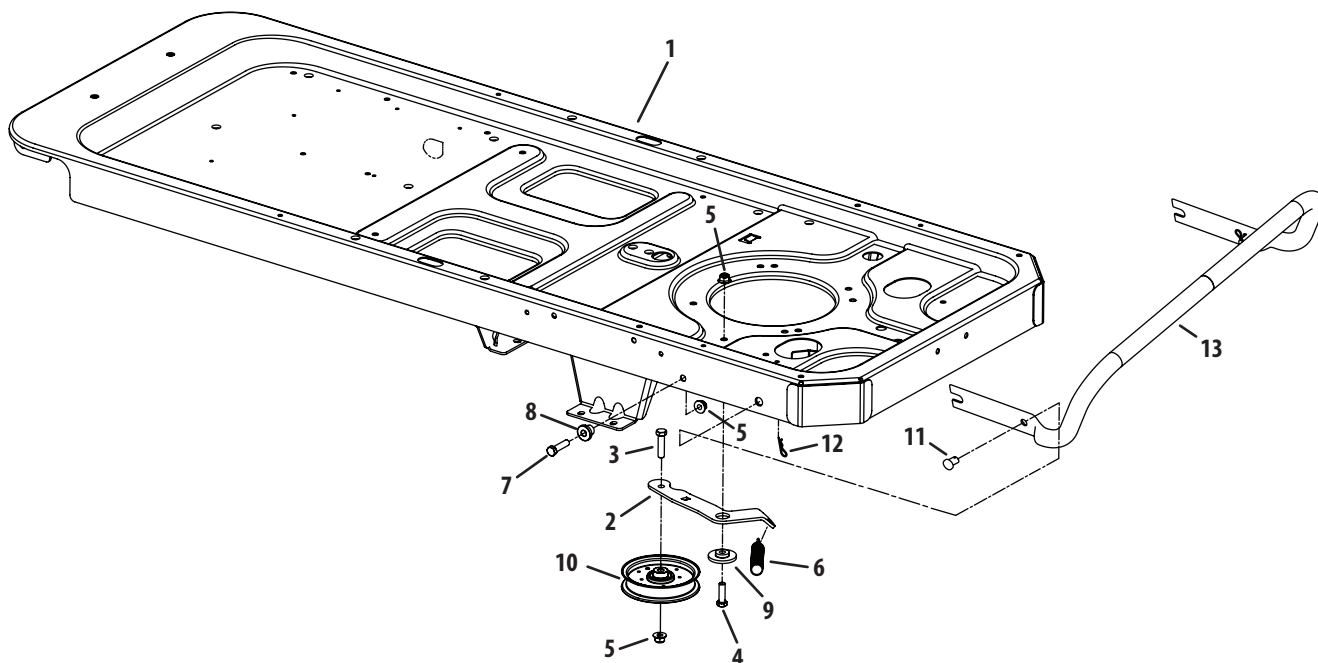


Ref.	Part Number	Description
1	603-04680A	Frame Assembly
2	703-05829	Drive Idler Arm
3	710-0520	Hex Screw, 3/8-16 x 1.5
4	710-3005	Hex Screw, 3/8-16 x 1.25
5	712-04065	Flange Nut, 3/8-16
6	732-0626	Extension Spring, .75 x 5.06
7	710-05097	Hex Screw, 3/8-16 x 1.5, GR2
8	738-04058	Shoulder Spacer, .39 x 1.0 x .7
9	738-04162A	Shoulder Spacer, .884 x .19
10	756-04129B	Idler Pulley, 4.25 Dia.
11	911-0332†	Clevis Pin, .50 Dia. x .78 Lg.
12	914-04023†	Cotter Pin, .080 x 1.5625
13	749-04358†	Bumper

† If Equipped

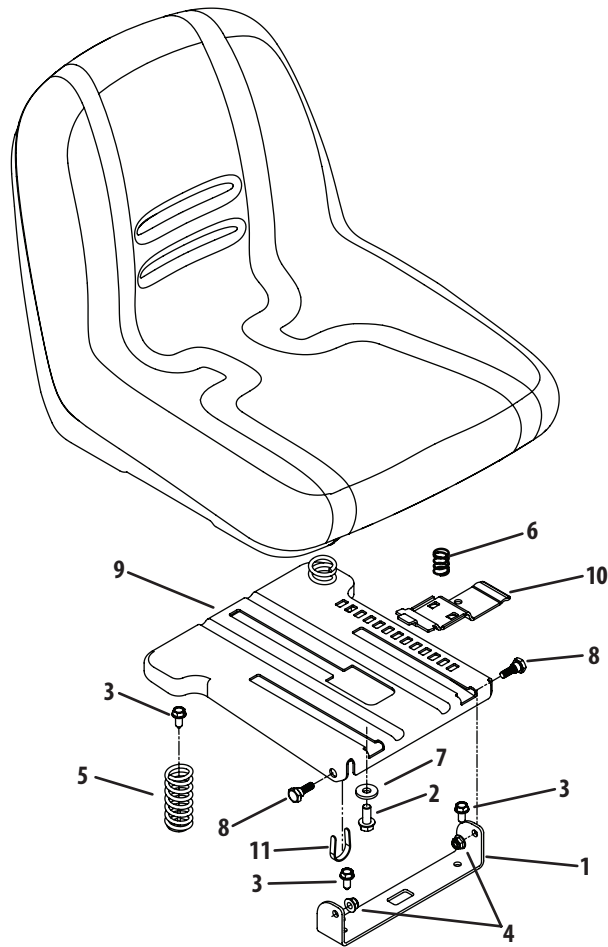

Ref.	Part Number	Description
1.	703-08734	Seat Bracket
2.	710-04482	Hex Flange Bolt, $\frac{3}{8}$ -16 x .875
3.	710-04484	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
4.	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
5.	732-04849	Compression Spring
6.	732-04563	Compression Spring
7.	736-0258	Flat Washer, .385 x 1.0 x .135
8.	938-0296	Shoulder Screw, .437 x .268 x $\frac{5}{16}$ -18
9.	783-06049	Seat Mount Bracket
10.	783-06050	Seat Adjustment Lever
11.	783-06448	Clip

Operator's Platform (U.S.)

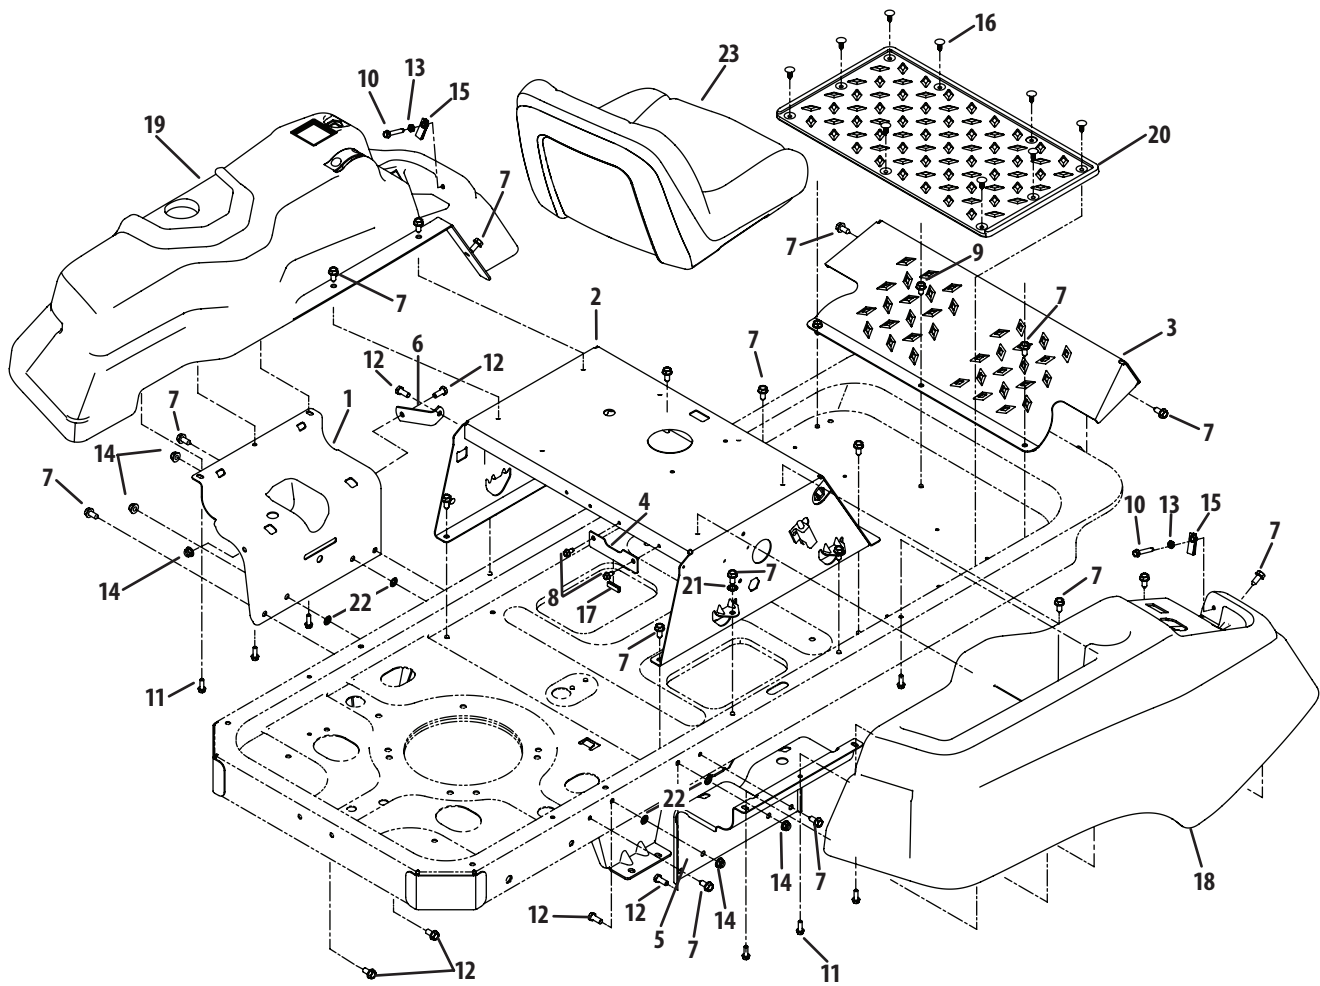


Ref.	Part Number	Description
1	603-04564†	Console Bracket Assembly
2	603-04946	Seat Frame Assembly
3	703-05373B	Foot Rest Bracket
4	703-05894	Battery Hold-Down Bracket
5	703-06451†	Console Mount Bracket
6	703-06623†	Fuel Tank Support Bracket
7	710-04484	Hex Washer Screw, 5/16-18 x .750
8	710-0599	Hex Washer Screw, 1/4-20 x .500
9	710-0604A	Hex Washer Screw, 5/16-18 x .625
10	710-0778	Hex Washer Screw, 1/4-20 x 1.500
11	710-0895	Hex Washer Screw, 1/4-15 x .750
12	710-3008	Hex Screw, 5/16-18 x .75 (TB)
	710-04187	Screw, 1/4-15 X .50
13	912-0298	Jam Nut, 1/4-20

Ref.	Part Number	Description
14	712-04063	Flange Lock Nut, 5/16-18
15	712-04092	Speed Nut, 1/4-20
16	726-3046	Ratchet Clip
17	731-0511	Trim Strip
18	731-06233	RH Console (TB)
	731-06478	RH Console (Oyster Gray)
19	731-06263B	LH Console (TB)
	731-06479A	LH Console (Oyster Gray)
20	735-04082C	Foot Pad
21	736-0148	Lock Washer, 3/8
22	726-0201	Speed Nut, .3125
23	757-04098	High-Back Seat Arm
	757-04103	High Back Seat (TB)
	757-04090	High Back Seat, 54" Deck Only

† If Equipped

Engine Connection, 42" w/ Kohler Engine

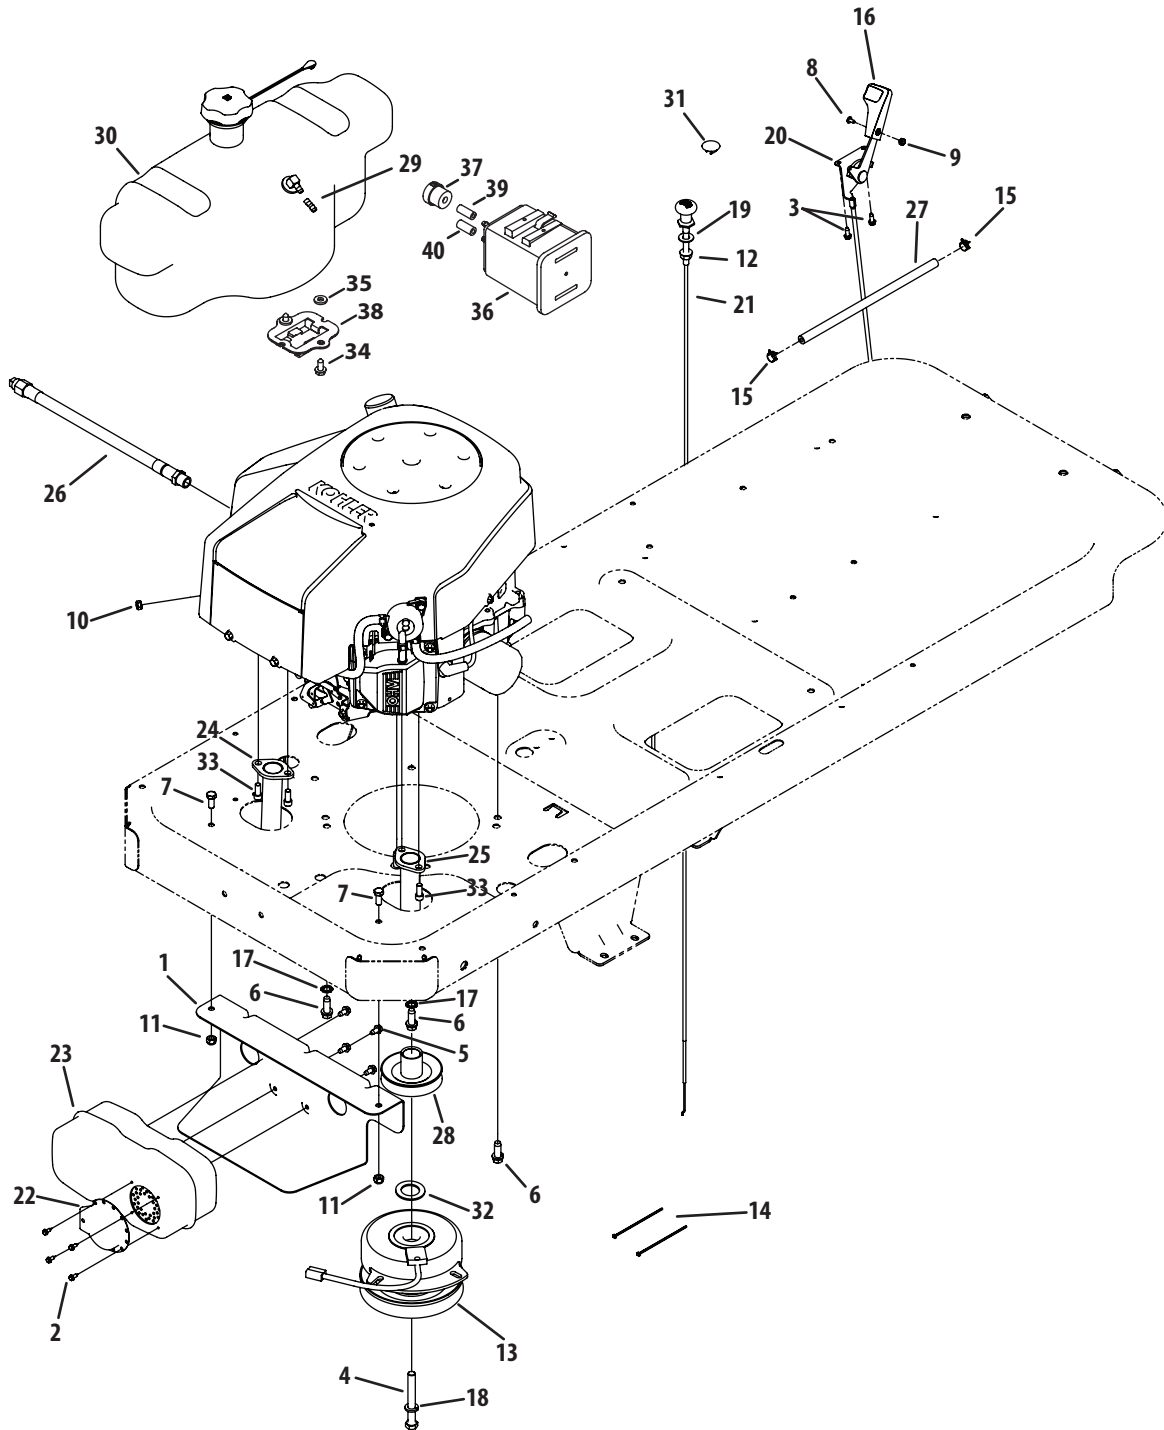

Engine Connection, 42" w/ Kohler Engine

Ref.	Part Number	Description
1	703-05441A	Muffler Mount Bracket
2	710-0227	Hex Washer Screw, #8-18 x .500
3	710-1017	Screw, 1/4-14 x .625
4	710-3157A	Hex Screw, 7/16-20 x 3.25
5	710-0599	Hex Washer Screw, 1/4-20 x .500
6	710-04683	Hex Washer Screw, 3/8-16 x 1.000
7	710-3008	Hex Washer Screw, 5/16-18 x .75
8	710-3217	Machine Screw, #8-32 x .375
9	712-0142	Hex Nut, #8-32
10	712-0271	Sems Nut, 1/4-20
11	712-04063	Flange Lock Nut, 5/16-18
12	912-3005	Flange Lock Nut, 3/8-16 +
13	917-04376A	Electric PTO Clutch
14	726-0197	Cable Tie
15	726-0205	Hose Clamp
16	731-04914	Throttle Control Knob
17	736-0148	Lock Washer, 3/8
18	936-0171	Lock Washer, 7/16
19	936-0300	Flat Washer, .406 x .875 x .059 +
20	746-04539	Throttle/Choke Control Cable *
	746-04066	Throttle Cable +
21	946-04214	Choke Cable +
22	751-11053	Muffler Deflector


Ref.	Part Number	Description
23	751-0616B	Dual Inlet Muffler
24	751-10253	Exhaust Pipe, LH
25	751-10254	Exhaust Pipe, RH
26	751-10291A	Oil Drain Hose
27	751-10349	Fuel Hose
28	756-04376	Engine Pulley
29	751-12089-28	Hose Vent, 3/16 EPA
30	951-04209B	Fuel Tank Assembly
—	935-0149	Fuel Tank Bushing
—	735-04081	Rubber Grommet
—	751-10442	Fuel Pick-Up Fitting
—	951-12428	Fuel Cap
—	751-12118	Rollover Valve
31	731-1999	Choke Plug *
32	736-0277	Flat Washer, 1.03 x 1.620 x .095
33	710-1314A	Screw, 5/16-18 x .750
34	710-1238††	Screw 5/16-18 x .875
35	936-3008††	Washer, Flat, .344 x .750 x .120
36	951-10589††	Canister, Carbon, 5 Gallon
37	951-10590††	Filter, Vent, Canister
38	951-10610††	Bracket., Adapter, Canister
39	751-10749††	Hose, Fuel, Low Perm., White
40	751-10750††	Hose, Fuel, Low Perm., Yellow

†† Equipped with CARB Fuel Tank

* — Domestic Models

+ — Australian Models


Engine Connection, 42" w/ Briggs Engine

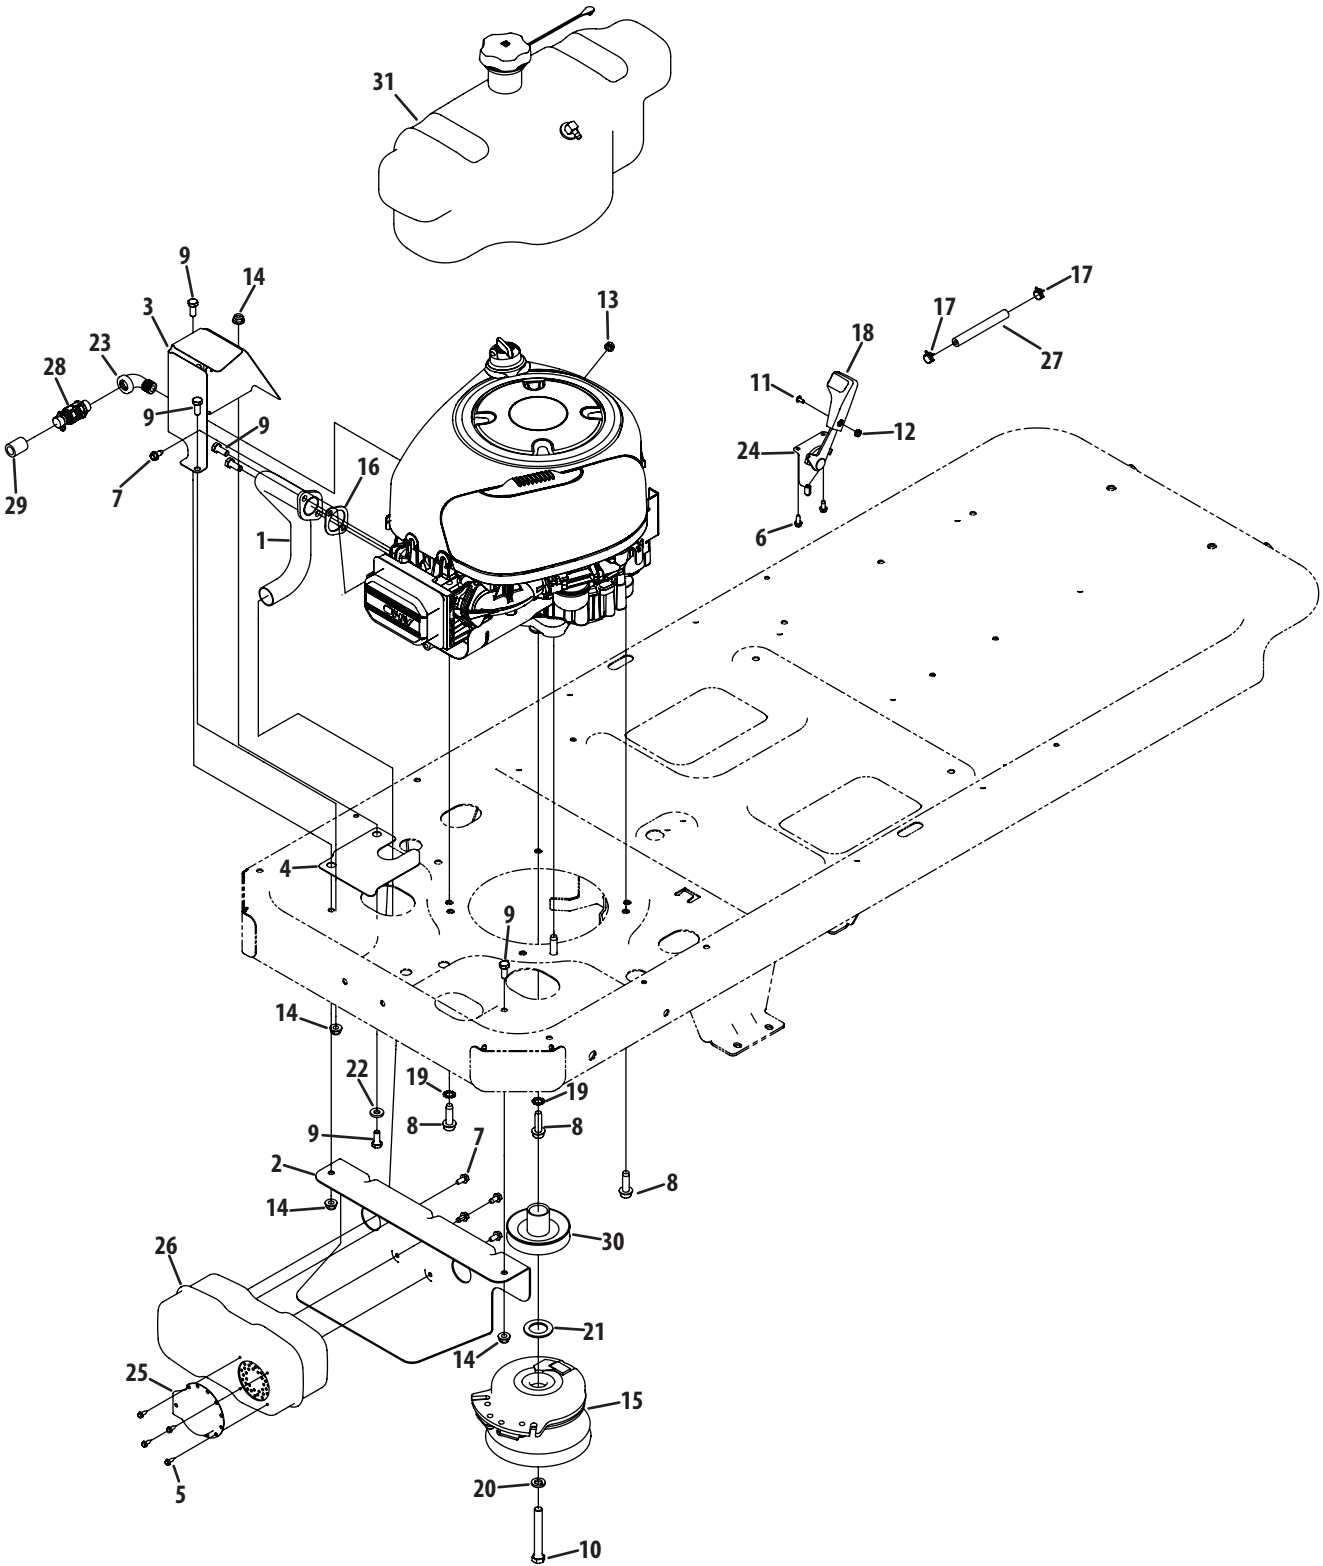

Engine Connection, 42" w/ Briggs Engine

Ref.	Part Number	Description
1	603-04176A	Exhaust Tube Assembly
2	703-05441A	Muffler Mount Bracket
3	703-05870	Muffler Heat Shield
4	703-07712A	Heat Shield
5	710-0227	Hex Washer Screw, #8-18 x .500
6	710-1017	Screw, 1/4-14 x .625
7	710-0599	Hex Washer Screw, 1/4-20 x .500
8	710-1315	Hex Washer Screw, 3/8-16 x 1.250
9	710-3008	Hex Screw, 5/16-18 x .75
10	710-3157A	Hex Screw, 7/16-20 x 3.25
11	710-3217	Machine Screw, #8-32 x .375
12	712-0142	Hex Nut, #8-32
13	712-0271	Sems Nut, 1/4-20
14	712-04063	Flange Lock Nut, 5/16-18
15	917-04376A	Electric PTO Clutch
16	BS-692236	Exhaust Gasket
17	726-0205	Hose Clamp, .490
18	731-04914	Throttle Control Knob
19	736-0148	Lock Washer, 3/8
20	936-0171	Lock Washer, 7/16
21	736-0277	Flat Washer, 1.031 x 1.620 x .095
22	936-3008	Flat Washer, .344 x .750 x .120
23	737-0125	Elbow Fitting, 3/8
24	946-04161	Throttle/Choke Control Cable
25	751-11053	Muffler Deflector
26	751-0617C	Single Inlet Muffler
27	751-10349	Low Permeation Fuel Hose
28	951-10517A	Oil Drain
29	751-3141-14	Oil Drain Extension Hose
30	756-04376	Engine Pulley
31	951-04209B	Fuel Tank Assembly
—	935-0149	Fuel Tank Bushing
—	735-04081	Rubber Grommet
—	751-10442	Fuel Pick-Up Fitting
—	951-12428	Fuel Cap
—	751-12118	Rollover Valve

Engine Connection, 50" w/ Kohler Engine

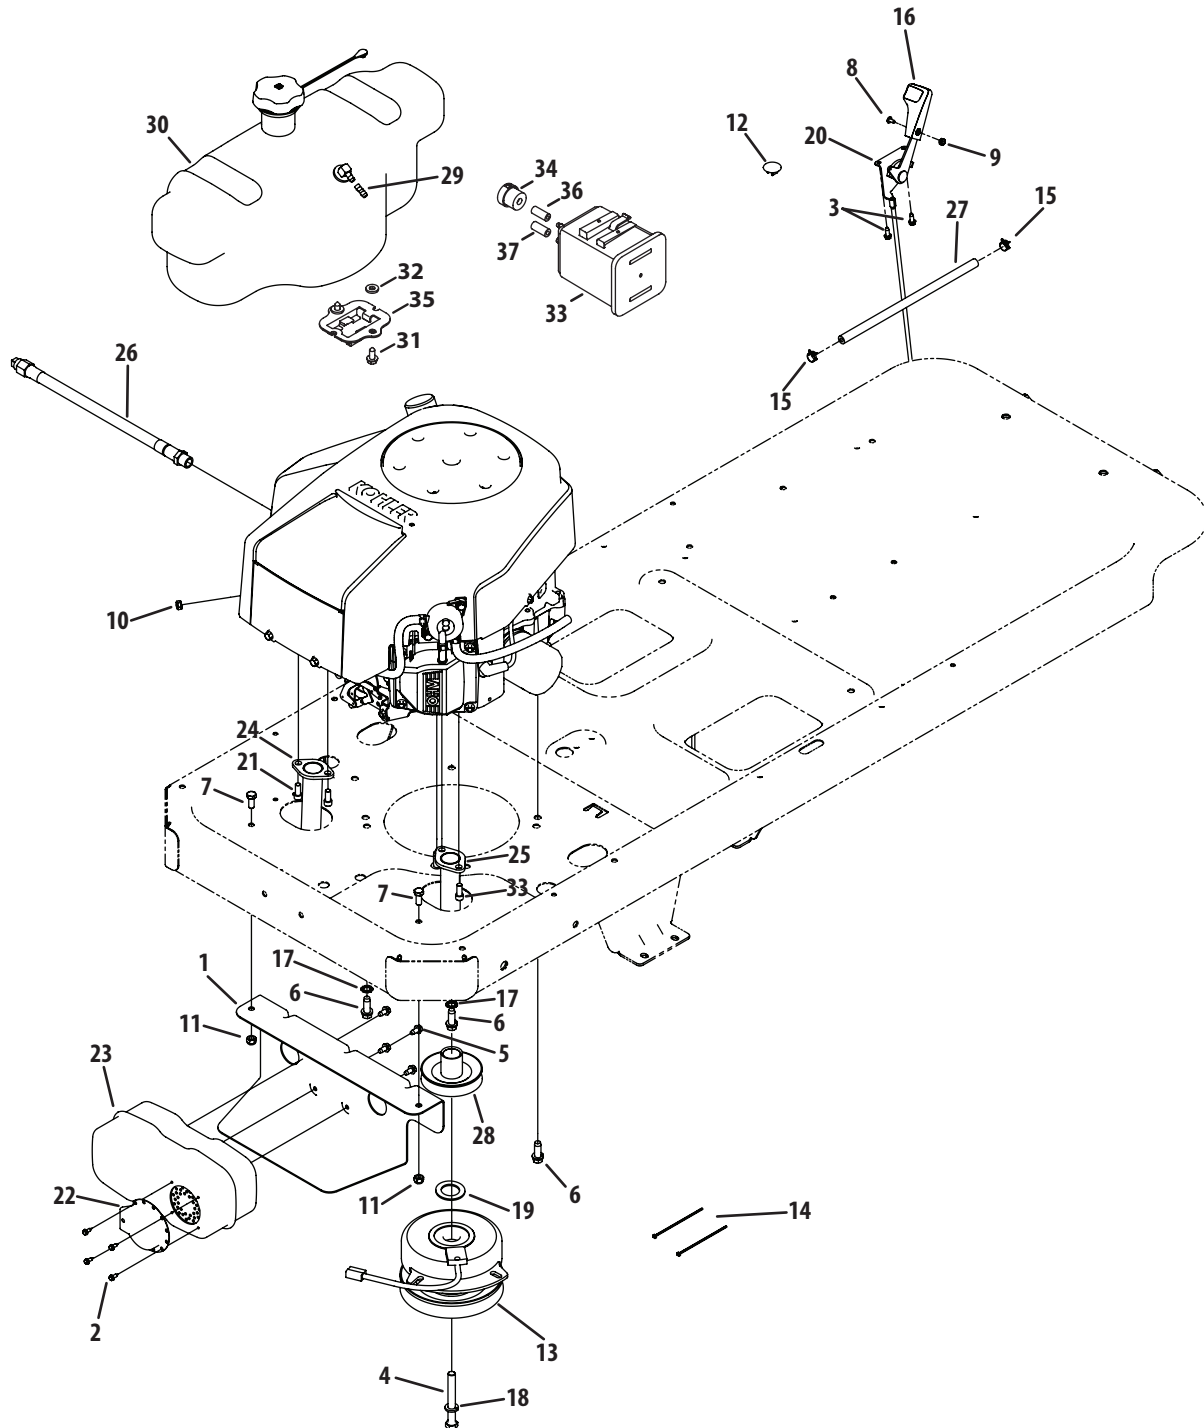


Engine Connection, 50" w/ Kohler Engine

Ref.	Part Number	Description
1	703-05441A	Muffler Mount Bracket
2	710-0227	Hex Washer Screw, #8-18 x .500
3	710-1017	Screw, 1/4-14 x .625
4	710-04379A	Hex Lock Screw, 7/16-20 x 3.50
5	710-0599	Hex Washer Screw, 1/4-20 x .500
6	710-04683	Hex Washer Screw, 3/8-16 x 1.000
7	710-3008	Hex Washer Screw, 5/16-18 x .75
8	710-3217	Machine Screw, #8-32 x .375
9	712-0142	Hex Nut, #8-32
10	712-0271	Sems Nut, 1/4-20
11	712-04063	Flange Lock Nut, 5/16-18
12	731-1999	Choke Plug
13	917-04552	Electric PTO Clutch
14	726-0197	Cable Tie
15	726-0205	Hose Clamp
16	731-04914	Throttle Control Knob
17	736-0148	Lock Washer, 3/8
18	936-0171	Lock Washer, 7/16
19	736-0277	Flat Washer, 1.03 x 1.620 x .095
20	746-04539	Throttle/Choke Control Cable
21	710-1314A	Screw, 5/16-18 x .750

Ref.	Part Number	Description
22	751-11053	Muffler Deflector
23	751-0616B	Dual Inlet Muffler
24	751-10253	Exhaust Pipe, LH
25	751-10254	Exhaust Pipe, RH
26	751-10291	Oil Drain Hose
27	751-10349	Fuel Hose
28	756-04376	Engine Pulley
29	751-12089-28	Hose Vent, 3/16 EPA
30	951-04209B	Fuel Tank Assembly
—	935-0149	Fuel Tank Bushing
—	735-04081	Rubber Grommet
—	751-10442	Fuel Pick-Up Fitting
—	951-12428	Fuel Cap
—	751-12118	Rollover Valve
31	710-1238††	Screw 5/16-18 x .875
32	936-3008††	Washer, Flat, .344 x .750 x .120
33	951-10589††	Canister, Carbon, 5 Gallon
34	951-10590††	Filter, Vent, Canister
35	951-10610††	Bracket., Adapter, Canister
36	751-10749††	Hose, Fuel, Low Perm., White
37	751-10750††	Hose, Fuel, Low Perm., Yellow

†† Equipped with CARB Fuel Tank


Engine Connection, 50" w/ Kawasaki Engine

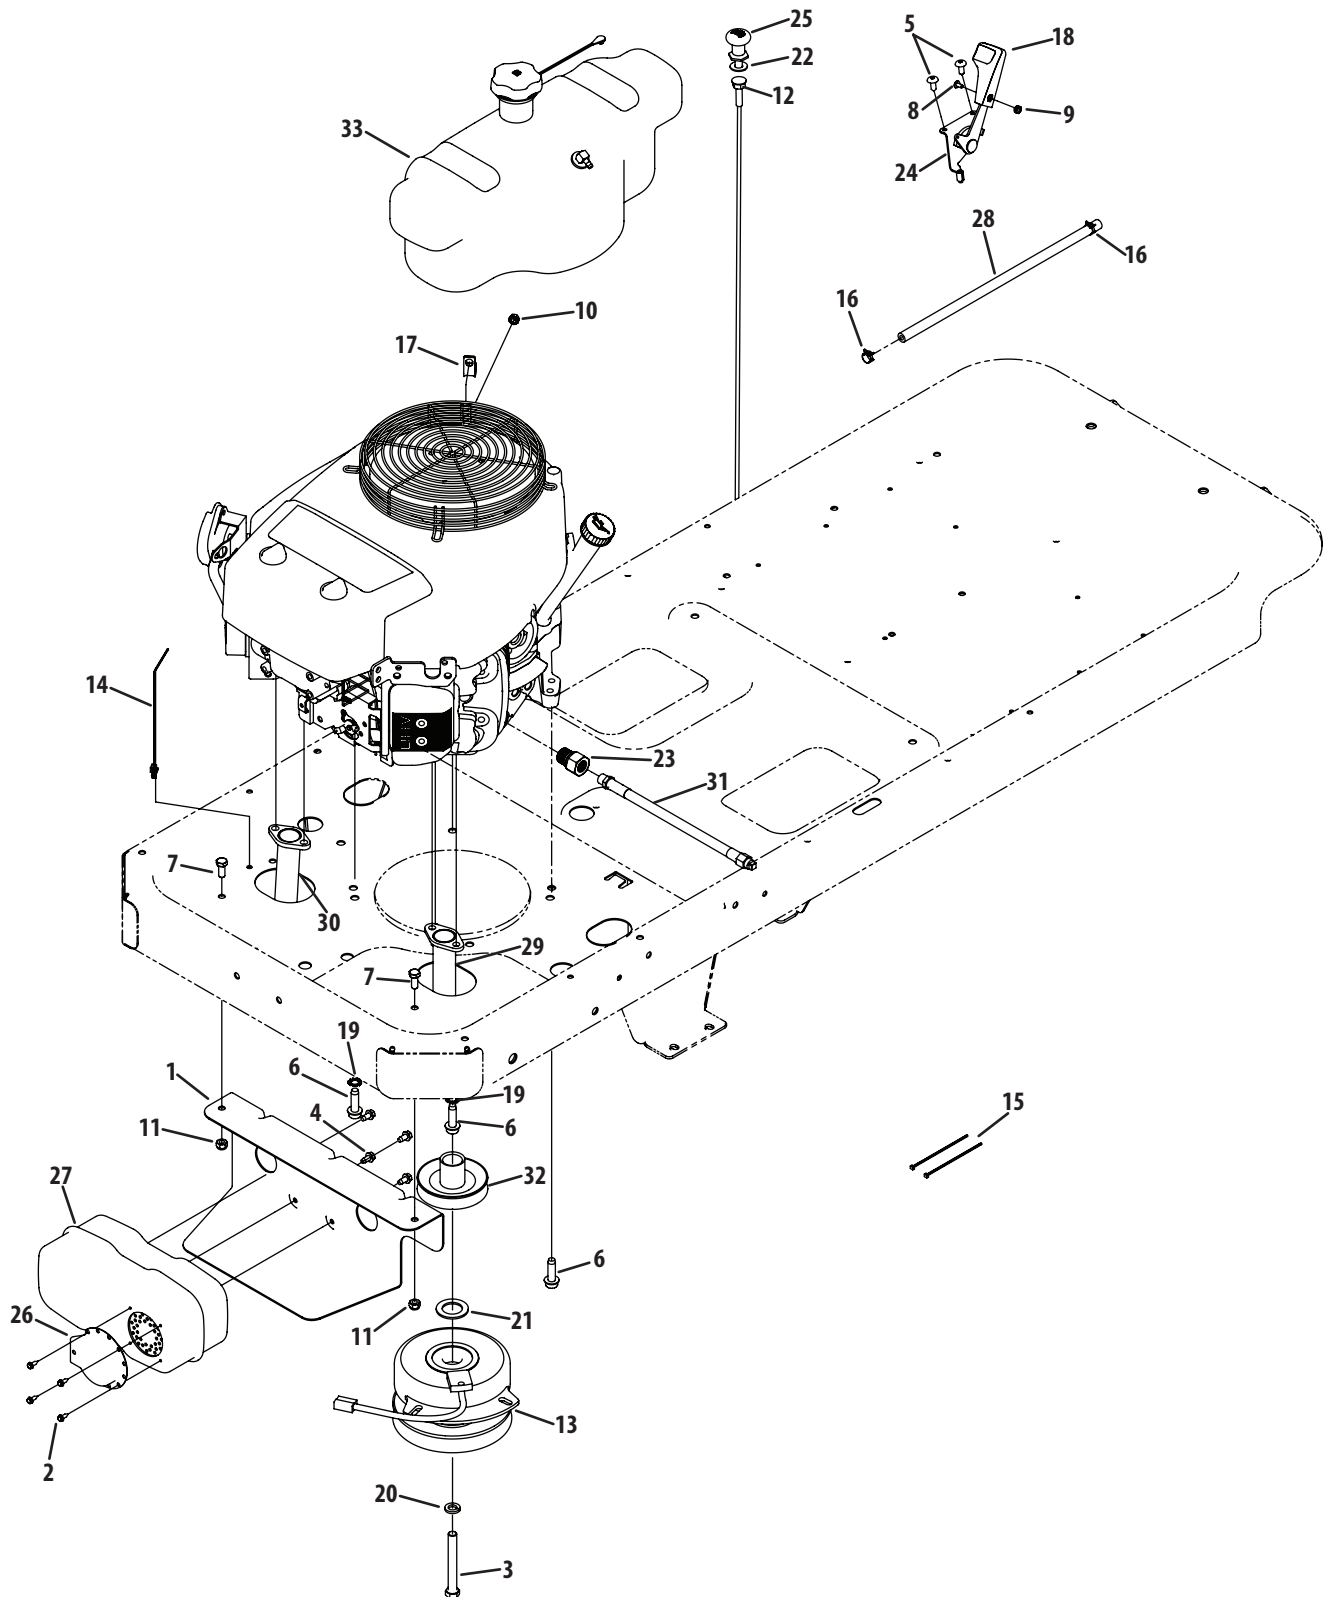

Engine Connection, 50" w/ Kawasaki Engine


Ref.	Part Number	Description
1	703-05441A	Muffler Mount Bracket
2	710-0227	Hex Washer Screw, #8-18 x .500
3	710-04379A	Hex Washer Screw, 7/16-20 x 3.50
4	710-0599	Hex Washer Screw, 1/4-20 x .500
5	710-1017	AB Screw, 1/4-14 x .625
6	710-1315	Hex Washer Screw, 3/8-16 x 1.250
7	710-3008	Hex Screw, 5/16-18 x .75
8	710-3217	Machine Screw, #8-32 x .375
9	712-0142	Hex Nut, #8-32
10	712-0271	Sems Nut, 1/4-20
11	712-04063	Flange Lock Nut, 5/16-18
12	912-3005	Flange Lock Nut, 3/8-16
13	917-04552	Electric PTO Clutch
14	926-0154	Cable Tie, 7.5
15	726-0197	Cable Tie
16	726-0205	Hose Clamp, .490
17	726-0272	Clamp, 1/16
18	731-04914	Throttle Control Knob
19	736-0148	Lock Washer, 3/8
20	936-0171	Lock Washer, 7/16
21	736-0277	Flat Washer, 1.031 x 1.620 x .095
22	936-0300	Flat Washer, .406 x .875 x .059
23	737-04138	Fitting, 1.0
24	946-04581	Throttle Cable
25	946-04214	Choke Cable
26	751-11053	Muffler Deflector
27	751-0616B	Dual Inlet Muffler
28	751-10349	Fuel Hose
29	751-10770	RH Exhaust Pipe
30	751-10771	LH Exhaust Pipe
31	751-10291	Oil Drain Hose
32	756-04376	Engine Pulley
33	951-04209B	Fuel Tank Assembly
—	935-0149	Fuel Tank Bushing
—	735-04081	Rubber Grommet
—	751-10442	Fuel Pick-Up Fitting
—	951-12428	Fuel Cap
—	751-12118	Rollover Valve

Engine Connection, 54"

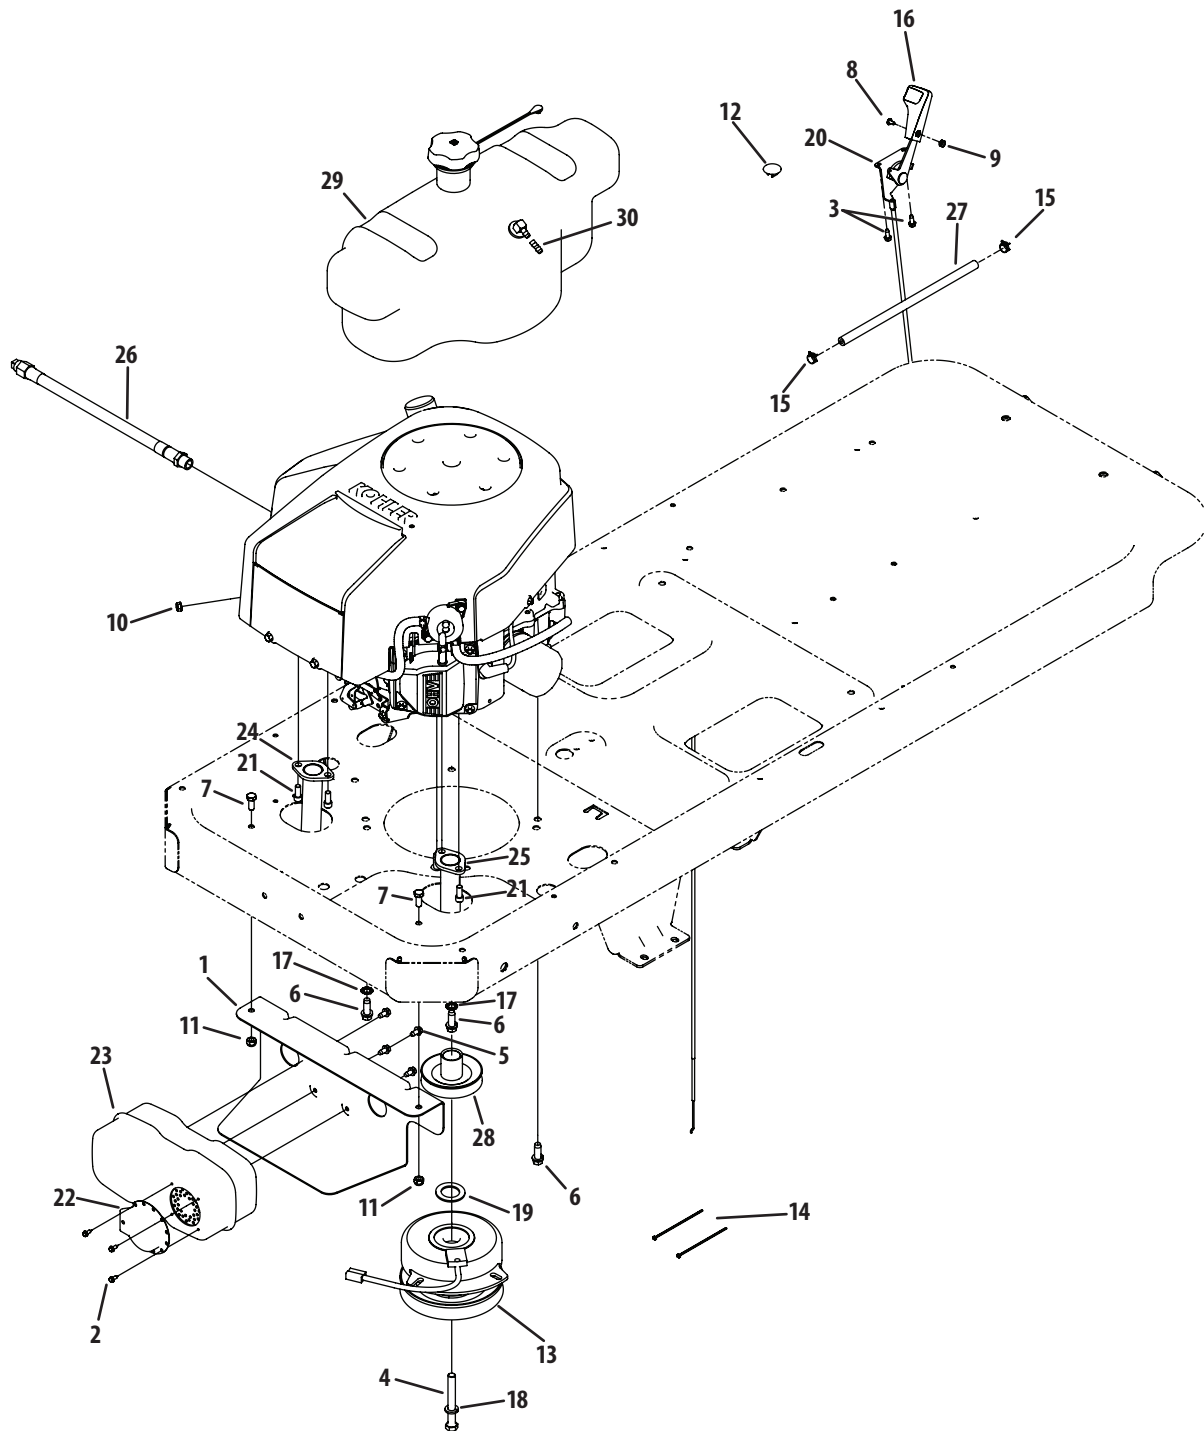

Ref.	Part Number	Description
1	703-05441A	Muffler Mount Bracket
2	710-0227	Hex Washer Screw, #8-18 x .500
3	710-1017	Screw, 1/4-14 x .625
4	710-04379A	Hex Lock Screw, 7/16-20 x 3.50
5	710-0599	Hex Washer Screw, 1/4-20 x .500
6	710-04683	Hex Washer Screw, 3/8-16 x 1.000
7	710-3008	Hex Washer Screw, 5/16-18 x .75
8	710-3217	Machine Screw, #8-32 x .375
9	712-0142	Hex Nut, #8-32
10	712-0271	Sems Nut, 1/4-20
11	712-04063	Flange Lock Nut, 5/16-18
12	731-1999	Choke Plug
13	917-1774C	Electric PTO Clutch
14	726-0197	Cable Tie
15	726-0205	Hose Clamp
16	731-04914	Throttle Control Knob
17	736-0148	Lock Washer, 3/8
18	936-0171	Lock Washer, 7/16
19	736-0277	Flat Washer, 1.03 x 1.620 x .095
20	746-04539	Throttle/Choke Control Cable
21	710-1314A	Screw, 5/16-18 x .750
22	751-0564B	Muffler Deflector
23	751-0616B	Dual Inlet Muffler
24	751-10253	Exhaust Pipe, LH
25	751-10254	Exhaust Pipe, RH
26	751-10291	Oil Drain Hose
27	751-10349	Fuel Hose
28	756-04376	Engine Pulley
29	951-04209B	Fuel Tank Assembly
—	935-0149	Fuel Tank Bushing
—	735-04081	Rubber Grommet
—	751-10442	Fuel Pick-Up Fitting
—	951-12428	Fuel Cap
—	751-12118	Rollover Valve
30	751-12089-28	Hose Vent, 3/16 EPA

Deck Lift & Controls, 42 & 50" Decks

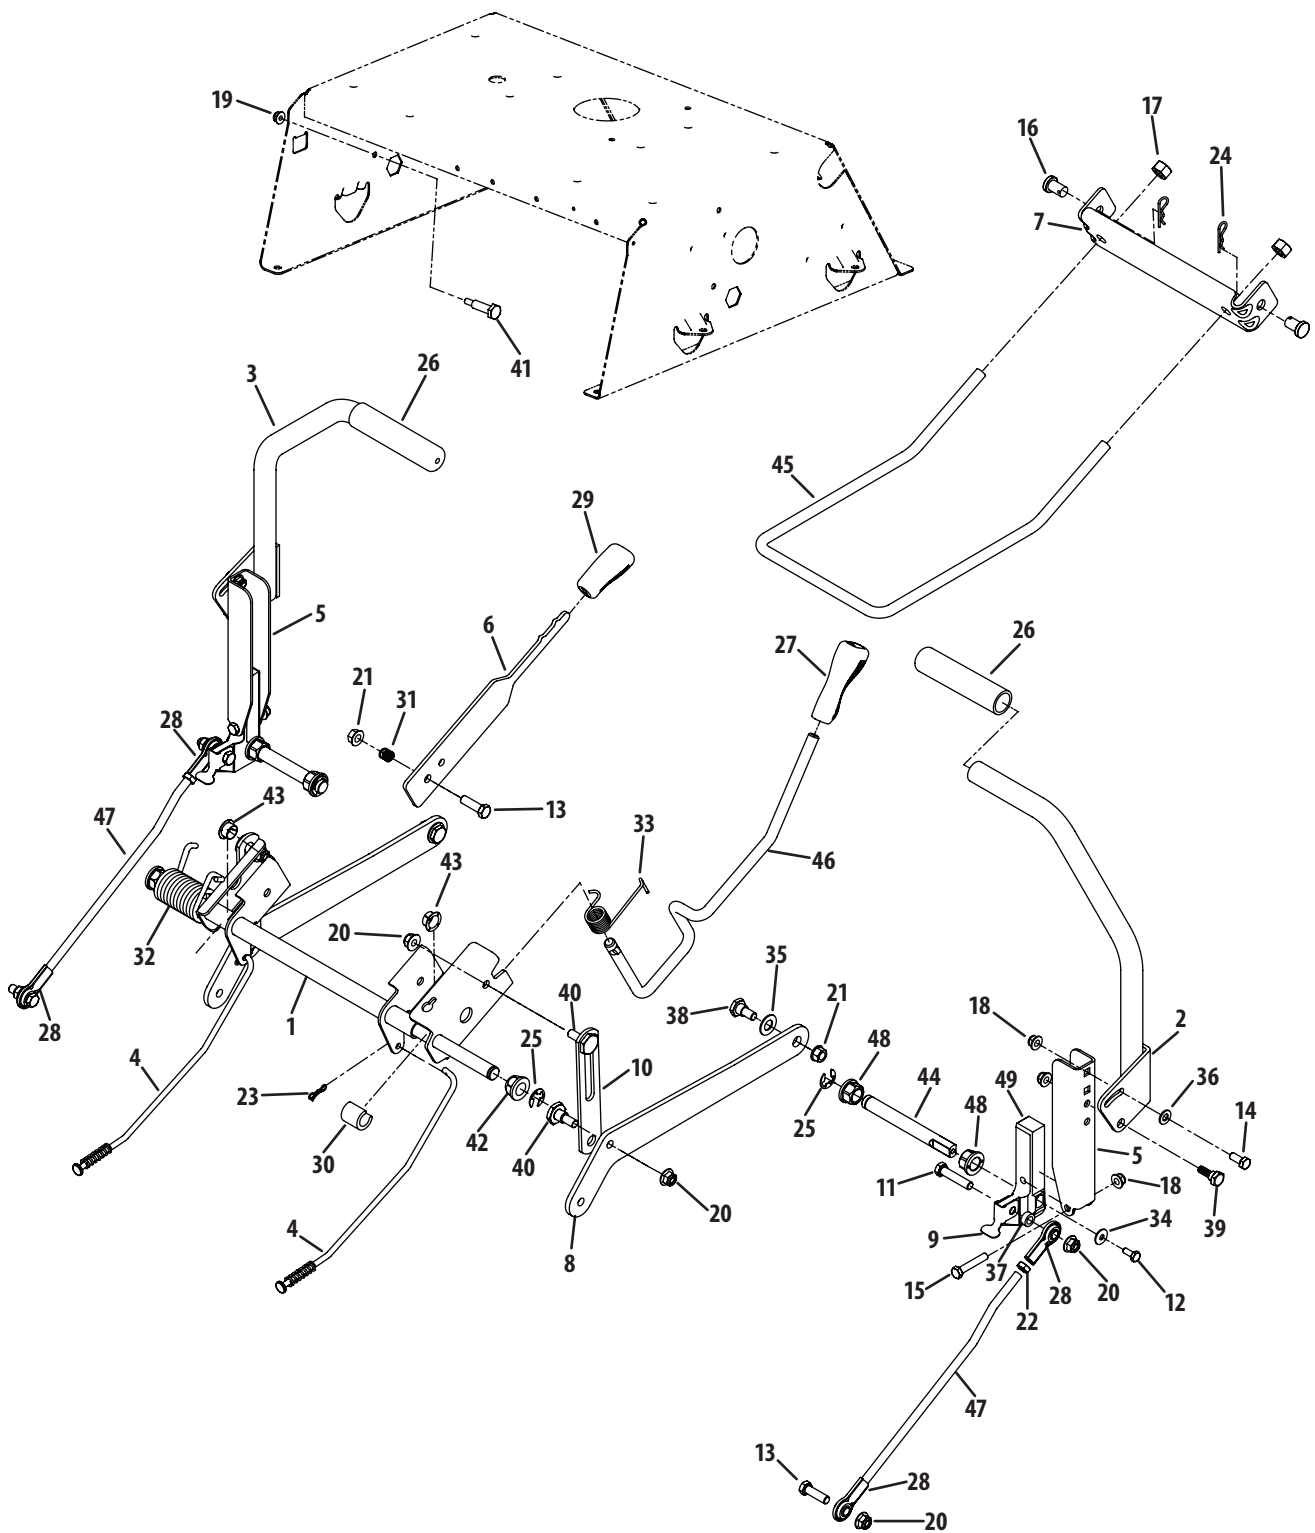


Deck Lift & Controls, 42 & 50" Decks

Ref.	Part Number	Description
1	603-04160C	Deck Lift Shift Assembly
2	603-04322	RH Lapbar Lever Assembly
3	603-04324	LH Labpar Lever Assembly
4	947-04065	Brake Rod Assembly
5	703-05387B	Lapbar Pivot Bracket
6	703-05396A	Brake/Shabs Assembly
7	703-05414A	Front Deck Hanger Bracket
8	703-05793A	Deck Lift Arm Plate
9	703-06096A	Switch Actuator Bracket
10	703-06169	Lift Link Plate
11	710-0347	Hex Screw, 3/8-16 x 1.75
12	710-0433	Hex Screw, 1/4-20 x .625
13	710-3005	Hex Screw, 3/8-16 x 1.25
14	710-3008	Hex Screw, 5/16-18 x .75
15	710-3180	Hex Screw, 5/16-18 x 1.75
16	911-0332	Clevis Pin, .50 x .78
17	712-04243	Flex Lock Nut, 1/2-13
18	712-04063	Flange Lock Nut, 5/16-18
19	712-04064	Flange Lock Nut, 1/4-20 (50" Deck)
20	712-04065	Flange Lock Nut, 3/8-16
21	712-0375	Hex Lock Nut, 3/8-16, Centerlock
22	912-3001	Jam Nut, 3/8
23	714-04040	Bow-Tie Cotter Pin
24	914-04023	Cotter Pin, .080 x 1.5625
25	716-0106	E-Ring

Ref.	Part Number	Description
26	731-04719A	Lapbar Grip (TB)
	720-0274	Lapbar Grip
27	720-0311	Handle Grip, 1/2
28	723-04080	Rod End
29	731-04735	Selector Handle
30	731-05732	Spacer, .621 x 1.00
31	932-0334	Compression Spring, .50 x .50
32	732-04420	Torsion Spring, 1.191 x 2.78
33	732-04869A	Torsion Spring
34	736-0270	Bell Washer, .265 x .75 x .062
35	936-0272	Flat Washer, .510 x 1.00 x .060
36	936-0275	Flat Washer, .344 x .688 x .065
37	750-04776	Spacer, .380 x .625 x .265
38	738-0143	Shoulder Bolt, 3/8-16 x .496 x .336
39	938-0296	Shoulder Screw, 5/16 x .437 x .268
40	938-0507B	Shoulder Screw, .500 x .434
41	938-0572	Shldr. Screw, .374 x 1.16 (50" Deck)
42	941-0225	Hex Flange Bearing
43	741-3074	Flange Bearing, .626 x .938 x .344
44	747-04226A	Shaft Control
45	747-04401A	Front Hanger Deck Lift Rod
46	747-04637	Deck Lift Handle Rod
47	747-05057	Lapbar Control Rod
48	948-0227A	Hex Flange Bearing, .629
49	748-04169A	Control Hub

Deck Lift & Controls, 54" Decks

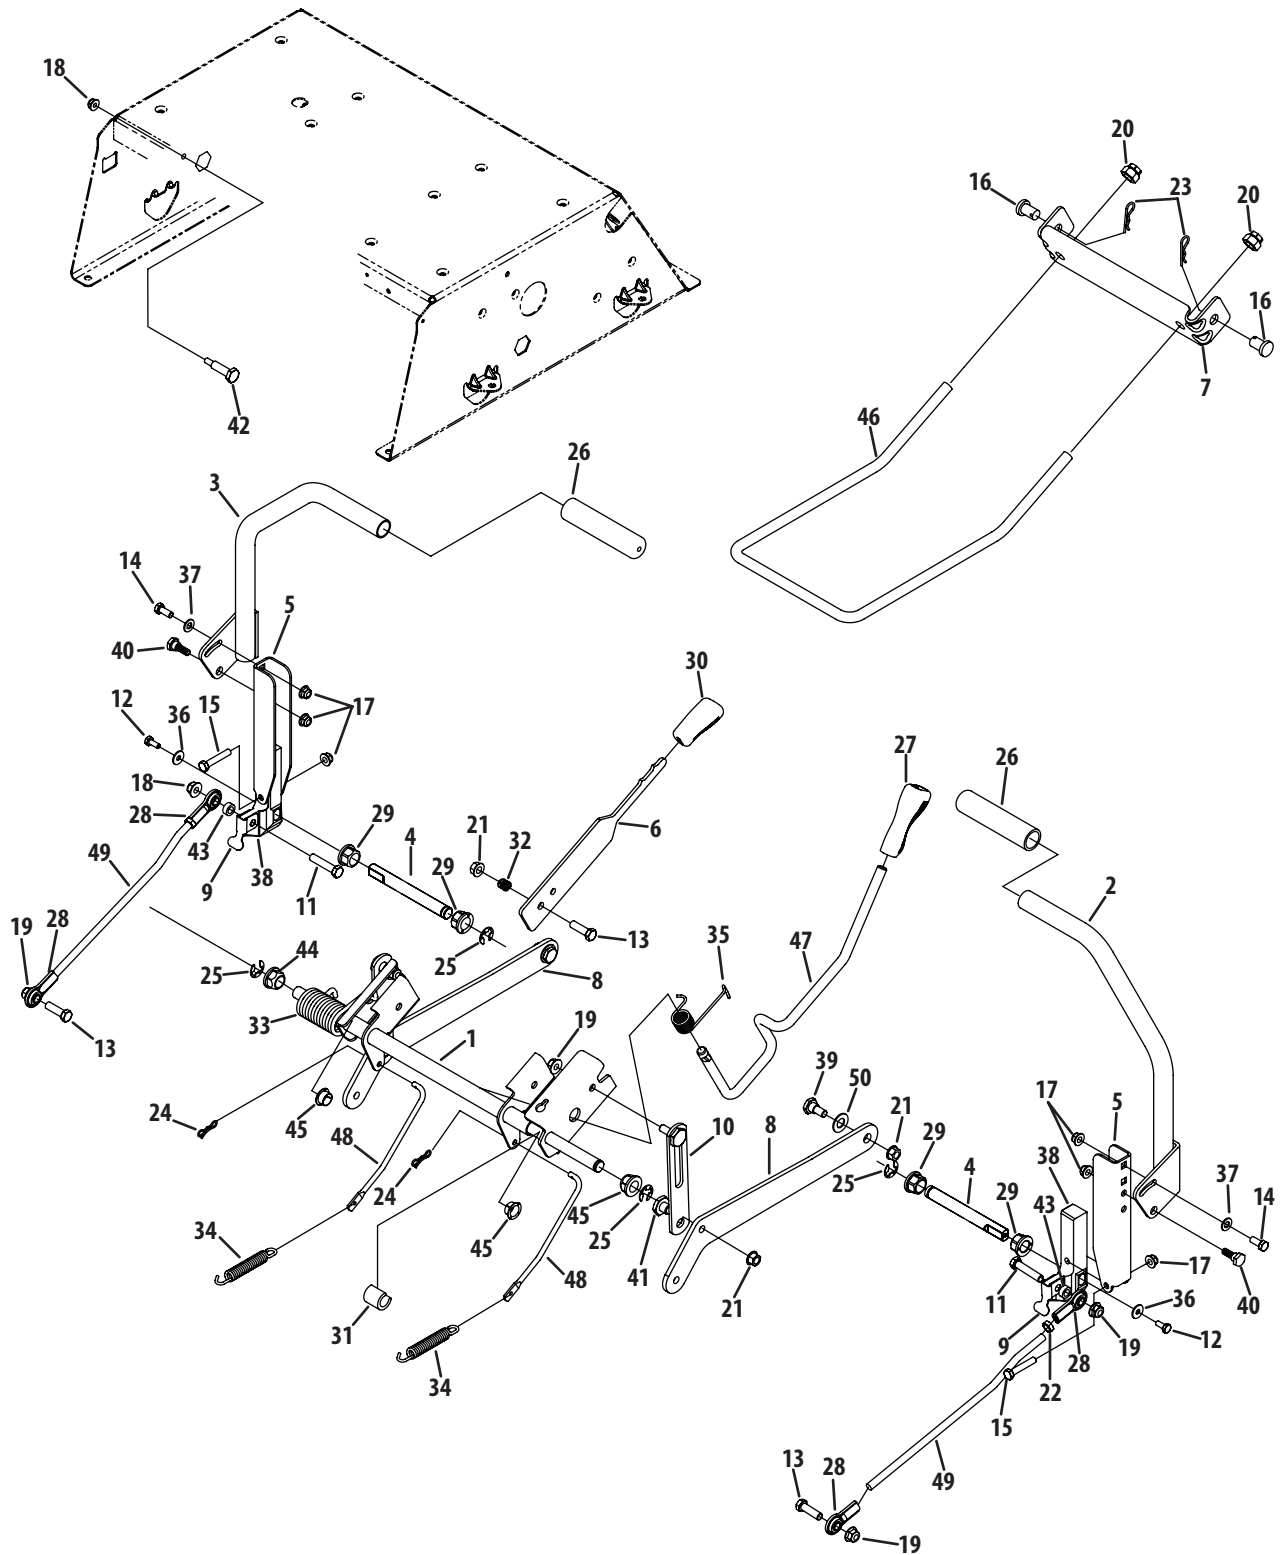


Deck Lift & Controls, 54" Decks


Ref.	Part Number	Description
1	603-04160C	Deck Lift Shaft Assembly
2	603-04322	RH Lapbar Lever Assembly
3	603-04324	LH Lapbar Lever Assembly
4	747-04226A	Shaft Control
5	703-05387B	Lapbar Pivot Bracket
6	703-05396A	Brake/Shabs Handle
7	703-05414A	Front Deck Hanger Bracket
8	703-05793A	Deck Lift Arm Plate
9	703-06096A	Actuator Switch Bracket
10	703-06169	Link Lift Plate
11	710-0347	Hex Screw, 3/8-16 x 1.75
12	710-0433	Hex Lock Screw, 1/4-20 x .625
13	710-3005	Hex Screw, 3/8-16 x 1.25
14	710-3008	Hex Screw, 5/16-18 x .75
15	710-3180	Hex Screw, 5/16-18 x 1.75
16	911-0332	Clevis Pin, .50 x .78
17	712-04063	Flange Lock Nut, 5/16-18
18	712-04064	Flange Lock Nut, 1/4-20
19	712-04065	Flange Lock Nut, 3/8-16
20	712-04243	Flex Lock Nut, 1/2-13
21	712-0375	Hex Lock Nut, 3/8-16, Centerlock
22	912-3001	Jam Nut, 3/8-24
23	914-04023	Internal Cotter Pin, .080 x 1.5625
24	714-04040	Bow-Tie Cotter Pin
25	716-0106	E-Ring, .625

Ref.	Part Number	Description
26	720-0274	Grip, 1.0 x 5.0
27	720-0311	Handle Grip, 1/2
28	723-04080	B/Joint Rode End, .375
29	948-0227A	Hex Flange Bearing, .629
30	731-04735	Selector Handle
31	731-05732	Spacer, .62 x 1.00
32	932-0334	Compression Spring, .50 x .50
33	732-04420	Torsion Spring, 1.19 x 2.78
34	732-04432	Extension Spring, .59 x 4.00
35	732-04869A	Torsion Spring
36	736-0270	Bell Washer, .265 x .75 x .062
37	936-0275	Flat Washer, .344 x .688 x .065
38	748-04169A	PM Control Hub
39	738-0143	Shoulder Bolt, 3/8-16 x .496 x .336
40	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
41	938-0507B	Shoulder Screw, .500 x .434
42	938-0572	Shoulder Screw, .374 x 1.16
43	750-04776	Spacer, .380 x .625 x .255
44	941-0225	Hex Flange Bearing
45	741-3074	Flange Bearing, .626 x .938 x .344
46	747-04401A	Deck Lift Frong Hanger Rod
47	747-04637	Deck Lift Handle Rod
48	747-04651	Brake Rod
49	747-05057	Lapbar Rod Control
50	936-0272	Flat Washer, .510 x 1.00 x .060

Front Axle, 42" Decks

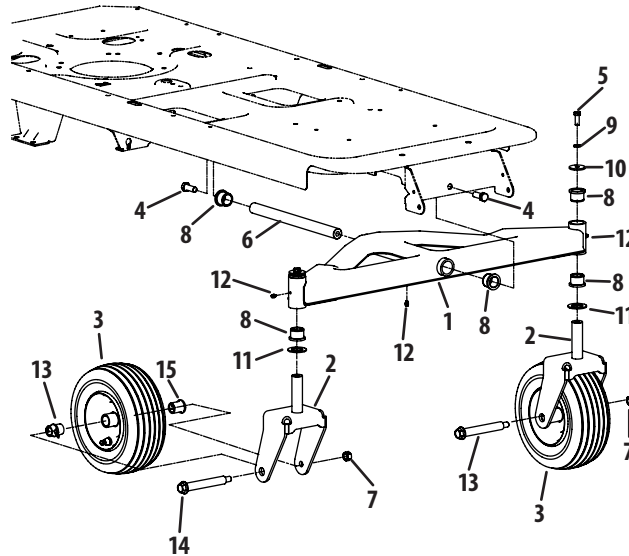


Ref.	Part Number	Description
1	603-04148C	Front Pivot Axle
2	603-04308	Castor Wheel Bracket
3	634-04237B	Wheel Assembly, 11.0 x 4.0 x 5.0 Gray
4	710-04186	Hex Lock Screw, 1/2-13 x 1.25
5	710-0514	Hex Cap Screw, 3/8-16 x 1.0
6	911-04228	Axle Shaft
7	712-3022	Hex Lock Nut, 1/2-13
8	731-05500	Flange Bearing, 1.0 x 1.246
9	936-0169	Lock Washer, 3/8
10	936-0227	Flat Washer, .39 x 1.5 x .134
11	736-0250	Flat Washer, 1.0 x 1.75 x .107
12	937-3000	Lube Fitting, 3/16 Drive
13	738-04182A	Shoulder Screw, .75 x 4.75 x 7/16-14
14	741-0516B	Flange Bearing, .76 x 1.0 x 1.2
15	741-0990B	Flange Bearing, .76 ID w/ Lube Ftg.

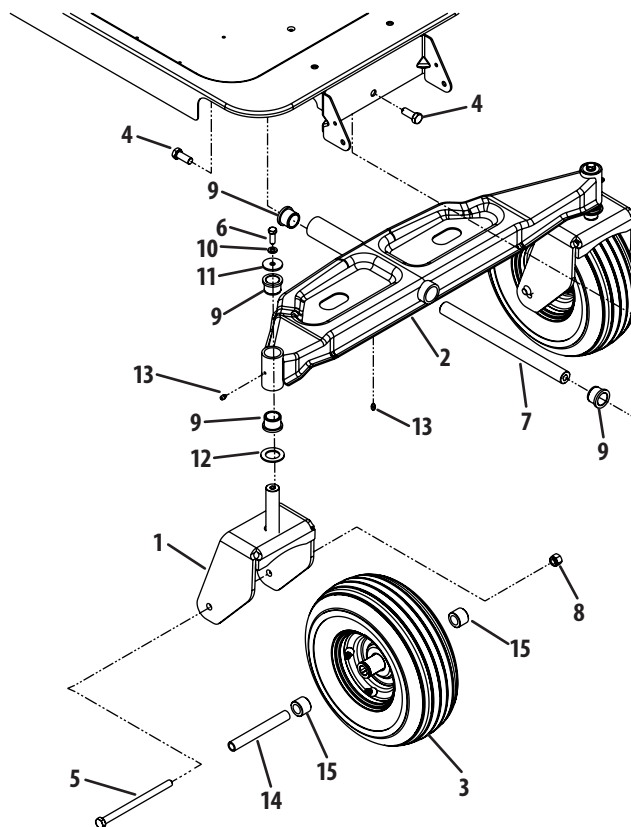

Ref.	Part Number	Description
1	603-04370	Castor Wheel Bracket
2	603-04385A	Front Pivot Axle
3	634-04321A	Wheel Assembly, 13 x 5-6
4	710-04186	Hex Lock Screw, 1/2-13 x 1.25
5	710-04652	Hex Cap Screw, 1/2-20 x 7.25
6	710-0514	Hex Cap Screw, 3/8-16 x 1.0
7	911-04228	Axle Shaft
8	912-3058	Hex Insert Lock Nut, 1/2-13
9	731-05500	Flange Bearing, 1.0 x 1.246
10	936-0169	Lock Washer, 3/8
11	936-0227	Flat Washer, .39 x 1.5 x .134
12	736-0250	Flat Washer, 1.0 x 1.75 x .10
13	937-3000	Lube Fitting, 3/16 Drive
14	750-04775A	Spacer, .51 x .75 x 5.825
15	750-04792	Hub, .76 x 1.23 x .92


Rear Drive & Wheels, 42" & 50" Decks

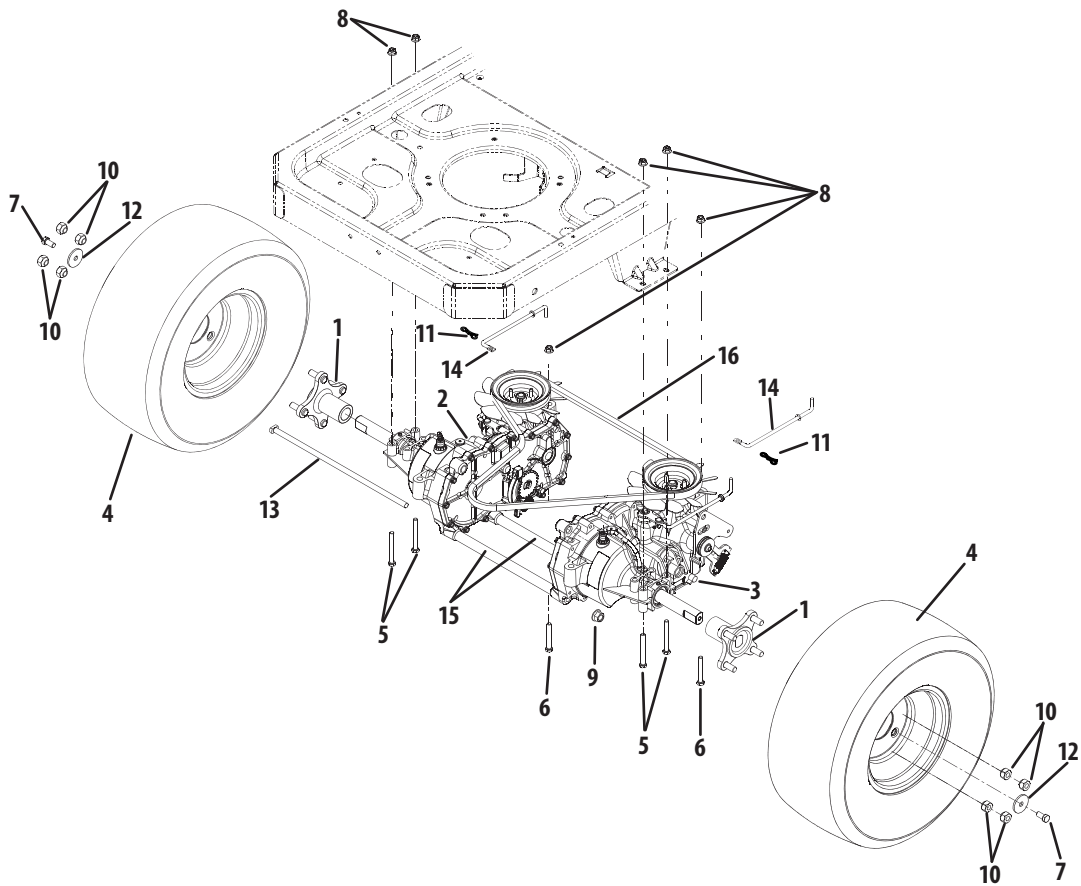

Ref.	Part Number	Description
1	918-04317	Wheel Hub, 7/16-14 x 1.6
2	918-04431B	Transmission Assembly, LH
3	918-04432B	Transmission Assembly, RH
4	634-04293	Wheel Assembly, 18 x 8.5-8 (42" Deck)
—	634-04128	Wheel Assembly, 18 x 9.5-8 (50" Deck)
5	710-0176	Hex Cap Screw, 5/16-18 x 2.75
6	710-0395	Hex Cap Screw, 5/16-18 x 2.25
7	710-3119	Hex Cap Screw, 3/8-16 x .75
8	712-04063	Hex Flange Nut, 5/16-18

Ref.	Part Number	Description
9	712-0459	Hex Flange Nut, 7/16-20
10	712-3050	Lug Nut, 7/16-14
11	714-04040	Bow-Tie Cotter Pin
12	936-0227	Flat Washer, .39 x 1.5 .134
13	738-04192B	Rod, .405 x 14.0
14	747-04217C	Bypass Rod
15	750-04561	Tube, .45 x .69 x 10.2
16	954-04043B	V-Belt


Rear Drive & Wheels, 54" Decks

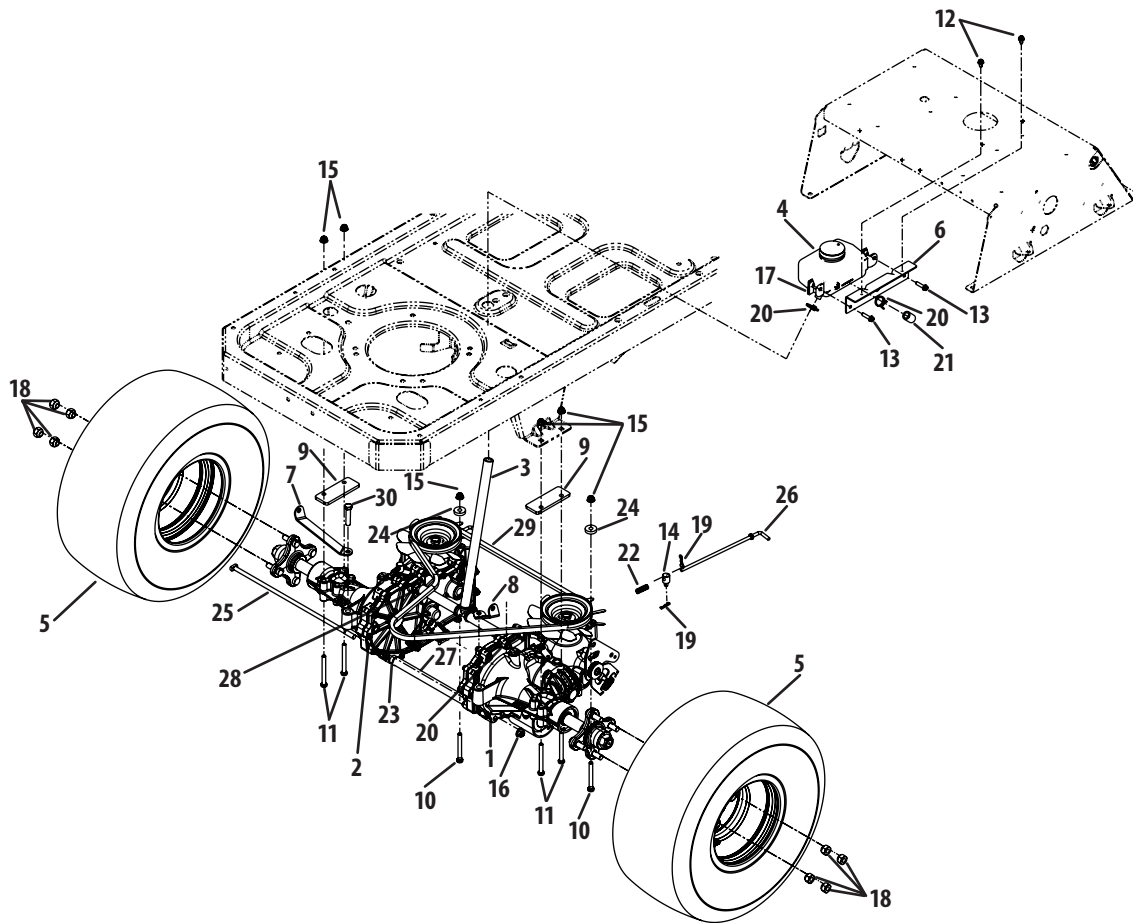

Ref.	Part Number	Description
1	918-04464A	Transmission Assembly (RH)
2	918-04465A	Transmission Assembly (LH)
3	618-04466	Breather
4	931-04223	Expansion Tank Assembly
5	N/A	Wheel Assembly, 20 x 10 x 8
—	934-0246A	Rim Assembly, 8.0 x 6.19
—	934-0255	Tubeless Air Valve
—	734-1873	Tire, 20 x 10 x 8
6	703-05938A	Expansion Tank Bracket
7	703-05940	Transmission Brace (LH)
8	703-05941	Transmission Brace (RH)
9	703-05989	Transmission Spacer
10	710-0176	Hex Screw, $\frac{5}{16}$ -18 x 2.75
11	710-0189	Hex Screw, $\frac{5}{16}$ -18 x 3.00
12	710-0599	Screw, $\frac{1}{4}$ -20 x .500
13	710-0788	Screw, $\frac{1}{4}$ -20 x 1.000
14	711-1530	Ferrule, .325 x .312

Ref.	Part Number	Description
15	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
16	712-04065	Flange Lock Nut, $\frac{3}{8}$ -16
17	712-04092	Speed Nut, $\frac{1}{4}$ -20
18	712-3050	Lug Nut, $\frac{7}{16}$ -14
19	714-04040	Bow-Tie Cotter Pin
20	02001111	Hose Clamp, $\frac{1}{2}$
21	731-05785	Cap, $\frac{1}{2}$ x .870
22	732-0335	Compression Spring, .405 x 1.17
23	732-04434	Extension Spring, .545 x 4.555
24	736-04267	Flat Washer, .35 x 1.0 x .2
25	738-04251	Rod, .337 x 14.75
26	747-04636	Bypass Rod
27	750-04759A	Tube, $\frac{7}{16}$ x $\frac{3}{4}$ x 11.3
28	751-10511	Straight Fitting, $\frac{5}{16}$ x $\frac{1}{2}$
29	954-04043B	V-Type Belt
30	710-0395	Hex Screw, $\frac{5}{16}$ -18 x 2.25


42" Mower Deck

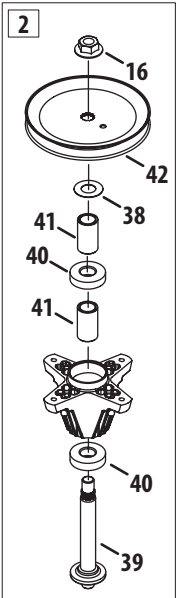

Ref.	Part Number	Description
1.	903-04860	Deck Housing
2.	918-04822A	Spindle Assembly
3.	631-04288	Discharge Chute Assembly
4.	683-0254B	Deck Lift Bracket
5.	703-08336A	Pivot Idler Bracket
6.	710-04484	Hex Washer Head Screw, 5/16-18 x .750
7.	710-0528	Hex Cap Screw, 5/16-18 x 1.25
8.	710-0599	Hex Washer Head Screw, 1/4-20 x .5
9.	710-3005	Hex Cap Screw, 3/8-16 x 1.25
10.	710-3144	Hex Cap Screw, 3/8-16 x 2.00
11.	710-3178	Carriage Screw, 3/8-16 x .75
12.	710-3180	Hex Cap Screw, 5/16-18 x 1.75
13.	712-0229	Push Nut, 3/8
14.	712-04063	Flange Lock Nut, 5/16-18
15.	712-04065	Flange Lock Nut, 3/8-16
16.	712-0417A	Hex Flange Nut, 5/8-18
17.	912-0641	Hex Nut, M16-1.5
18.	912-3010	Hex Nut, 5/8-18
19.	914-0470	Cotter Pin, 1/8 x 1.25
20.	917-04074	Deck Adjustment Gear
21.	732-0459C	Extension Spring, .94 Dia. x 6.74
22.	732-04652	Compression Spring, .535 x 1.751

Ref.	Part Number	Description
23.	734-04155	Deck Ball Wheel, 5.0
24.	936-0119	Lock Washer, 5/16
25.	736-0187	Flat Washer, .64 x 1.24 x .06
26.	736-0225	Internal Tooth Lock Washer, 5/8
27.	736-0262	Flat Washer, .385 x .870 x .092
28.	936-0344	Flat Washer, .385 x 1.00 x .030
29.	738-04146	Bolt, M16 x 1.5
30.	738-04162A	Shoulder Spacer, .884 x .190
31.	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
32.	942-04308	Blade, 2 in 1, 21.23
33.	747-1116	Deck Hanger Rod
34.	954-04137A	V-Belt
35.	756-04129B	Idler Pulley, 4.25 Dia.
36.	783-06368A	Bracket, Belt Guard
37.	783-06424A	Belt Cover
38.	936-0351	Washer, .760 x 1.50 x .030
39.	738-1186A	Spindle Shaft
40.	941-0919A	Ball Bearing
41.	750-04936	Spacer, .792 x 1.060 x 1.860
42.	956-1227	Deck Pulley
43.	737-04003D	Deck Water Nozzle
44.	921-04041	Water Nozzle Adapter


50" Mower Deck

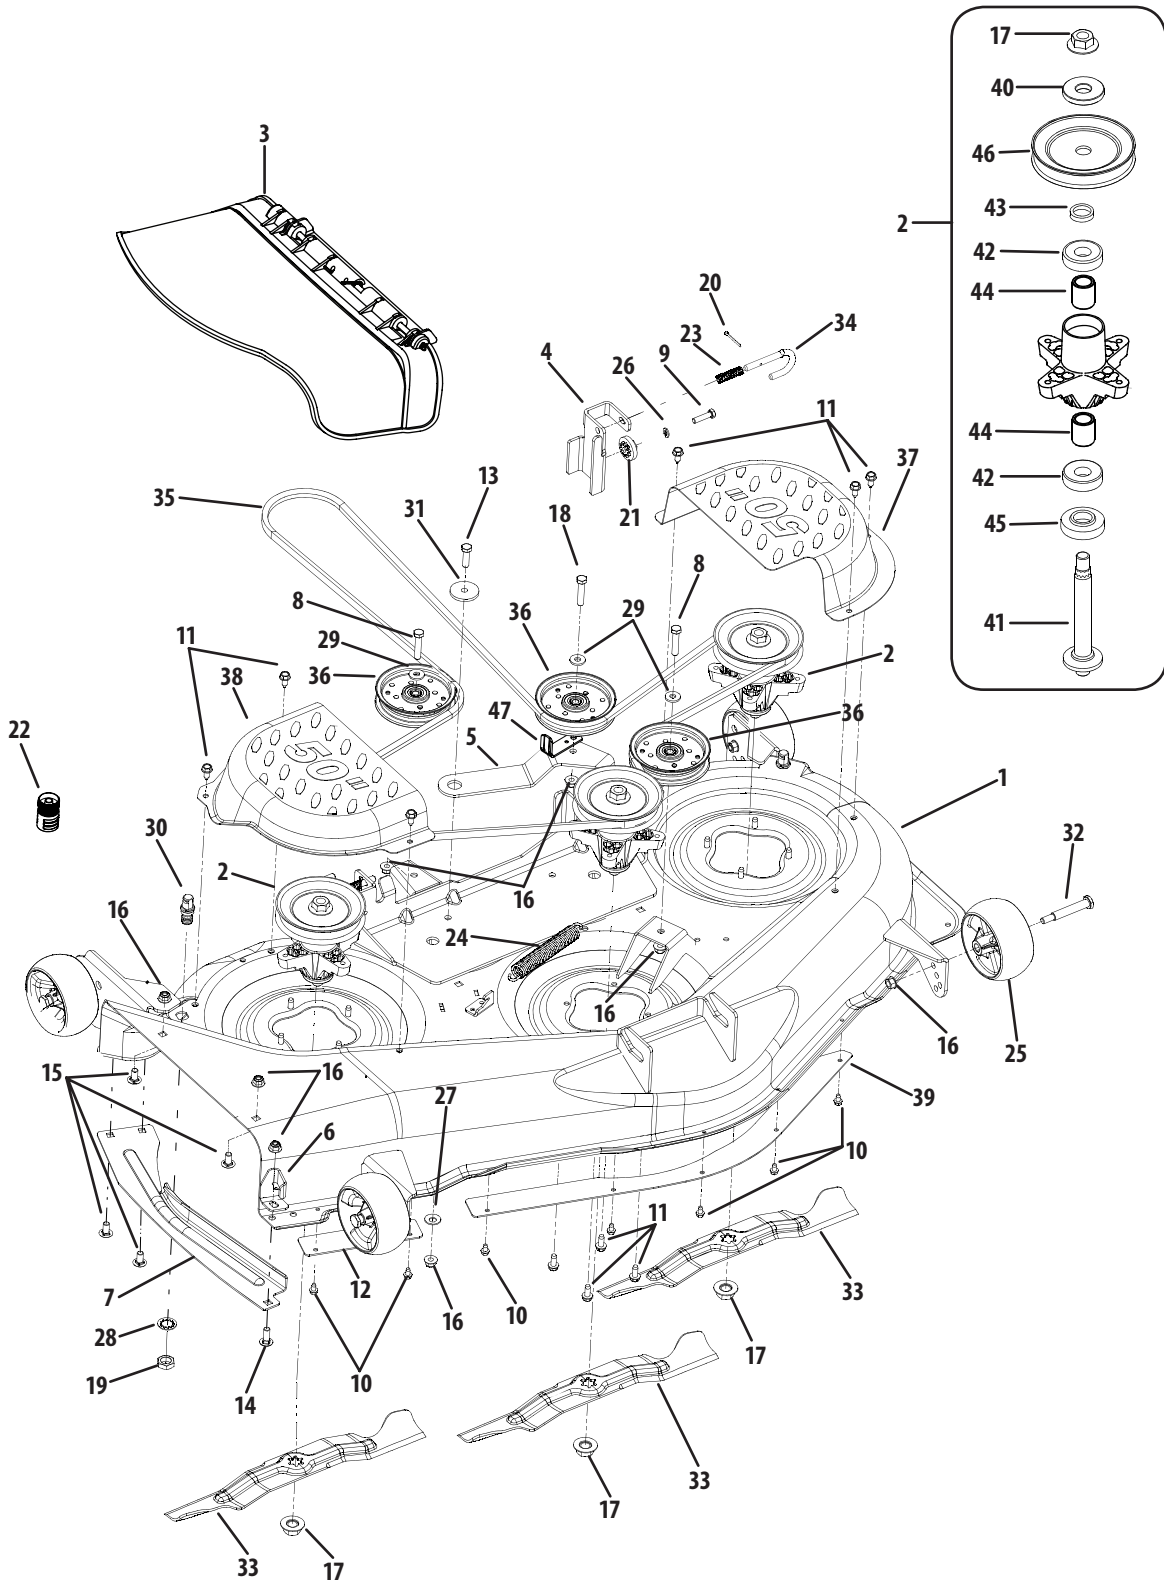

Ref.	Part Number	Description
1	903-04328A	Deck Housing
2	918-04125B	Spindle Assembly
3	631-04070A	Discharge Chute Assembly (U.S.)
—	631-04092B	Discharge Chute Assembly (Aus.)
4	683-0254B	Deck Hanger Bracket
5	703-05825C	Idler Arm
6	703-3279	Stop Bracket
7	703-3511A	Finger Guard
8	710-0347	Hex Cap Screw, $\frac{3}{8}$ -16 x 1.75
9	710-0528	Hex Cap Screw, $\frac{5}{16}$ -18 x 1.25
10	710-0599	Hex Washer Head Screw, $\frac{1}{4}$ -20 x .5
11	710-04484	Hex Washer Head Screw, $\frac{5}{16}$ -18 x .750
12	783-04415	RH Skirt
13	710-3005	Hex Cap Screw, $\frac{3}{8}$ -16 x 1.25
14	710-04095	Hex Screw, $\frac{3}{8}$ -16 x 1.00
15	710-3178	Carriage Screw, $\frac{3}{8}$ -16 x .75
16	712-04065	Hex Insert Flange Lock Nut, $\frac{3}{8}$ -16
17	712-0417A	Hex Flange Nut, $\frac{5}{8}$ -18
18	710-3144	Hex Cap Screw, $\frac{3}{8}$ -16 x 2.00
19	912-0641	Hex Nut, M16-1.5
20	914-0470	Cotter Pin, $\frac{1}{8}$ x 1.25
21	917-04074	Deck Adjustment Gear
22	921-04041	Water Nozzle Adapter
23	732-04652	Compression Spring, .535 x 1.751
24	732-04609	Extension Spring, .94 x 6.74

Ref.	Part Number	Description
25	734-04155	Deck Ball Wheel, 5.0
26	936-0119	Lock Washer, $\frac{5}{16}$
27	736-0407	Bell Washer, .45 x 1.0 x .062
28	736-0225	Internal Tooth Lock Washer, $\frac{5}{8}$
29	736-3072	Flat Washer, .38 x .93 x .110
30	737-04003D	Deck Wash Nozzle
31	738-04162A	Shoulder Spacer, .884 x .190
32	938-3056	Shoulder Screw, .5 x 2.5 x $\frac{3}{8}$ -16
33	942-04053C	Blade, 2 in 1, 17.9
34	747-1116	Deck Hanger Rod
35	954-04044A	V-Belt Type A Sec x 134
36	756-04129B	Idler Pulley, 4.25 Dia
37	783-04399	Belt Cover, LH
38	783-04400	Belt Cover, RH
39	783-04414A	Center Skirt (U.S.)
—	783-06125	Center Skirt (Aus.)
40	736-0315	Flat Washer, .76 x 1.50 x .12
41	738-1010A	Spindle Shaft, 5.75
42	941-0919	Ball Bearing
43	748-0160A	Spacer, .79 x 1.25 x .175
44	750-1000	Spacer, .80 x 1.10 x 1.32
45	750-1349A	Spacer, .79 x 1.82 x .55
46	756-04216	V-Type Pulley, 5.39
47	783-06368A	Bracket, Belt Guard


54" Mower Deck

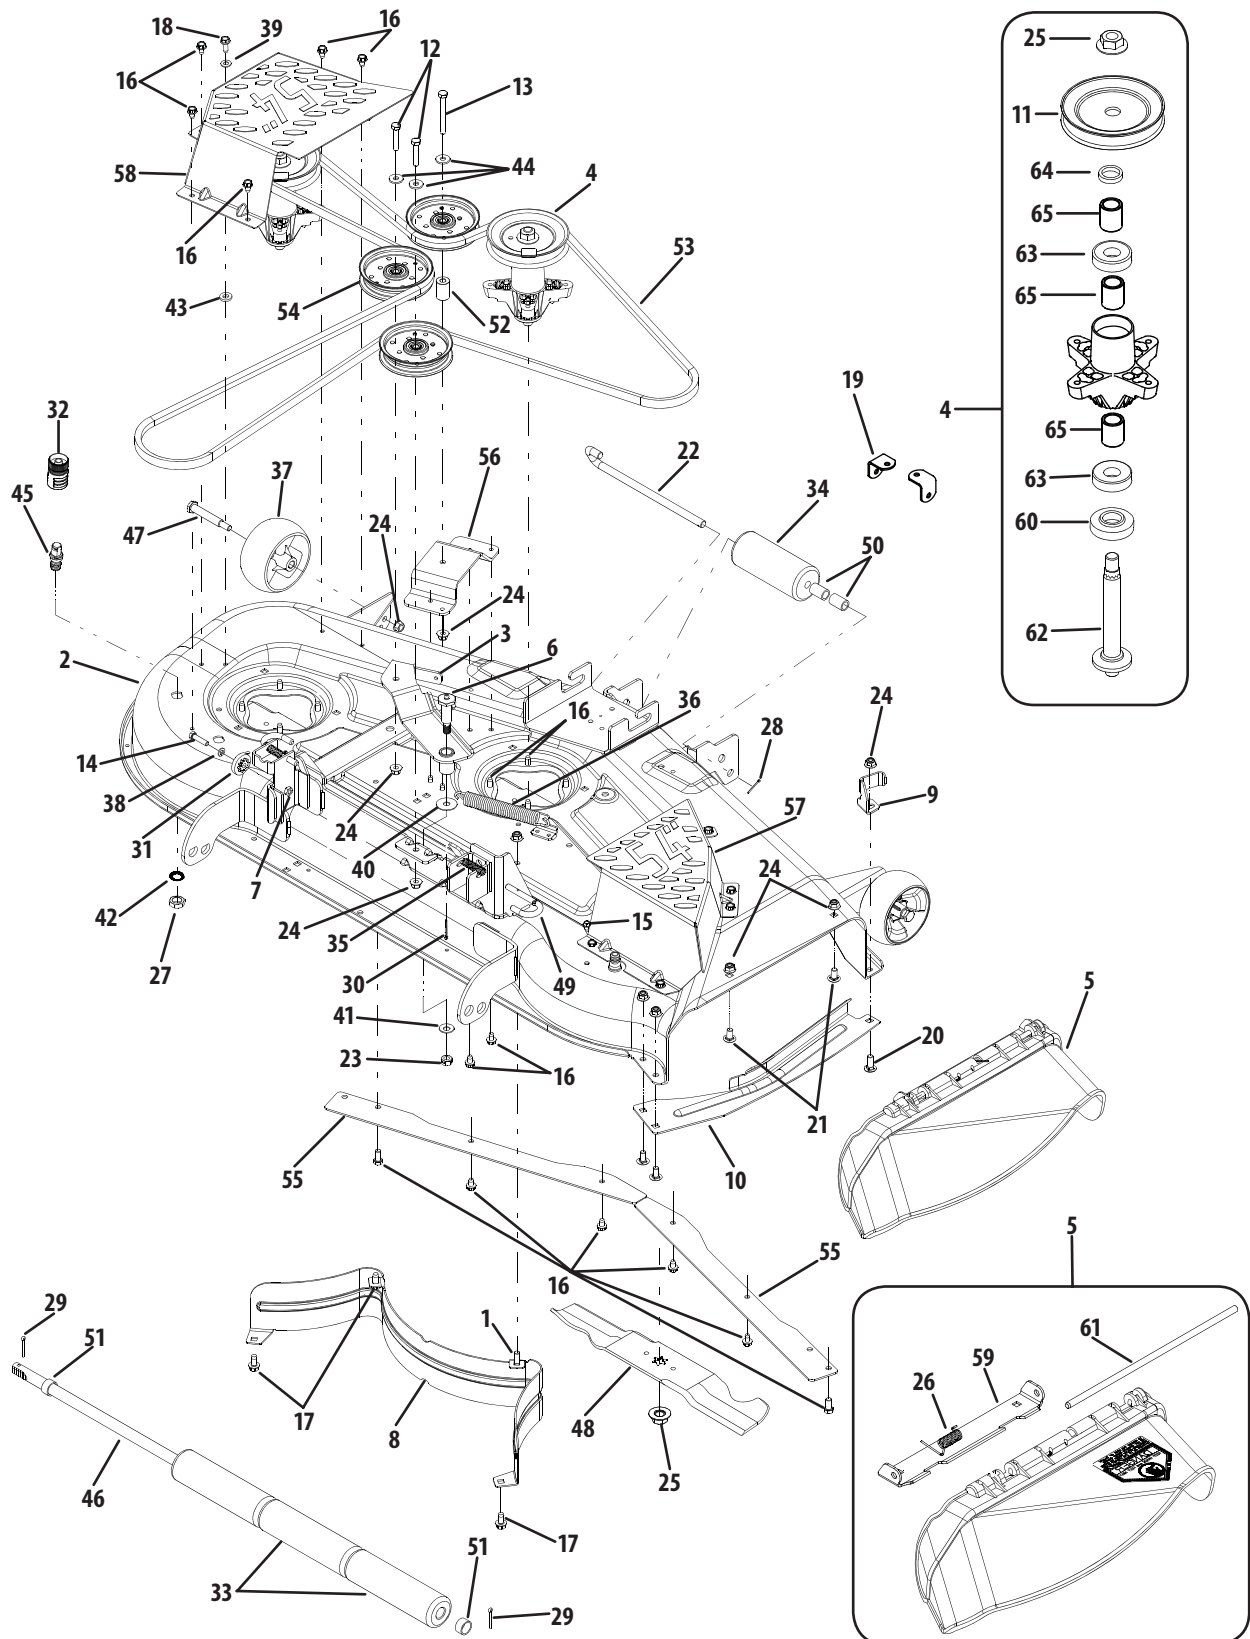

Ref.	Part Number	Description
1.	710-3168	Carriage Screw, 3/8-16 x 1.00
2.	903-04603	Deck Housing
3.	603-04386A	Idler Assembly
4.	918-04608A	Spindle Assembly
5.	631-04070A	Discharge Chute Assembly
6.	638-04012A	Shoulder Bolt Assembly
7.	683-0254B	Deck Hanger Bracket
8.	703-2093B	Rear Inner Baffle
9.	703-3279	Stop Bracket
10.	703-3511A	Finger Guard
11.	756-04216	V-Type Pulley, 5.39
12.	710-0347	Hex Cap Screw, 3/8-16 x 1.75
13.	710-0521	Hex Cap Screw, 3/8-16 x 3.0
14.	710-0528	Hex Cap Screw, 5/16-18 x 1.25
15.	710-0599	Hex Washer Screw, 1/4-20 x .5
16.	710-04484	Hex Washer Screw, 5/16-18 x .750
17.	710-0623	Hex Washer Screw, 3/8-16 x .75
18.	710-0650	Hex Washer Screw, 5/16-18 x .875
19.	703-05970	Frame Support Bracket
20.	710-04095	Hex Screw, 3/8-16 x 1.00
21.	710-3178	Carriage Screw, 3/8-16 x .75
22.	711-1737	Roller Pin, .5 x 10.06
23.	712-0290	Hex Lock Nut, 7/16-14
24.	712-04065	Hex Insert Flange Lock Nut, 3/8-16
25.	712-0417A	Hex Flange Nut, 5/8-18
26.	732-04372	Torsion Spring, .44 ID x 2.00
27.	912-0641	Hex Nut, M16-1.5
28.	914-0111	Cotter Pin, 3/32 x 1.0
29.	714-0162	Cotter Pin, 5/32 x 1.25
30.	914-0470	Cotter Pin, 1/8 x 1.25
31.	917-04074	Deck Adjustment Gear
32.	921-04041	Water Nozzle Adapter
33.	731-05825	Deck Roller, 7.895

Ref.	Part Number	Description
34.	731-05679	Front Roller
35.	732-04652	Compression Spring, .535 x 1.751
36.	732-04609	Extension Spring, .94 x .04609
37.	734-04155	Deck Ball Wheel, 5.0
38.	936-0119	Lock Washer, 5/16
39.	936-0275	Flat Washer, .344 x .688 x .065
40.	936-0406	Flat Washer, .442 x 1.39 x .06
41.	736-0407	Bell Washer, .45 x 1.0 x .062
42.	936-0760	Lock Washer
43.	736-3010	Flat Washer, .407 x .812 x .135
44.	736-3072	Flat Washer, .38 x .93 x .110
45.	737-04003D	Deck Wash Nozzle
46.	738-04260	Shaft, .75 x 26.893
47.	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
48.	942-0677B	Blade, 18.5
49.	747-1116	Deck Hanger Rod
50.	950-0151	Spacer, .55 x .75 x 1.125
51.	950-0212	Spacer, .82 x 1.0 x .53
52.	750-04597	Spacer, .38 x .9 x 1.313
53.	954-04138A	V-Belt
54.	756-04129B	Idler Pulley, 4.25 Dia
55.	783-04690B	Deck Skirt
56.	783-04726	Stationary Idler Bracket
57.	783-1470A	Belt Cover, RH
58.	783-1471	Belt Cover, LH
59.	783-05030	Chute Mounting Bracket
60.	750-1349A	Spacer, .79 x 1.82 x .55
61.	711-04565	Hinge Pin
62.	738-1197	Spindle Shaft, 6.95
63.	941-0919	Ball Bearing
64.	748-0160A	Spacer, .79 x 1.25 x .175
65.	750-1000	Spacer, .80 x 1.10 x 1.32

Electrical

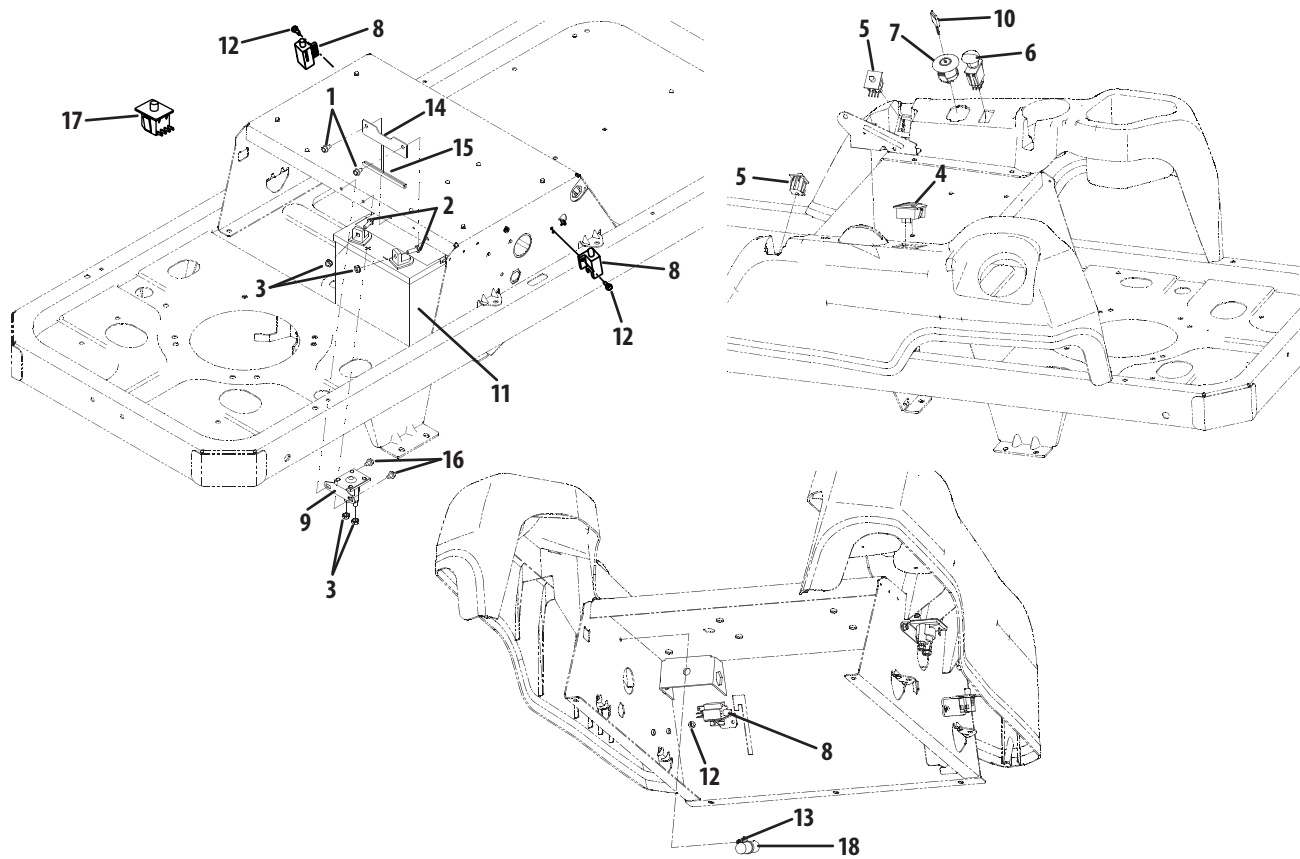

Ref.	Part Number	Description
1	710-0599	Hex Screw, ¼-20 x .5
2	710-3015	Hex Screw, ¼-20 x .75
3	712-0271	Hex Nut, ¼-20
4	925-04022B	Hour Meter
5	925-04165	Double Pole — Neutral Switch
6	925-04174	PTO Switch
	925-04174	PTO Switch, Export
7	925-04228	Ignition Switch
8	725-04363	Interlock Switch
9	725-04439	Solenoid

Ref.	Part Number	Description
10	925-1745A	Key
11	925-1707D	Battery, 235 CCA
12	738-04237A	Shoulder Screw, #10-32 x .500
13	726-0470	Cable Tie
14	703-05894	Battery Hold-down
15	731-0511	Trim Strip
16	710-0653	Hex Screw, ¼-20 x .375
17	925-04040	Seat Switch
18	925-04847C	Wire Harness