



Handle & Frame

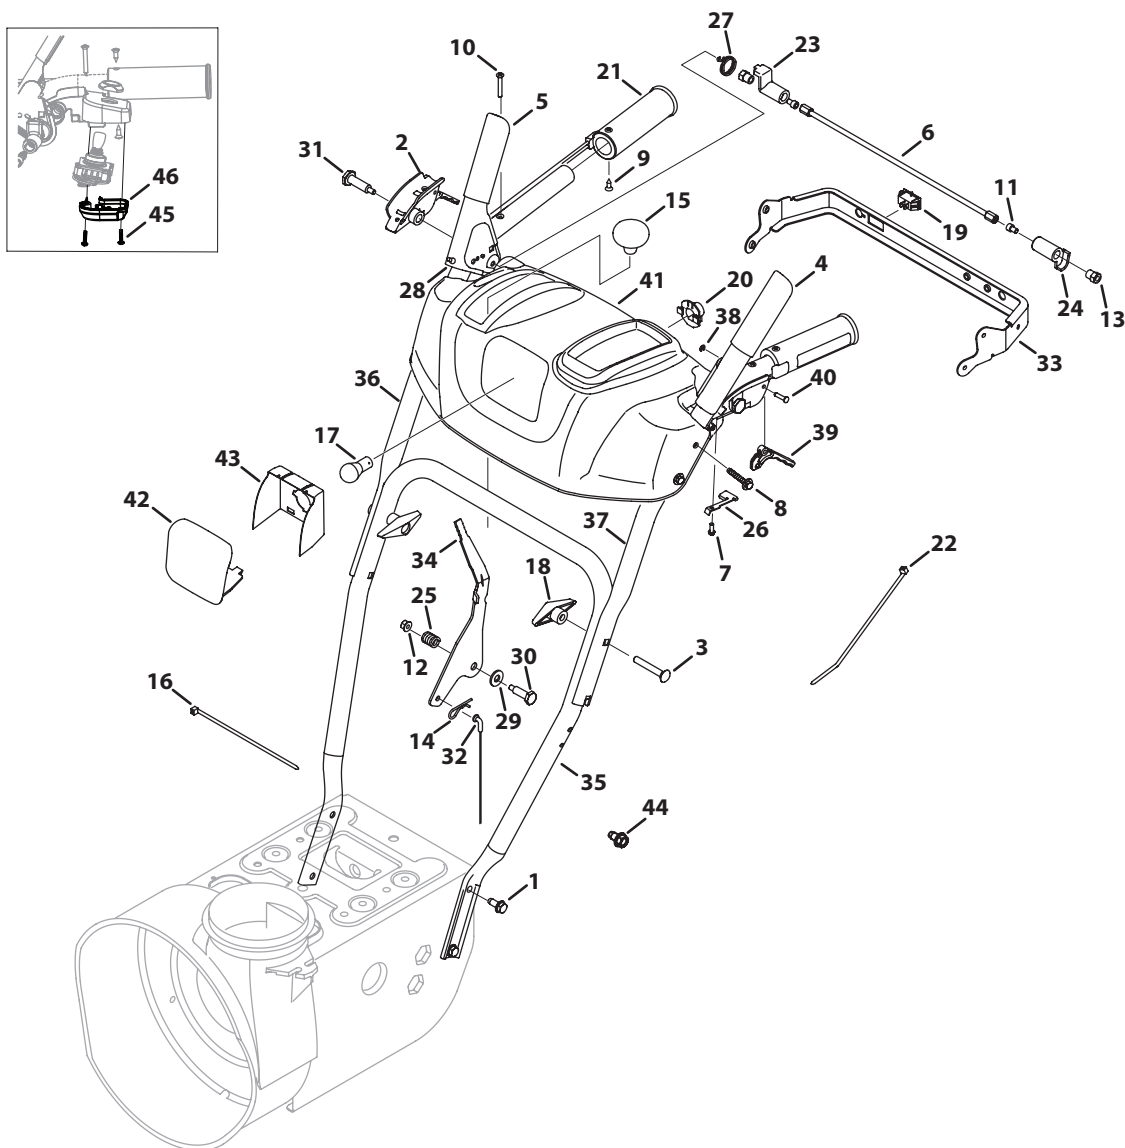

Ref.	Part Number	Description
1	710-04484	Screw, Taptite, 5/16-18 x .750
2	931-04653	Clutch Lock, RH
—	631-04133A	Clutch Lock, LH
3	710-0572	Screw, Carriage, 5/16-18 x 2.50
4	684-04111B	Auger Engage, Red, LH
—	684-04105B	Auger Engage, Black, LH
5	684-04112C	Drive Engage, Red, RH
—	684-04106C	Drive Engage, Black, RH
6	684-04250	Pivot Rod
7	710-04326	Screw, Plastite, 8-16 x .50
8	710-04586	Screw, Taptite, 1/4-20 x 1.625
9	710-0837	Screw, 10-16 x 0.625
10	710-1233	Screw, 10-24 x 1.375
11	710-3069	Screw, 1/4-20 x .50
12	712-04064	Nut, Flangelock, 1/4-20
13	712-04081A	Nut, Hex, 1/4-20
14	914-0145	Click Pin, .092 x 1.64
15	720-04039	Shift Knob
16	725-0157	Cable Tie, 7"
17	925-1629	Lamp
18	920-0284	Wing Knob, 5/16-18
19	725-04393	Heated Grip Switch
20	925-1649	Lamp Socket
21	725-05149	Heated Grip
22	926-0154	Cable Tie, Push Mount
23	731-04894D	Plate, Lock


Ref.	Part Number	Description
24	731-04896B	Cam, Clutch Lock
25	732-0193	Compression Spring, .39 x .60 x .88
26	732-04219C	Clutch Lock Spring
27	732-04238	Torsion Spring, 0.8156 x .3038
28	935-0199A	Rubber Bumper
29	936-0267	Washer, Flat, .385 x .87
30	738-04125	Screw, Shield, .374 x 1.05
31	738-04348	Screw, Shoulder, .437 x 1.345 x 1/4-20
32	946-04396A	Speed Selector Cable
33	790-00248C	Panel Bracket
34	790-00311B	Shift Lever
35	749-04138B	Lower Handle
36	749-04190A	Upper RH Handle
37	749-04191A	Upper LH Handle
38	716-04036	E-Ring
39	731-06113	Steering Trigger Control
40	738-04126	Steering Trigger Pin, 3/16
41	931-05001	Handle Panel
42	731-05319	Lens Panel
43	777X41805	Lens Label
44	710-0599	Screw, TT, 1/4-20 x .500 (For ground wire)
45	710-04329	Screw, .159 OD x .610
46	731-08876	Housing Cover
—	925-06091	Heated Grips Harness (Not Shown)

Drive System

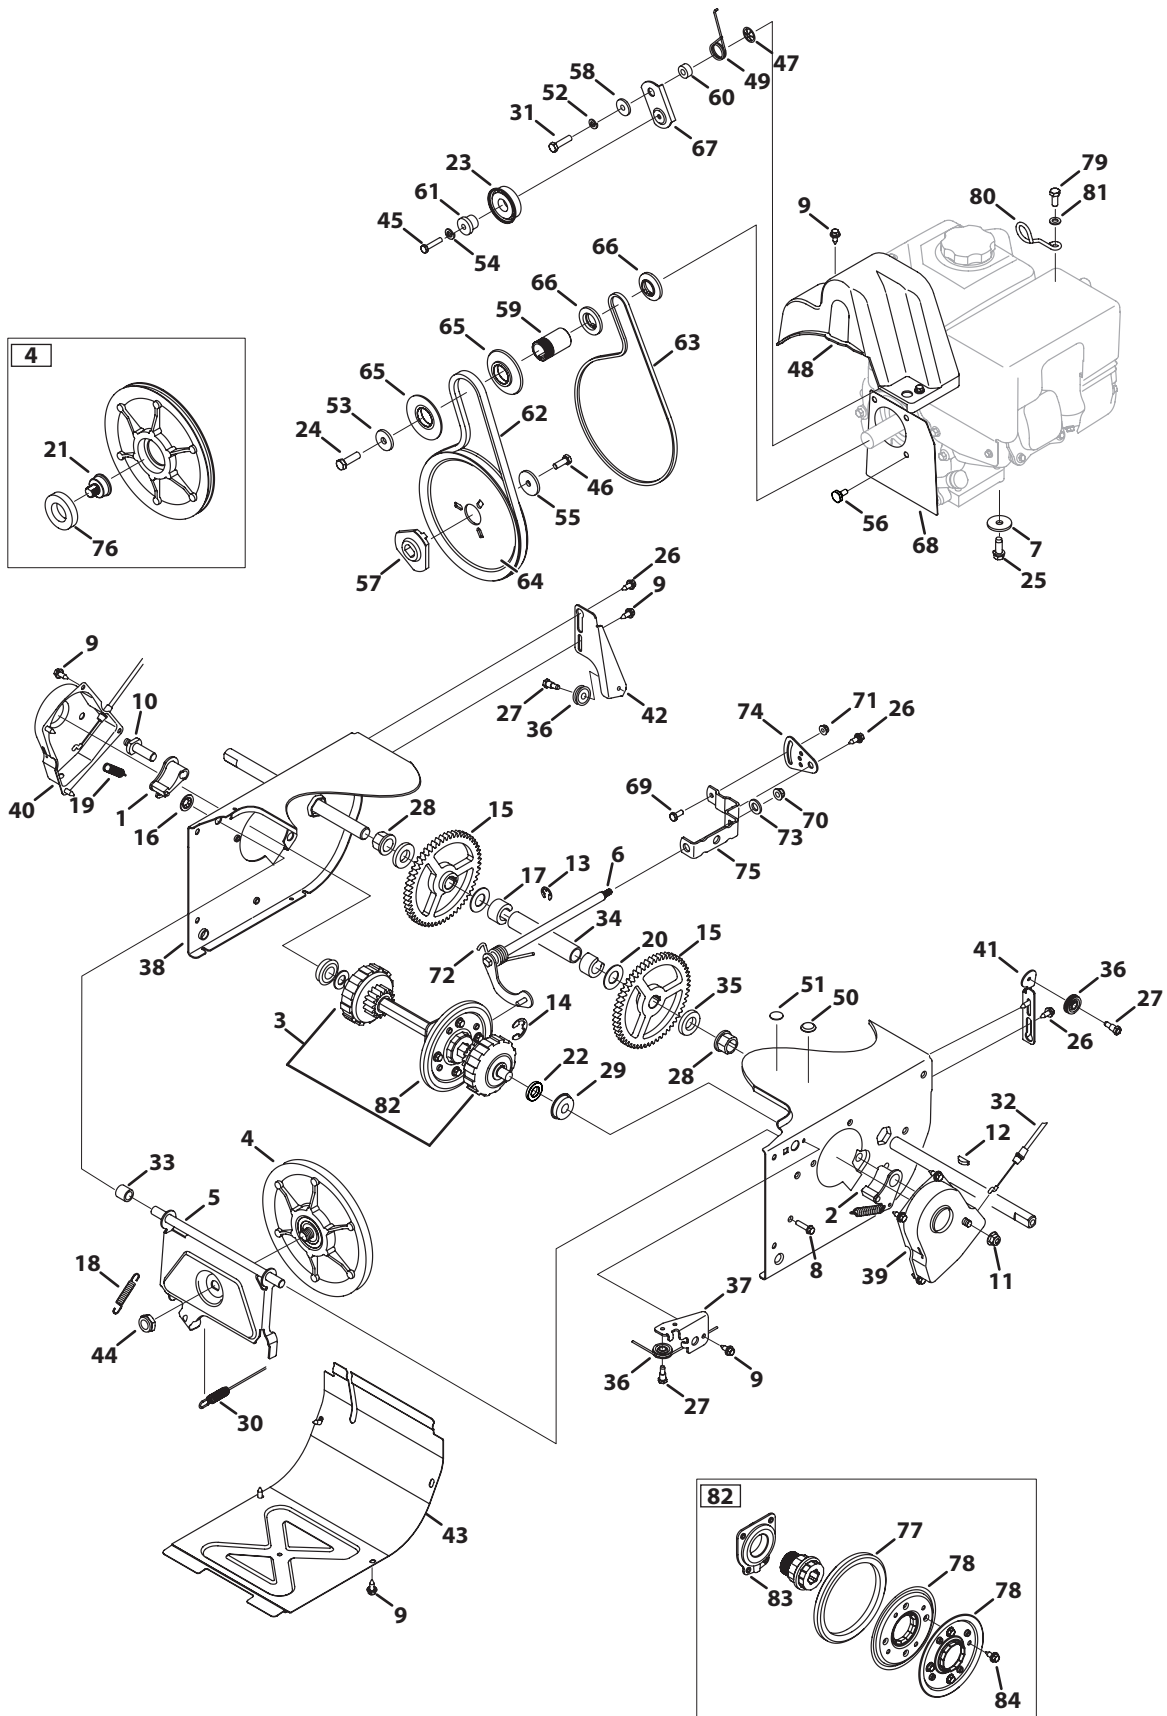

Ref.	Part Number	Description	Ref.	Part Number	Description
1	618-06987	Dogg Assembly, RH	43	790-00316	Frame Cover
2	618-06988	Dogg Assembly, LH	44	712-0417A	Nut, Flange, 5/8-18
3	918-06072	Drive Shaft Assembly	45	710-0809	Taptite Screw, 1/4-20 x 1.250
4	656-04055	Friction Wheel Disc Assembly	46	710-1245B	Hex Head Screw, 5/16-24 x .875
5	684-04154B	Friction Wheel Support	47	926-04012	Nut, Push-On, .25 DIA
6	684-04156A	Rod Shift Assembly	48	731-05353	Belt Cover
7	736-0320	Washer, Flat, .38 x 1.38	49	732-04308A	Spring, Torsion, .850 x .333
8	710-0788	Screw, 1/4-20 x 1.000	50	735-04099	Plug, 3/8 ID
9	710-1652	Screw, 1/4-20 x .625	51	735-04100	Plug, 1/2 ID
10	711-1268B	Actuator Shaft	52	936-0119	Washer, Lock, 5/16
11	712-04065	Nut, Flangelock, 3/8-16	53	736-3082A	Washer, Flat, .45 x 1.5
12	914-0126	Hi-Pro Key, 3/16 x 3/4 DIA	54	936-0329	Washer, Lock, 1/4
13	916-0104	E-Ring	55	736-0505	Washer, Flat, .34 x 1.50
14	716-0136	Retainer Ring	56	738-04439	Screw, Shoulder
15	917-04210	Gear, 56T	57	748-04053A	Pulley Adapter, .75 DIA
16	726-0221	Nut, Speed, .500	58	748-04112B	Spacer, Shoulder, .3175 x .500
17	731-05297	Spacer, .76 x .75	59	750-04303	Spacer, .875 x 1.185
18	932-0264	Extension Spring, .380 x 2.500	60	750-04477A	Spacer, .340 x .750
19	732-04345	Extension Spring, .500 x 1.71	61	750-04571	Spacer, Shoulder, .260 x .785
20	736-0188	Washer, Flat, .76 x 1.49	62	954-04050	Belt, .500 x 35.06
21	738-04164A	Friction Pin, Disc Bearing	63	954-0356	V Belt, 3/8 x 35"
22	750-06087	Spacer, .68 ID x 1.25 OD x .20	64	756-04109	Auger Pulley, 8.1 x .5
23	684-04169	Pulley Assembly	65	756-04113	Pulley, Half, 4L-V x 2.600
24	710-0191	Hex Head Screw, 3/8-24 x 1.25	66	756-04114	Pulley, Half, 3/8-V x 2.2
25	710-0654A	Taptite Sems Screw, 3/8-16 x 1.000	67	790-00208D	Drive Idler Bracket
26	738-04184A	Screw, Shoulder, .368 x .113 x 1/4-20	68	790-00289A	Cover Plate
27	738-0924A	C Screw, Shoulder, .340 x .335 x 1/4-28	69	710-0751	Hex Head Screw, 1/4-20 x .620
28	941-0245	Hex Flange Bearing, .75 ID	70	712-04063	Nut, Flangelock, 5/16-18
29	941-0563	Ball Bearing, 17 x 40 x 12	71	712-04064	Nut, Flangelock, 1/4-20
30	946-05067	Drive Clutch Cable	72	732-04311A	Spring, Torsion, .750 x .968
31	710-0672	Hex Head Screw, 5/16-24 x 1.25	73	936-3015	Washer, Flat, .469 x .875 x .105
32	946-0956C	Steering Cable	74	790-00217A	Speed Selector Pivot Bracket
33	748-0190	Spacer, .508 x .75	75	790-00218A	Speed Selector Shift Bracket
34	750-04474	Axle Support Tube	76	741-04098	Ball Bearing, 30 x 55 x 13
35	750-0767	Spacer, Axle	77	935-04054	Friction Wheel, 5.5 OD
36	756-0625	Roller Cable	78	790-00174C	Friction Wheel Plate
37	790-00096A	Auger Cable Guide Bracket	79	710-04022	Hex Head Screw, 1.25 x 20
38	790-00183C	Wheel Drive Frame	80	732-0705	Cable Control Wire
39	790-00527	Shaft Retainer, LH	81	936-0264	Washer, Flat, .330 x .630
40	790-00528	Shaft Retainer, RH	82	684-04153C	Friction Wheel Assembly
41	790-00206A	Auger Clutch Cable Guide Bracket	83	618-0063A	Bearing Assembly, Friction Wheel
42	790-00207C	Drive Clutch Cable Guide Bracket	84	710-04484	Screw, 5/16-18 x .750

Traction Drive System

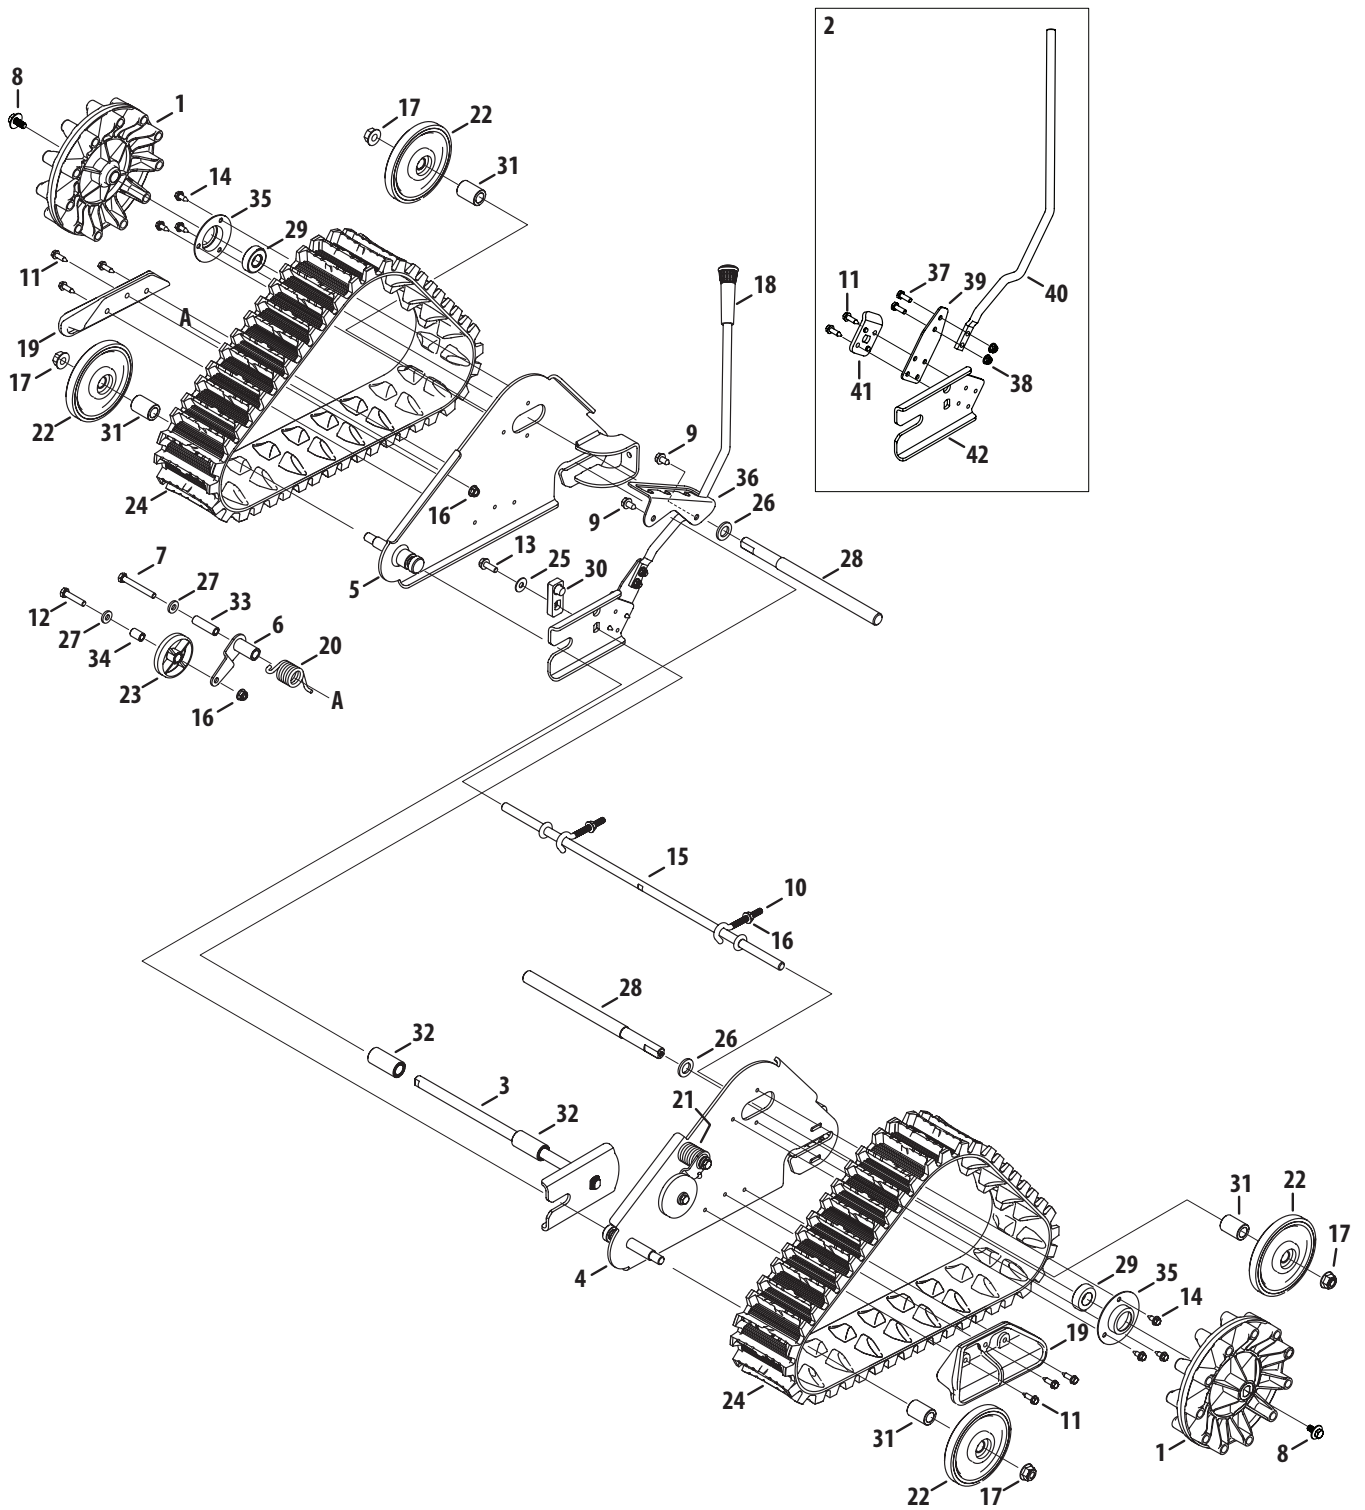


Traction Drive System

Ref.	Part Number	Description
1	631-05092	Track Drive Wheel
2	N/A	Height Adjustment Lever Ass'ly
3	684-05031	Pivot Bracket Assembly
4	684-05033	Track Mount Plate Assembly, LH
5	684-05034	Track Mount Plate Assembly, RH
6	684-05052	Pivot Tension Bracket Assembly
7	710-0378	Hex Screw, 5/16-18, 2.50, Gr5
8	710-05339	Screw, 5/16-24 x .750
9	710-0604A	Hex Washer Screw, 5/16-18 x .875
10	710-06112	Eye Bolt, 5/8 x 2.375, 5/16-18
11	710-06115	Hex Washer Screw, 1/4-20 x .625
12	710-0805	Hex Cap Screw, 5/16-18 x 1.50
13	710-1238	Hex Washer Screw, 5/16-18 x .875
14	710-1652	Hex Washer Screw, 1/4-20 x .625
15	911-06119	Rear Wheel Axle
16	712-04063	Nut, Flange lock, 5/16-18
17	712-04150	Flange Lock Nut, 1/2-13
18	720-0223	Grip, .5 ID x 3.45
19	731-09608	Track Skid
20	732-05145	Torsion Spring
21	732-05148	Torsion Spring

Ref.	Part Number	Description
22	734-05046	Wheel, 5.00 OD
23	734-05058	Track Tension Wheel
24	735-05029	Track, 61mm x 22 Pitches
25	736-0242	Washer, Bell, .340 x .872
26	736-05041	Flat Washer, .672 x 1.125 x .125
27	936-3008	Flat Washer, .344 x .750 x .120
28	938-05044	Axle, .75 OD x 11.06 LG
29	941-0600	Ball Bearing, 17 x 40 x 12
30	748-05020	Height Adjustment Adapter
31	750-06090	Spacer, .63 x 1.00 x 1.42
32	750-06095	Spacer, .632 x 1.00 x 1.42
33	750-06169	Sleeve, .33 x .50 x 1.73
34	750-06170	Sleeve, .33 x .50 x .75
35	790-00554	Cup Bearing
36	790-00562	Height Adjustment Index Bracket
37	710-3015	Hex Cap Screw, 1/4-20 x .75
38	712-04064	Nut, Flangelock, 1/4-20
39	732-05079	Lever Mounting Bracket
40	747-06180	Height Adjustment Lever
41	787-01521	Lever Pivot Bracket
42	790-00552	Height Adjustment Pivot Bracket

Auger & Auger Housing

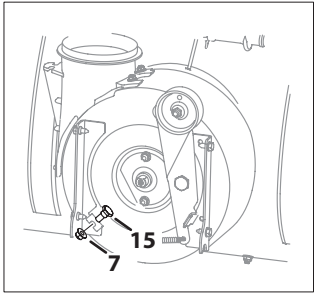


Auger & Auger Housing

Ref.	Part Number	Description
1	918-04172B	Auger Gearbox 26", includes 37-51
2	684-04057A	Impeller Assembly, 12" Dia.
3	710-0347	Hex Head Screw, 3/8-16 x 1.75
4	710-04484	Screw, 5/16-18 x .750
5	710-0451	Bolt, Carriage, 5/16-18 x .750
6	712-04063	Nut, Flange lock, 5/16-18
7	712-04065	Nut, Flange lock, 3/8-16
8	714-04040	Bow-Tie Cotter Pin
9	725-0157	Cable Tie, 7"
10	926-04012	Nut, Push-on, .25 Dia.
11	732-04460	Extension Spring, .38 x 4.59
12	736-0174	Washer, Wave, .625 x .885
13	736-0242	Washer, Bell, .340 x .872
14	684-04107	Spiral Assembly, LH
15	738-0143	Bolt, Shoulder, .496 x .336 x 3/8-16
16	938-0281	Screw, Shoulder, .625 x .17 x 3/8-16
17	738-04124A	Shear Pin, .25 x 1.50
18	941-0245	Bearing, Hex Flange, .75
19	941-0309	Bearing, Ball, .75 x 1.85
20	756-04224	Pulley, Idler, Flat, 2.75
21	790-00075	Bearing, 1.85 ID
22	790-00080A	Auger Idler Bracket
23	684-04108	Spiral Assembly, RH
24	684-04271	Auger Housing Assembly
25	731-04870	Spacer, 1.25 x .75 x 1.00
26	931-2643	Clean-Out Tool

Ref.	Part Number	Description
27	736-0188	Washer, Flat, .76 x 1.49
28	741-0493A	Bushing, Flange, .800 x .910
29	790-00087A	Bearing, 1" Hex
30	790-00121	Shave Plate, 2.25 x 25.66
31	790-00091	Deluxe Slide Shoe
32	946-04230A	Auger Drive Clutch Cable
33	710-0703	Screw, Carriage, 1/4-20 x .75
34	712-04064	Nut, Flange lock, 1/4-20
35	731-07525	Chute Adapter
36	731-2635	Clean-Out Tool Mount
37	741-0663	Bearing, Flange, .50 x .75 x .59
38	918-0123A	Reducer, RH
39	918-0124A	Reducer, LH
40	710-0642	Screw, 1/4-20 x 0.750
41	711-04284	Auger Axle, 26"
42	914-0161	Key, Hi-Pro, 3/16 x 5/8
43	715-04021	Dowel Pin, .25 x 1.25
44	917-04126	Worm Shaft, .75
45	917-04861	Gear Worm, 20T
46	718-04071	Collar Thrust, .756 x .600
47	721-0325	Plug, 1/4 x .437
48	721-0327	Oil Seal, .75 x 1.131 x .188
49	936-0351	Washer, Flat, .760 x 1.50
50	736-3084	Washer, Flat, .51 x 1.12
51	741-0662	Bearing, Flange, .75 x 1.00 x .59

4-Way Chute Control

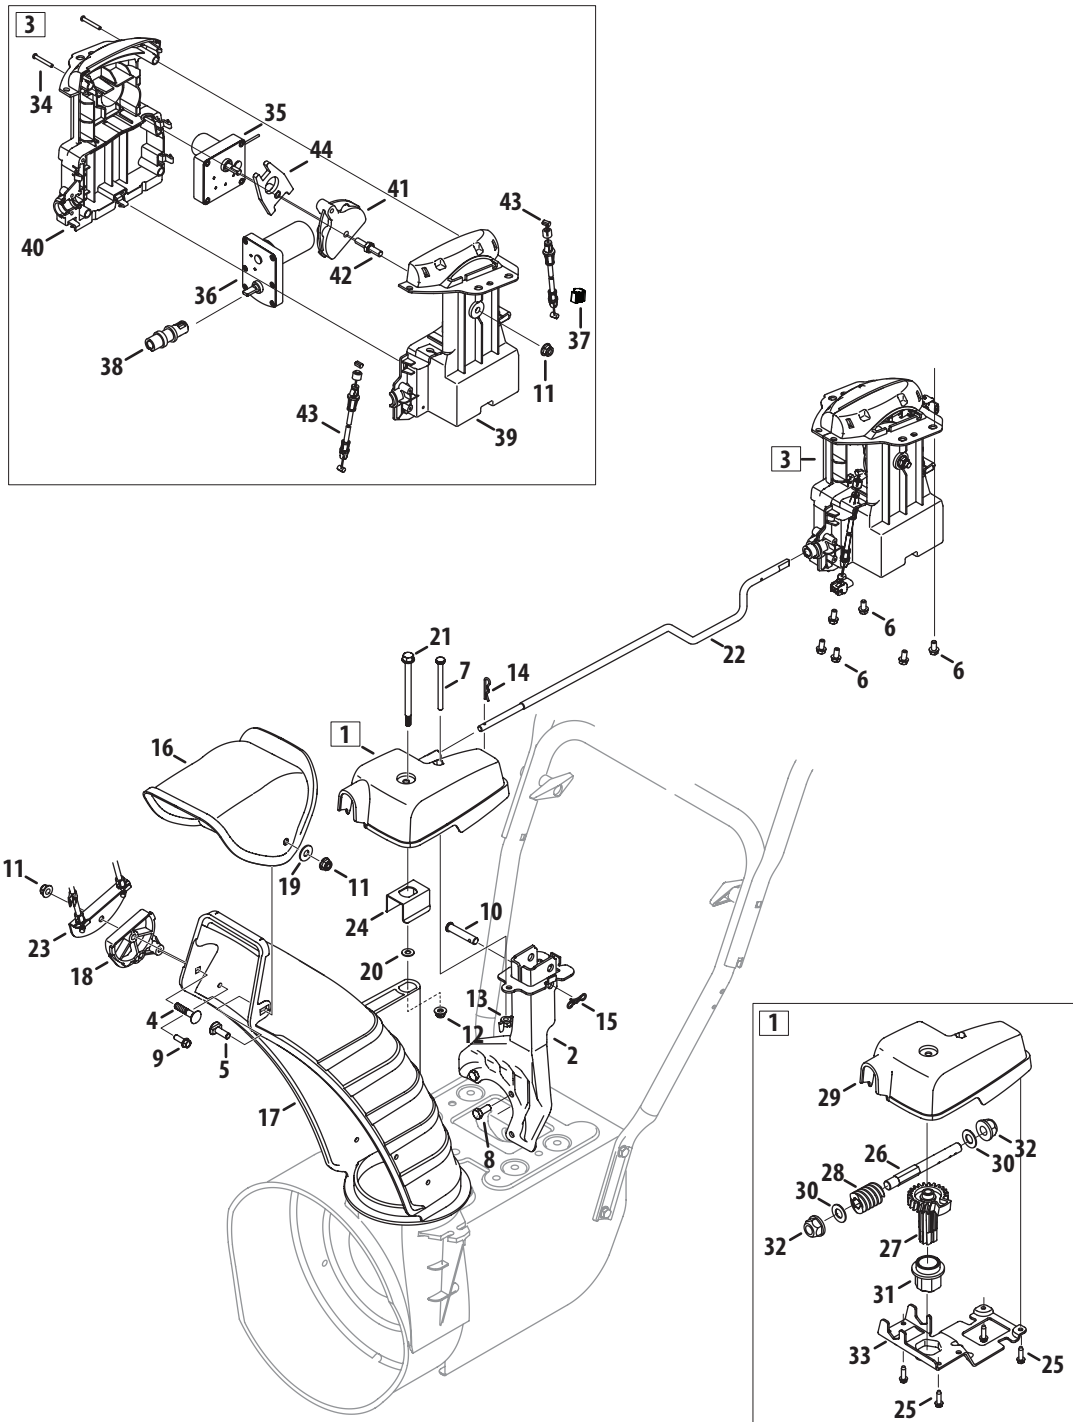

4-Way Chute Control

Ref.	Part Number	Description
1	918-04932A	Gearbox Assembly, Chute Rotation
2	684-04311A	Chute Support Bracket
3	984-05051	Chute Assembly, 4-Way Elec.
4	710-0262	Bolt, Carriage, 5/16-18 x 1.50
5	710-04071	Bolt, Carrier, 5/16-18 x 1.00
6	710-04187	Screw, HL, 1/4-15 x 0.50
7	710-04370	Hex Head Screw, 1/4-20 x 3.00
8	710-0627	Hex Head Screw, 5/16-24 x .750
9	710-0895	Screw, HL, 1/4-15 x 0.750
10	711-04469A	Clevis Pin, 3/8 x 1.87
11	712-04063	Nut, Flangelock, 5/16-18
12	712-04064	Nut, Flangelock, 1/4-20
13	712-3087	Wing Nut, 1/4-20
14	914-0101	Internal Cotter Pin
15	714-04040	Bow-Tie Cotter Pin
16	731-04427A	Chute, Upper
—	931-04425B	Chute, Upper (International)
17	731-06440A	Chute, Lower
18	731-06451	Cable Guide, Chute Tilt
19	936-0159	Washer, Flat, .349 x .879
20	736-04446	Washer, Flat, .25 x .630
21	738-04367	Screw, Shoulder, .312 x 3.5 x 1/4-20
22	747-05721	Chute Crank Rod

Ref.	Part Number	Description
23	784-5594	Cable Bracket
24	790-00503	Chute Bracket
25	710-04373A	Screw, 12-16 x .75
26	911-05752	Hex Shaft
27	917-04973A	Gear, 23 T
28	917-05019	Worm
29	731-07529A	Gear Cover
30	936-0272	Flat Washer, .510 x 1.00 x .060
31	741-04388A	Flange Bearing, 1.00 ID
32	741-04453A	Flange Bearing, .50 ID
33	790-00342B	Gear Bracket
34	710-04509	Screw, #10-16 x 1.25
35	724-04209	Chute Pitch Motor
36	724-04210	Chute Rotation Motor
37	731-07868	Cable Clip
38	731-08795	Electric Chute Coupler
39	731-08845	Housing, LH
40	731-08846	Housing, RH
41	731-1313C	Cable Guide
42	938-0849	Hex Screw, 5/16-18 x .75
43	946-04528B	4-Way Cable
	731-07868†	Cable Clip
44	748-04297	Chute Pitch Adapter

† Not Shown