



Models 607, 608 & 609

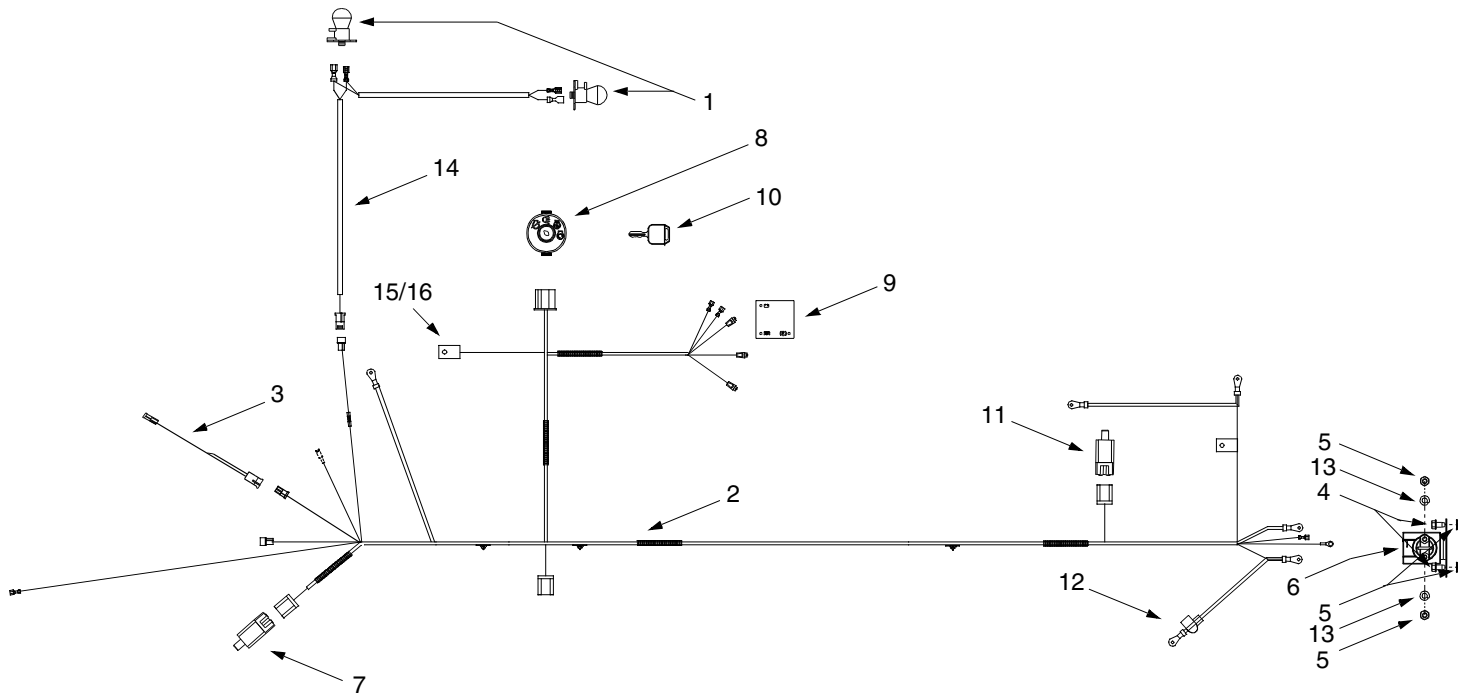


REF. NO.	PART NO.	DESCRIPTION
1	625-0051	Bulb/Socket Headlight Assembly
2	629-0944	Wiring Harness w/o Ref. 14
3	629-0126	Harness Adapter, #18 x 5
4	710-0599	Self-tapping Screw, 1/4-20 x .5
5	712-3006	Hex Nut, 1/4-20
6	725-1426	Solenoid, 12-volt, 100 Amp
7	725-1657A	Snap Mount Safety Interlock Switch (Brake)
8	725-1741	Ignition Switch
9	725-1742	Systems Indicator Monitor
10	725-1745	Ignition Key w/ plastic cover
	725-1744	Ignition Key w/o plastic cover
11	725-1747	Safety Plunger Switch (Seat)
12	725-3007A	Positive Terminal Cover (Boot)
13	736-0329	Lock Washer, 1/4
14	629-0309	Headlight Harness
15	729-0357	Fuse Holder
16	725-1381	20-amp Fuse

Electrical System

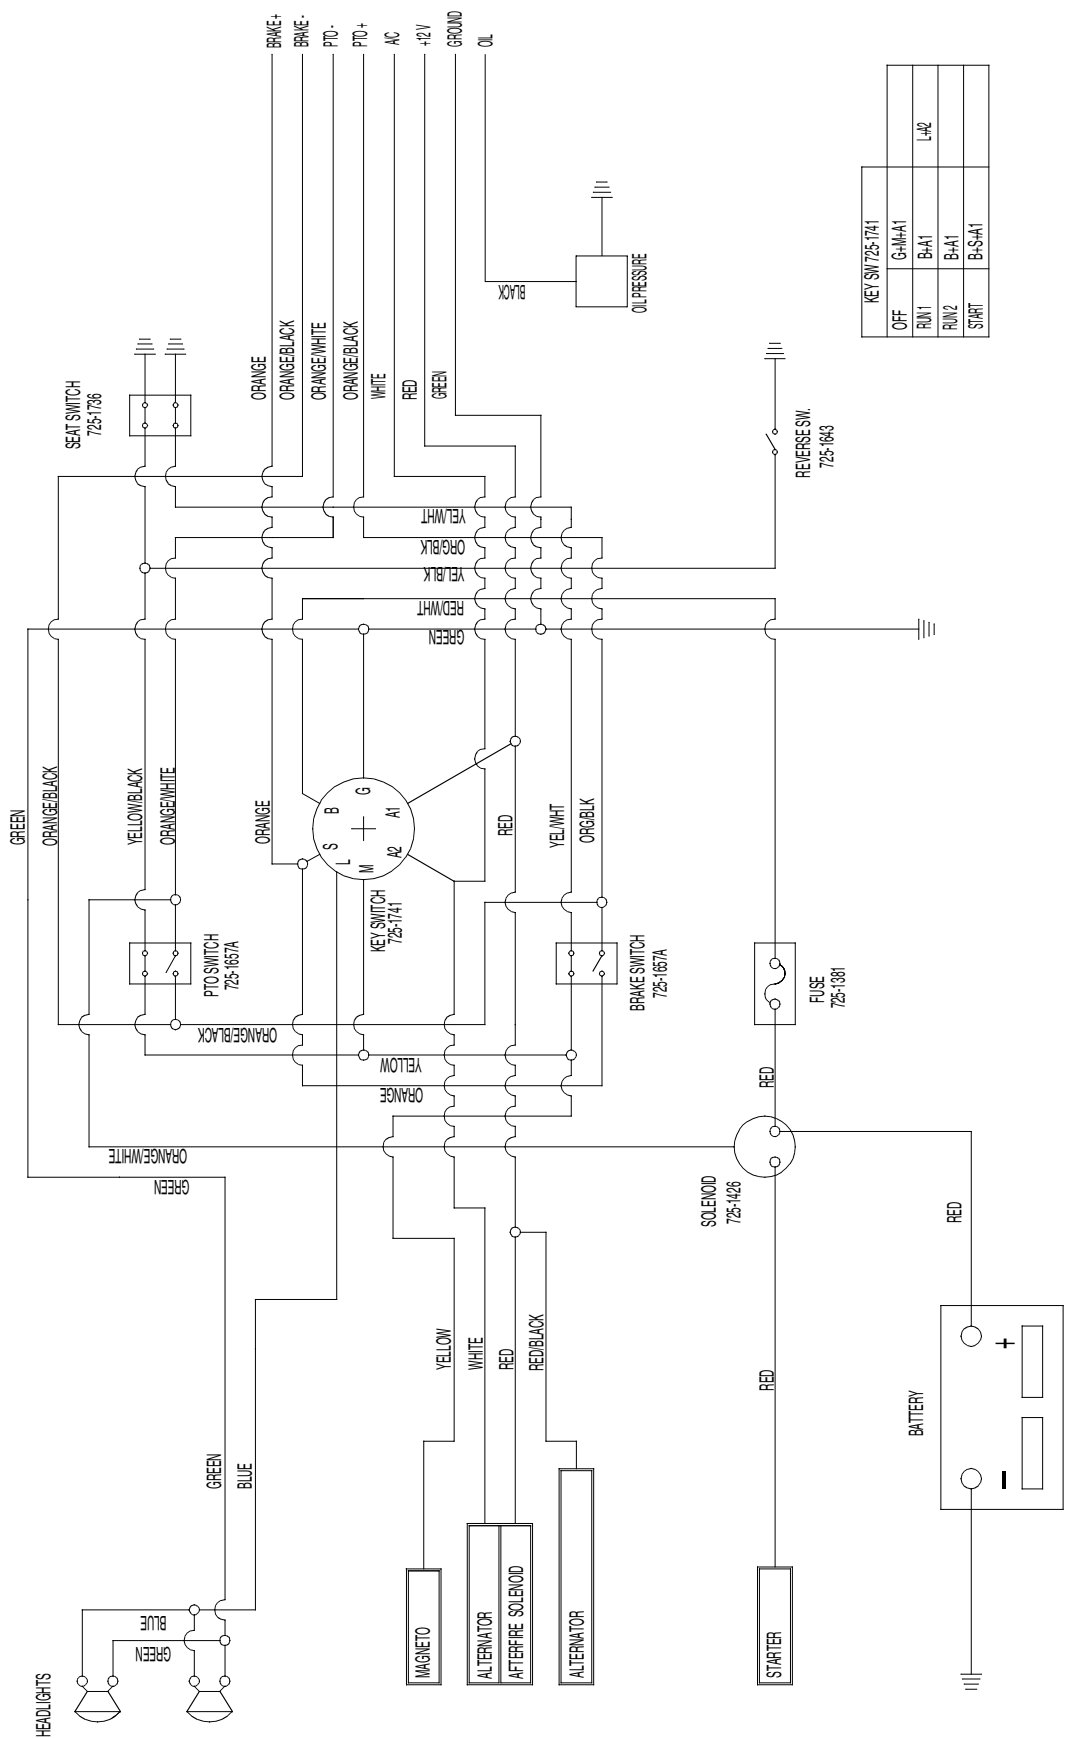

Models 607 & 608

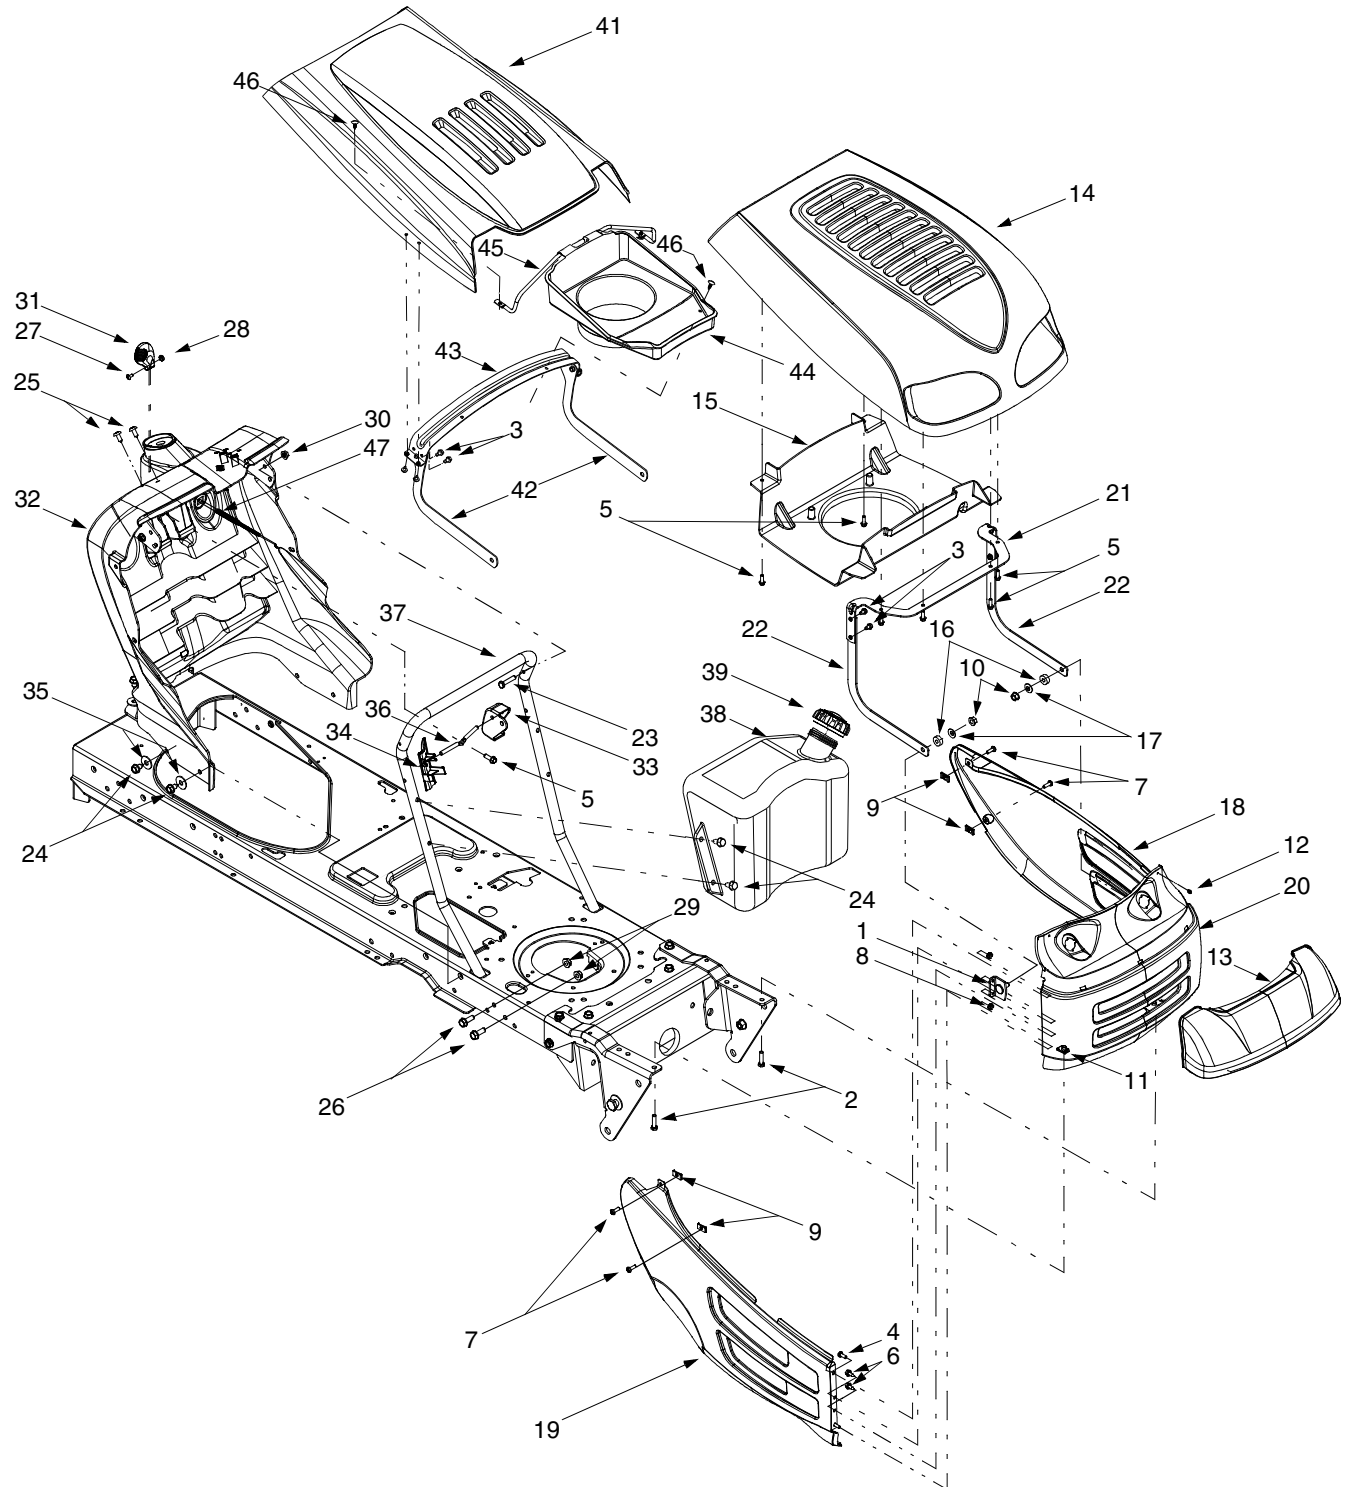


Tractor Body

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	683-0195	Bracket Assembly	29	712-3004A	Flange Lock Nut, 5/16-18
2	710-0528	Hex Cap Screw, 5/16-18 x 1.25	30	712-3027	Hex Flange Lock Nut, 1/4-20
3	710-0599	Self-tapping Screw, 1/4-20 x .5	31	731-1857	Throttle Control Knob
4	710-0751	Hex Cap Screw, 1/4-20 x .62	32	731-2122	Dash Panel
5	710-0895	Self-tapping Screw, 1/4-15 x .75	33	731-2227	Parking Brake Button
6	710-0896	Screw, 1/4-15 x .75	34	731-2228	Plastic Plug
7	710-0924	Phillips Pan Screw, 1/4-20 x .75	35	736-3078	Flat Washer, .349 x 1.0 x .063
8	712-0271	Hex Sems Nut, 1/4-20	36	747-1196	Pivot Rod
9	712-0292	U-type Speed Nut, 1/4-20	37	749-1087	Dash Support Tube
10	712-0431	Flange Lock Nut, 3/8-16	38	751-0659	Two-gallon Fuel Tank (shown)
11	726-0211	U-nut, 5/16-18		751-0658	Three-gallon Fuel Tank
12	726-0293	Retainer Nut, 3/8	39	751-0603	Fuel Cap (Fits Either Tank)
13	731-1854	Headlight Lens	40	710-1268	Screw, #10-16 x .375
14	731-2300	Hood, 7-style, Red	41	783-0478A	Hood, 8-style
	731-2301	Hood, 7-style, Green	42	783-0551A	Hood Hinge Bracket, 8-style
	731-2302	Hood, 7-style, Black	43	783-0553A	Hood Support Bracket, 8-style
	731-2303	Hood, 7-style, Charcoal Grey	44	731-2247	Heat Shield†
15	731-2306	Hood Plenum, 7-style			(Units w/ B&S OHV Twin)
16	735-0126	Rubber Washer, .87 x .33		731-2248	Heat Shield†
17	736-0105	Bell Washer, .401 x .87 x .063			(Units w/ B&S Opposed Twin)
18	783-0475	LH Side Panel	45	747-1184	Heat Shield Support Rod
19	783-0476A	RH Side Panel	46	726-3046	Ratchet Clip
20	783-0477	Grille	47	746-1085	Choke Cable/Knob †
21	783-1034	Hood Bracket, 7-style			(Units w/ B&S Opposed Twin)
22	783-1038	Hood Side Bracket, 7-style	—	OEM-190-603	Grille Guard™ Bumper Kit, Not Shown
23	710-0106	Hex Cap Screw, 1/4-20 x 1.25			(if so equipped)
24	710-0604A	Self-tapping Screw, 5/16-18 x .625		AF-47442	Bumper Assembly
25	710-1017	Truss Phillips Screw, 1/4-20 x .625		AF-44056	Clevis Pin, .5 x 1
26	710-1238	Hex Washer Screw, 5/16-18 x .625		AF-43055	Internal Cotter Pin
27	710-3217	Truss Phillips Screw, #8-32 x .375		AF-44742	Plastic Plug
28	712-0142	Hex Nut, #8-32			

†Tractors with a B&S Single-cylinder (I/C or OHV) engine have NO choke knob/cable. The choke is activated with the throttle control.

‡Tractors with a B&S Single-cylinder (I/C or OHV) engine have NO heat shield.

Model 609

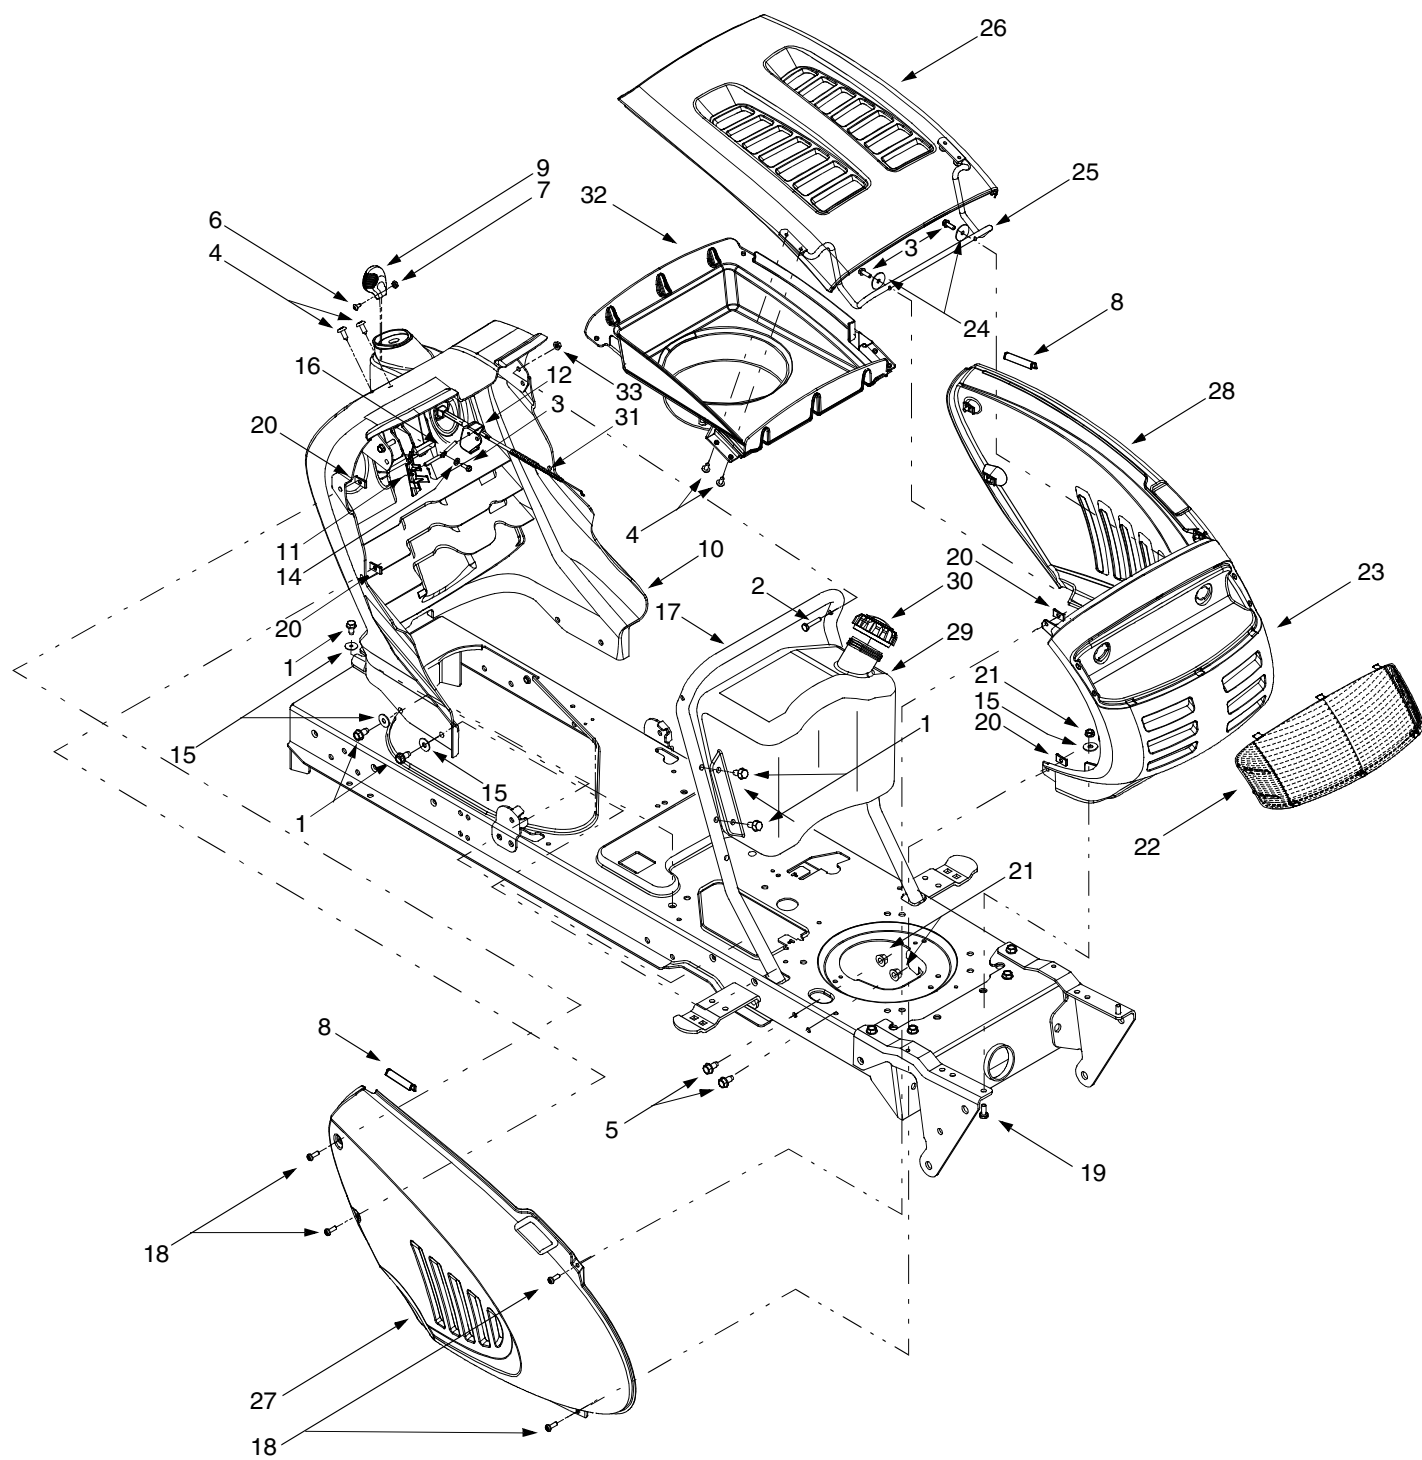


Tractor Body

REF. NO.	PART NO.	DESCRIPTION
1	710-0604A	Self-tapping Screw, 5/16-18 x .625
2	710-0788	Self-tapping Screw, 1/4-20 x 1.0
3	710-0895	Self-tapping Screw, 1/4-15 x .75
4	710-1017	Torx Self-tapping Screw, 5/16-18 x .625
5	710-1238	Screw, 5/16-18 x .875 (Grade 5)
6	710-3217	Torx Screw, #8-32 x .375
7	712-0142	Hex Nut, 8-32
8	731-0511-5	Five-inch Trim Strip
9	731-1857	Throttle Control Lever
10	731-2122	Dash Panel
11	731-2228	Plastic Plug
12	731-2227	Parking Brake Button
13	736-0119	Lock Washer, 5/16
14	736-0142	Flat Washer, .281 x .5 x .063
15	736-3078	Flat Washer, .349 x 1.0 x .063
16	747-1196	Pivot Rod
17	749-1087	Dash Support Tube
18	710-0924	Pan Phillips Screw, 1/4-20 x .75
19	710-3008	Hex Cap Screw, 5/16-18 x .75
20	712-0292	U-type Speed Nut, 1/4-20
21	712-3004A	Flange Lock Nut, 5/16-18
22	731-2118	Lens, 9-style
23	731-2119	Grille, 9-style
24	736-0211	Flat Washer, .285 x 1.25 x .08
25	747-1162	Hood Hinge Rod
26	783-0783	Hood, 9-style
27	783-0784	RH Side Pane, 9-style
28	783-0785	LH Side Panel, 9-style
29	751-0659	Two-gallon Fuel Tank (shown)
	751-0658	Three-gallon Fuel Tank
30	751-0603	Fuel Cap (Fits Either Tank)
31	746-1085	Choke Knob/Cable Assembly† (Units w/ B&S Opposed Twin or OHV Twin)
32	731-2270	Hood Plenum (Units w/ B&S OHV V-Twin)‡
	731-2271	Hood Plenum (Units w/ B&S Opposed Twin)‡
33	712-3027	Hex Flange Lock Nut, 1/4-20

†Units with B&S Single-cylinder (I/C or OHV) engines have NO choke knob/cable. The choke is activated with the throttle control.

‡Units with B&S Single-cylinder (I/C or OHV) engines have NO hood plenum.

Models 607, 608 & 609

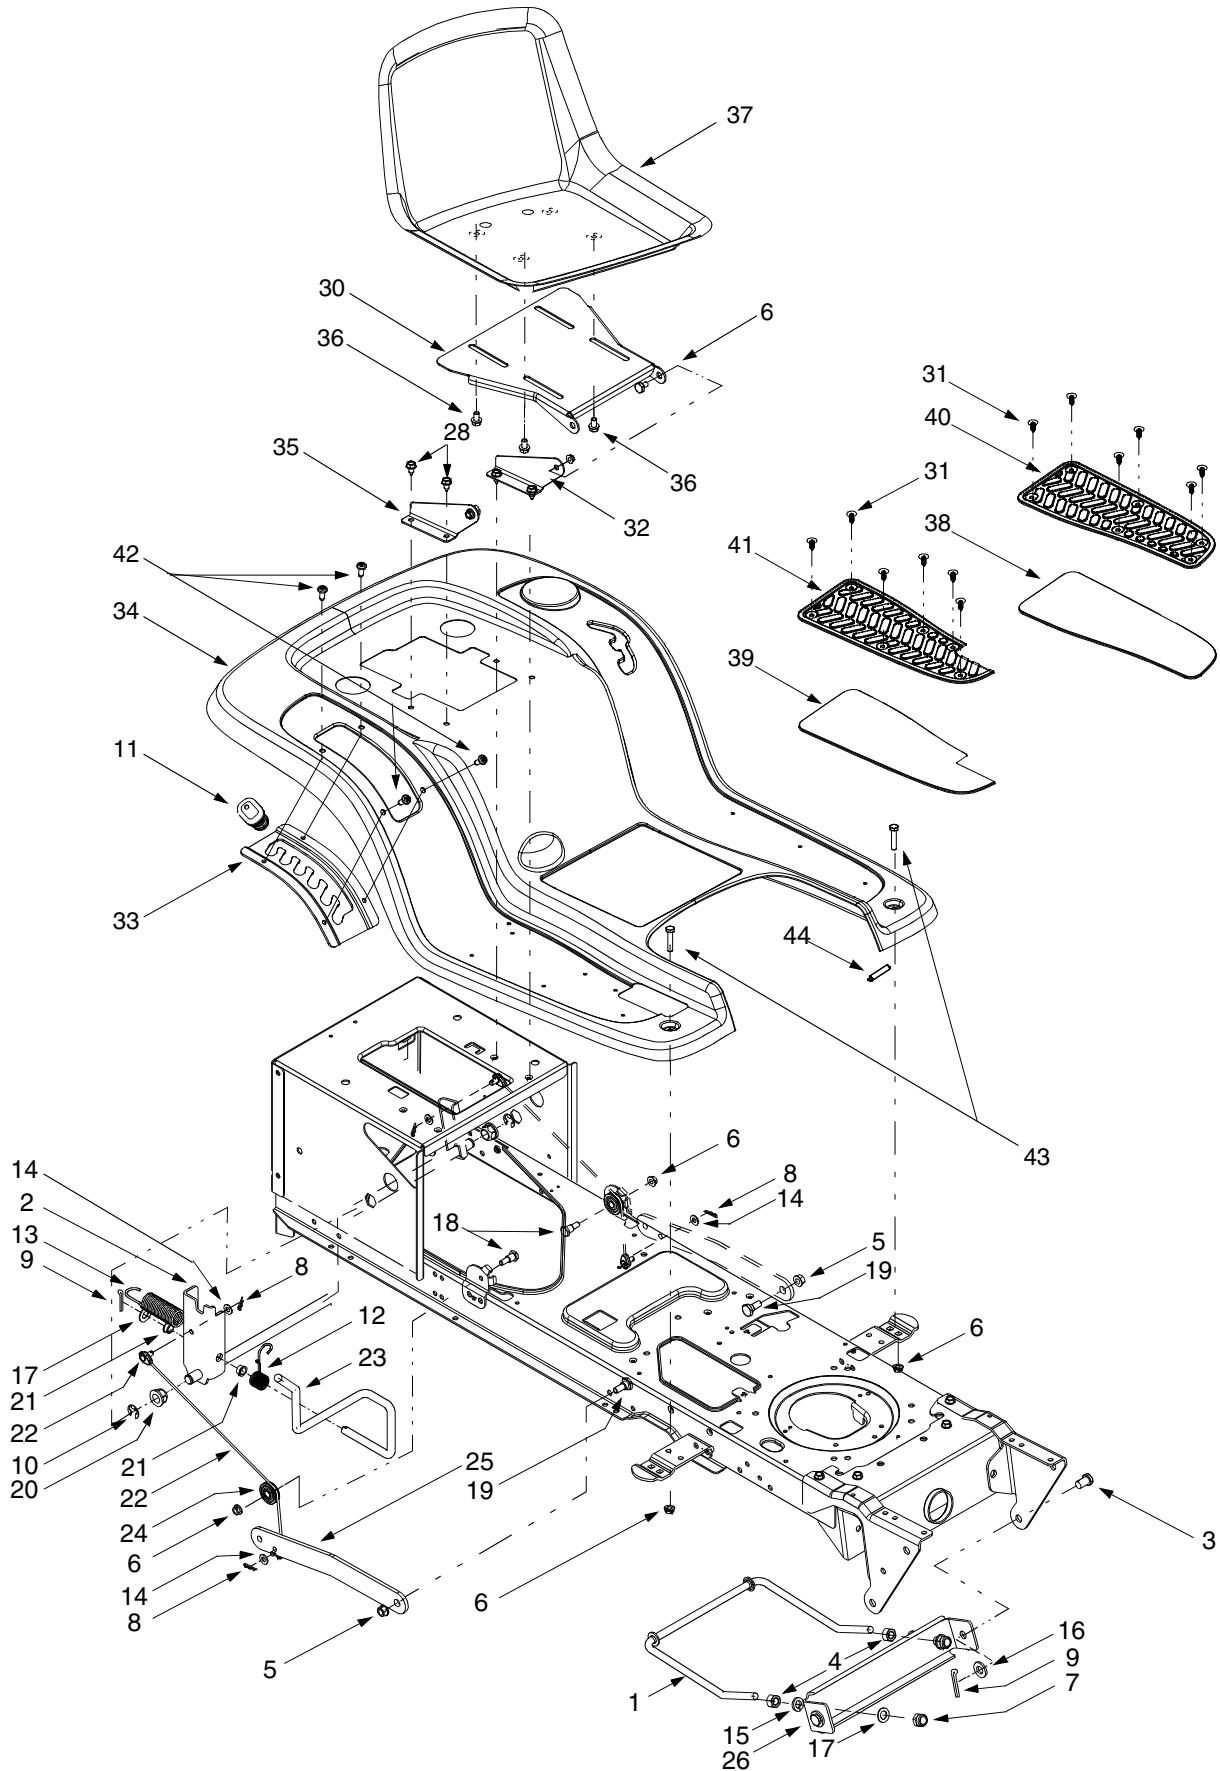

Lift Assembly

REF. NO.	PART NO.	DESCRIPTION
1	747-1130	Deck Stabilizer Rod
2	683-0197	Lift Shaft Assembly
3	711-0332	Clevis Pin, .5 x .78
4	712-0206	Hex Nut, 1/2-13
5	712-0431	Flange Lock Nut, 3/8-16
6	712-3004A	Flange Lock Nut, 5/16-18
7	712-3083	Hex Nut, 1/2-13
8	714-0104	Internal Cotter Pin
9	714-0111	Cotter Pin
10	716-0106	E-ring
11	720-0311	Handle Grip
12	732-0874	Torsion Spring
13	732-0934	Lift-assist Spring, 1.15 x 5.99 (Found on Units w/ 46-inch Deck Only)
14	736-0275	Flat Washer, 5/16
15	736-0921	Lock Washer, 1/2
16	736-3019	Flat Washer, .31 x 1.062 x .134
17	736-3084	Flat Washer, .51 x 1.12 x .06
18	738-0138	Hex Cap Screw, 5/16-18 x .62
19	738-0380	Shoulder Screw, .5 x .27, 3/8-16
20	741-0225	Hex Flange Bearing
21	741-0715	Snap Flange Bearing
22	746-0968	Lift Cable, 16.16
23	747-1111	Lift Handle
24	756-1154	Roller Pulley
25	783-0678	Arm Lift
26	783-0720A	Deck Stabilizer Bracket
27	710-0260	Carriage Bolt, 5/16-18 x .62
28	710-0604A	Self-tapping Screw, 5/16-18 x .625
29	710-0895	Self-tapping Screw, 1/4-15 x .75
30	783-0740	Seat Pivot Bracket
31	726-3046	Foot Pad Clips
32	738-0155	Shoulder Screw, .437 x 1.62
33	783-1010	Lift Adjustment Bracket
34	783-0839	Fender
35	783-0715	Seat Mounting Bracket
36	710-0870	Hex Washer Head Screw, 3/8-16 x .625
37	757-0360A	Seat, Medium Back
	757-0348A	Seat, High Back (if so equipped)
	757-0350	Seat, High Back w/ Drain Holes (if so equipped)
38	723-0483	LH Abrasive Foot Pad
39	723-0484	RH Abrasive Foot Pad
40	735-0657	LH Rubber Foot Pad (if so equipped)
41	735-0656	RH Rubber Foot Pad (if so equipped)
42	710-1611	Self-tapping Screw, 5/16-18 x .75
43	710-0260	Hex Cap Screw, 5/16-18 x .62
44	731-0511-5	Trim Strip, 1.5

Models 607, 608 & 609

This exploded view diagram illustrates the assembly of a mechanical unit, likely a pump or motor. The components are numbered 1 through 44. The main housing (1) is shown with internal components like the impeller (23) and shaft (19). The base (5) is connected to a mounting bracket (6) and a support structure (7). The assembly includes various fasteners (screws, bolts, nuts) and seals (O-rings). The final assembly is shown at the bottom, including a tire (36) and a wheel (37).

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

Steering Assembly

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	683-0304	Lower Frame Assembly	28	712-0431	Flange Lock Nut, 3/8-16
2	710-0604A	Self-tapping Screw, 16-18 x .625	29	714-0470	Cotter Pin
3	783-0726A	RH Pivot Support Bracket	30	726-0214	Push Cap, .625
4	783-0727	LH Pivot Support Bracket		726-0341	Push Cap, .750
5	783-0728	Pivot Bar Bracket	31	736-0162	Flat Washer, .64 x 1.0 x .12
6	710-0514	Hex Cap Screw, 3/8-16 x 1 (Grade 5)	32	736-0187	Flat Washer, .64 x 1.24 x .06
7	711-1409A	LH Drag Link		736-0316	Flat Washer, .78 x 1.59 x .06
8	711-1408	RH Drag Link	33	736-0285	Flat Washer, .635 x 1.589 x .06
9	712-0240	Jam Nut, 7/16-20 (Grade 2)	34	738-1011	Shoulder Screw, .5 x 2.2, 3/8-16
10	712-0241	Hex Nut, 3/8-24 (Grade 2)	35	741-0659	Flange Bearing, .632 ID x .937 OD
11	712-0431	Flange Lock Nut, 3/8-16		741-0660	Flange Bearing, .760 ID x .937 OD
12	712-0459	Flange Lock Nut, 7/16-20	36	634-0105A	Wheel Assembly Complete, 15 x 6 x 6 Square Shoulder
13	712-3004A	Flange Lock Nut, 5/16-18		634-0056A	Wheel Assembly Complete, 15 x 6 x 6 Round Shoulder
14	717-1550A	Steering Gear, 11/90 Ratio		634-0172	Rim Only
15	717-1554	Steering Pinion Gear		734-0255	Air Valve (Not Shown)
16	723-0448A	Ball Joint, 7/16-20		734-1731	Tire Only, Square Shoulder
17	736-0169	Lock Washer, 3/8		734-0864	Tire Only, Round Shoulder
18	736-3084	Flat Washer, .51 x 1.12 x .06		741-0487A	Plastic Flange (Not Shown)
19	738-1001A	Steering Shaft, .625 OD x 24.4		741-0706	Plastic Flange w/ Fitting (Not Shown)
20	741-0475	Plastic Bushing, .38 ID	37	734-0484A	Hub Cap
21	741-0656	Hex Flange Bearing, 5/8	38	783-0653C	Steering Support Bracket
22	738-0372	Shoulder Spacer, .38 ID	39	738-0143	Shoulder Screw, 3/8-16
23	631-0027	Steering Wheel	40	736-0331	Bell Washer, .39 x 1.13 x .062
	731-1687	Steering Wheel (MTD)	41	738-0140	Shoulder Screw, .435 x .178, 5/16 x .56
24	731-0220	Steering Wheel Cap	42	736-0242	Bell Washer, .34 x .872
	731-1459A	Steering Wheel Cap w/ Icon	43	710-0643	Hex Bolt, 5/16-18 X 1
25	638-0019	LH Axle Assembly, .625 Diameter	44	731-1649	End Cap
	638-0021	LH Axle Assembly, .625 / .750 Diameter		731-1291A	End Cap w/ Fitting (if so equipped)
26	638-0020	RH Axle Assembly, .625 Diameter			
	638-0022	RH Axle Assembly, .625 / .750 Diameter			
27	683-0128A	Pivot Bar			

NOTE: Units equipped with a 42-inch deck have axles with a .625 diameter.

Units equipped with a 46-inch deck have axles with a .625 / .750 diameter.


[illegible]

Drive System

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	783-1015	Shift Lever Support	47	756-0981	Flat Idler, 2.75 OD
2	17840	Transaxle Mounting Bracket	48	783-0637	Shift Lever Support
3	618-0307C	Single-speed Transmission Assembly	49	783-0667A	Transmission Torque Bracket
4	631-0009	Shifter Knob	50	783-0669	Idler Bracket
5	647-0045	Shift Lever	51	783-0714	Adjustable Shift Bracket
6	656-0048	Variable-speed Pulley Assembly	52	647-0031	Brake Control Assembly
7	656-0051A	Transmission Pulley, 8.5 x .5-36	53	647-0032	Speed Control Assembly
8	683-0251	Double-idler Bracket	54	683-0266	Drive Pedal Assembly
9	710-0176	Hex Cap Screw, 5/16-18 x 2.75	55	712-0431	Flange Lock Nut, 3/8-16
10	710-0227	Self-tapping Screw, #8-18 x .5	56	711-0736	Ferrule, 1/4-20
11	710-0347	Hex Cap Screw, 3/8-16 x 1.75	57	711-1363	Pin, 3/8-16 x 2.43
12	736-0272	Flat Washer, .51 x 1.0 x .060	58	714-0104	Cotter Pin
13	710-0604A	Self-tapping Screw, 5/16-18 x .625	59	732-0437	Compression Spring, .34 OD x 1.0
14	710-0642	Self-tapping Screw, 1/4-20 x .75	60	710-0778	Self-tapping Screw, 1/4-20 x 1.5
15	710-3011	Hex Cap Screw, 3/8-16 x 2.25	61	735-0662	Drive Pedal Pad
16	711-0677	Ferrule, 5/16-18	62	735-3049	Brake Pedal Pad
17	712-0241	Hex Nut, 3/8-24	63	710-1650	Self-tapping Screw, 5/16-18 x .875
18	712-0378	Hex Nut, 7/16-20	64	736-0187	Flat Washer, .64 x 1.24 x .06
19	712-0431	Flange Lock Nut, 3/8-16	65	736-0204	Flat Washer, .344 x .062 x .03
20	712-0798	Hex Nut, 3/8-16	66	738-0155	Shoulder Screw, .437 x 1.62
21	712-3004A	Flange Lock Nut, 5/16-18	67	738-0507B	Shoulder Screw, .5 x .434
22	712-3008	Jam Nut, 3/8-16	68	741-0225	Hex Flange Bearing
23	714-0111	Cotter Pin	69	741-3065A	Split Hex Flange Bearing
24	714-0149B	Internal Cotter Pin	70	710-0859	Hex Cap Screw, 3/8-16 x 2.5
25	723-3018	Ball Joint	71	747-1138	Brake Lock Control Rod
26	725-1644	Short Spring Switch	72	710-1260A	Self-tapping Screw, 5/16-18 x .75
27	726-0320	Insulator Nut Plate	73	748-0415A	Spacer, 5/16 x 1.54
28	732-0384	Extension Spring, .62 Dia. x 6.12	74	783-0653C	Steering Support Bracket
29	732-0525	Compression Spring Clip	75	783-0732	Drive Lockout Bracket
30	732-0716	Extension Spring, .59 OD x 4	76	783-0773	Brake Pedal
31	732-0963	Extension Spring, .50 Dia. x 6.37 (hooks to flange, 783-0650, in frame)	77	783-0780A	Neutral Return Bracket
32	736-0105	Bell Washer, .401 x .87 x .063	78	683-0304	Lower Frame Assembly
33	736-0140	Flat Washer, .385 x .62 x .063	79	783-1031	Hitch Plate
34	736-0169	Lock Washer, 3/8	80	736-0242	Bell Washer, .34 x .872
35	736-0275	Flat Washer, 5/16	81	710-0627	Hex Cap Screw, 5/16-24 x .75
36	736-0407	Bell Washer, .45 x 1.0 x .602	82	634-0177	Wheel Assembly Complete
37	736-3010	Flat Washer, .407 x .812 x .135		634-0104	20 x 10 x 8 Square Shoulder
38	738-0322	Shoulder Screw, .625 x .217			Wheel Assembly Complete
39	747-1122	Brake Rod		734-1675	20 x 8 x 8 Square Shoulder
40	747-1123A	Belt Guard			Wheel Assembly Complete
41	747-1127	Idler Adjustment Rod, 3/8		634-0070	20 x 8 x 8 Round Shoulder
42	747-1156	Shift Rod			Rim Only
43	711-0736	Adjustment Ferrule, 1/4-20 x 1.0		734-0255	Air Valve (Not Shown)
44	748-0372	Shoulder Spacer, .38 ID		734-1873	Tire Only, 20 x 10 x 8, Square Shoulder
45	754-0467	Variable-speed Belt		734-1730	Tire Only, 20 x 8 x 8, Square Shoulder
46	754-0468	Drive Belt		734-1596	Tire Only, 20 x 8 x 8, Round Shoulder
			83	750-0556	Spacer

IMPORTANT: The V-belts found on your tractor are specially designed to engage and disengage safely. A substitute (non-OEM) V-belt can be dangerous by not disengaging completely. For a proper working machine, use factory approved belts.

Models 607, 608 & 609

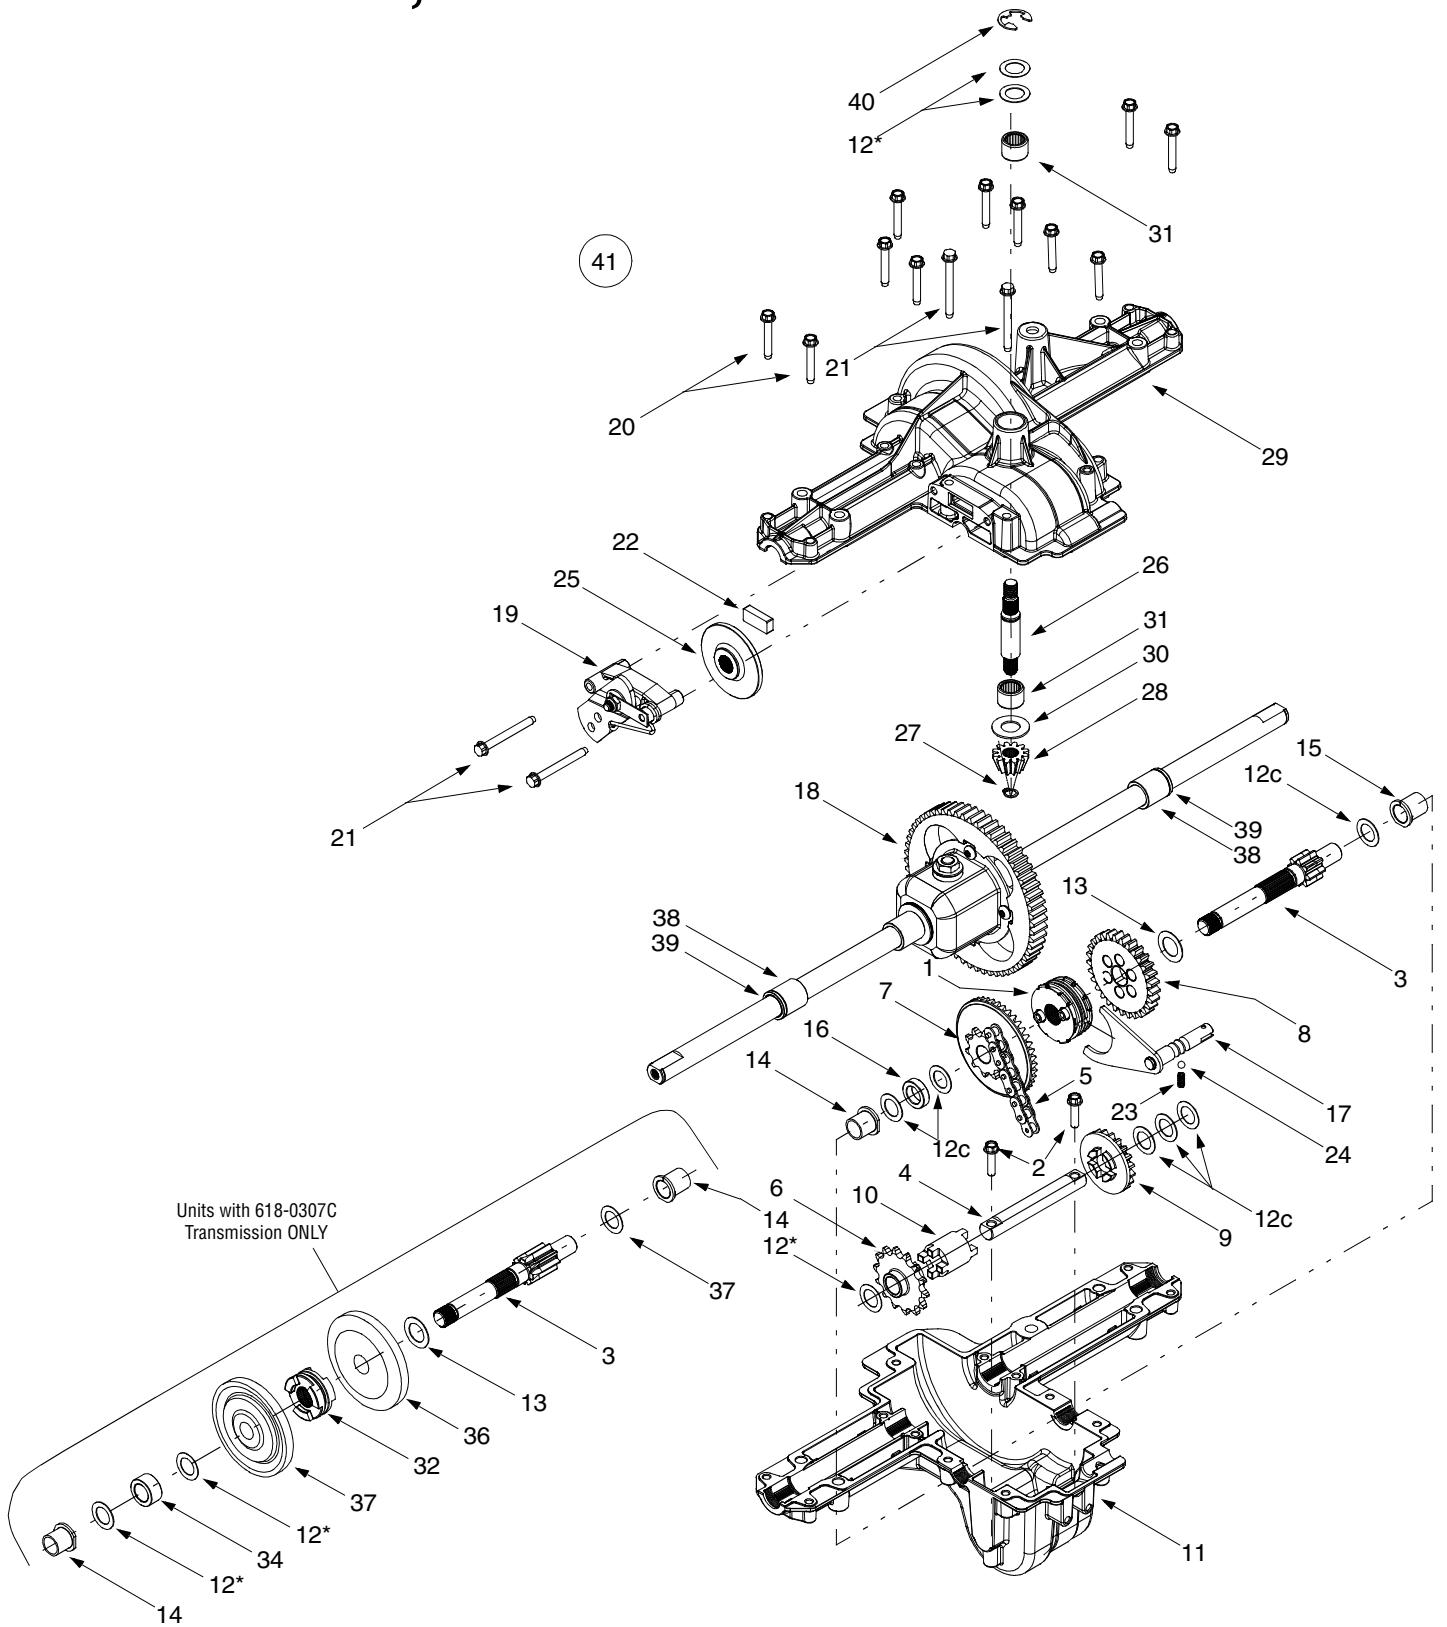

Single-speed Transmission

REF. NO.	PART NO.	DESCRIPTION
1	618-0318	Clutch Collar†
2	710-0788	Self-tapping Screw, 1/4-20 x 1.0
3	711-1274	Drive Shaft
4	711-1280	Counter Shaft
5	713-0474	22-link Chain, #420
6	713-0478	14-tooth Sprocket
7	717-1422	Sprocket Bevel Gear, 42/10
8	717-1565	29-tooth Spur Gear
9	717-1569	20-tooth Spur Gear
10	718-0652	Counter Shaft Coupling
11	719-0394	Lower Housing
12a	736-0336	Flat Washer, 5/8 x 1.0 x .030*
12b	736-0337	Flat Washer, 5/8 x 1.0 x .040*
12c	736-0349	Flat Washer, 5/8 x 1.0 x .020*
13	736-0519	Flat Washer, .70 x 1.125 x .031
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
16	750-1238	Spacer, .635 x 1.0 x .27
17	611-0112	Detent Shaft Assembly†
	611-0133	Detent Shaft Assembly‡
18	618-0369	Differential Assembly†
	618-0424	Differential Assembly‡
19	661-0006	Brake Assembly
20	710-1325	Self-tapping Screw, 1/4-20 x 1.625
21	710-1206	Self-tapping Screw, 1/4-20 x 2.375
22	717-0678	Brake Pad
23	732-0863	Compression Spring
24	741-0862	Detent Ball
25	761-0202	Brake Disc
26	711-1331	Input Shaft†
	711-1430	Input Shaft‡
27	716-0385	Retaining Ring, .394†
	716-0108	Retaining Ring, .437‡
28	717-1571	12-tooth Bevel Pinion†
	717-1464	14-tooth Bevel Pinion‡
29	719-0391A	Upper Housing
30	736-0335	Thrust Washer, .63 x 1.24 x .062†
	736-0723	Thrust Washer, .635 x 1.25 x .042‡
31	741-0525	Needle Bearing, .625 x .875
32	718-0228	Clutch Collar†
33	711-1431	Drive Shaft‡
34	750-1234	Spacer, .633 x 1.0 x .513
35	717-1362	42-tooth Bevel Gear‡
36	717-1363	42-tooth Bevel Gear†
37	736-0495	Thrust Washer, 1.0 x .632 x .0
38	741-0340	Sleeve Bearing, .75 x 1.0 x 1.0
39	721-0338	Seal, .75 x 1.0 x .125
40	716-0231	E-ring, .75
41	618-0551	Transmission Assembly Complete


*If rebuilding transmission for any reason, use applicable flat washer (12a, 12b, or 12c) in this application allowing proper end play as instructed in MTD's Service Manual.

IMPORTANT: One of two different transmissions may be found on your lawn tractor (618-0307B & 618-0307C). Refer to the model plate found on the rear right portion of the transmission's lower housing before ordering replacement service parts.

†Used on Single-speed transmission 618-0307B ONLY.

‡Used on Single-speed transmission 618-0307C ONLY.

Models 607, 608 & 609


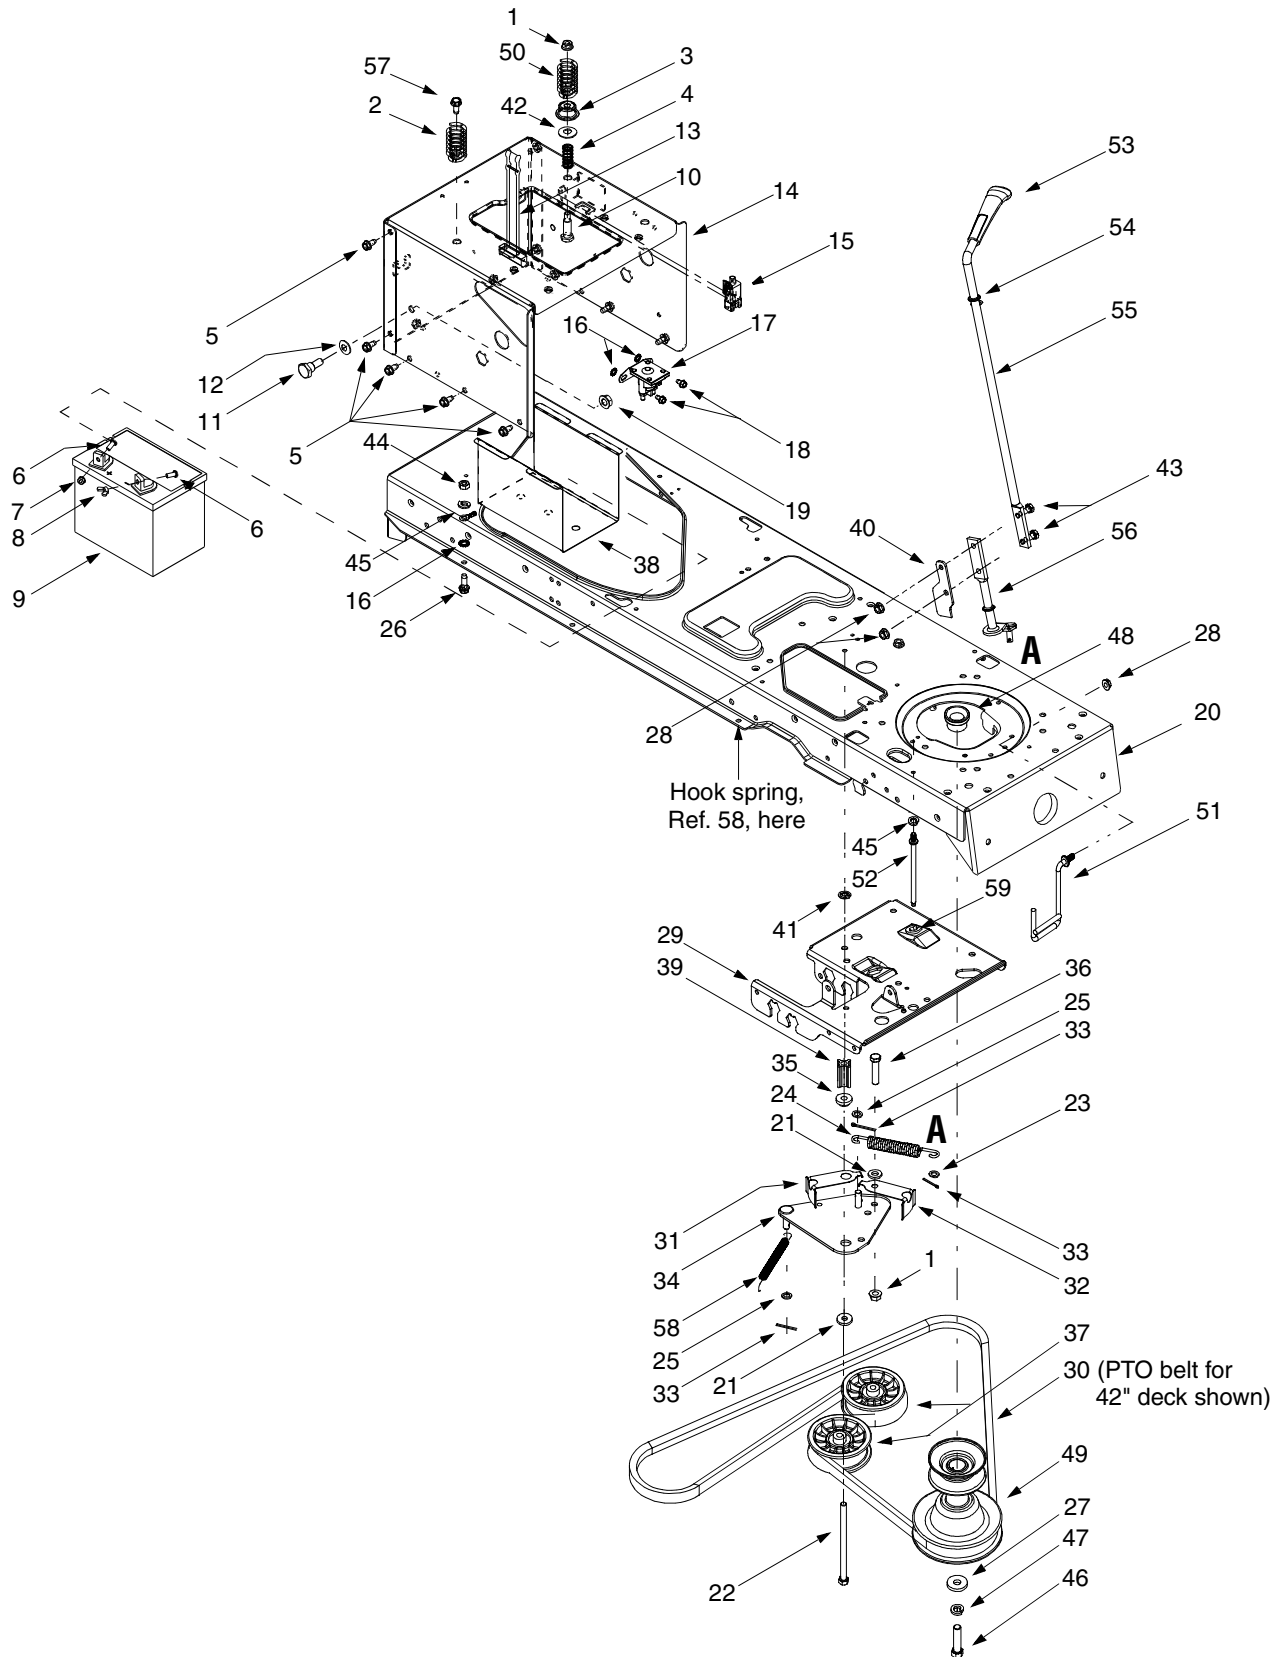


Power Take-off System


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	712-0431	Flange Lock Nut, 3/8-16	31	732-0991	Belt Guard
2	732-0996	Compression Spring, 1.31 x 3.0	32	732-0990	Belt Guard
3	783-0733	Spacer Cup, 1.5 OD	33	714-0470	Cotter Pin, 1/8 x 1.25
4	732-0997	Compression Spring, .66 OD x 1.5	34	683-0302	PTO Engagement Plate
5	710-0604A	Self-tapping Screw, 5/16-18 x .625	35	738-0372	Shoulder Spacer
6	710-0751	Hex Cap Screw, 1/4-20 x .62	36	710-3011	Hex Cap Screw, 3/8-16 x 2.25 (Grade 5)
7	712-0271	Hex Sems Nut, 1/4-20	37	756-0627	Flat Idler Pulley, 3.5 OD
8	712-3044	Wing Nut, 1/4-20	38	783-0349	Battery Tray
9	725-1706	12-volt Battery, 270 CCA	39	748-0415A	Spacer, 3/8 x 1.54
10	738-1014	Shoulder Screw, .5 x 1.25, 3/8-16	40	783-0744A	Engagement Stop Bracket
11	738-1020	Shoulder Screw, .625 x .5, 7/16-20	41	712-0229	Push Nut, 3/8
12	736-0407	Bell Washer, .45 x 1.0 x .062	42	736-0105	Bell Washer, .401 x .870 x .063
13	723-0444	Battery Strap	43	710-0376	Hex Cap Screw, 5/16-18 x 1.0
14	783-1031	Hitch Plate	44	712-3006	Hex Nut, 1/4-20
15	725-1747	Safety Interlock Plunger Switch	45	736-0119	Lock Washer, 5/16
16	736-0222	Lock Washer, 1/4	46	710-3029	Hex Cap Screw, 7/16-20 x 1.25
17	725-1426	Solenoid, 12-Volt, 100 Amp	47	736-0171	Lock Washer, 7/16
18	710-0599	Self-tapping Screw, 1/4-20 x .5	48	750-0956	Spacer
19	712-0459	Flange Lock Nut, 7/16-20	49	756-0982A	Engine Pulley
20	683-0304	Lower Frame Assembly	50	732-0735	Extension Spring, 1.318 x 2.37
21	736-3010	Flat Washer, .407 x .812 x .135	51	647-0053	Belt Guard
22	710-0831	Hex Cap Screw, 3/8-16 x 5.5	52	711-1044	Keeper Pin
23	736-0275	Flat Washer, .344 x .688 x .065†	53	731-2111A	PTO Knob
24	732-0944	Extension Spring, .75 x 5.39	54	736-0108	Flat Washer, .510 x .750 x .033
25	736-0140	Flat Washer, .385 x .62 x .063	55	747-1112A	PTO Handle
26	710-0642	Self-tapping Screw, 1/4-20 x .750	56	647-0046	PTO Lever
27	736-0322	Flat Washer, .45 x 1.25 x .164	57	710-0650	Self-tapping Screw, 15/16-18 x .875
28	712-3004A	Flange Lock Nut, 5/16-18	58	732-0995	Extension Spring, .5 x 6.0
29	783-0653C	Steering Support Bracket	59	741-0708	Hex Split Flange Bearing
30	754-0485	PTO Belt (42-inch Decks w/ Manual PTO)			
	754-0486	PTO Belt (46-inch Decks w/ Manual PTO)			

Models 607, 608 & 609

46-inch Deck

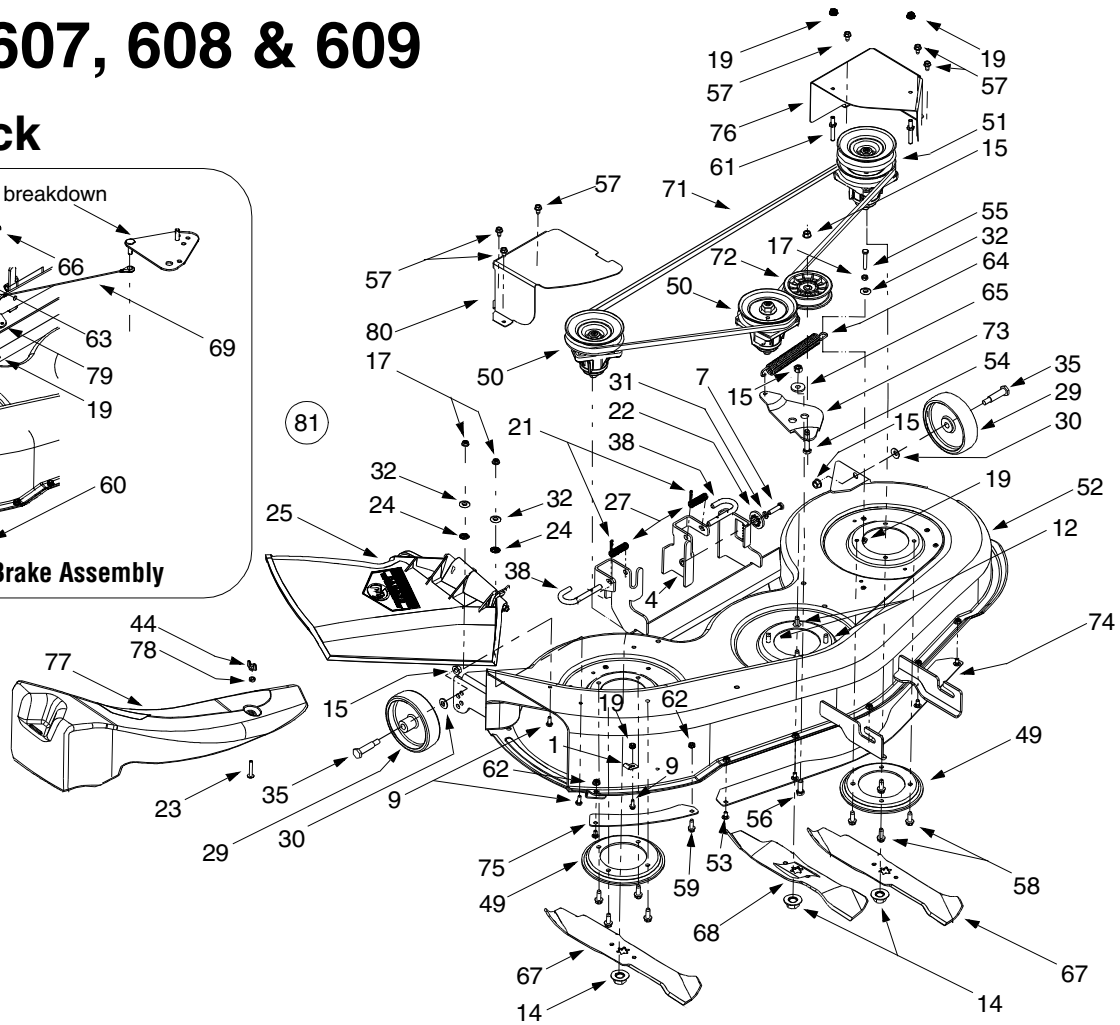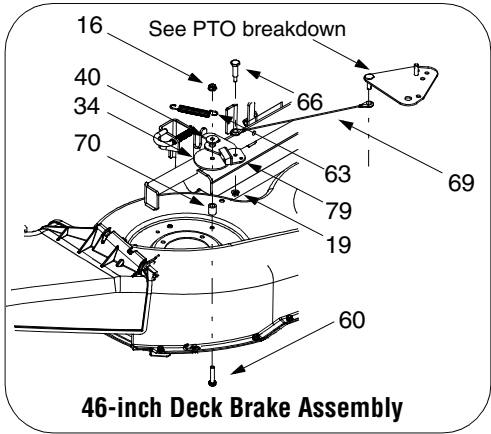

42-inch Deck

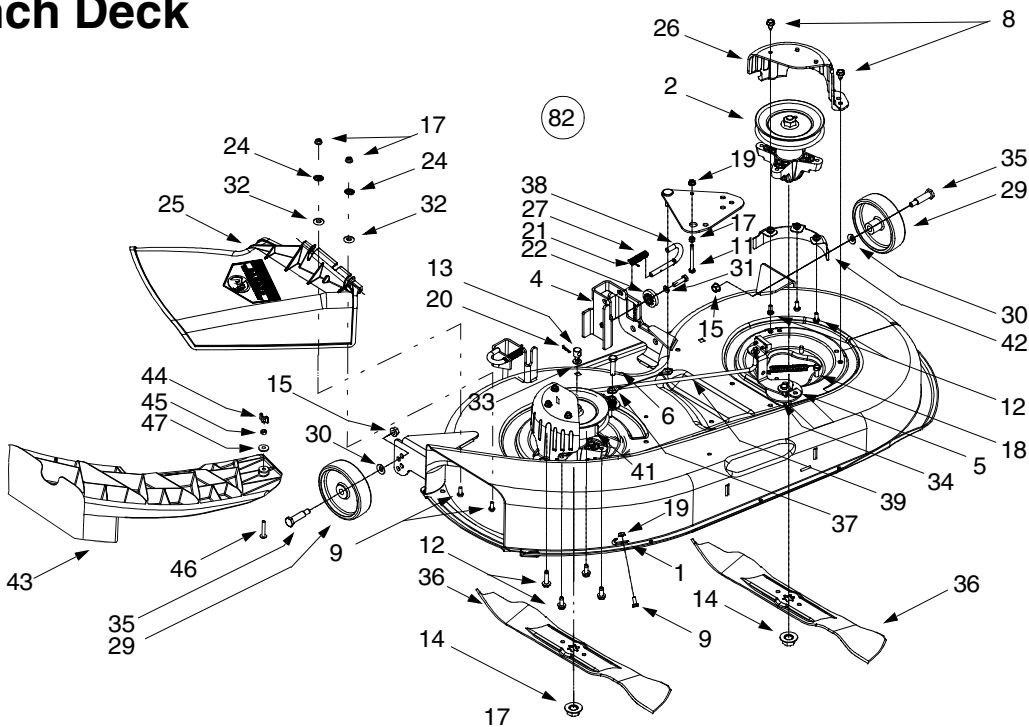


Cutting Decks


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	16606	Retainer Hook	44	712-3087	Wing Nut, 1/4-20 (if so equipped)
2	618-0324	Spindle Assembly, 5.75 Dia.	45	712-3006	Hex Nut, 1/4-20 (if so equipped)
3	683-0198C	42-inch Deck Shell	46	710-0597	Hex Cap Screw, 1/4-20 x 1.0 (if so equipped)
4	683-0254	Deck Adjustment Bracket w/ Weld Nut	47	736-0173	Flat Washer, .28 x .74 x .063
5	683-0303	Deck Brake Assembly, 42-inch Decks	48	17258A	RH Belt Cover Bracket
6	710-0520	Hex Cap Screw, 3/8-16 x 1.5	49	17928	Reinforcement Spindle Plate
7	710-0528	Hex Cap Screw, 5/16-18 x 1.25	50	618-0240	Spindle Assembly, 5.0 Dia.
8	710-0604A	Self-tapping Screw, 5/16-18 x .625	51	618-0241	Double Pulley Spindle Assembly
9	710-0751	Hex Cap Screw, 1/4-20 x .62	52	683-0265C	46-inch Deck Shell
10	710-0817	Self-tapping Screw, 5/16-18 x 1.25	53	710-0167	Carriage Screw, 1/4-20 x .50
11	710-1122	Hex Cap Screw, 1/4-20 x 2.5	54	710-0347	Hex Cap Screw, 3/8-16 x 1.75
12	710-1260A	Self-tapping Screw, 5/16-18 x .75	55	710-0501	Hex Cap Screw, 1/4-20 x 2.0
13	711-0677	Ferrule, 5/16-18	56	710-0514	Hex Cap Screw, 3/8-16 x 1.0
14	712-0417A	Hex Flange Nut, 5/8-18	57	710-0599	Self-tapping Screw, 1/4-20 x .5
15	712-0431	Flange Lock Nut, 3/8-16	58	710-0650	Self-tapping Screw, 15/16-18 x .875
16	712-3004A	Flange Lock Nut, 5/16-18	59	710-0703	Hex Screw, 1/4-20 x .75
17	712-3006	Hex Nut, 1/4-20	60	710-0805	Hex Cap Screw, 5/16-18 x 1.5
18	712-3009	Hex Lock Nut, 5/16-18	61	711-0993	Belt Keeper Pin
19	712-3027	Hex Flange Lock Nut, 1/4-20	62	712-0271	Hex Sems Nut, 1/4-20
20	714-0104	Internal Cotter Pin, .072 x 1.12	63	732-0429A	Extension Spring, .5 x 3.97
21	714-0111	Cotter Pin, 3/32 x 1.0	64	732-0594A	Extension Spring, .91 x 7.33
22	717-1553A	Deck Adjustment Gear	65	738-0347	Shoulder Spacer, .625 x 1.16
23	710-0578	Screw, 1/4-20 x 1.5	66	738-0572	Shoulder Screw, .374 x 1.16
24	726-0233	Push Nut, .25 x .5	67	742-0611	Three-in-one Blade, Star Center, 16.28"
25	731-1032B	Side Discharge Chute Assembly	68	742-0612	Three-in-one Blade, Star Center, 14.88"
26	731-2231A	Belt Cover	69	746-1107	Bracket Cable, 12"
27	732-0306	Compression Spring, .406 x .531 x 1.75	70	750-0807	Spacer, .385 x .625 x .70
28	732-0428A	Compression Spring, .50 x 4.35	71	754-0349	Deck Belt
29	734-0973	Deck Wheel, 5 x 1.38	72	756-0627	Flat Idler Pulley, 3.5 OD
30	736-0105	Bell Washer, .401 x .87 x .063	73	783-0139	Idler Bracket
31	736-0119	Lock Washer, 5/16	74	783-0141	Center Deck Skirt
32	736-0270	Bell Washer, .265 x .75 x .062	75	783-0142	RH Deck Skirt
33	736-0275	Flat Washer, .344 x .688 x .065	76	783-0747	LH Belt Cover
34	736-0416	Flat Washer, .320 x 3.0 x .125	77	731-1636	Mulch Plug, 46-inch Decks (if so equipped)
35	738-0373	Shoulder Screw, .498 x 1.53	78	712-0291	Hex Lock Nut, 1/4-20 (if so equipped)
36	742-0616	Three-in-one Blade, Star Center, 21.23"	79	17116	Deck Brake Assembly, 46-inch Decks
37	746-0970	Bracket Cable, 5.35"	80	783-0805A	RH Belt Cover
38	747-1116	Deck Release Pin	81	753-0872	46-inch Deck Assembly Complete (Manual PTO activated, w/o mulch kit)
39	747-1202	Deck Brake Rod	82	753-0871	42-inch Deck Assembly Complete (Manual PTO activated, w/o mulch kit)
40	748-0324	Shoulder Spacer			
41	783-1026	RH Belt Guard Bracket			
42	783-1027	LH Belt Guard Bracket			
43	731-1643A	Mulch Plug, 42-inch Decks (if so equipped)			

Models 607, 608 & 609

Briggs & Stratton OHV V-Twin

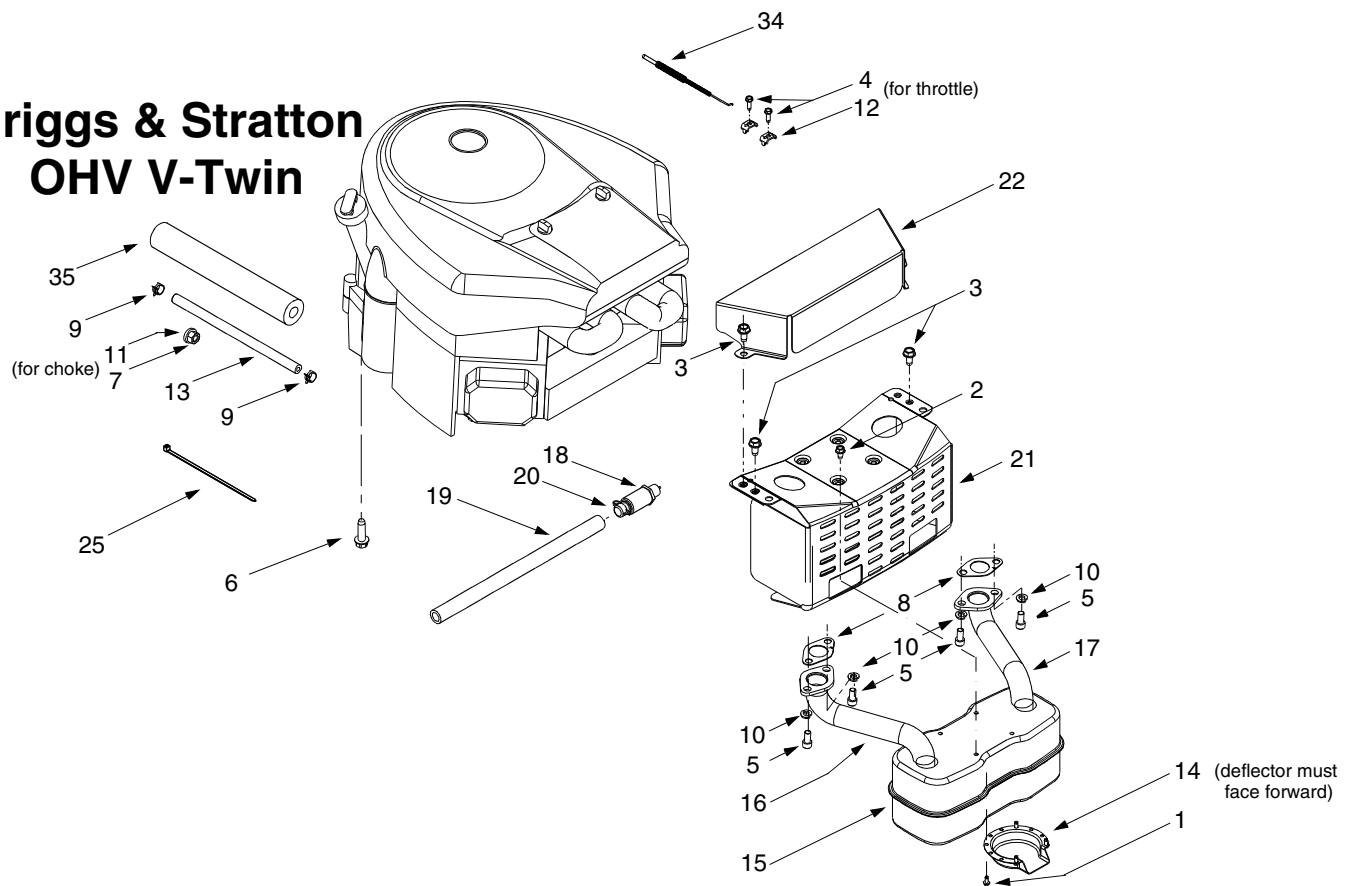


Briggs & Stratton OHV Single

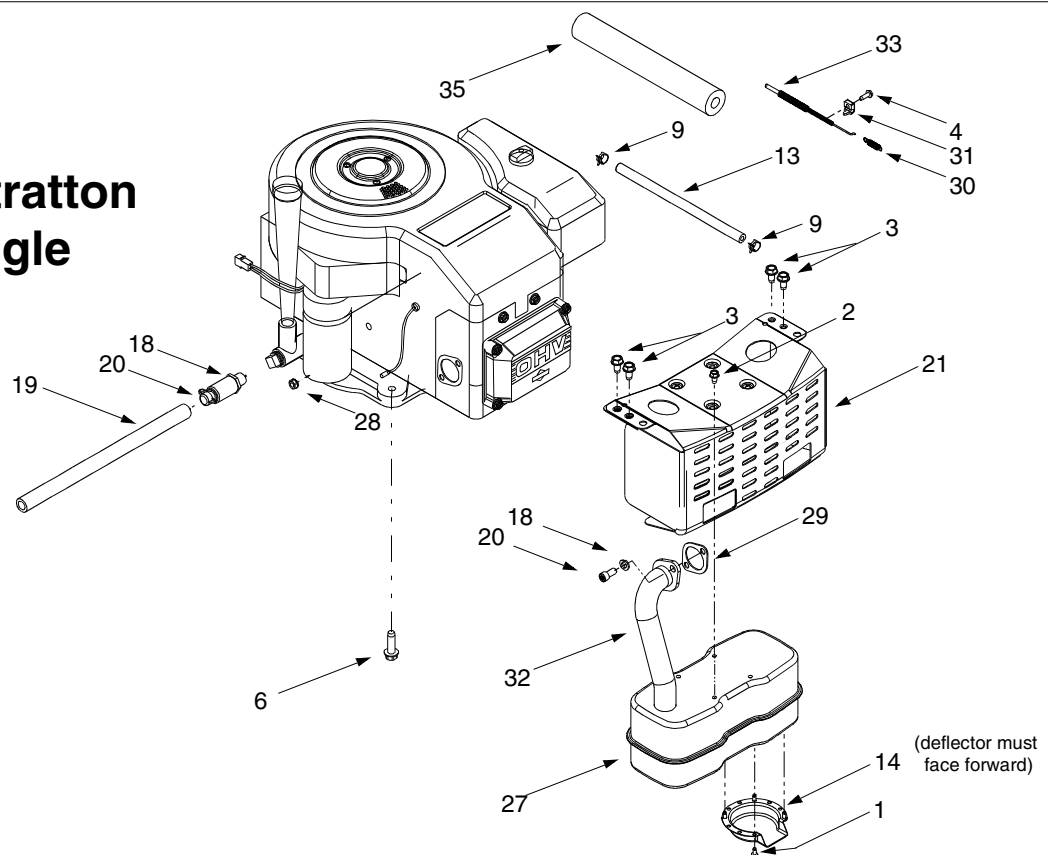

Engine Accessories

Briggs & Stratton Opposed Twin

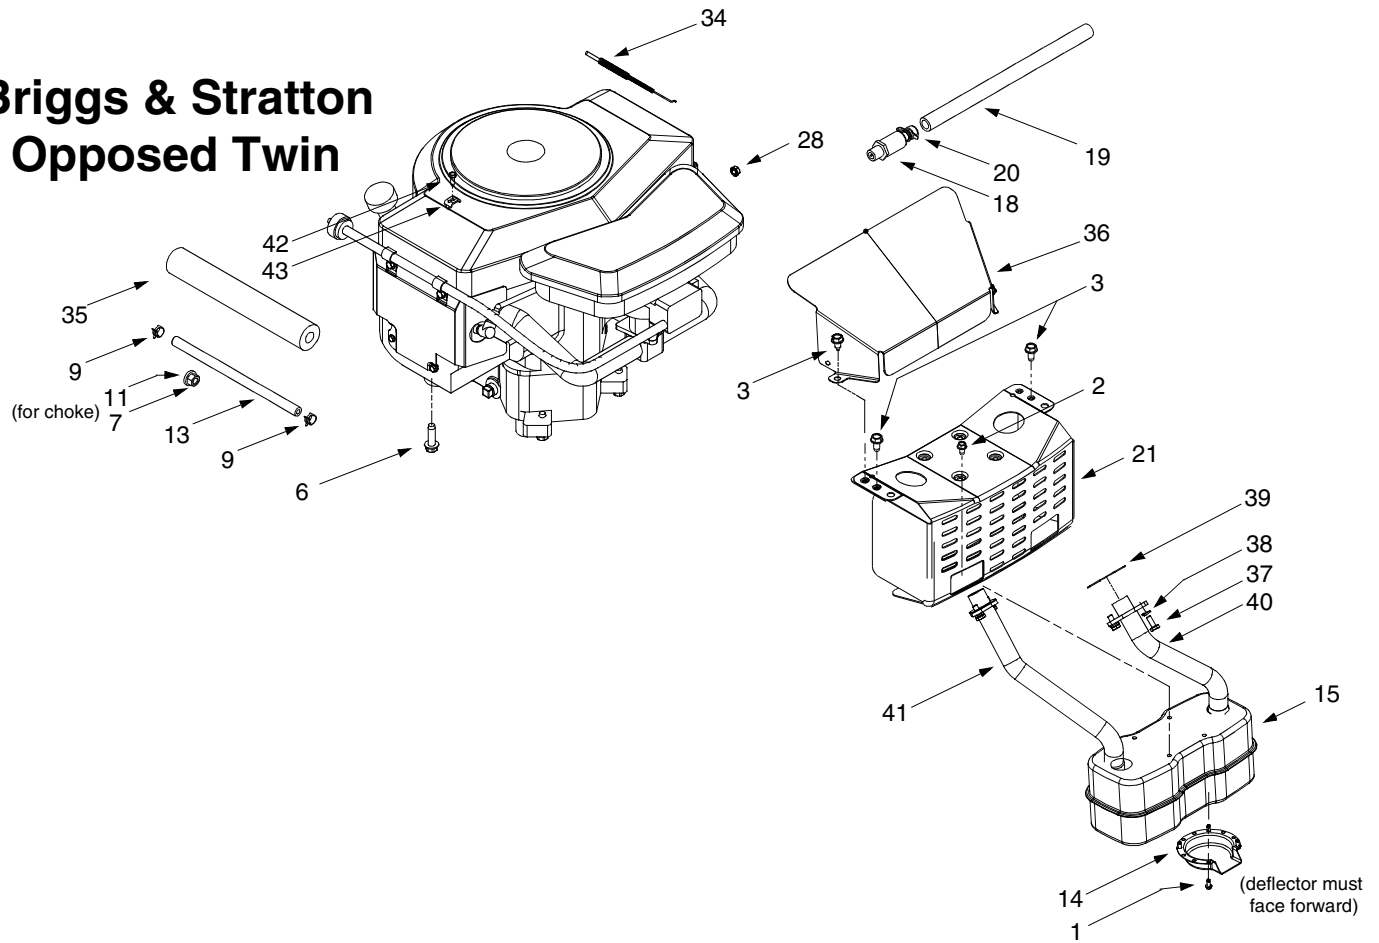

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	710-0148	Self-tapping Screw, #8-32 x .375	23	710-3206A	Hex Cap Screw, M8-1.25 x 25
2	710-0599	Self-tapping Screw, 1/4-20 x .5	24	712-3086	Flange Nut, M8-1.25
3	710-0604A	Self-tapping Screw, 5/16-18 x .625	25	725-0157	Cable Tie
4	710-1237	Screw, #10-32 x .625	26	736-0607	External Lock Washer, 5/16
5	710-1314	Socket Cap Screw, 5/16-18 x .625	27	751-0617	Muffler, Single Inlet
6	710-1315	Self-tapping Screw, 3/8-16 x 1.25	28	712-0271	Hex Sems Nut, 1/4-20 (for starter cable)
7	712-3017	Hex Nut, 3/8-16	29	721-0208	Exhaust Gasket (OHV Single)
8	721-0460	Exhaust Gasket (OHV V-Twin)	30	732-0966	Extension Spring, .275 x 1.25
9	726-0205	Hose Clamp	31	751B213146	Casing Clamp
10	736-0119	Lock Washer, 5/16	32	751-0619	Exhaust Pipe (OHV Single)
11	736-0300	Lock Washer, .406 x .875 x .059	33	746-1084	Throttle/Choke Cable (OHV Single)
12	751B221535	Casing Clamp	34	746-1086	Throttle Cable (OHV V-Twin & Opposed Twin)
13	751-0535	Fuel Line Hose	35	722-0263	Foam, .625 x 1.5 x 10 (fits over fuel line)
14	751-0564	Muffler Deflector	36	783-0357A	Heat Shield (Opposed Twin)
15	751-0616	Muffler, Twin Inlet	37	710-0751	Hex Cap Screw, 1/4-20 x .620 (Grade 5)
16	751-0650	RH Exhaust Pipe (OHV V-Twin)	38	736-0329	Lock Washer, 1/4
17	751-0651	LH Exhaust Pipe (OHV V-Twin)	39	721-0346	Exhaust Gasket (Opposed Twin)
18	751-3140	Oil Drain Valve	40	751-0623	LH Exhaust Pipe (Opposed Twin)
19	751-3141	Oil Drain Hose	41	751-0624	RH Exhaust Pipe (Opposed Twin)
20	751-3142	Oil Drain Cap	42	712-0779A	Screw, #10-16 x .5
21	783-0615	Muffler Heat Shield	43	726-0272	Clamp, 9/16
22	783-0625B	Engine Heat Shield			