



SECTION 12: MODELS GT-2150 & GT-2550 PARTS LIST

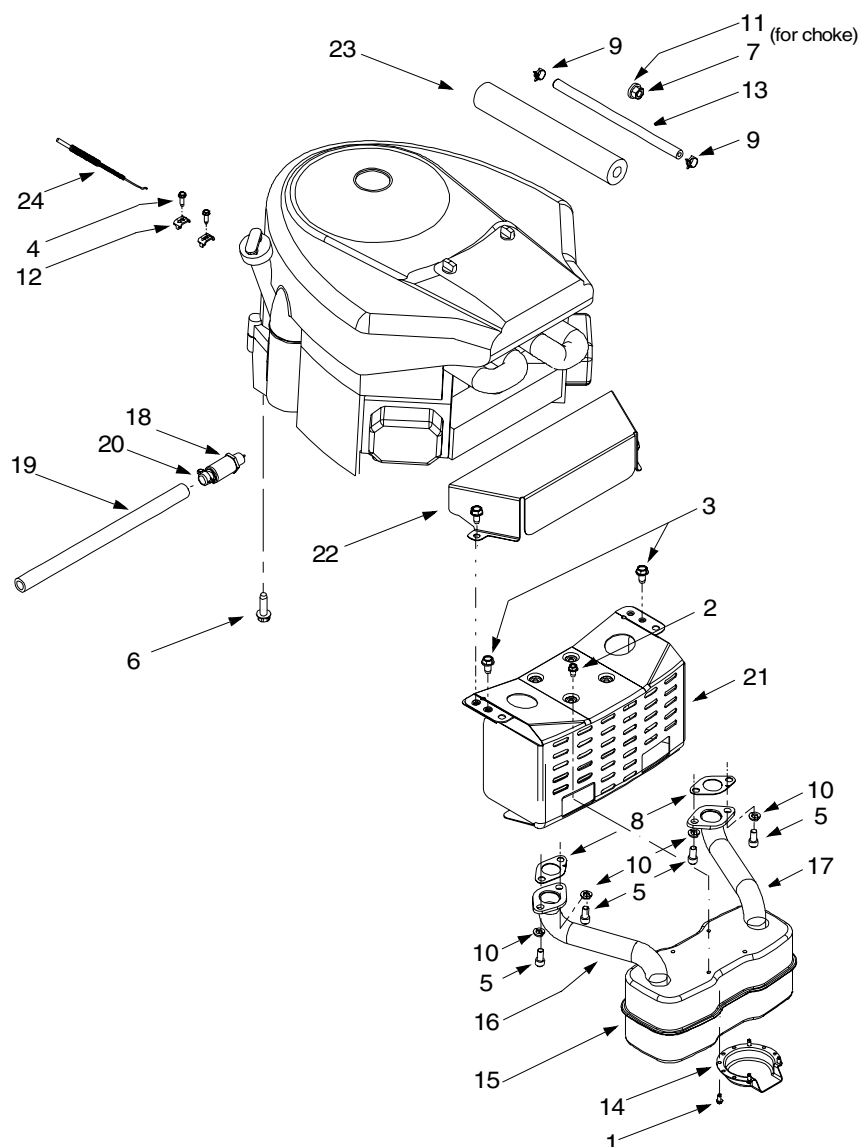

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	710-0227	Self-tapping Screw, #8-18 x .5	13	751-0535	Fuel Line Hose
2	710-0599	Self-tapping Screw, 1/4-20 x .5	14	751-0564	Muffler Deflector
3	710-0604A	Self-tapping Screw, 5/16-18 x .625	15	751-0616	Muffler, Twin Inlet
4	710-1237	Hex Screw, #10-32 x .625	16	751-0650	RH Exhaust Pipe
5	710-1314	Socket Cap Screw, 5/16-18 x .625	17	751-0651	LH Exhaust Pipe
6	710-1315	Self-tapping Screw, 3/8-16 x 1.25	18	751-3140	Oil Drain Valve
7	712-3017	Hex Nut, 3/8-16	19	751-3141	Oil Drain Hose
8	721-0460	Exhaust Gasket	20	751-3142	Oil Drain Cap
9	726-0205	Hose Clamp	21	783-0615B	Muffler Heat Shield
10	736-0119	Lock Washer, 5/16	22	783-0625B	Engine Heat Shield
11	736-0300	Flat Washer	23	722-0263	Foam (fits over fuel line)
12	751B221535	Casing Clamp	24	746-1086	Throttle Cable

Models GT-2150 & GT-2550

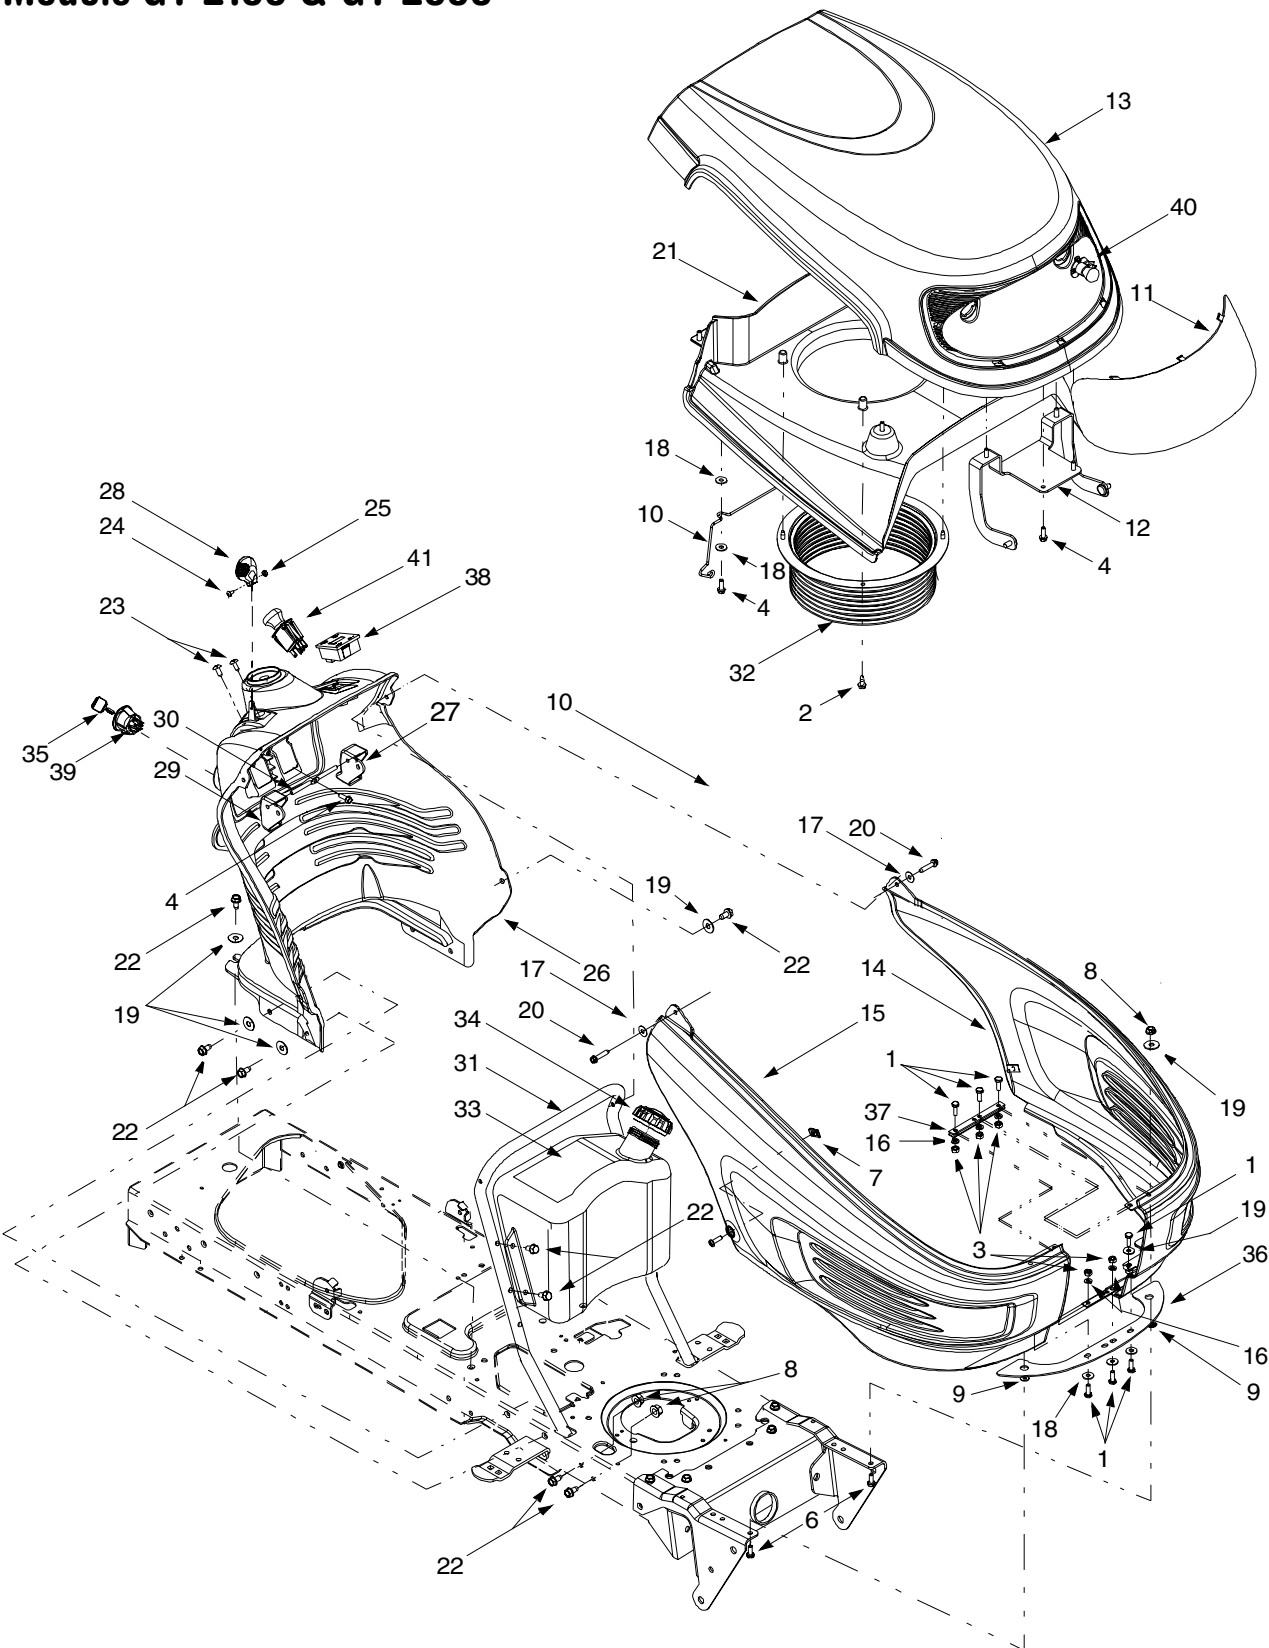


Models GT-2150 & GT-2550

REF. NO.	PART NO.	DESCRIPTION
1	710-3015	Hex Cap Screw, 1/4-20 x .75
2	710-0599	Self-tapping Screw, 1/4-20 x .5
3	712-3006	Hex Nut, 1/4-20
4	710-0895	Self-tapping Screw, 1/4-15 x .75
5	710-0924	Pan Phillips Screw, 1/4-20 x .75
6	710-0528	Hex Cap Screw, 5/16-18 x 1.25
7	712-0292	U-type Speed Nut, 1/4-20
8	712-3004A	Flange Lock Nut, 5/16-18
9	726-0201	Speed Nut
10	747-1209A	Hood Latch Rod
11	731-2286	Head Light Lens
12	683-0305	Hood Bracket Assembly
13	731-2283	Hood
14	731-2307	LH Side Panel
15	731-2308	RH Side Panel
16	736-0329	Lock Washer, 1/4
17	736-0342	Flat Washer, .283 x .75 x .030
18	736-0173	Flat Washer, .28 x .74 x .063
19	736-3078	Flat Washer, .349 x 1.0 x .063
20	710-0809	Self-tapping Screw, 1/4-20 x 1.25
21	731-2284	Hood Plenum w/o Intake Bellow
22	710-0604A	Self-tapping Screw, 5/16-18 x .625
23	710-1017	Torx Self-tapping Screw, 1/4-14 x .625
24	710-3217	Torx Screw, #8-32 x .375
25	712-0142	Hex Nut, 8-32
26	731-0071	Dash Panel, 4-style
27	731-0072	Parking Brake Button
28	731-1857	Throttle Control Lever
29	731-2106	Cruise Control Button
30	747-1155	Brake/Cruise Pivot Rod
31	749-1087	Dash Support Tube
32	731-2232	Intake Bellow
33	751-0658B	Fuel Tank, 3-gallon
34	751-0603	Fuel Cap
35	725-1745	Ignition Key w/ plastic cover
	725-1744	Ignition Key w/o plastic cover
36	731-2272	Heat Shield
37	783-1000A	Grille Support Bracket
38	725-1976	Systems Indicator Monitor
39	725-1741	Ignition Switch
40	625-0051	Headlight Assembly
41	725-1752	Electric PTO Switch
—	629-0469A	Headlight Wire Harness
—	629-1067	Tractor Wire Harness

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part, numbered 700-xxxx, is painted Oyster Gray, the part number to order would be 700-xxxx-0662.

Oyster Gray: 0662
Powder Black: 0637
Red Metallic: 0650

Models GT-2150 & GT-2550

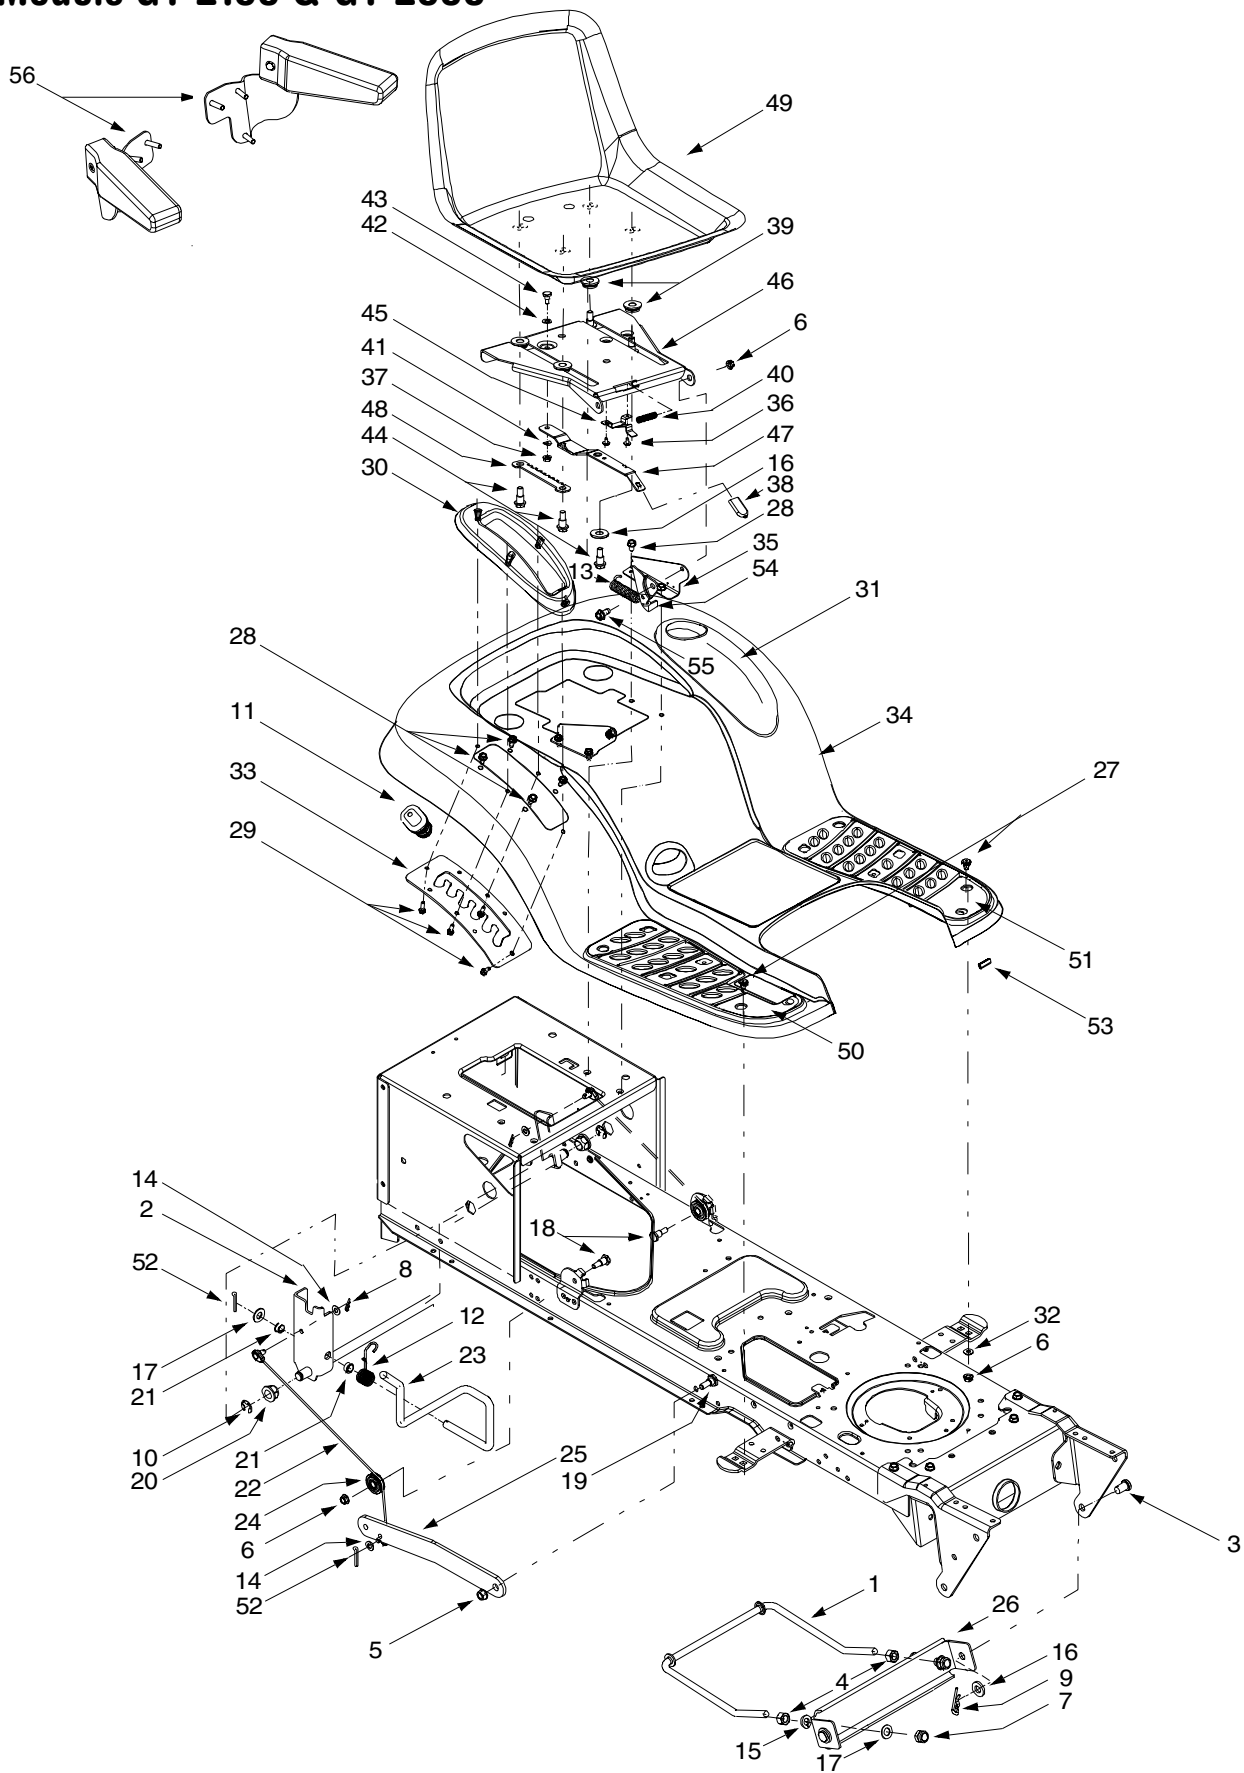


Models GT-2150 & GT-2550

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	747-1130A	Deck Stabilizer Rod	30	731-1990	Lift Lever Cover
2	683-0197	Lift Shaft Assembly	31	731-1993	Cover w/ Cup Holder
3	711-0332	Clevis Pin, .5 x .78	32	736-3078	Flat Washer, .349 x 1.0 x .063
4	712-0206	Hex Nut, 1/2-13	33	783-0677	Lift Adjustment Bracket
5	712-0431	Flange Lock Nut, 3/8-16	34	783-0685B	Fender
6	712-3004A	Flange Lock Nut, 5/16-18	35	783-0715A	Seat Mounting Bracket
7	712-3083	Hex Nut, 1/2-13	36	710-1268	Screw, #10-16 x .375
8	714-0104	Internal Cotter Pin	37	712-3027	Hex Flange Lock Nut, 1/4-20
9	714-0145	Internal Cotter Pin	38	720-0309A	Seat Adjuster Grip
10	716-0106	E-ring	39	731-1989	Spacer
11	720-0311	Handle Grip	40	732-0499	Compression Spring, .41 x 1.5
12	732-0874	Torsion Spring	41	736-0175	Spring Washer, .265 x .562 x .025
13	732-1027	Extension Spring, .872 x 3.4	42	736-0204	Flat Washer, .344 x .62 x .03
14	736-0275	Flat Washer, 5/16	43	738-0137A	Shoulder Screw, .340 x .285, 1/4-20
15	736-0921	Lock Washer, 1/2	44	738-1007	Shoulder Screw, .50 x .50, 3/8-16
16	736-3019	Flat Washer, .31 x 1.062 x .134	45	783-0611	Seat Stop
17	736-3084	Flat Washer, .51 x 1.12 x .06	46	783-0738	Seat Pivot Bracket
18	738-0138A	Hex Cap Screw, 5/16-18 x .62	47	783-0739	Seat Adjustment Lever
19	738-0143	Shoulder Screw, 3/8-16	48	783-0753	Seat Adjustment Selector
20	741-0225	Hex Flange Bearing	49	757-0388	High Back Seat w/ Arm Rests, Black
21	741-0715A	Snap Flange Bearing	50	735-0656	RH Foot Pad
22	746-0968	Lift Cable, 16.16	51	735-0657	LH Foot Pad
23	747-1111	Lift Handle		726-3046	Foot Pad Clips (Not Shown)
24	756-1154	Roller Pulley	52	714-0111	Cotter Pin
25	783-0678A	Arm Lift	53	731-0511	Trim Strip
26	783-0720A	Deck Stabilizer Bracket	54	783-0209	LH Seat Lift Bracket
27	710-0260A	Carriage Bolt, 5/16 x .62		17239A	RH Seat Lift Bracket
28	710-0604A	Self-tapping Screw, 5/16-18 x .625	55	738-0296	Shoulder Screw, .437 x .162
29	710-0895	Self-tapping Screw, 1/4-15 x .75	56	757-3009	Arm Rest Assembly (includes LH & RH)

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part, numbered 700-xxxx, is painted Oyster Gray, the part number to order would be 700-xxxx-0662.

Oyster Gray: 0662
Powder Black: 0637
Red Metallic: 0650

Models GT-2150 & GT-2550

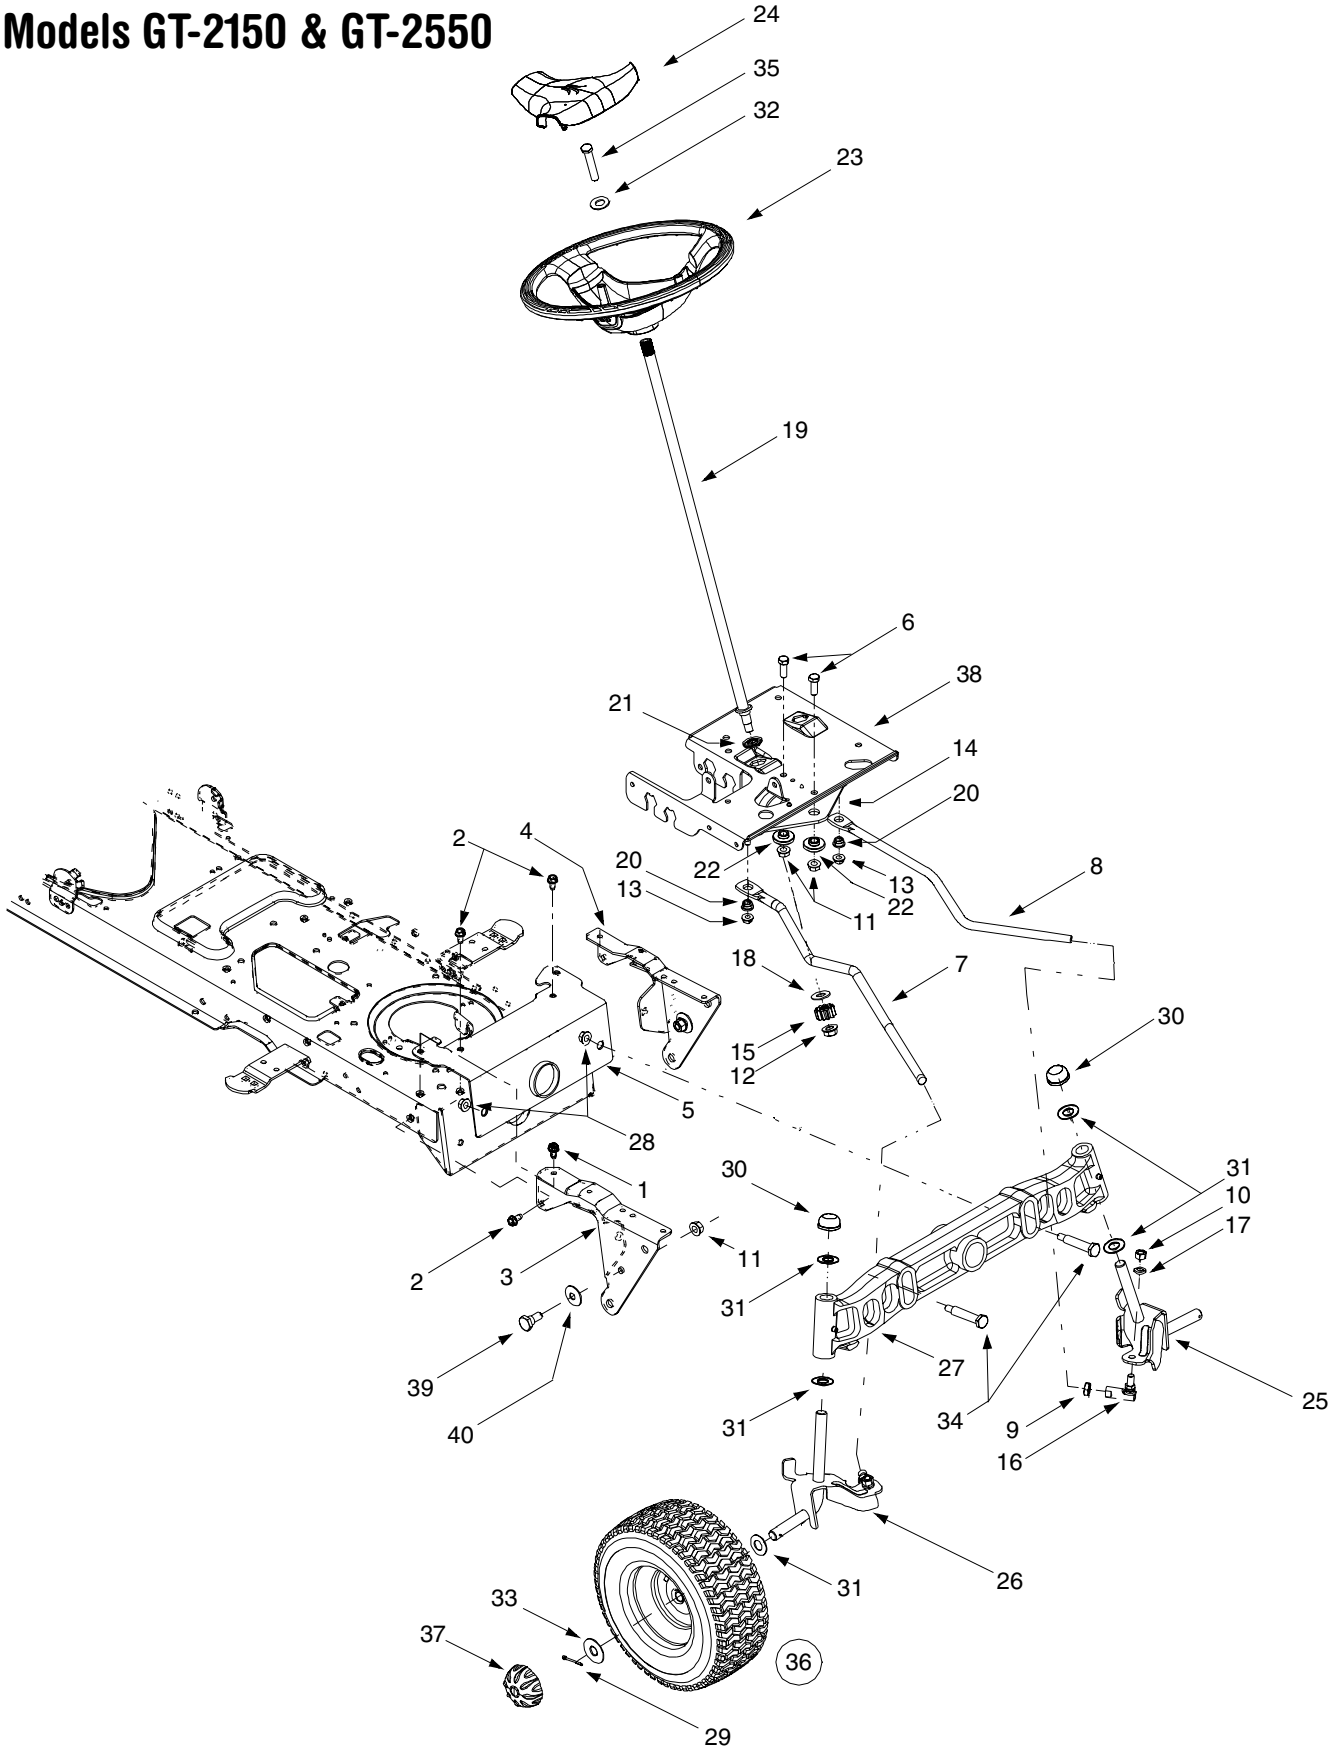


Models GT-2150 & GT-2550

REF. NO.	PART NO.	DESCRIPTION
1	710-1260A	Self-tapping Screw, 5/16-18 x .75
2	710-0604A	Self-tapping Screw, 16-18 x .625
3	683-0589	LH Pivot Support Bracket
4	683-0590	RH Pivot Support Bracket
5	783-0728	Pivot Bar Bracket
6	710-0514	Hex Cap Screw, 3/8-16 x 1 (Grade 5)
7	711-1408	RH Drag Link
8	711-1409A	LH Drag Link
9	712-0240	Jam Nut, 7/16-20 (Grade 2)
10	712-0241	Hex Nut, 3/8-24 (Grade 2)
11	712-0431	Flange Lock Nut, 3/8-16
12	712-0459	Flange Lock Nut, 7/16-20
13	712-3004A	Flange Lock Nut, 5/16-18
14	717-1550D	Steering Gear, 11/90 Ratio
15	717-1554	Steering Pinion Gear
16	723-0448A	Ball Joint, 7/16-20
17	736-0169	Lock Washer, 3/8
18	736-3084	Flat Washer, .51 x 1.12 x .06
19	738-1001A	Steering Shaft, .625 OD x 24.4
20	741-0475	Plastic Bushing, .38 ID
21	741-0656	Hex Flange Bearing, 5/8
22	738-0372	Shoulder Spacer, .38 ID
23	731-2624	Soft Touch Steering Wheel
24	731-2625	Steering Wheel Cap
25	638-0017	LH Axle Assembly, .75 Diameter
26	638-0018	RH Axle Assembly, .75 Diameter
27	719-0525B	Cast Iron Pivot Bar w/ Fittings, .750
28	712-0431	Flange Lock Nut, 3/8-16
29	714-0470	Cotter Pin
30	726-0341	Push Cap, .75
31	736-0316	Flat Washer, .78 x 1.59 x .06
32	736-0242	Bell Washer, .34 x .872
33	736-0285	Flat Washer, .635 x 1.589 x .06
34	738-1011	Shoulder Screw, .5 x 2.2, 3/8-16
35	710-0643	Hex Bolt, 5/16-18 X 1
36	634-0085	Wheel Assembly Complete, 16 x 6.5 x 8
	634-0071	Rim Only w/ Ball Bearing
	734-0255	Air Valve (Not Shown)
	734-1727	Tire Only, Square Shoulder
37	734-2290A	Hub Cap
38	783-0653D	Steering Support Bracket
39	738-0143	Shoulder Screw, 3/8-16
40	736-0331	Bell Washer, .39 x 1.13 x .062

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part, numbered 700-xxxx, is painted Oyster Gray, the part number to order would be 700-xxxx-0662.

Oyster Gray: 0662
Powder Black: 0637
Red Metallic: 0650

Models GT-2150 & GT-2550

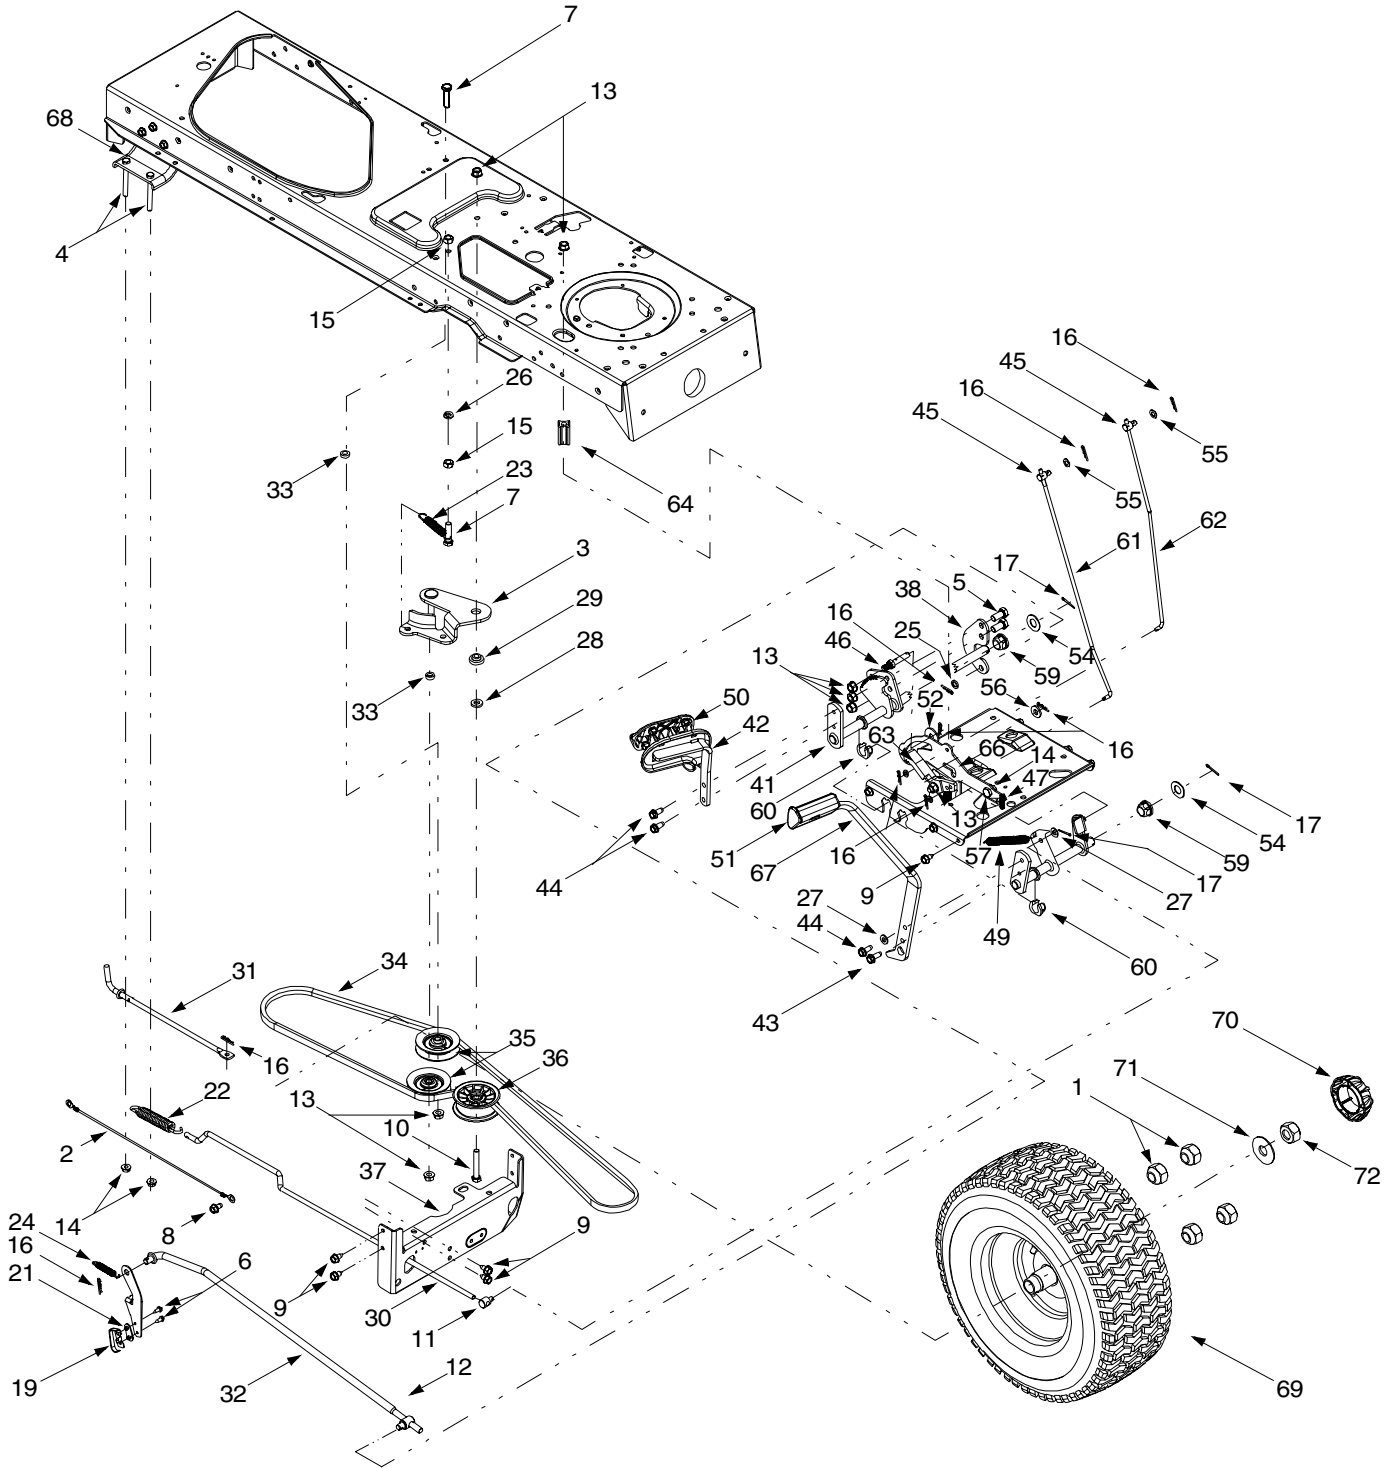


Models GT-2150 & GT-2550

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	712-3050	Lug Nut, 3/4-16	39	783-0782	Switch Actuator Bracket
2	629-0949A	Reverse/Ground Wire Harness Adapter	40	647-0031	Brake Control Assembly
3	683-0251	Double Idler Bracket Assembly	41	647-0049	Drive Control Assembly
4	710-0189	Hex Cap Screw, 5/16-18 x 3.00	42	683-0267A	Hydro Pedal Assembly
5	710-0216	Hex Cap Screw, 3/8-16 x .75	43	710-1650	Self-tapping Screw, 5/16-18 x .875
6	710-0227	Screw, #8-18 x .5	44	710-1260A	Self-tapping Screw, 5/16-18 x .75
7	710-0344	Hex Cap Screw, 3/8-16 x 1.5	45	711-0736	Ferrule, 1/4-20
8	710-0599	Self-tapping Screw, 1/4-20 x .50	46	711-1363	Pin, 3/8-16 x 2.43
9	710-0604A	Self-tapping Screw, 5/16-18 x .625	47	732-0437	Compression Spring, .34 OD x 1.0
10	710-3011	Hex Cap Screw, 3/8-16 x 2.25	48	732-0955	Extension Spring, .50 OD x 1.41
11	711-0677	Ferrule, 5/16-18	49	732-0963	Extension Spring, .50 OD x 6.37
12	711-0832	Ferrule, 3/8-24	50	735-0662	Drive Pedal Pad
13	712-0431	Flange Lock Nut, 3/8-16	51	735-3049	Brake Pedal Pad
14	712-3004A	Flange Lock Nut, 5/16-18	52	736-0133	Flat Washer, .411 x 1.25 x 1.0
15	712-3017	Hex Nut, 3/8-16	53	736-0142	Flat Washer, .281 x .50 x .063
16	714-0104	Internal Cotter Pin	54	736-0187	Flat Washer, .64 x 1.24 x .06
17	714-0111	Cotter Pin	55	736-0204	Flat Washer, .344 x .062 x .03
18	725-0157	Cable Tie	56	736-3004	Flat Washer, .406 x .875 x .105
19	725-1644	Short Spring Switch	57	738-0155	Shoulder Screw, .437 x 1.62
20	726-0154	Push-mount Cable Tie	58	738-0507B	Shoulder Screw, .5 x .434
21	726-0320	Insulator Nut Plate	59	741-0225	Hex Flange Bearing
22	732-0716	Extension Spring, .59 x 4.0	60	741-3065A	Split Hex Flange Bearing
23	732-0965	Extension Spring, .5 x 3.5	61	747-1137	Cruise Control Rod
24	732-3118	Extension Spring, 3/8 x 1.44	62	747-1138	Brake Lock Control Rod
25	736-0140	Flat Washer, .385 x .62 x .063	63	748-0413	Cruise Latch
26	736-0169	Lock Washer, 3/8	64	748-0415A	Spacer, 5/16 x 1.54
27	736-0275	Flat Washer, .344 x .688 x .065	65	783-0653C	Steering Support Bracket
28	736-3010	Flat Washer, .407 x .812 x .135	66	783-0663A	Drive Lockout Bracket
29	738-0372	Shoulder Spacer, .38	67	783-0773	Brake Pedal
30	747-1119	Hydrostatic Control Rod	68	783-0693	Transmiksion Axle Bracket
31	747-1121	Hydrostatic Bypass Rod	69	634-0132	Wheel Assembly Complete, 23 x 9.5 x 12
32	747-1122	Hydrostatic Brake Rod		634-0194	Rim Only
33	750-0535	Spacer, .376 x .625 x .22		734-0255	Air Valve (Not Shown)
34	754-0349	Drive Belt		734-1728	Tire Only, Square Shoulder
35	756-0116	V-idler Pulley, 3.06		734-2290	Hub Cap
36	756-0981A	Flat Idler Pulley, 2.75	70	736-0316	Flat Washer, .780 x 1.59 x .062
37	783-0667A	Transmission Torque Bracket	71	712-3026	Jam Nut, 3/4-16
38	783-0745	Speed Control Bracket	72	618-0379	Hydrostatic Transmission Assembly
			—		

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part, numbered 700-xxxx, is painted Oyster Gray, the part number to order would be 700-xxxx-0662.
Oyster Gray: 0662
Powder Black: 0637
Red Metallic: 0650

Models GT-2150 & GT-2550

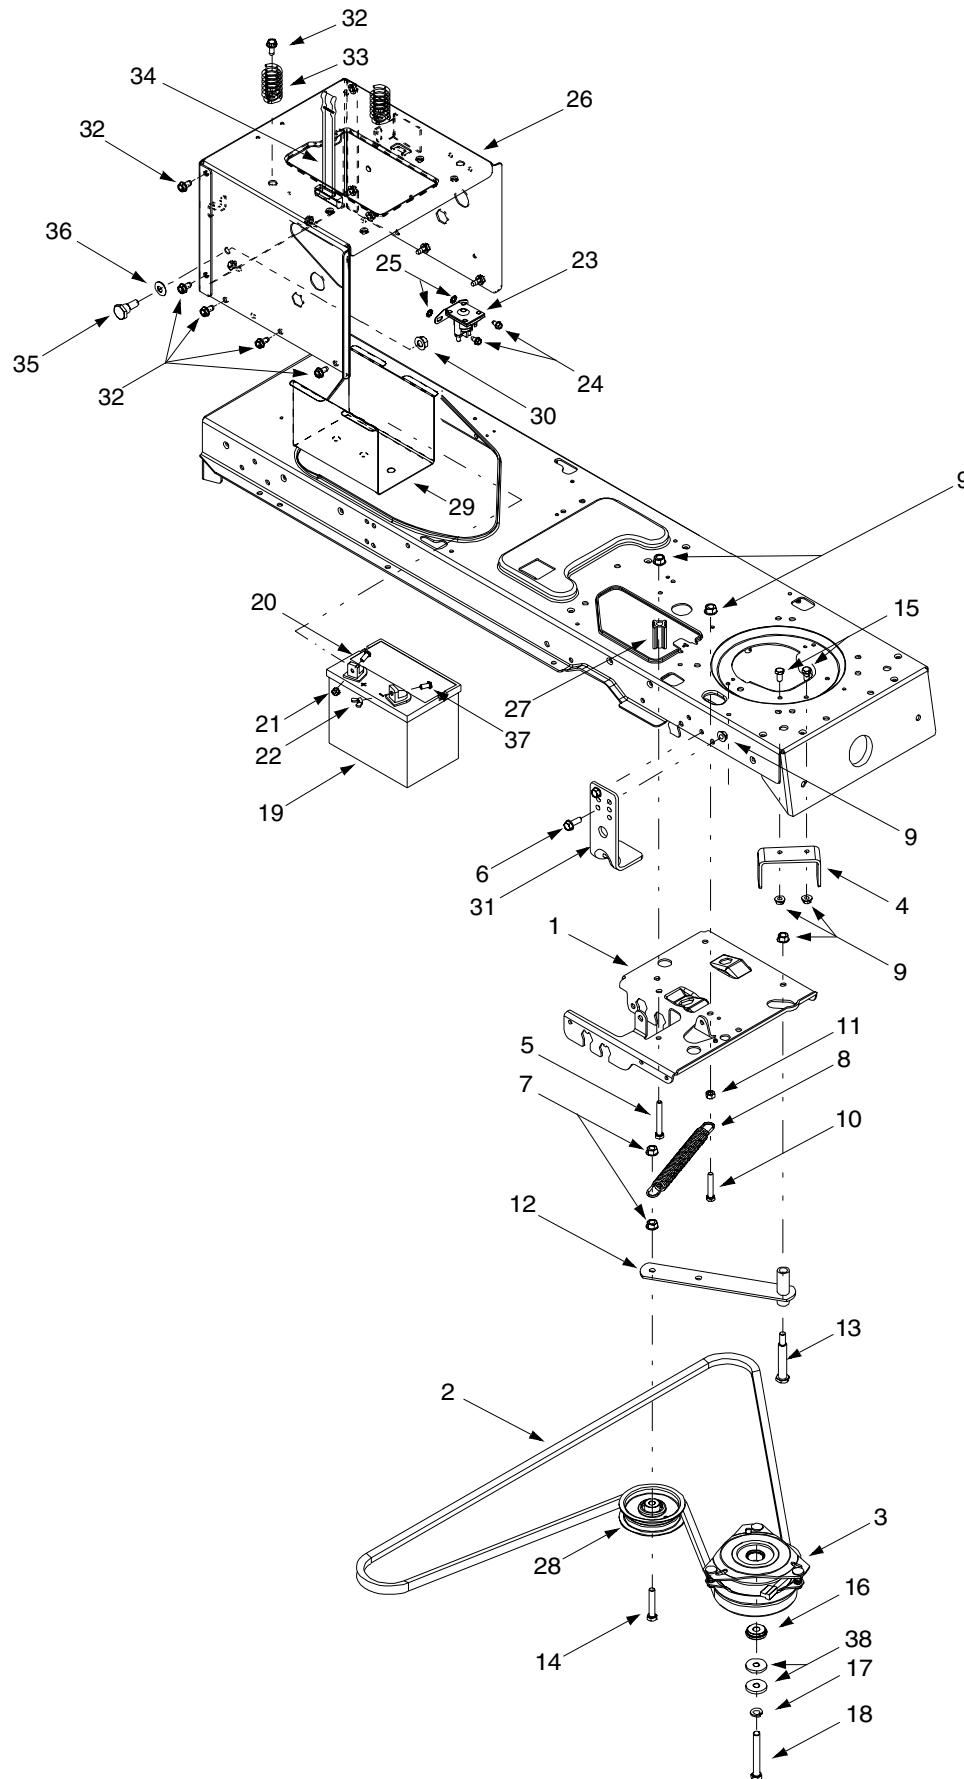


Models GT-2150 & GT-2550

REF. NO.	PART NO.	DESCRIPTION
1	783-0653D	Steering Support Bracket
2	754-0476	PTO Belt (Model GT-2150)
	754-0475	PTO Belt (Model GT-2550)
3	717-1709	Electric PTO Clutch
4	783-1003	Electric Clutch Anti-rotation Bracket
5	710-0859	Hex Cap Screw, 3/8-16 x 2.5
6	710-1238	Hex Head Washer Screw, 5/16-18 x .875
7	712-0431	Flange Lock Nut, 3/8-16
8	732-0978	Extension Spring, .62 x 5.62
9	712-3004A	Flange Lock Nut, 5/16-18
10	710-3180	Hex Cap Screw, 5/16-18 x 1.75
11	712-3010	Hex Nut, 5/16-18
12	683-0294	Idler Bracket Assembly
13	738-3056	Shoulder Screw, 1/2 x 2.5
14	710-3144	Hex Cap Screw, 3/8-16 x 2.0
15	710-3025	Hex Cap Screw, 5/16-18 x .625
16	738-0785	Shoulder Spacer, 1.38 x .445 x .36
17	736-0171	Lock Washer, 7/16
18	710-3157	Hex Cap Screw, 7/16-20 x 3.25 (Grade 5)
19	725-1706	12-volt Battery, 270 CCA
20	710-0751	Hex Cap Screw, 1/4-20 x .62
21	712-0271	Hex Sems Nut, 1/4-20
22	712-3087	Wing Nut, 1/4-20
23	725-1426	Solenoid, 12-Volt, 100 Amp
24	710-0599	Self Tapping Screw, 1/4-20 x .5
25	736-0222	Lock Washer, 1/4
26	783-1033A	Hitch Plate
27	748-0415A	Spacer, 3/8 x 1.54
28	756-0627B	Idler Pulley, 3.5
29	783-0349	Battery Tray
30	712-0459	Flange Lock Nut, 7/16-20
31	783-0891B	Deck Stop
32	710-0604A	Self Tapping Screw, 5/16-18 x .625
33	732-3080	Compression Spring, 1.28 x 3.5
34	723-0444	Battery Strap
35	738-1020	Shoulder Screw, .625 x .5, 7/16-20
36	736-0407	Bell Washer, .45 x 1.0 x .062
37	738-1132	Shoulder Screw, 1/4-20, .25 x .15
38	736-0322	Flat Washer, .45 x 1.25 x .164

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part, numbered 700-xxxx, is painted Oyster Gray, the part number to order would be 700-xxxx-0662.
Oyster Gray: 0662
Powder Black: 0637
Red Metallic: 0650


Model GT-2150

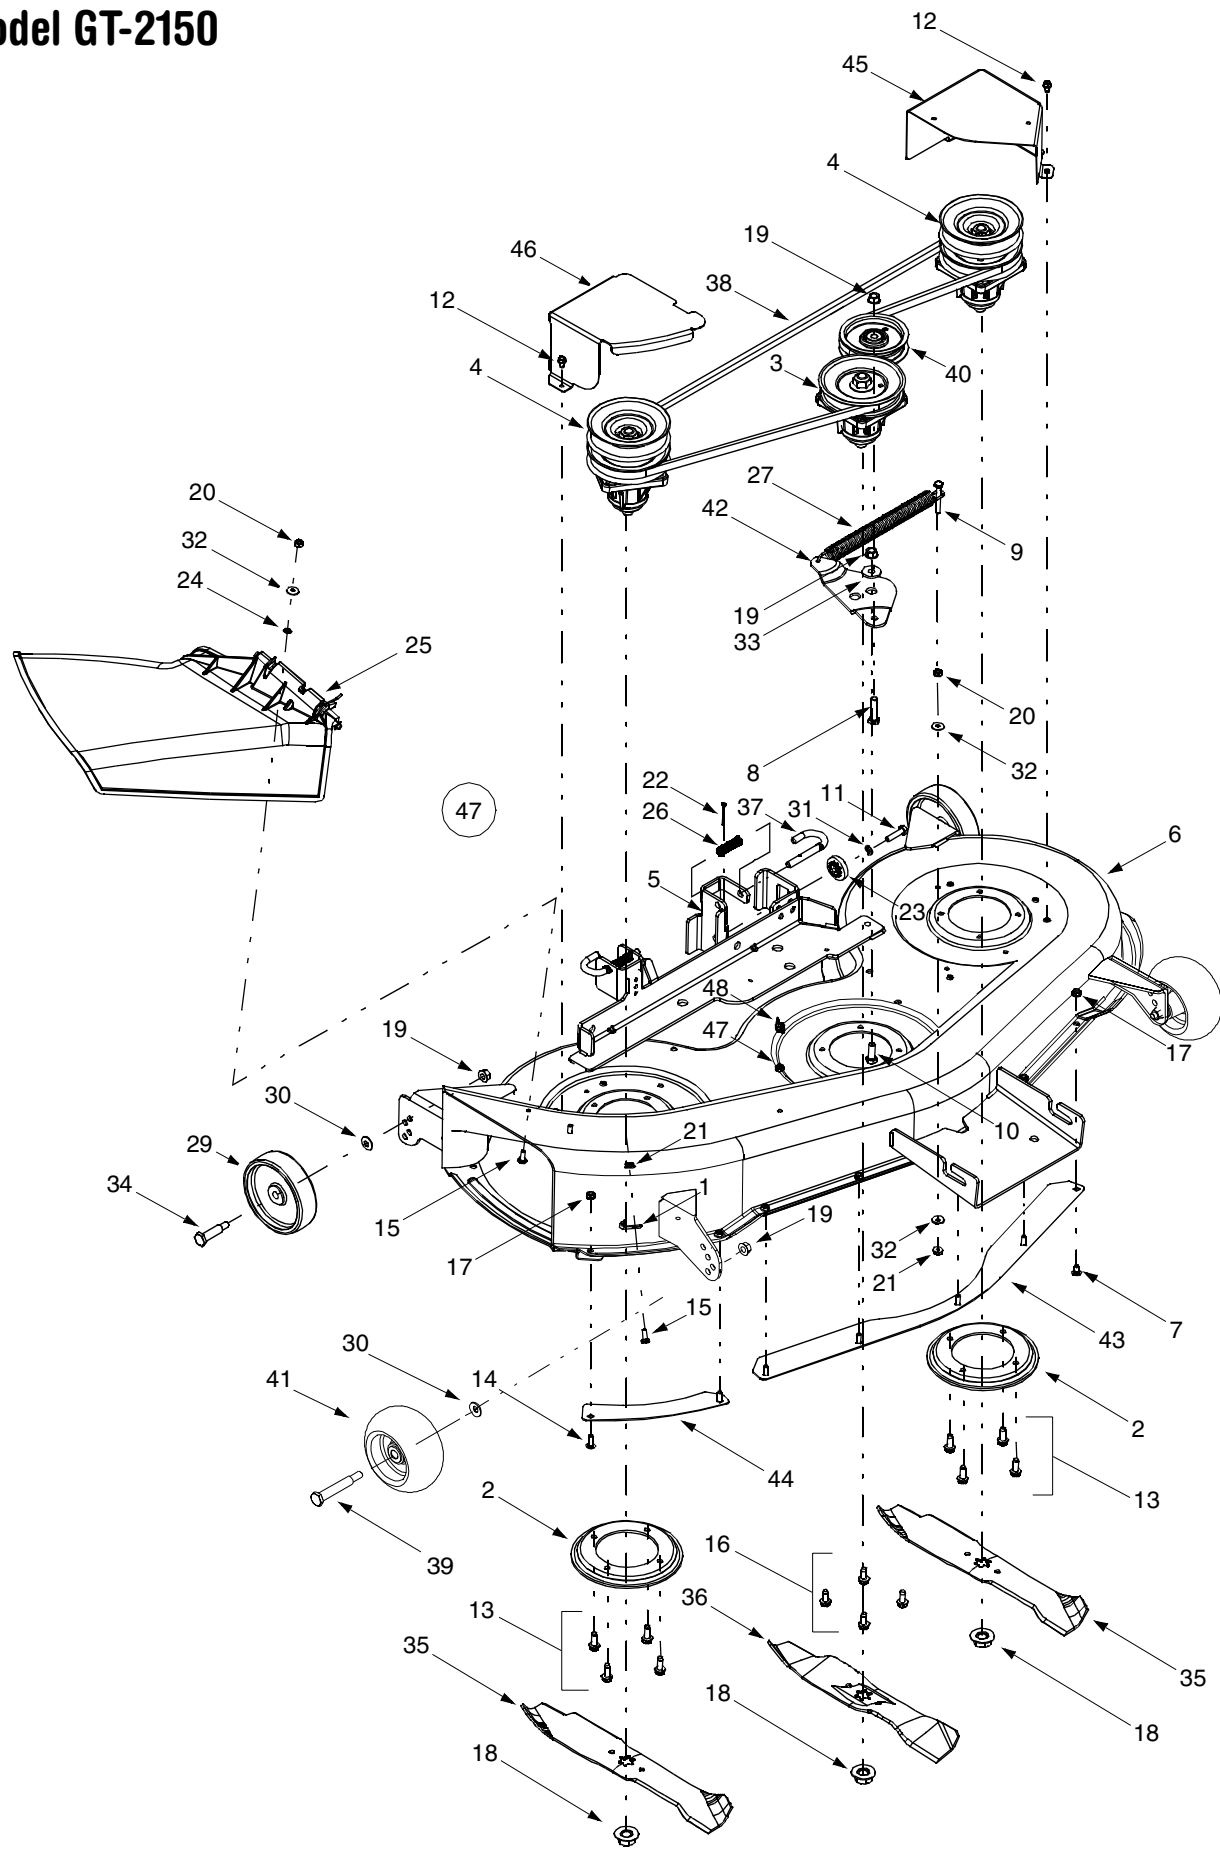

REF. NO.	PART NO.	DESCRIPTION
1	16606	Retainer Hook
2	17982	Spindle Reinforcement Plate
3	618-0430A	Spindle Assembly, 5.0 Dia.
	756-1187	Pulley Only
4	618-0431	Double Pulley Spindle Assembly
	756-0603	Double Pulley Only
5	683-0254	Deck Adjustment Bracket Assembly
6	683-0199C	46-inch Deck Shell
7	710-0167	Carriage Screw, 1/4-20 x .50
8	710-0344	Hex Cap Screw, 3/8-16 x 1.5
9	710-0501	Hex Cap Screw, 1/4-20 x 2.0
10	710-0514	Hex Cap Screw, 3/8-16 x 1.0
11	710-0528	Hex Cap Screw, 5/8-18 x 1.25
12	710-0599	Self-tapping Screw, 1/4-20 x .5
13	710-0650	Self-tapping Screw, 15/16-18 x .875
14	710-0703	Hex Screw, 1/4-20 x .75
15	710-0751	Hex Cap Screw, 1/4-20 x .62
16	710-1260A	Self-tapping Screw, 5/16-18 x .75
17	712-0271	Hex Sems Nut, 1/4-20
18	712-0417A	Hex Flange Nut, 5/8-18
19	712-0431	Flange Lock Nut, 3/8-16
20	712-3006	Hex Nut, 1/4-20
21	712-3027	Hex Flange Lock Nut, 1/4-20
22	714-0470	Cotter Pin, 1/8 x 1.25
23	717-1553A	Deck Adjustment Gear
24	726-0233	Push Nut. .25 x .5
25	731-1032B	Side Discharge Chute Assembly
26	732-0306	Compression Spring, .406 x .531 x 1.75
27	732-0594A	Extension Spring, .91 x 7.3
28	710-0578	Screw, 1/4-20 x 1.5
29	734-0973	Deck Wheel, 5 x 1.38
30	736-0105	Bell Washer, .401 x .87 x .063
31	736-0119	Lock Washer, 5/16
32	736-0270	Bell Washer, .265 x .75 x .062
33	738-0347	Shoulder Spacer, .625 x 1.16
34	738-0373	Shoulder Screw
35	742-0611	Three-in-one Blade, Star Center, 16.28"
36	742-0612	Three-in-one Blade, Star Center, 14.88"
37	747-1116	Deck Release Pin
38	754-0349	Deck Belt, Poly
39	738-3056	Shoulder Screw, 1/2-2.5
40	756-0627B	Idler Pulley, 3.5
41	734-3058B	Deck Wheel, 5.0
42	783-0139A	Idler Bracket
43	783-0141	Center Deck Skirt
44	783-0142	RH Deck Skirt
45	783-0747	LH Belt Cover
46	783-0805A	RH Belt Cover
47	753-0875	46-inch Deck Assembly Complete

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Models GT-2550

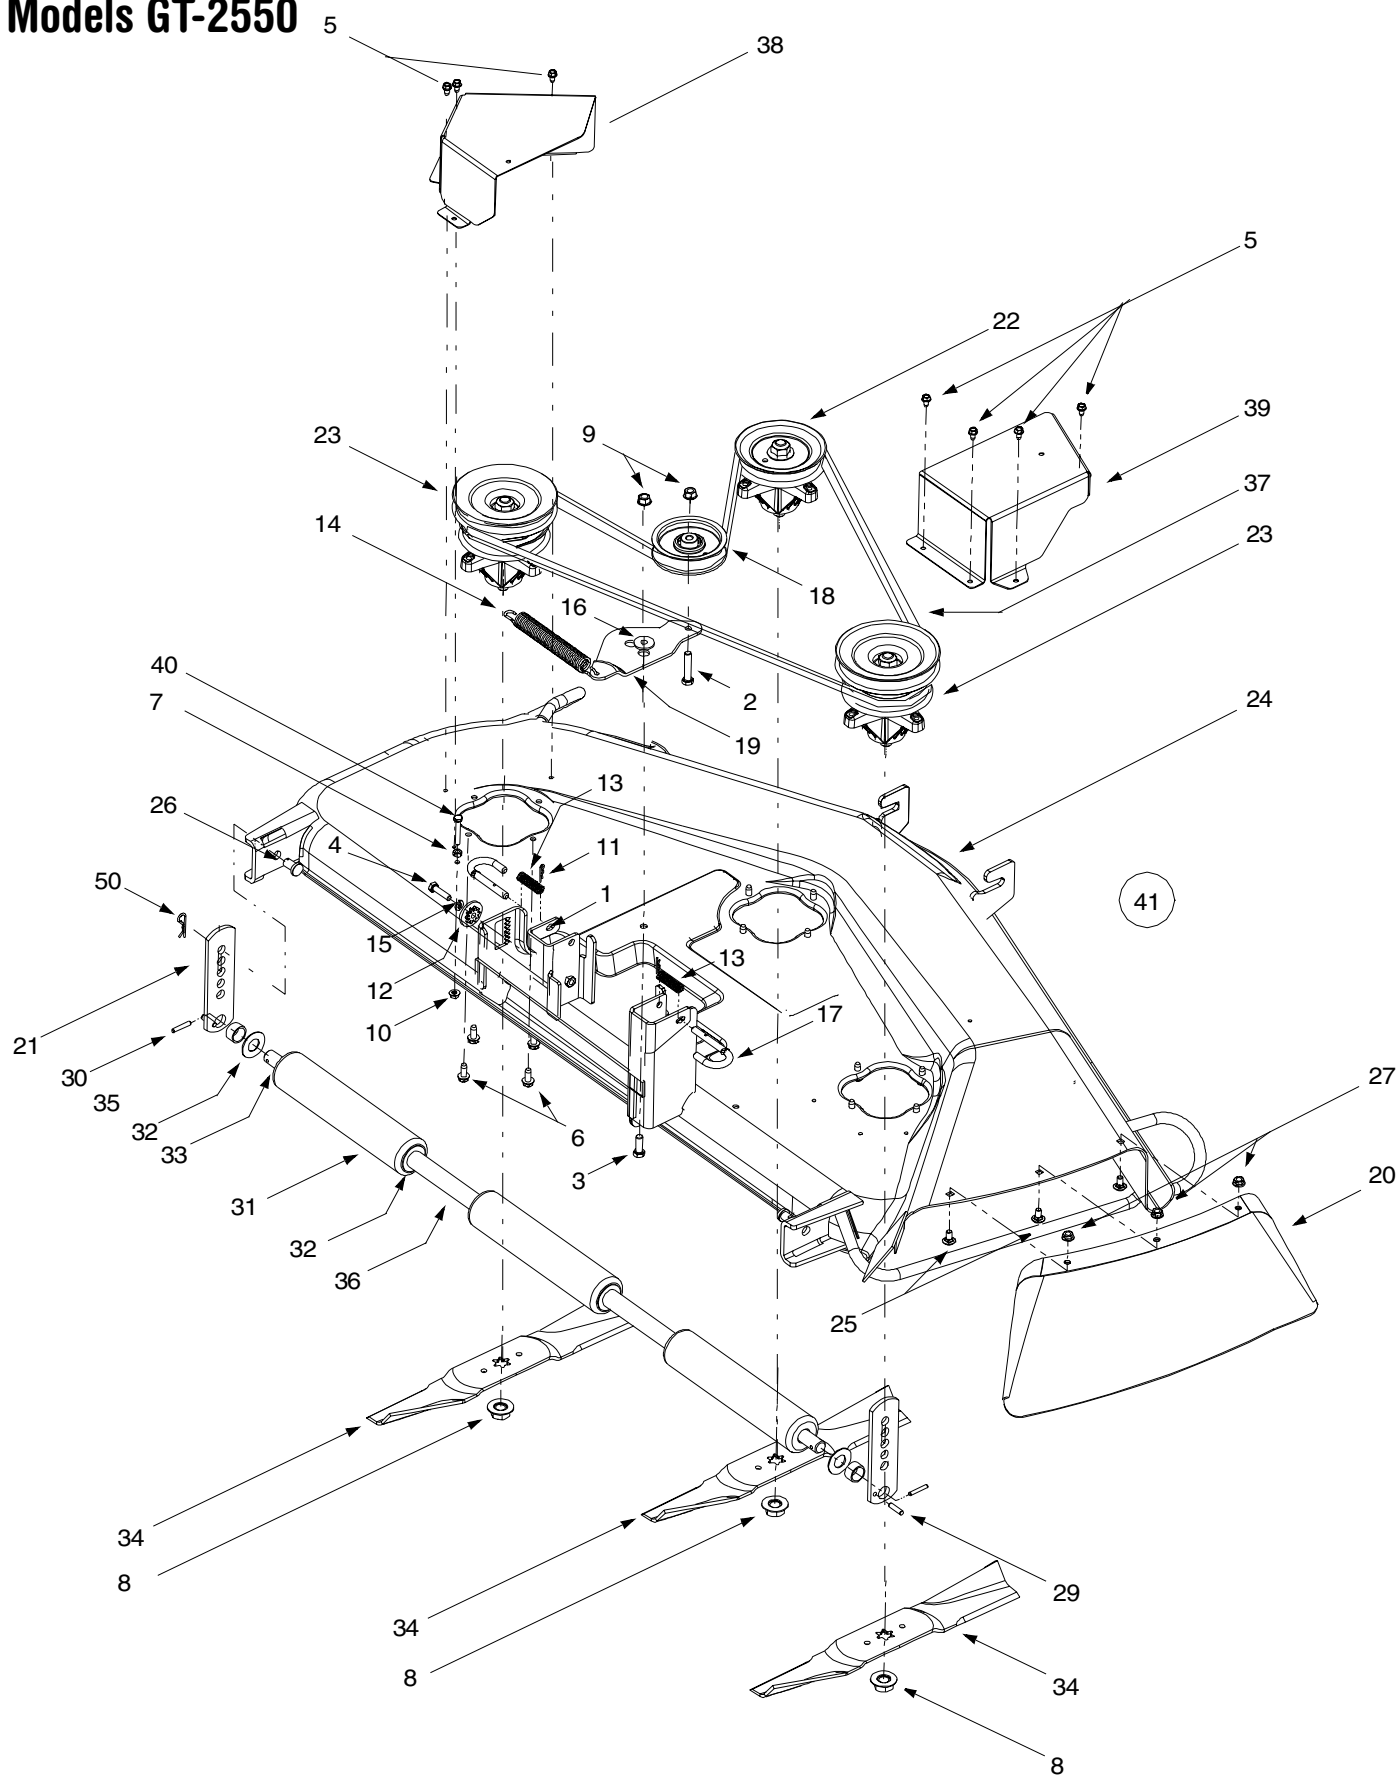

REF. NO.	PART NO.	DESCRIPTION
1	710-0167	Carriage Screw, 1/4-20 x .5
2	710-0347	Hex Cap Screw, 3/8-16 x 1.75
3	710-0514	Hex Cap Screw, 3/8-16 x 1.0
4	710-0528	Hex Cap Screw, 5/16-18 x 1.25
5	710-0599	Self Tapping Screw, 1/4-20 x .5
6	710-1260A	Self Tapping Screw, 5/16-18 x .75
7	712-0291	Center Lock Nut, 1/4-20
8	712-0417A	Hex Flange Nut, 5/8-18
9	712-0431	Flange Lock Nut, 3/8-16
10	712-3027	Hex Flange Lock Nut, 1/4-20
11	714-0104	Internal Cotter Pin, .072 x 1.12
12	717-1553A	Deck Adjustment Gear
13	732-0306	Compression Spring, .406 x .531 x 1.75
14	732-0594A	Extension Spring, .91 x 7.33
15	736-0119	Lock Washer, 5/16
16	738-0347	Shoulder Spacer, .625 x .169
17	747-1116	Deck Release Pin
18	756-0627B	Flat Idler Pulley, 3.5 OD
19	783-0139A	Idler Bracket
20	12649	Chute Guard
21	12650	Height Adjustment Bracket
22	618-0428A	Center Spindle Assembly, 5 Dia.
	756-1187	Pulley Only
23	618-0429	Double Pulley Spindle Assembly
	756-1041	Double Pulley Only
24	683-0196	50-inch Deck Shell
25	710-0260A	Carriage Bolt, 5/16-18 x .62
26	711-0332	Clevis Pin, .50 Dia. x .78
27	712-3004A	Hex Flange Lock Nut, 5/16-18 (Grade 5)
28	714-0145	Click Pin, .092 x 1.64
29	715-0108	Spring Pin, 1/4 Dia. x 1
30	715-0246	Spring Pin, 3/16 x 1.25
31	731-0335	Deck Roller
32	736-0316	Flat Washer, .78 x 1.59 x .06
33	738-0295	Deck Roller Shaft, .75 Dia. x 47.12
34	742-0623	Blade, Star Center, 17.3
35	750-0212	Spacer, .752 x 1.0 x .53
36	750-0288	Spacer, .82 x 1.0 x 5.75
37	754-0291A	Deck Belt
38	783-0746	Belt Cover, L.H.
39	783-0793	Belt Cover, R.H.
40	710-3288	Hex Cap Screw, 1/4-20 x 1.62
41	753-0877	50-inch Deck Assembly Complete

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part, numbered 700-xxxx, is painted Oyster Gray, the part number to order would be 700-xxxx-0662.
Oyster Gray: 0662
Powder Black: 0637
Red Metallic: 0650

