



## SECTION 9: PARTS LIST FOR LT-1800

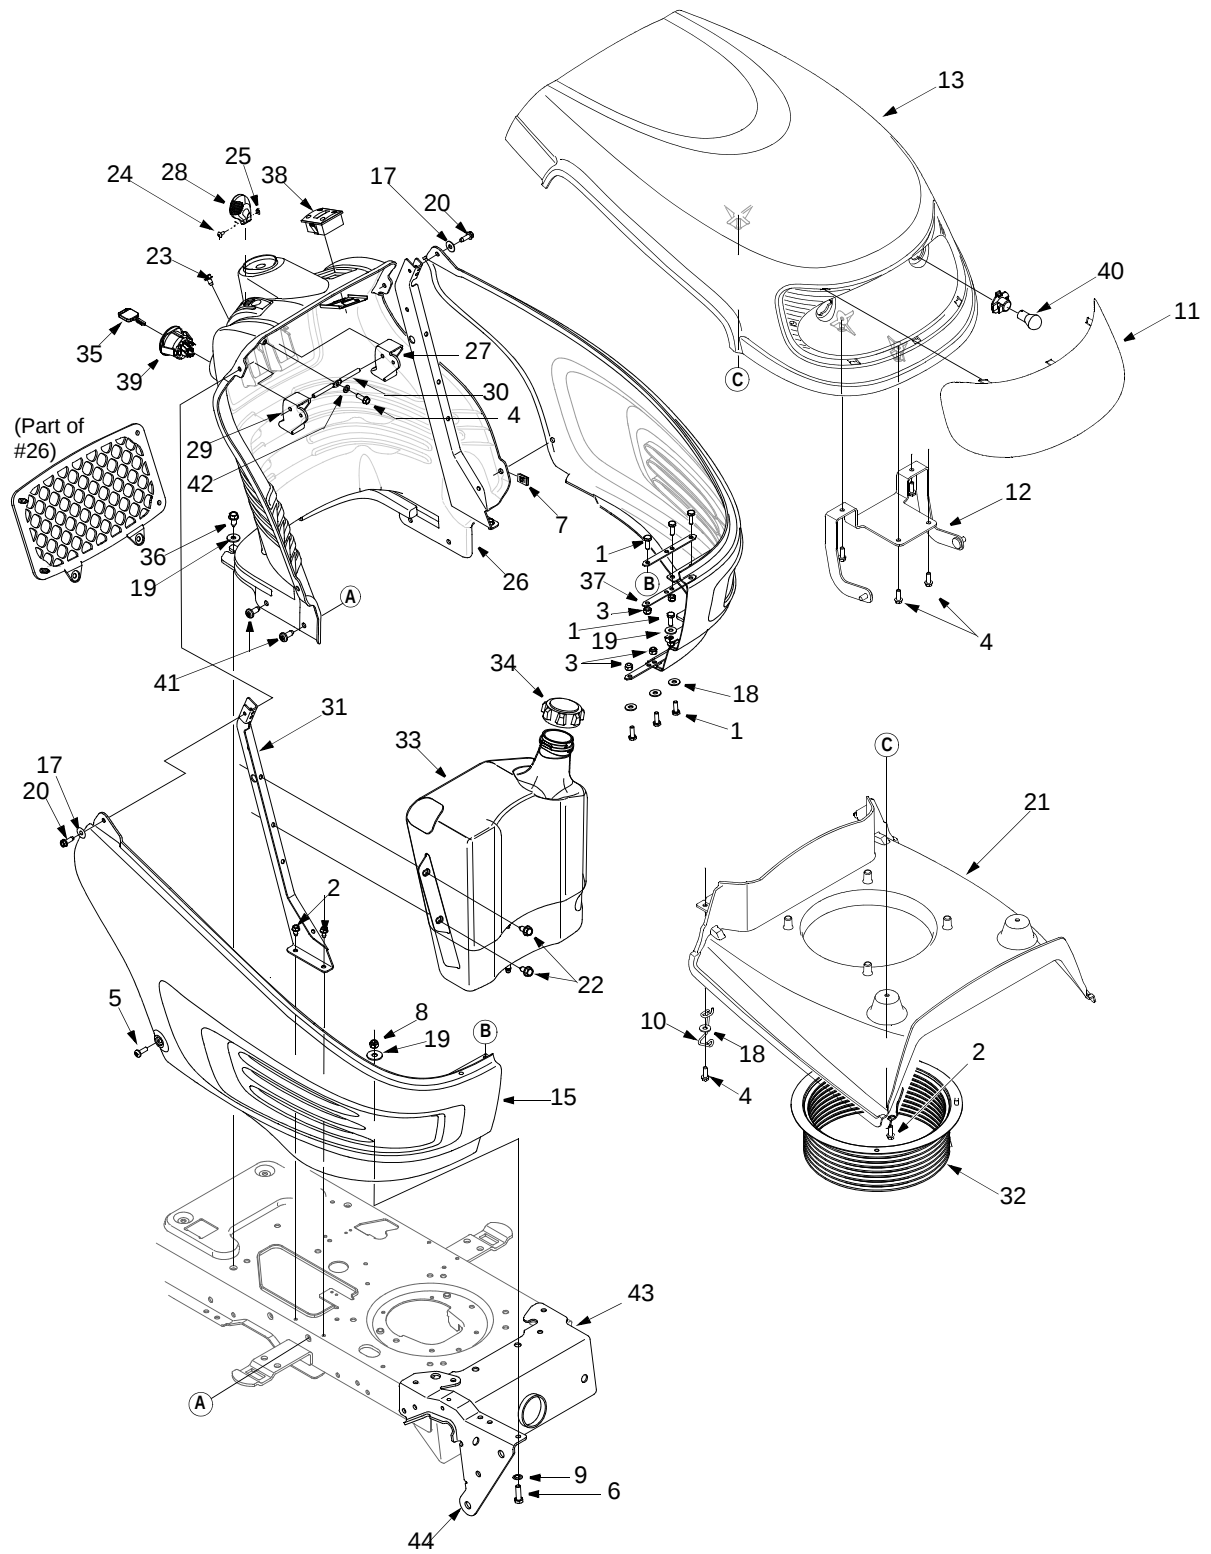

# Model LT-1800

| Ref. No. | Part No.  | Description                            | Ref. No. | Part No.   | Description                       |
|----------|-----------|----------------------------------------|----------|------------|-----------------------------------|
| 1        | 710-3015  | Hex Cap Screw, 1/4-20 x .75            | 26       | 631-04035A | Dash Panel, 4-style w/ Cargo Net  |
| 2        | 710-0599  | Self-tapping Screw, 1/4-20 x .5        | 27       | 731-04214  | Parking Brake Button              |
| 3        | 712-0324  | Lock Nut, 1/4-20                       | 28       | 731-1857   | Throttle Control Lever            |
| 4        | 710-0895  | Self-tapping Screw, 1/4-15 x .75       | 29       | 731-04213  | Cruise Control Button             |
| 5        | 710-0924  | Pan Phillips Screw, 1/4-20 x .75       | 30       | 747-1155   | Brake/Cruise Pivot Rod            |
| 6        | 710-0376  | Hex Cap Screw, 5/16-18 x 1.0           | 31       | 783-04285  | Dash Support Plate RH             |
| 7        | 712-0292  | U-type Speed Nut, 1/4-20               |          | 783-04323  | Dash Support Plate LH             |
| 8        | 712-0429  | Lock Nut, 5/16-18                      | 32       | 731-2232   | Intake Bellow                     |
| 9        | 726-0201  | Speed Nut                              | 33       | 751-0659C  | Fuel Tank, 2-gallon               |
| 10       | 747-2127  | Hood Latch Rod                         | 34       | 751-0603   | Fuel Cap                          |
| 11       | 731-2286  | Head Light Lens                        | 35       | 725-1745   | Ignition Key w/ plastic cover     |
| 12       | 683-0305  | Hood Bracket Assembly                  |          | 725-1744   | Ignition Key w/o plastic cover    |
| 13       | 731-2283A | Hood                                   | 36       | 710-0726   | Self-tapping Screw, 5/16-18 x .75 |
| 14       | 731-2327A | LH Side Panel                          | 37       | 783-1000A  | Grille Support Bracket            |
| 15       | 731-2328A | RH Side Panel                          | 38       | 725-04036  | Systems Indicator Monitor         |
| 16       | 736-0329  | Lock Washer, 1/4                       | 39       | 725-1741   | Ignition Switch                   |
| 17       | 736-0342  | Flat Washer, .283 x .75 x .030         | 40       | 625-0051   | Headlight Assembly                |
| 18       | 736-0173  | Flat Washer, .28 x .74 x .063          | 41       | 710-1611B  | Self-tapping Screw, 5/16-18 x .75 |
| 19       | 736-3078  | Flat Washer, .349 x 1.0 x .063         | 42       | 736-0142   | Flat Washer                       |
| 20       | 710-0809  | Self-Tapping Screw, 1/4-20 x 1.25      | 43       | 783-0728   | Pivot Bar Bracket                 |
| 21       | 731-2284  | Hood Plenum w/o Intake Bellow          | 44       | 783-0726B  | Pivot Bracket Support RH          |
| 22       | 710-0604A | Self-Tapping Screw, 5/16-18 x .625     |          | 783-0727A  | Pivot Bracket Support LH          |
| 23       | 710-1017  | Torx Self-Tapping Screw, 1/4-14 x .625 | —        | 629-04083  | Headlight Wire Harness            |
| 24       | 710-3217  | Torx Screw, #8-32 x .375               | —        | 629-1071   | Tractor Wire Harness              |
| 25       | 712-0142  | Hex Nut, 8-32                          |          |            |                                   |


# Model LT-1800

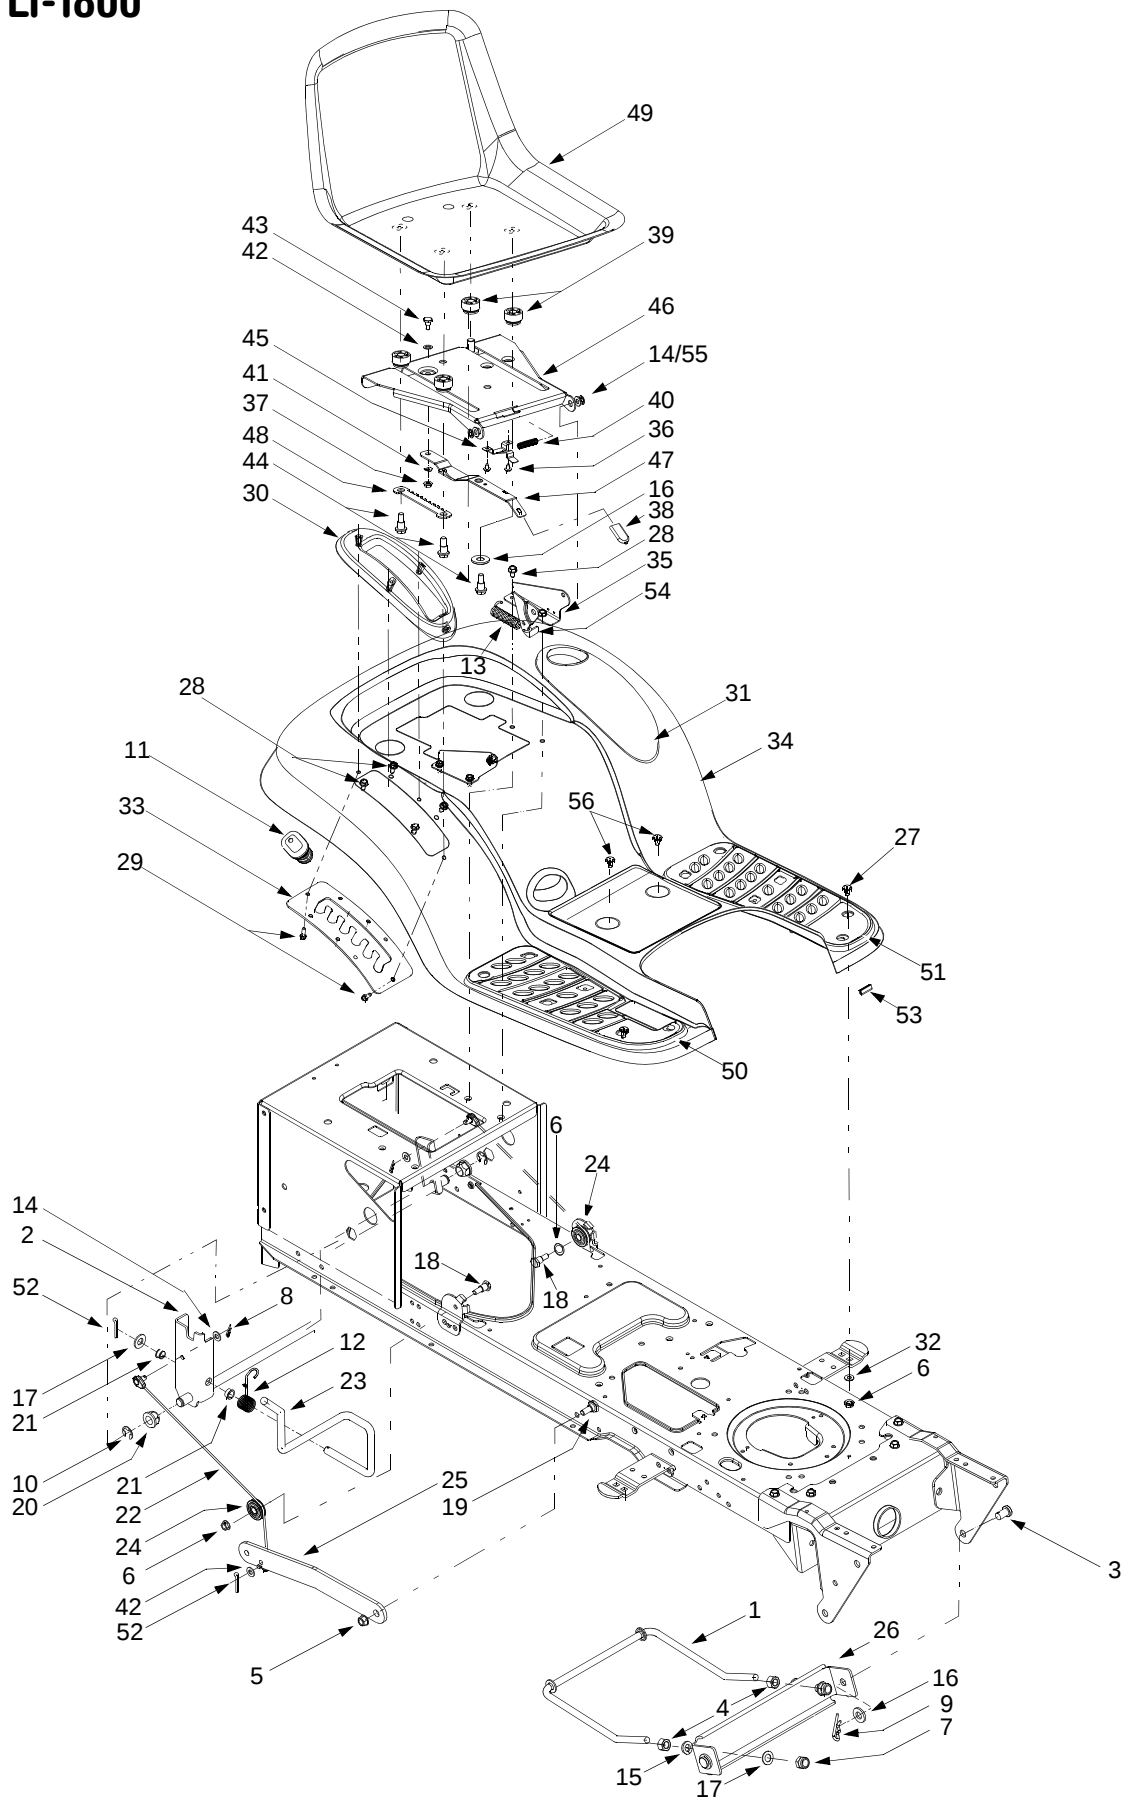

# Model LT-1800

| Ref. No. | Part No.  | Description                        | Ref. No. | Part No.   | Description                         |
|----------|-----------|------------------------------------|----------|------------|-------------------------------------|
| 1        | 747-1130B | Deck Stabilizer Rod                | 30       | 731-1990   | Lift Lever Cover                    |
| 2        | 683-0197B | Lift Shaft Assembly                | 31       | 731-2104C  | Cover w/ Cup Holder                 |
| 3        | 711-0332  | Clevis Pin, .5 x .78               | 32       | 736-3078   | Flat Washer, .349 x 1.0 x .063      |
| 4        | 712-3083  | Lock Nut, 1/2-13                   | 33       | 783-0677   | Lift Adjustment Bracket             |
| 5        | 712-0130  | Lock Nut, 3/8-16                   | 34       | 783-04333  | Fender                              |
| 6        | 712-0429  | Lock Nut, 5/16-18                  | 35       | 783-1489   | Seat Mounting Bracket               |
| 7        | 712-3083  | Hex Nut, 1/2-13                    | 36       | 710-1268   | Screw, #10-16 x .375                |
| 8        | 714-0104  | Internal Cotter Pin                | 37       | 712-0324   | Hex Lock Nut, 1/4-20                |
| 9        | 714-04023 | Internal Cotter Pin                | 38       | 720-0309A  | Seat Adjuster Grip                  |
| 10       | 716-0106A | E-ring                             | 39       | 731-04074  | Spacer                              |
| 11       | 720-0311  | Handle Grip                        | 40       | 732-0499   | Compression Spring, .41 x 1.5       |
| 12       | 732-0874  | Torsion Spring                     | 41       | 736-0175   | Spring Washer, .265 x .562 x .025   |
| 13       | 732-1027  | Extension Spring, .872 x 3.4       | 42       | 736-0204   | Flat Washer, .344 x .62 x .03       |
| 14       | 736-0275  | Flat Washer, 5/16                  | 43       | 738-0137A  | Shoulder Screw, .340 x .285, 1/4-20 |
| 15       | 736-0921  | Lock Washer, 1/2                   | 44       | 738-0966   | Shoulder Screw, .50 x .925, 3/8-16  |
| 16       | 736-3019  | Flat Washer, .31 x 1.062 x .134    | 45       | 783-0611   | Seat Stop                           |
| 17       | 736-3084  | Flat Washer, .51 x 1.12 x .06      | 46       | 783-0738A  | Seat Pivot Bracket                  |
| 18       | 738-0138A | Hex Cap Screw, 5/16-18 x .62       | 47       | 783-0739   | Seat Adjustment Lever               |
| 19       | 738-0143  | Shoulder Screw, 3/8-16             | 48       | 783-0753   | Seat Adjustment Selector            |
| 20       | 741-0225  | Hex Flange Bearing                 | 49       | 757-04014A | Medium Back Seat, Black             |
| 21       | 741-0715  | Snap Flange Bearing                | 50       | 735-0656   | RH Foot Pad                         |
| 22       | 746-0968  | Lift Cable, 16.16                  | 51       | 735-0657   | LH Foot Pad                         |
| 23       | 747-1111A | Lift Handle                        |          | 726-3046   | Foot Pad Clips (Not Shown)          |
| 24       | 756-1154  | Roller Pulley                      | 52       | 714-0111   | Cotter Pin                          |
| 25       | 783-0678A | Arm Lift                           | 53       | 731-0511   | Trim Strip                          |
| 26       | 783-0720A | Deck Stabilizer Bracket            | 54       | 783-0209C  | Seat Lift Bracket                   |
| 27       | 710-0602  | Self-tapping Screw 5/16-18 x 1.0   | 55       | 726-0201   | Speed Clip                          |
| 28       | 710-0604A | Self-Tapping Screw, 5/16-18 x .625 | 56       | 710-0599   | Self-Tapping Screw 1/4-20 x 0.5"    |
| 29       | 710-0895  | Self-Tapping Screw, 1/4-15 x .75   |          |            |                                     |


# Model LT-1800

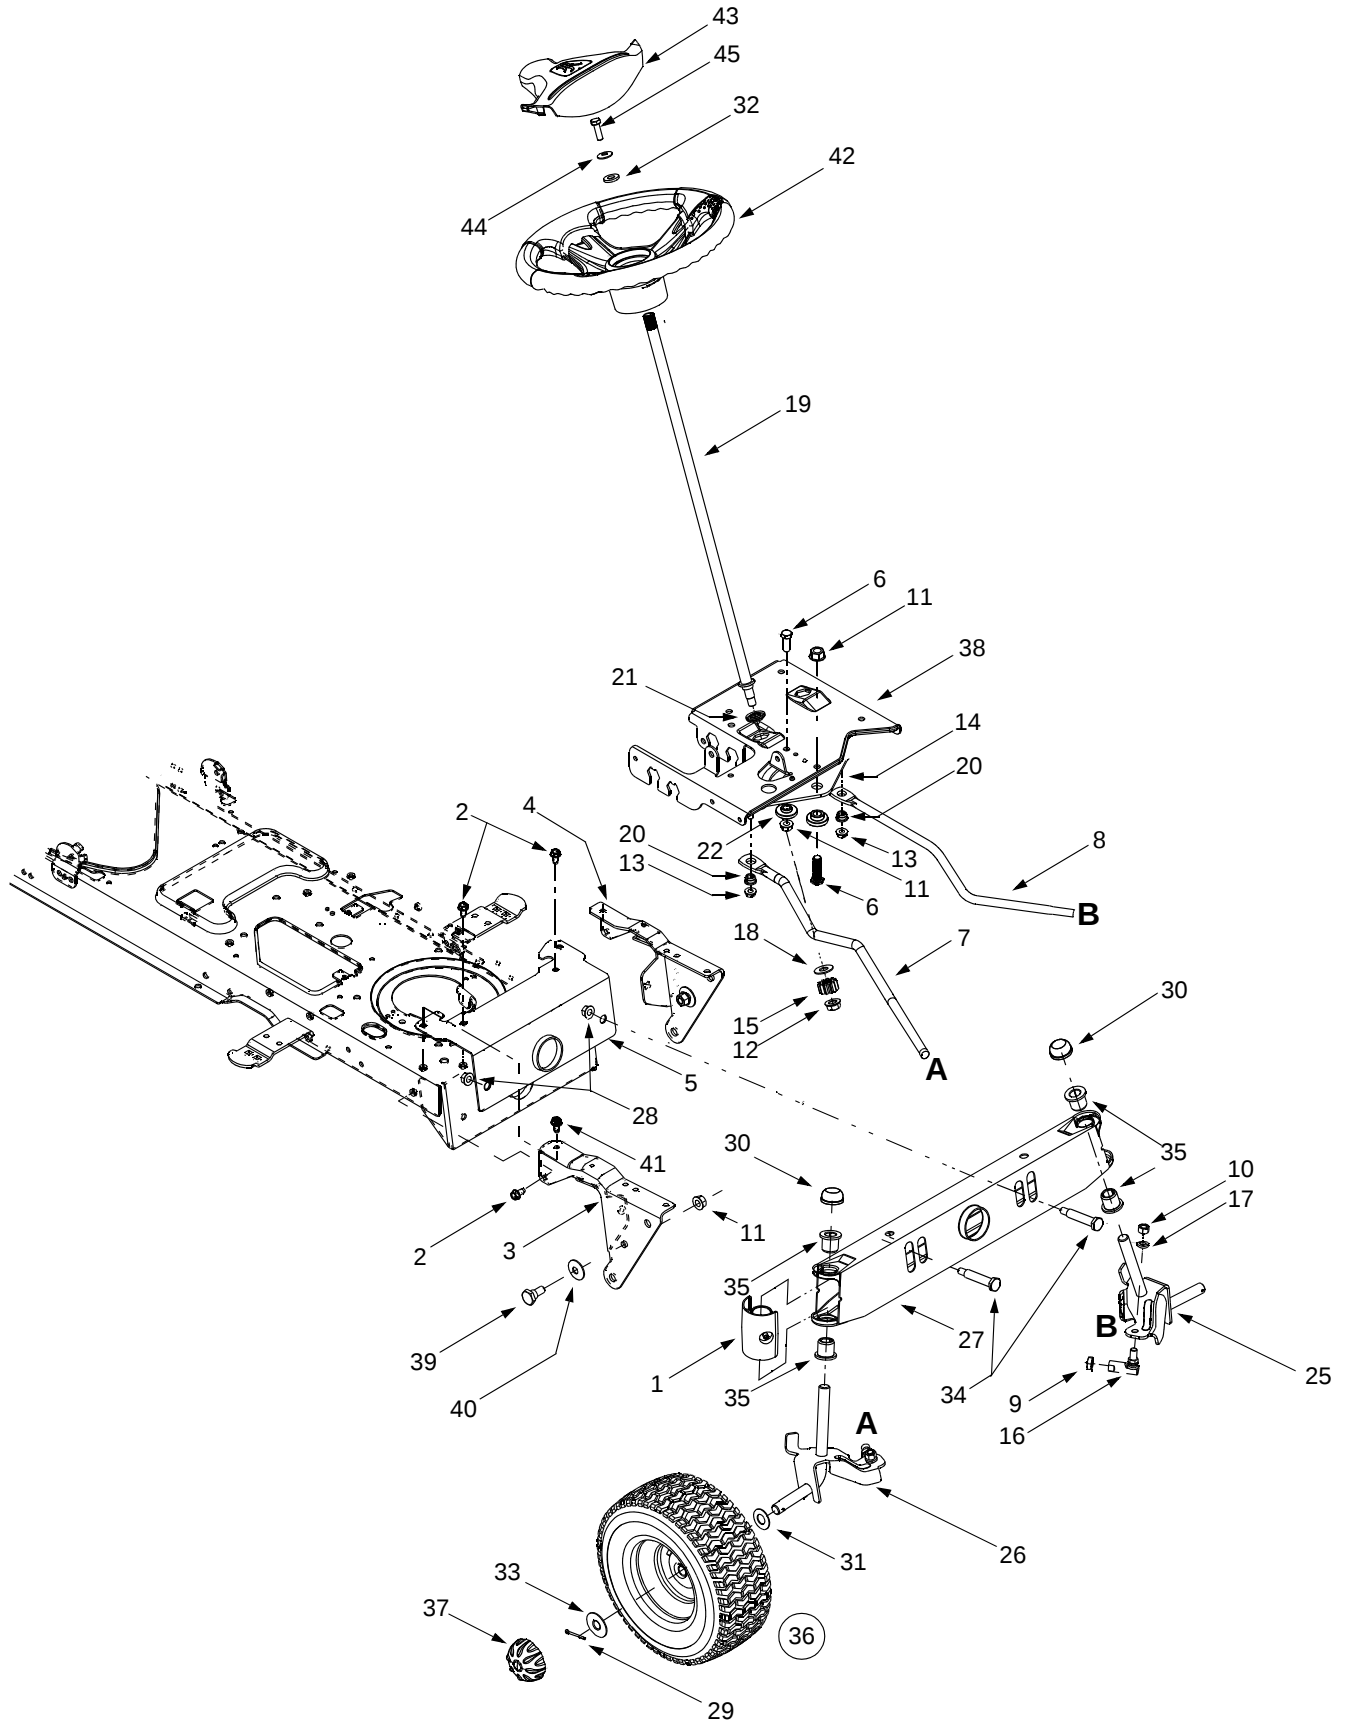

# Model LT-1800

| Ref. No. | Part No.  | Description                            | Ref. No. | Part No.  | Description                            |
|----------|-----------|----------------------------------------|----------|-----------|----------------------------------------|
| 1        | 731-1291A | Pivot Bar End Cap w/ Fitting           | 26       | 683-04004 | RH Axle Assembly, .750 Diameter        |
| 2        | 710-0604A | Self-tapping Screw, 16-18 x .625       | 27       | 683-0128A | Steel Pivot Bar                        |
| 3        | 783-0726B | RH Pivot Support Bracket               | 28       | 712-0130  | Lock Nut, 3/8-16                       |
| 4        | 783-0727A | LH Pivot Support Bracket               | 29       | 714-0162  | Cotter Pin                             |
| 5        | 783-0728  | Pivot Bar Bracket                      | 30       | 726-0341  | Push Cap, .625                         |
| 6        | 710-0723  | Hex Cap Screw, 3/8-16 x 1.25 (Grade 5) | 31       | 736-0316  | Flat Washer, .64 x 1.0 x .12           |
| 7        | 711-1408  | RH Drag Link                           | 32       | 736-3004  | Flat Washer, .406 x .875 x .105        |
| 8        | 711-1409A | LH Drag Link                           | 33       | 736-0285  | Flat Washer, .635 x 1.589 x .06        |
| 9        | 712-0240  | Jam Nut, 7/16-20                       | 34       | 738-1011  | Shoulder Screw, .5 x 2.2, 3/8-16       |
| 10       | 712-0214  | Hex Nut, 3/8-24                        | 35       | 741-0660A | Flange Bearing                         |
| 11       | 712-0130  | Lock Nut, 3/8-16                       | 36       | 634-04099 | Wheel Assembly                         |
| 12       | 712-0459  | Flange Lock Nut, 7/16-20               | —        | 634-04091 | Rim Assembly Only                      |
| 13       | 712-0429  | Lock Nut, 5/16-18                      | —        | 734-0255  | Air Valve (Not Shown)                  |
| 14       | 717-1550E | Steering Gear, 11/90 Ratio             | —        | 734-1731  | Tire Only, Square Shoulder             |
| 15       | 717-1554  | Steering Pinion Gear                   | —        | 737-0224  | Grease Fitting (Not Shown)             |
| 16       | 723-0448A | Ball Joint, 7/16-20                    | —        | 741-3032  | Ball Bearing (Not Shown)               |
| 18       | 736-3084  | Flat Washer, .51 x 1.12 x .06          | 37       | 734-2290A | Deluxe Hub Cap                         |
| 19       | 738-1001A | Steering Shaft, .625 OD x 24.4         | 38       | 783-0653F | Steering Support Bracket               |
| 20       | 741-0475  | Plastic Bushing, .38 ID                | 39       | 738-0143  | Shoulder Screw, 3/8-16                 |
| 21       | 741-0656  | Hex Flange Bearing, 5/8                | 40       | 736-0331  | Bell Washer, .39 x 1.13 x .062         |
| 22       | 738-0372B | Shoulder Spacer, .38 ID                | 41       | 710-1260A | Self-tapping Screw, 5/16-18 x .75      |
| 23       | 631-0027  | Standard Steering Wheel, 13.25         | 42       | 631-04008 | Steering Wheel, Soft Grip, Three Spoke |
| 24       | 731-0220  | Steering Wheel Cap, Round              | 43       | 731-04065 | Steering Wheel Cap, Round              |
| 25       | 683-04003 | LH Axle Assembly, .750 Diameter        | 45       | 710-0643  | Hex Bolt, 5/16-18 X 1                  |


# Model LT-1800

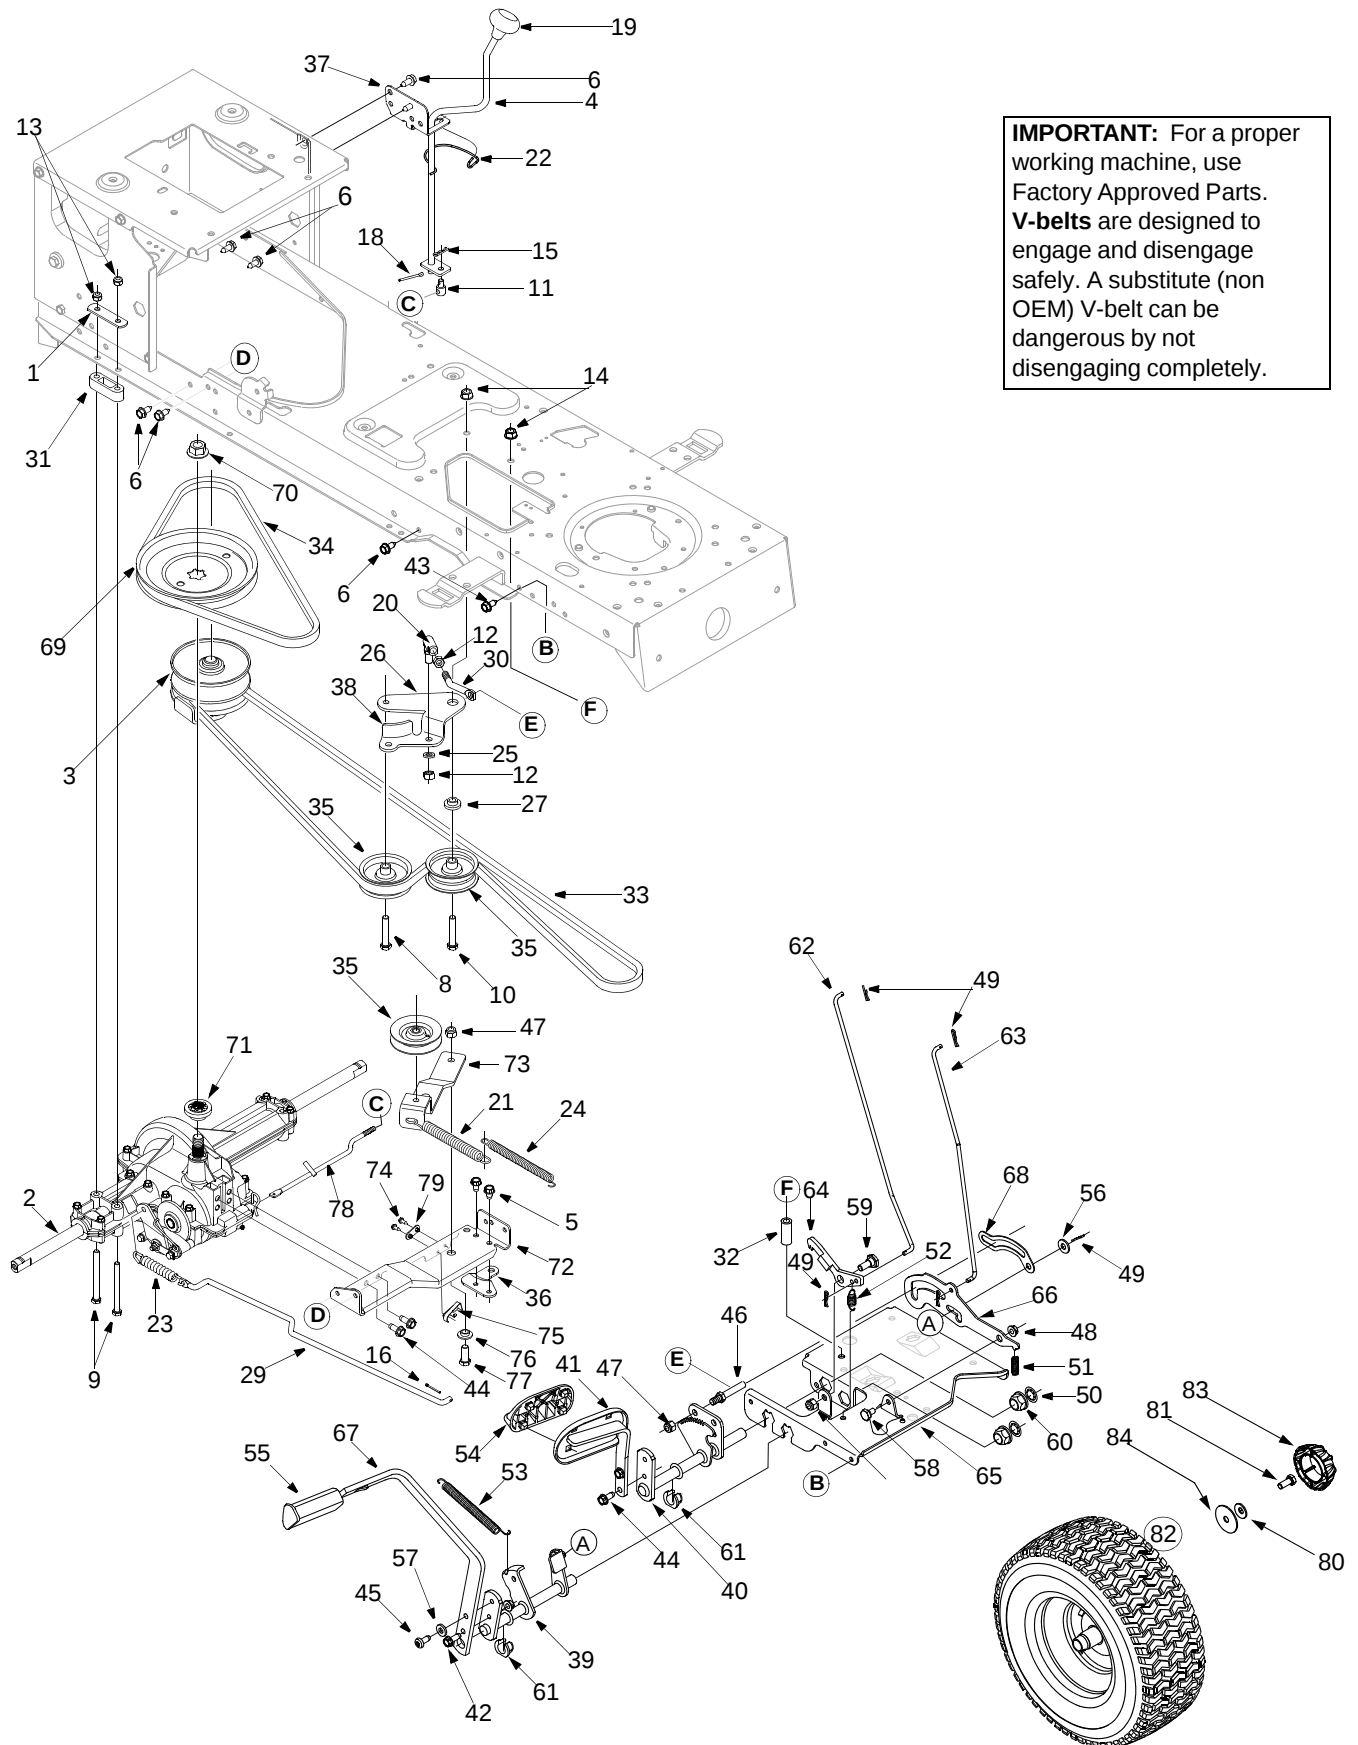

# Model LT-1800

| Ref. No. | Part No.  | Description                   | Ref. No. | Part No.  | Description                 |
|----------|-----------|-------------------------------|----------|-----------|-----------------------------|
| 1        | 17840     | Mounting Bracket              | 45       | 710-1611B | TT Screw 5/16-18 x 0.75     |
| 2        | 618-04133 | Drive Assembly                | 46       | 711-04159 | Pin                         |
| 3        | 618-04147 | Variable Spd. Pulley Assembly | 47       | 712-0130  | Hex Lock Nut 3/8-16         |
| 4        | 647-04020 | Shift Lever Assembly          | 48       | 712-3004A | Flange Lock Nut             |
| 5        | 710-0607  | TT Screw 5/16-18 x 0.5        | 49       | 714-0104  | Cotter Pin                  |
| 6        | 710-0726  | AB Screw 5/16-12 x 0.75       | 50       | 726-04028 | Push Nut                    |
| 7        | 710-0809  | TT Screw 1/4-20 x 1.25        | 51       | 732-0335  | Compression Spring          |
| 8        | 710-1007  | TT Sems Screw 3/8-16 x 1.5    | 52       | 732-0955  | Extension Spring            |
| 9        | 710-1266  | Hex Bolt 5/16-18 x 3.5        | 53       | 732-0963  | Extension Spring            |
| 10       | 710-3144  | Hex Bolt 3/8-16 x 2.0         | 54       | 735-0662  | Control Pad                 |
| 11       | 711-0736  | Ferrule                       | 55       | 735-3049  | Brake Pad                   |
| 12       | 712-0241  | Hex Nut 3/8-24                | 56       | 736-0262  | Flat Washer                 |
| 13       | 712-0429  | Hex Lock Nut 5/16-18          | 57       | 736-3008  | Flat Washer                 |
| 14       | 712-0431  | Flange Lock Nut 3/8-16        | 58       | 738-0155  | Shoulder Screw              |
| 15       | 714-0104  | Hairpin Clip                  | 59       | 738-0380  | Shoulder Screw              |
| 16       | 714-0111  | Cotter Pin                    | 60       | 741-0225  | Hex Flange Bearing          |
| 17       | 714-0209  | Hairpin Clip                  | 61       | 741-3065B | Hex Flange Bearing: Split   |
| 18       | 714-0470  | Cotter Pin                    | 62       | 747-04093 | Brake Lock Rod              |
| 19       | 720-04028 | Shift Knob                    | 63       | 747-04096 | Cruise Control Rod          |
| 20       | 723-3018  | Ball Joint                    | 64       | 748-04039 | Cruise Latch                |
| 21       | 732-0384  | Extension Spring              | 65       | 783-0653F | Steering Support Bracket    |
| 22       | 732-0525  | Spring Clip                   | 66       | 783-0732  | Lock-Out Bracket            |
| 23       | 732-0716  | Extension Spring              | 67       | 783-0773A | Brake Pedal                 |
| 24       | 732-0963  | Extension Spring              | 68       | 783-0780B | Neutral Return Bracket      |
| 25       | 736-0169  | Lock Washer 3/8               | 69       | 756-04002 | Transmission Pulley         |
| 26       | 737-3007  | Grease                        | 70       | 712-0700  | Flange Nut 9/16-18          |
| 27       | 738-0372B | Shoulder Spacer               | 71       | 718-0758A | Pulley Hub                  |
| 28       | 747-04146 | Shift Rod                     | 72       | 683-04055 | Transmission Torque Bracket |
| 29       | 747-04164 | Brake Rod                     | 73       | 683-04130 | Idler Bracket               |
| 30       | 747-1127  | Idler Adj. Rod                | 74       | 710-0227  | AB Screw #8-18 x 0.5        |
| 31       | 748-0334  | Spacer: Transaxle             | 75       | 725-1644  | Spring Switch               |
| 32       | 750-0566A | Spacer                        | 76       | 750-0736  | Shoulder Spacer             |
| 33       | 754-0467  | V Belt                        | 77       | 710-0514  | Hex Bolt 3/8-16 x 1.0       |
| 34       | 754-0468  | V Belt                        | 78       | 747-04146 | Shift Rod                   |
| 35       | 756-0981A | Flat Idler Pulley             | 79       | 726-0320  | Insulator Nut Plate         |
| 36       | 783-04283 | Shift Bracket                 | 80       | 736-0242  | Bell Washer                 |
| 37       | 783-04360 | Shift Bracket                 | 81       | 710-0627  | Hex Cap Screw               |
| 38       | 783-04442 | Double Idler Bracket: Center  | 82       | 634-0104  | Wheel Assembly              |
| 39       | 647-0031C | Brake Control Assembly        |          | 634-0070  | Rim Assembly                |
| 40       | 647-0032A | Speed Control Assembly        |          | 734-0255  | Air Valve                   |
| 41       | 683-0266  | Drive Pedal Assembly          |          | 734-1730  | Tire                        |
| 42       | 710-0650  | TT Screw 5/16-18 x 0.875      | 83       | 734-2290A | Hub Cap                     |
| 43       | 710-0726  | AB Screw 5/16-12 x 0.75       | 84       | 736-0430  | Flat Washer                 |
| 44       | 710-1260A | LD Screw 5/16-18 x 0.75       |          |           |                             |

# Model LT-1800

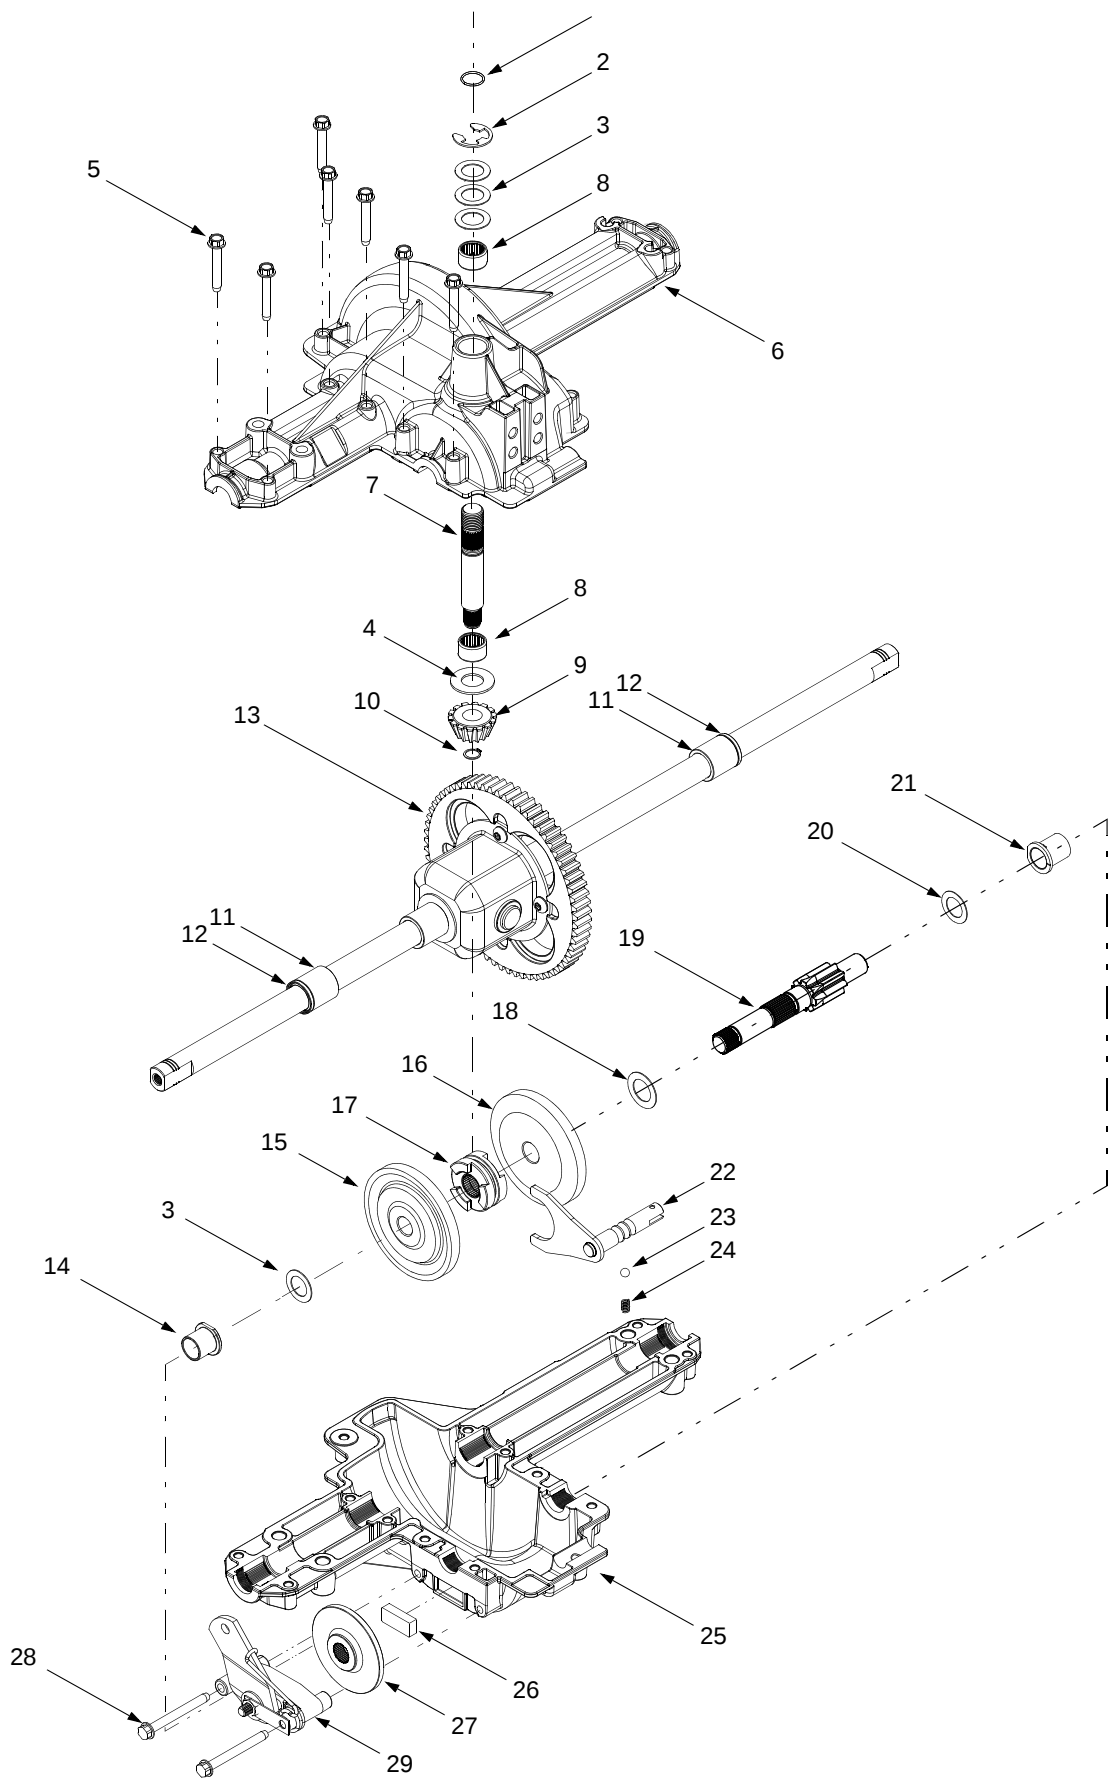


# Model LT-1800

| Ref. No. | Part No.  | Description                        |
|----------|-----------|------------------------------------|
| 1        | 732-0614  | Ring, Wire                         |
| 2        | 716-0231  | Ring, E Type, .750                 |
| 3        | 736-0336  | Flat Washer, 5/8 x 1.0 x .030*     |
|          | 736-0337  | Flat Washer, 5/8 x 1.0 x .040*     |
|          | 736-0349  | Flat Washer, 5/8 x 1.0 x .020*     |
| 4        | 736-0335  | Washer, Thrust .635 x 1.26 x .06   |
| 5        | 710-1325  | Self-Tapping Screw, 1/4-20 x 1.625 |
| 6        | 719-04017 | Upper Housing                      |
| 7        | 711-1109  | Input Shaft                        |
| 8        | 741-0335  | Needle Bearing, .625 x .813 x .495 |
| 9        | 717-1464  | 14-tooth Bevel Pinion              |
| 10       | 716-0108  | Retaining Ring, .437               |
| 11       | 741-0340  | Sleeve Bearing, .75 x .1.0 x 1.0   |
| 12       | 721-0338  | Seal, .75 x 1.0 x .125             |
| 13       | 618-04041 | Differential Assembly              |
| 14       | 741-0336  | Flange Bearing, 5/8 x 3/4 x 3/4    |
| 15       | 717-1362  | 42-tooth Bevel Gear                |
| 16       | 717-1363  | 42-tooth Bevel Gear                |
| 17       | 718-0228  | Clutch Collar                      |
| 18       | 736-0519  | Flat Washer, .70 x 1.125 x .031    |
| 19       | 711-04053 | Drive Shaft                        |
| 20       | 736-0495  | Thrust Washer, 1.0 x .632 x .0     |
| 21       | 741-0337  | Flange Bearing, 5/8 x 3/4 x 15/16  |
| 22       | 611-0011  | Detent Shaft Assembly              |
| 23       | 741-0862  | Detent Ball                        |
| 24       | 732-0863  | Compression Spring                 |
| 25       | 719-04018 | Lower Housing                      |
| 26       | 717-0678  | Brake Puck                         |
| 27       | 761-0202  | Brake Disc                         |
| 28       | 710-1206  | Self-Tapping Screw, 1/4-20 x 2.375 |
| 29       | 661-0001  | Brake Assembly                     |
| —        | 737-0148  | Grease (19 oz.)                    |

\*Use applicable flat washer (12a, 12b or 12c) in this application allowing .0150/.0020 in end-play

**NOTE:** *If rebuilding the upper housing of the transmission, add two ounces of Unirex<sup>®</sup> N3 grease (Part No. 737-0289) in the input shaft cavity.*


# Model LT-1800

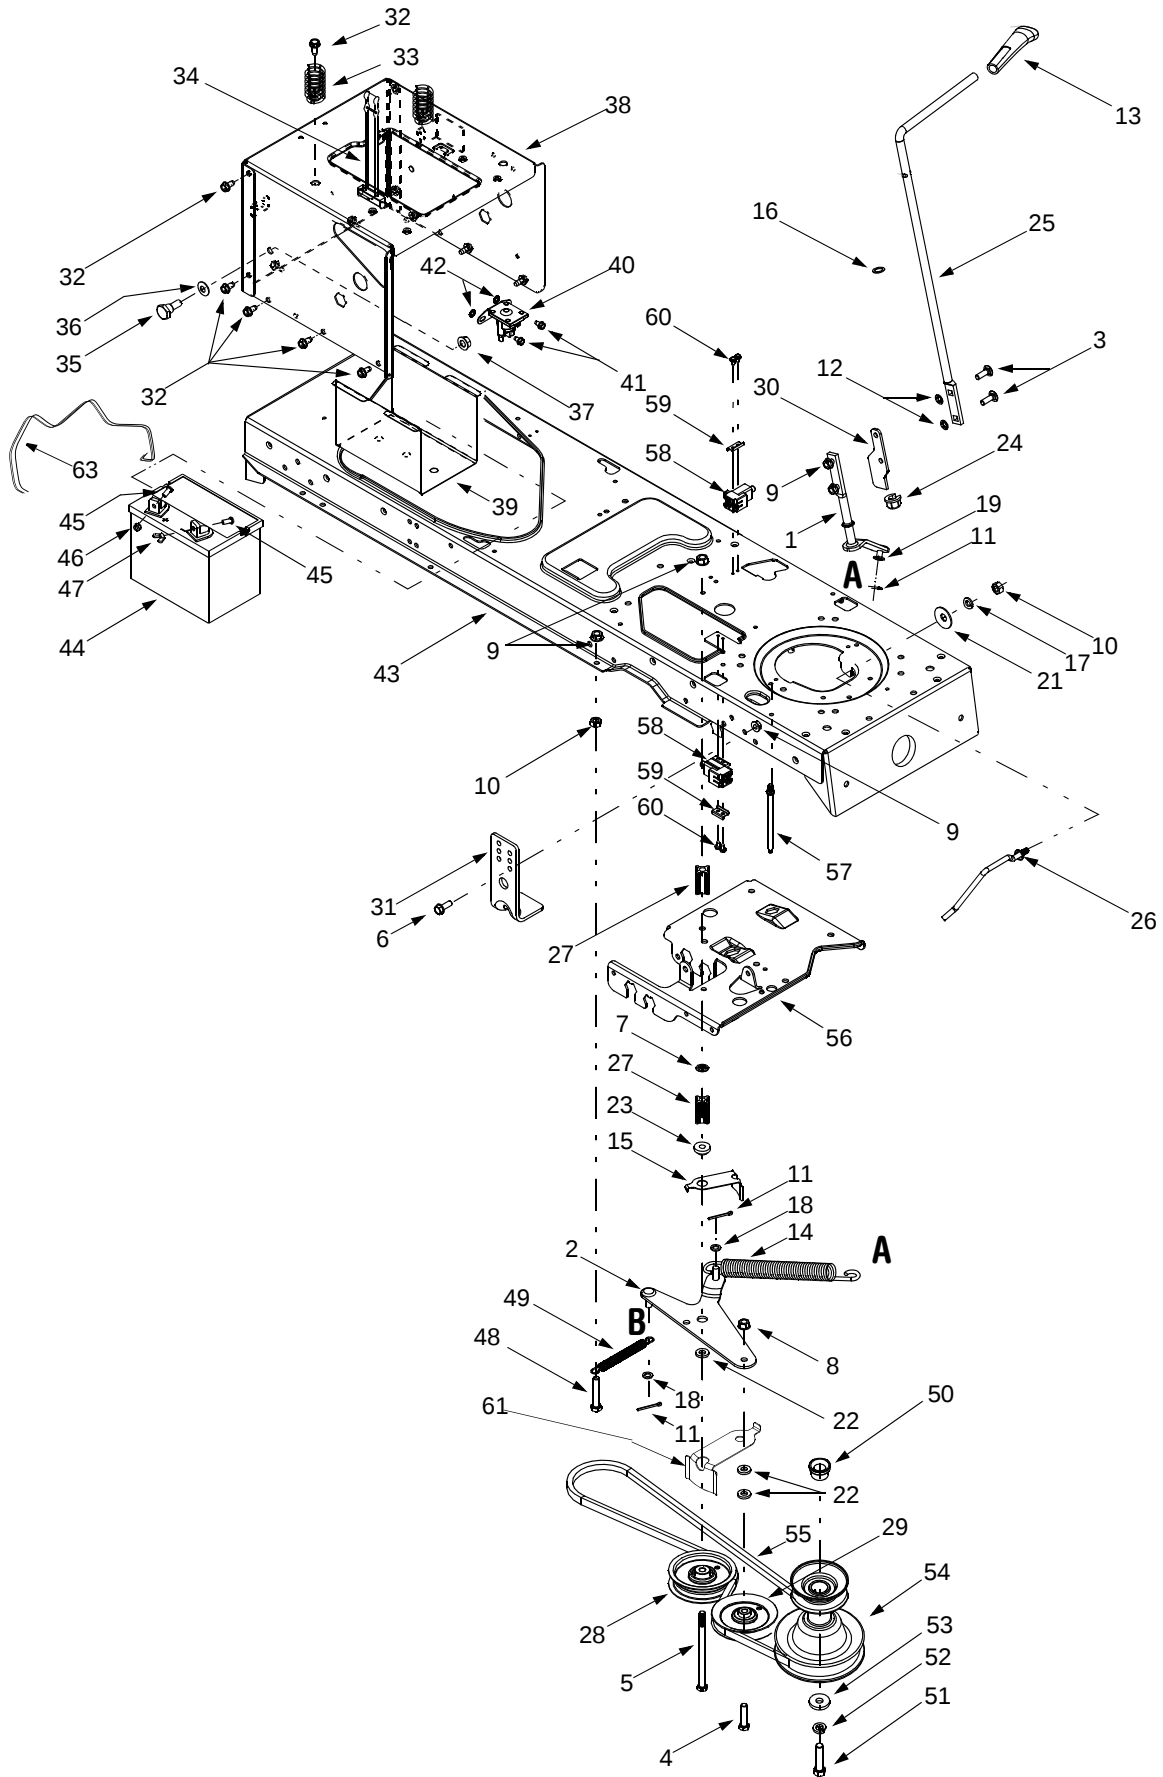

# Model LT-1800


| Ref. No. | Part No.  | Description                        | Ref. No. | Part No.   | Description                        |
|----------|-----------|------------------------------------|----------|------------|------------------------------------|
| 1        | 647-0064  | PTO Engage Lever Assembly          | 33       | 732-04035  | Compression Spring, 1.28 x 3.125   |
| 2        | 683-0450  | PTO Engage Plate Assembly          | 34       | 723-0444   | Battery Strap                      |
| 3        | 710-0276  | Carriage Screw, 5/16-18 x 1.00     | 35       | 738-1020   | Shoulder Screw, .625 x .5, 7/16-20 |
| 4        | 710-0520  | Hex Cap Screw, 3/8-16 x 1.5        | 36       | 736-0407   | Bell Washer, .45 x 1.0 x .062      |
| 5        | 710-0831  | Hex Cap Screw, 3/8-16 x 5.5        | 37       | 712-0459   | Flange Lock Nut, 7/16-20           |
| 6        | 710-0726  | AB Screw 5/16-12 x 0.75            | 38       | 783-04329  | Seat Bracket                       |
| 7        | 712-0229  | Push Nut, 3/8                      | 39       | 783-0349   | Battery Tray                       |
| 8        | 712-0130  | Lock Nut, 3/8-16                   | 40       | 725-1426   | Solenoid, 12-Volt, 100 Amp         |
| 9        | 712-3004A | Flange Lock Nut, 5/16-18           | 41       | 710-0599   | Self Tapping Screw, 1/4-20 x .5    |
| 10       | 712-3010  | Hex Nut, 5/16-18                   | 42       | 736-0222   | Lock Washer, 1/4                   |
| 11       | 714-0470  | Cotter Pin, 1/8 x 1.25             | 43       | 683-04099  | Lower Frame Assembly               |
| 12       | 726-0201  | Speed Nut, .3125                   | 44       | 725-1706   | 12-volt Battery, 270 CCA           |
| 13       | 731-2111A | PTO Knob                           | 45       | 710-0751   | Hex Cap Screw, 1/4-20 x .62        |
| 14       | 732-1170  | Extension Spring, .75 x 6.75       | 46       | 712-0271   | Hex Sems Nut, 1/4-20               |
| 15       | 732-0991A | Belt Guard                         | 47       | 712-3044   | Wing Nut, 1/4-20                   |
| 16       | 736-0108  | Flat Washer, .510 x .750 x .033    | 48       | 732-1165   | Extension Spring, .50 x 5.0        |
| 17       | 736-0119  | Lock Washer, 5/16                  | 49       | 710-3180   | Hex Cap Screw, 5/16-18 x 1.75      |
| 18       | 736-0140  | Flat Washer, .385 x .62 x .063     | 50       | 750-0596   | Spacer Cup                         |
| 19       | 736-0275  | Flat Washer, 5/16                  | 51       | 710-3029   | Hex Head Cap Screw, 7/16-20 x 1.25 |
| 20       | 736-3000  | Flat Washer, .406 x .875 x .059    | 52       | 736-0171   | Lock Washer, 7/16                  |
| 21       | 736-0242  | Bell Washer                        | 53       | 736-0322   | Flat Washer, .450 x 1.25           |
| 22       | 736-3039  | Flat Washer                        | 54       | 756-0982B  | Engine Pulley, 3.56 OD x 5.56      |
| 23       | 738-0372B | Shoulder Spacer, .380              | 55       | 754-0497   | PTO Belt                           |
| 24       | 741-0708  | Hex Split Flange Bearing, .5       | 56       | 783-0653F  | Steering Support Bracket           |
| 25       | 747-1112D | PTO Engage Handle                  | 57       | 711-1044   | Keeper Pin, 5/16 x 4.75            |
| 26       | 747-1286A | Belt Keeper Rod                    | 58       | 725-1657A  | Switch                             |
| 27       | 748-0415A | Spacer, 3/8 x 1.54                 | 59       | 17962      | Switch Plate                       |
| 28       | 756-0627B | Idler Pulley, 3.5                  | 60       | 710-0224   | Screw, #10-16 x .5                 |
| 29       | 756-1208  | Idler Pulley, 4.0                  | 61       | 732-1013   | Belt Guard                         |
| 30       | 783-0744A | Engagement Stop                    | 62       | 736-0300   | Flat Washer                        |
| 31       | 783-0891B | Deck Stop                          | 63       | 747-04121A | Battery Hold-Down Rod              |
| 32       | 710-0604A | Self Tapping Screw, 5/16-18 x .625 |          |            |                                    |

# Model LT-1800

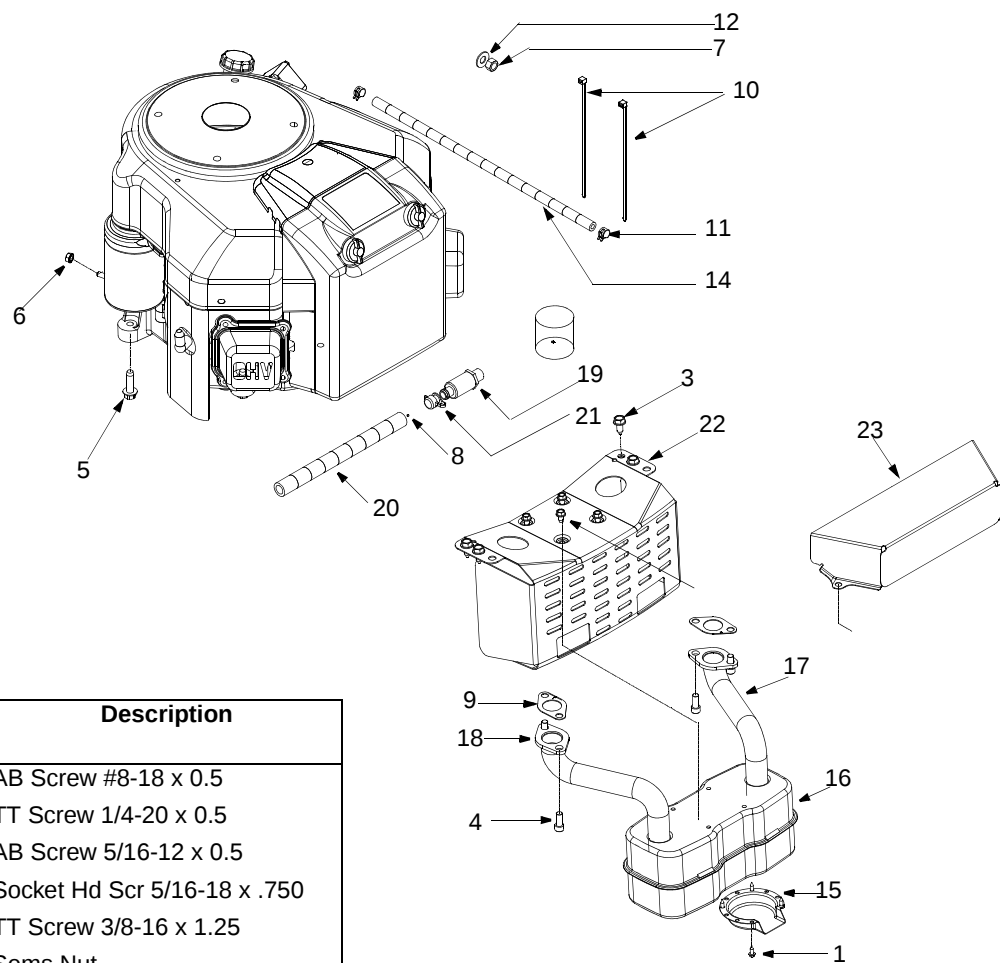


| Ref. No. | Part No.  | Description                  |
|----------|-----------|------------------------------|
| 1.       | 710-0227  | AB Screw #8-18 x 0.5         |
| 2.       | 710-0599  | TT Screw 1/4-20 x 0.5        |
| 3.       | 710-0726  | AB Screw 5/16-12 x 0.5       |
| 4.       | 710-1314A | Socket Hd Scr 5/16-18 x .750 |
| 5.       | 710-1315  | TT Screw 3/8-16 x 1.25       |
| 6.       | 712-0271  | Sems Nut                     |
| 7.       | 712-3017  | Hex Nut 3/8-16               |
| 8.       | 721-0331  | Pipe Sealant                 |
| 9.       | 721-0460  | Exhaust Gasket               |
| 10.      | 725-0157  | Cable Tie                    |
| 11.      | 726-0205  | Hose Clamp                   |
| 12.      | 736-0300  | Flat Washer                  |
| 13.      | 737-0169  | SAE 30W Oil                  |
| 14.      | 751-0535  | Fuel Line Hose               |
| 15.      | 751-0564A | Muffler Deflector            |
| 16.      | 751-0616A | Muffler                      |
| 17.      | 751-0813A | Exhaust Pipe LH              |
| 18.      | 751-0814A | Exhaust Pipe RH              |
| 19.      | 751-3140  | Oil Drain                    |
| 20.      | 751-3141  | Oil Drain Hose extension     |
| 21.      | 751-3142  | Oil Drain Cap                |
| 22.      | 783-0615C | Muffler Bracket              |
| 23.      | 783-0625C | Heat Shield                  |

Model LT-1800

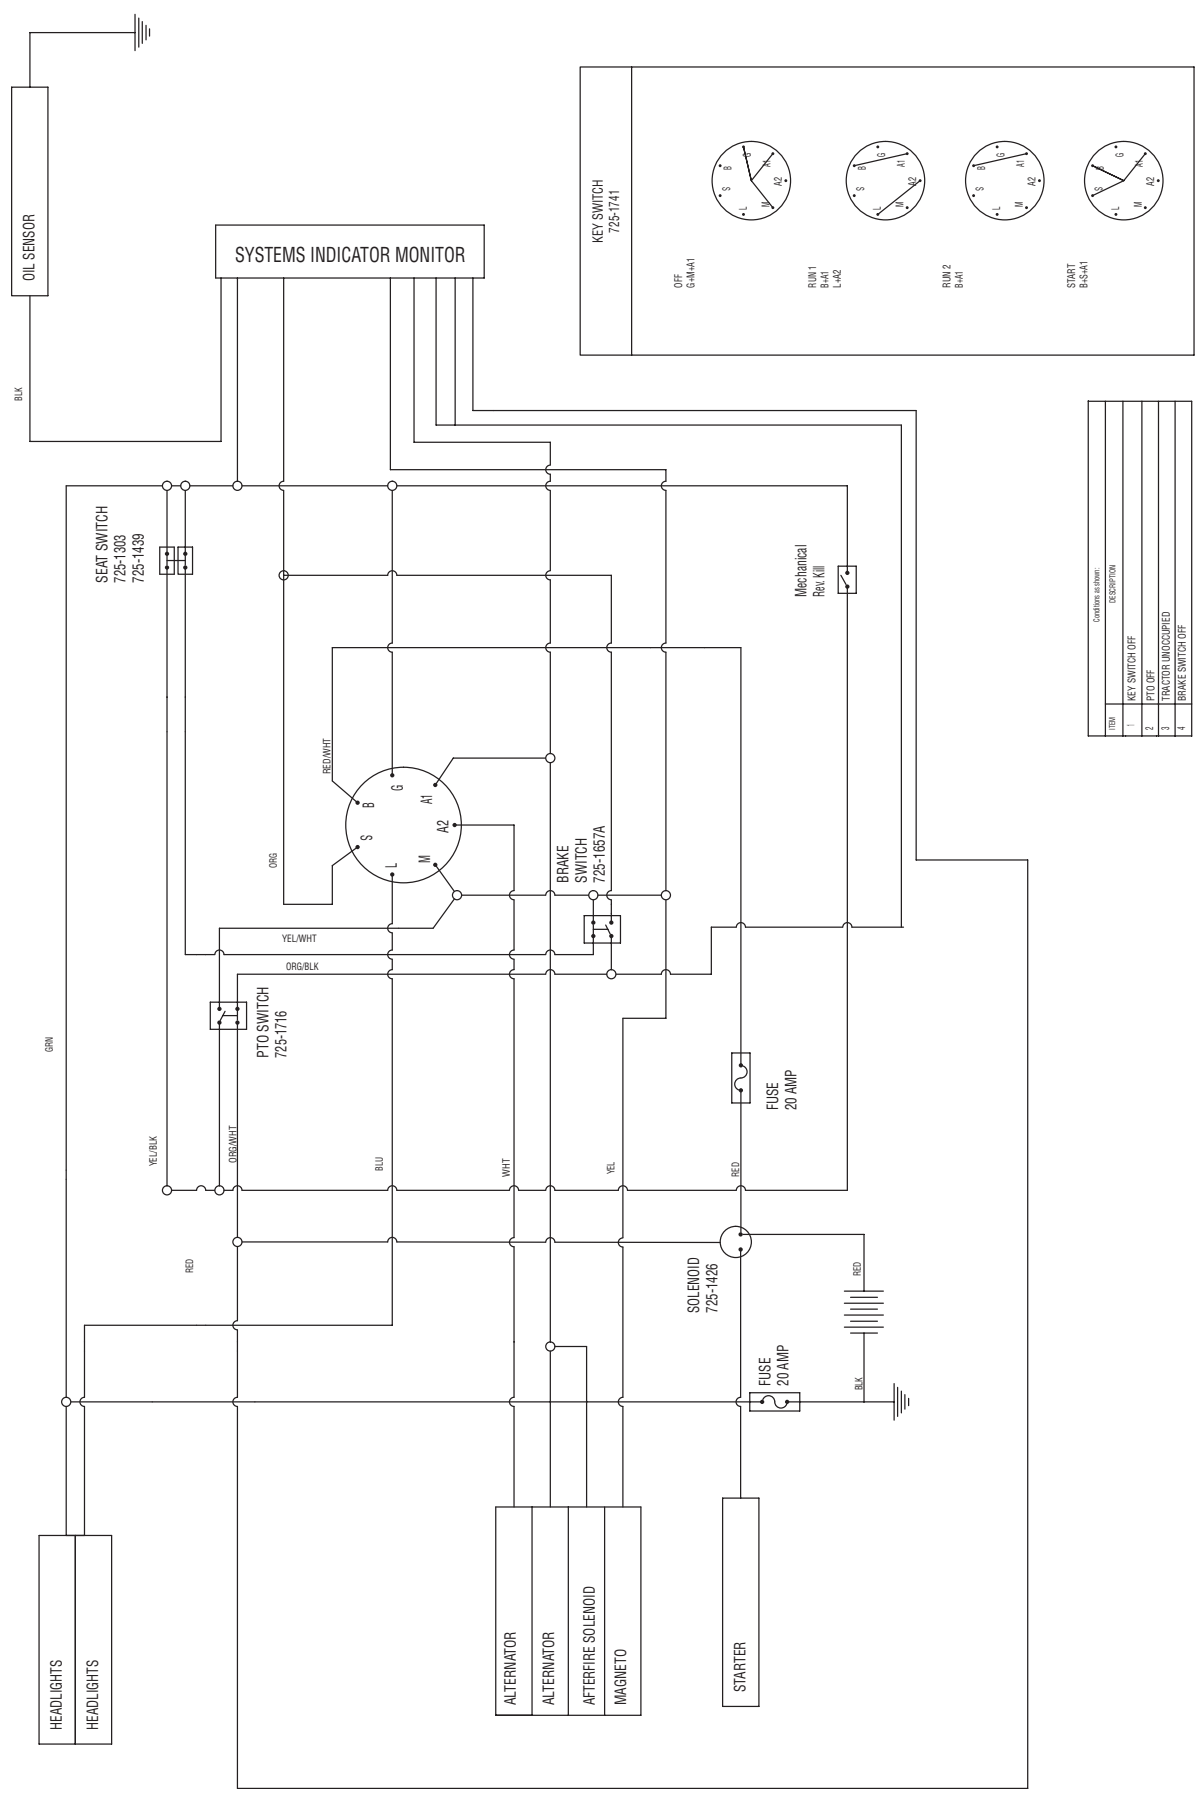

# Model LT-1800

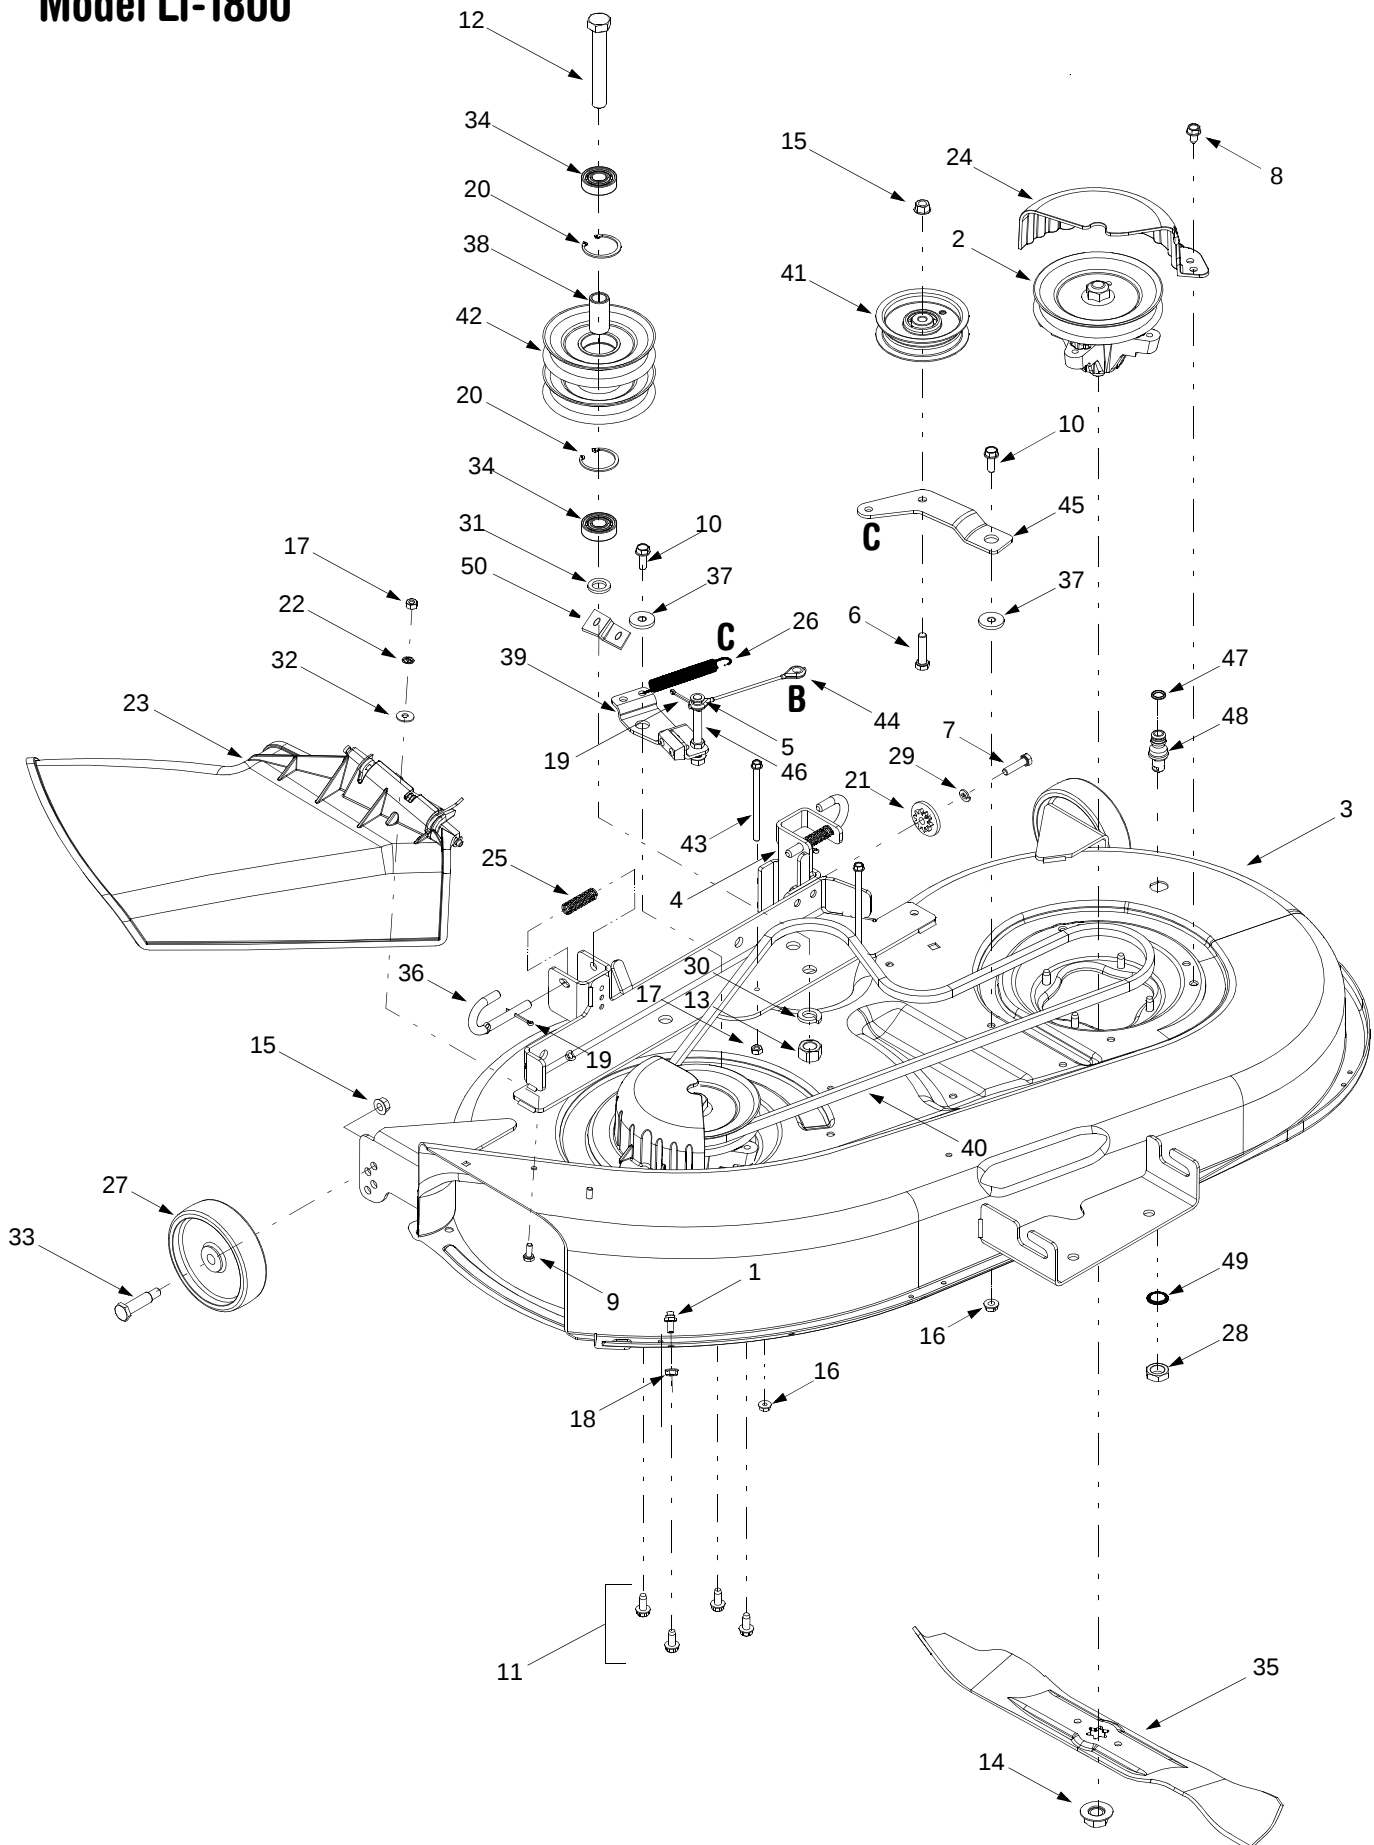

## Model LT-1800: 42” Deck

| Ref. No. | Part No.   | Description                             |
|----------|------------|-----------------------------------------|
| 1        | 711-04069  | Grass Catcher Pin, 1/4-20               |
| 2        | 618-0574   | Spindle Assembly, 5.75 Dia. w/ Fitting  |
|          | 756-0980   | Pulley Only                             |
| 3        | 683-04051A | 42-inch Deck Shell                      |
| 4        | 683-0254   | Deck Adjustment Bracket w/ Weld Nut     |
| 5        | 736-0140   | Flat Washer, .385 x .62 x .063          |
| 6        | 710-0520   | Hex Cap Screw, 1/4-20 x 1.5             |
| 7        | 710-0528   | Hex Cap Screw, 5/16-18 x 1.25           |
| 8        | 710-0726   | Self-Tapping Screw, 5/16-12 x .75       |
| 9        | 710-0751   | Hex Cap Screw, 1/4-20 x .62             |
| 10       | 710-1238   | Hex Head Washer Screw, 5/16-18 x .875   |
| 11       | 710-0650   | Self-Tapping Screw, 5/16-18 x .875      |
| 12       | 710-3151   | Hex Cap Screw, 5/8-18 x .875            |
| 13       | 712-0337   | Hex Nut, 5/8-18                         |
| 14       | 712-0417A  | Hex Flange Nut, 5/8-18                  |
| 15       | 712-0130   | Lock Nut, 3/8-16                        |
| 16       | 712-0429   | Lock Nut, 5/16-18                       |
| 17       | 712-3006   | Hex Nut, 1/4-20                         |
| 18       | 712-0324   | Hex Lock Nut, 1/4-20                    |
| 19       | 714-0470   | Cotter Pin, 1/8 x 1.25                  |
| 20       | 716-3020   | Internal Snap Ring                      |
| 21       | 717-04074  | Deck Adjustment Gear                    |
| 22       | 726-0233   | Push Nut. .25 x .5                      |
| 23       | 731-1032B  | Side Discharge Chute Assembly           |
| 24       | 731-2486   | Belt Cover                              |
| 25       | 732-0306A  | Compression Spring, .406 x .531 x 1.75  |
| 26       | 732-0470A  | Extension Spring, .50 x 4.74            |
| 27       | 734-0973   | Deck Wheel, 5 x 1.38                    |
| 28       | 712-0641   | Hex Nut, M-16 x 1.5                     |
| 29       | 736-0119   | Lock Washer, 5/16                       |
| 30       | 736-0158   | Lock Washer, 5/8                        |
| 31       | 736-0162   | Flat Washer, .64 x 1.0 x .12            |
| 32       | 736-0270   | Bell Washer, .265 x .75 x .062          |
| 33       | 738-0373   | Shoulder Screw, .498 x 1.53             |
| 34       | 741-0524   | Bearing, .625 x 1.574 x .470            |
| 35       | 742-0616A  | Three-in-one Blade, Star Center, 21.23" |
| 36       | 747-1116   | Deck Release Pin                        |
| 37       | 748-0331   | Shoulder Spacer, .625 x .324            |
| 38       | 750-0932A  | Spacer, .635 x .88 x 1.72               |
| 39       | 683-0440   | Deck Brake Assembly                     |
| 40       | 754-0498   | Deck Belt                               |
| 41       | 756-0627B  | Idler Pulley, 3.5                       |
| 42       | 756-1202   | Double Pulley, 5.0                      |
| 43       | 710-1830   | Self-Tapping Screw, 1/4-20 x 4.0        |
| 44       | 746-0970   | Brake Cable, 5.05                       |
| 45       | 783-1291   | Idler Bracket                           |
| 46       | 711-1534   | Pin, 3/8-16, 3/8 x 3.27                 |
| 48       | 737-04003B | Water Nozzle                            |
| —        | 721-04041  | Water Nozzle Adapter (not shown)        |
| 49       | 736-0760   | Lock Washer, 17 x 23.8 x 1.95           |
| 50       | 783-04013A | Stab. Bracket: Pulley                   |