



SECTION 12: ILLUSTRATED PARTS LIST

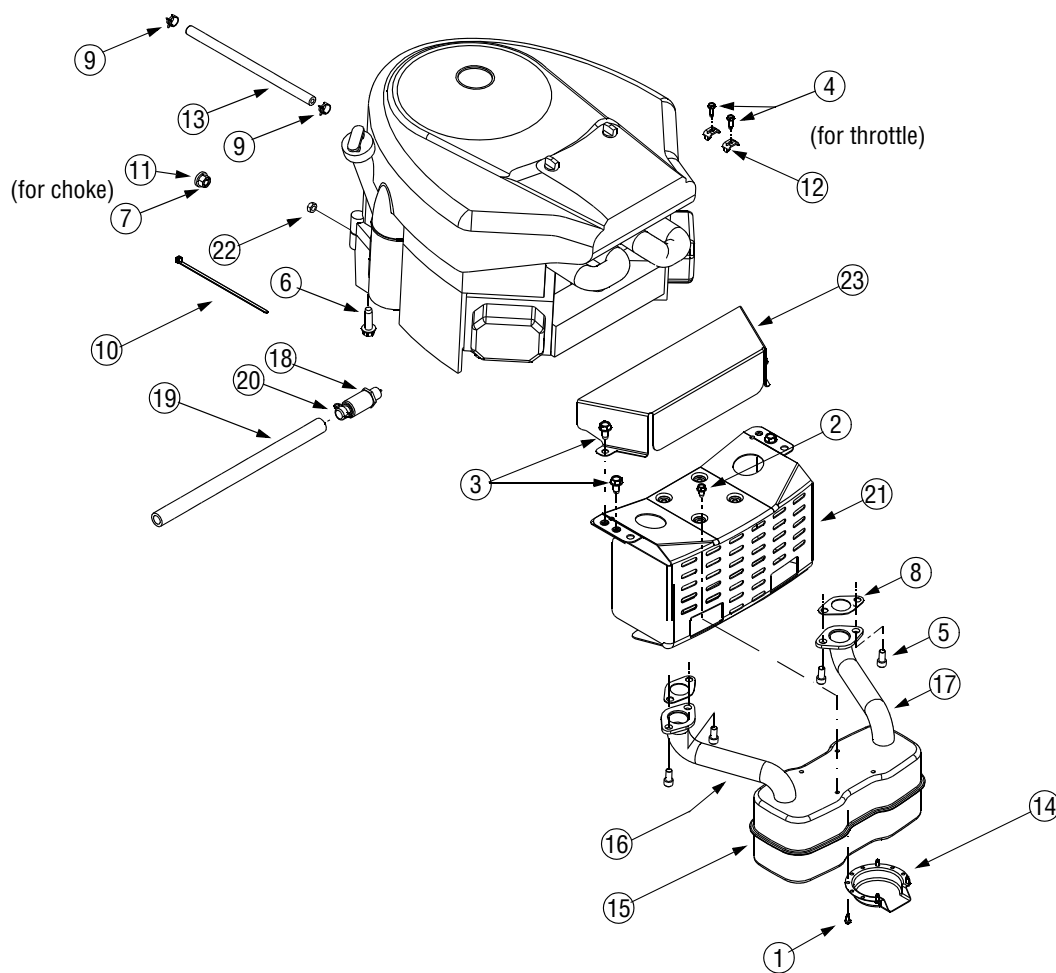

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	710-0227	Screw, #8-18 x.50	13	751-0535	Fuel Line Hose
2	710-0599	Screw, 1/4-20 x.50	14	751-0564A	Muffler Deflector
3	710-0726	Screw, 5/16-18 x.750	15	751-0616A	Muffler, Twin Inlet
4	710-1237	Screw, #10-32 x.625	16	751-0650B	RH Exhaust Pipe
5	710-1314A	Socket Cap Screw, 5/16-18 x.625	17	751-0651B	LH Exhaust Pipe
6	710-1315	Self-tapping Screw, 3/8-16 x 1.25	18	751-3140	Oil Drain Valve
7	712-3005	Flange Lock Nut, 3/8-16	19	751-3141	Oil Drain Hose
8	721-0460	Exhaust Gasket	20	751-3142	Oil Drain Cap
9	726-0205	Hose Clamp	21	783-0615D	Muffler Bracket
10	725-0157	Cable Tie	22	712-0271	Sems Nut, 1/4-20
11	736-0300	Lock Washer, .406 x.875 x.059	23	783-0625C	Heat Shield
12	751B221535	Casing Clamp			

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

Models 604 & 605

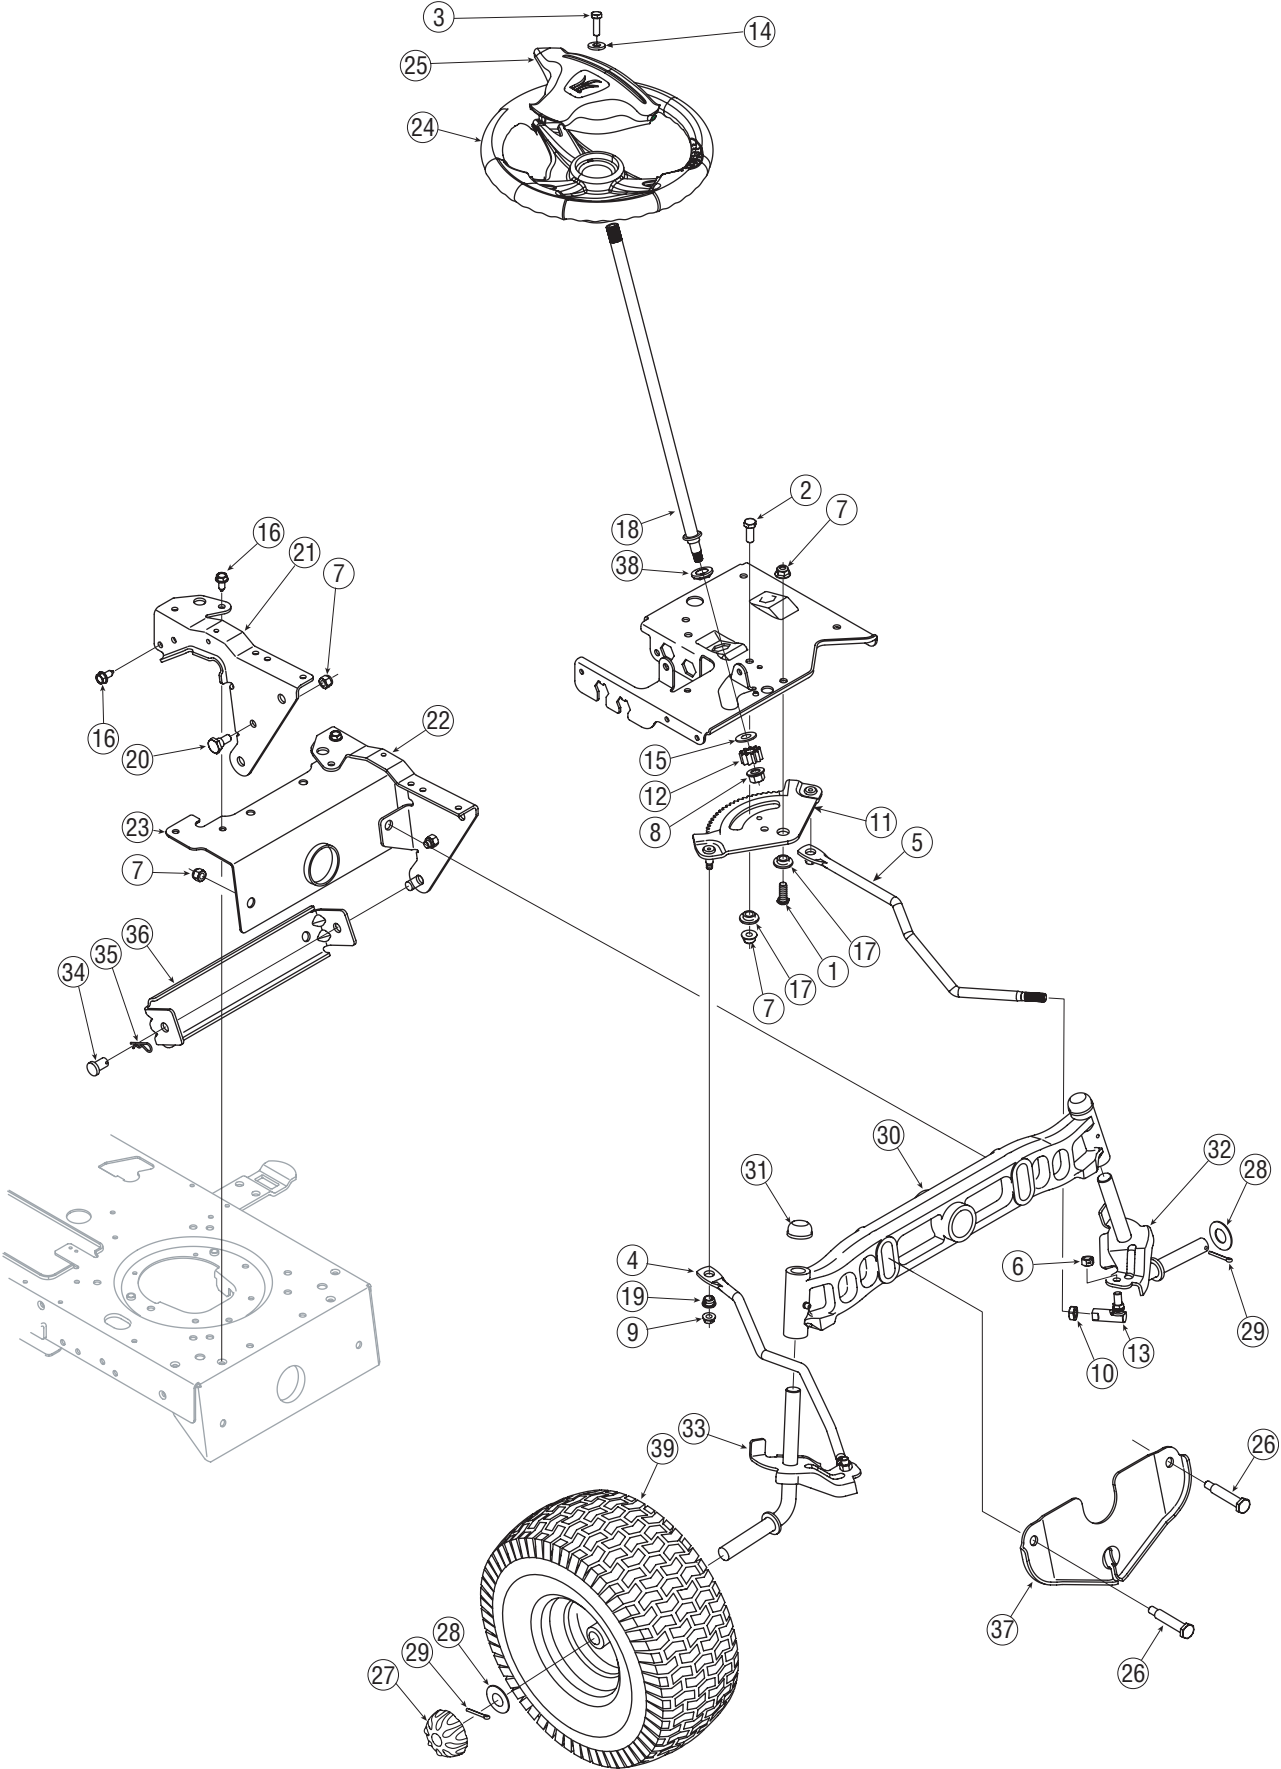


Models 604 & 605

REF. NO.	PART NO.	DESCRIPTION
1	710-04095	Hex Screw, 3/8-16, 1.00, Gr5
2	710-0514	Hex Screw, 3/8-16, 1.00, Gr5
3	710-0643	Hex Screw, 5/16-18, 1.00, Gr5
4	711-1408	Link, Drag, RH
5	711-1409A	Link, Drag, LH
6	712-0214	Nut, Hex Lock, 3/8-24
7	712-04065	Nut, Flange Lock, 3/8-16, Grf, Nylon
8	712-0459	Nut, Flange Lock, 7/16-20
9	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
10	712-0240	Nut, Jam, 7/16-20, Gr2
11	717-1550E	Gear, Steering, 11/90 Ratio
12	717-1554	Gear, Pinion, Steering
13	723-0448A	Ball Joint, 7/16-20, Lock
14	736-3004	Washer, Flat,.406 x.875 x.105
15	736-3084	Washer, Flat,.51 x 1.12 x.06
16	710-0726	Screw, 5/16-12, 0.750
17	738-04154	Spacer, Shoulder,.38 x 1.00 x.31
18	738-1001A	Shaft, Steering,.625 OD x 24.25 Lg
19	741-0475	Plastic Bushing.380 ID
20	738-0143	Screw, Shoulder,.498 x.340, 3/8-16
21	783-0726D	Pivot Bracket, Support RH
22	783-0727C	Pivot Bracket, Support LH
23	783-0728	Pivot Bracket, Bar
24	631-04008	Steering Wheel, 3 Spoke, Soft Grip
25	731-04065	Steering Wheel Cover (Model 604)
	731-04040	Steering Wheel Cap (Model 605)
26	738-04128	Shlder Screw,.5 x 2.380, 3/8-16 (42" Deck)
	738-1011A	Shlder Screw,.5 x 2.2, 3/8-16 (46" Deck)
27	731-2290A	Deluxe Hub Cap
28	736-0316	Flat Washer,.78 x 1.589 x.06
29	714-04039	Cotter Pin, 5/32 x 1.25
30	719-04105	Cast Iron Pivot Bar
31	726-0341	Push Cap
32	638-04006	LH Axle Assembly,.750 (42" Deck)
	638-04003	LH Axle Assembly,.750 (46" Deck)
33	638-04005	RH Axle Assembly,.750 (42" Deck)
	638-04004	RH Axle Assembly,.750 (46" Deck)
34	711-0332	Pin, Clevis,.50 x.78 (46" Deck)
35	714-04023	Cotter Pin, Inter,.080 x 1.5625 (46" Deck)
36	783-0720A	Front Adjustment Bracket (46" Deck)
37	783-04568	Deck Hanger Bracket, Front (42" Deck)
38	741-0656A	Hex Flange Bearing
39	634-04086	Wheel Ass'y Complete, 15 x 6 (42" Deck)
	634-04087	Wheel Ass'y Complete, 15 x 6 (46" Deck)
	734-1731	Tire Only 15 x 6 x 6 (42" Deck)
	734-04040	Tire Only 15 x 6 x 6 (46" Deck)
	634-04081	Rim Only w/ Valve Stem (All Models)

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model 604

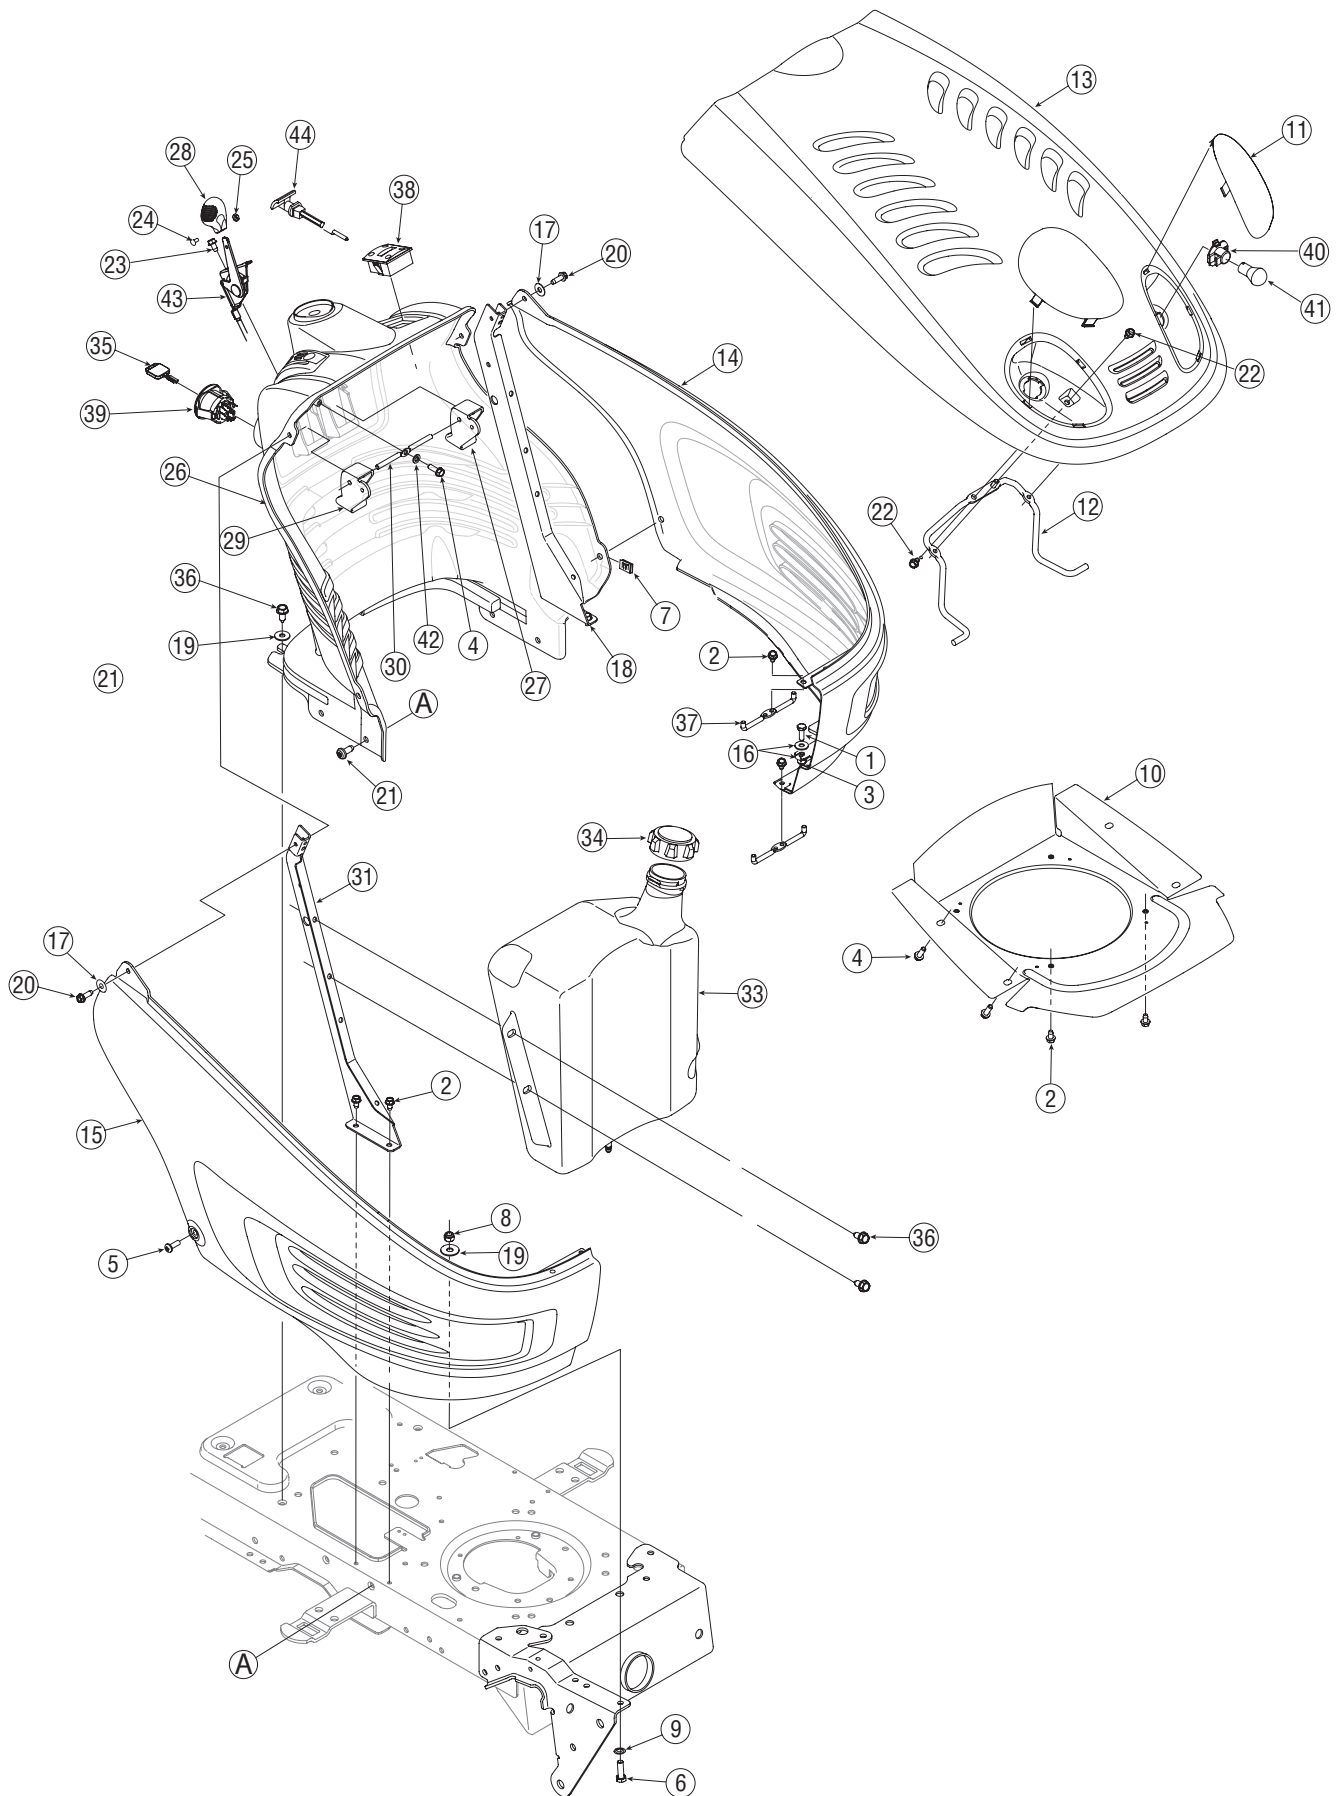


Model 604

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	710-3015	Hex Cap Screw, 1/4-20 x.75	25	712-0142	Hex Nut, 8-32
2	710-0599	Self-tapping Screw, 1/4-20 x.5	26	731-05002	Dash Panel
3	712-04064	Flange Lock Nut, 1/4-20	27	731-04213	Parking Brake Lever
4	710-0895	Self-tapping Screw, 1/4-15 x.75	28	731-1857	Throttle Control Knob
5	710-0924	Pan Phillips Screw, 1/4-20 x.75	29	731-04214	Cruise Control Lever
6	710-0376	Hex Cap Screw, 5/16-18 x 1.0	30	747-1155	Brake/Cruise Pivot Rod
7	712-0292	U-type Speed Nut, 1/4-20	31	783-04285B	Dash Support Plate RH
8	712-04063	Flange Lock Nut, 5/16-18	32	731-2234A	Intake Bellow (Not Shown)
9	726-0201	Speed Nut	33	751-0658E	Fuel Tank, 3-gallon
10	783-0808A	Hood Heat Shield	34	751-0603	Fuel Cap
11	731-1978	RH Headlight Lens	35	725-1745	Ignition Key w/ plastic cover
	731-1979	LH Headlight Lens		725-1744	Ignition Key w/o plastic cover
12	747-1132A	Hood Support Rod	36	710-0726	Self-tapping Screw, 5/16-18 x.75
13	731-1980B	Hood	37	747-04301	Side Panel Support
14	731-1981C	LH Side Panel	38	725-04156	Systems Indicator Monitor, Ammeter
15	731-1982C	RH Side Panel	39	725-04227	Ignition Switch
16	736-0173	Flat Washer,.28 x.74 x.063	40	725-1649	Lamp Socket
17	736-0342	Flat Washer,.283 x.75 x.030	41	725-0963	Lamp, 12V
18	783-04323B	Dash Support Plate LH	42	736-0142	Flat Washer,.281 x.50 x.063
19	736-3078	Flat Washer,.349 x 1.0 x.063	43	746-1086	Throttle Control/Cable
20	710-0642	Self-tapping Screw, 1/4-20 x.75	44	746-1085A	Choke Knob/Cable
21	710-1611B	Self-tapping Screw, 5/16-18 x.75	—	629-04083†	Headlight Wire Harness
22	710-1652	Self-tapping Screw, 1/4-20 x.625	—	629-04103†	Tractor Wire Harness
23	710-1017	Self-tapping Screw, 1/4-14 x.625	—	629-04144†	Jumper Harness Assembly
24	710-3217	Screw, #8-32 x.375			

† Not Shown

Model 605

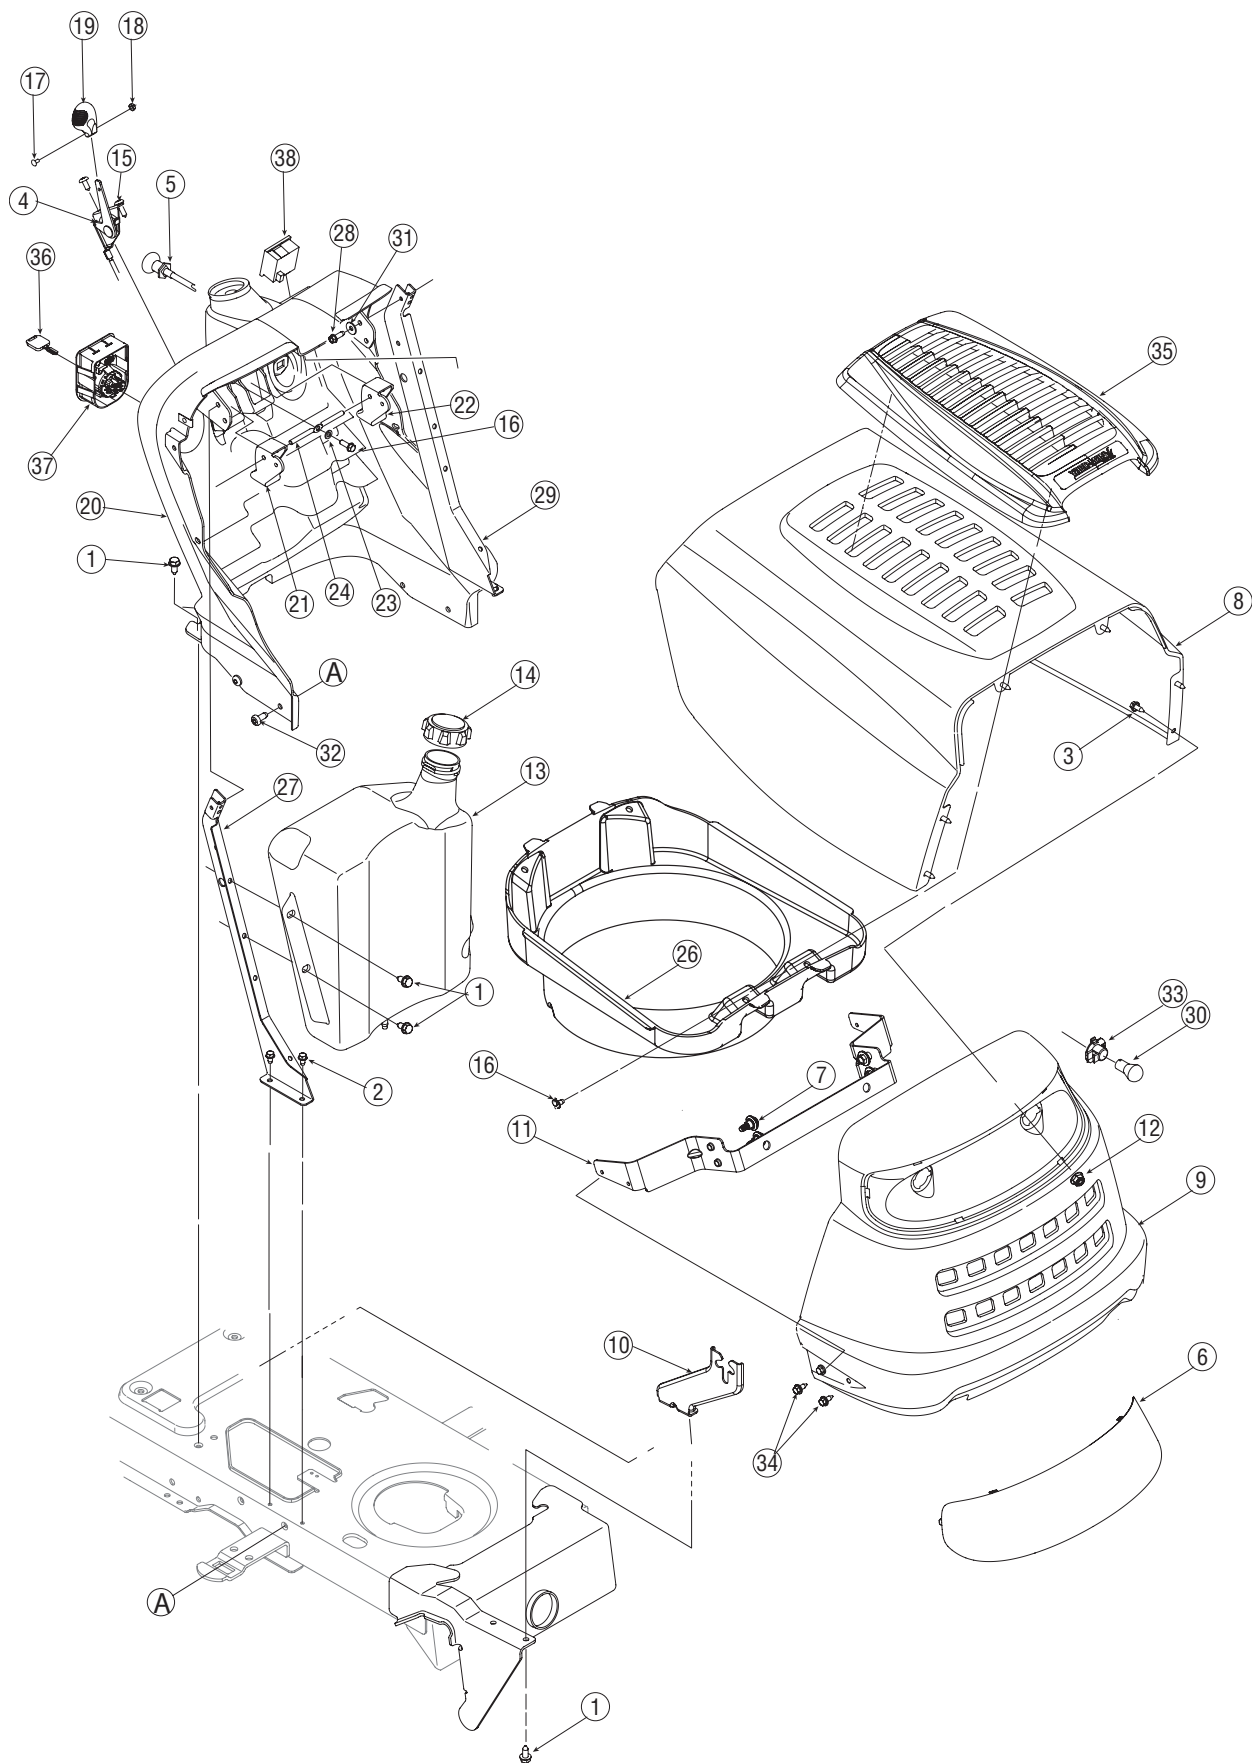


Model 605

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	710-0726	Screw, 5/16-12 x.750	21.	731-04215	Cruise Control Button
2.	710-0599	Self-tapping Screw, 1/4-20 x.5	22.	731-04217	Parking Brake Button
3.	710-0751	Hex Cap Screw, 1/4-20 x.62	23.	736-0142	Flat Washer, 9/32 x 1/2 x 1/16
4.	746-1086	Throttle Control/Cable	24.	747-1196	Brake/Cruise Pivot Rod
5.	746-1085A	Choke Knob/Cable	25.	629-04083†	Headlight Wire Harness
6.	731-04949	Headlight Lens	26.	731-05165	Hood Plenum
7.	738-04091	Shoulder Screw,.43 x.29	27.	783-04285B	RH Dash Support Plate
8.	783-04551	Hood, 1 Style	28.	710-0642	Self-tapping Screw, 1/4-20 x.75
9.	783-04552	Grill, 1 Style	29.	783-04323B	LH Dash Support Plate
10.	783-04578	Pivot Bracket - RH	30.	725-0963	Lamp
	783-04577	Pivot Bracket - LH	31.	736-0270	Bell Washer,.265 x.75 x.062
11.	783-04621	Grill Pivot Bracket	32.	710-1611B	Screw, 5/16-18 x.75
12.	712-04064	Flange Lock Nut, 1/4-20	33.	725-1649	Headlight Socket
13.	751-0658E	Fuel Tank, Three Gallon	34.	710-1652	Hex Index Screw, 1/4-20 x.625
14.	751-0603	Fuel Cap	35.	731-05173	Hood Cover, 5 Style
15.	710-1017	Screw, 1/4-14 x.625	36.	725-1745	Ignition Key w/ plastic cover
16.	710-0895	Self-tapping Screw, 1/4-15 x.75		725-1744	Ignition Key w/o plastic cover
17.	710-3217	Truss Phillips Screw, #8-32 x.375	37.	725-04227	Ignition Switch
18.	712-0142	Hex Nut, #8-32	38.	725-04156	Systems Ind. Monitor w/ Ammeter
19.	731-1857	Throttle Control Knob	—	629-04103†	Wire Harness
20.	731-05001	Dash Panel	—	629-04144†	Jumper Harness Assembly

† Not Shown

Models 604 & 605

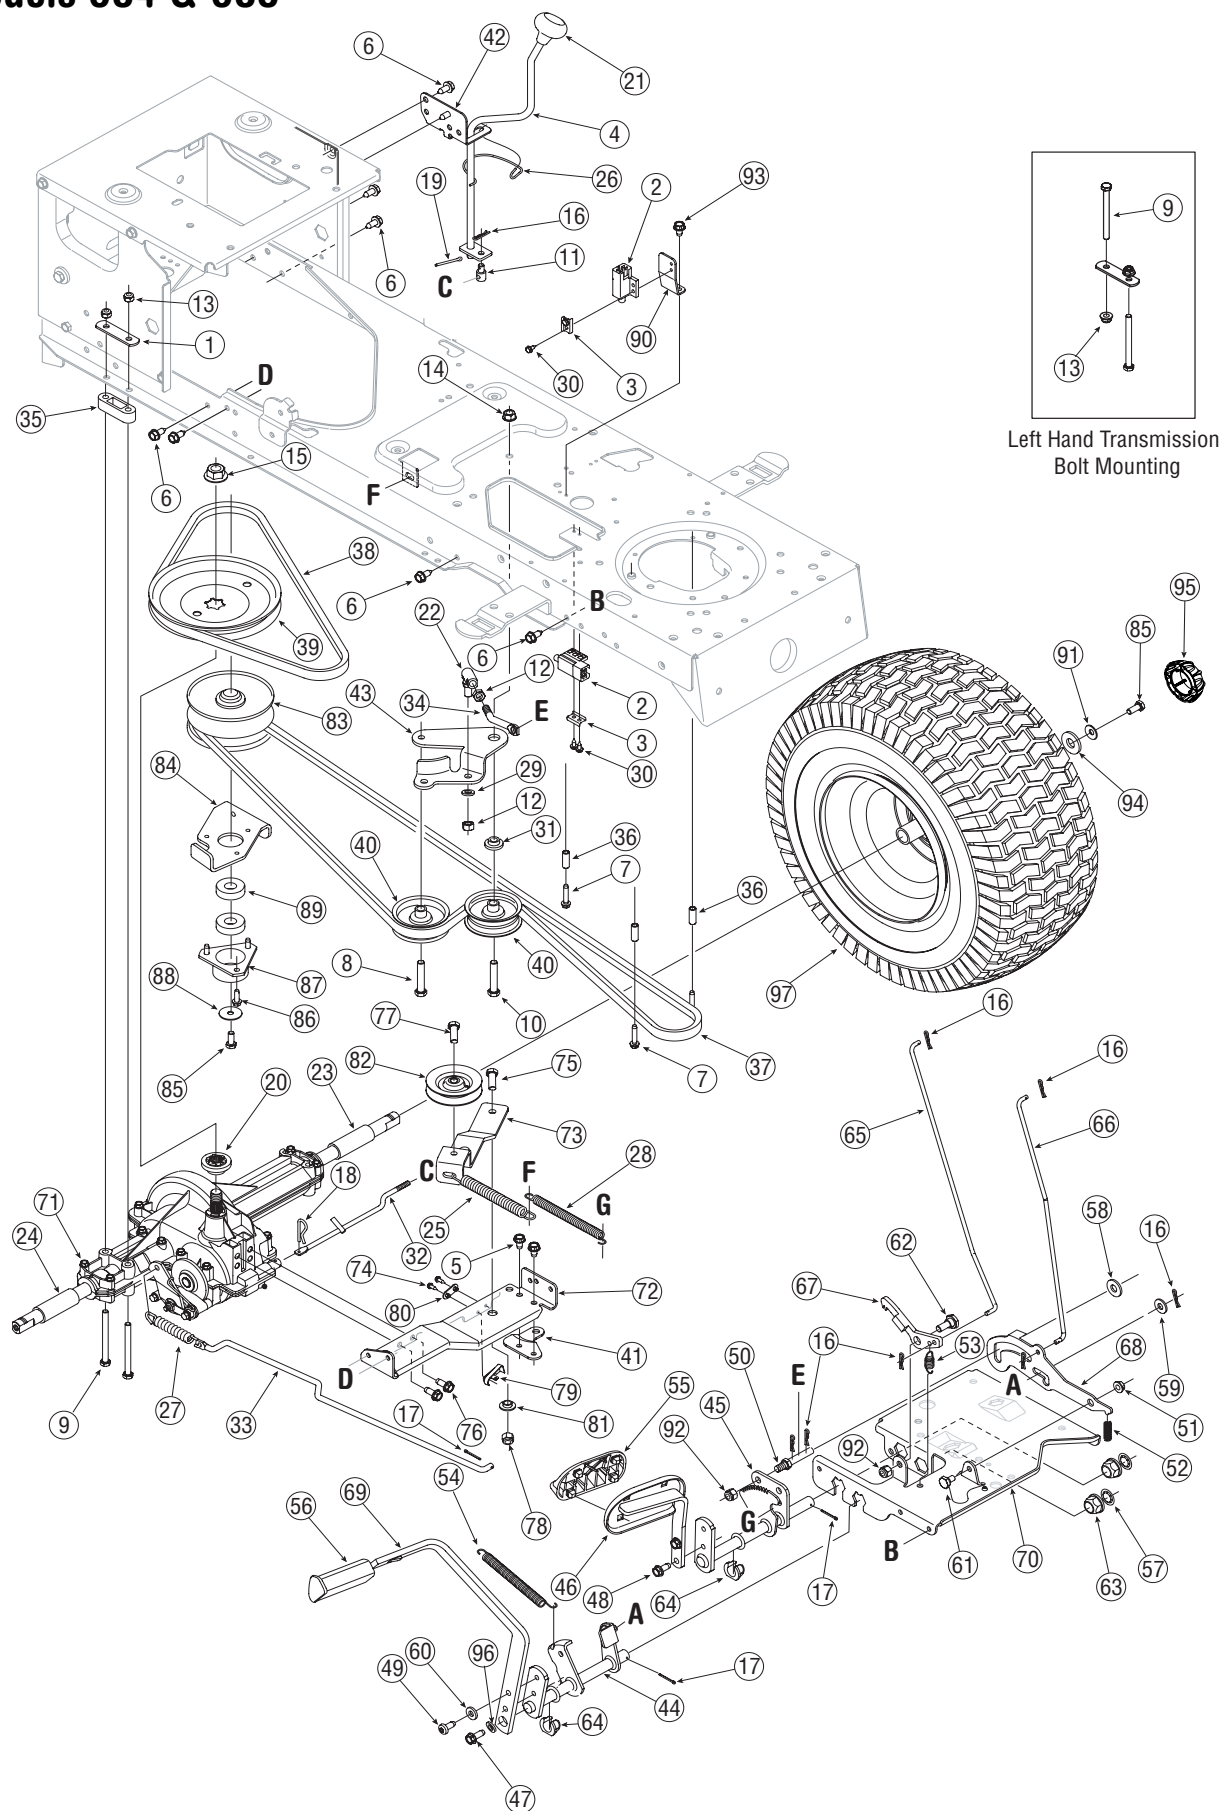


Models 604 & 605

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17840	Mounting Bracket, Transaxle	52	732-0335	Spring, Compression,.405 x 1.17
2	725-04039	Switch, Interlock	53	732-0955	Spring, Extension,.50 OD x 1.41
3	17962	Plate, Switch	54	732-0963	Spring, Extension,.50 OD x 6.37
4	647-04020	Lever Assembly, Shift	55	735-0662	Pad
5	710-0607	Screw, 5/16-18, 0.500	56	735-3049	Pad, Brake
6	710-0726	Screw, 5/16-12, 0.750	57	736-0187	Washer, Flat,.64 x 1.24 x.06, Ht
7	710-0809	Screw, 1/4-20, 1.250	58	736-0262	Washer, Flat,.385 x.870 x.092
8	710-1007	Screw, Sems, 3/8-16, 1.500	59	736-0300	Washer, Flat,.406 x.875 x.059
9	710-1266	Screw, 5/16-18, 3.50, Gr5	60	736-3008	Washer, Flat,.344 x.750 x.120
10	710-3144	Screw, 3/8-16, 2.00, Gr5	61	738-0155	Screw, Shoulder.437 Dia x.162
11	711-0736	Adjustment Ferrule 1/4-20 x 1.	62	738-0380	Screw, Shoulder,.50 x.27 Lg, 3/8-16
12	712-0241	Nut, Hex, 3/8-24, Gr5	63	741-0225	Bearing, Hex Flange
13	712-04063	Nut, Flange Lock, 5/16-18, GrF, Nylon	64	741-3065B	Split Bearing, Hex Flange
14	712-0431	Nut, Flange Lock, 3/8-16, GrF, Nylon	65	747-04093	Rod, Brake Lock
15	712-0700	Nut, Flange, 9/16-18, Gr2	66	747-04096	Rod, Cruise Control
16	714-0104	Pin, Cotter,.072 Dia. x 1.13	67	748-04039B	Latch, Cruise Control
17	714-0111	Pin, Cotter, 3/32, 1.0	68	683-04186	Bracket, Lockout
18	714-0209	Cotter Pin, Internal,.125 Dia.	69	783-0773A	Ped, Brake
19	714-0470	Pin, Cotter, 1/8 x 1.25	70	783-04612	Bracket, Steering Support
20	718-0758A	Pulley Hub, 5/8 Spline	71	618-04034	Transmission, Single Speed
21	720-04028	Knob, Shift	72	683-04055A	Bracket Assembly, Torque
22	723-3018	Ball Joint	73	683-04130	Bracket, Idler
23	731-04602	Sleeve,.758 x.821 x 3.3125	74	710-0227	Screw, #8-18 x.50
24	731-04604	Sleeve,.758 x.821 x 2.4375	75	710-0514	Screw, 3/8-16, 1.00
25	732-0384	Spring, Extension,.62 Dia x 6.12	76	710-0604A	Screw, 5/16-18,.625
26	732-0525	Spring Clip, Shifter	77	710-1315	Screw, 3/8-16, 1.250
27	732-0716	Spring, Extension,.59 OD x 4.00	78	712-0130	Nut, Lock, 3/8-16, Nylon
28	732-0963	Spring, Extension,.50 Dia x 6.37	79	725-1644	Switch Spring, Short
29	736-0169	Washer, Lock, 3/8	80	726-0320	Plate, Insulator
30	710-0224	Screw, #10-16,.50	81	750-04294	Spacer, Shoulder
31	738-0372B	Spacer, Shoulder, 1.00 x.38 x.38	82	756-0116A	Pulley, V-Type, 3.06
32	747-04146	Rod, Shift	83	656-04015	Pulley Assembly, Variable Speed
33	747-04164	Rod, Brake	84	683-04129	Bracket, Pulley
34	747-1127	Idler Rod, Adjustable, 3/8	85	710-0627	Screw, 5/16-24,.750
35	748-0334	Spacer,.68	86	710-0642	Screw, 1/4-20,.750
36	750-0566A	Spacer,.260 x.372 x 1.030	87	718-04012	Cup, Bearing
37	754-0467	Belt, V-Type	88	736-0362	Washer, Flat
38	754-0468	Belt, V-Type	89	741-0600	Ball Bearing
39	756-04002	Pulley, V-Type, 7.25 Dia.	90	783-04707	Switch Bracket, Parking Brake
40	756-0981B	Idler Pulley, Flat 2.75 OD	91	736-0242	Washer, Bell,.340 x.872 x.060
41	783-04283	Bracket, Shift	92	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon
42	783-04360	Bracket, Shift, F-N-R	93	710-0599	Screw, 1/4-20 x.500
43	783-04442	Idler Bracket, Center Double	94	736-0430	Flat Washer,.350 x 1.59 x.062
44	647-0031B	Control Assembly, Brake	95	731-2290A	Hub Cap
45	647-0032A	Control Assembly, Speed	96	736-0119	Lock Washer, 5/16
46	683-0266	Pedal Assembly	97	634-0177	Whl Ass'y Comp., 20 x 10 x 8 (Model 604)
47	710-0650	Screw, 5/16-18, 0.875		634-0104	Whl Ass'y Comp., 20 x 8 x 8 (Model 605)
48	710-1260A	Screw, 5/16-18, 0.750		734-1873	Tire Only 20 x 10 x 8 (Model 604)
49	710-1611B	Screw, 5/16-18, 0.750		734-1730	Tire Only 20 x 8 x 8 (Model 605)
50	711-04159B	Pin, 3/8-16 x 2.68		634-0070	Rim Only w/ Valve Stem (Model 604)
51	712-3004A	Nut, Flange Lock, 5/16-18, Gr5		734-0603A	Rim Only w/ Valve Stem (Model 605)

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 604 & 605 (42" Deck)

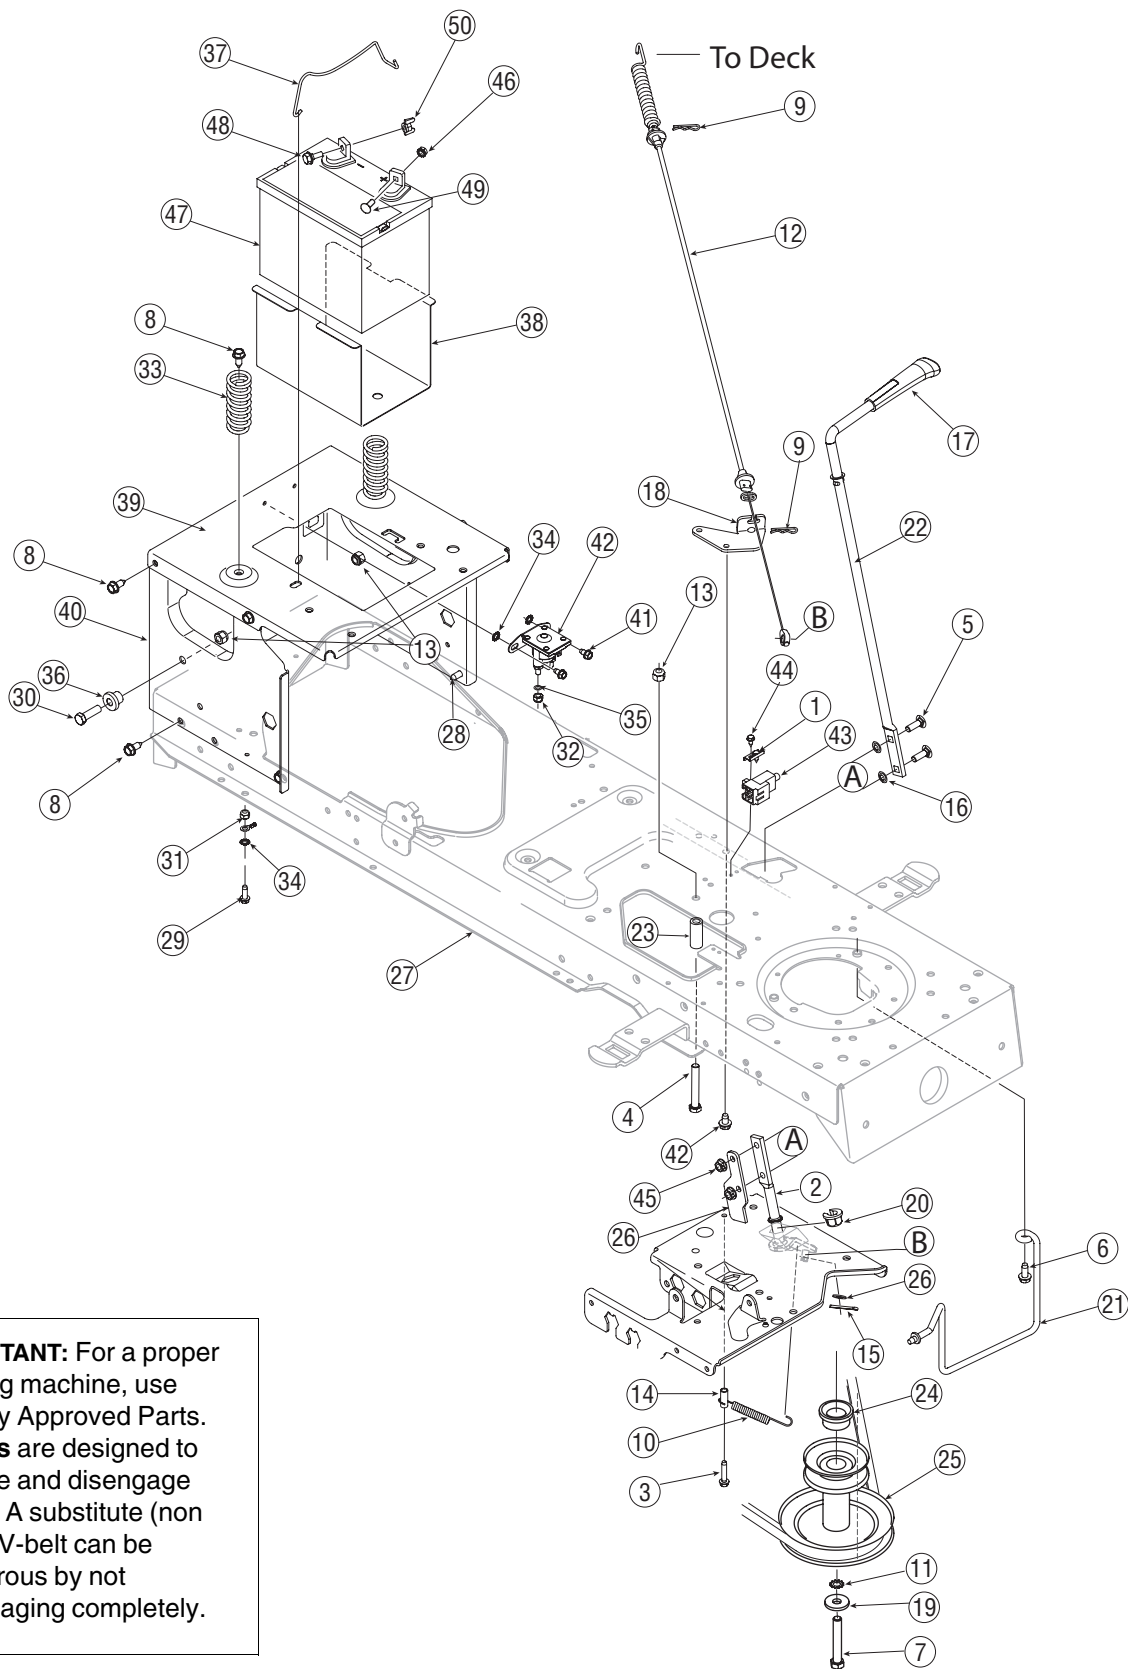


IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Models 604 & 605 (42" Deck)

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17962	Plate, Switch	26	783-0744A	Stop Bracket, Engagement
2	647-04036	Lever Assembly, Engagement	27	683-04173	Frame Assembly, Lower
3	710-0809	Screw, 1/4-20 x 1.250	28	710-0607	Screw, 5/16-18, 0.500
4	710-0859	Screw, 3/8-16, 2.50	29	710-0642	Screw, 1/4-20, 0.750
5	710-0276	Screw, Carriage, 5/16-18, 1.00	30	710-3005	Screw, 3/8-16, 1.25, Gr5
6	710-1260A	Screw, 5/16-18 x.750	31	712-04064	Nut, Flange Lock, 1/4-20, GrF, Nylon
7	710-3157A	Screw, 7/16-20, 3.25, Gr5	32	712-3006	Nut, Hex, 1/4-20, Gr5
8	710-0726	Screw, 5/16-12, 0.750	33	732-04035	Spring, Compression, 1.28 OD x 3.125
9	714-0145	Click Pin	34	736-0222	Washer, Lock, 1/4, External
10	732-04248	Extension Spring,.38OD x 3.9LG	35	736-0329	Washer, Lock, 1/4
11	736-0171	Lock Washer, 7/16	36	738-04058	Spacer, Shoulder,.38 x 1.0 x.70
12	746-04092	Deck Engagement Cable	37	747-04121A	Hold Rod, Battery
13	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon	38	783-0349	Battery Tray
14	750-0566A	Spacer,.260 x.372 x 1.030LG	39	783-04329A	Seat Bracket, Frame
15	714-0470	Pin, Cotter, 1/8 x 1.25	40	783-04375A	Frame, Upper
16	726-0201	Nut, Speed,.3125 ID	41	710-0599	Screw, 1/4-20, 0.50
17	731-2111A	Knob, PTO	42	725-1426	Solenoid, 12V, 100 Amp
18	783-04590	Cable Bracket	43	725-04039	Switch, Interlock
19	736-0322	Washer, Flat,.450 x1.250 x.164	44	710-0224	Screw, #10-16,.50
20	741-0708	Bearing, Flange, Hex Split.500 ID	45	712-04063	Nut, Flange, Lock Nut, 5/16-18
21	747-04307	Keeper Rod, Belt	46	712-0271	Nut, Sems, 1/4-20
22	747-1112D	Engagement Handle, Deck	47	725-1737A	Battery, 190 CCA
23	748-0415B	Spacer,.385 ID x.635 OD x 1.54	48	738-1132	Screw, Shoulder,.250 x.15, 1/4-20
24	750-0956	Spacer, 1.010 x 1.400 x.825	49	710-0703	Screw, Carriage, 1/4-20,.75
25	756-04064A	Pulley, Engine, 3.39 x 6.12 Diameter	50	712-3087	Nut, Wing, 1/4-20

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Models 604 & 605 (46" Deck)

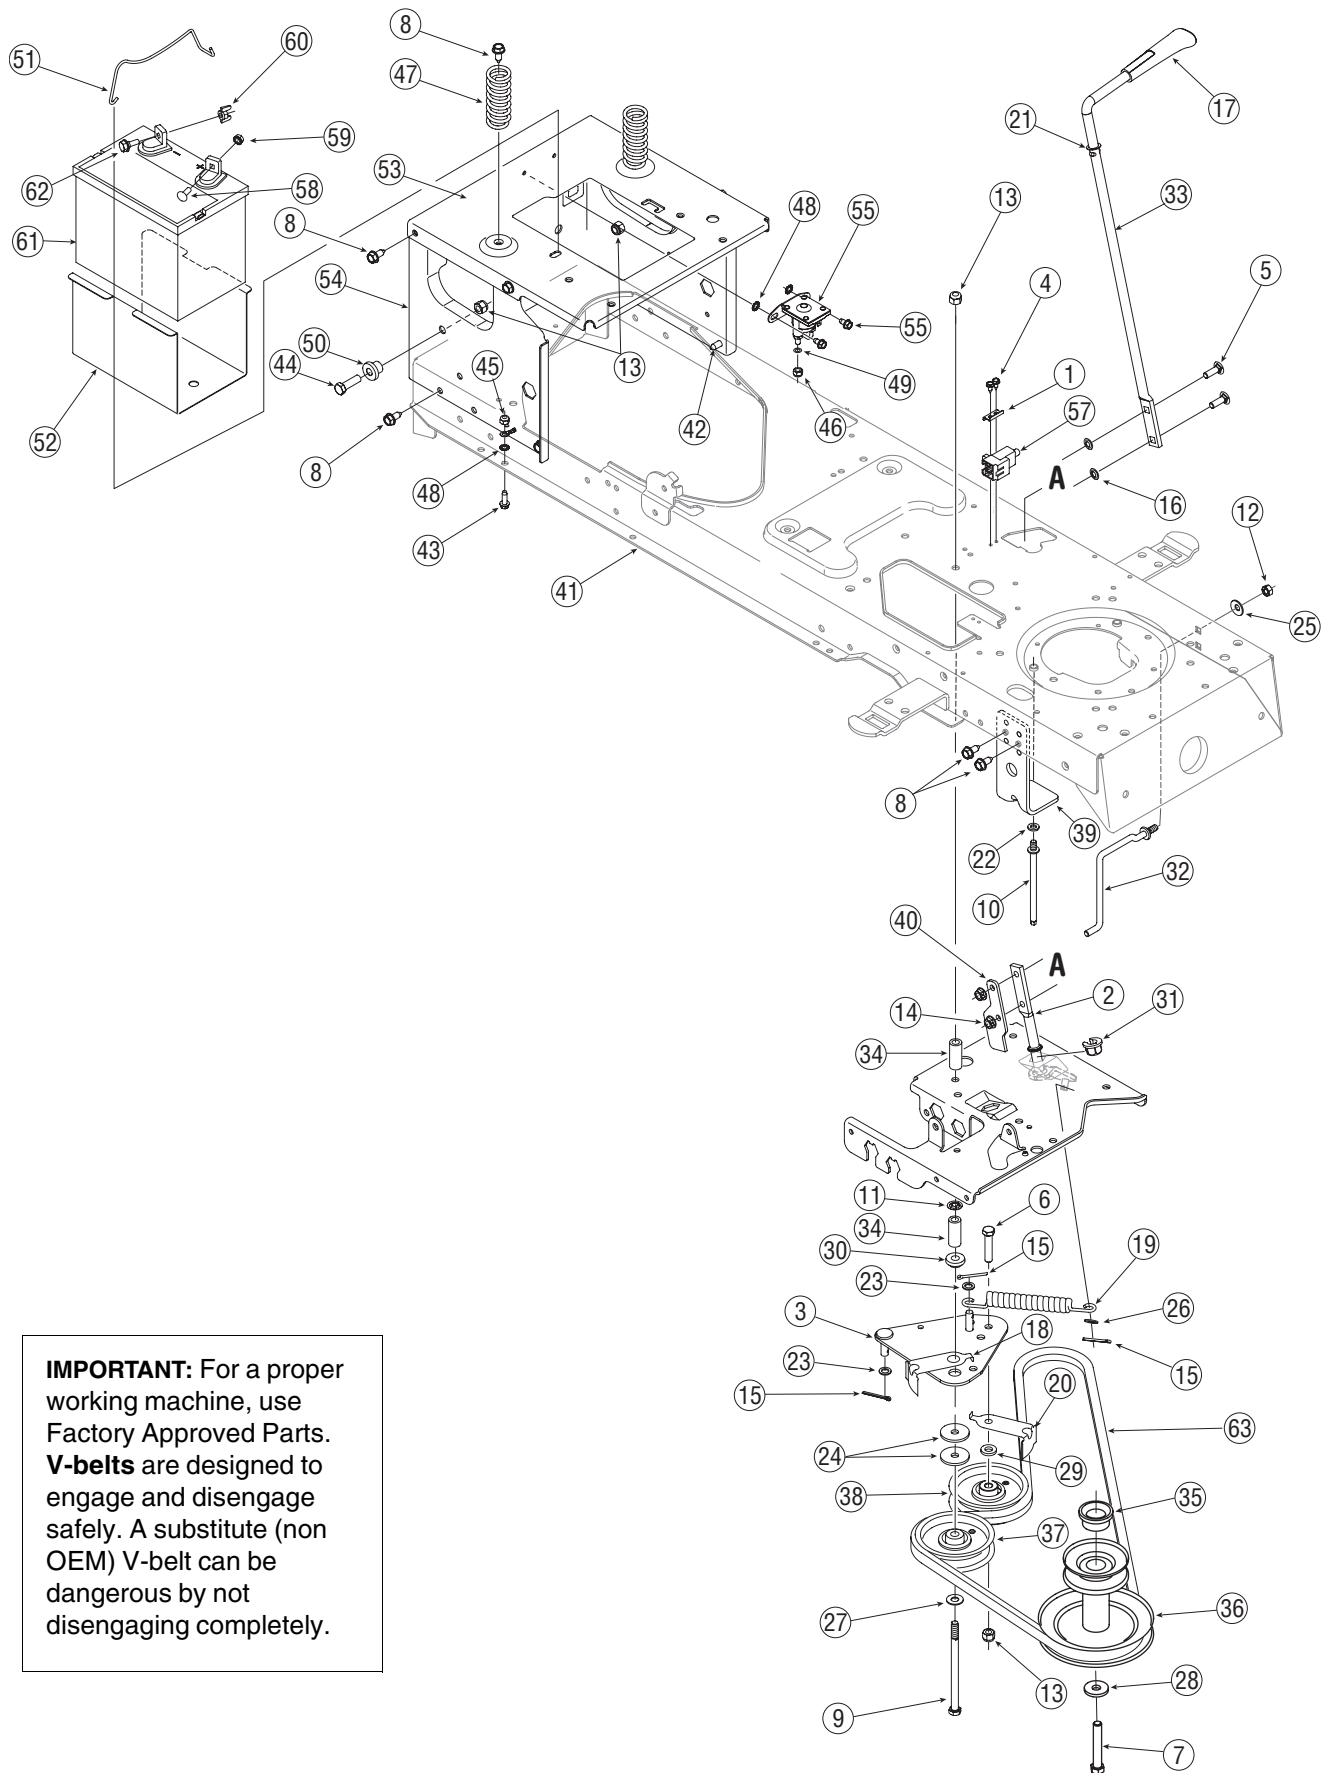

Models 604 & 605 (46" Deck)

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17962	Plate, Switch	33	747-1112D	Engagement Handle, Deck
2	647-0064	Lever Assembly, Engagement	34	748-0415B	Spacer, .385 ID x.635 OD x 1.54
3	683-0302	Plate Assembly, Engagement	35	750-0956	Spacer, 1.010 x 1.400 x.825
4	710-0224	Screw, #10-16, 0.500	36	756-04142	Pulley, Engine, 3.39 x 6.12 Diameter
5	710-0276	Screw, Carriage, 5/16-18, 1.00	37	756-0487	Pulley, Idler, V-type 5/8 x 4.0 Diameter
6	710-0347	Screw, 3/8-16, 1.75, Gr5	38	756-0627D	Pulley, Idler, 3.50 Diameter
7	710-04377	Screw, 7/16-20, 2.75, Gr5	39	783-04467	Stop Bracket, Deck-Up
8	710-0726	Screw, 5/16-12, 0.750	40	783-0744A	Stop Bracket, Engagement
9	710-0831	Screw, 3/8-16, 5.50, Gr5	41	683-04173	Frame Assembly, Lower
10	711-1044	Pin, Belt Guard, 5/16 x 4.75	42	710-0607	Screw, 5/16-18, 0.500
11	712-0229	Nut, Push, 3/8	43	710-0642	Screw, 1/4-20, 0.750
12	712-04063	Nut, Flange Lock, 5/16-18, GrF, Nylon	44	710-3005	Screw, 3/8-16, 1.25, Gr5
13	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon	45	712-04064	Nut, Flange Lock, 1/4-20, GrF, Nylon
14	712-3004A	Nut, Flange Lock, 5/16-18, Gr5	46	712-3006	Nut, Hex, 1/4-20, Gr5
15	714-0470	Pin, Cotter, 1/8 x 1.25	47	732-04035	Spring, Compression, 1.28 OD x 3.125
16	726-0201	Nut, Speed, .3125 ID	48	736-0222	Washer, Lock, 1/4, External
17	731-2111A	Knob, PTO	49	736-0329	Washer, Lock, 1/4
18	732-04245A	Belt Guard	50	738-04058	Spacer, Shoulder, .38 x 1.0 x.70
19	732-0944	Spring, Extension, .75 OD x 6.75	51	747-04121A	Hold Rod, Battery
20	732-1013	Belt Guard	52	783-0349	Battery Tray
21	736-0108	Washer, Flat, .510 x.750 x.033	53	783-04329A	Seat Bracket, Frame
22	736-0119	Washer, Lock, 5/16	54	783-04375A	Frame, Upper
23	736-0140	Washer, Flat, .385 x.62 x.063	55	710-0599	Screw, 1/4-20, 0.50
24	736-0227	Washer, Flat, .390 x 1.500 x.134	56	725-1426A	Solenoid, 12V, 100 Amp
25	736-0242	Washer, Bell, .340 x.872 x.060	57	725-04039	Switch, Interlock
26	736-0275	Washer, Flat, .344 x.688 x.065	58	710-0703	Screw, Carriage, 1/4-20, .75, Gr5
27	736-0300	Washer, Flat, .406 x.875 x.059	59	712-0271	Nut, Sems, 1/4-20
28	736-0322	Washer, Flat, .450 x1.250 x.164	60	712-3087	Nut, Wing, 1/4-20
29	736-3010	Washer, Flat, .407 x.812 x.135	61	725-1750A	Battery, 235 CCA
30	738-0372B	Spacer, Shldr, 1.00 x.38 x.38	62	738-1132	Screw, Shoulder, .250 x.150, 1/4-20
31	741-0708	Bearing, Flange, Hex Split.500 ID	63	754-04064	V-Belt, PTO
32	747-04355	Keeper Rod, Belt			

Models 604 & 605

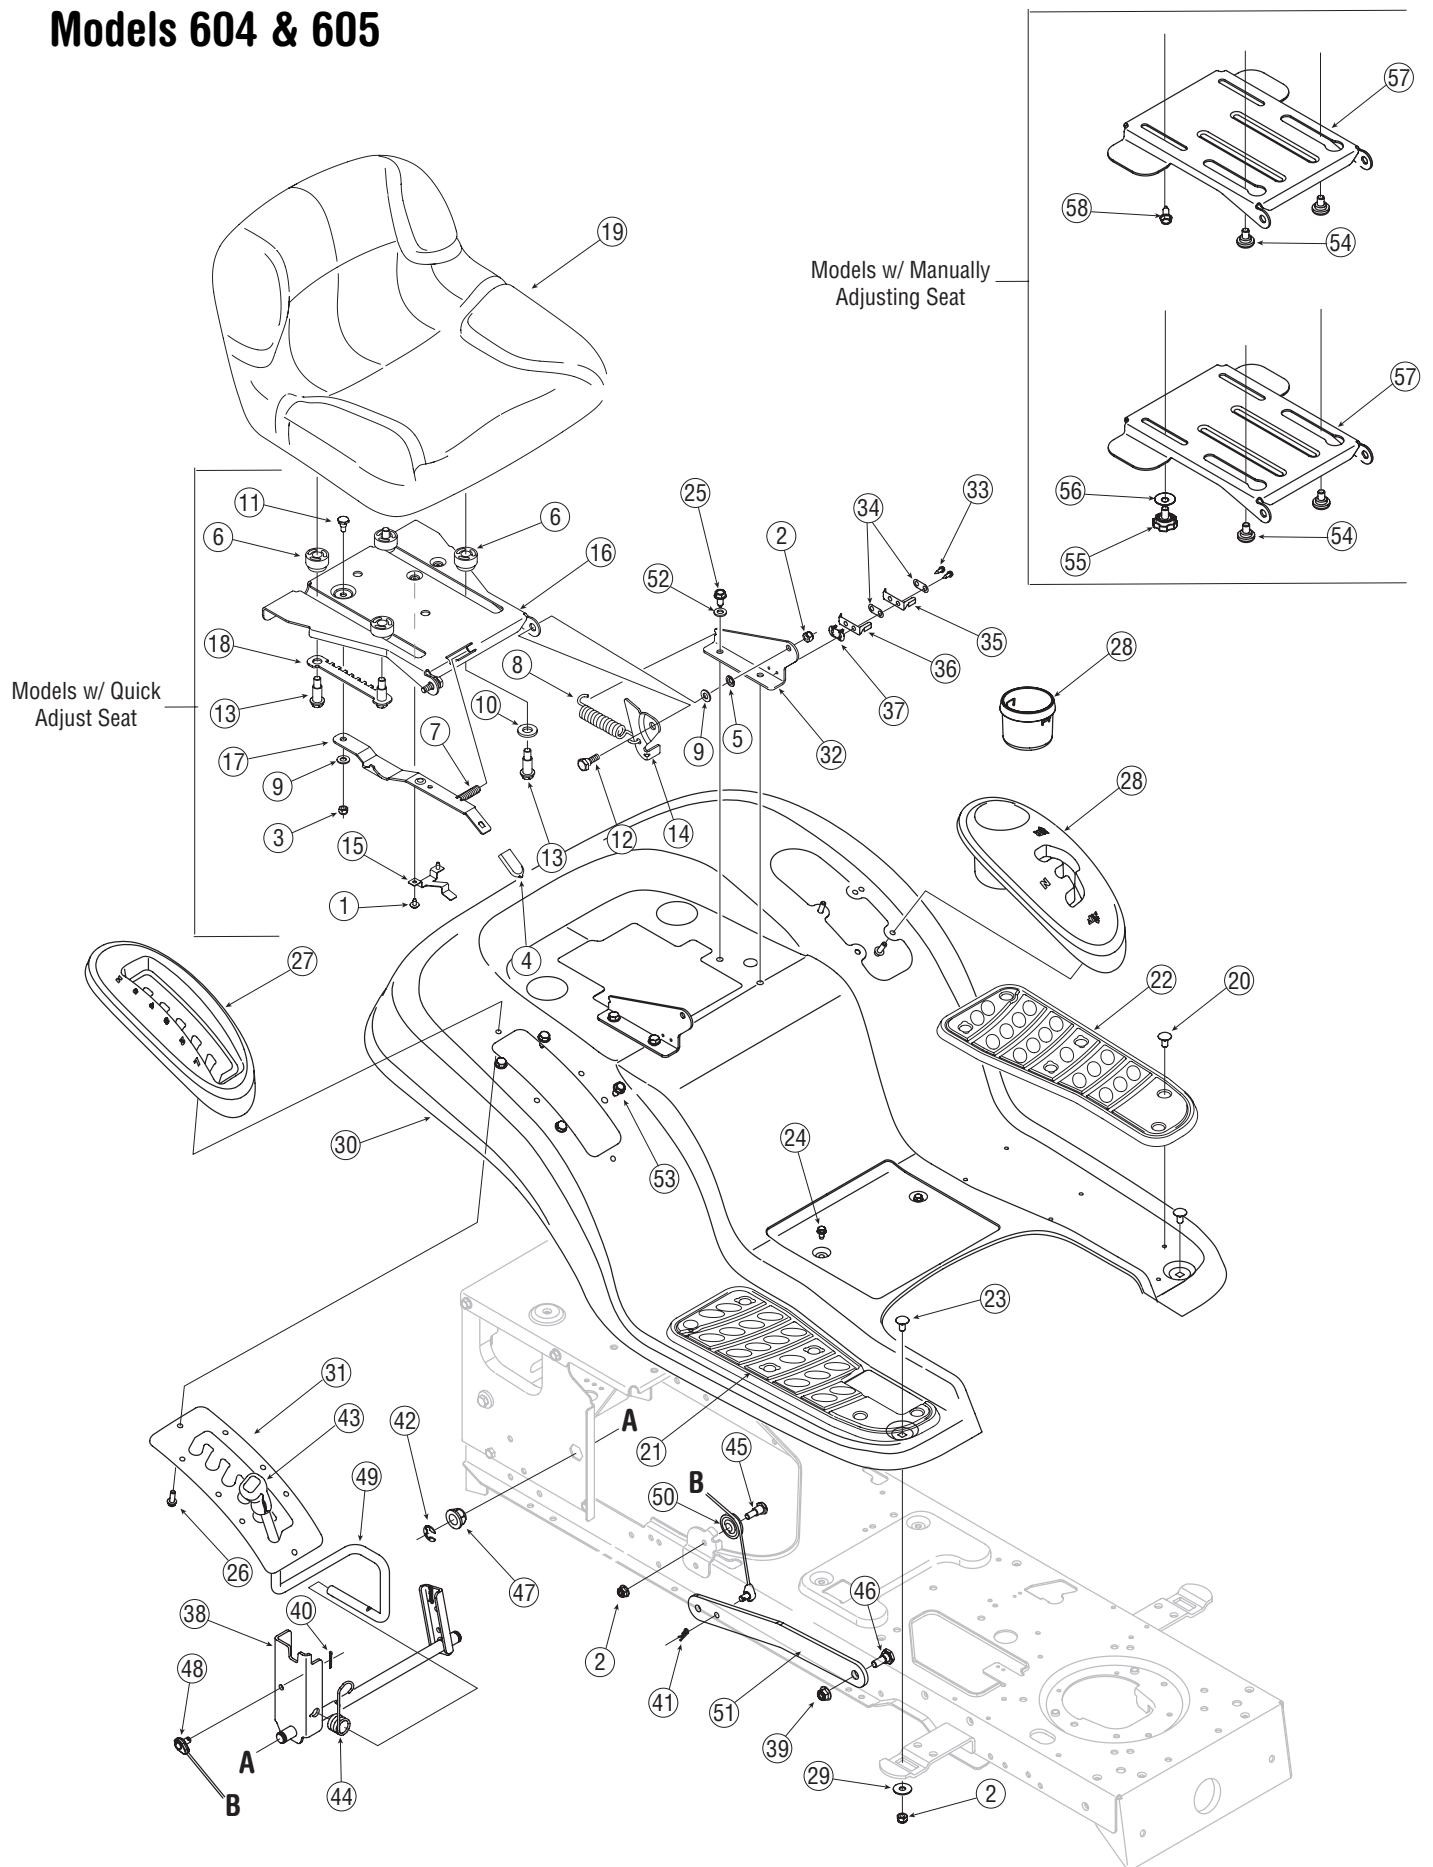


Models 604 & 605

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	710-1268	Screw, #10-16 x.375		783-04314A	Fender (Model 605G)
2	712-04063	Nut, Flange Lock, 5/16-18, GrF, Nylon	31	783-0677	Adjustment Brkt, Lift (Model 604H/605H)
3	712-3027	Nut, Flange Lock, 1/4-20		783-1010A	Adjustment Brkt, Lift (Model 605G)
4	720-0309A	Seat Adjuster Grip	32	783-1489A	Mounting Bracket, Seat
5	726-0201	Nut, Speed,.3125 ID	33	710-0227	Screw, #8-18 x.50
6	731-04074	Spacer	34	726-0279	Plate, Insulator
7	732-0499	Compression Spring,.41 x 1.5	35	725-1303	Spring Switch, Outer
8	732-1184	Spring, Extension,.84 Dia. x 4.6	36	725-1439	Spring Switch, Inner
9	736-0275	Wash, Flat,.344 x.688 x.065	37	726-0278	Plate, Insulator Boss
10	736-3019	Wash, Flat,.531x 1.062 x.134	38	683-04079	Shaft Assembly, Lift
11	738-0137A	Screw, Shoulder,.340 x.285, 1/4-20	39	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon
12	738-0296	Screw, Shoulder,.437 x.268, 5/16-18	40	714-0104	Pin, Cotter,.072 Dia. x 1.13
13	738-0966	Screw, Shoulder,.50 x.925, 3/8-16	41	714-0111	Pin, Cotter, 3/32, 1.0
14	783-0209C	Seat Bracket, Lift (Model 604H/605H)	42	716-0106A	Ring, E Type,.625 Dia.
	683-04193	Seat Bracket, Lift (Model 605G)	43	720-0311	Grip, Handle, 1/2
15	783-0611	Seat Stop	44	732-0874	Spring, Torsion
16	783-0738B	Seat Pivot Bracket	45	738-0138A	Screw, 5/16-18 x.620 Gr2
17	783-0739A	Seat Adjustment Lever	46	738-04130	Screw, Shldr,.625 x.165, 3/8-16 (42" Deck)
18	783-0753	Seat Adjustment Selector		738-0380	Screw, Shld,.50 x.27, 3/8-16 (46" Deck)
19	757-04011C	Medium Back Seat, Yellow	47	741-0225	Bearing, Hex Flange
20	726-3046	Ratchet Clip	48	746-0968	Cable, Lift, 16.16
21	735-0656	RH Foot Pad, Rubber (Model 604H/605H)	49	747-04155	Handle, Lift
	735-0672	RH Foot Pad, Rubber (Model 605G)	50	756-1154	Pulley, Roller
22	735-0657	LH Foot Pad, Rubber (Model 604H/605H)	51	783-04711	Arm, Lift - LH (42" Deck)
	735-0673	LH Foot Pad, Rubber (Model 605G)		783-04494	Arm, Lift - RH (42" Deck)
23	710-0451	Bolt, Carriage, 5/16-18,.75, Gr1		783-0678A	Arm, Lift- LH & RH (46" Deck)
24	710-0599	Screw, 1/4-20, 0.500	52	736-0607	Lock Washer, 5/16
25	710-0726	Screw, 5/16-12, 0.750	53	710-0726	Screw, 5/16-12, 0.750 (Model 604H/605H)
26	710-0895	Screw, 1/4-15, 0.750 (Model 604H/605H)		710-1611B	Screw, 5/16-18 x.750 (Model 605G)
27	731-1990	Cover, Lift Lever (Model 604H/605H)	54	738-04012	Shoulder Screw
28	731-2104C	Cover, w/ Cup Holder (Model 604H/605H)	55	720-04009	Knob, 3/8-16
	731-04591A	Cup Holder (Model 605G)	56	736-0101	Flat Washer,.406 x 1.00 x.030
29	736-3078	Washer, Flat,.344 x 1.0 x.063	57	783-04081A	Seat Pivot Bracket, Manually Adjusted
30	783-04333A	Fender (Model 604H/605H)	58	710-0870	Hex Head Washer Screw, 3/8-16 x.625

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 604 & 605

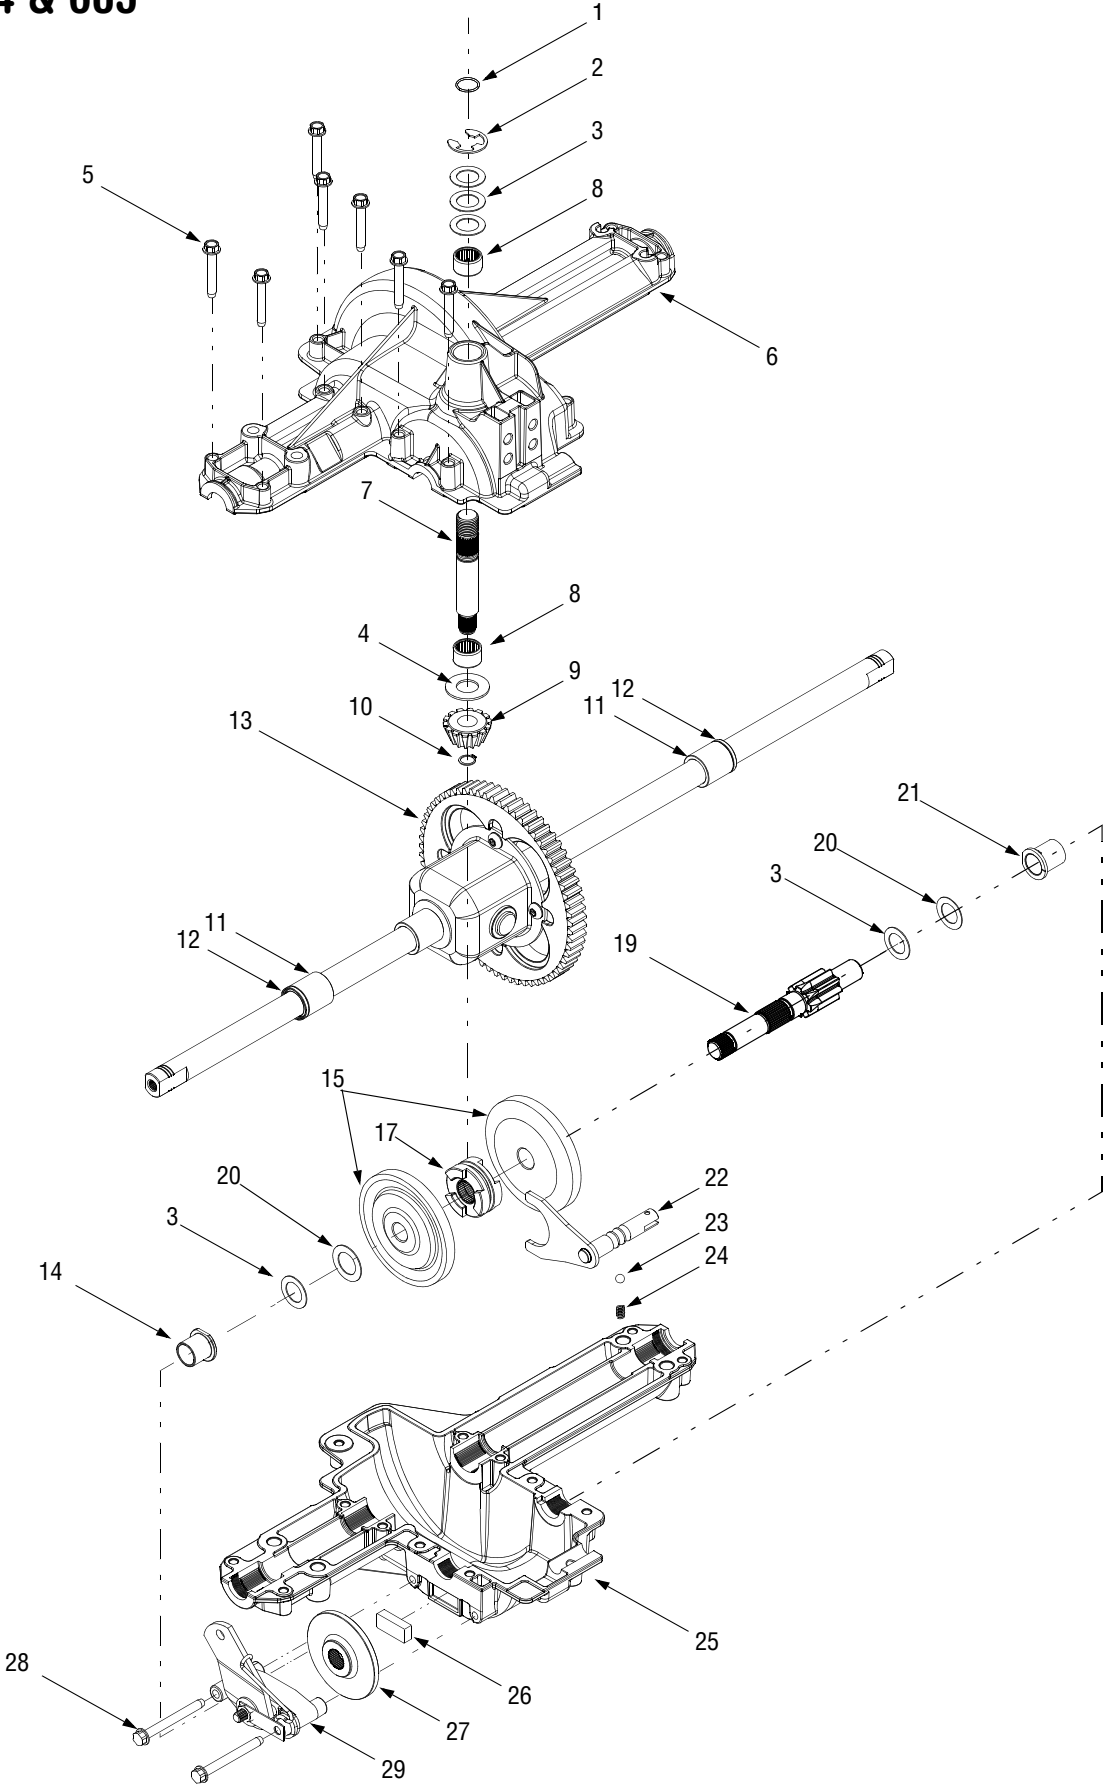


Models 604 & 605

REF. NO.	PART NO.	DESCRIPTION
1	732-0614	Ring, Wire
2	716-0231	Ring, E Type,.750
3	736-0336*	Flat Washer, 5/8 x 1.0 x.030
	736-0337*	Flat Washer, 5/8 x 1.0 x.040
	736-0349*	Flat Washer, 5/8 x 1.0 x.020
4	736-0335	Washer, Thrust.635 x 1.26 x.06
5	710-1325	Self-tapping Screw, 1/4-20 x 1.625
6	719-04017	Upper Housing
7	711-1109	Input Shaft
8	741-0335	Needle Bearing,.625 x.813 x.495
9	717-1464	14-tooth Bevel Pinion
10	716-0108	Retaining Ring,.437
11	741-0340	Sleeve Bearing,.75 x 1.0 x 1.0
12	721-0338	Seal,.75 x 1.0 x.125
13	618-04041	Differential Assembly
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	717-04056	42-tooth Bevel Gear
17	718-04045	Clutch Collar
19	711-04134	Drive Shaft
20	736-0495*	Thrust Washer, 1.0 x.632 x.0
	736-0494*	Flat Washer,.632 x 1.00 x.035
21	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
22	611-0011	Detent Shaft Assembly
23	741-0862	Detent Ball
24	732-0863	Compression Spring
25	719-04018	Lower Housing
26	717-0678	Brake Puck
27	761-0202	Brake Disc
28	710-1206	Self-tapping Screw, 1/4-20 x 2.375
29	661-0001	Brake Assembly
—	737-0148	Grease (19 oz.)

*Use applicable washers (ref. no.'s 3 or 20) in this application allowing .0150/.0020 in. end-play.

NOTE: If rebuilding the upper housing, include two ounces (2 oz.) of Unirex[®] N3 grease (Part No. 737-0289) in the input shaft cavity.

Models 604 & 605 (42" Deck)

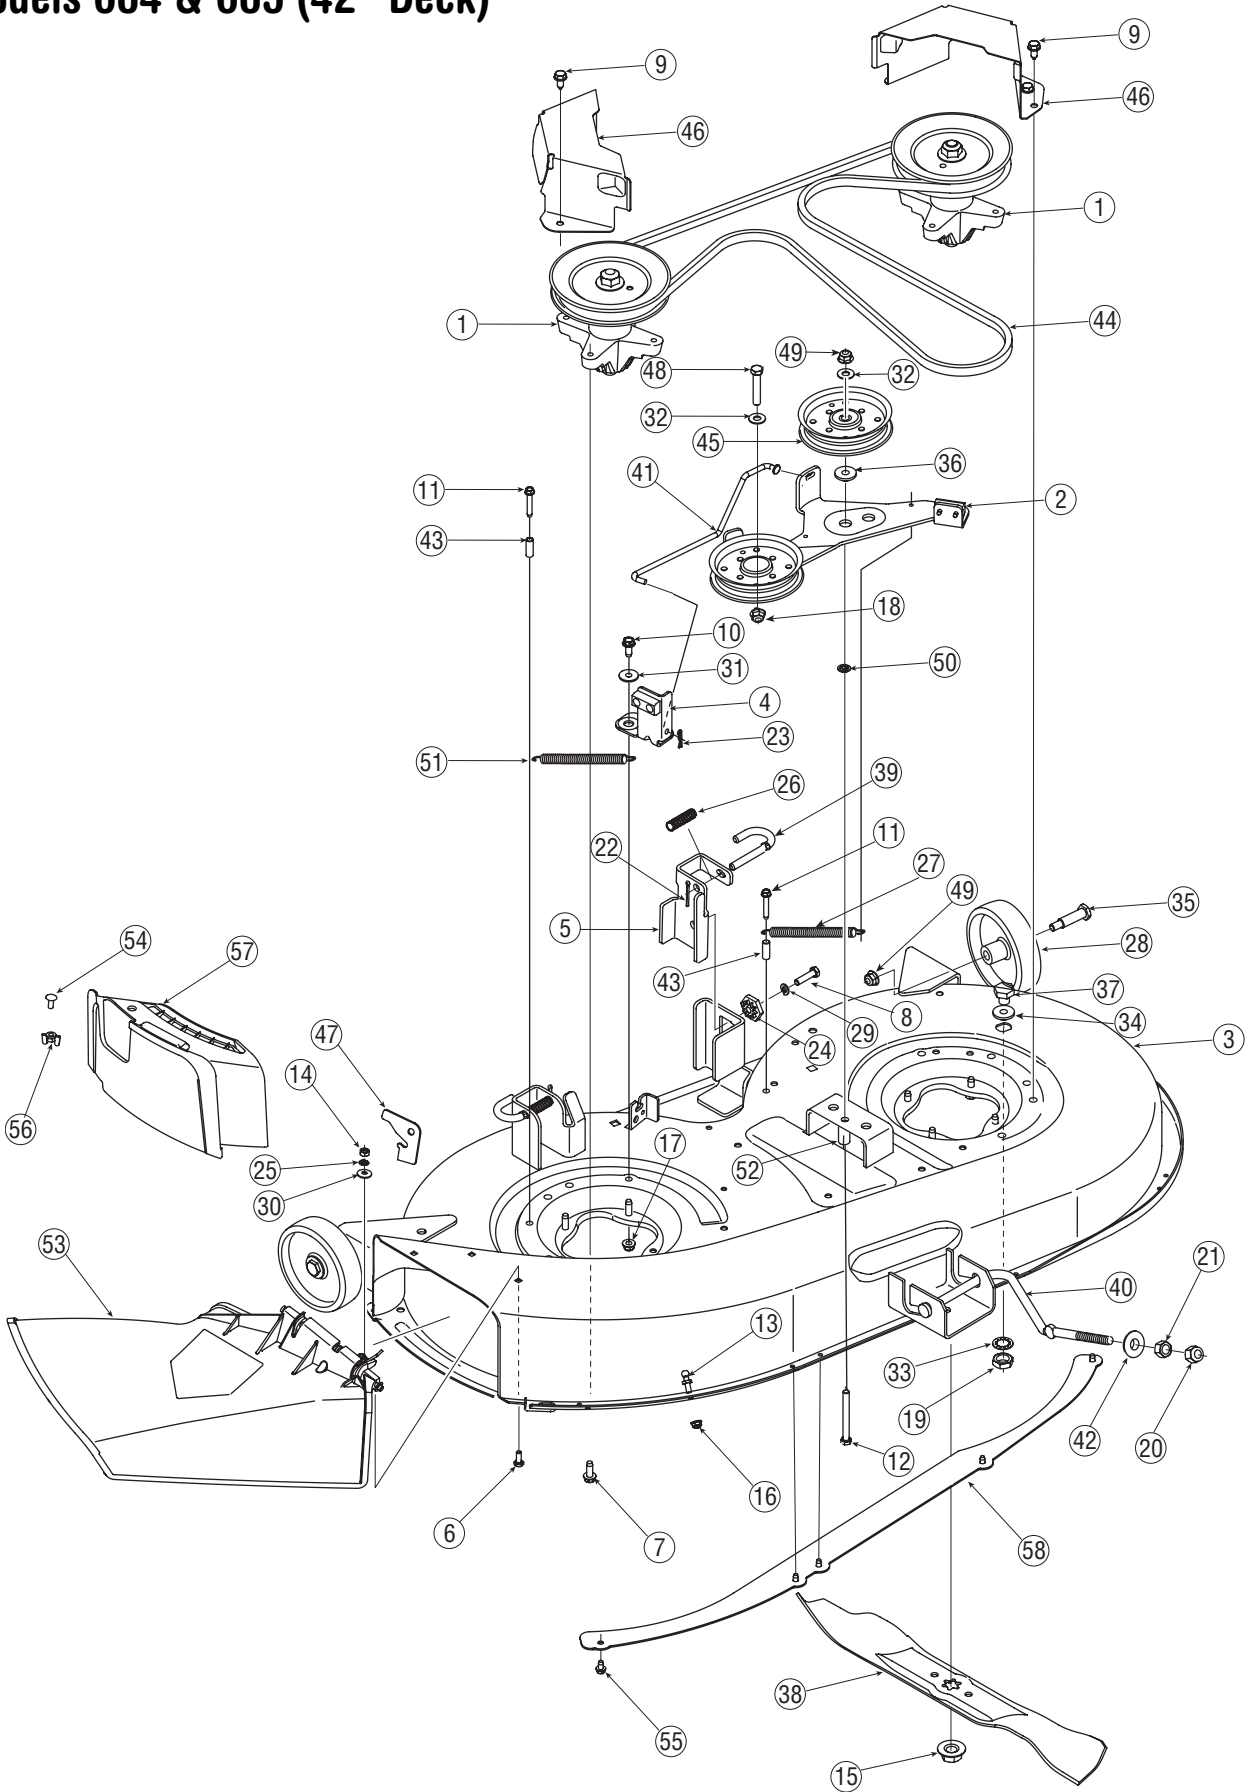

Models 604 & 605 (42" Deck)


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	618-0624	Pulley/ Spindle Assembly	30	736-0270	Bell Washer, .265 x .75 x .062
2	683-04138	Deck Brake Assembly	31	736-0289	Shoulder Bushing, .320 ID x .135 Lg.
3	683-04162	42" Deck Assembly	32	736-0267	Flat Washer, .385 x .87 x .06
4	683-04167	Deck Brake Assembly	33	736-0225	Lock Washer, 5/8
5	683-0254B	Deck Hanger Bracket Assembly	34	736-0187	Flat Washer, .64 x 1.24 x .06
6	710-0751	Screw, 1/4-20 x .620	35	738-0373	Shoulder Screw, .498 x 1.53 x 3/8-16
7	710-0650	Screw, 5/16-18 x .875	36	738-04162	Shoulder Spacer, .8540 x .200
8	710-0528	Screw, 5/16-18 x 1.25	37	738-04146	Plug
9	710-0726	Screw, 5/16-12 x .750	38	742-0616A	Blade, 21.23", Star 3-in-One
10	710-1260A	Screw, 5/16-18 x .750	39	747-1116	Deck Release Handle Rod
11	710-0778	Screw, 1/4-20 x 1.500	40	747-04269A	Front Deck Adjustment Rod
12	710-3085	Screw, 3/8-16 x 3.50	41	747-04379	Brake Control Rod
13	711-04069	Grass catcher Pin	42	748-04069	Deck Lift Pivot Cup
14	712-3006	Hex Nut, 1/4-20	43	750-0566A	Spacer, .260 x .372 x 1.030 Lg.
15	712-0417A	Flange Nut, 5/8-18	44	754-04060B	V-Belt, 96.3 Lg.
16	712-04064	Flange Lock Nut, 1/4-20	45	756-04129	Idler Pulley, 4.25" Dia.
17	712-04063	Flange Lock Nut, 5/16-18	46	783-04327	Belt Cover
18	712-04065	Flange Lock Nut, 3/8-16	47	783-1025	Chute Stop
19	712-0641	Hex Nut, M16-1.5	48	710-3144	Screw, 3/8-16 x 2.00
20	712-3083	Hex Lock Nut, 1/2-13	49	712-0431	Flange Lock Nut, 3/8-16
21	712-0206	Hex Nut, 1/2-13	50	712-0229	Push Nut, 3/8
22	714-0470	Cotter Pin, 1/8 x 1.25	51	732-04287	Extension Spring, .500 Dia. x 6.375 Lg
23	714-0104	Cotter Pin, .072 Dia. x 1.13 Lg.	52	750-04446	Spacer, 3/8 ID x .68 OD x 1.46 Lg
24	717-04074	Deck Adjustment Gear	53	731-1032B	Discharge Chute
25	726-0233	Push Nut, .25 ID x .50 OD	54	710-0134†	Carriage Screw, 1/4-20 x .62
26	732-0306A	Compression Spring, .531 OD x 1.75 Lg.	55	710-0599†	Screw, 1/4-20 x .500
27	732-0308A	Extension Spring, .50 Dia. x 6.37 Lg.	56	712-3087†	Wing Nut, 1/4-20
28	734-0973	Deck Wheel	57	731-2363†	Mulch Plug
29	736-0119	Lock Washer, 5/16	58	783-1146A†	Deck Skirt

† If Equipped

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 604 & 605 (46" Deck)

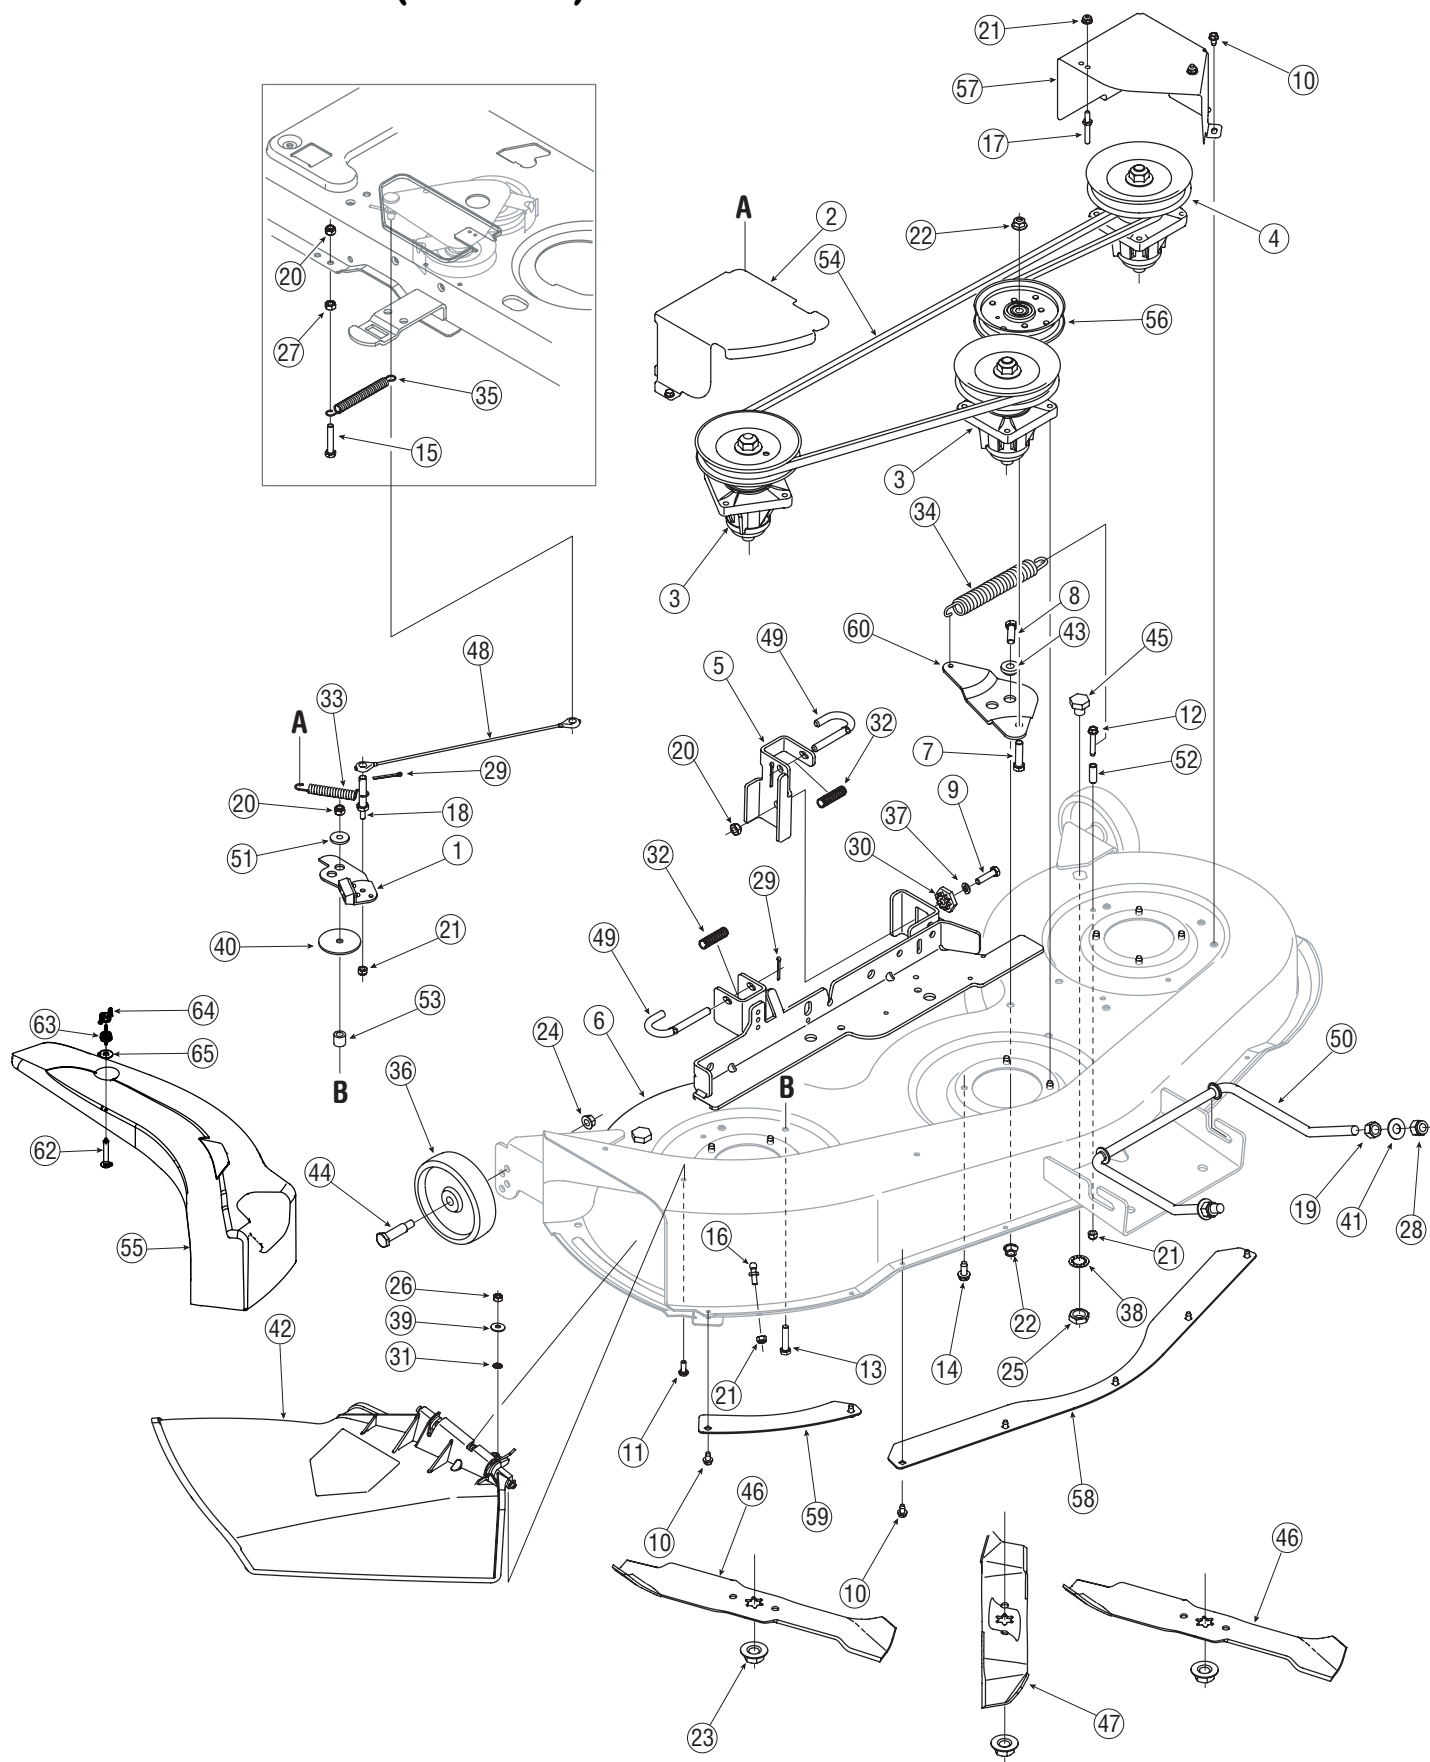

Models 604 & 605 (46" Deck)

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17116	Brake Assembly, Deck	34	732-0594A	Spring, Extension,.91 Dia x 7.33
2	17258D	RH Belt Cover, Deck 46"	35	732-04197	Spring, Extension,.68 OD x 5.00 Lg
3	618-0240A	Spindle Assembly, 5.00 Dia.	36	734-0973	Wheel, Deck 5.0 x 1.38
4	618-04134B	Spindle Ass'y, Double Pulley	37	736-0119	Washer, Lock, 5/16
5	683-0254B	Hanger Bracket Assembly	38	736-0225	Washer, Lock, 5/8
6	683-04104A	Deck Weldment	39	736-0270	Washer, Bell,.265 x.75 x.062
7	710-0344	Screw, 3/8-16, 1.50, Gr5	40	736-0418A	Washer, Flat,.34 x 2.25 x.10
8	710-0514	Screw, 3/8-16, 1.00, Gr5	41	736-3084	Washer, Flat,.51 x 1.12 x.06
9	710-0528	Screw, 5/16-18, 1.25, Gr5	42	731-1032B	Chute Assembly
10	710-0599	Screw, 1/4-20, 0.500	43	738-0347	Spacer, Shoulder,.625 ID x.169
11	710-3015	Screw, 1/4-20 x.75, Gr5	44	738-0373	Spacer, Shoulder,.498 x 1.53, 3/8-16
12	710-0778	Screw, 1/4-20, 1.500	45	738-04146	Plug, Screw, M16 x 1.5
13	710-0805	Screw, 5/16-18, 1.50, Gr5	46	742-0611A	Blade, 16.28", Star 3-in-One
14	710-1260A	Screw, Ld, 5/16-18, 0.750	47	742-0612A	Blade, 14.88", Star 3-in-One
15	710-3180	Screw, 5/16-18, 1.75, Gr5	48	746-1107	Cable, 12.00"
16	711-04069	Pin, Grass catcher, 1/4-20	49	747-1116	Rod, Deck Release
17	711-0993	Belt Guard Pin 1/4 Dia x 1.43	50	747-1130B	Rod, Deck
18	711-1554	Pin, 1/4-20, 3/8 x 2.0	51	748-0234	Shoulder Spacer
19	712-0206	Nut, Hex, 1/2-13, Gr5	52	750-0566A	Spacer,.260 x.372 x 1.030
20	712-04063	Nut, Flange Lock, 5/16-18, GrF, Nylon	53	750-1320	Spacer,.375 x.63 x.595
21	712-04064	Nut, Flange Lock, 1/4-20, GrF, Nylon	54	754-0349	Belt, V-Type, Poly
22	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon	55	731-1636†	Mulch Plug
23	712-0417A	Nut, Flange, 5/8-18	56	756-04129	Pulley, Idler, 4.25" Dia.
24	712-0431	Nut, Flange Lock, 3/8-16, GrF	57	783-1348B	Belt Cover, LH
25	712-0641	Nut, Hex, M16-1.5	58	783-0141	Deck Skirt, Center
26	712-3006	Nut, Hex, 1/4-20, Gr5	59	783-0142	Deck Skirt, RH
27	712-3010	Nut, Hex, 5/16-18, Gr5	60	783-04641	Bracket, Idler
28	712-3083	Nut, Hex Lock, 1/2-13, Gr8, Nylon	61	783-1025	Stop, Chute
29	714-0470	Pin, Cot, 1/8 x 1.25	62	710-0578†	Screw, 1/4-20 x 1.500
30	717-04074	Adjustment Gear, Deck	63	712-3006†	Hex Nut, 1/4-20
31	726-0233	Nut, Push,.25 ID x.50 OD	64	712-3087†	Wing Nut, 1/4-20
32	732-0306A	Spring, Compression,.531 OD x 1.75	65	736-0173†	Flat Washer,.28 x.74 x.063
33	732-0429A	Spring, Extension,.50 Dia x 3.97			

† If Equipped

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. **NOT** all parts listed above and pictured on the previous page are standard equipment.