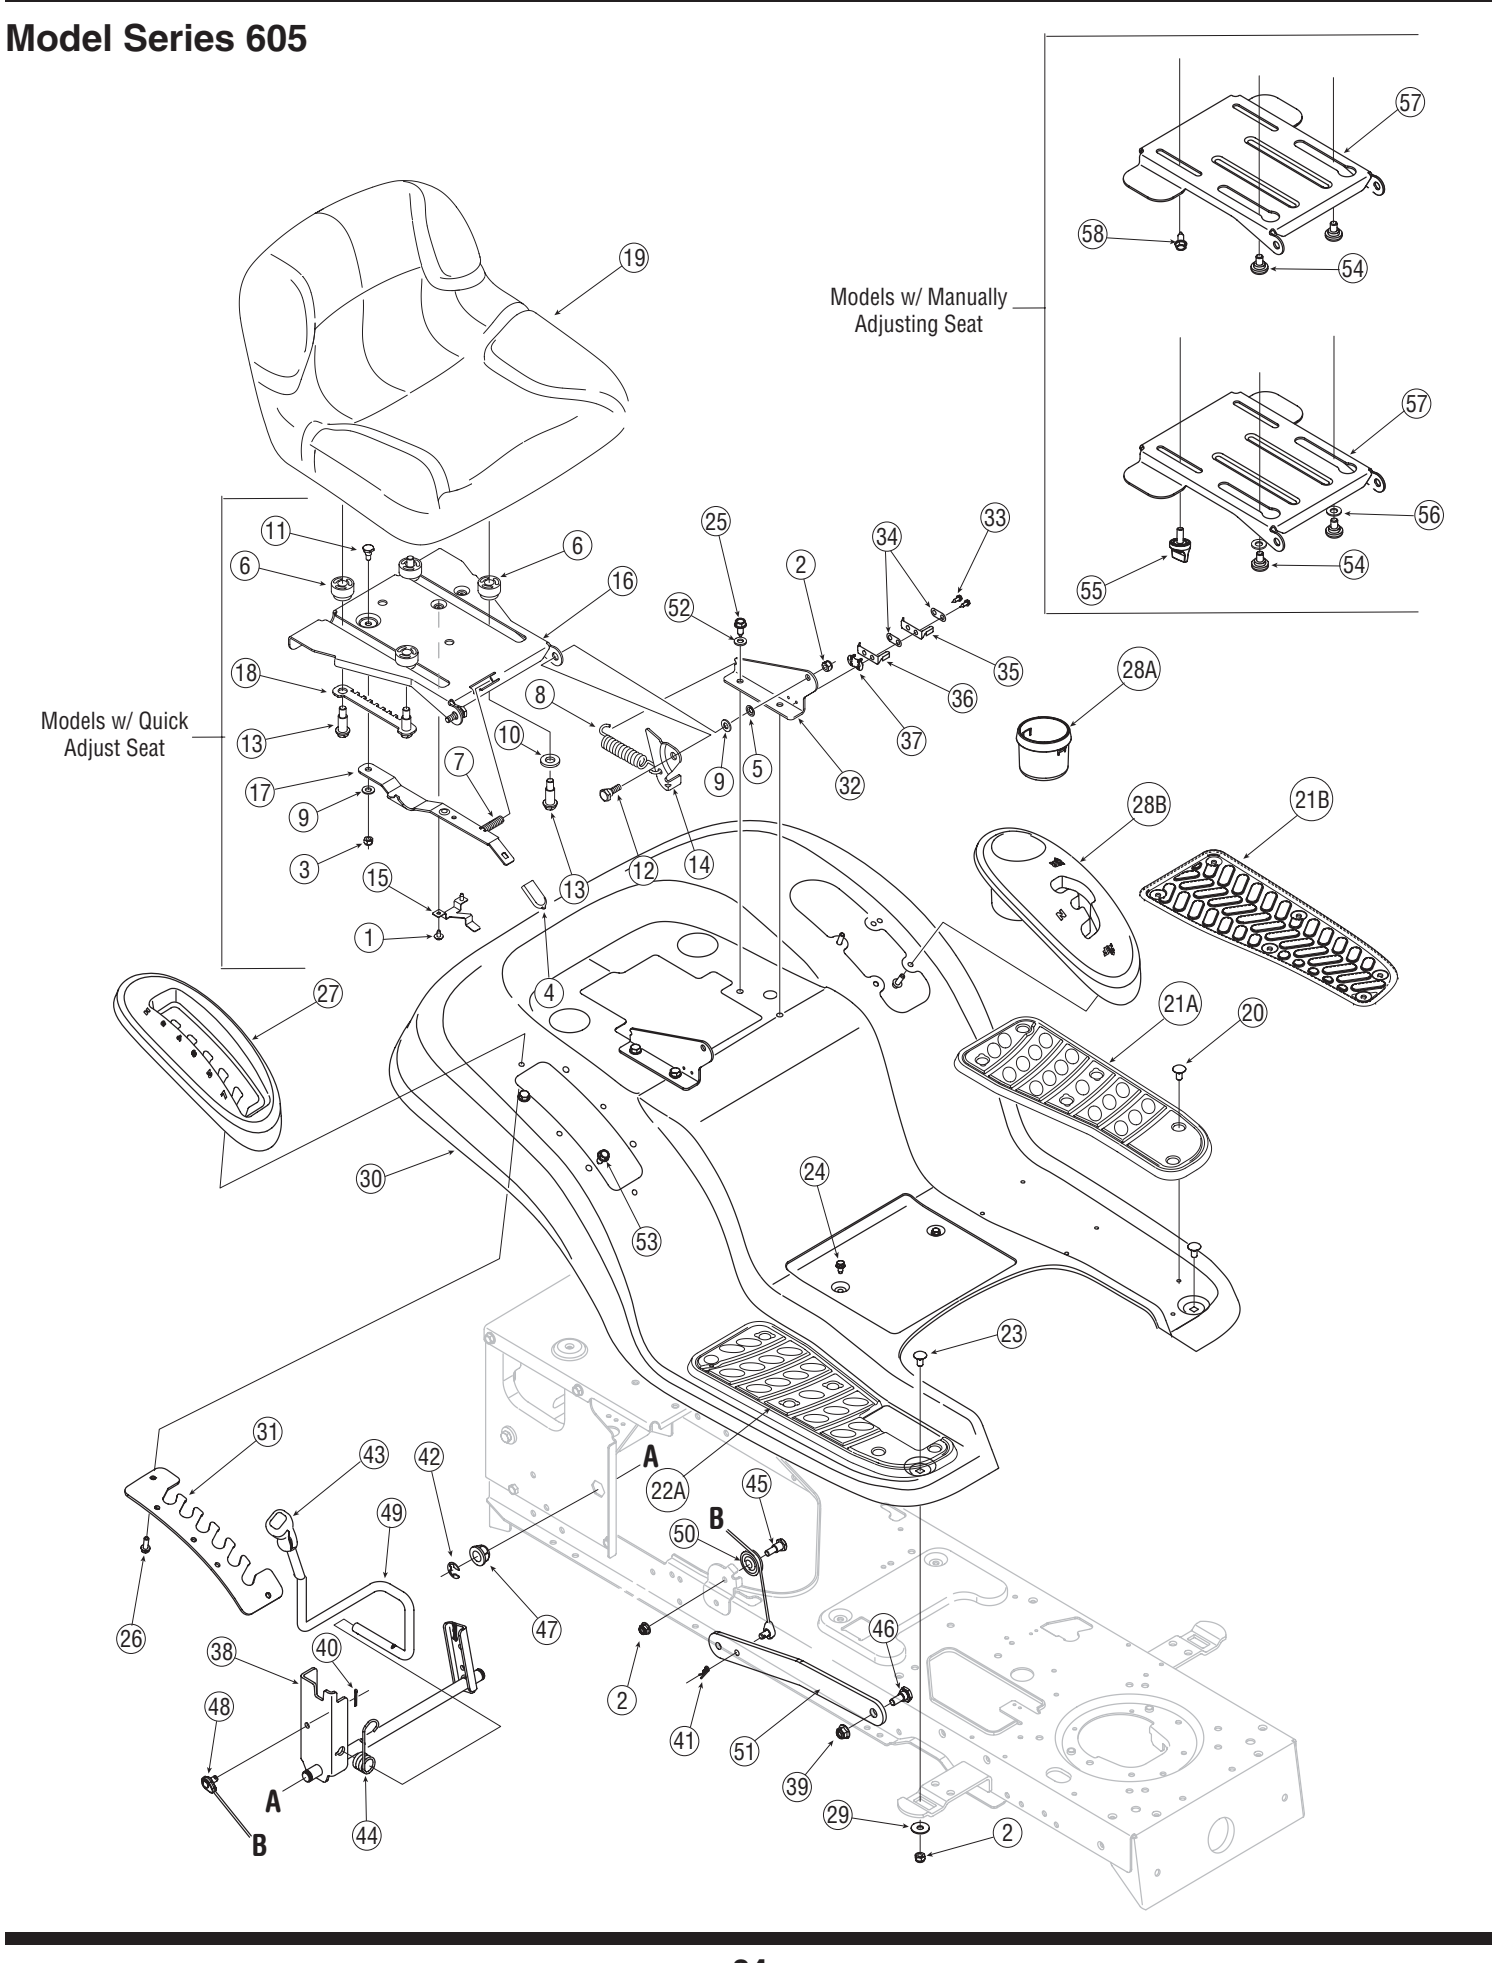



Ref. No.	Part No.	Description
1	710-1268†	Screw, #10-16 x.375
2	712-04063	Nut, Flange Lock, 5/16-18, GrF
3	712-3027†	Nut, Flange Lock, 1/4-20
4	720-0309A†	Seat Adjuster Grip
5	726-0201†	Nut, Speed,.3125 ID
6	731-04074†	Spacer
7	732-0499†	Compression Spring,.41 x 1.5
8	732-1184	Spring, Extension,.84 Dia. x 4.6
9	736-0275†	Wash, Flat,.344 x.688 x.065
10	736-3019†	Wash, Flat,.531x 1.062 x.134
11	738-0137A†	Screw, Shld, .340 x.285, 1/4-20
12	738-0296	Screw, Shoulder,.437 x.268
13	738-0966†	Screw, Should,.50 x.925, 3/8-16
14	783-0209D	Seat Bracket, Lift
15	783-0611†	Seat Stop
16	783-0738C†	Seat Pivot Bracket
17	783-0739A†	Seat Adjustment Lever
18	783-0753†	Seat Adjustment Selector
19	757-04011C	Medium Back Seat, Yellow
20	726-3046	Ratchet Clip
21a	735-0657	LH Foot Pad, Rubber
21b	735-0673	LH Foot Pad, Rubber
22a	735-0656	RH Foot Pad,Rubber
22b	735-0672	RH Foot Pad,Rubber(not shown)
23	710-0451	Bolt, Carriage, 5/16-18,.75, Gr1
24	710-0599	Screw, 1/4-20, 0.500
25	710-0604A	Screw, 5/16-18, 0.625
26	710-0895†	Screw, 1/4-15, 0.750
27	731-1990†	Cover, Lift Lever
28a	731-04591A	Cup Holder
28b	731-2104C	Cover, w/ Cup Holder
29	736-3078	Washer, Flat,.344 x 1.0 x.063
30	783-04314A	Fender (Model X605G)

Ref. No.	Part No.	Description
	783-04333A	Fender
31	783-1010A	Plate, Deck, Lift (Model X605G)
	783-0677B	Adjust. Brkt., Lift
32	783-1489A	Mounting Bracket, Seat
33	710-0227	Screw, #8-18 x.50
34	726-0279	Plate, Insulator
35	725-1303	Spring Switch, Outer
36	725-1439	Spring Switch, Inner
37	726-0278	Plate, Insulator Boss
38	683-04079	Shaft Assembly, Lift
39	712-04065	Nut, Flange Lock, 3/8-16, GrF
40	714-0104	Pin, Cotter,.072 Dia. x 1.13
41	714-0111	Pin, Cotter, 3/32, 1.0
42	716-0106A	Ring, E Type,.625 Dia.
43	720-0311	Grip, Handle, 1/2
44	732-0874	Spring, Torsion
45	738-0138A	Screw, 5/16-18 x.620 Gr2
46	738-04130	Scr.,Shldr, .625 x.165,(42" Deck)
	738-0380	Screw, Shld,.50 x.27, (46" Deck)
47	741-0225	Bearing, Hex Flange
48	746-0968	Cable, Lift, 16.16
49	747-04155	Handle, Lift
50	756-1154	Pulley, Roller
51	783-04711	Arm, Lift - LH (42" Deck)
	783-04494	Arm, Lift - RH (42" Deck)
	783-0678A	Arm, Lift- LH & RH (46" Deck)
52	736-0607	Lock Washer, 5/16
53	710-0726	Screw, 5/16-12
54	738-04012A†	Shoulder Screw
55	720-04061†	Knob, 3/8-16
56	736-0300†	Flat Washer, .406 x .875 x .059
57	783-04081A†	Seat Pivot Bracket, Manual Adj.
58	710-0870†	Hex Head Washer Screw, 3/8-16

† If Equipped


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

10

Illustrated Parts List



Model Series 605

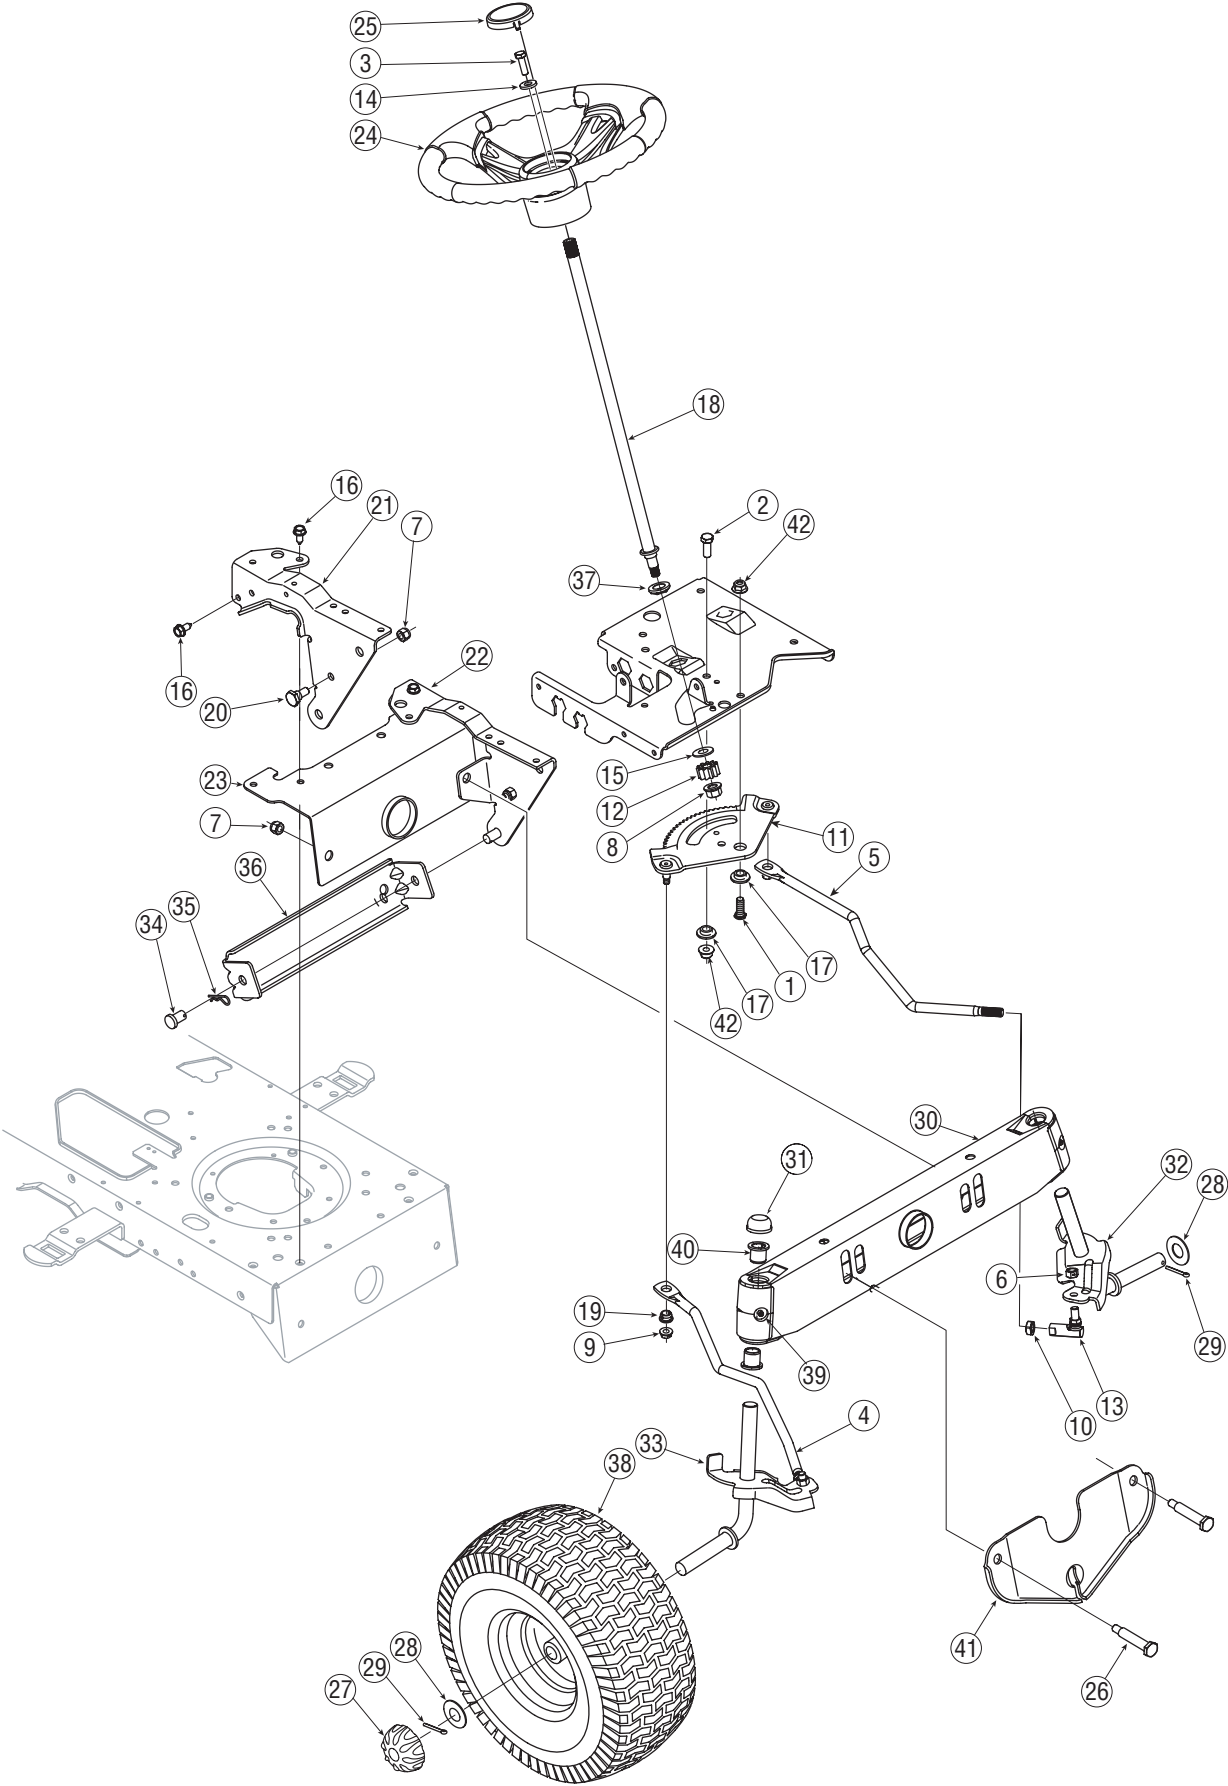

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	710-04095	Hex Screw, 3/8-16, 1.00, Gr5		731-04039	Steering Wheel Cap, No Sprig
2	710-0514	Hex Screw, 3/8-16, 1.00, Gr5	26	738-04128	Shoulder Screw, .5 x 2.380, 3/8-16
3	710-0643	Hex Screw, 5/16-18, 1.00, Gr5		738-1011A	Shoulder Screw, .5 x 2.2, 3/8-16
4	711-1408	Link, Drag, RH	27	731-2290A	Deluxe Hub Cap
5	711-1409A	Link, Drag, LH	28	736-0316	Flat Washer, .78 x 1.589 x .06
6	712-0214	Nut, Hex Lock, 3/8-24	29	714-04039	Cotter Pin, 5/32 x 1.25
7	712-04065	Nut, Flange Lock, 3/8-16, Grf	30	683-0128B	Stamped Pivot Bar
8	712-0459	Nut, Flange Lock, 7/16-20		719-04105	Cast Iron Pivot Bar
9	712-3004A	Nut, Flange Lock, 5/16-18, Gr5	31	726-0341	Push Cap
10	712-0240	Nut, Jam, 7/16-20, Gr2	32	638-04006	LH Axle Assembly, .750 (42" Deck)
11	717-1550E	Gear, Steering, 11/90 Ratio		638-04003	LH Axle Assembly, .750 (46" Deck)
12	717-1554	Gear, Pinion, Steering	33	638-04005	RH Axle Assembly, .750 (42" Deck)
13	723-0448A	Ball Joint, 7/16-20, Lock		638-04004	RH Axle Assembly, .750 (46" Deck)
14	736-3004	Washer, Flat, .406 x .875 x .105	34	711-0332†	Pin, Clevis, .50 x .78
15	736-3084	Washer, Flat, .51 x 1.12 x .06	35	714-04023†	Cotter Pin, Internal, .080 x 1.5625
16	710-1260A	Screw, 5/16-18, 0.750	36	783-0720A†	Adjustment Bracket, Front
17	738-04154	Spacer, Shoulder, .38 x 1.00 x .31	37	741-0656A	Hex Flange Bearing
18	738-1001A	Shaft, Steering, .625 OD x 24.25	38	634-04086	Wheel Assembly Complete, 15 x 6
19	741-0475	Plastic Bushing .380 ID		734-1731	Tire Only 15 x 6 x 6
20	738-0143	Screw, Shoulder, .498 x .340		634-04081	Rim Only w/ Valve Stem
21	783-0726E	Pivot Bracket, Support RH	39	731-1291A	Pivot Bar End Cap
22	783-0727D	Pivot Bracket, Support LH	40	741-0660A	Flange Bearing, .760 x .941 x 1.0
23	783-0728	Pivot Bracket, Bar	41	783-04568†	Front Deck Hanger Bracket
24	631-04028	Steering Wheel	42	712-0431	Flange Lock Nut, 3/8-16
25	731-04040	Steering Wheel Cap, Sprig			

† If Equipped


10

Illustrated Parts List



NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model Series 605

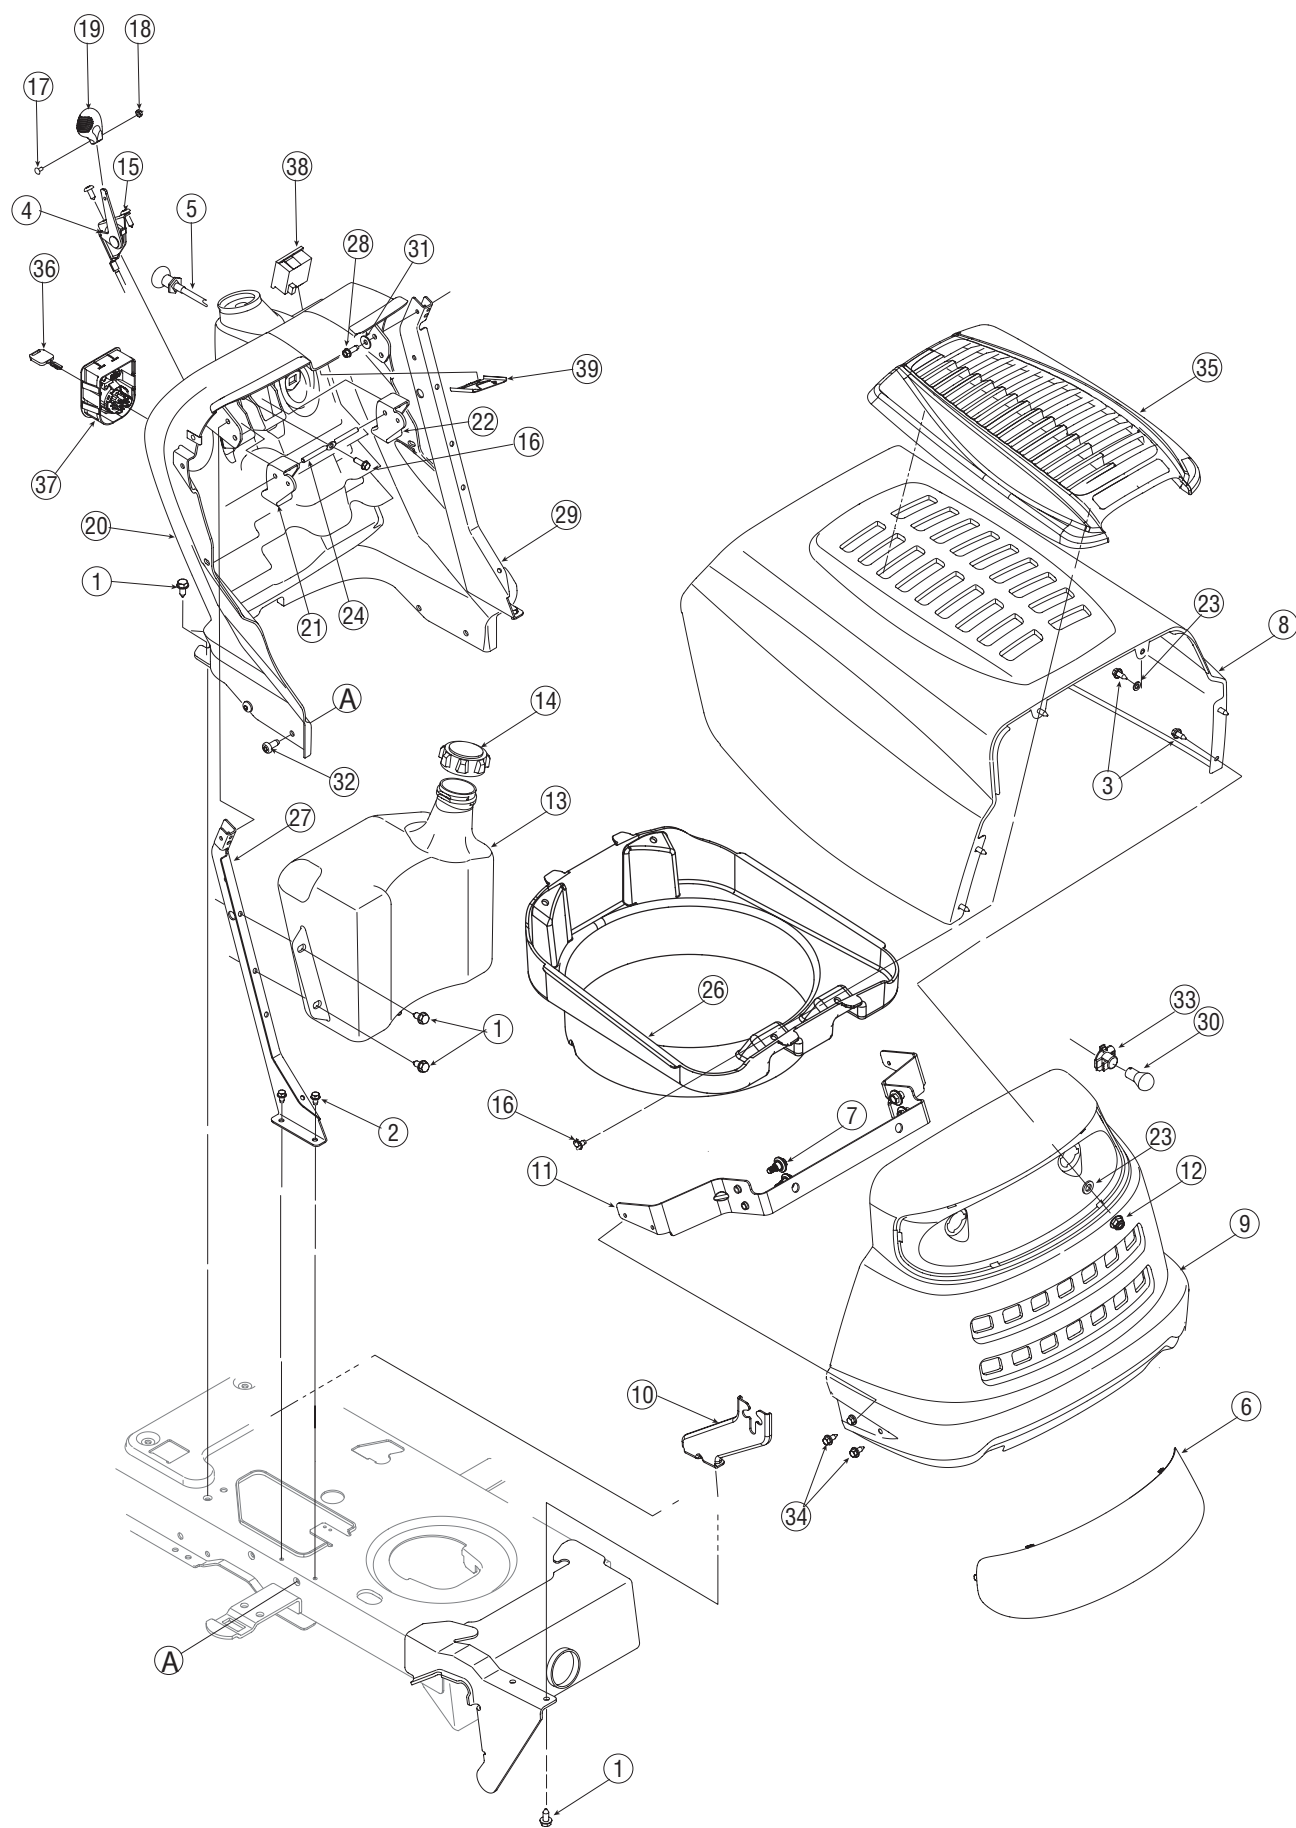

Ref. No.	Part No.	Description
1	710-0726	Screw, 5/16-12 x.750
2	710-0599	Self-tapping Screw, 1/4-20 x.5
3	710-0751	Hex Cap Screw, 1/4-20 x.62
4	746-1086	Throttle Control
	746-1084	Throttle/Choke Control
5	746-1085A	Choke Control
	731-1999	Choke Plug
6	731-04949	Headlight Lens
7	738-04091	Shoulder Screw,.43 x.29
8	783-04551	Hood, 1 Style
9	783-04552	Grill, 1 Style
10	783-04578	Pivot Bracket - RH
	783-04577	Pivot Bracket - LH
11	783-04621	Grill Pivot Bracket
12	712-04064	Flange Lock Nut, 1/4-20
13	751-0658E	Fuel Tank, Three Gallon
	751-0659C	Fuel Tank, Two Gallon
14	751-0603	Fuel Cap
15	710-1017	Screw, 1/4-14 x.625
16	710-0895	Self-tapping Screw, 1/4-15 x.75
17	710-3217	Truss Phillips Screw, #8-32 x.375
18	712-0142	Hex Nut, #8-32
19	731-1857	Throttle Control Knob
20	731-05005A	Dash Panel (Electric PTO)

Ref. No.	Part No.	Description
	731-05001B	Dash Panel (Manual PTO)
21	731-04215	Cruise Control Button
22	731-04217	Parking Brake Button
23	736-0176	Flat Washer, .265 x .938 x 1.20
24	747-1196	Brake/Cruise Pivot Rod
25	629-04083†	Headlight Wire Harness
26	731-05566	Hood Plenum
27	783-04908	RH Dash Support Plate
28	710-0642	Self-tapping Screw, 1/4-20 x.75
29	783-04909	LH Dash Support Plate
30	725-0963	Lamp
31	736-0270	Bell Washer,.265 x.75 x.062
32	710-1611B	Screw, 5/16-18 x.75
33	725-1649	Headlight Socket
34	710-1652	Hex Index Screw, 1/4-20 x.625
35	731-05522	Hood Cover
36	725-1745	Ignition Key w/ plastic cover
	725-1744	Ignition Key w/o plastic cover
37	725-04227A	Ignition Switch
38	725-04036B	Systems Ind. Monitor w/ Hr. Meter
—	725-04336†	Wire Harness (Electric PTO)
—	725-04339†	Wire Harness (Manual PTO)
39	725-1752	Electric PTO Switch

† Not Shown


10

Illustrated Parts List



NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model Series 605

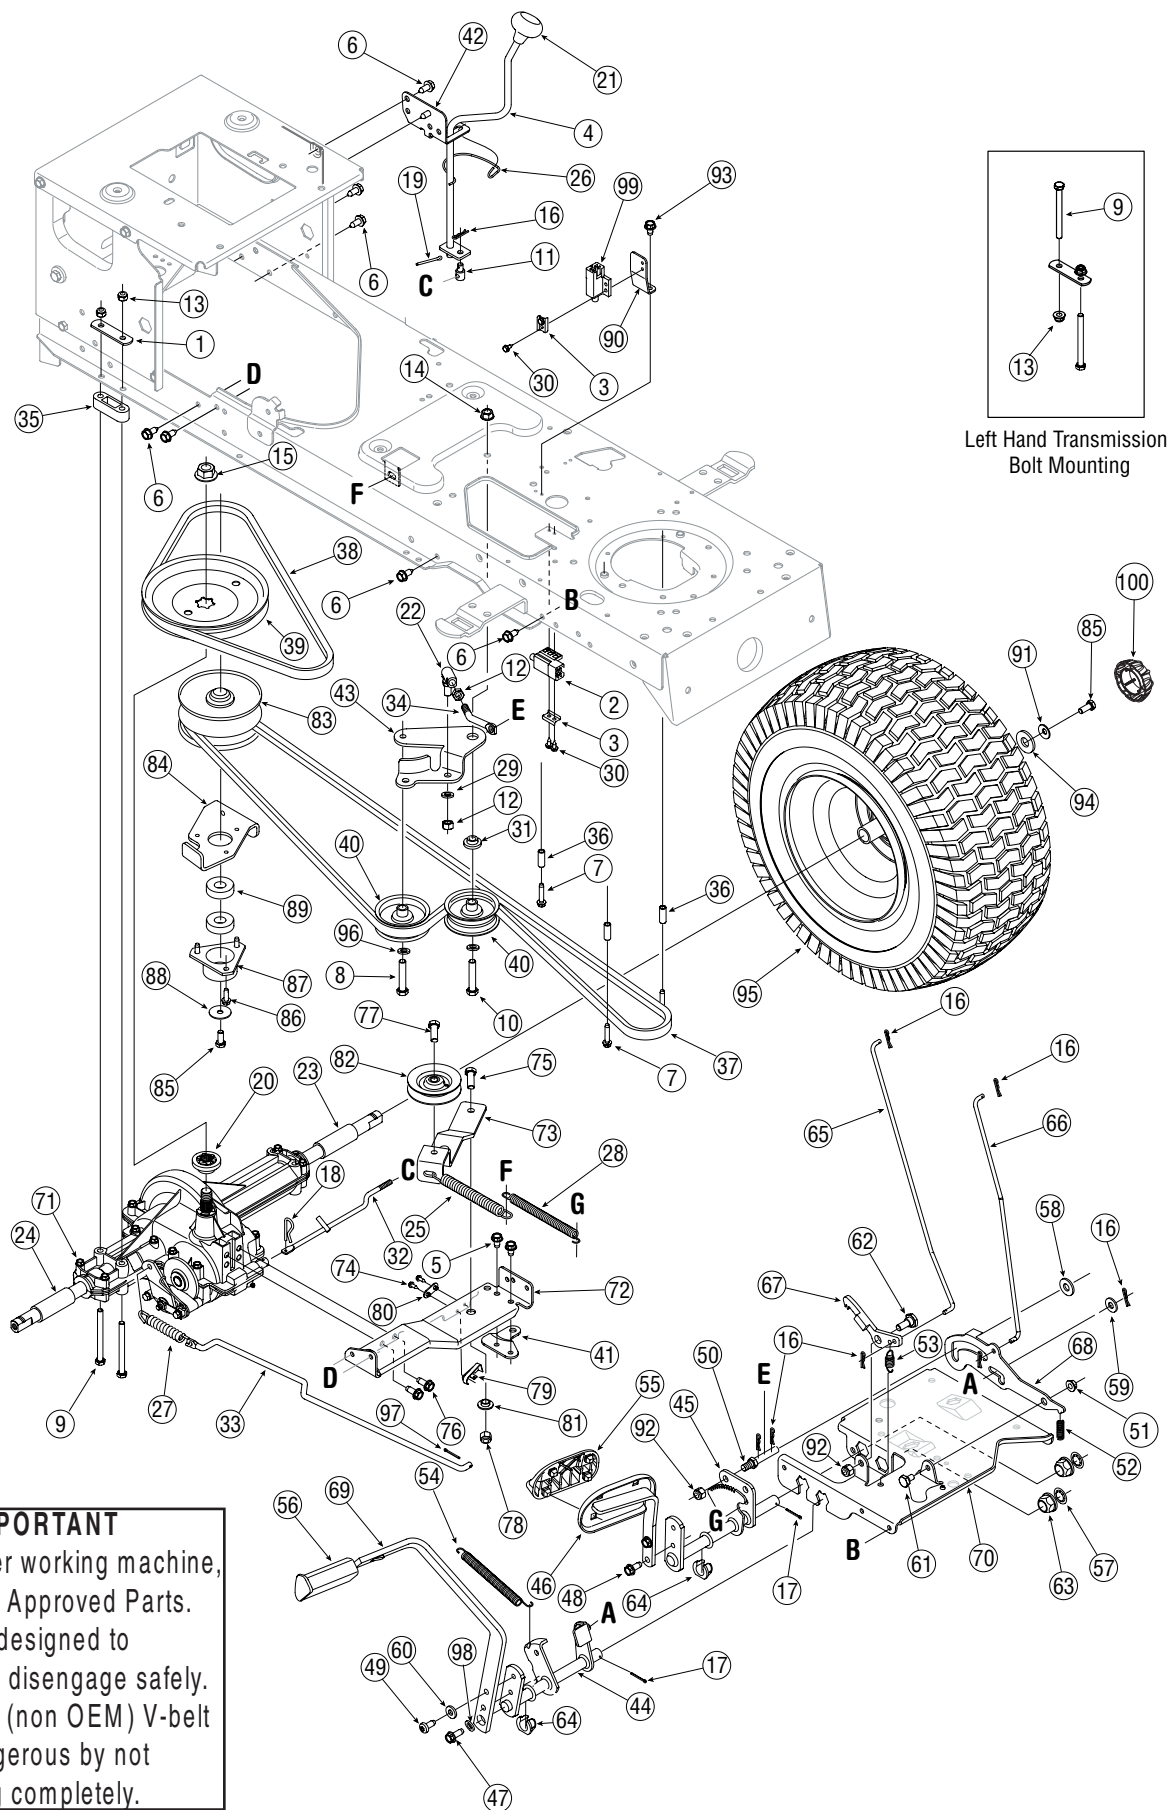

Ref. No.	Part No.	Description
1	17840	Mounting Bracket, Transaxle
2	725-04039	Switch, Interlock
3	17962	Plate, Switch
4	647-04020	Lever Assembly, Shift
5	710-0607	Screw, 5/16-18, 0.500
6	710-0726	Screw, 5/16-12, 0.750
7	710-0809	Screw, 1/4-20, 1.250
8	710-1007	Screw, Sems, 3/8-16, 1.500
9	710-1266	Screw, 5/16-18, 3.50, Gr5
10	710-3144	Screw, 3/8-16, 2.00, Gr5
11	711-0736	Adjustment Ferrule 1/4-20 x 1.
12	712-0241	Nut, Hex, 3/8-24, Gr5
13	712-04063	Nut, Flange Lock, 5/16-18, GrF
14	712-0431	Nut, Flange Lock, 3/8-16, GrF
15	712-0700	Nut, Flange, 9/16-18, Gr2
16	714-0104	Pin, Cotter,.072 Dia. x 1.13
17	714-0111	Pin, Cotter, 3/32, 1.0
18	714-0209	Cotter Pin, Internal,.125 Dia.
19	714-0470	Pin, Cotter, 1/8 x 1.25
20	718-0758A	Pulley Hub, 5/8 Spline
21	720-04028	Knob, Shift
22	723-3018	Ball Joint
23	731-04602	Sleeve,.758 x.821 x 3.3125
24	731-04604	Sleeve,.758 x.821 x 2.4375
25	732-0384	Spring, Extension,.62 Dia x 6.12
26	732-0525	Spring Clip, Shifter
27	732-0716C	Spring, Extension,.59 OD x 4.00
28	732-0963	Spring, Extension,.50 Dia x 6.37
29	736-0169	Washer, Lock, 3/8
30	710-0224	Screw, #10-16,.50
31	738-0372B	Spacer, Shoulder, 1.00 x.38 x.38
32	747-04146B	Rod, Shift
33	747-04164	Rod, Brake
34	747-1127	Idler Rod, Adjustable, 3/8
35	748-0334	Spacer,.68
36	750-0566A	Spacer,.260 x.372 x 1.030
37	754-0467	Belt, V-Type
38	754-0468	Belt, V-Type
39	756-04002	Pulley, V-Type, 7.25 Dia.
40	756-04224	Idler Pulley, Flat 2.75 OD
41	783-04283	Bracket, Shift

Ref. No.	Part No.	Description
42	783-04360	Bracket, Shift, F-N-R
43	783-04442	Idler Bracket, Center Double
44	647-0031B	Control Assembly, Brake
45	647-0032A	Control Assembly, Speed
46	683-0266	Pedal Assembly
47	710-0650	Screw, 5/16-18, 0.875
48	710-1260A	Screw, 5/16-18, 0.750
49	710-1611B	Screw, 5/16-18, 0.750
50	711-04159B	Pin, 3/8-16 x 2.68
51	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
52	732-0335	Spring, Compression,.405 x 1.17
53	732-0955	Spring, Extension,.50 OD x 1.41
54	732-0963	Spring, Extension,.50 OD x 6.37
55	735-0662	Pad
56	735-3049	Pad, Brake
57	736-0187	Washer, Flat,.64 x 1.24 x.06, Ht
58	736-0262	Washer, Flat,.385 x.870 x.092
59	736-0300	Washer, Flat,.406 x.875 x.059
60	736-3008	Washer, Flat,.344 x.750 x.120
61	738-0155	Screw, Shoulder.437 Dia x.162
62	738-0380	Screw, Shoulder,.50 x.27 Lg,
63	741-0225	Bearing, Hex Flange
64	741-3065B	Split Bearing, Hex Flange
65	747-04093	Rod, Brake Lock
66	747-04096	Rod, Cruise Control
67	748-04039B	Latch, Cruise Control
68	783-0732A	Bracket, Lockout
69	783-0773A	Ped, Brake
70	783-04612	Bracket, Steering Support
71	618-04034	Transmission, Single Speed
72	683-04055A	Bracket Assembly, Torque
73	683-04130	Bracket, Idler
74	710-0227	Screw, #8-18 x.50
75	710-0514	Screw, 3/8-16, 1.00
76	710-0604A	Screw, 5/16-18,.625
77	710-1315	Screw, 3/8-16, 1.250
78	712-0130	Nut, Lock, 3/8-16, Nylon
79	725-1644	Switch Spring, Short
80	726-0320	Plate, Insulator
81	750-04294	Spacer, Shoulder
82	756-04209	Pulley, V-Type, 3.06

Continued on next page

10

Illustrated Parts List



10

Illustrated Parts List




Model Series 605

Ref. No.	Part No.	Description
83	656-04015	Pulley Ass'y, Variable Speed
84	683-04129	Bracket, Pulley
85	710-0627	Screw, 5/16-24,.750
86	710-1652	Screw, 1/4-20,.625
87	718-04012	Cup, Bearing
88	736-0362	Washer, Flat
89	741-0600	Ball Bearing
90	783-04722	Switch Bracket, Parking Brake
91	736-0242	Washer, Bell,.340 x.872 x.060
92	712-04065	Nut, Flange Lock, 3/8-16, GrF
93	710-0599	Screw, 1/4-20 x.500
94	736-0430	Flat Washer,.350 x 1.59 x.062
95	634-0104	Wheel Assy Comp, 20 x 8 x 8
	734-1730	Tire Only 20 x 8 x 8
	734-0603A	Rim Only w/ Valve Stem
96	736-3010	Flat Washer, .407 x .812 x .135
97	714-0507	Pin, Cotter, 3/32 x .750
98	736-0119	Lock Washer, 5/16
99	725-3167	Switch
100	731-2290A	Hub Cap

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

10

Illustrated Parts List

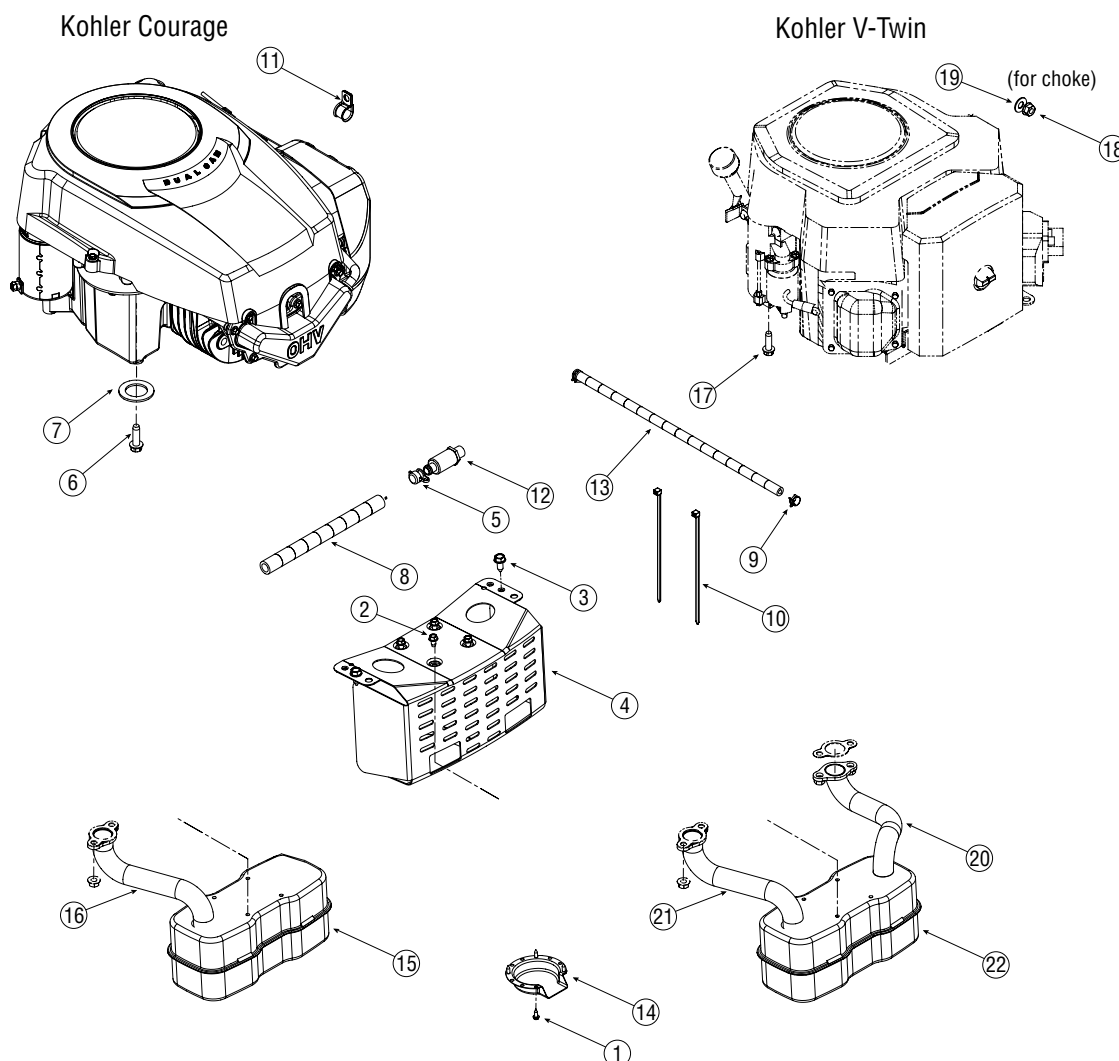


Ref. No.	Part No.	Description
1	710-0227	AB Screw #8-18 x 0.5
2	710-0599	TT Screw 1/4-20 x 0.5
3	710-0726	AB Screw 5/16-12 x 0.5
4	783-0615D	Muffler Bracket
5	751-3142	Oil Drain Cap
6	710-0654A	TT Screw 3/8-16 x 1.00
7	736-0277	Flat Washer, 1.031 x 1.620 x .095
8	751-3141	Oil Drain Extension Hose
9	726-0205	Hose Clamp
10	725-0157	Cable Tie
11	726-0272	Clamp

Ref. No.	Part No.	Description
12	751-3140	Oil Drain Valve
13	751-10349	Fuel Line Hose
14	751-0564A	Muffler Deflector
15	751-0617B	Single Inlet Muffler
16	751-10047	Exhaust Pipe
17	710-1315	Screw, 3/8-16 x 1.250
18	712-3005	Flange Lock Nut, 3/8-16
19	736-0300	Flat Washer, .406 x .875 x .059
20	751-0644B	LH Exhaust Pipe
21	751-0645A	RH Exhaust Pipe
22	751-0805A	Dual Inlet Muffler

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model Series 605 (42" Deck - Manual PTO)

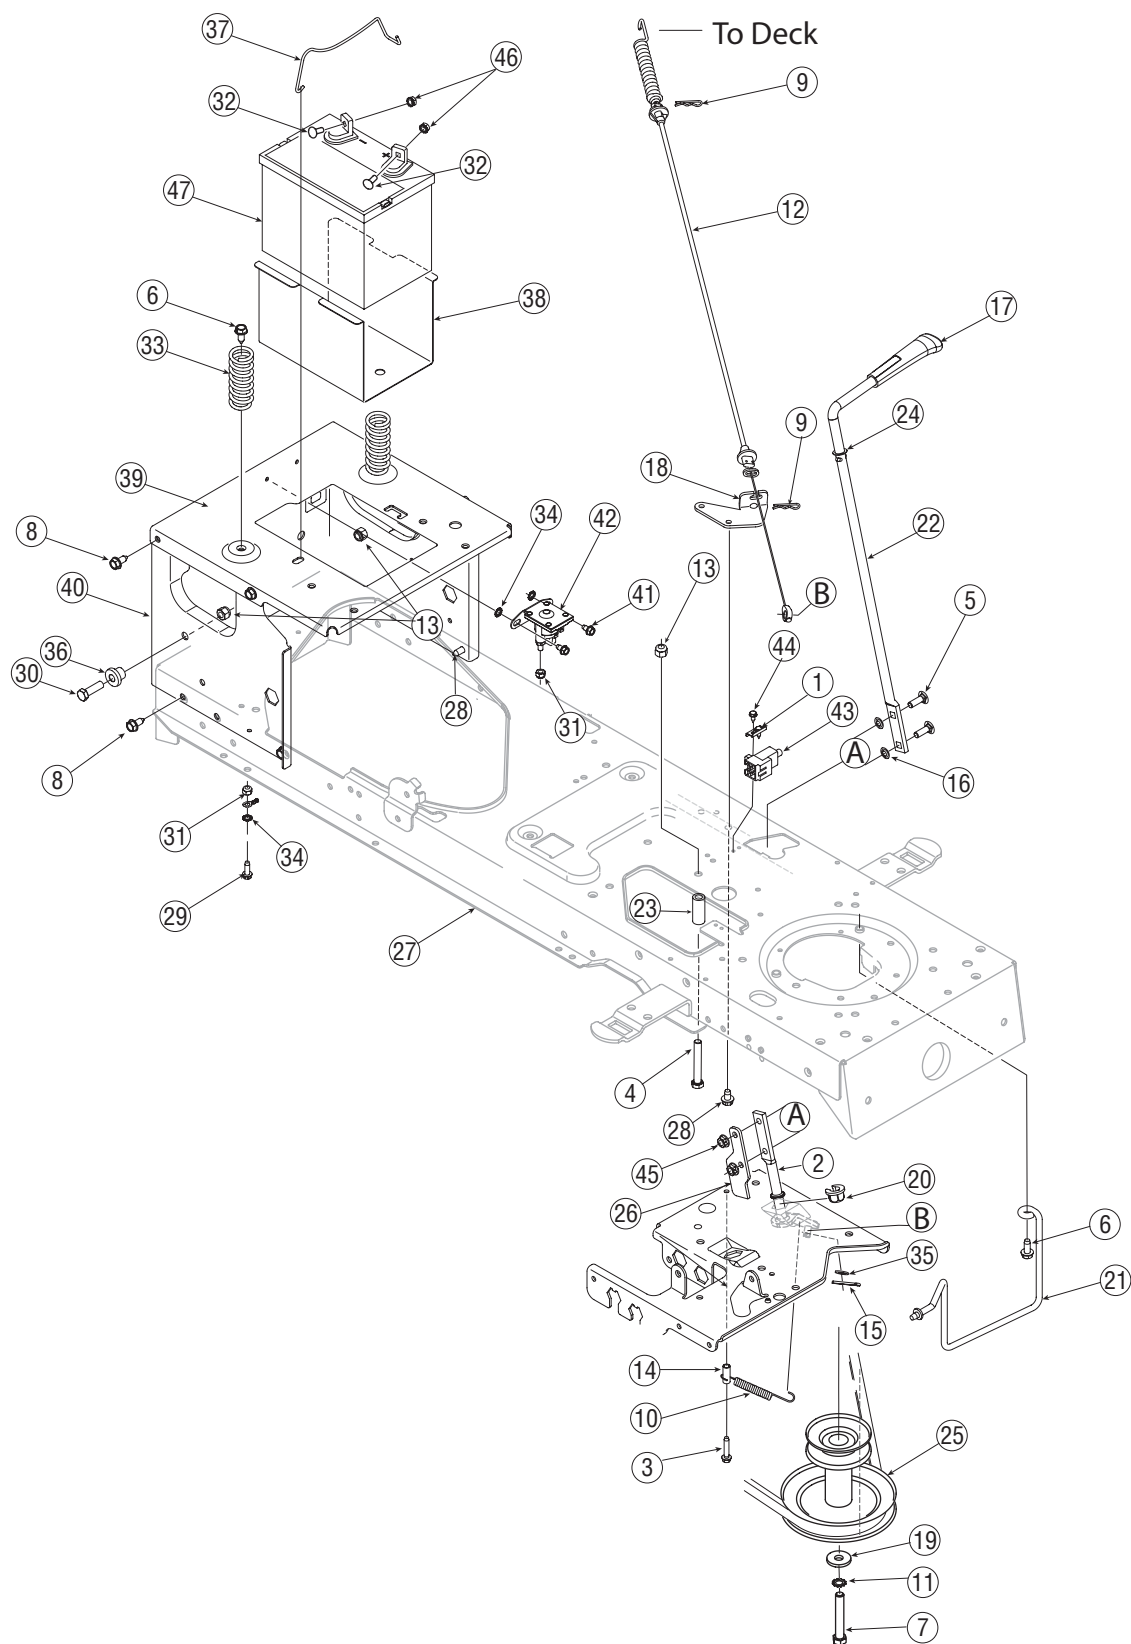

Ref. No.	Part No.	Description
1	17962	Plate, Switch
2	647-04036	Lever Assembly, Engagement
3	710-0778	Screw, 1/4-20 x 1.500
4	710-0859	Screw, 3/8-16, 2.50
5	710-0276	Screw, Carriage, 5/16-18, 1.00
6	710-1260A	Screw, 5/16-18 x.750
7	710-3157A	Screw, 7/16-20, 3.25, Gr5
8	710-0726	Screw, 5/16-12, 0.750
9	714-0145	Click Pin
10	732-04248	Extension Spring,.38OD x 3.9LG
11	736-0171	Lock Washer, 7/16
12	746-04092	Deck Engagement Cable
13	712-04065	Nut, Flange Lock, 3/8-16, GrF
14	750-0566A	Spacer,.260 x.372 x 1.030LG
15	714-0470	Pin, Cotter, 1/8 x 1.25
16	726-0201	Nut, Speed,.3125 ID
17	731-2111A	Knob, PTO
18	783-04590A	Cable Bracket
19	736-0322	Washer, Flat,.450 x1.250 x.164
20	741-0708	Bearing, Flange, .500 ID
21	747-04307	Keeper Rod, Belt
22	747-04470	Engagement Handle, Deck
23	748-0415B	Spacer,.385 ID x.635 OD x 1.54
24	736-0108	Flat Washer, .510 x .750 x .033


Ref. No.	Part No.	Description
25	756-04196	Pulley, Engine, 3.39 x 6.12 Dia.
26	783-0744A	Stop Bracket, Engagement
27	683-04173	Frame Assembly, Lower
28	710-0607	Screw, 5/16-18, 0.500
29	710-0642	Screw, 1/4-20, 0.750
30	710-3005	Screw, 3/8-16, 1.25, Gr5
31	712-04064	Nut, Flange Lock, 1/4-20, GrF
32	710-0703	Screw, Carriage, 1/4-20,.75
33	732-04035	Spring, Compr. , 1.28 OD x 3.125
34	736-0222	Washer, Lock, 1/4, External
35	736-0275	Flat Washer, .344 x .688 x .065
36	738-04058	Spacer, Shoulder,.38 x 1.0 x.70
37	747-04121A	Hold Rod, Battery
38	783-0349	Battery Tray
39	783-04329A	Seat Bracket, Frame
40	783-04809	Frame, Upper
41	710-0599	Screw, 1/4-20, 0.50
42	725-1426A	Solenoid, 12V, 100 Amp
43	725-04039	Switch, Interlock
44	710-0224	Screw, #10-16,.50
45	712-3004A	Nut, Flange, Lock Nut, 5/16-18
46	712-0271	Nut, Sems, 1/4-20
47	725-1737A	Battery, 190 CCA
	725-1750A	Battery, 235 CCA

10

Illustrated Parts List



NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

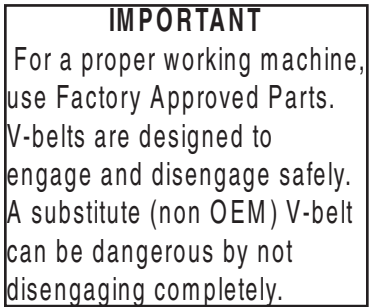

Ref. No.	Part No.	Description
1	17962	Plate, Switch
2	647-0064	Lever Assembly, Engagement
3	683-0302	Plate Assembly, Engagement
4	710-0224	Screw, #10-16, 0.500
5	710-0276	Screw, Carriage, 5/16-18, 1.00
6	710-0347	Screw, 3/8-16, 1.75, Gr5
7	710-04377	Screw, 7/16-20, 2.75, Gr5
8	710-0726	Screw, 5/16-12, 0.750
9	710-0831	Screw, 3/8-16, 5.50, Gr5
10	711-1044A	Pin, Belt Guard, 5/16 x 4.75
11	712-0229	Nut, Push, 3/8
12	712-04063	Nut, Flange Lock, 5/16-18, GrF
13	712-04065	Nut, Flange Lock, 3/8-16, GrF
14	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
15	714-0470	Pin, Cotter, 1/8 x 1.25
16	726-0201	Nut, Speed, .3125 ID
17	731-2111A	Knob, PTO
18	732-04245A	Belt Guard
19	732-0944	Spring, Extension, .75 OD x 6.75
20	732-1013	Belt Guard
21	736-0108	Washer, Flat, .510 x .750 x .033
22	736-0119	Washer, Lock, 5/16
23	736-0140	Washer, Flat, .385 x .62 x .063
24	736-0227	Washer, Flat, .390 x 1.500 x .134
25	736-0242	Washer, Bell, .340 x .872 x .060
26	736-0275	Washer, Flat, .344 x .688 x .065
27	736-0300	Washer, Flat, .406 x .875 x .059
28	736-0322	Washer, Flat, .450 x 1.250 x .164
29	736-3010	Washer, Flat, .407 x .812 x .135
30	738-0372B	Spacer, Shldr, 1.00 x .38 x .38
31	741-0708	Bearing, Flange, Hex Split .500 ID

Ref. No.	Part No.	Description
32	747-04355	Keeper Rod, Belt
33	747-04470	Engagement Handle, Deck
34	748-0415B	Spacer, .385 ID x .635 OD x 1.54
35	710-1260A	Screw, 5/16-18 x .750
36	756-04207	Pulley, Engine, 3.39 x 6.12 Dia.
37	756-0487	Pulley, Idler, V-type 5/8 x 4.0 Dia.
38	756-0627D	Pulley, Idler, 3.50 Diameter
39	783-04467	Stop Bracket, Deck-Up
40	783-0744A	Stop Bracket, Engagement
41	683-04173	Frame Assembly, Lower
42	710-0607	Screw, 5/16-18, 0.500
43	710-0642	Screw, 1/4-20, 0.750
44	710-3005	Screw, 3/8-16, 1.25, Gr5
45	712-04064	Nut, Flange Lock, 1/4-20, GrF
46	754-04064	V-Belt, PTO
47	732-04035	Spring, Compr., 1.28 OD x 3.125
48	736-0222	Washer, Lock, 1/4, External
49	783-04612	Support Bracket, Steering
50	738-04058	Spacer, Shoulder, .38 x 1.0 x .70
51	747-04121A	Hold Rod, Battery
52	783-0349	Battery Tray
53	783-04329A	Seat Bracket, Frame
54	783-04809	Frame, Upper
55	710-0599	Screw, 1/4-20, 0.50
56	725-1426A	Solenoid, 12V, 100 Amp
57	725-04039	Switch, Interlock
58	738-1132	Screw, Shoulder, .250 x .150
59	725-1737	Battery, 190 CCA
60	710-0703	Screw, Carriage, 1/4-20, .75, Gr5
61	712-0271	Nut, Sems, 1/4-20
62	712-3087	Nut, Wing, 1/4-20


10

Illustrated Parts List



NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model Series 605 (Electric PTO)

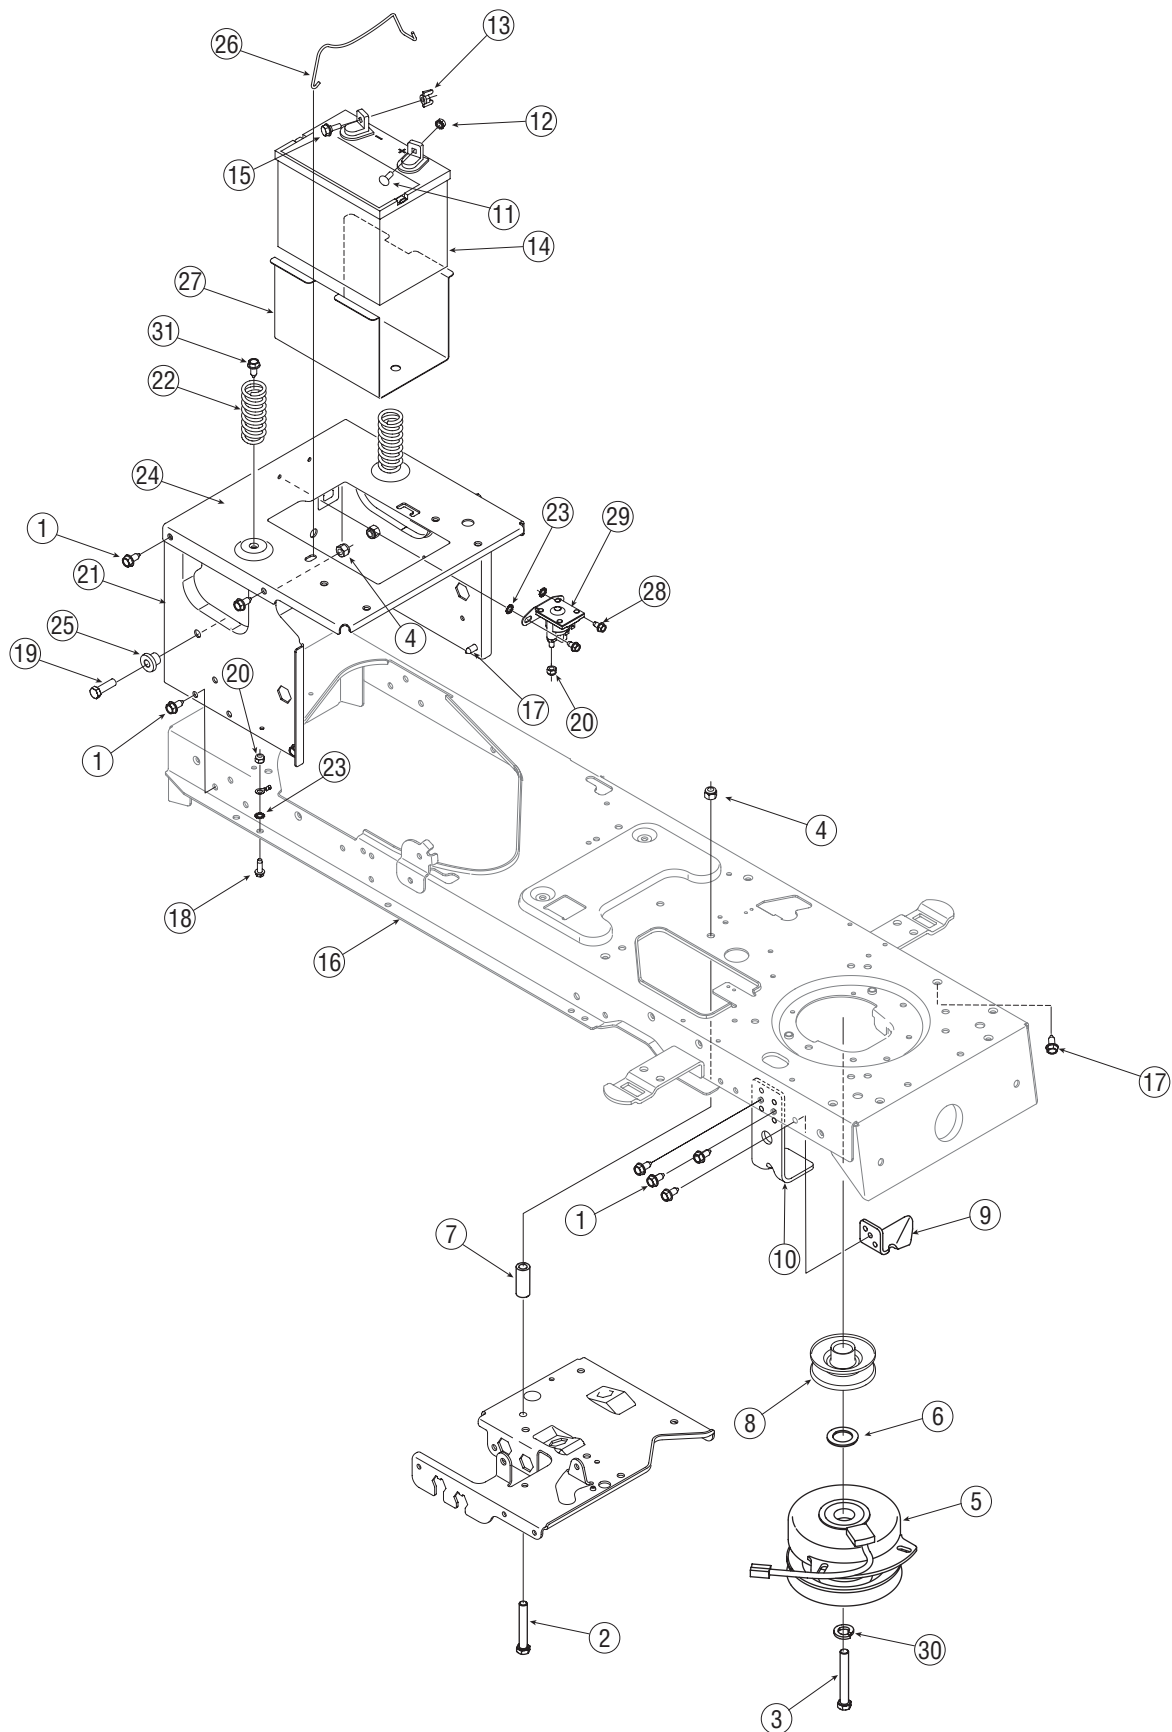


Ref. No.	Part No.	Description
1	710-0726	Screw, 5/16-12, 0.75
2	710-0859	Screw, 3/8-16, 2.50, Gr5
3	710-04379A	Screw, 7/16-20, 3.50, Gr5
4	712-04065	Nut, Flange Lock, 3/8-16, GrF
5	717-04174	PTO Clutch, Electric
6	736-0277	Washer, Flat, 1.031 x 1.620 x.095
7	748-0415B	Spacer,.385 ID x.635 OD x 1.54
8	756-0639	Pulley, Engine, Electric PTO
9	783-04419B	Clutch Bracket
10	783-04467	Deck Bracket, Up-Stop
11	710-0703	Screw, Carriage, 1/4-20,.75, Gr5
12	712-0271	Nut, Sems, 1/4-20
13	712-3087	Nut, Wing, 1/4-20
14	725-1750A	Battery, 235 CCA
15	738-1132	Screw, Shldr,.250 x.150, 1/4-20
16	683-04173	Frame Assembly, Lower
17	710-0607	Screw, 5/16-18, 0.500
18	710-0642	Screw, 1/4-20, 0.750
19	710-3005	Screw, 3/8-16, 1.25, Gr5
20	712-04064	Nut, Flange Lock, 1/4-20, GrF
21	783-04809	Frame, Upper
22	732-04035	Spring, Compr., 1.28 OD x 3.125
23	736-0222	Washer, Lock, 1/4, External
24	783-04329A	Seat Bracket, Frame
25	738-04058	Spacer, Shoulder,.38 x 1.0 x.70
26	747-04121A	Hold Rod, Battery
27	783-0349	Battery Tray
28	710-0599	Screw, 1/4-20 x .500
29	725-1426A	Solenoid, 12V, 100 Amp
30	736-0171	Lock Washer, 7/16
31	710-1260A	Screw, 5/16-18 x .750

10

Illustrated Parts List



Model Series 605

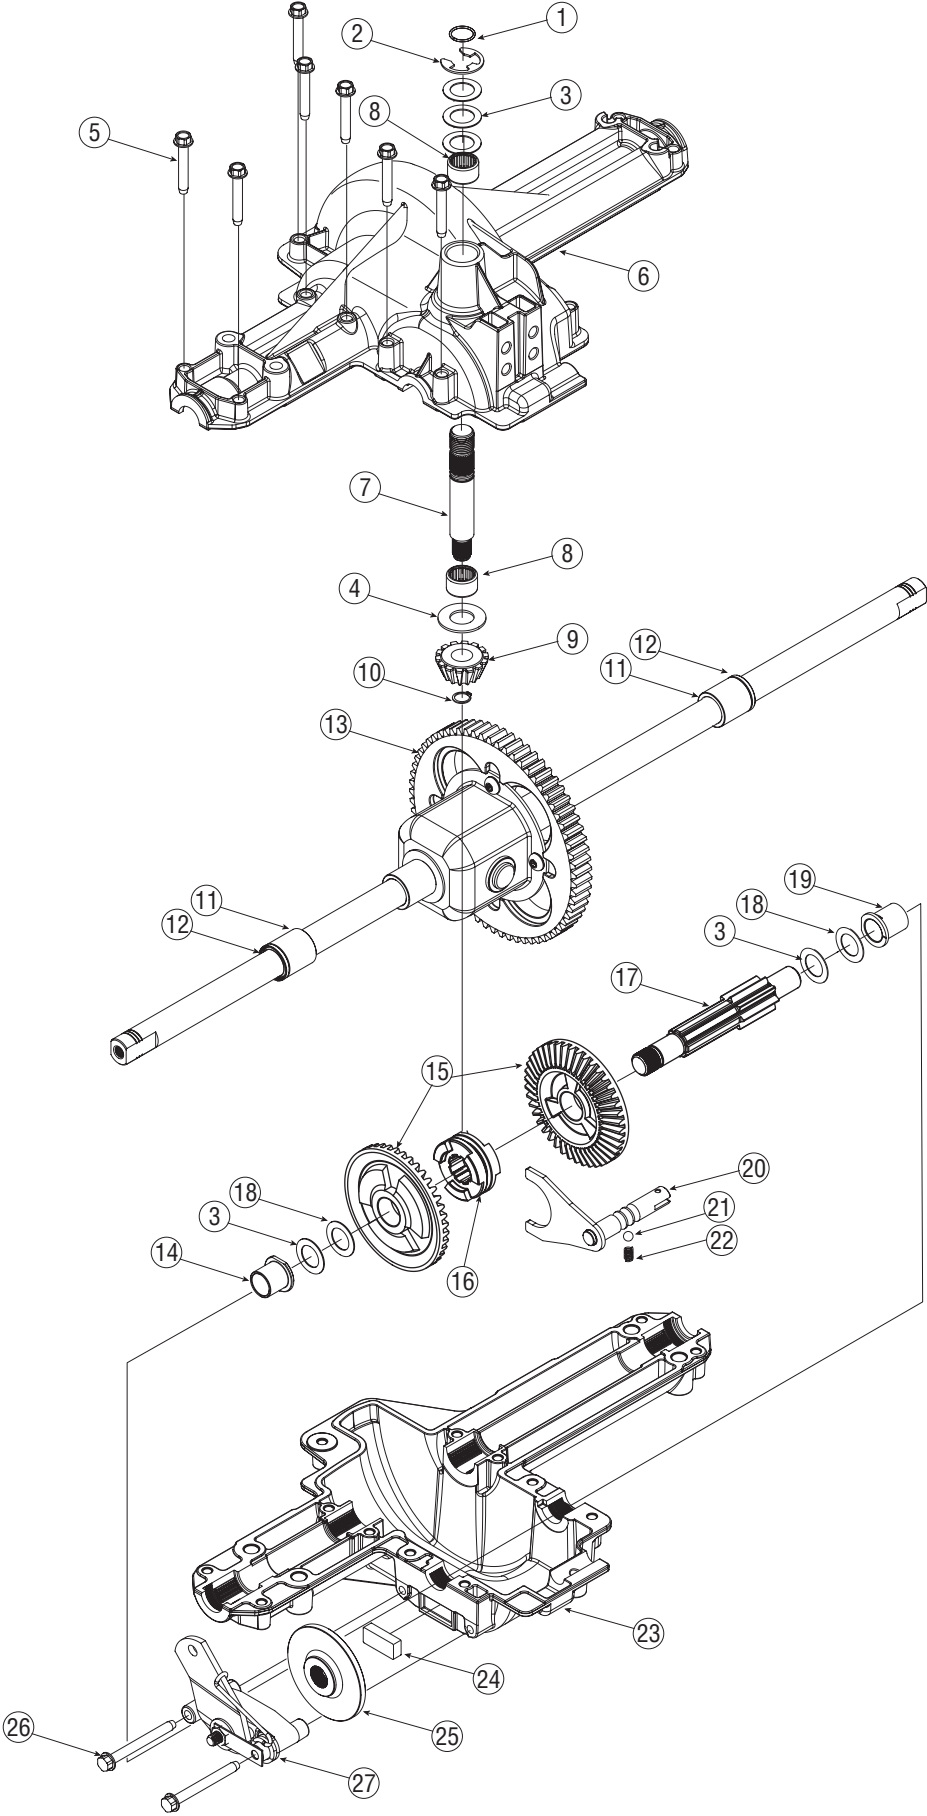

10

Illustrated Parts List




Ref. No.	Part No.	Description
1	732-0614	Ring, Wire
2	716-0231	Ring, E Type,.750
3	736-0336*	Flat Washer, 5/8 x 1.0 x.030
	736-0337*	Flat Washer, 5/8 x 1.0 x.040
	736-0349*	Flat Washer, 5/8 x 1.0 x.020
4	736-0335	Washer, Thrust.635 x 1.26 x.06
5	710-1325	Self-tapping Screw, 1/4-20 x 1.625
6	719-04017	Upper Housing
7	711-1109	Input Shaft
8	741-0335	Needle Bearing,.625 x.813 x.495
9	717-1464	14-tooth Bevel Pinion
10	716-0108	Retaining Ring,.437
11	741-0340	Sleeve Bearing,.75 x1.0 x 1.0
12	721-0338	Seal,.75 x 1.0 x.125
13	618-04041	Differential Assembly
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	717-04056	42-tooth Bevel Gear
16	718-04045	Clutch Collar
17	711-04134	Drive Shaft
18	736-0495*	Thrust Washer, 1.0 x.632 x.0
	736-0494*	Flat Washer,.632 x 1.00 x.035
19	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
20	611-0011	Detent Shaft Assembly
21	741-0862	Detent Ball
22	732-0863	Compression Spring
23	719-04018	Lower Housing
24	717-0678	Brake Puck
25	761-0202	Brake Disc
26	710-1206	Self-tapping Screw, 1/4-20 x 2.375
27	661-0001	Brake Assembly
—	737-0148	Grease (19 oz.)

* Use applicable flat washer (ref. #'s 3 or 18) in this application allowing .0150/.0020 in. end-play

NOTE: If rebuilding the upper housing, include two ounces (2 oz.) of Unirex® N3 grease (Part No. 737-0289) in the input shaft cavity.

Model Series 605 (42" Deck - Manual PTO)

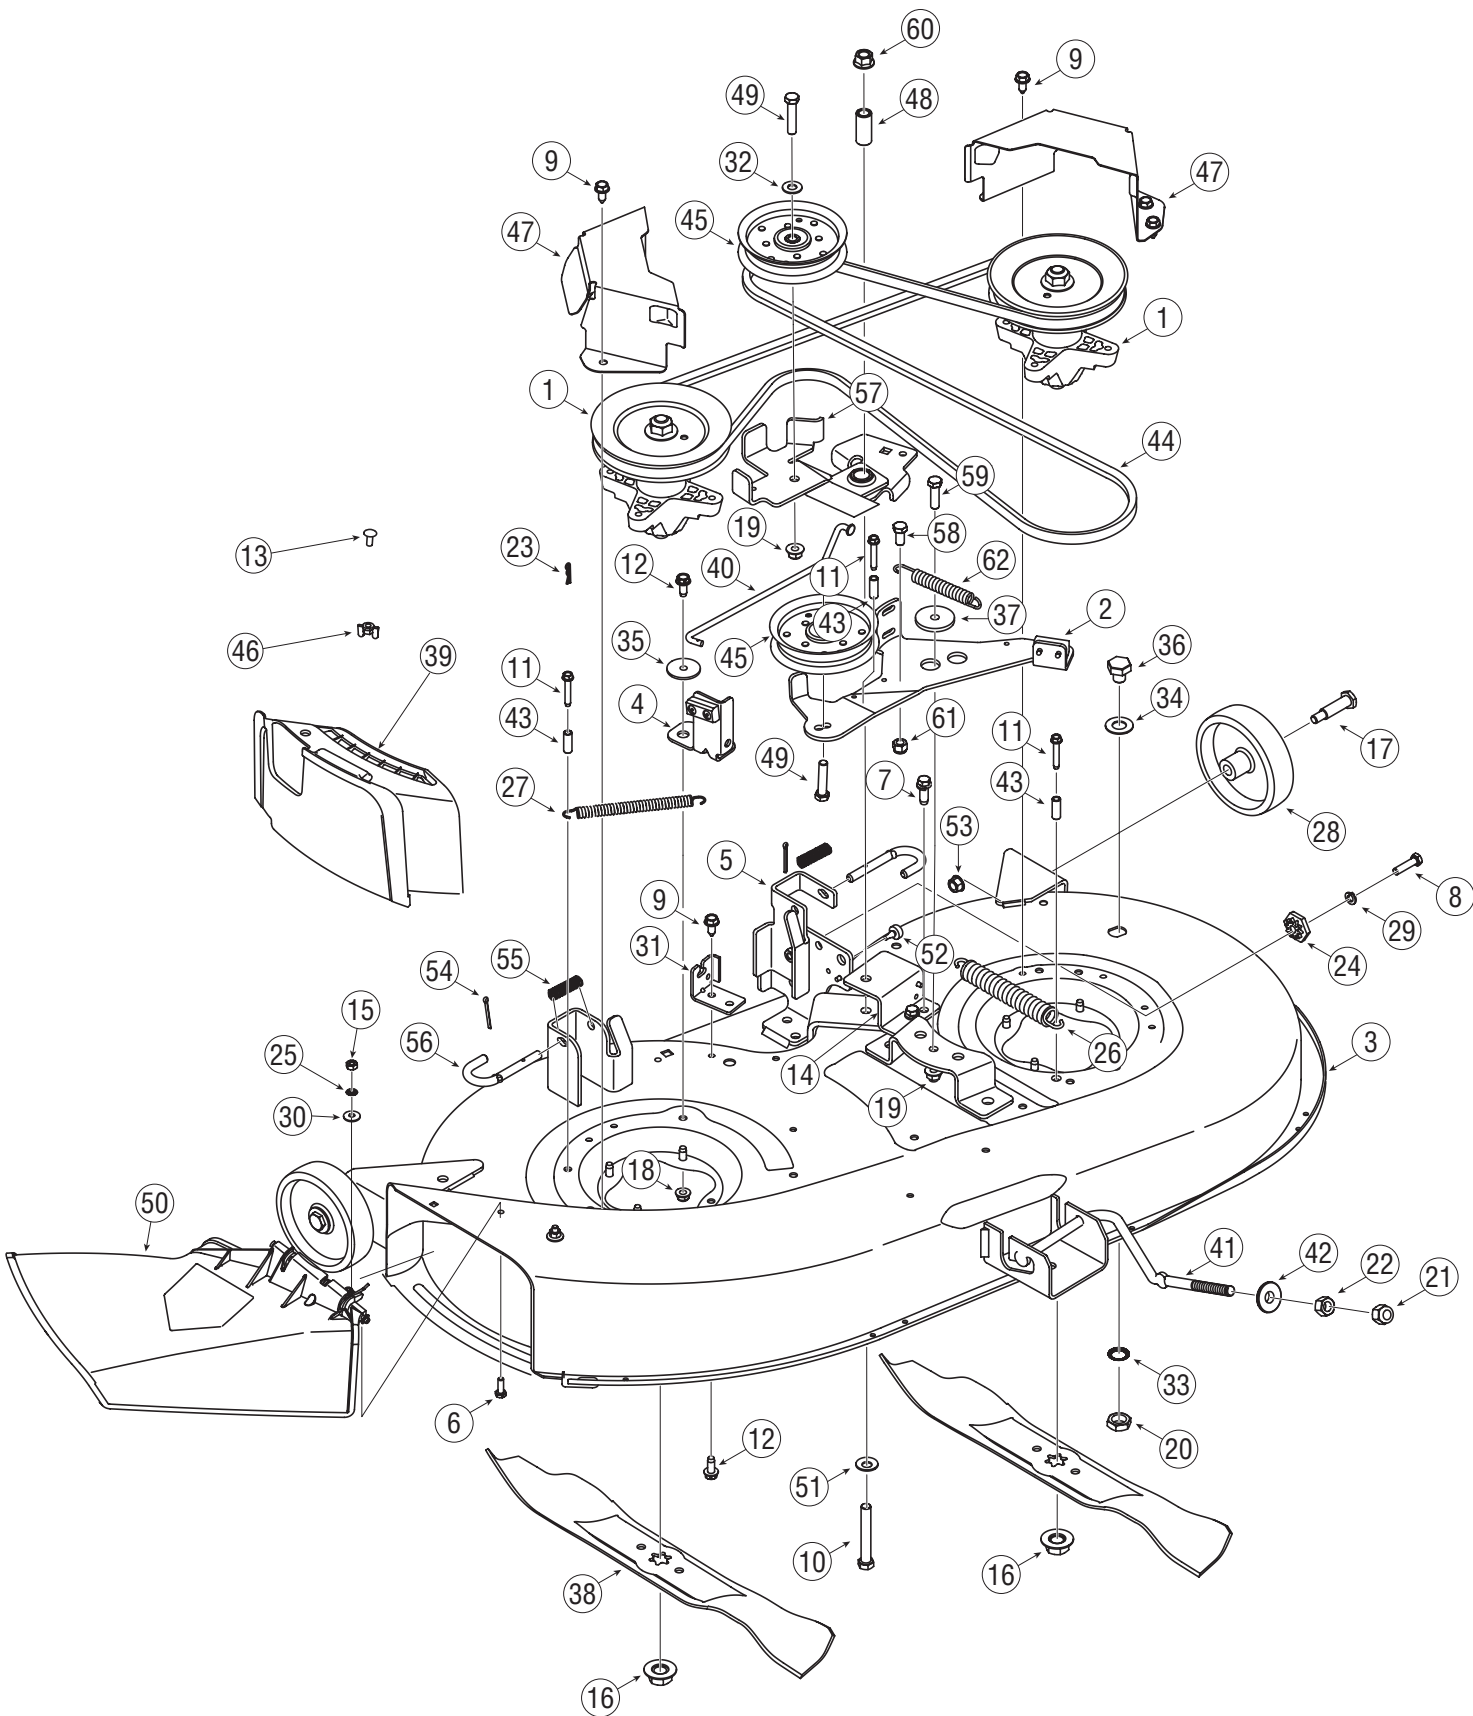

Ref. No.	Part No.	Description
1	618-0624	Spindle Assembly, Pul, 6.23" Dia
2	683-04138A	Brake Assembly, Deck
3	683-04261	Deck Shell, 42"
4	683-04167	Brake Assembly, Deck
5	683-0254B	Brkt. Ass'y, Deck, Hanger LH
6	710-3015	Screw, 1/4-20, .75, Gr5
7	710-0654A	Screw, 3/8-16, 1.00
8	710-0528	Screw, 5/16-18, 1.250
9	710-0726	Screw, 5/16-12, 0.750
10	710-0510	Screw, 7/16-20, 3.00, Gr5
11	710-0778	Screw, 1/4-20, 1.500
12	710-1260A	Screw, 5/16-18, .75
13	710-0134†	Carriage Screw, , 1/4-20 x .62
14	783-05045	Pivot Support Bracket
15	712-3006	Nut, Hex, 1/4-20, Gr5
16	712-0417A	Nut, Flange, 5/8-18
17	738-0373	Screw, Shldr, .498 x 1.53, 3/8-16
18	712-04063	Nut, Flange Lock, 5/16-18, GrF
19	712-04065	Nut, Flange Lock, 3/8-16, GrF
20	712-0641	Nut, Hex, M16-1.5
21	712-3083	Nut, Hex Lock, 1/2-13, Gr8
22	712-0206	Nut, Hex, 1/2-13, Gr5
23	714-0104	Pin, Cot, .072 Dia. x 1.13 Lg
24	717-04074	Gear, Deck Adjustment
25	726-0233	Nut, Push, .25 ID x .50 OD
26	732-0459B	Spring, Exten. , .94 Dia. x 6.74
27	732-04287	Spring, Exten. , .50 Dia. x 6.375
28	734-0973	Wheel, Deck 5.0 x 1.38
29	736-0119	Washer, Lock, 5/16
30	736-0270	Washer, Bell, .265 x.75 x .062
31	783-04740	Deck Engagement Cable Bracket

Ref. No.	Part No.	Description
32	736-0300	Washer, Flat, .406 x .875 x .059
33	736-0760	Washer, Lock
34	736-0187	Washer, Flat, .64 x 1.24 x .06
35	738-04166	Spacer, Shoulder, .5000 x .1475
36	738-04146	Plug, Screw, M16 x 1.5
37	738-04162A	Spacer, Shoulder, .8840 x .190
38	742-0616A	Blade, 21.23", Star 3-in-1
39	731-2363†	Mulch Plug
40	747-04501	Control Rod, Brake
41	747-04269A	Deck Rod, Front Adjustable
42	748-04069	Pivot Cup, Deck Lift
43	750-0566A	Spacer, .260 x .372 x 1.030
44	754-04045	Belt, V-Type
45	756-04129	Idler Pulley, 4.25" Dia.
46	712-3087†	Wing Nut, 1/4-20
47	783-04327A	Cover, Belt, 6.00 Dia.
48	750-04637	Spacr, .455 ID x .680 OD
49	710-0347	Screw, 3/8-16 x 1.75
50	731-1032B	Chute Assembly, Discharge
51	736-0407	Bell Washer, .45 x 1.00 x .062
52	735-0271	Bumper
53	712-0431	Flange Lock Nut, 3/8-16
54	714-0470	Cotter Pin
55	732-0306A	Comp. Spring, .531OD x 1.75 Lg.
56	747-1116	Deck Release Rod
57	683-04252	Deck Idler Assembly
58	710-0216	Screw, 3/8-16 x .75
59	710-3005	Screw, 3/8-16 x 1.25
60	712-0459	Flange Lock Nut, 7/16-20
61	712-3061	Hex Lock Nut, 3/8-24
62	732-0470A	Extension Spring, .53 OD x 4.75

† If Equipped

IMPORTANT

For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

10

Illustrated Parts List



Model Series 605 (46" Deck - Manual PTO)

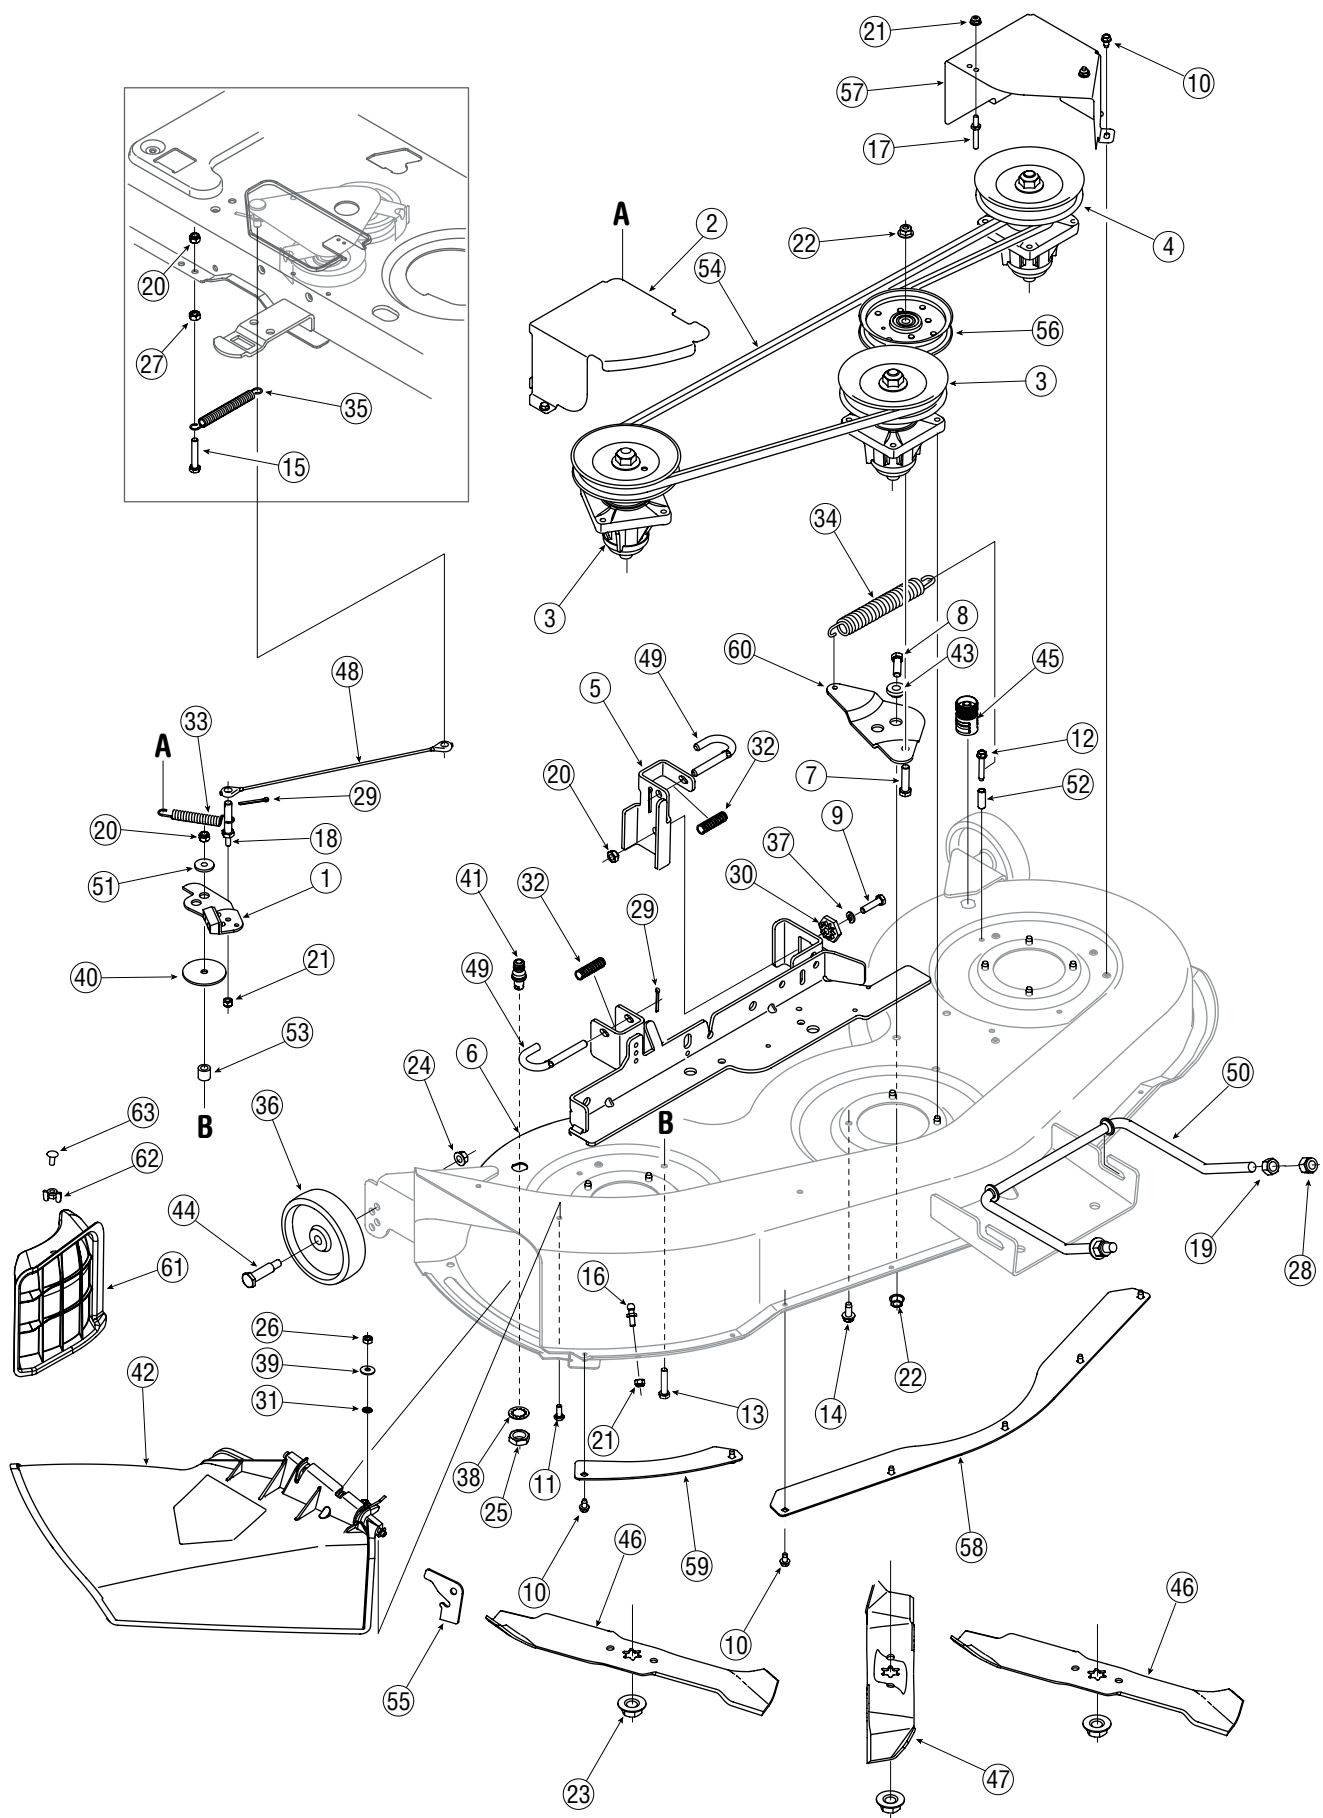

Ref. No.	Part No.	Description
1	17116	Brake Assembly, Deck
2	17258D	RH Belt Cover, Deck 46"
3	618-0240A	Spindle Assembly, 5.00 Dia.
4	618-04134B	Spindle Ass'y, Double Pulley
5	683-0254B	Hanger Bracket Assembly
6	683-04104A	Deck Weldment
7	710-0520	Screw, 3/8-16, 1.50, Gr5
8	710-0514	Screw, 3/8-16, 1.00, Gr5
9	710-0528	Screw, 5/16-18, 1.25, Gr5
10	710-0599	Screw, 1/4-20, 0.500
11	710-3015	Screw, 1/4-20, .75, Gr5
12	710-0778	Screw, 1/4-20, 1.500
13	710-0805	Screw, 5/16-18, 1.50, Gr5
14	710-1260A	Screw, Ld, 5/16-18, 0.750
15	710-3180	Screw, 5/16-18, 1.75, Gr5
16	711-04069	Pin, Grasscatcher, 1/4-20
17	711-0993	Belt Guard Pin 1/4 Dia x 1.43
18	711-1554	Pin, 1/4-20, 3/8 x 2.0
19	712-0206	Nut, Hex, 1/2-13, Gr5
20	712-04063	Nut, Flange Lock, 5/16-18, GrF
21	712-04064	Nut, Flange Lock, 1/4-20, GrF
22	712-04065	Nut, Flange Lock, 3/8-16, GrF
23	712-0417A	Nut, Flange, 5/8-18
24	712-0431	Nut, Flange Lock, 3/8-16, GrF
25	712-0641	Nut, Hex, M16-1.5
26	712-3006	Nut, Hex, 1/4-20, Gr5
27	712-3010	Nut, Hex, 5/16-18, Gr5
28	712-3083	Nut, Hex Lock, 1/2-13, Gr8, Nylon
29	714-0470	Pin, Cot, 1/8 x 1.25
30	717-04074	Adjustment Gear, Deck
31	726-0233	Nut, Push, .25 ID x .50 OD
32	732-0306A	Sprg, Compress, .531 OD x 1.75

Ref. No.	Part No.	Description
33	732-0429A	Spring, Extension, .50 Dia x 3.97
34	732-0594A	Spring, Extension, .91 Dia x 7.33
35	732-04197	Spring, Extension, .68 Dia x 5.0
36	734-0973	Wheel, Deck 5.0 x 1.38
37	736-0119	Washer, Lock, 5/16
38	736-0760	Washer, Lock
39	736-0270	Washer, Bell, .265 x.75 x .062
40	736-0418A	Washer, Flat, .34 x 2.25 x.10
41	737-04003C	Water Deck Nozzle
42	731-1032B	Chute Assembly
43	738-0347	Spacer, Shoulder, .625 ID x .169
44	738-0373	Spacer, Shoulder, .498 x 1.53
45	721-04041	Water Nozzle Adapter
46	742-0611A	Blade, 16.28", Star 3-in-One
47	742-0612A	Blade, 14.88", Star 3-in-One
48	746-1107	Cable, 12.00"
49	747-1116	Rod, Deck Release
50	747-1130B	Rod, Deck
51	748-0234	Shoulder Spacer
52	750-0566A	Spacer, .260 x .372 x 1.030
53	750-1320	Spacer, .375 x .63 x .595
54	754-0349	Belt, V-Type, Poly
55	783-1025	Stop Chute
56	756-04129	Pulley, Idler, 4.25" Dia.
57	783-1348B	Belt Cover, LH
58	783-0141	Deck Skirt, Center
59	783-0142	Deck Skirt, RH
60	783-04641	Bracket, Idler
61	731-05264	Mulch Plug
62	712-3087	Wing Nut
63	710-0134	Carriage Screw, 1/4-20 x .62

IMPORTANT

For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

10

Illustrated Parts List



Model Series 605 (46" Deck - Electric PTO)

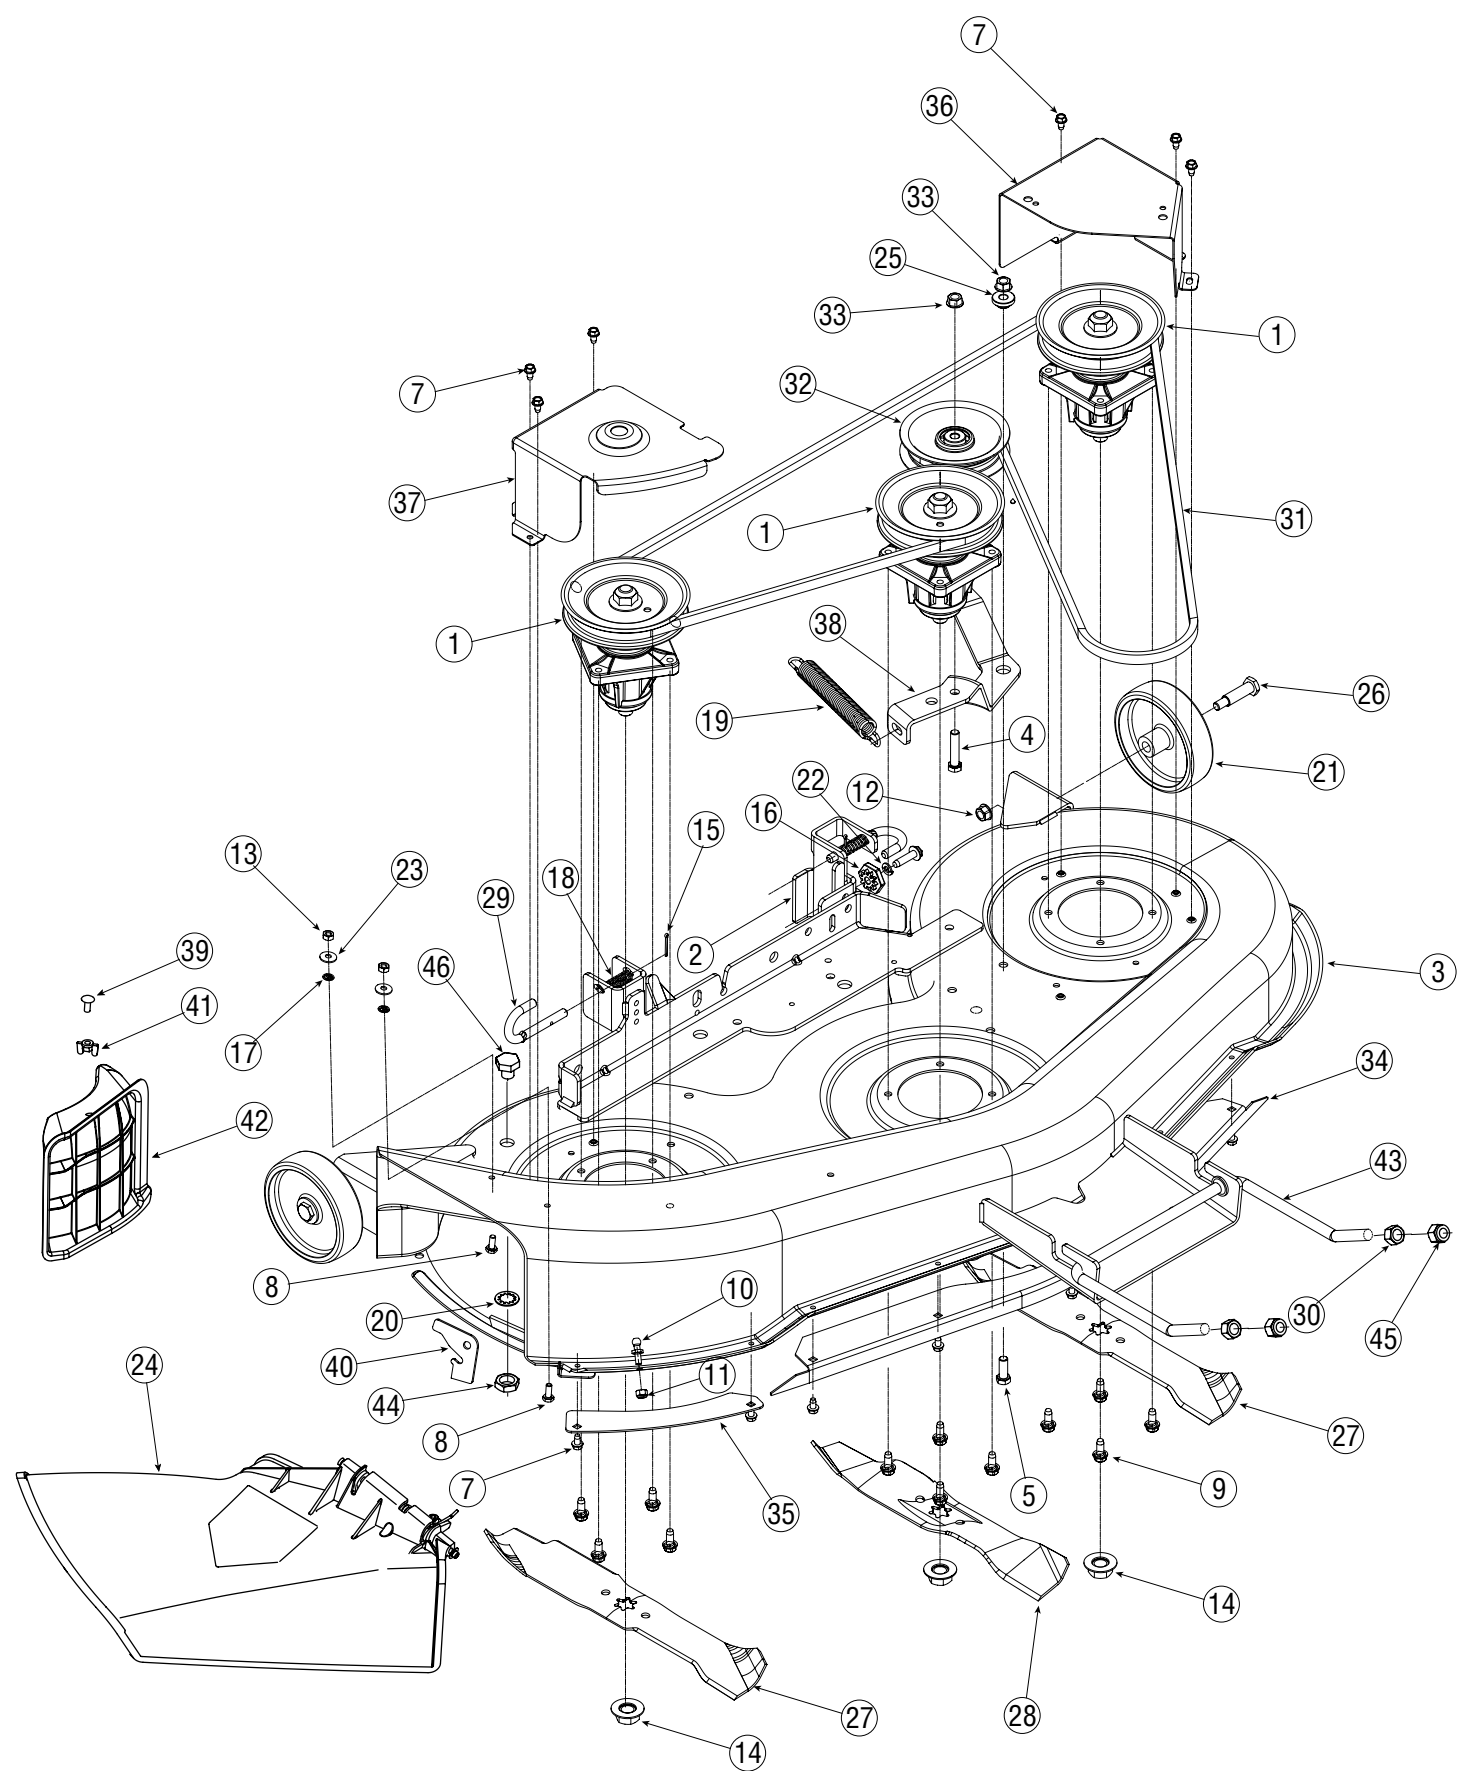

Ref. No.	Part No.	Description
1	618-0625	Spindle Assembly
2	683-0254B	Bracket Assembly, Deck Hanger
3	683-04104A	Deck Weldment, 46-inch
4	710-0347	Screw, 3/8-16, 1.75
5	710-0514	Hex Cap Screw, 3/8-16, 1.00, Gr5
6	710-0528	Screw, 5/16-18, 1.25, Gr5
7	710-0599	Screw, Hx. Wash. , 1/4-20, 0.5
8	710-3015	Screw, Hex Cap, 1/4-20, .75, Gr5
9	710-1260A	Self-tapping Screw, 5/16-18 x.75
10	711-04069	Pin, Grass catcher
11	712-04064	Nut, Nylon Lock, 1/4-20
12	712-0431	Flange Lock Nut, 3/8-16
13	712-3006	Nut, Hex, 1/4-20, Gr5
14	712-0417A	Nut, Flange, 5/8-18
15	714-0411	Cotter Pin, 1.0
16	717-04074	Deck Adjustment Gear
17	726-0233	Push Nut
18	732-0306A	Compression Spring, 1.75
19	732-0594A	Extension Spring, 7.33
20	736-0225	Lock Washer, 5/8
21	734-0973	Deck Wheel
22	736-0119	Washer, Lock, 5/16, Regular Duty
23	736-0270	Washer, Belleville,.265 x.75 x.062

Ref. No.	Part No.	Description
24	731-1032B	Chute Assembly, Side Discharge
25	738-0372B	Spacer, Shoulder, 1.00 x.38 x.38
26	738-0373	Shoulder Screw
27	742-0611A	Blade, 16.28, Star, 3-in-1
28	742-0612A	Blade, 14.88, 3-in-1
29	747-1116	Rod, Handle, Deck Release
30	712-0206	Hex Nut, 1/2-13
31	754-04033	Belt, V-Type
32	756-04129	Idler Pulley, 4.25
33	712-04065	Flange Lock Nut, 3/8-16
34	783-0141	Deck Skirt, Center
35	783-0142	Deck Skirt, RH
36	783-1348B	Belt Cover, LH
37	783-0805C	Belt Cover, RH
38	783-1421A	Bracket, Idler
39	710-0134	Carriage Screw, 1/4-20 x .62
40	783-1025	Chute Stop
41	712-3087	Nut, Wing, 1/4-20
42	731-05264	Mulch Plug
43	747-1130B	Front Deck Adjustment Rod
44	712-0641	Nut, Hex, M16-1.5
45	712-3083	Hex Lock Nut, 1/2-13
46	738-04146	Plug, M16 x 1.5

IMPORTANT

For a proper working machine,
use Factory Approved Parts.
V-belts are designed to
engage and disengage safely.
A substitute (non OEM) V-belt
can be dangerous by not
disengaging completely.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

10

Illustrated Parts List

