


Illustrated Parts Book

Transmatic Lawn Tractors

Models

660 Thru 679 Series

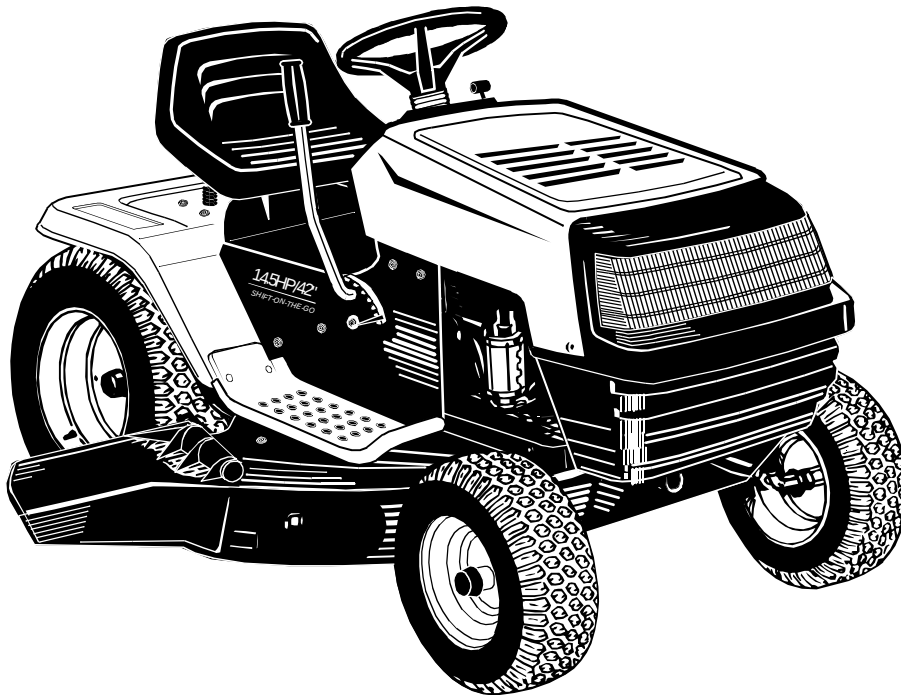


MTD PRODUCTS INC. P.O. BOX 368022 CLEVELAND, OHIO 44136-9722

PRINTED IN U.S.A.
ECO No.


FORM NO. 770-10116E
(1/2002)

Model Series 660 and 670

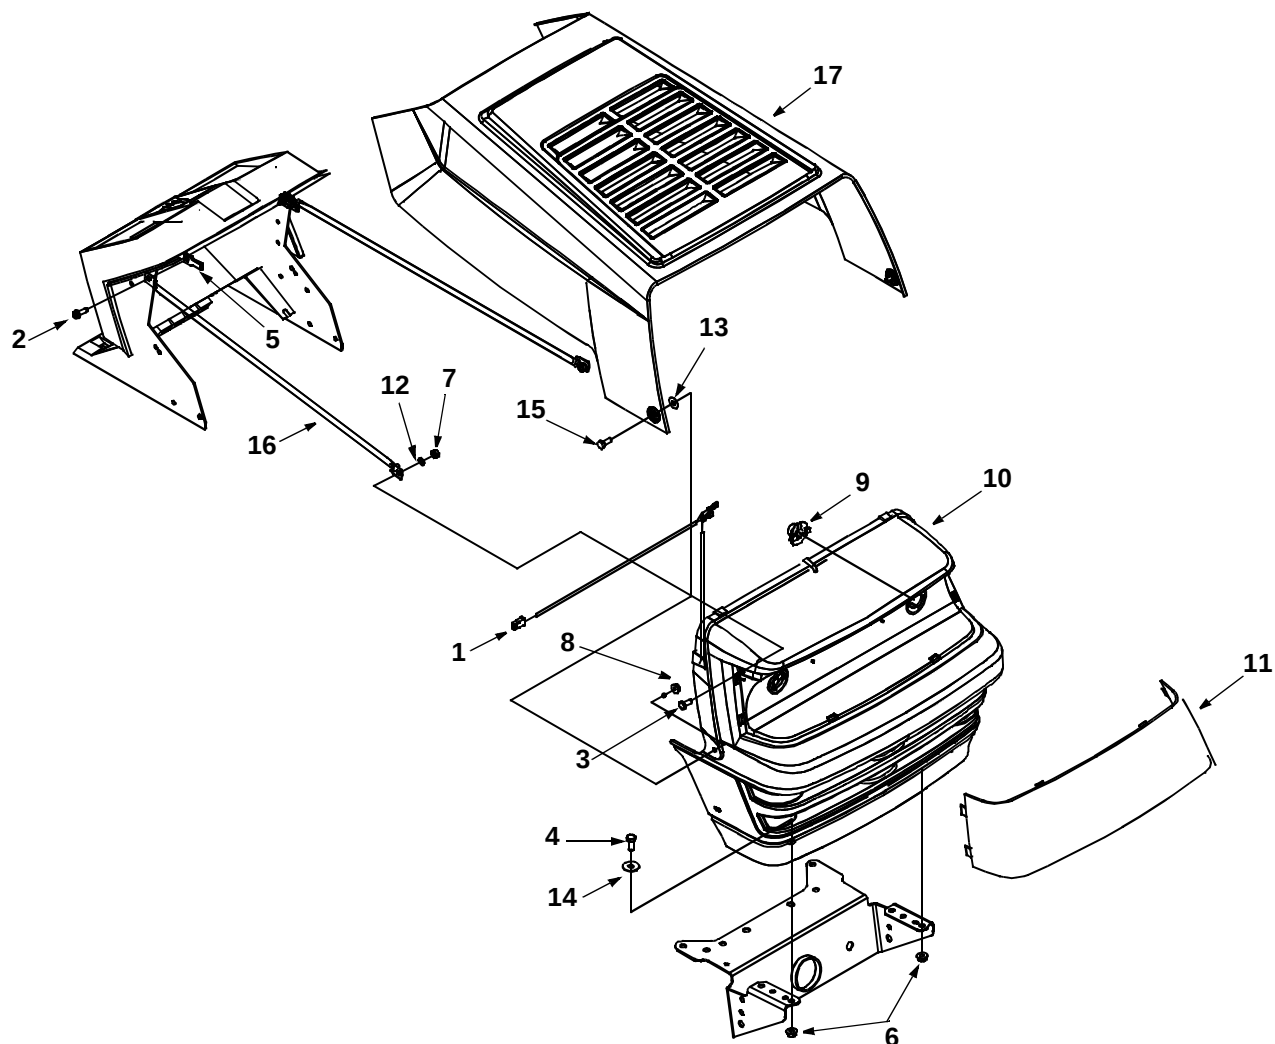


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	629-0469A	Harness Assembly	-	725-0963	Lamp (Not Shown)
2.	710-0642	Hex TT-Tap Scr. 1/4-20 x .75" Lg.	10.	731-1097E	Grille
3.	710-0751	Hex Bolt 1/4-20 x .62" Lg.	11.	731-1099A	Lens
4.	710-3008	Hex Bolt 5/16-18 x .75" Lg.	12.	736-0329	L-Wash. 1/4" I.D.
5.	712-0185	Speed Nut 1/4-20 Thd.	13.	736-0342	Fl-Wash. .293" I.D. x .75" O.D.
6.	712-3004A	Flange L-Nut 5/16-18 Thd.	14.	736-3078	Fl-Wash. .349" I.D. x .063" O.D.
7.	712-3006	Hex Nut 1/4-20 Thd.	15.	738-0952A	Shldr Screw .375" I.D. x .125" O.D.
8.	712-3027	Hex Flange L-Nut 1/4-20 Thd.	16.	749-0812	Grille Support
9.	725-1649	Socket	17.	783-0250	Hood

Model Series 662 and 672

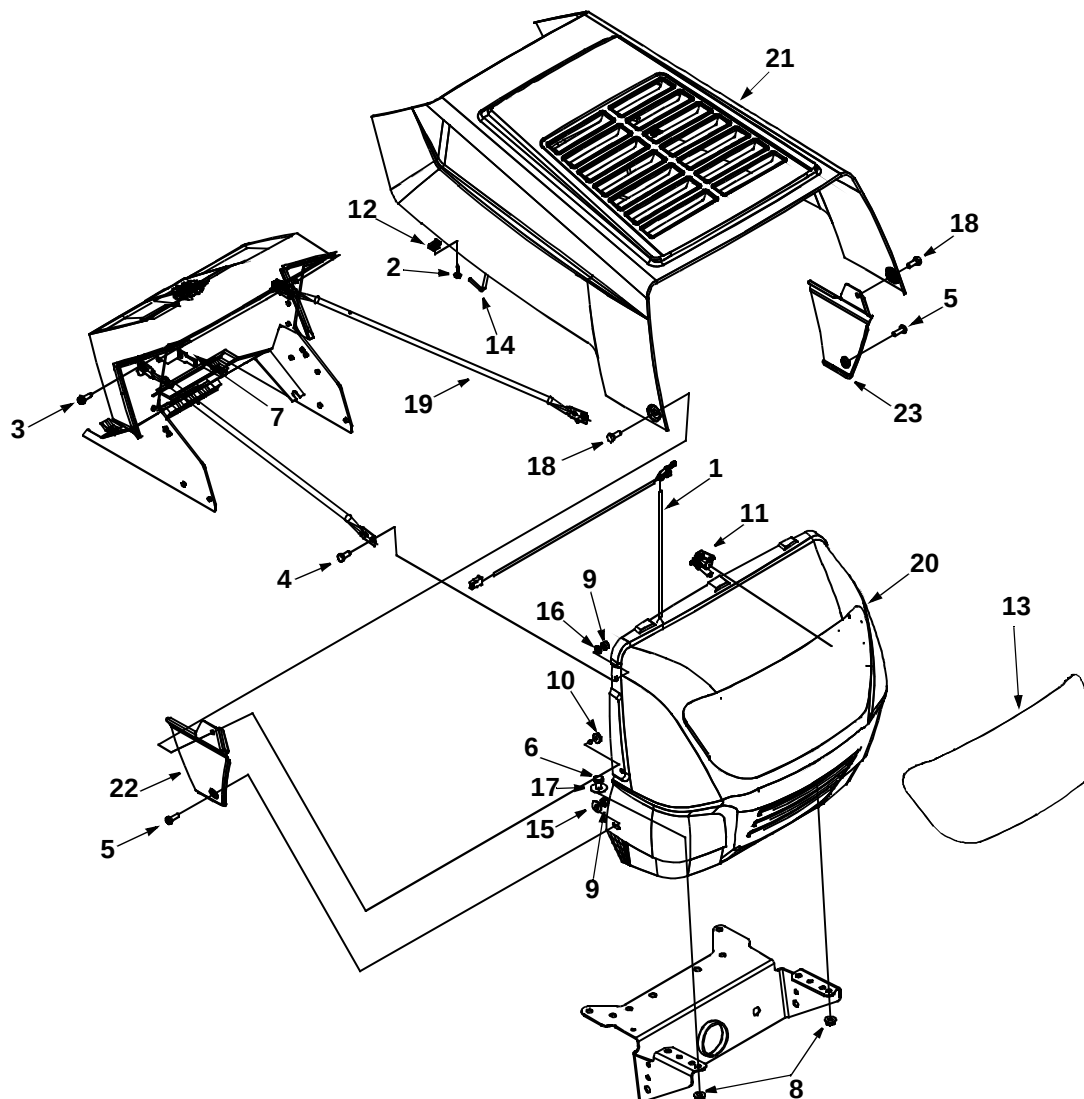


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	629-0469A	Headlight Harness Assembly	12.	726-0130	Speed Nut
2.	710-0589	Truss. Mach. Scr. #10-24 x .75"	13.	731-1503A	Lens
3.	710-0642	Hex TT-Tap Scr. 1/4-20 x .75" Lg.	14.	732-0699	Hood Spring
4.	710-0751	Hex Bolt 1/4-20 x .5/8" Lg.	15.	736-0270	Bell Wash. .265" I.D. x .75" O.D.
5.	710-0924	Pan Hd. Mach. Scr. 1/4-20 x .75"	16.	736-0329	L-Wash. 1/4" I.D.
6.	710-3008	Hex Bolt 5/16-18 x .75" Lg.	17.	736-3078	Fl-Wash. .349" I.D. x 1.0" O.D.
7.	712-0185	Speed Nut 1/4-20 Thd.	18.	738-0952A	Shldr Bolt. .375" I.D. x 1.25" O.D.
8.	712-3004A	Flange L-Nut 5/16-18 Thd.	19.	749-0722B	Grille Support Rod
9.	712-3006	Hex Sems Nut 1/4-20 Thd.	20.	783-0156A	Grill
10.	712-3027	Hex Flange L-Nut 1/4-20 Thd.	21.	783-0250	Hood
11.	725-1651	Socket	22.	783-0366	R.H. Side Panel
-	725-0963	Lamp (Not Shown)	23.	783-0367	L.H. Side Panel

Model Series 663 and 673

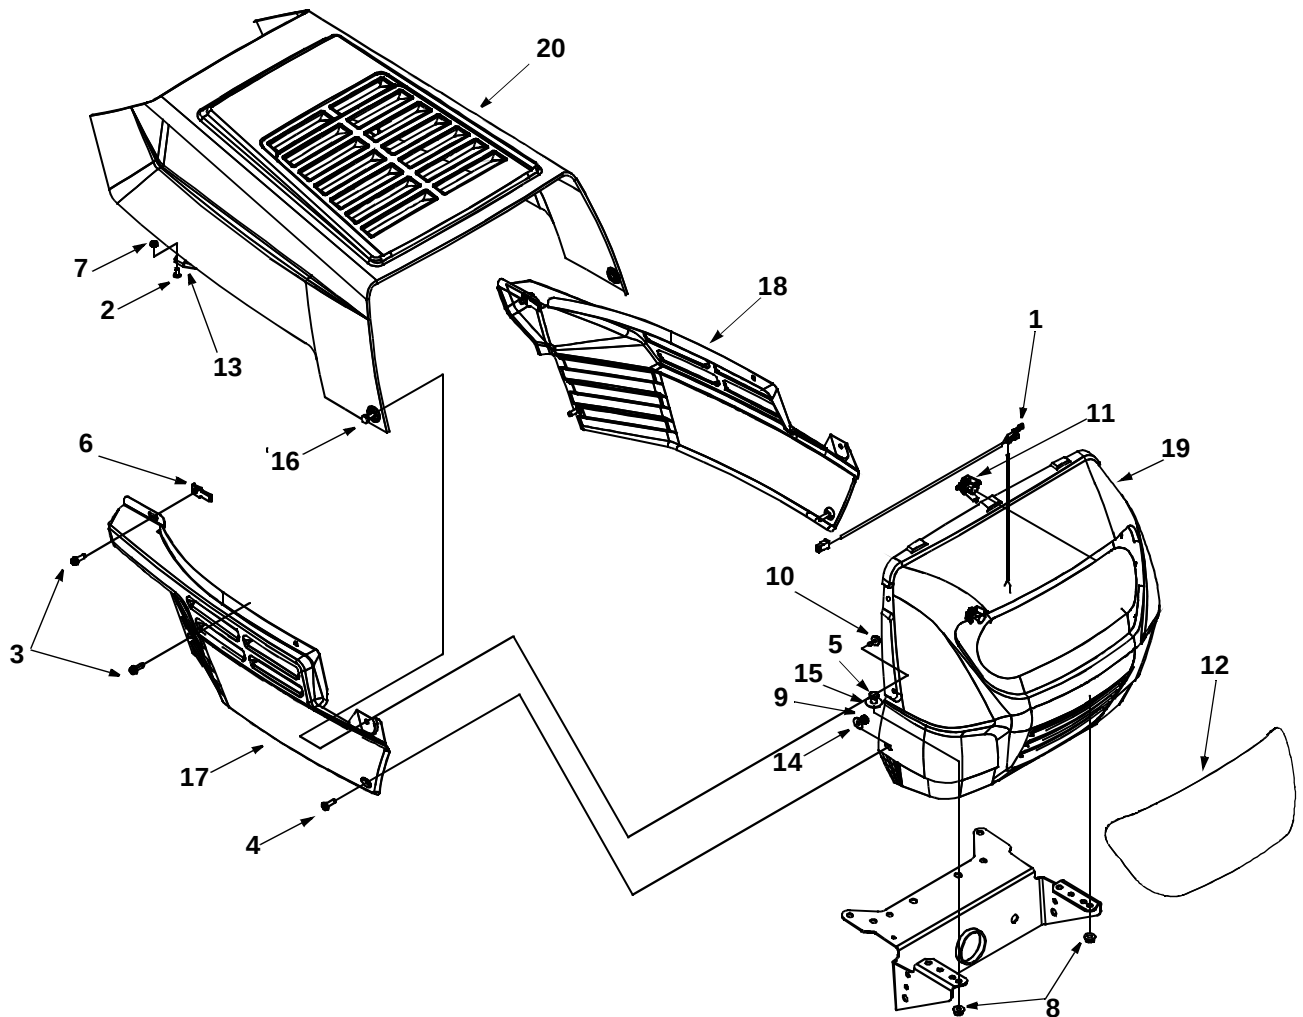


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	629-0469A	Harness Assembly	12.	731-1503A	Lens
2.	710-0473	Truss. Mach. Scr. #10-24 x 5" Lg.	13.	732-0835	Hood Latch
3.	710-0642	Hex TT-Tap Scr. 1/4-20 x .75" Lg.	14.	736-0270	Bell-Wash. .265" I.D. x .75" O.D.
4.	710-0924	Pan Hd. Scr. 1/4-20 x .75" Lg.	15.	736-3078	Fl-Wash. .349" I.D. x 1.0" O.D.
5.	710-3008	Hex Bolt 5/16-18 x .75" Lg.	16.	738-0952A	Shd. Scr. .375" I.D. x 1.25" O.D.
6.	712-0185	Speed Nut 1/4-20 Thd.	17.	783-0150A	R.H. Side Panel
7.	712-0272	Hex Sems Nut 1-24 Thd.	18.	783-0151A	L.H. Side Panel
8.	712-3004A	Flange L-Nut 5/16-18 Thd.	19.	783-0156A	Grille
9.	712-3006	Hex Nut 1/4-20 Thd.	20.	783-0250	Hood
10.	712-3027	Flange L-Nut 1/4-20 Thd.			
11.	725-1651	Socket			
-	725-0963	Lamp (Not Shown)			

Model Series 665 and 675

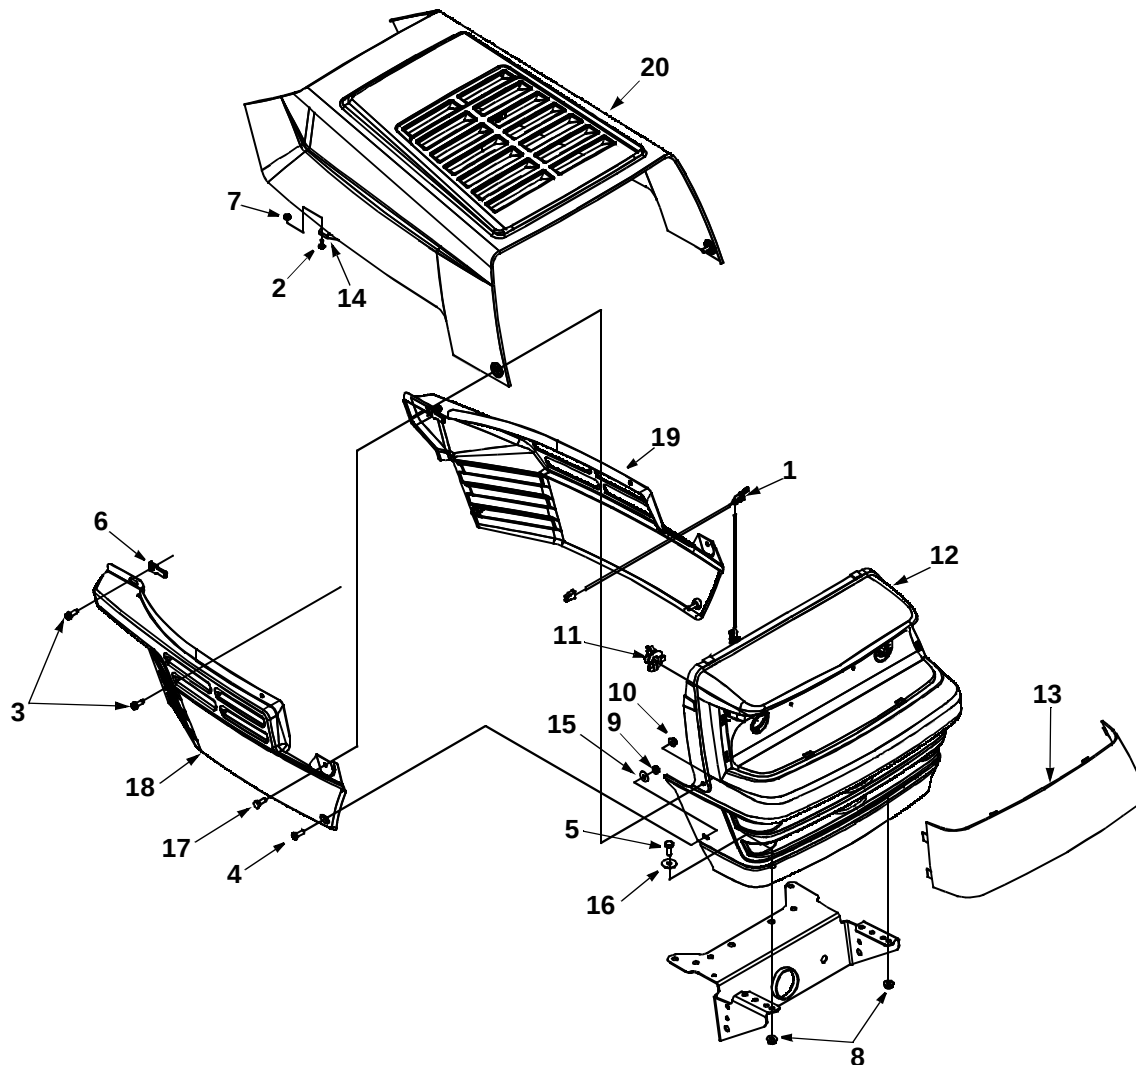


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	629-0469A	Harness Assembly	12.	731-1097E	Grill
2.	710-0473	Truss Mach. Scr. #10-24 x .5"	13.	731-1099A	Lens
3.	710-0642	Hex TT-Tap Scr. 1/4-20 x .75" Lg.	14.	732-0835	Hood Latch
4.	710-0924	Pan Hd. Scr. 1/4-20 x .75" Lg.	15.	736-0270	Bell-Wash. 1/4" I.D.
5.	710-3008	Hex Bolt 5/16-18 x .75" Lg.	16.	736-3078	Fl-Wash. .34" I.D. x 1" O.D.
6.	712-0185	Speed Nut 1/4-20 Thd.	17.	738-0952A	Shld. Bolt .375" Dia. x .125" Lg.
7.	712-0272	Hex Sems Nut #10-24 Thd.	18.	783-0150A	R.H. Side Panel
8.	712-3004A	Flange L-Nut 5/16-18 Thd.	19.	783-0151A	L.H. Side Panel
9.	712-3006	Hex Sems Nut 1/4-20 Thd.	20.	783-0250	Hood
10.	712-3027	Hex Flange L-Nut 1/4-20 Thd.			
11.	725-1649	Socket			
-	725-0963	Lamp (Not Shown)			

Model Series 678

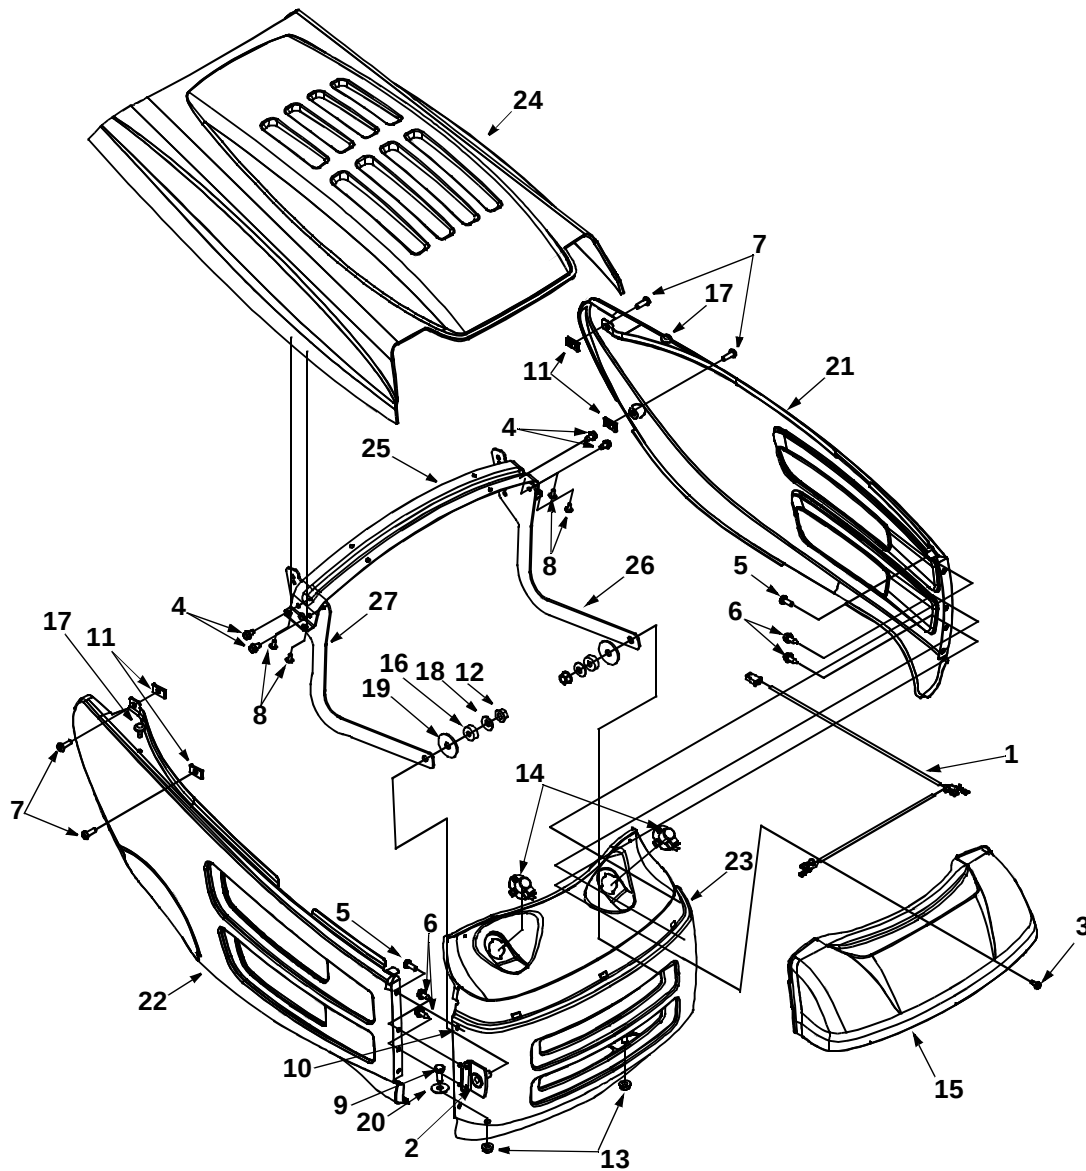

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	629-0469A	Harness Assembly	-	725-0963	Lamp (Not Shown)
2.	683-0195	Bracket Assembly	15.	731-1854A	Lens
3.	710-0456	Hex Wash. Tap Screw #10-16 Thd.	16.	735-0126	Rubber Wash.
4.	710-0599	Hex Wash. TT-Tap Scr. 1/4-20 Lg.	17.	735-0199A	Rubber Bumper
5.	710-0751	Hex Bolt 1/4-20 x .62" Lg.	18.	736-0105	Bell-Wash. .375" I.D. x .870" O.D.
6.	710-0896	Hex Wash. Scr. 1/4-14 x .625" Lg.	19.	736-3039	Fl-Wash. .406" I.D. x 1.5" O.D.
7.	710-0924	Pan Hd. Mach. Scr. 1/4-20 x .75" Lg.	20.	736-3078	Fl-Wash. .349" I.D. x 1.0" O.D.
8.	710-1760	Torx Scr. #10-16 x .5" Lg.	21.	783-0475A	L.H. Side Panel
9.	710-3008	Hex Bolt 5/16-18 x .75" Lg.	22.	783-0476B	R.H. Side Panel
10.	712-0271	Hex Nut 1/4-20 Thd.	23.	783-0477A	Grill
11.	712-0292	Tinn Nut 1/4-20 Thd.	24.	783-0478A	Hood
12.	712-0431	Flange L-Nut 3/8-16 Thd.	25.	783-0553A	Hood Support Bracket
13.	712-3004A	Flange L-Nut 5/16-18 Thd.	26.	783-1038C	L.H. Hinge Hood Bracket
14.	725-1649	Socket	27.	783-1495	R.H.Hinge Hood Bracket

Model Series 679

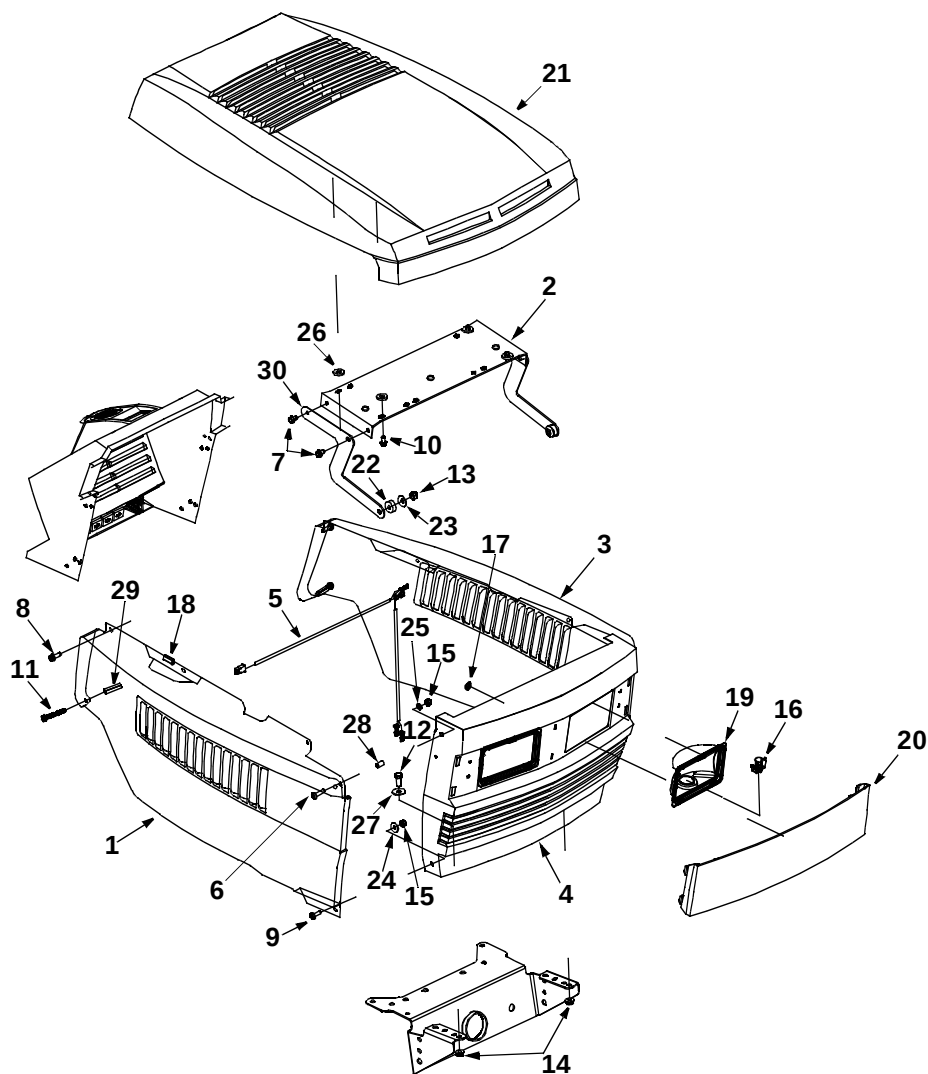

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	16725	R.H. Side Panel	18.	731-0511	Trim Strip
2.	16903A	Hood Plate	19.	731-0705	Headlight Housing
3.	17309B	L.H. Side Panel	20.	731-1044	Lens
4.	17410A	Grill	21.	731-1704A	Hood-Evergreen
5.	629-0469A	Headlight Harness Assembly		731-1893A	Hood-Black
6.	710-0166	Pan Hd. Scr. 1/4-20 x 1" Lg.		731-1491A	Hood-Red
7.	710-0599	Hex Wash. Hd.Tap Scr. 1/4-20 x 5"		731-1492	Hood-Midnight Blue
8.	710-0642	Hex Tap Scr. 1/4-20 x .75" Lg.		731-1497A	Hood-Gray
9.	710-0924	Pan Hd. Scr. 1/4-20 x .75" Lg.	22.	735-0126	Rubber Washer
10.	710-1005	Hex Wash. Hd. Scr. 1/4-20 x .5"	23.	735-0242	Bellville Washer
11.	710-1026	Hex Wash. TT-Tap Scr. 1/4-20	24.	736-0270	Bell-Wash. .265" I.D. x .75" O.D.
12.	710-3008	Hex Bolt 5/16-18 x .75" Lg.	25.	736-0329	L-Wash. 1/4" I.D.
13.	712-0429	Hex L-Nut 5/16-18 Thd.	26.	736-3010	FI-Wash. .407" I.D. x .812" O.D.
14.	712-3004A	Flange L-Nut 5/16-18 Thd.	27.	736-3078	FI-Wash. .349" I.D. x .063" O.D.
15.	712-3006	Hex Nut 1/4-20 THd.	28.	750-0218	Spacer .255" I.D. x .340" O.D.
16.	725-1650	Socket	29.	750-0768	Split Spacer .250" I.D. x .37" O.D.
-	725-0963	Lamp (Not Shown)	30.	783-0190	Hood Hinge
17.	726-0201	Speed Nut			

This technical drawing is an exploded view of a vehicle chassis assembly, showing the relationship between various components. The main frame (3) is the central structural element. At the front, a steering knuckle assembly (1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51) is shown, including a steering knuckle (1), a steering arm (2), a steering knuckle arm (3), a steering knuckle arm (4), a steering knuckle arm (5), a steering knuckle arm (6), a steering knuckle arm (7), a steering knuckle arm (8), a steering knuckle arm (9), a steering knuckle arm (10), a steering knuckle arm (11), a steering knuckle arm (12), a steering knuckle arm (13), a steering knuckle arm (14), a steering knuckle arm (15), a steering knuckle arm (16), a steering knuckle arm (17), a steering knuckle arm (18), a steering knuckle arm (19), a steering knuckle arm (20), a steering knuckle arm (21), a steering knuckle arm (22), a steering knuckle arm (23), a steering knuckle arm (24), a steering knuckle arm (25), a steering knuckle arm (26), a steering knuckle arm (27), a steering knuckle arm (28), a steering knuckle arm (29), a steering knuckle arm (30), a steering knuckle arm (31), a steering knuckle arm (32), a steering knuckle arm (33), a steering knuckle arm (34), a steering knuckle arm (35), a steering knuckle arm (36), a steering knuckle arm (37), a steering knuckle arm (38), a steering knuckle arm (39), a steering knuckle arm (40), a steering knuckle arm (41), a steering knuckle arm (42), a steering knuckle arm (43), a steering knuckle arm (44), a steering knuckle arm (45), a steering knuckle arm (46), a steering knuckle arm (47), a steering knuckle arm (48), a steering knuckle arm (49), a steering knuckle arm (50), and a steering knuckle arm (51). A wheel (49) is shown at the bottom left. A rear suspension component (3) is shown at the bottom right. Various bolts, nuts, and washers are indicated by numbers 1 through 51.


Model Series 660 Thru 679

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	17198A	Retainer Plate	28.	738-0919	Steering Shaft
2.	16481A	Steering Arm Front Axle	29.	741-0656	Hex Flg. Brg. .634 I.D.
3.	683-0128A	Pivot Bar Ass'y (Steel)	30.	741-0659	Hex Flg. Brg. .632 I.D.
	719-0342B	Pivot Bar Ass'y (Cast Iron)	31.	747-0861	Tie Rod (Non-Adjustable)
	**	Grease Fitting (Cast Iron)	-	747-1267	Tie Rod (Adjustable)
4.	710-0459A	Hex Bolt 3/8-24 x 1.5" Lg. (Gr. 5)	32.	748-0389	Cap
5.	710-0593	Hex Bolt 5/16-24 x 2.25" Lg.	33.	750-0535	Spacer .380" I.D. x .625" O.D.
6.	710-0643	Hex Bolt 5/16-18 x 1" Lg.	34.	783-0041B	Pivot Bar Bracket
7.	710-0726	Hex Wash. Hd. Self-Tap Scr.	35.	711-1661	Ferrule
8.	710-1039	Hex Hd. Cap Scr. 3/8-24 x 1.0 Gr. 5	36.	714-0470	Cotter Pin 1/8
9.	710-1309	Hex Patch Bolt 5/16-18 x .62"	37.	736-0267	Fl-Wash. 3/8 x .870 I.D. x .060 O.D.
10.	711-1107	Steering Drag Link	38.	731-1649	Axle Cap
11.	712-0158	Hex Cent. L-Nut 5/16-18 Thd.	39.	731-1291A	Pivot Bar End Cap*
12.	712-0214	Hex Cent. L-Nut 3/8-24 Thd.	40.	714-0470	Cotter Pin
13.	712-0240	Jam Nut 7/16-20 Gr. 2	41.	736-0285	Fl-Wash. .635 I.D. x 1.589 O.D.
14.	712-0241	Hex Nut 3/8-24 Gr.5	42.	736-0162	Fl-Wash. .641 I.D. x 1.0 O.D.
15.	712-0262	Hex Jam Nut 3/8-24 Thd.	43.	**	Front Axle Assembly R.H.
16.	712-0411	Hex L-Nut 5/16-24 Thd.	44.	**	Front Axle Assembly L.H.
17.	712-0431	Flanged L-Nut 3/8-16 Thd.	45.	726-0214	Push Cap
18.	717-0622A	Steering Gear Segment	46.	731-0220	Steering Wheel Cap (Round)
19.	723-0448A	Ball Joint 7/16-20 Thd.		731-1460	Steering Wheel Cap (Sq. No Logo)
20.	736-0169	L-Wash. 3.8" I.D.		731-1459A	Steering Wheel Cap (Sq. Logo)
21.	736-0187	Fl-Wash. (Hardened)	47.	731-0954	Steering Bellow
22.	736-0217	L-Wash.	48.	731-1687	Steering Wheel (3 Spoke) †
23.	736-0242	Bell. Wash. .340 I.D. x .872 O.D.		631-0027	Steering Wheel (4 Spoke) ‡
24.	736-0356	Bell. Wash. .39 I.D. x 1.38 O.D.	49.	**	Wheel Assembly Comp.
25.	736-3081	Fl-Wash. .320 x .600 x .060	50.	731-0484A	Front Wheel Hub Cap
26.	738-0141	Shoulder Bolt .437 x .35 Lg.	51.	**	Front Wheel Rim Only
27.	738-0527	Shoulder Bolt			

† Uses Square Steering Wheel Cap

‡ Uses Round Steering Wheel Cap


* If Equipped

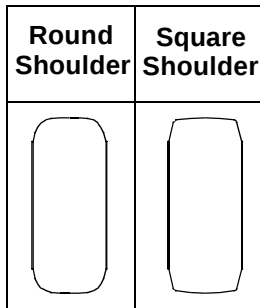

** Front Wheel Chart

Description	15" x 6" (Round Shoulder)	15" x 6" (Square Shoulder)
Wheel Ass'y Comp.	634-0056A	634-0105A
Tire Only	734-0864	734-1731
Rim Only	634-0172	634-0172
Bearing	741-0487A	741-0487A
Air Valve	734-0255	734-0255
Grease Fitting (Optional)	737-0211A	737-0211A
Grease Plug	737-0212A	737-0212A
Front Axle Ass'y-L.H.	683-0127	683-0127
Front Axle Ass'y-R.H.	683-0126	683-0126
Front Axle Ass'y-L.H. (46" Deck)	683-0125	683-0125
Front Axle Ass'y- R.H. (46" Deck)	683-0124	683-0124

Model Series 660 Thru 679

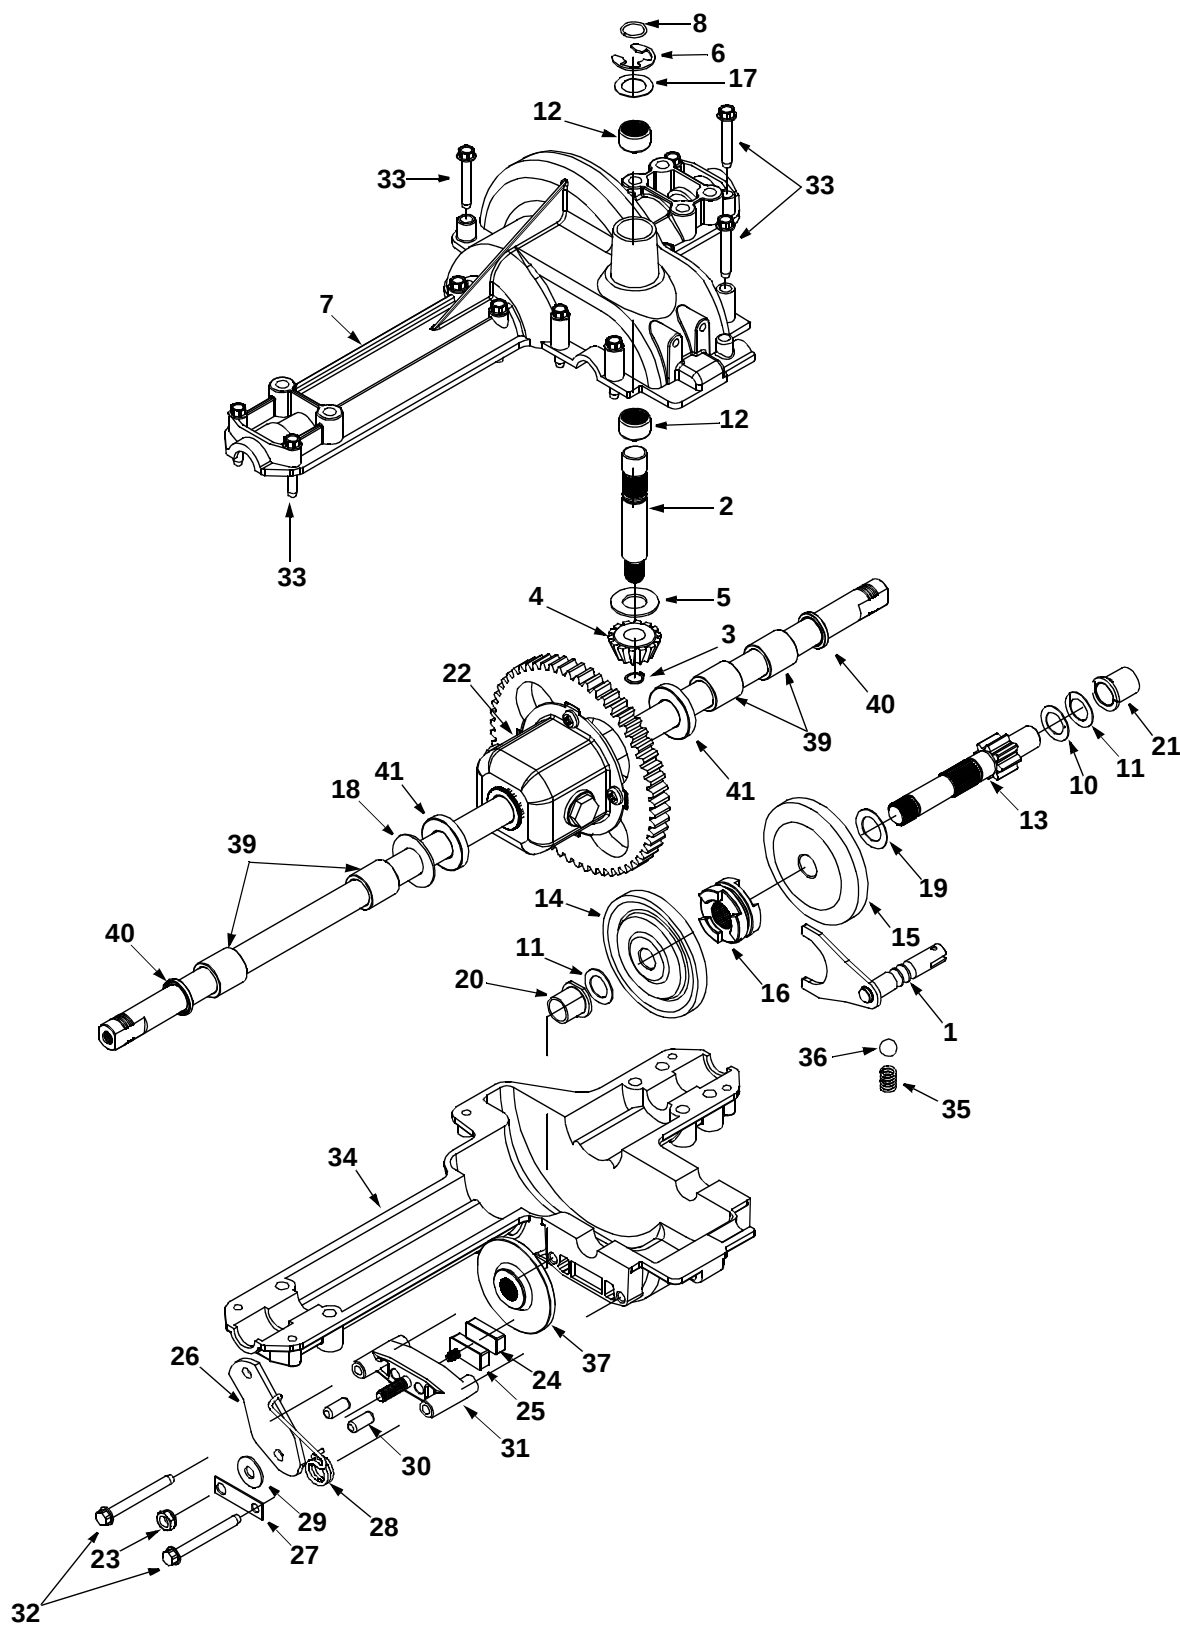

Model Series 660 Thru 679

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	611-0011	Shift Fork Assembly	22.	618-0162	Differential Ass'y
2.	711-1109	Input Shaft	23.	712-0273	Hex Nut 5/16-24 Thd.
3.	716-0108	Retaining Ring	24.	717-0678	Brake Puck
4.	717-1464	Pinion Input 14T	25.	717-0682	Puck Plate
5.	736-0335	Needle Brg. 5/8" I.D. x 1" O.D.	26.	717-0700	Actuating Arm
6.	716-0231	"E" Ring	27.	718-0150	Anti-Rotation Brkt.
7.	719-0367	Upper Housing	28.	732-0742	R.H. Brake Spring
8.	732-0614	Wire Ring	29.	736-0371	Fl-Wash. .344 I.D. x .875" O.D.
10.	**	Washer	30.	741-0343	Actuating Pin 5/16" Dia.
11.	736-0349	Fl-Wash. 5/8" I.D. x 1" O.D. x .020 Thd.	31.	761-0198	Brake Yoke
12.	741-0335	Needle Brg. 5/8" I.D. x 1/2" Lg.	32.	710-1206	Hex Wash. Hd. Self-Tap Scr. 1/4-20
13.	711-1003	Drive Shaft - R.H. Brake	33.	710-1325	Hex Tap Scr. 1/4-20 x 1.625" Lg.
14.	717-1362	Bevel Gear 42T Small I.D.	34.	719-0313B	Lower Housing
15.	717-1363	Bevel Gear 42T Large I.D.	35.	732-0863	Spring Detent
16.	718-0228	Clutch Collar	36.	741-0862	Ball Detent .250" Dia.
17.	**	Washer	37.	761-0202	Brake Disc.
18.	**	Washer	38.	737-0148	Grease-Shell (15 oz.)
19.	736-0519	Thrust Washer	39.	741-0340	Sleeve Bearing 3/4" I.D. 1.0" Lg.
20.	741-0336	Flange Brg. 5/8" I.D. x 3/4" Lg.	40.	721-0338	Oil Sleeve 3/4" I.D.
21.	741-0337	Flange Brg. 5/8" I.D. x 15/16" Lg.	41.	736-0445	Fl-Wash. .760" I.D. x 1.5" O.D.

** Ref. No. 10

736-0495 Thrust Wash. 5/8" I.D. x 1" O.D. x .025" Thk.
736-0336 Fl-Wash. 5/8" I.D. x 1" O.D. x .030" Thk.
736-0494 Thrust Wash. 5/8" I.D. x 1" O.D. x .035" Thk.
736-0337 Fl-Wash. 5/8" I.D. x 1" O.D. x .040" Thk.


**Ref. No. 17

736-0349 Fl-Wash. 5/8" I.D. x 1" O.D. x .020" Thk.
736-0336 Fl-Wash. 5/8" I.D. x 1" O.D. x .030" Thk.
736-0337 Fl-Wash. 5/8" I.D. x 1" O.D. x .040" Thk.

**Ref. No. 18

736-0492 Fl-Wash. .76" I.D. x 1.5" O.D. x .010" Thk.
736-0493 Fl-Wash. .76" I.D. x 1.5" O.D. x .020" Thk.
736-0351 Fl-Wash. .76" I.D. x 1.5" O.D. x .030" Thk.
736-0445 Fl-Wash. .76" I.D. x 1.5" O.D. x .060" Thk.

Model Series 660 Thru 679

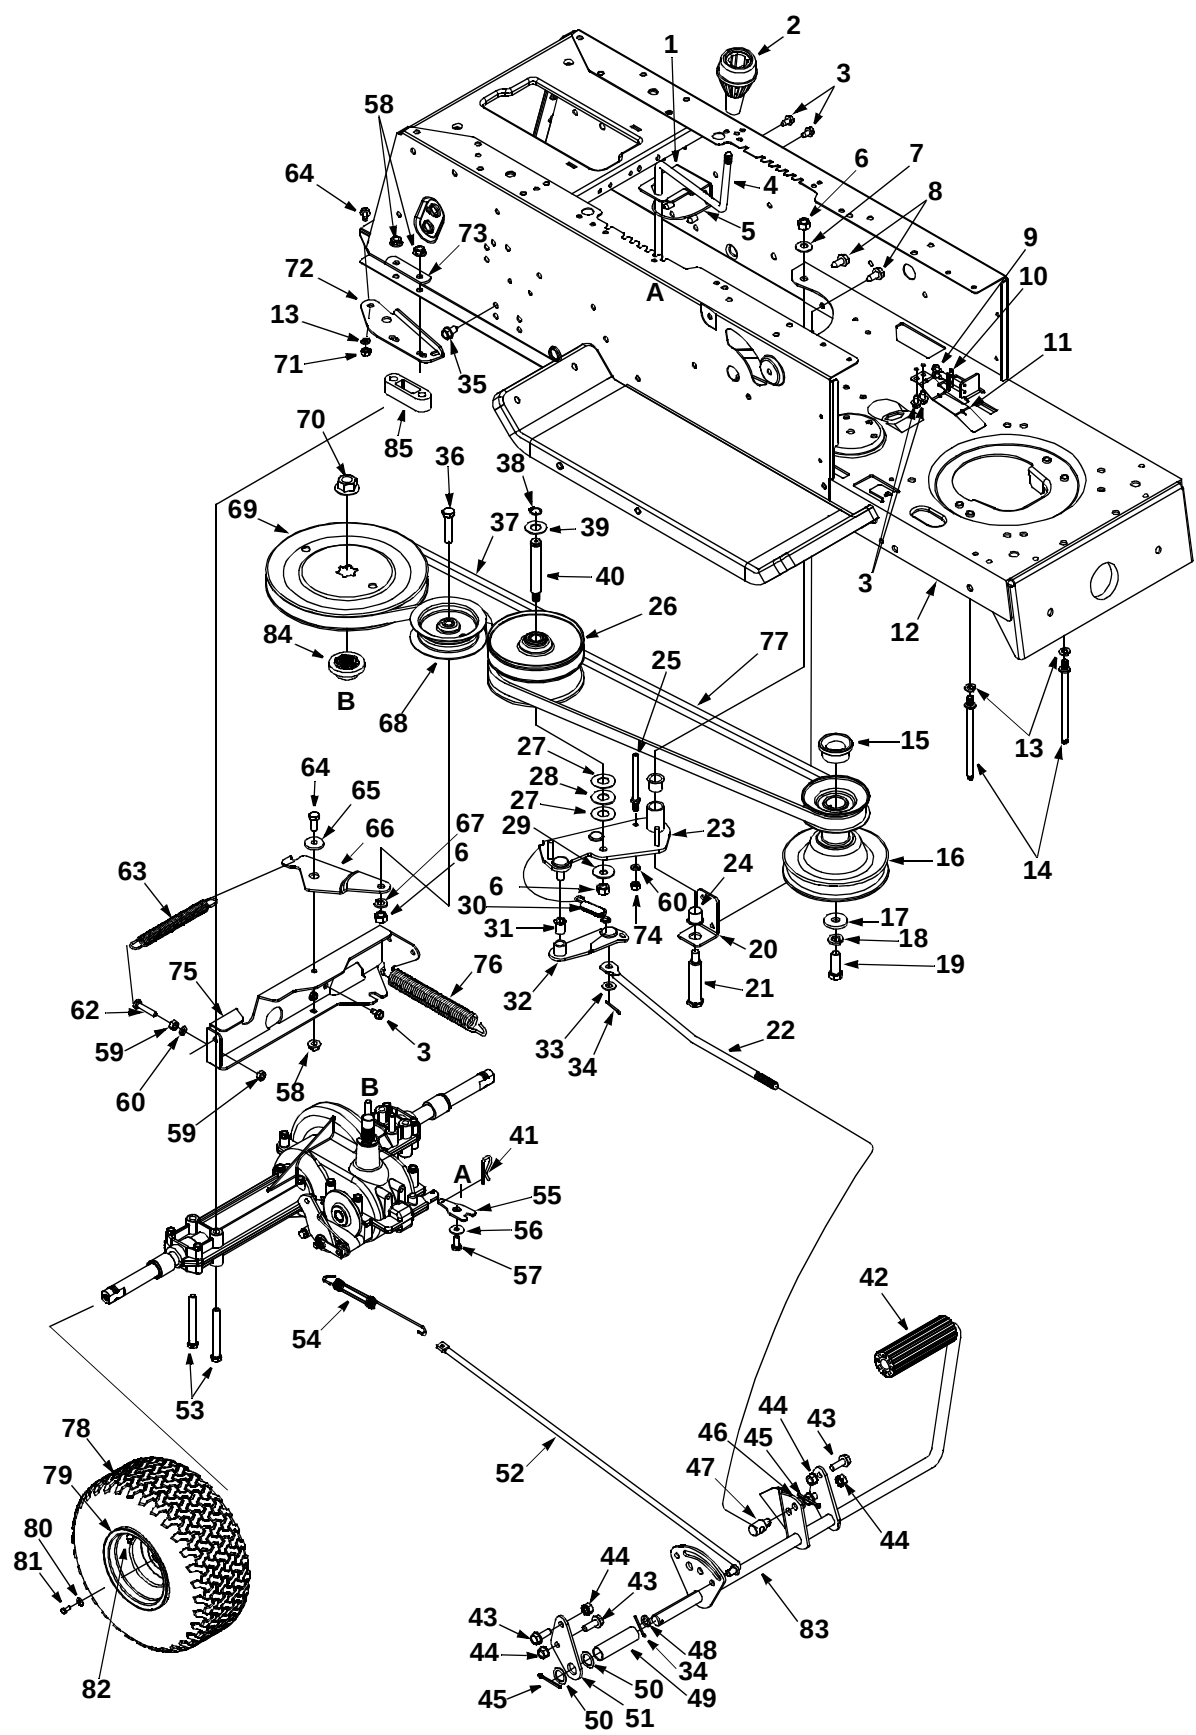


Model Series 660 Thru 679

Ref. No	Part No.	Description	Ref. No	Part No.	Description
1.	17630	Shift Lever Bracket	48.	736-0140	FI-Wash. .385" I.D. x .62" O.D.
2.	720-0232	Shift Knob	49.	750-0802	Spacer
3.	710-0599	Self Tap. Screw 1/4-20 x .50 " Lg.	50.	736-0256	FI-Wash. .635" I.D. x .930 O.D.
4.	17705	Shift Lever Assembly	51.	17860	Pedal Bracket
5.	732-0525	Comp. Spring-Clip	52.	747-0755A	Brake Rod
6.	712-0241	Hex Nut 3/8-24 Thd.	53.	710-0189	Hex Hd. Cap Scr. 5/16-18
7.	736-0105	Bell Wash. .375" I.D.		710-1266	Hex Bolt 5/16-18 x 3.5" (Used w/ 46" Deck Ass'y)
8.	710-0726	AB-Tap Scr. 5/16-18 x .75" Lg.	54.	732-0413	Ext. Spring
9.	710-0224	AB-Tap Scr. #10-16 x .5" Lg.		732-0642	Ext. Spring (Used w/ 46" Deck)
10.	17962	Switch Plate	55.	17707	Shift Link Assembly
11.	732-0750A	Switch Spring Actuator	56.	736-0270	Bell Wash. .265 x .75
12.	783-0310E	Lower Frame	57.	710-0195	Hex Hd. Cap Screw 1/4-28
13.	736-0119	L-Wash. 5/16" I.D.	58.	712-3004A	Flange L-Nut 5/16-18 Thd.
14.	711-1044	Belt Guard Pin 4.75" Lg.	59.	712-0138	Hex Nut 1/4-28 Thd.
15.	750-0956	Spacer 1" I.D. x 1.25" Lg.	60.	736-0329	L-Wash. 1/4" I.D.
16.	756-0982B	Engine Pulley	62.	710-0428	Hex Hd. Cap Screw 1/4-28
17.	736-0322	FI. Wash. .450" I.D.	63.	732-0384	Extension Spring
18.	736-0171	L-Wash. 7/16" I.D.	64.	710-3008	Hex Hd. Cap Screw 5/16-18
19.	710-3029	Hx Hd. Cap Scr. 7/16-20 x 1.25" Lg.	65.	748-0234	Shoulder Spacer
20.	17963	Bearing Shaft Bracket Ass'y	66.	17643	Idler Brkt.
21.	738-0755	Shoulder Screw		17694	Idler Brkt. (Used w/ 46" Deck)
22.	747-0530A	Speed Control Link	67.	736-0169	L-Wash. 3/8" I.D.
23.	16354B	Variable Speed Brkt. Ass'y	68.	756-0643A	Flat Idler Pulley
24.	741-0495	Flange Brg. 5/8" I.D. x .88" Lg.	69.	756-0665	V Pulley
25.	711-1000	Belt Keeper 3" Lg.	70.	712-0700	Flange Nut 9/16
26.	717-0800A	Variable Speed Pulley Ass'y	71.	712-3010	Hex Nut 5/16-18 Thd.
27.	736-0355	FI-Wash.	72.	17668	Axle Support Brkt. R.H.
28.	741-0405	Thrust Bearing .56" I.D. x 1.25"		17669	Axle Support Brkt. L.H.
29.	736-0331	Bell Wash. .390" I.D. x 1.13"	73.	17840	Transaxle Mounting Brkt.
30.	732-0568	Extension Spring	74.	712-3006	Hex Nut 1/4-20 Thd.
31.	741-0419	Flange Bearing	75.	17629A	Transaxle Support Brkt.
32.	16554A	Variable Speed Torque Brkt. Ass'y	76.	732-0556	Ext. Spring
33.	736-0275	FI-Wash. .344" I.D.	77.	754-0280A	V-Belt
34.	714-0111	Cotter Pin	78.	**	Rear Wheel Assembly Comp.
35.	710-0604A	TT-Tap Scr. 5/16-18 x .625" Lg.	79.	**	Rear Wheel Rim Assembly
36.	710-0539	Hex Hd. Cap Scr. 3/8-24 x 1.75" Lg.	80.	736-0242	Bell Wash. .340 I.D. x .872 O.D.
37.	754-0370	V-Belt	81.	710-0627	Hex Hd. Cap Scr. 5/16-24
38.	716-0114	Snap Ring . 56" Dia.	82.	734-0255	Air Valve (Service Only)
39.	736-0414	FI-Wash. .570" I.D. x .120" Lg.	83.	683-0123	Clutch Brake Pedal Ass'y
40.	738-0569	Shaft .56" Dia. x 3.79" Lg.	84.	718-0758	Pulley Hub Splined
41.	714-0209	Internal Cotter Pin	85.	748-0334	Spacer (Used w/46" Deck)
42.	735-0196	Foot Pad	** Rear Wheel Assembly		
43.	710-1238	TT-Tap Scr. 5/16-18 x .75"			
44.	712-0265	Sems Nut 5/16-18			
45.	714-0470	Cotter Pin 1/8- 1.25			
46.	736-0140	FI-Wash .385" I.D. x .62" O.D.			
47.	711-0198	Ferrule			

Description	20" x 8.0" (Round Shoulder)	20" x 8.0" (Square Shoulder)
Wheel Ass'y. Comp.	734-1675	634-0104
Tire Only	734-1596	734-1730
Rim Only	634-0070	634-0070

Model Series 660 Thru 679

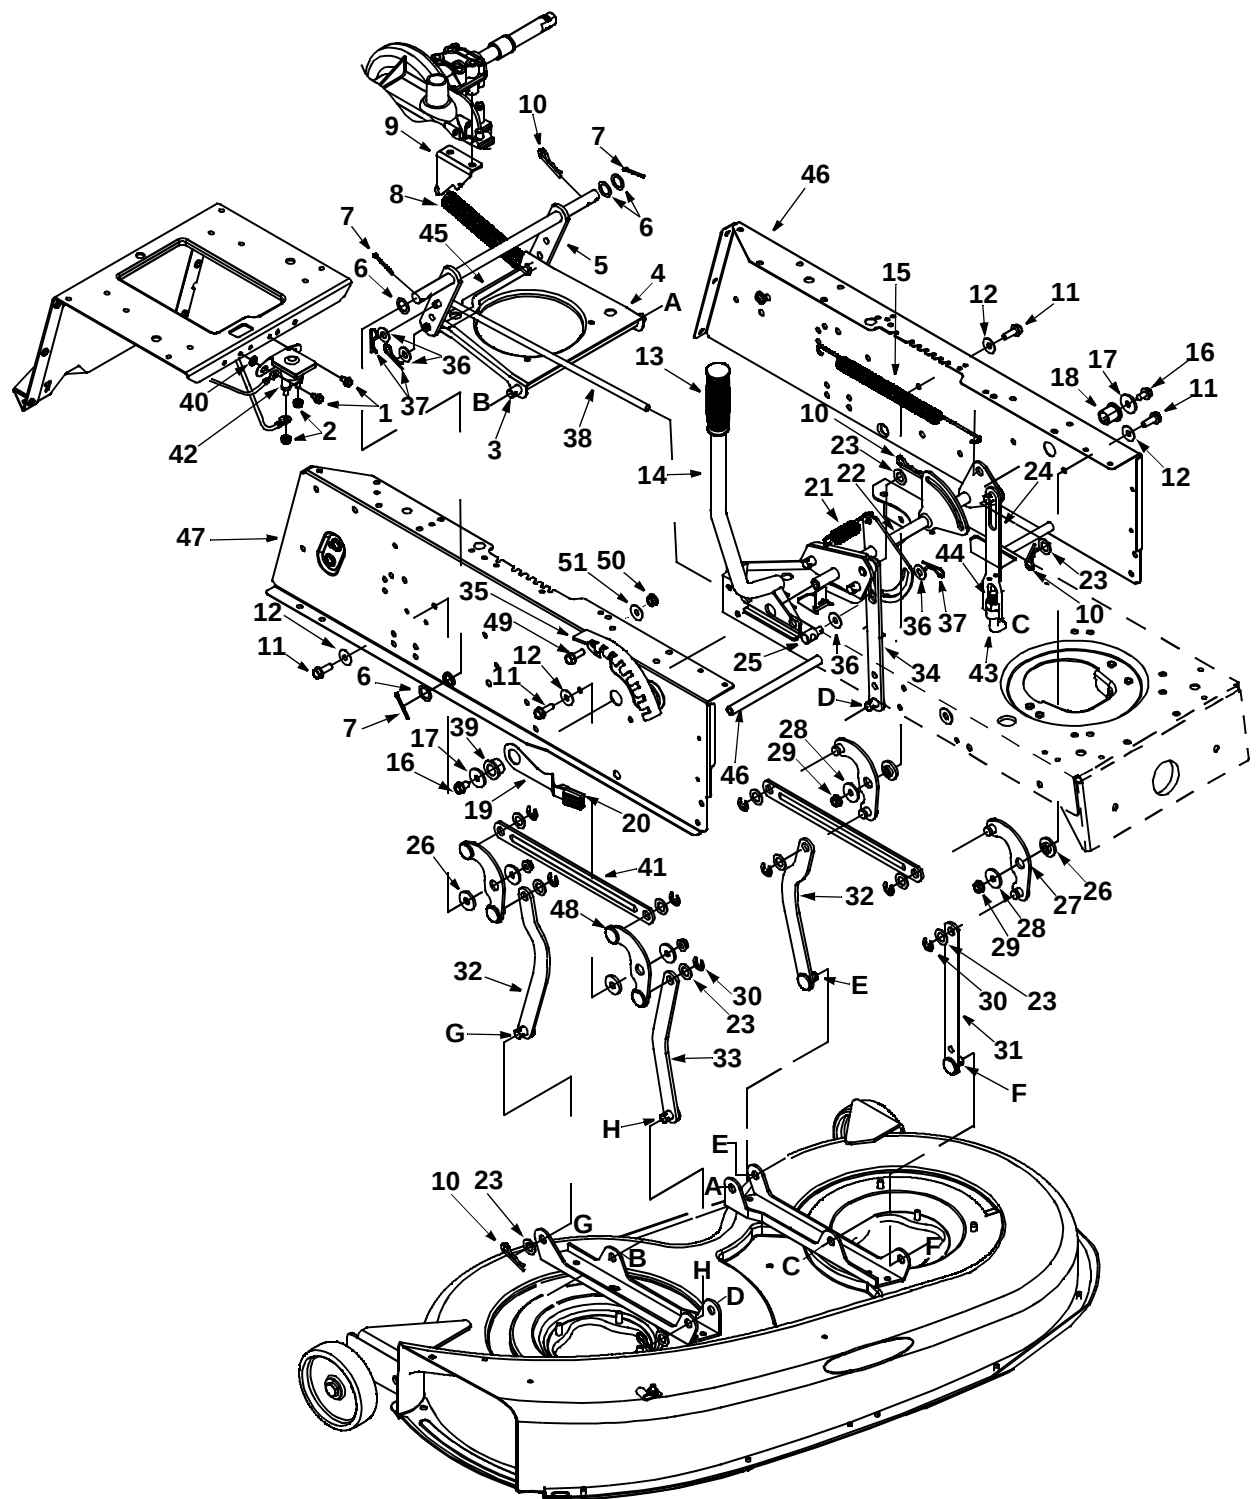


Model Series 660 Thru 679

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	710-0599	Self Tap Screw 1/4-20 x .50" Lg.	27.	683-0029A	Pivot Link Ass'y -L.H.
2.	712-0271	Sems Hex Nut 1/4-20	28.	736-0231	FI-Wash. .344 I.D. x .125 O.D.
3.	738-0670A	Shaft 1/2" Dia. x 10.50" Lg.	29.	712-3004A	Flange L-Nut 5/16-18 Gr. 5
4.	17636D	Stablizer Bracket	30.	716-0104	"E" Ring
5.	17624	Stablizer Shaft Assembly	31.	14804A	Deck Hanger Link Ass'y
6.	736-0256	FI-Wash. .635 I.D. x .930 I.D.	32.	17710	Deck Hanger Link Ass'y
7.	714-0470	Cotter Pin 1/8" Dia.	33.	14800A	Deck Hanger Link Ass'y
8.	732-0556	Extension Spring 7.58" Lg.	34.	14802A	Link Deck Lift Ass'y
9.	17128A	Spring Retainer Brkt.	35.	17730	Index Brkt.
10.	714-0147	Cotter Pin	36.	736-0267	FI-Wash.
11.	710-1238	TT-Tap Scr. 5/16-18 x .75" Lg.	37.	714-0145	Hairpin Clip
12.	736-0425	Bell-Wash. .325" I.D.	38.	747-0598	Deck Belt Disengagement Rod
13.	720-0233	Grip (Lift Handle)	39.	748-0176	Flange Bearing .83 I.D. x .62 O.D.
14.	17675A	Deck Lift Handle Ass'y	40.	736-0222	L-Wash.
15.	732-0638	Extension Spring	41.	783-0103	Connecting Rod
16.	710-0604A	TT-Tap Scr. 5/16-18 x .625" Lg.	42.	725-1426	Solenoid
17.	736-0231	FI-Wash. .344 I.D. x 1.25 O.D.	42.	711-0841	Lift Link Adjuster
18.	741-0487A	Flange Bearing .632 I.D.	43.	712-3066	Hex Nut 1/2-20 Thd. (Gr. 5)
19.	683-0003	Hgt. Adj. Stop Lever Ass'y (Incl. #20)	44.	738-0669	Shaft 3/8" Dia. x 9.34" Lg.
20.	08540	Knob†	45.	738-0526	Running Board Rod
21.	732-0637	Extension Spring	46.	783-0043B	Upper Frame L.H.
22.	17637A	Lift Shaft Assembly	47.	783-0042D	Upper Frame R.H.
23.	736-0160	FI-Wash. .53 I.D. x .93 O.D.	48.	683-0028A	Pivot Link Assembly- R.H.
24.	17712	Adjustable Deck Lift Link	49.	710-3008	Hex Bolt 5/16-18 x .75" Lg.
25.	711-0723A	Ferrule 3/8-24 x .375 Dia.	50.	712-3010	Hex Nut 5/16-18 Thd.
26.	748-0331	Shoulder Spacer .318" Dia.	51.	736-0119	Lock Washer 5/16" I.D.

† Optional

Model Series 660 Thru 679

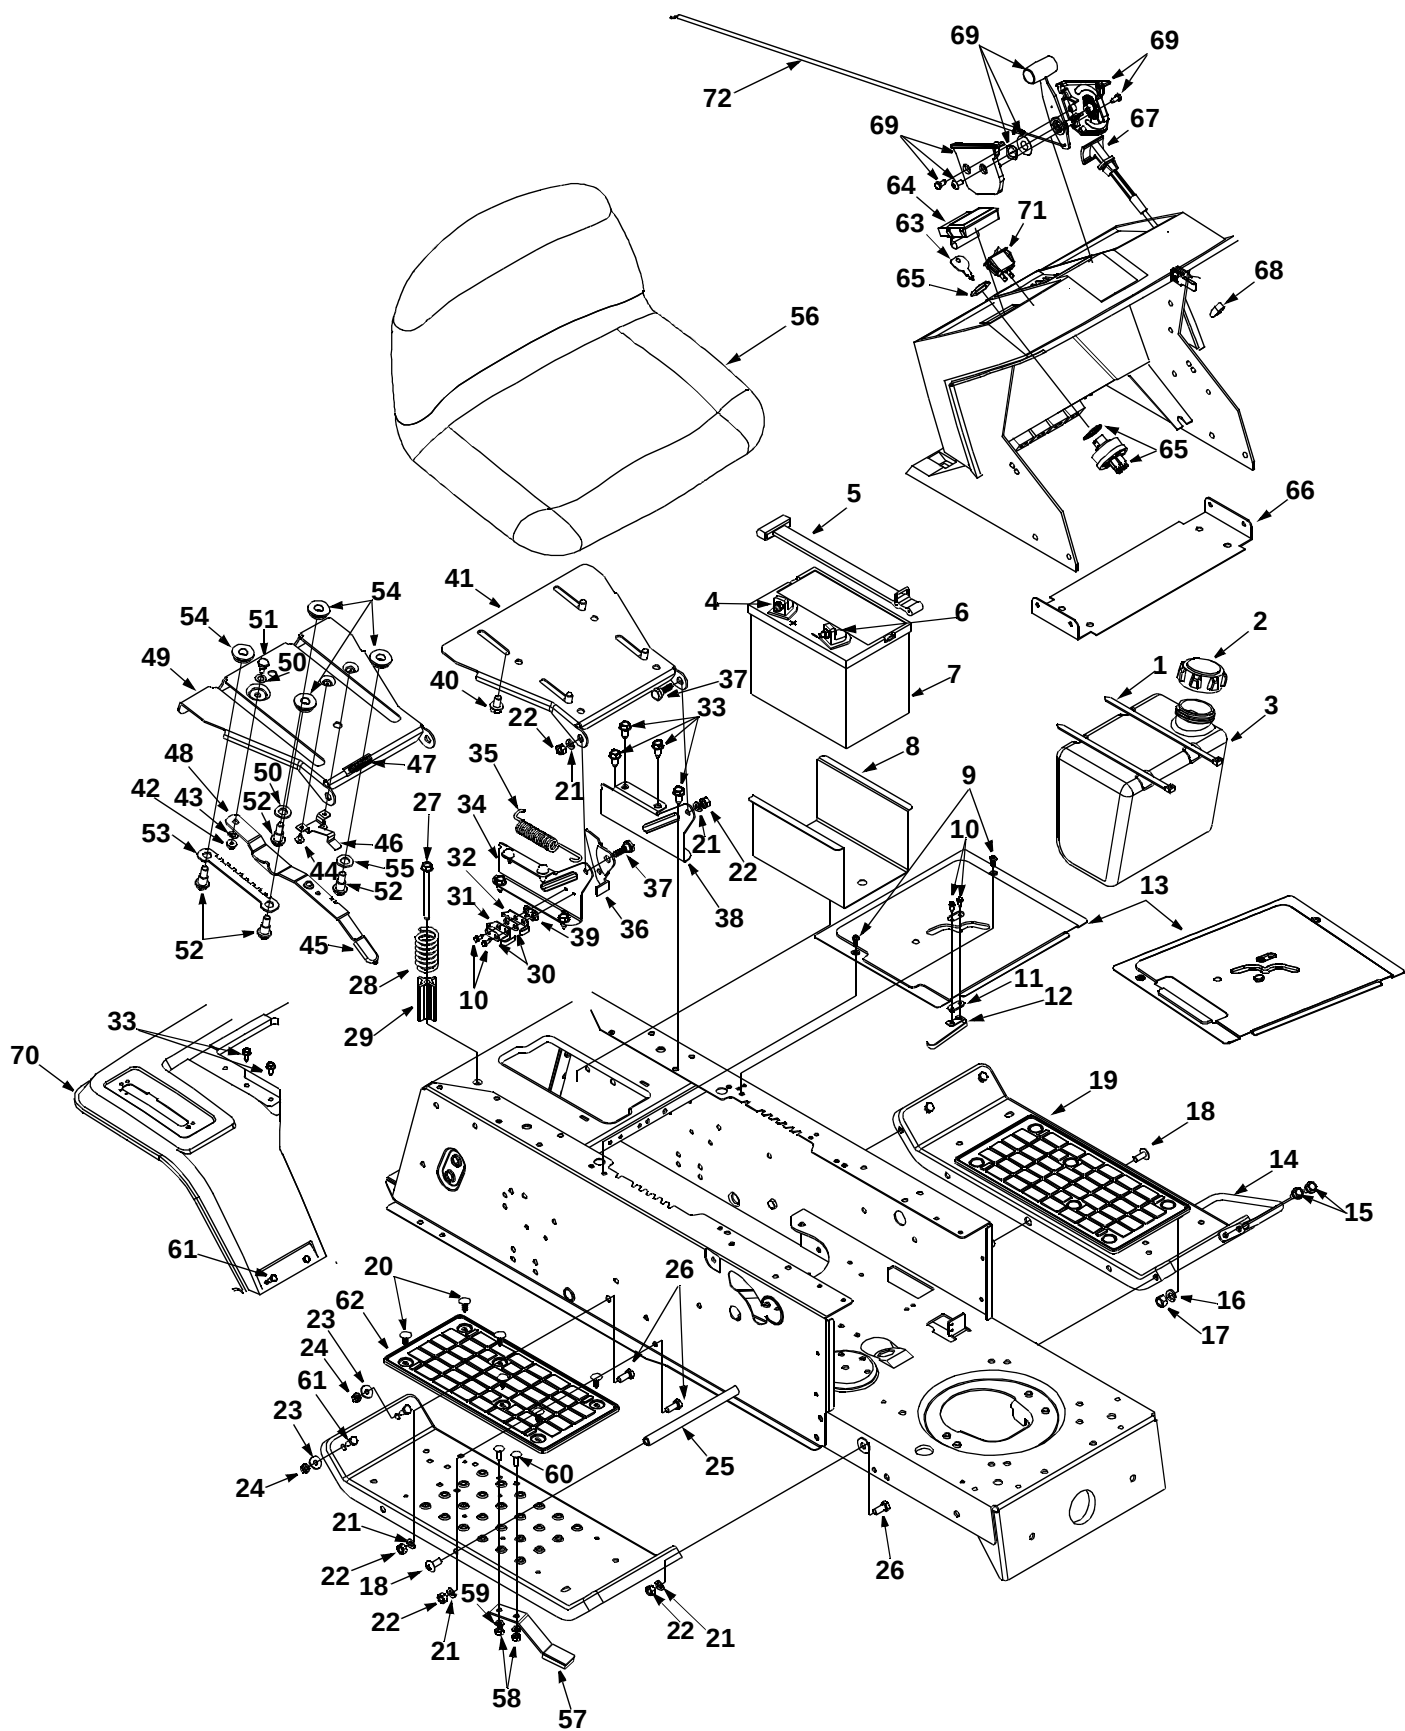


Model Series 660 Thru 679

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	726-0209	Cable Tie	41.	783-0039A	Seat Pivot Brkt.
2.	751-0603	Fuel Cap	42.	712-3027	Hex Flanged L-Nut 1/4-20 Thd.*
3.	751-0553	Fuel Tank 1.25 Gal.	43.	736-0175	Spring Wash. .265 I.D. x .562 O.D.*
	751-0555	Fuel Tank 1.50 Gal.	44.	710-1268	Hex Wash. Hd. B-Tap Scr. *
	751-0657	Fuel Tank 3 Gal.	45.	720-0309A	Seat Adj. Grip*
4.	712-0271	Sems Hex Nut 1/4-20 Thd.	46.	783-0611	Seat Adj. Stop*
5.	723-3064	Battery Strap	47.	732-0499	Compression Spring*
6.	710-3015	Hex Hd. Cap Screw 1/4-20 Gr. 5	48.	783-0609	Seat Adj. Lever*
7.	725-1707D	Battery	49.	783-0607A	Pivot Seat Brkt.*
8.	783-0345	Battery Tray	50.	736-0204	FI-Wash. .344 I.D. x .62 O.D.*
9.	710-0351	Truss Mach. B-Tap Scr. #10 x .5" Lg.	51.	738-0137A	Shoulder Bolt .34" x 1/4-20 Thd.*
10.	710-0227	Hex AB-Tap Scr. #8 x .50" Lg.	52.	738-1007	Shoulder Scr. 3/8-16*
11.	726-0320	Insulatop Nut Plate	53.	783-0753	Seat Adj. Selector*
12.	725-1643	Reverse Safety Switch	54.	731-1989	Seat Adj. Spacer*
13.	17286B	Shift Cover	55.	736-0192	FI-Wash. .344 I.D. x .62 O.D.
	17954B	Shift Cover w/Cutout	56.	757-0363A	Low Back Black Seat
14.	747-1216	Stop Rod		757-0360A	Med. Back Black Seat
15.	710-0604A	TT-Tap Scr. 5/16-18 x .625" Lg.		757-0348A	High Back Black Seat
16.	736-0169	L-Wash. 3/8		757-0350	High Back Black w/Drain Holes
17.	712-3017	Hex Nut 3/8-16 Thd. Gr. 8	57.	761-0168B	Blade Brake Assembly
18.	710-0323	Truss Mach. Scr. 5/16-18 x .75"	58.	712-3006	Hex Nut 1/4-20 Thd.
19.	17770E	Running Board (R.H. & L.H.)	59.	736-0329	L-Wash. 1/4" I.D.
20.	726-3046	Ratchet Clip	60.	710-0703	Carriage Bolt 1/4-20 x .62" Lg.
21.	736-0119	L-Wash. 5/16" I.D.	61.	710-0751	Hex Hd. Cap Scr. 1/4-20 x .62" Lg.
22.	712-3010	Hex Nut 5/16-18 Thd.	62.	735-0689A	Rubber Foot Pad
23.	736-0270	Bell-Wash. .265" I.D. x .75" O.D.	-	723-0422A	Abrasive Foot Pad (Not Shown)
24.	712-3006	Hex Nut 1/4-20	63.	725-0201	Ignition Key
25.	738-0526	Running Board Rod	64.	725-0925	Ammeter*
26.	710-3008	Hex Bolt 5/16-18 x .75" Lg.	65.	725-0267	Ignition Switch
27.	710-1208	Hex Tap Scr. 5/16-18 x 3.25" Lg.	66.	17632B	Gas Tank Support Brkt.
28.	732-0735	Compression Spring	67.	746-0720	Choke Control 20"
29.	748-0347A	Spring Spacer		746-0616A	Choke Control 23"
30.	726-0279	Insulator Plate		746-3021	Choke Control 29"
31.	725-1303	Outer Spring Switch Spring		746-0614A	Choke Control 38"
32.	725-1439	Inner Spring Switch Spring		746-0613A	Choke Control 46"
33.	710-0726	Hex Wash. AB Scr. 5/16-12 x .75"	68.	17782	Choke Retainer
34.	17950A	R. H. Pivot Seat Support Brkt.	69.	831-0823A	Throttle Box Ass'y
35.	732-0581B	Extension Spring	70.	17870A	Fender
36.	17239A	Seat Lift Brkt.		17871B	Fender w/Cutout
37.	738-0296	Shoulder Bolt .437" Dia. x .268"	71.	725-0634	Light Switch*
38.	17951A	L.H. Pivot Seat Support Brkt.	72.	746-0776	Throttle Control Wire 18.5"
39.	726-0278	Insulator Boss Plate		746-0638	Throttle Control Wire 22"
40.	710-0870	Hex Tap Scr. 3/8-16 x .62" Lg.		746-0636	Throttle Control Wire 28"
				746-0634	Throttle Control Wire 35"

* Optional

38" Deck "F"

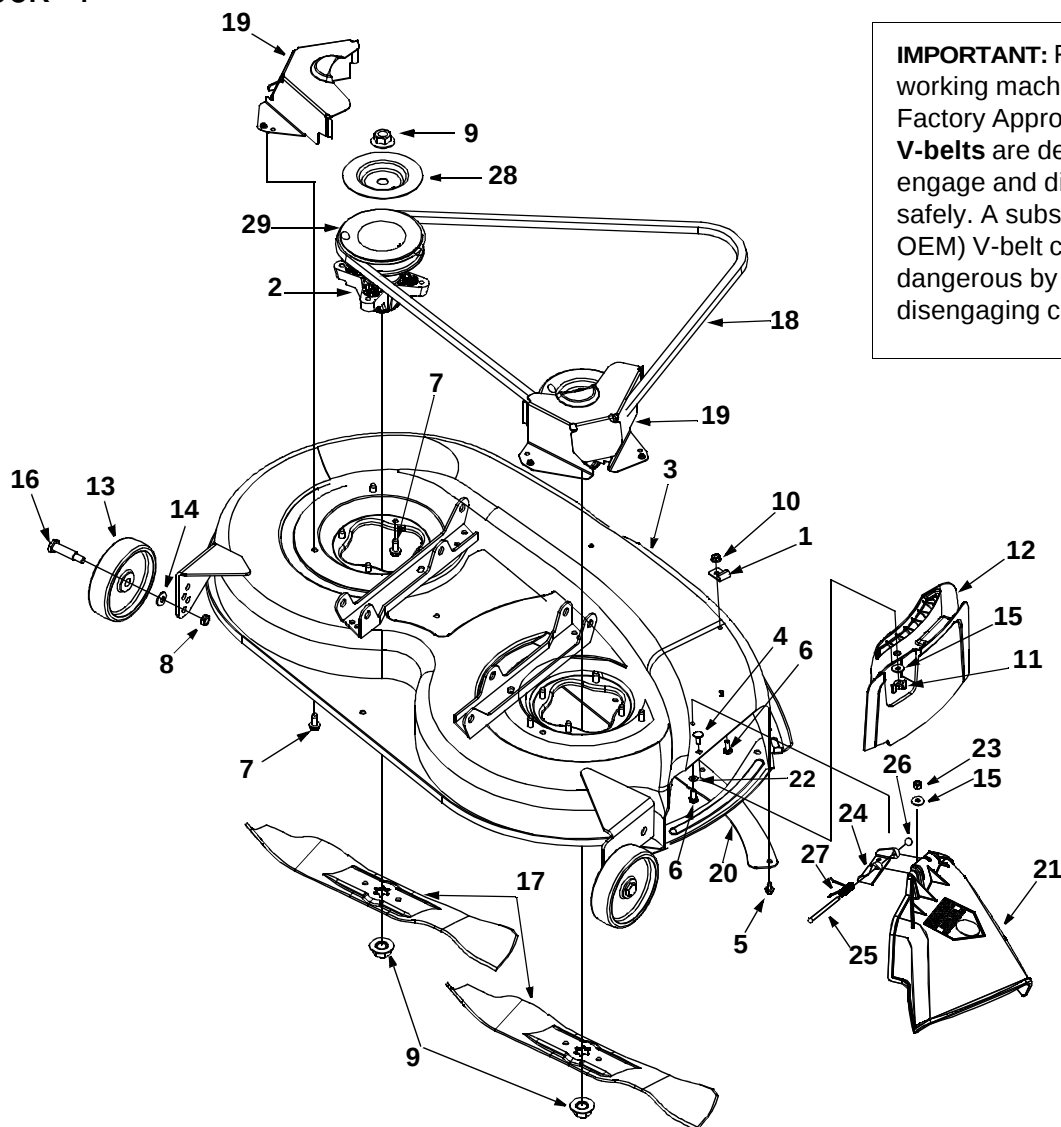

IMPORTANT: For a proper working machine, use Factory Approved Parts. V-belts are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	16606	Retainer Hook Brkt.	16.	738-0373	Shoulder Screw
2.	683-0138A	Blade Spdl Ass'y	17.	742-0610	3 in 1 blade
3.	683-0129A	Deck Assembly**	-	742-0654	2 in 1 blade (For bagging and side dischrg)
	753-0694	38" Deck Ass'y Comp. (For Service)**	18.	754-0329A	V Belt
4.	710-0134	Carriage Screw 1/4-20 Thd. Gr.2	19.	783-0343A	Belt Guard
5.	710-0599	Hex Wash. Hd. TT-Tap Scr. 1/4-20 Thd.	20.	783-1297	Deck Skirt
6.	710-0751	Hex Bolt 1/4-20 x .62" Lg.	21.	731-1032B	Chute Ass'y (Incl. Ref. 24,25,26, 27)
7.	710-1260A	Hex Wash. TT-Tap Scr. 5/16-18 x .75"	-	731-1031B	Chute Deflector
8.	712-0181	Hex Top L-Nut 3/8-16 Thd.	22.	726-0233	Push Nut
9.	712-0417A	Hex Flange Nut 5/8-16 Thd. ‡	23.	712-3006	Hex Nut 1/4-20 Gr. 5
10.	712-3027	Hex Flange Nut 1/4-20 Thd.	24.	703-1693A	Hinge Mounting Brkt.
11.	712-3087	Wing Nut 1/4-20 †	25.	711-0792	Hinge Pin
12.	731-2363	Mulch Plug †	26.	726-0106	Speed Nut Cap
13.	734-0973	Deck Wheel	27.	732-0602A	Torsion Spring
14.	736-0105	Bell-Wash. .40" I.D. x .88" O.D.	28.	783-0342	Brake Disc
15.	736-0270	Bell-Wash. 1/4" I.D. †	29.	756-1187	5" Dia. Pulley ‡

† Optional

‡ Deck pulley and blade nuts must be torqued to 100 ft. lbs. if removed or replaced.

** Must be ordered with 4 digit color code.

42" Deck "G"

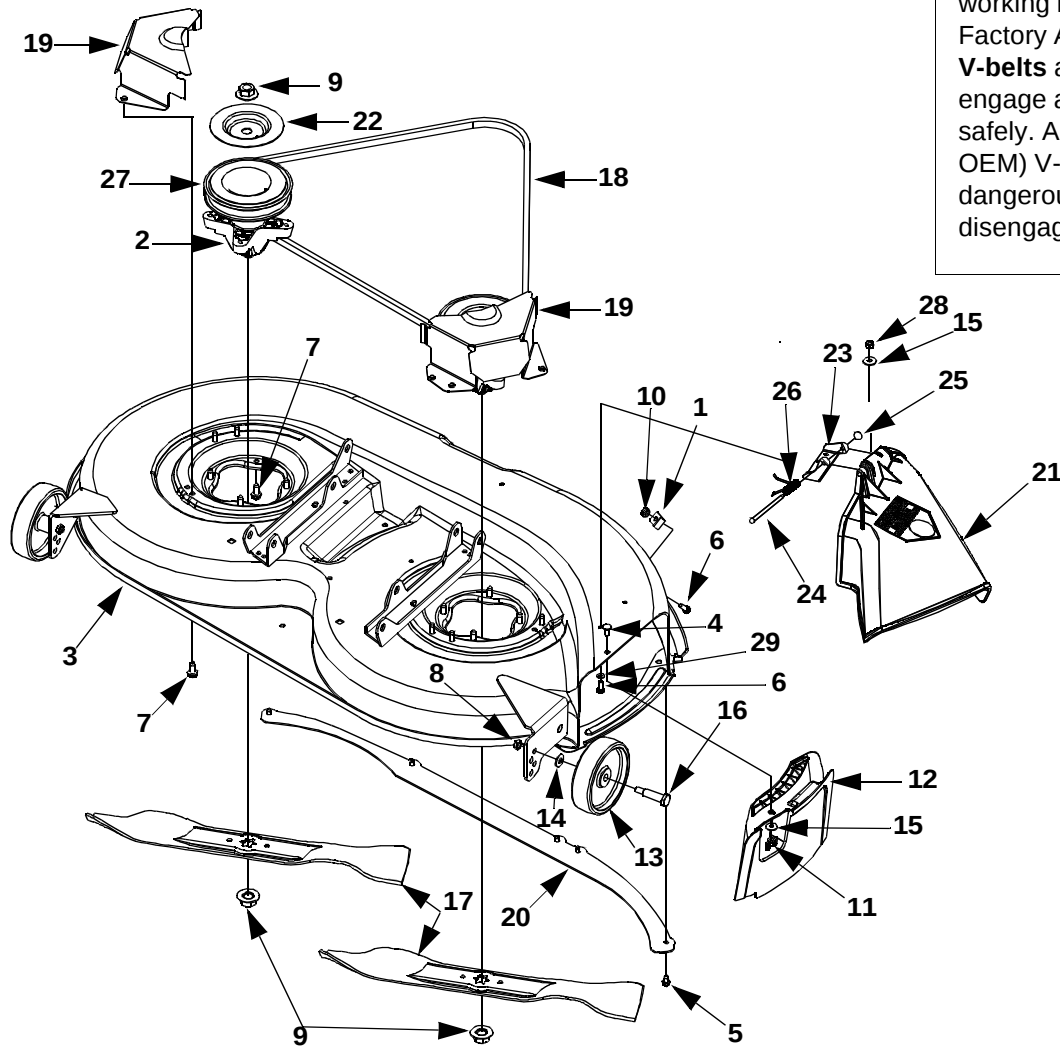


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	16606	Retainer Hook Brkt.	16.	738-0373	Shoulder Screw
2.	618-0142A	Blade Spindle Ass'y	17.	742-0616	3 in 1 blade
3.	683-0141B	42" Deck Assembly**	-	742-0656	2 in 1 blade (For bagging and side dischrg)
-	753-0698	42" Deck Ass'y Comp. (For Service)**	18.	754-0371A	V Belt
4.	710-0134	Carriage Bolt 1/4-20 Lg.	19.	783-0149B	Belt Guard
5.	710-0599	Hex Wash. Hd. TT-Tap Screw 1/4-20 Thd.	20.	783-1146A	Deck Skirt
6.	710-0751	Hex Bolt 1/4-20 x .62"	21.	731-1032B	Chute Ass'y (Incl. Ref. 23,24,25,26)
7.	710-1260A	Hex Wash. TT-Tap Scr. 5/16-18 x .75"	-	731-1031B	Chute Deflector
8.	712-0181	Jam Nut 3/8-16	22.	783-0342	Brake Disc.
9.	712-0417A	Hex Flange Nut 5/8-18 Thd. ‡	23.	703-1693A	Hinge Mounting Brkt.
10.	712-3027	Hex Flange Nut 1/4-20 Thd.	24.	711-0792	Hinge Pin
11.	712-3087	Wing Nut 1/4-20 †	25.	726-0106	Speed Nut Cap
12.	731-2363	Mulch Plug †	26.	732-0602A	Torsion Spring
13.	734-0973	Deck Wheel-5"	27.	756-1188	5.75" Dia. Pulley ‡
14.	736-0105	Bell-Wash. .40" I.D. x .88" O.D.	28.	712-3006	Hex Nut 1/4-20 Gr. 5
15.	736-0270	Bell-Wash. 1/4 I.D. †	29.	726-0233	Push Nut

† Optional

‡ Deck pulley and blade nuts must be torqued to 100 ft. lbs. if removed or replaced.

** Must be ordered with 4 digit color code.

46" Deck "H"

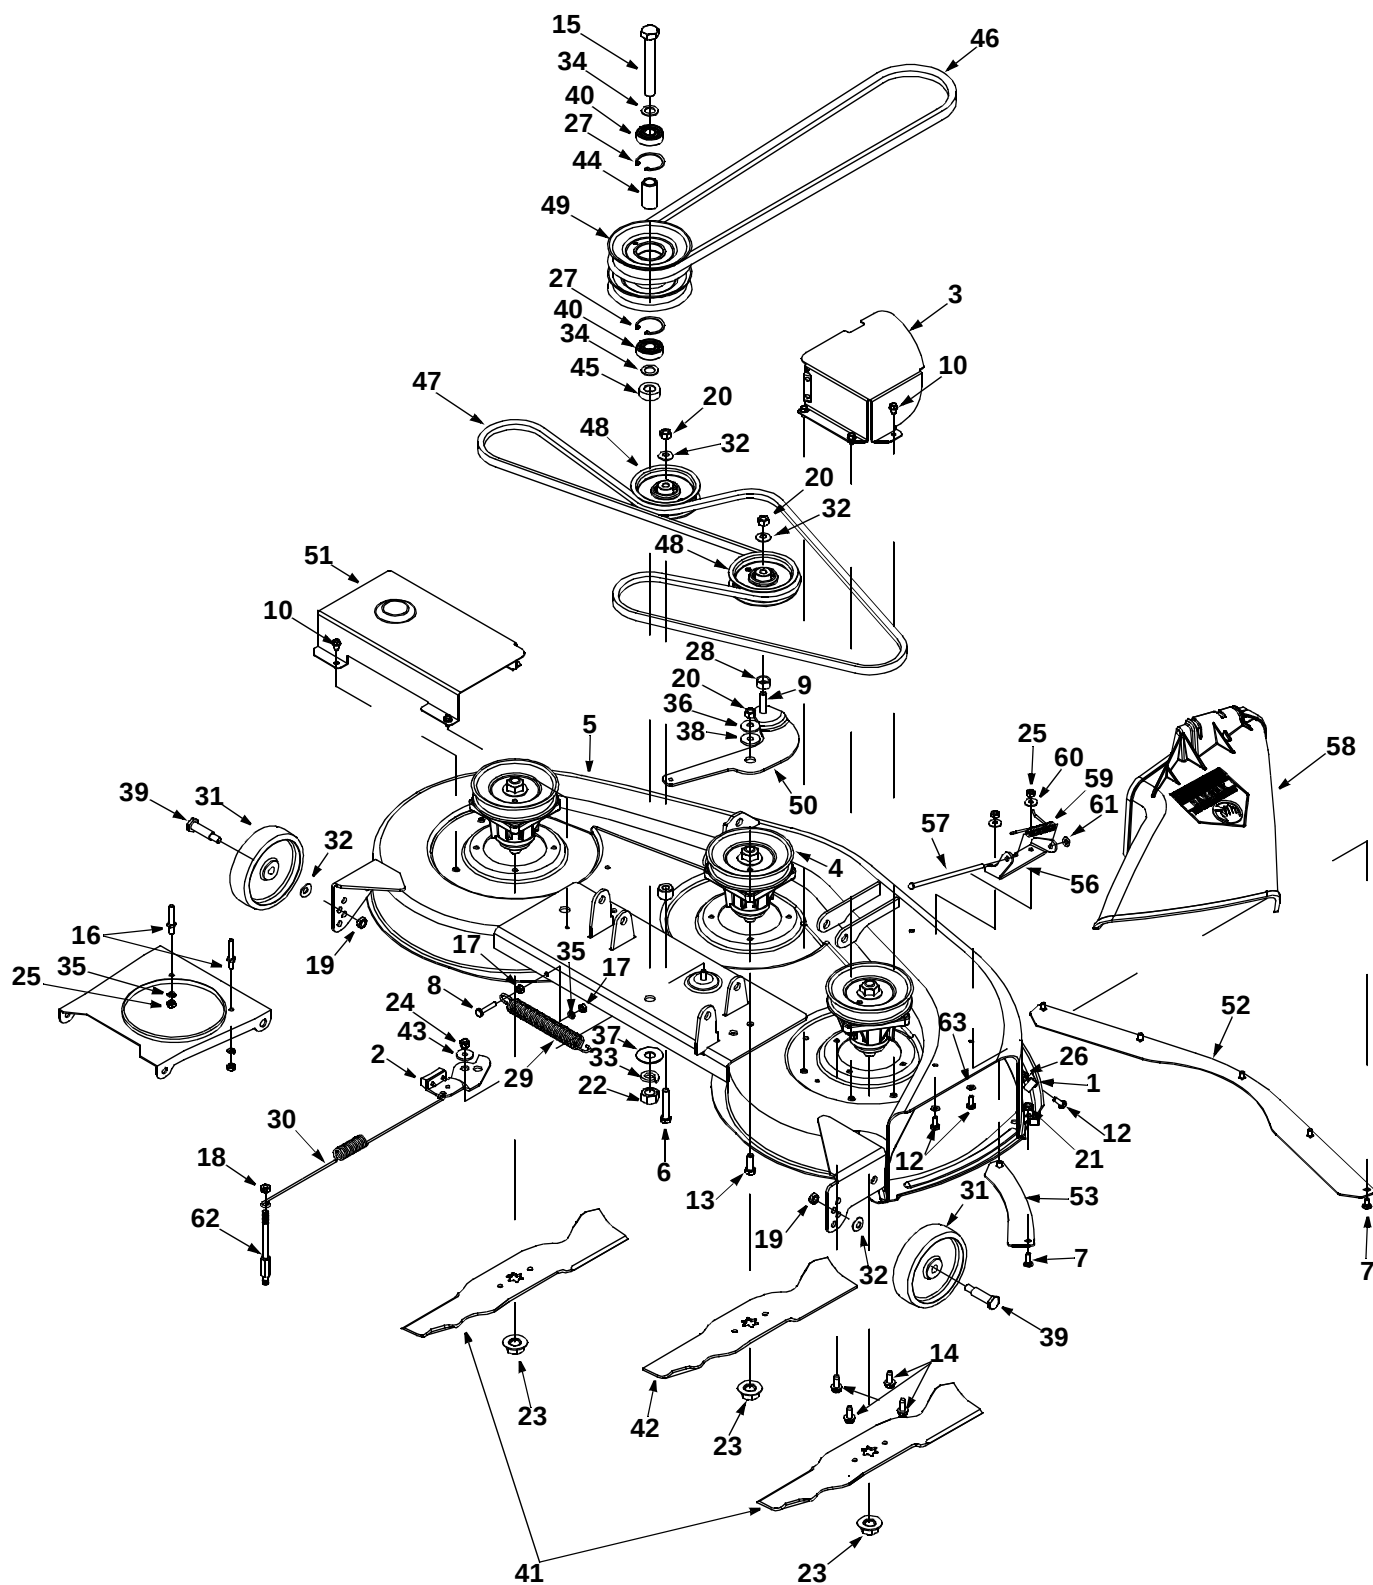


46" Deck "H"

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	16606	Retainer Hook Brkt.	32.	736-0105	Bell-Wash 3/8" x .87" x .064"
2.	17116	Deck Deck Brake Brkt Ass'y	33.	736-0158	L-Wash. 5/8" I.D.
3.	17258C	Belt Cover	34.	736-0290	Fl-Wash. .635" I.D. x 1" O.D.
4.	618-0240A	Spindle Ass'y	35.	736-0329	L-Wash. 1/4" I.D.
5.	983-0120A	46" Deck Ass'y**	36.	736-0331	Bell-Wash. 3/8" x 1.125" x .062"
	913-06921	46" Deck Ass'y Comp. (For Svc.)**	37.	736-3088	Fl-Wash. .635" I.D.
6.	710-0151	Hex Bolt 3/8-24 x 2" Lg.	38.	738-0347	Shoulder Spacer .625" I.D.
7.	710-0167	Carriage Bolt 1/4-20 x .5" Lg.	39.	738-0373	Shld. Bolt .498" x 1.525"
8.	710-0428	Hex Bolt 1/4-28 x 1.25" Lg.	40.	741-0524	Ball Brg. .625" I.D. x 1.574" O.D.
9.	710-0459A	Hex Bolt 3/8-24 x 2" Lg.	41.	742-0644	Blade 16.28" Lg. (L.H. & R.H.)
10.	710-0599	Hex Wash. Hd. TT-Tap Scr.	42.	742-0645	Blade 14.88" Lg. (Middle)
12.	710-0751	Hex Bolt 1/4-20 x .62" Lg.	43.	748-0234	Shoulder Spacer
13.	710-1039	Hex Bolt 3/8-24 x 1" Lg.	44.	750-0932A	Spacer .635" I.D. x .088" O.D.
14.	710-1260A	Hex Flange Bolt 5/16-24 x .75"	45.	750-0960	Spacer .635" I.D. x 1" O.D.
15.	710-3151	Hex Bolt 5/8-18 x 4.25" Lg.	46.	754-0439	V Belt
16.	711-0993	Belt Guard Pin	47.	754-0440	V Belt
17.	712-0138	Hex Nut 1/4-28 Thd.	48.	756-0627B	Idler Pulley
18.	712-0158	Hex Center L-Nut 5/16-18	49.	756-0638	Pulley Double Deck
19.	712-0181	Hex Top Jam Nut 3/8-16 Thd.	50.	783-0046	Idler Deck Bracket
20.	712-0241	Hex Nut 3/8-24 Gr. 5	51.	783-0063A	Belt Cover L.H.
21.	712-0271	Hex Sems Nut 1/4-20	52.	783-0141	46" Deck Skirt Center
22.	712-0337	Hex Nut 5/8-18 Gr.5	53.	783-0142	46" Deck Skirt R.H.
23.	712-0417A	Hex Flange L-Nut 5/8-18 Thd.	56.	703-1693A	Hinge Brkt.
24.	712-0429	Hex Ins. L-Nut 5/16-18 Thd.	57.	711-0792	Hinge Pin
25.	712-3006	Hex Nut 1/4-20 Gr.5	58.	731-1032B	Chute Ass'y Comp.
26.	712-3027	Hex Lock Nut 1/4-20			(Incl. 12, 56, 57, 59, 60, 61, 62, 63,)
27.	716-3020	Internal Snap Ring	-	731-1031B	Chute Deflector
28.	731-1490	Slide Cap	59.	732-0602A	Torsion Spring
29.	732-0594A	Ext. Spring .88" O.D. x 6.17"	60.	736-0270	Bell. Wash. .265 x .75
30.	732-0723	Ext. Spring .788" O.D. x 15.5"	61.	726-0106	Speed Nut Cap
31.	734-0973	Deck Wheel-5"	62.	738-0999	Return Spring Stud
			63.	726-0233	Push Nut


** Must be ordered with 4 digit color code.

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-BELTS** are specially designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Model Series 660 Thru 679

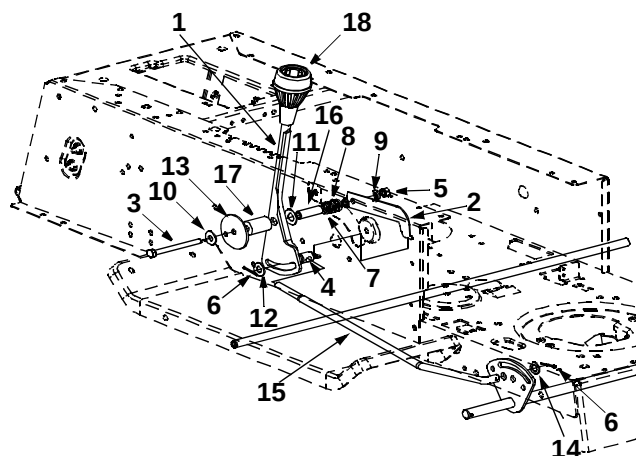


Ref. No	Part No.	Description
1.	17888A	Speed Selector Lever
2.	17956	Shift Lever Support
3.	710-3056	Hex Bolt 5/16-18 x 3.25" Lg.
4.	711-0198	Ferrule 3/8-24 Thd.
5.	712-3010	Hex Nut 5/16-18 Thd.*
6.	714-0111	Cotter Pin 3/32" Dia. x 1"
7.	726-0201	Speed Nut 5/16-18 Thd.*
8.	732-0645	Compression Spring
9.	736-0119	L-Wash. 5/16" I.D.*
10.	736-0159	Fl-Wash. .345" I.D. x .88"
11.	736-0253	Bell-Wash. .505" I.D. x 1"
12.	736-0300	Fl-Wash. .385" I.D. x .87"
13.	736-0418A	Fl-Wash. .34" I.D. x 2.25"
14.	736-3024	Fl-Wash. .469" I.D. x .75"
15.	747-0787	Speed Control Rod
16.	750-0662	Spacer 1.56" Lg.
17.	750-0913	Spacer 1.46" Lg.
18.	720-0232	Shift Knob

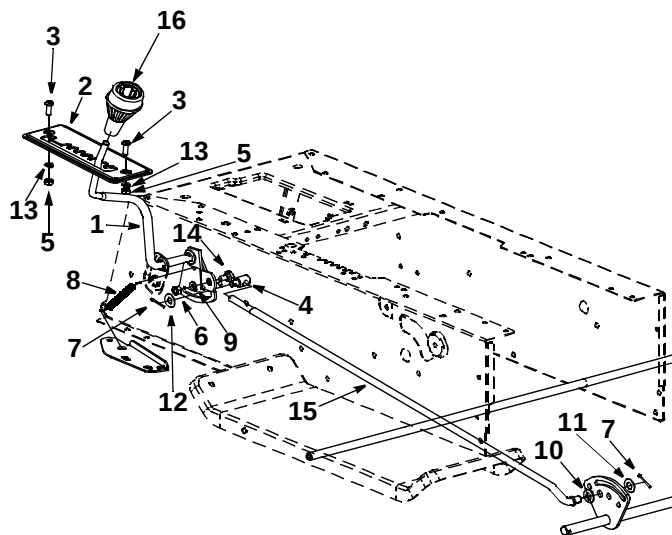

Ref. No	Part No.	Description
1.	16192A	Speed Selector Lever Ass'y
2.	16194A	7-Speed Selector Plate
3.	710-0924	Truss Mach. Scr. 1/4-20 x .75" Lg.
4.	711-1098	Ferrule 3/8-24 Thd.
5.	712-3006	Hex Nut 1/4-20 Thd. (Gr. 5)
6.	712-3010	Hex Nut 5/16-18 Thd. (Gr. 5)
7.	714-0111	Cotter Pin 3/32" Dia. x 1.0"
8.	732-0303	Spring .38" O.D. x 3.18" Lg.
9.	736-0119	L-Wash. 5/16" I.D.
10.	736-0192	Fl-Wash. .53" I.D. x .93"
11.	736-0226	Fl-Wash. .469" I.D. x .88"
12.	736-0300	Fl-Wash. .385" I.D. x 7/8"
13.	736-0329	L-Wash. 1/4" I.D.*
14.	738-0155	Shoulder Bolt
15.	747-0503A	Speed Control Rod
16.	720-0218	Shift Knob


Model Series 660 Thru 679

Over Head Valve

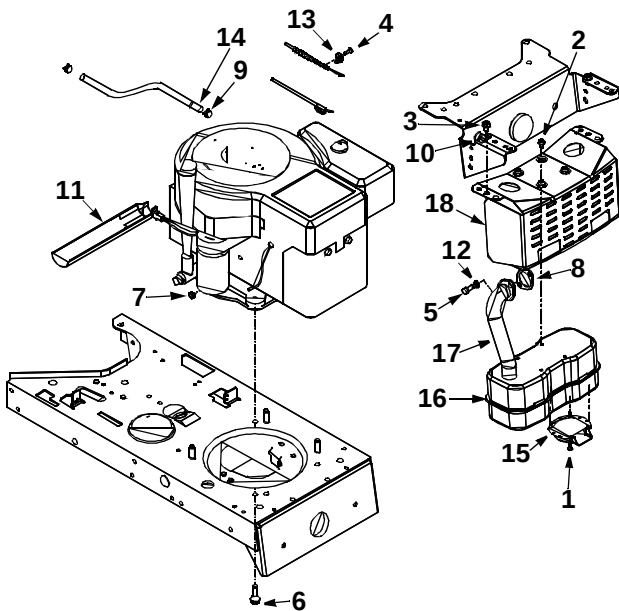

Ref. No.	Part No.	Description
1.	710-0148	Hex Tap Scr. #8-32 x .38" Lg.
2.	710-0599	Hex TT-Tap Scr. 1/4-20 x .5" Lg.
3.	710-0604A	Hex TT-Tap Scr. 5/16-18 x .62"
4.	710-1237	Hex Wash. Scr. #10-32 x .62"
5.	710-1314	Socket Head Scr. 5/16-18 x .62"
6.	710-1315	Hex TT-Tap Scr. 3.8-16 x 1.25"
7.	712-0271	Hex Sems Scr. 1/4-20
8.	721-0208	Gasket
9.	726-0205	Hose Clamp
10.	726-0272	Clamp
11.	731-1682A	Oil Drain Sleeve
12.	736-0119	Lock Washer 5/16 I.D.
13.	751B213146	Casing Clamp
14.	751-0535-12	Fuel Line
15.	751-0564	Muffler Deflector
16.	751-0617	Muffler
17.	751-0619	Exhaust Pipe
18.	783-0615B	Muffler Brkt.


Twin Cyclinder

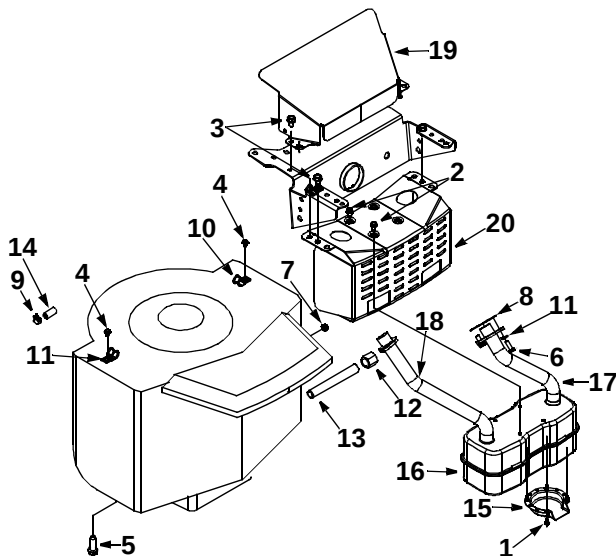

Ref. No	Part No.	Description
1.	710-0148	Hex Tap Scr. #8-32 x .38" Lg.
2.	710-0599	Hex Wash. TT-Tap Scr. 1/4-20 x 5" Lg.
3.	710-0604A	Hex Wash. TT-Tap Scr. 5/16-18 x .62" Lg.
4.	710-1268	Hex Hd. Tap Screw
5.	710-1315	Hex Hd. Tap Scr. 3.8-16 x 1.25" Lg.
6.	710-3015	Hex Bolt 1/4-20 x .75" Lg.
7.	712-0271	Hex Sems Nut 1/4-20 Thd.
8.	721-0346	Exhaust Gasket
9.	726-0205	Hose Clamp
10.	726-0272	Clamp
11.	736-0329	Lock Washer 1/4" I.D.
12.	737-0143	Oil Drain Cap
13.	737-0164	Pipe Nipple 3.8 x 18 NPT
14.	751-0535	Fuel Line Hose
15.	751-0564	Deflector: Muffler
16.	751-0616	Muffler
17.	751-0623	Exhaust Pipe - L.H.
18.	751-0624	Exhaust Pipe - R.H.
19.	783-0357B	Heat Shield
20.	783-0615B	Muffler Bracket


Model Series 660 Thru 679

Single Cylinder

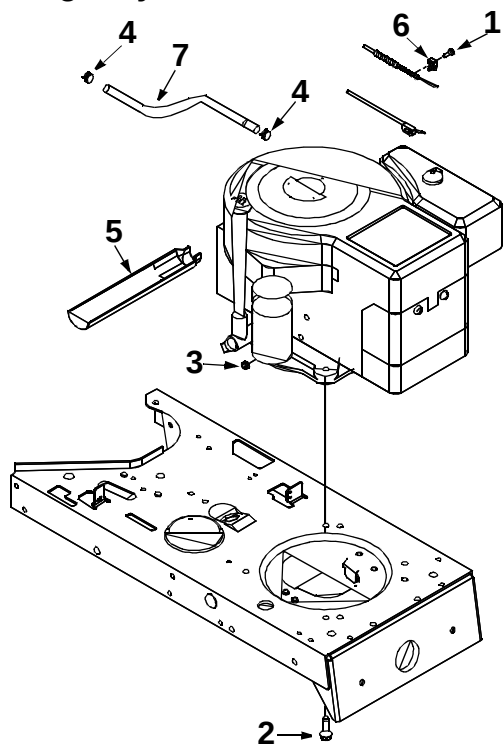

Ref. No.	Part No.	Description
1.	710-1237	Screw
2.	710-1315	Hex Wash. Hd. TT-Scr. 3.8-16 x 1.25"
3.	712-0271	Hex Sems Nut 1/4-20 Thd.
4.	726-0205	Hose Clamp
5.	731-1682A	Oil Drain Sleeve
6.	751B213146	Casing Clamp
7.	751-0535	Fuel Line
8.	751-0302	Muffler (Not shown)
9.	712-0250	Conduit L-Nut (Not shown)


Tecumseh

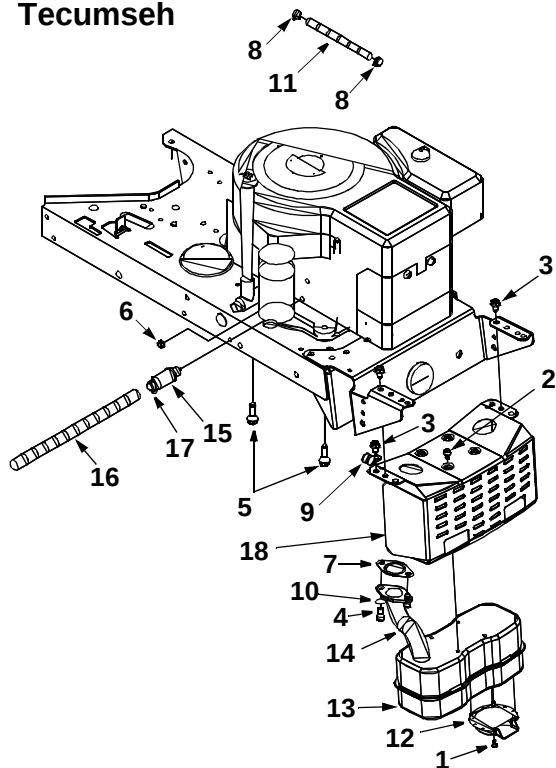

Ref. No.	Part No.	Description
1.	710-0148	Hex Bolt #8-32 x .38" Lg.
2.	710-0599	Hex Wash. Hd. TT-Scr. 1/4-20 x .5" Lg.
3.	710-0604A	Hex Wash. Hd. TT-Scr. 5.16-18 x .62"
4.	710-1314	Socket Hd. Bolt 5.16-18 x .62" Lg.
5.	710-1315	Hex Wash. Hd. TT-Scr. 3.8-16 x 1.25"
6.	712-0271	Hex Sems Nut 1/4-20 Thd.
7.	721-0348	Exhaust Gasket
8.	726-0205	Hose Clamp
9.	726-0272	Clamp
10.	736-0119	Lock Washer 5/16" I.D.
11.	751-0535-12	Fuel Line Hose
12.	751-0564	Muffler Deflector
13.	751-0617	Muffler
14.	751-0620	Exhaust Pipe (16/17 HP)
15.	751-3140	Oil Drain
16.	751-3141	Oil Drain Hose Extension
17.	751-3142	Oil Drain Cap
18.	783-0615B	Muffler Bracket


Model Series 660 Thru 679

Kohler

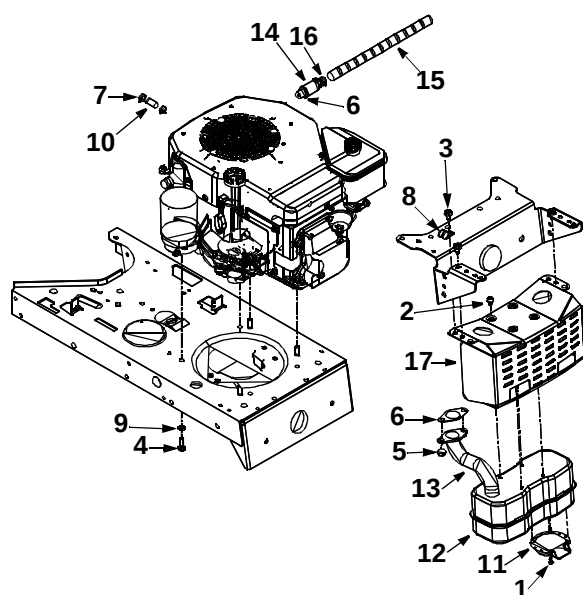

Ref. No.	Part No.	Description
1.	710-0148	Hex Tap Scr. #8-32 x .38" Lg.
2.	710-0599	Hex Wash. TT-Tap Scr. 1/4-20 x .5" Lg.
3.	710-0604A	Hex Wash. TT-Tap Scr. 5.16-18 x .62"
4.	710-3206A	Hex Bolt M8 x 1.25
5.	712-3086	Hex Flange Nut M8 Thd.
6.	721-0375	Exhaust Gasket
7.	726-0205	Hose Clamp
8.	726-0272	Clamp
9.	736-0607	External L-Wash. 5/16" I.D.
10.	751-0535-12	Fuel Line Hose
11.	751-0564	Muffler Deflector
12.	751-0617	Muffler
13.	751-0621	Exhaust Pipe
14.	751-3140	Oil Drain
15.	751-3141	Oil Drain Hose Extension
16.	751-3142	Oil Drain Cap
17.	783-0615B	Muffler Bracket


Kohler

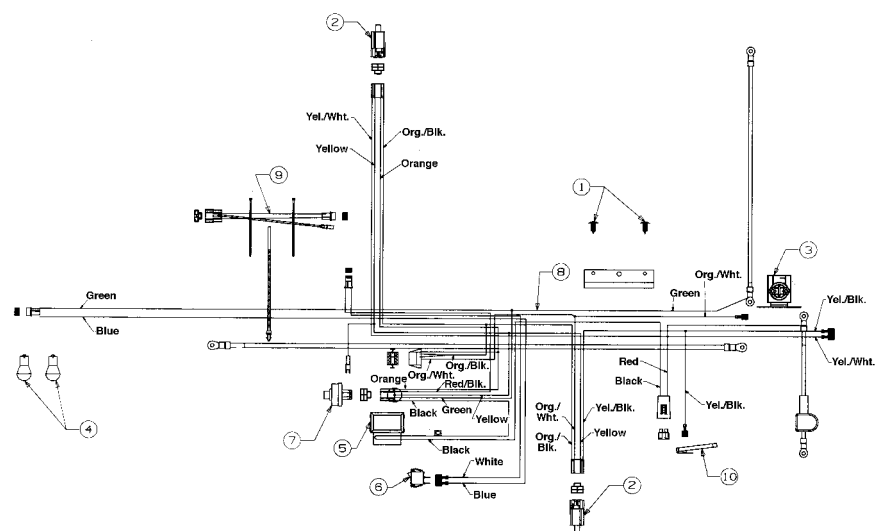

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	726-3046	Ratchet	6.	725-0634	Light Switch
2.	725-1657A	Safety Switch	7.	725-0267	Ignition Switch
3.	725-1426	Solenoid	8.	629-0302D	Wire Harness
4.	725-0963	Bulb (Headlight)	9.	629-0209	Wire Harness Adapter
5.	725-0925	Ammeter	10.	629-0132	Wire Harness (Monitor)


Model Series 660 Thru 679

Intek Twin

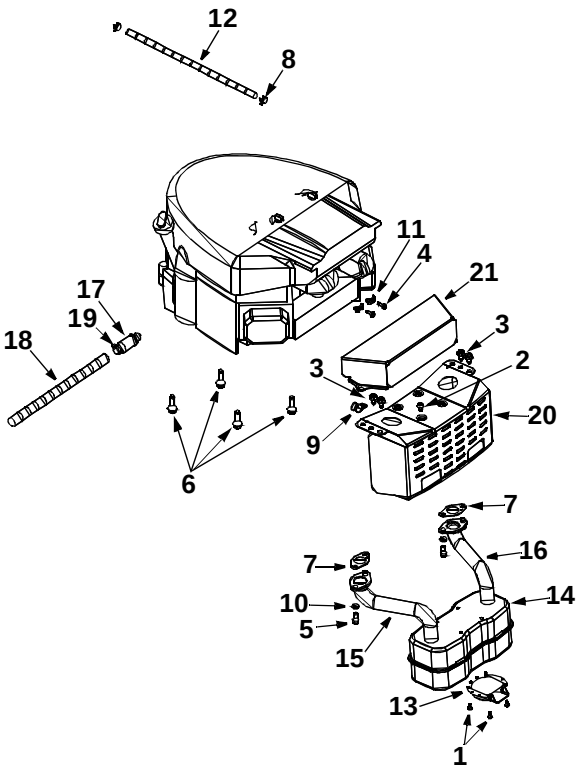

Ref. No	Part No.	Description
1.	710-0148	Hex Tap Scr. #8-32 x .38" Lg.
2.	710-0599	Hex Wash. TT-Tap Scr. 1/4-20 x 5" Lg.
3.	710-0604A	Hex Wash. TT-Tap Scr. 5.16-18 x .62"
4.	710-1237	Screw
5.	710-1314	Socket Head Scr. 5.16-18 x .62"
6.	710-1315	Hex TT-Tap Scr. 3.8-16 x 1.25"
7.	721-0460	Exhaust Gasket
8.	726-0205	Hose Clamp
9.	726-0272	Clamp
10.	736-0119	Lock Washer 5/16 I.D.
11.	751B2211535	Casing Clamp
12.	751-0535	Fuel Line Hose
13.	751-0564	Muffler Deflector
14.	751-0616	Muffler
15.	751-0560	Exhaust Pipe-R.H.
16.	751-0651	Exhaust Pipe-L.H.
17.	751-3140	Oil Drain
18.	751-3141	Oil Drain Hose Extension
19.	751-3142	Oil Drain Cap
20.	783-0615B	Muffler Bracket
21.	783-0625C	Heat Shield


Intek Twin

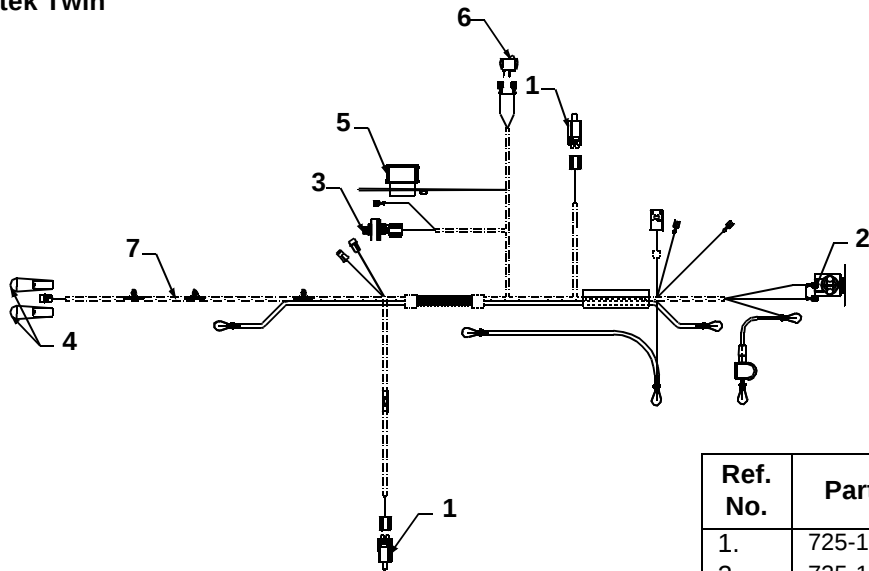

Ref. No.	Part No.	Description
1.	725-1657A	Safety Switch
2.	725-1426	Solenoid
3.	725-1396	Ignition Switch
4.	725-0963	Bulb (Headlight)
5.	725-0925	Ammeter
6.	725-0634	Light Switch
7.	629-0305D	Wire Harness w/Lt./Amp./Sw.
	629-0306C	Wire Harness w/Lt./Amp./Mon.


Model Series 660 Thru 679

Single Cylinder Briggs & Stratton

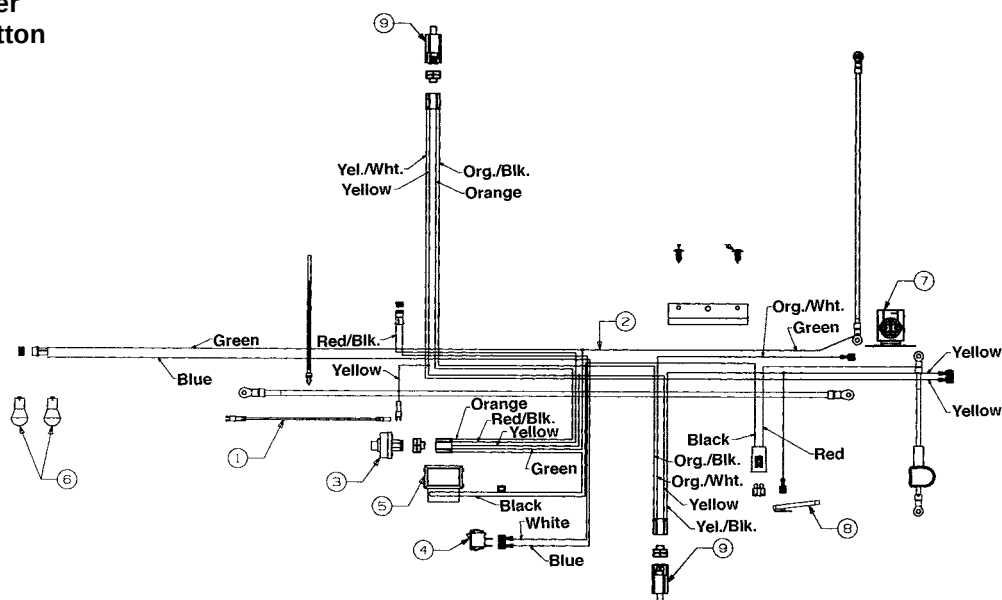

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	629-0207	Harness Adapter (Mag.)	5.	725-0925	Ammeter (Optional)
2.	629-0302D	Wire Harness w/Lt./Amp./Sw.	6.	725-0963	Bulb (Headlight)
	629-0301D	Wire Harness w/o Lt./Amp./Sw.	7.	725-1426	Solenoid
3.	725-0267	Ignition Switch	8.	725-1643	Safety Switch (Reverse)
4.	725-0634	Light Switch (Optional)	9.	725-1657A	Safety Switch


Over Head Valve

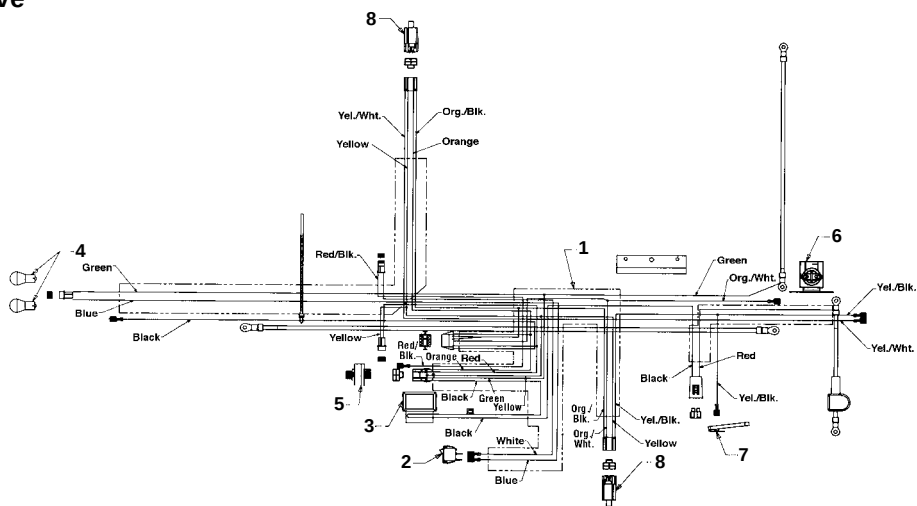

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	629-0305D	Wire Harness w/Lt./Amp./Sw.	5.	725-1396	Ignition Switch
	629-0304D	Wire Harness w/o Lt./Amp. Sw.	6.	725-1426	Solenoid
2.	725-0634	Light Switch (Optional)	7.	725-1643	Safety Switch (Reverse)
3.	725-0925	Ammeter (Optional)	8.	725-1657A	Safety Switch
4.	725-0963	Bulb (Optional)			


Model Series 660 Thru 679

Twin Cylinder Briggs & Stratton

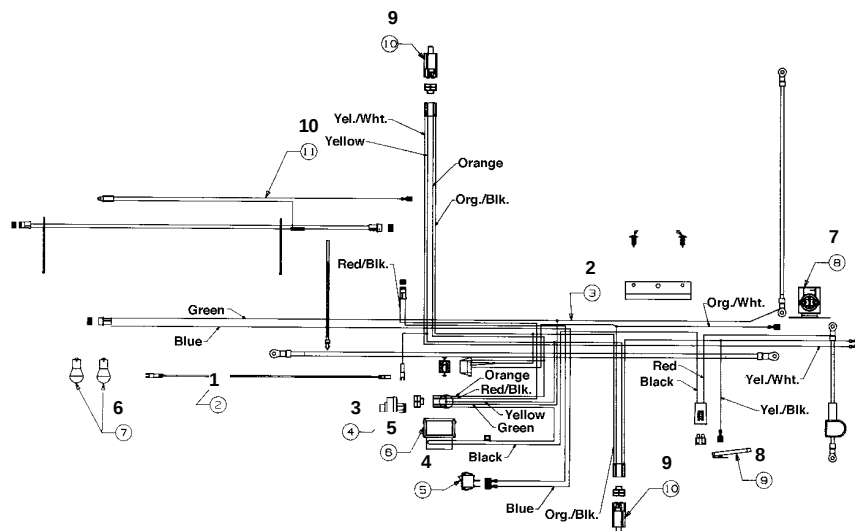

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	629-0208	Harness Adapter	6.	725-0963	Bulb
2.	629-0302D	Wire Harness w/Lt./Amp./Sw.	7.	725-1426	Solenoid
	629-0301D	Wire Harness w/o Lt./Amp./Sw.	8.	725-1643	Safety Switch (Reverse)
3.	725-0267	Ignition Switch	9.	725-1657A	Safety Switch
4.	725-0634	Light Switch	10.	629-0125	Harness Adapter (Alt.)
5.	725-0925	Ammeter			

Tecumseh

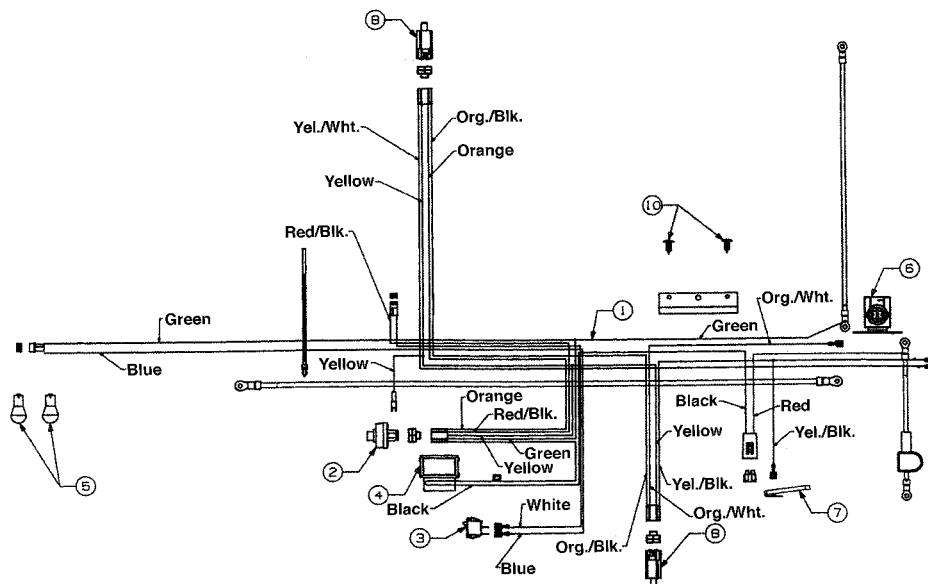

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	629-0302D	Wire Harness w/Lt./Amp./Sw.	5.	725-0963	Bulb (Headlight)
	629-0301D	Wire Harness w/o Lt./Amp./Sw.	6.	725-1426	Solenoid
2.	725-0267	Ignition Switch	7.	725-1643	Safety Switch (Reverse)
3.	725-0634	Light Switch (Optional)	8.	725-1657A	Safety Switch
4.	725-0925	Ammeter (Optional)			