




Operator's Manual

Pedal Drive Garden Tractor
Models V809H
Y809P

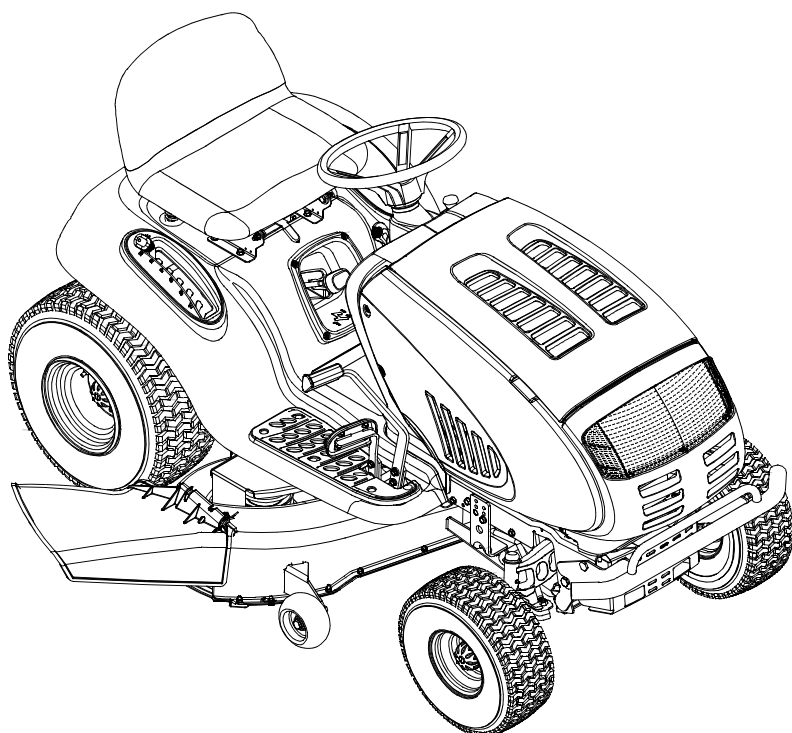

IMPORTANT: READ SAFETY RULES AND INSTRUCTIONS CAREFULLY

Warning: This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator. In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester for the muffler is available through your nearest engine authorized service dealer or contact the service department, P.O. Box 368022 Cleveland, Ohio 44136-9722.


MTD PRODUCTS INC. P.O. BOX 368022 CLEVELAND, OHIO 44136-9722

TROY-BILT® is a registered trademark owned by Garden Way Incorporated of Troy, New York.

PRINTED IN U.S.A.

FORM NO. 770-10189C
(3/2001)

SECTION 12: MODELS V809H & Y809P PARTS LIST

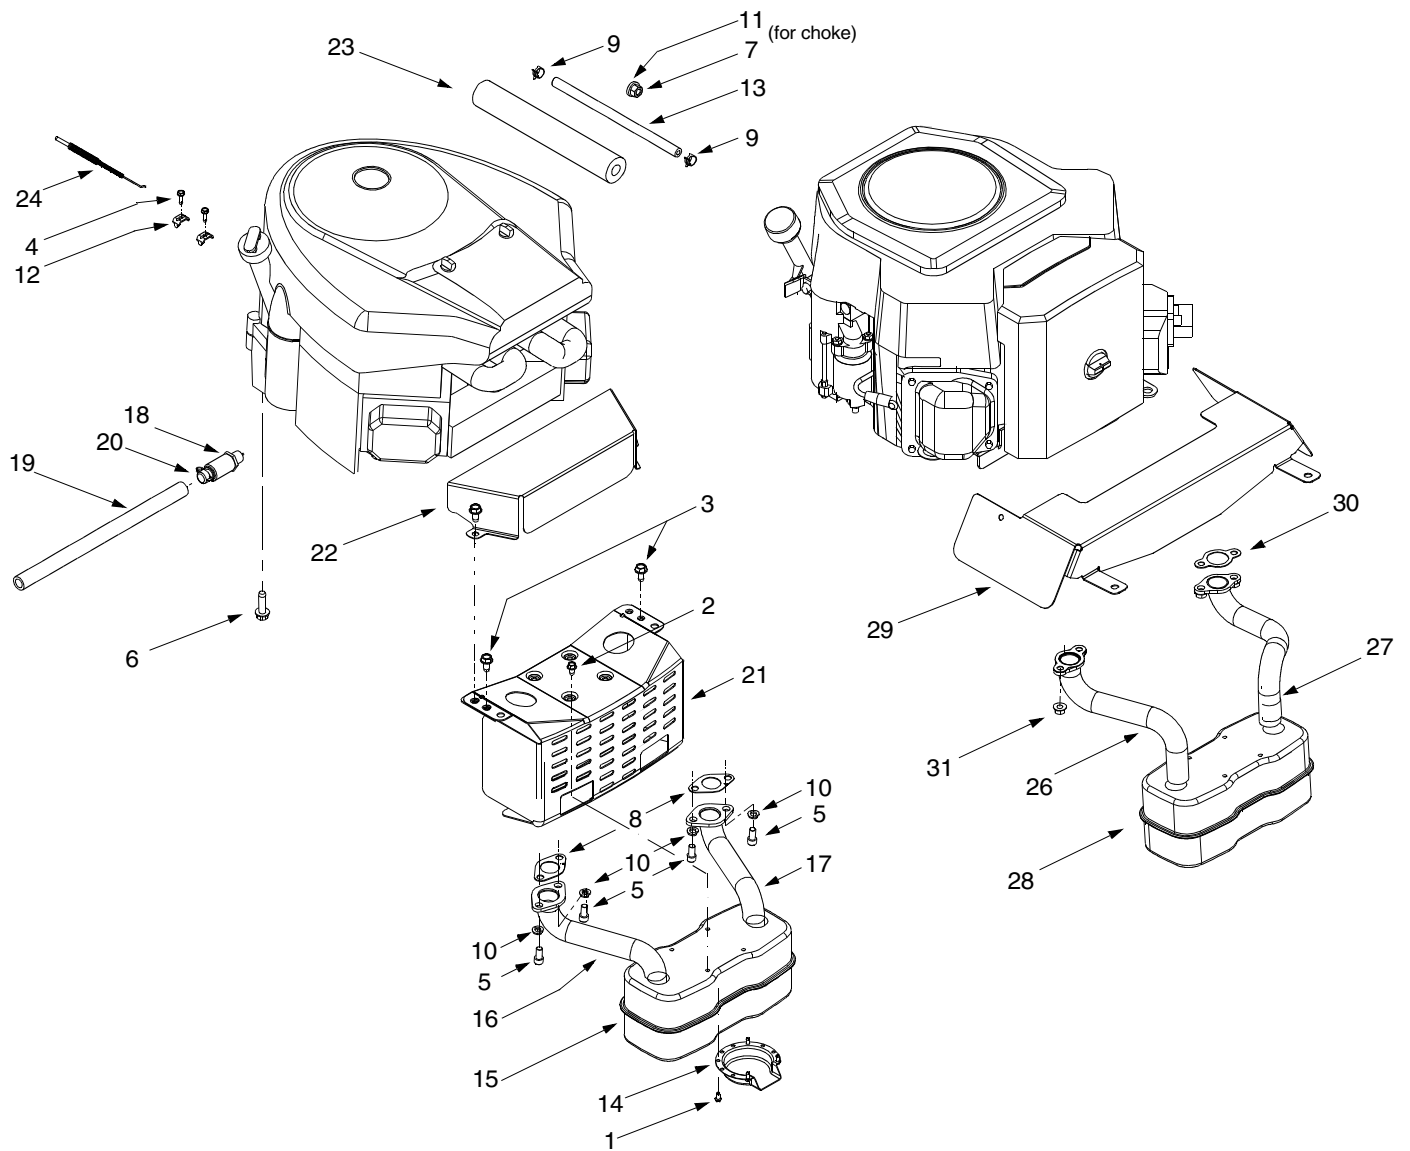


Models V809H & Y809P

REF. NO.	PART NO.	DESCRIPTION
1	710-0227	Self-tapping Screw, #8-18 x .5
2	710-0599	Self-tapping Screw, 1/4-20 x .5
3	710-0604A	Self-tapping Screw, 5/16-18 x .625
4	710-1237	Screw, #10-32 x .625 (Model V809H)
5	710-1314	Socket Cap Screw, 5/16-18 x .625
6	710-1315	Self-tapping Screw, 3/8-16 x 1.25
7	712-3017	Hex Nut, 3/8-16
8	721-0460	Exhaust Gasket (Model V809H)
9	726-0205	Hose Clamp
10	736-0119	Lock Washer, 5/16
11	736-0300	Flat Washer
12	751B221535	Casing Clamp (Model V809H)
13	751-0535	Fuel Line Hose
14	751-0564	Muffler Deflector
15	751-0616	Muffler, Twin Inlet (Model V809H)
16	751-0650	RH Exhaust Pipe (Model V809H)
17	751-0651	LH Exhaust Pipe (Model V809H)
18	751-3140	Oil Drain Valve
19	751-3141	Oil Drain Hose
20	751-3142	Oil Drain Cap
21	783-0615B	Muffler Heat Shield
22	783-0625B	Engine Heat Shield (Model V809H)
23	722-0263	Foam (fits over fuel line)
24	746-1086	Throttle Cable (Model V809H)
25	746-1100	Throttle Cable (Model Y809P)
26	751-0645	RH Exhaust Pipe (Model Y809P)
27	751-0644A	LH Exhaust Pipe (Model Y809P)
28	751-0805	Muffler, Twin Inlet (Model Y809P)
29	783-1121	Engine Heat Shield (Model Y809P)
30	721-0377	Exhaust Gasket (Model Y809P)
31	712-3086	Flange Nut, M8 x 1.25-6 (Model Y809P)

NOTE: Engine accessory parts are applicable to both model V809H and Y809P except where otherwise noted.


Models V809H & Y809P

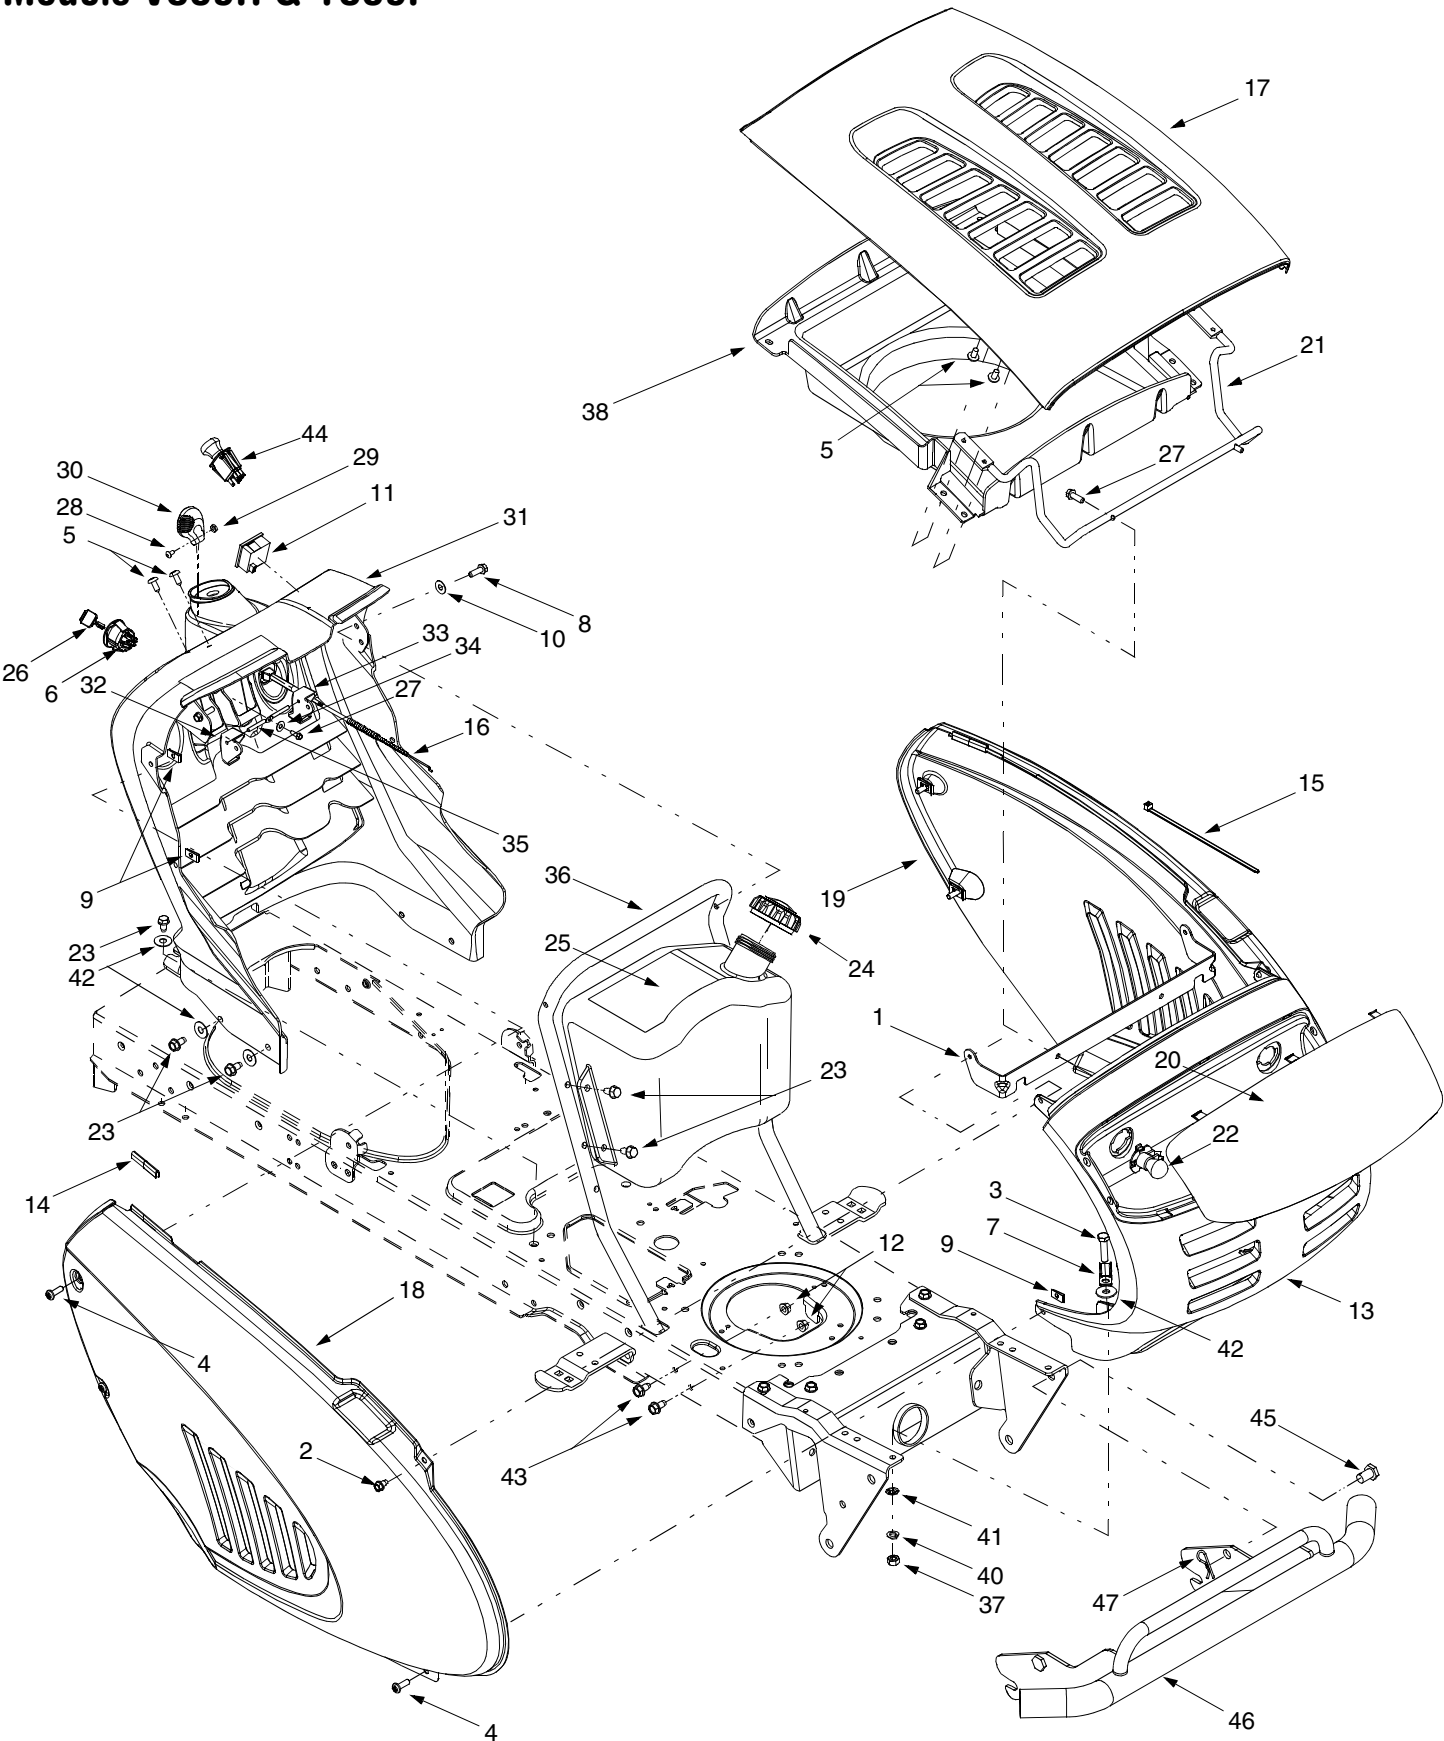

Models V809H & Y809P

REF. NO.	PART NO.	DESCRIPTION
1	783-1346	Grill Support Bracket (9-style)
2	710-0599	Self-tapping Screw, 1/4-20 x .5
3	710-0528	Hex Cap Screw, 5/16-18 x 1.25
4	710-0924	Phillips Pan Screw, 1/4-20 x .75
5	710-1017	Truss Phillips Screw, 1/4-20 x .625
6	725-1741	Ignition Switch
7	726-0272	Clamp, 9/16
8	710-0642	Self-tapping Screw, 1/4-20 x .75
9	712-0292	U-type Speed Nut, 1/4-20
10	736-0270	Bell Washer, .265 x .75 x .062
11	725-1976	Systems Indicator Monitor
12	712-3004A	Hex Nut, 5/16-18
13	731-2119	Grille (9-style)
14	731-0511	Trim Strip, 4
15	725-0175	Cable Tie, 3/16 x .05 x 7.4
16	746-1085	Choke Knob/Cable
17	783-0783	Hood (9-style)
18	783-0784	RH Side Panel (9-style)
19	783-0785	LH Side Panel (9-style)
20	731-2119	Headlight Lens (9-style)
21	747-1162	Hood Hinge Rod
22	625-0051	Headlight Assembly
23	710-0604A	Self-tapping Screw, 5/16-18 x .625
24	751-0603	Fuel Cap
25	751-0658B	Fuel Tank, Three-gallon
26	725-1745	Ignition Key w/ plastic cover
	725-1744	Ignition Key w/o plastic cover
27	710-0895	Self-tapping Screw, 1/4-15 x .75
28	710-3217	Truss Phillips Screw, #8-32 x .375
29	712-0142	Hex Nut, #8-32
30	731-1857	Throttle Control Knob
31	731-2225B	Dash Panel, 8/9-style, Electric PTO
32	731-2226	Cruise Control Button
33	731-2227	Parking Brake Button
34	736-0142	Flat Washer, 9/32 x 1/2 x 1/16
35	747-1196	Brake/Cruise Pivot Rod
36	749-1087A	Dash Support Tube
37	712-3010	Hex Nut, 5/16-18
38	731-2270	Hood Plenum (Model V809H)
	731-2271	Hood Plenum (Model Y809P)
39	726-3046	Ratchet Clip
40	736-0119	Lock Washer, 5/16
41	726-0201	Speed Nut, .3125
42	736-3078	Flat Washer, .349 x 1.0 x .063
43	710-1238	Screw, 5/16-18 x .875 (Grade 5)
44	725-1752	Electric PTO Switch
45	711-0332	Clevis Pin, .50 x .78
46	768-0010	Bumper Assembly
47	714-0145	Internal Cotter Pin
—	629-0469A	Headlight Wire Harness
—	629-1069	Tractor Wire Harness (Model Y809P)
—	629-1071	Tractor Wire Harness (Model V809H)

Models V809H & Y809P

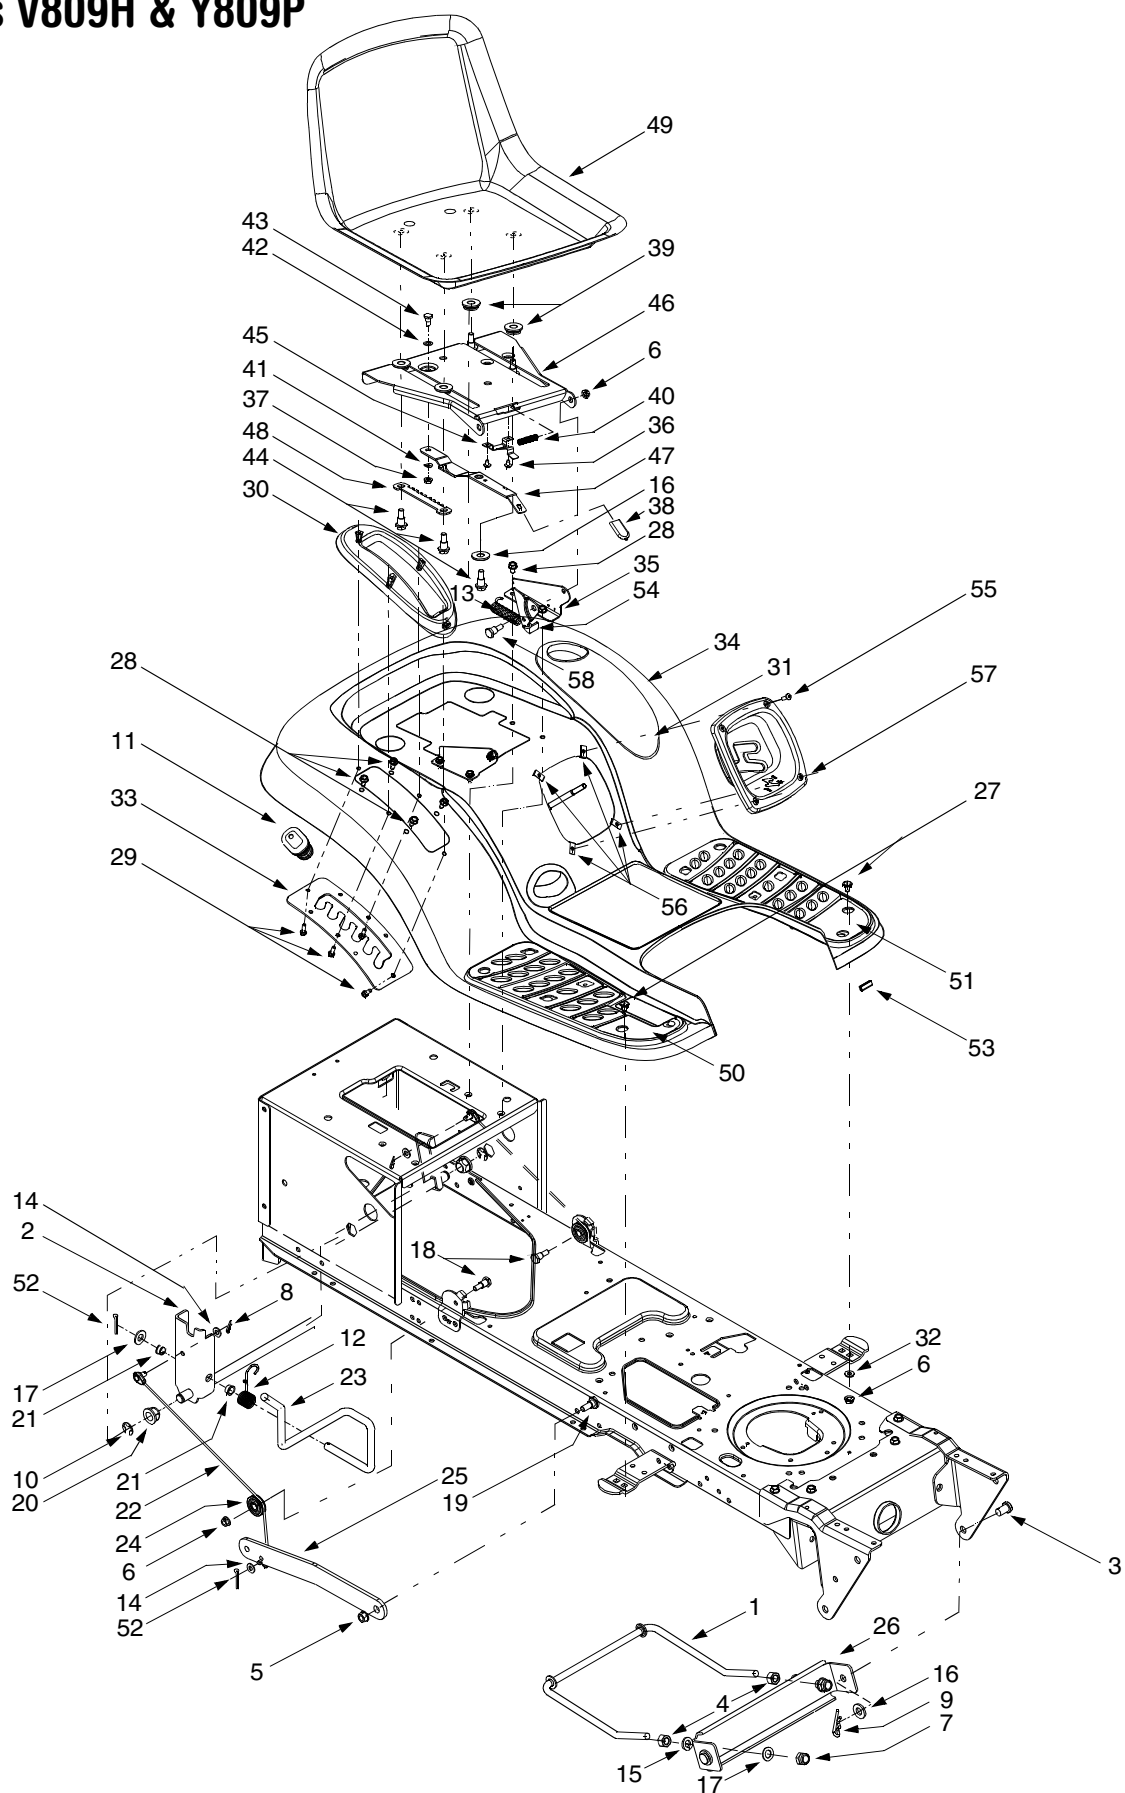


Models V809H & Y809P

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	747-1130B	Deck Stabilizer Rod	32	736-3078	Flat Washer, .349 x 1.0 x .063
2	683-0197A	Lift Shaft Assembly	33	783-0677	Lift Adjustment Bracket
3	711-0332	Clevis Pin, .5 x .78	34	783-1280	Fender
4	712-0206	Hex Nut, 1/2-13	35	783-0715A	LH Seat Mounting Bracket
5	712-0431	Flange Lock Nut, 3/8-16		17239A	RH Seat Mounting Bracket (Not Shown)
6	712-3004A	Flange Lock Nut, 5/16-18	36	710-1268	Screw, #10-16 x .375
7	712-3083	Hex Nut, 1/2-13	37	712-3027	Hex Flange Lock Nut, 1/4-20
8	714-0104	Internal Cotter Pin	38	720-0309A	Seat Adjuster Grip
9	714-0145	Internal Cotter Pin	39	731-1989	Spacer
10	716-0106	E-ring	40	732-0499	Compression Spring, .41 x 1.5
11	720-0311	Handle Grip	41	736-0175	Spring Washer, .265 x .562 x .025
12	732-0874	Torsion Spring	42	736-0204	Flat Washer, .344 x .62 x .03
13	732-1175	Extension Spring, .815 x 4.4	43	738-0137A	Shoulder Screw, .340 x .285, 1/4-20
14	736-0275	Flat Washer, 5/16	44	738-1007	Shoulder Screw, .50 x .50, 3/8-16
15	736-0921	Lock Washer, 1/2	45	783-0611	Seat Stop
16	736-3019	Flat Washer, .31 x 1.062 x .134	46	783-0738	Seat Pivot Bracket
17	736-3084	Flat Washer, .51 x 1.12 x .06	47	783-0739	Seat Adjustment Lever
18	738-0138A	Hex Cap Screw, 5/16-18 x .62	48	783-0753	Seat Adjustment Selector
19	738-0143	Shoulder Screw, 3/8-16	49	757-0350	High Back Seat w/ Drain Holes, Black
20	741-0225	Hex Flange Bearing	50	735-0656	RH Foot Pad
21	741-0715	Snap Flange Bearing	51	735-0657	LH Foot Pad
22	746-0968	Lift Cable, 16.16	—	726-3046	Foot Pad Clips
23	747-1111	Lift Handle	52	714-0111	Cotter Pin
24	756-1154	Roller Pulley	53	731-0511	Trim Strip
25	783-0678A	Arm Lift	54	783-0209A	LH Seat Lift Bracket
26	783-0720A	Deck Stabilizer Bracket	—	17239A	RH Seat Lift Bracket
27	710-0260A	Carriage Bolt, 5/16 x .62	55	710-0924	Phillips Pan Screw, 1/4-20 x .75
28	710-0604A	Self-tapping Screw, 5/16-18 x .625	56	712-0292	U-type Speed Nut, 1/4-20
29	710-0895	Self-tapping Screw, 1/4-15 x .75	57	731-2480	Shift Lever Cover
30	731-1990	Lift Lever Cover	58	738-0296	Shoulder Screw, .437 x .286
31	731-1993	Cover w/ Cup Holder			

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Powder Black, the part number to order would be 700-xxxx-0637.

MTD Red: 0638
Oyster Gray: 0662
Powder Black: 0637

Models V809H & Y809P

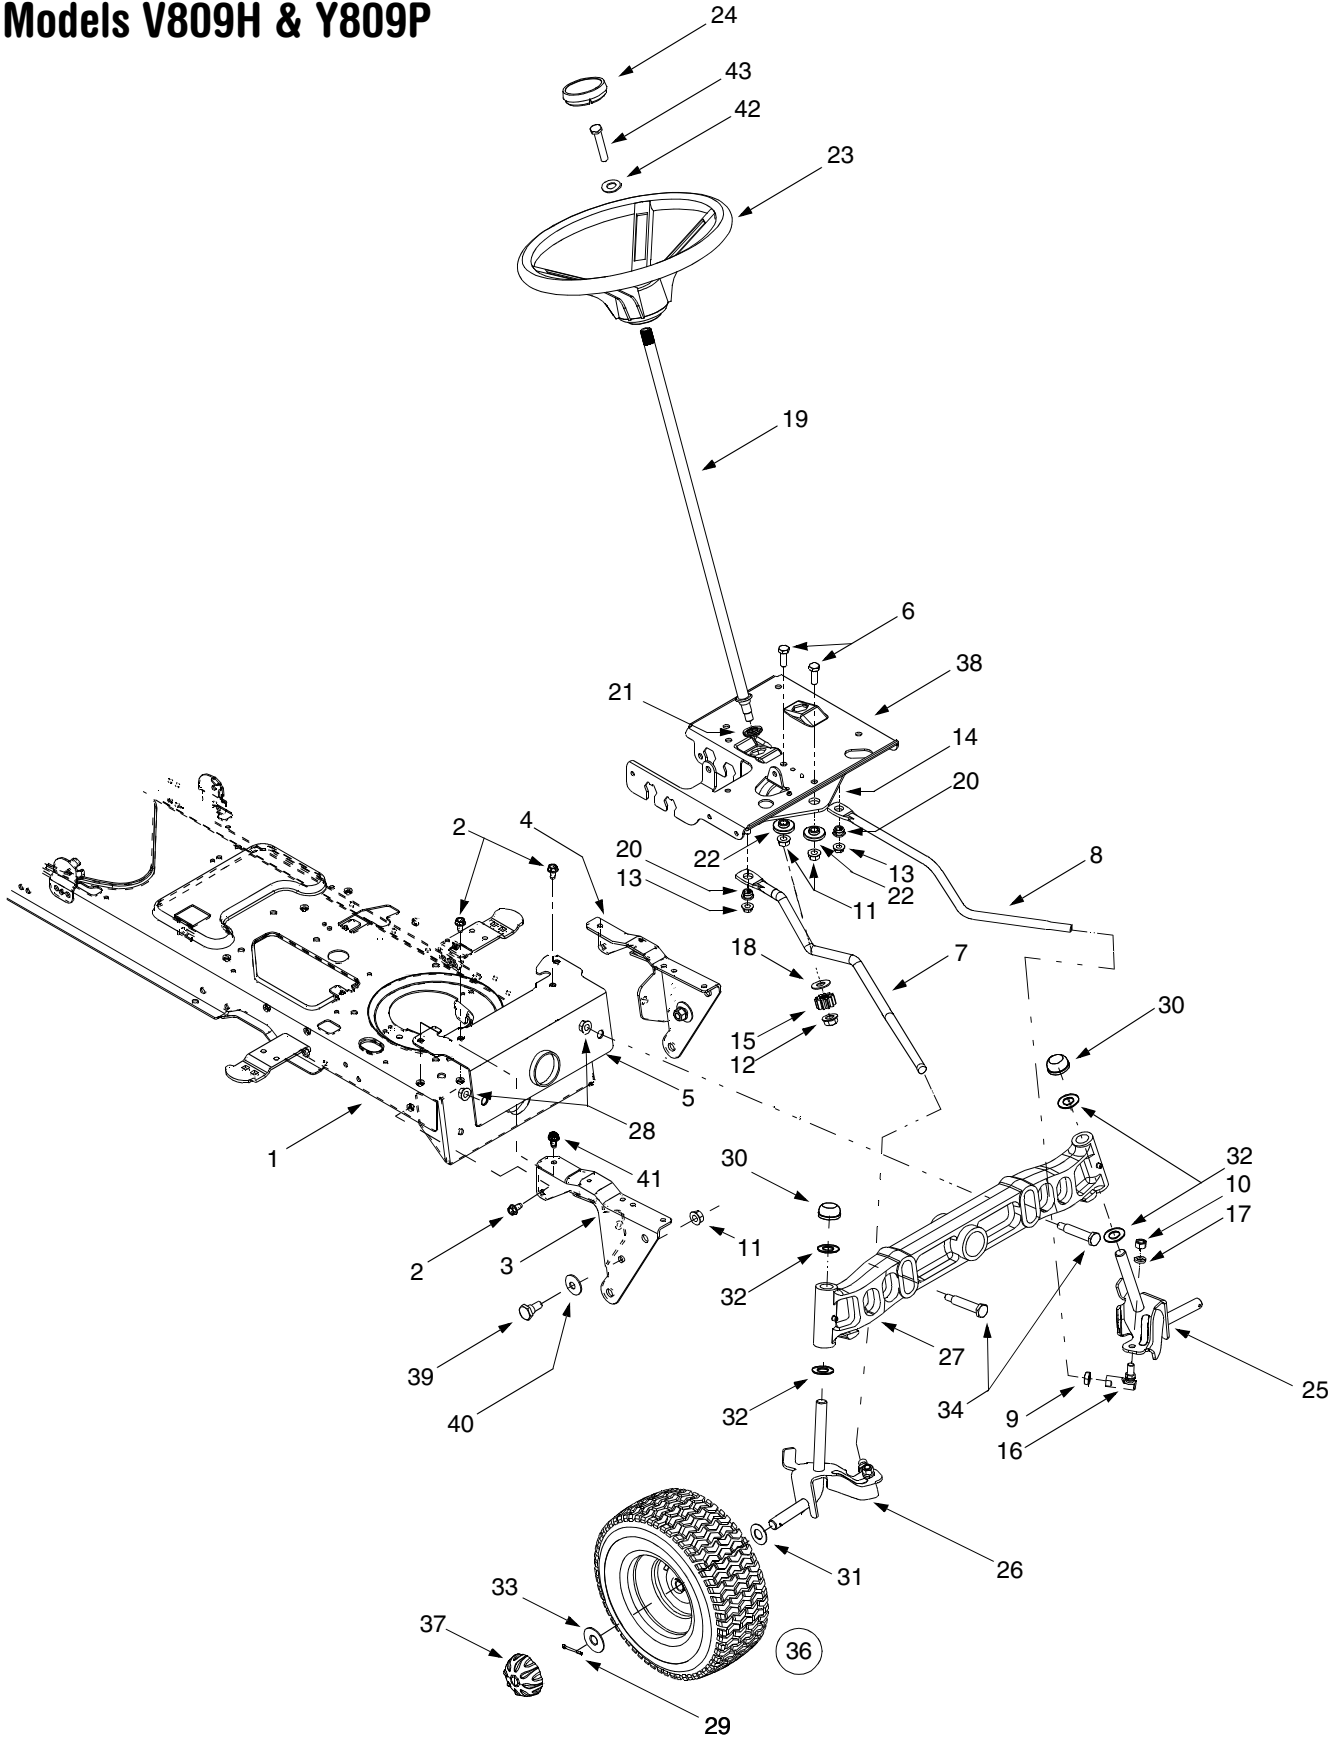


Models V809H & Y809P

REF. NO.	PART NO.	DESCRIPTION
1	683-0304	Lower Frame Assembly
2	710-0604A	Self-tapping Screw, 16-18 x .625
3	783-0726B	RH Pivot Support Bracket
4	783-0727A	LH Pivot Support Bracket
5	783-0728	Pivot Bar Bracket
6	710-0514	Hex Cap Screw, 3/8-16 x 1 (Grade 5)
7	711-1408	RH Drag Link
8	711-1409A	LH Drag Link
9	712-0240	Jam Nut, 7/16-20 (Grade 2)
10	712-0241	Hex Nut, 3/8-24 (Grade 2)
11	712-0431	Flange Lock Nut, 3/8-16
12	712-0459	Flange Lock Nut, 7/16-20
13	712-3004A	Flange Lock Nut, 5/16-18
14	717-1550D	Steering Gear, 11/90 Ratio
15	717-1554	Steering Pinion Gear
16	723-0448A	Ball Joint, 7/16-20
17	736-0169	Lock Washer, 3/8
18	736-3084	Flat Washer, .51 x 1.12 x .06
19	738-1001A	Steering Shaft, .625 OD x 24.4
20	741-0475	Plastic Bushing, .38 ID
21	741-0656	Hex Flange Bearing, 5/8
22	738-0372B	Shoulder Spacer, .38 ID
23	631-0027	Steering Wheel, 13.25
24	731-0220	Steering Wheel Cap, Round
25	638-0017	LH Axle Assembly, .75 Diameter
26	638-0018	RH Axle Assembly, .75 Diameter
27	719-0525B	Cast Iron Pivot Bar w/ Fittings, .75
28	712-0431	Flange Lock Nut, 3/8-16
29	714-0162	Cotter Pin
30	726-0214	Push Cap, .625
31	736-0162	Flat Washer, .64 x 1.0 x .12
32	736-0316	Flat Washer, .78 x 1.59 x .06
33	736-0285	Flat Washer, .635 x 1.589 x .06
34	738-1011	Shoulder Screw, .5 x 2.2, 3/8-16
35	710-0643	Hex Bolt, 5/16-18 X 1
36	634-0183	Wheel Assembly Complete, 16 x 6.5 x 8
	634-0182	Rim Only w/ Plastic Bearing
	734-0255	Air Valve (Not Shown)
	734-1727	Tire Only, Square Shoulder
37	734-2290	Hub Cap
38	783-0653D	Steering Support Bracket
39	738-0143	Shoulder Screw, 3/8-16
40	736-0331	Bell Washer, .39 x 1.13 x .062
41	710-1260A	Self-tapping Screw, 5/16-18 x .75
42	736-0242	Bell Washer, .34 x .872

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Powder Black, the part number to order would be 700-xxxx-0637.

MTD Red: 0638
Oyster Gray: 0662
Powder Black: 0637

Models V809H & Y809P

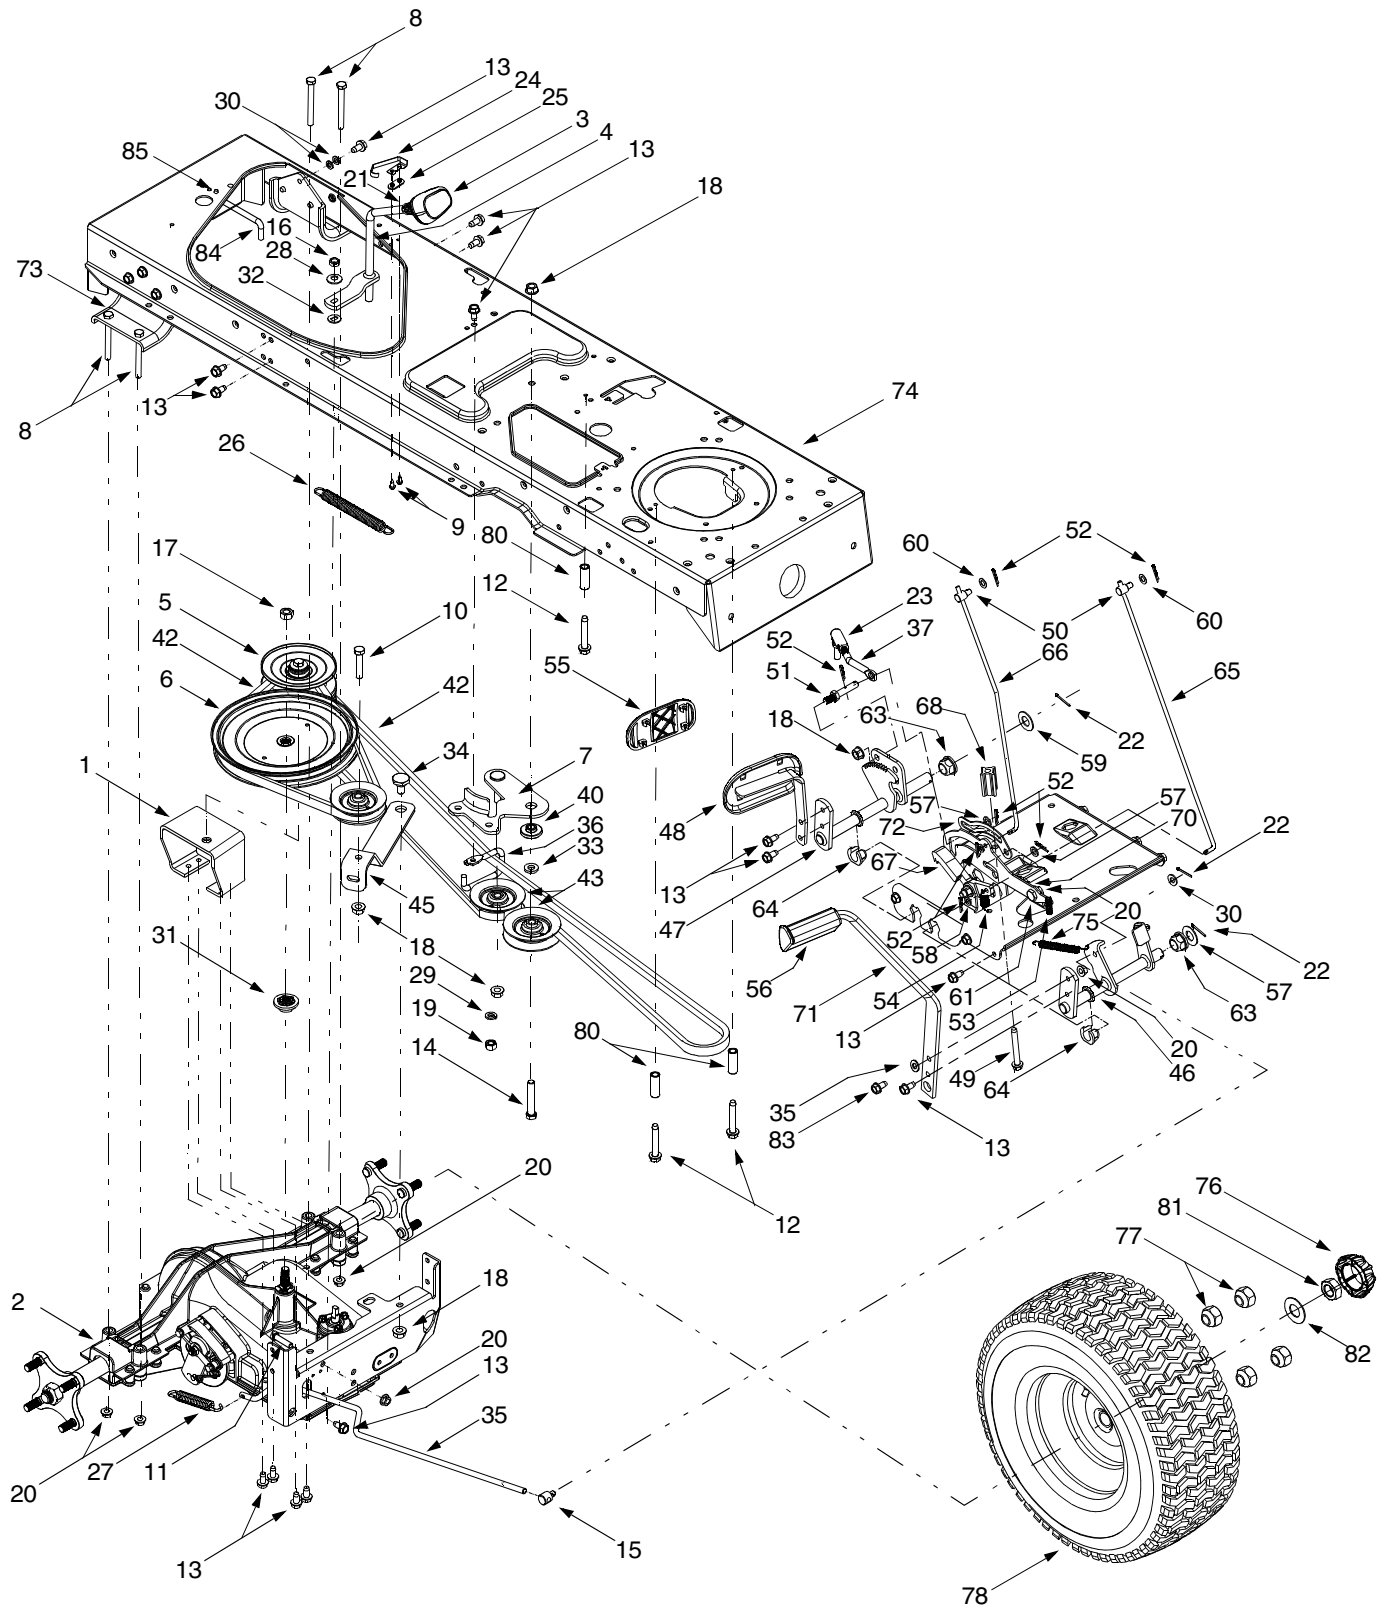


Models V809H & Y809P

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	618-0375	Variable-speed Bracket Assembly	45	783-0669	Idler Bracket
2	618-0376	Two-speed Transmission Assembly	46	647-0031	Brake Control Shaft Assembly
3	631-0009A	Shifter Knob	47	647-0032	Speed Control Shaft Assembly
4	647-0037	Shift Lever	48	683-0266	Drive Pedal Assembly
5	656-0050	Variable-speed Pulley Assembly	49	710-1135	Self Tapping Screw, 5/16-18 x 2.5
6	756-0665	Transmission Pulley, 8.5	50	711-0736	Ferrule, 1/4-20
7	683-0251	Double-idler Bracket	51	711-1363	Pin, 3/8-16 x 2.43
8	710-0189	Hex Cap Screw, 5/16-18 x 3	52	714-0104	Cotter Pin
9	710-0227	Self Tapping Screw, #8-18 x .5	53	732-0437	Compression Spring, .34 OD x 1.0
10	710-0347	Hex Cap Screw, 3/8-16 x 1.75	54	732-0955	Extension Spring, .5 OD x 1.41
11	710-0528	Hex Cap Screw, 5/16-18 x 1.25	55	735-0662	Drive Pedal Pad
12	710-0809	Self-tapping Screw, 1/4-20 x 1.25	56	735-3049	Brake Pedal Pad
13	710-0604A	Self Tapping Screw, 5/16-18 x .625	57	736-0140	Flat Washer, .281 x .5 x .0625
14	710-3011	Hex Cap Screw, 3/8-16 x 2.25	58	736-0142	Flat Washer, 9/32 x 1/2 x 1/16
15	711-0677	Ferrule, 5/16 x .312 Dia.	59	736-0187	Flat Washer, .64 x 1.24 x .06
16	712-0181	Hex Jam Nut, 3/8-16	60	736-0204	Flat Washer, .344 x .062 x .03
17	712-0702	Hex Flange Nut, 7/16-20	61	738-0155	Shoulder Screw, .437 x 1.62
18	712-0431	Flange Lock Nut, 3/8-16	62	738-0507B	Shoulder Screw, .5 x .434
19	712-0798	Hex Nut, 3/8-16	63	741-0225	Hex Flange Bearing
20	712-3004A	Flange Lock Nut, 5/16-18	64	741-3065B	Split Hex Flange Bearing
21	712-3008	Hex Jam Nut, 3/8-16	65	747-1137	Cruise Control Rod
22	714-0111	Cotter Pin	66	747-1138	Brake Lock Control Rod
23	723-3018	Ball Joint, 3/8-24	67	748-0413	Cruise Latch
24	725-1713	Spring Switch	68	748-0415A	Spacer, 5/16 x 1.54
25	726-0320	Insulator Nut Plate	69	783-0653B	Steering Support Bracket
26	732-0384	Extension Spring, .62 Dia. x 6.12	70	783-0732	Drive Lockout Bracket
27	732-0716	Extension Spring, .59 OD x 4.0	71	783-0773	Brake Pedal
28	736-0105	Bell Washer, .401 x .870 x .063	72	783-0780A	Neutral Return Bracket
29	736-0169	Lock Washer, 3/8	73	783-0693	Axle Bracket
30	736-0275	Flat Washer, 5/16	74	683-0304	Lower Frame Assembly
31	718-0771	Pulley Hub, 1/2 Spline	75	732-0963	Extension Spring, .5 OD x 6.37
32	736-0642	Flat Washer, .44 x .75 x .06	76	731-2290	Hub Cap
33	736-3010	Flat Washer, .407 x .812 x .135	77	712-3050	Lug Nut, 7/16-14
34	738-0322	Shoulder Screw, .625 Dia. x .21	78	634-0132	Wheel Assembly Complete, 23 x 9.5 x 12
35	747-1122	Brake Rod		634-3178	Rim Only
36	747-1123A	Belt Guard		734-0255	Air Valve
37	747-1127	Idler Adjustment Rod, 3/8		734-1728	Tire Only, Square Shoulder
38	710-1026	Self-tapping Screw, 1/4-20 x 1.75	79	750-0768	Split Spacer, .25 x .37 x 1.32
39	747-1185	Transmission Belt Guard Rod	80	750-0566A	Spacer, .372 x .26 x 1.03
40	748-0416	Shoulder Spacer, .380 ID	81	712-3026	Jam Nut, 3/4-16
41	754-0467	Variable-speed Belt	82	736-0316	Flat Washer, .78 x 1.59 x .06
42	754-0468	Drive Belt	83	710-1260A	Hex Screw, 5/16-18 x .75
43	756-0981A	Flat Idler, 2.75 OD	84	747-1185	Transmission Belt Guard Rod
44	783-0667A	Transmission Torque Bracket	85	710-0599	Self Tapping Screw, 1/4-20 x .5

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Powder Black, the part number to order would be 700-xxxx-0637.
MTD Red: 0638
Oyster Gray: 0662
Powder Black: 0637

Models V809H & Y809P

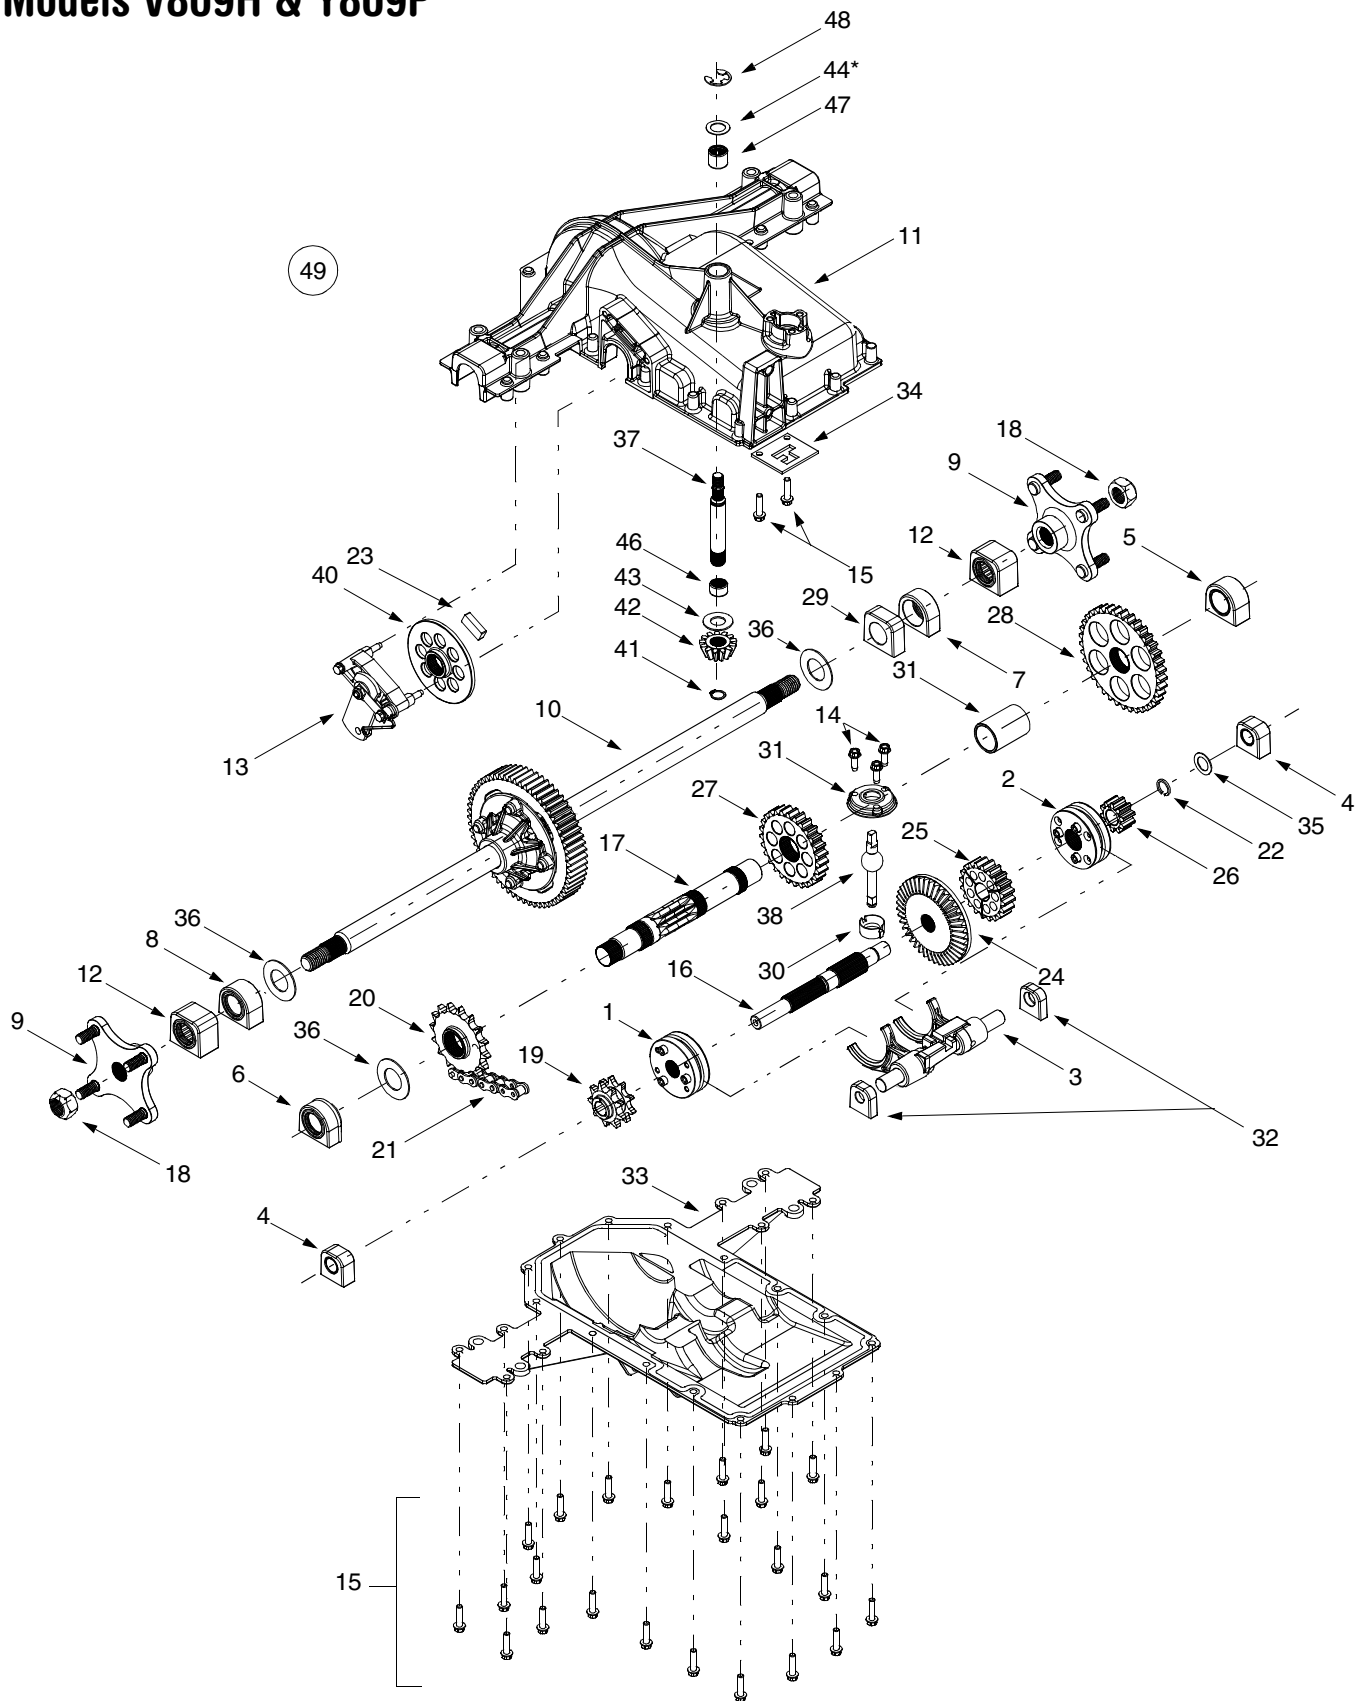

Models V809H & Y809P


REF. NO.	PART NO.	DESCRIPTION
1	618-0225	Reverse Collar Assembly
2	618-0226	Hi-Lo Collar Assembly
3	618-0227A	Shift Fork Assembly
4	618-0284	Detent Block Assembly
5	618-0285	Output Bearing Block Assembly
6	618-0286	Output Seal Bearing Block Assembly
7	618-0287	Inboard Sealed Axle Block Assembly
8	618-0302	Inboard Sealed Axle Block Assembly
9	618-0365	Wheel Hub Assembly
10	618-0368	Differential Axle Assembly
11	719-0379A	Upper Housing
12	641-0002A	Axle Bearing Block Assembly
13	661-0012	Brake Assembly
14	710-0642	Self-tapping Screw, 1/4-20 x .75
15	710-0788	Self-tapping Screw, 1/4-20 x 1.0
16	711-1051A	Drive Shaft
17	711-1216	Output Shaft
18	712-1329	Nut, 3/4-16
19	713-0446	9-tooth Sprocket
20	713-0447	16-tooth Sprocket
21	713-0448	22-link Chain, .625
22	716-0131	External Snap Ring
23	717-0678	Brake Pad
24	717-1438	41-tooth Bevel Gear
25	717-1439	20-tooth Spur Gear
26	717-1440	10-tooth Spur Gear
27	717-1441	27-tooth Spur Gear
28	717-1442	37-tooth Spur Gear
29	718-0500	Inner Axle Bearing Block
30	718-0504	Shifter Insert
31	718-0505	Shifter Cover
32	718-0537	Shifter Bearing Block
33	719-0385	Lower Housing
34	718-0540	Lockout Plate
35	736-0337	Flat Washer, 5/8 x 1.0
36	736-3046A	Flat Washer, 1.01 x 1.86 x .060
37	711-1235	Input Shaft
38	747-1140	Shift Lever
39	750-1033A	Spacer, 1.13 x 1.38 x 1.968
40	761-0215	Disc Brake
41	716-0114	Retaining Ring, .56
42	717-1463	13-tooth Bevel Gear
43	736-0335	Flat Washer
44	736-0336	Flat Washer, 5/8 x 1.0 x .030*
	736-0337	Flat Washer, 5/8 x 1.0 x .040*
	736-0349	Flat Washer, 5/8 x 1.0 x .020*
46	741-0335	Needle Bearing
47	741-0696	Needle Bearing
48	716-0231	E-ring, .75
49	618-0376	Transmission Assembly Complete

NOTE: Transmission has a grease capacity of 32 oz. Order part number 737-0148.

NOTE: Upon reassembling transmission input shaft for any reason, refill its cavity with approximately 2/3 oz. of grease. Order part number 737-0289.

*Use applicable flat washer (12a, 12b or 12c) in this application allowing proper end-play as instructed in *MTD's Service Manual*.

Models V809H & Y809P

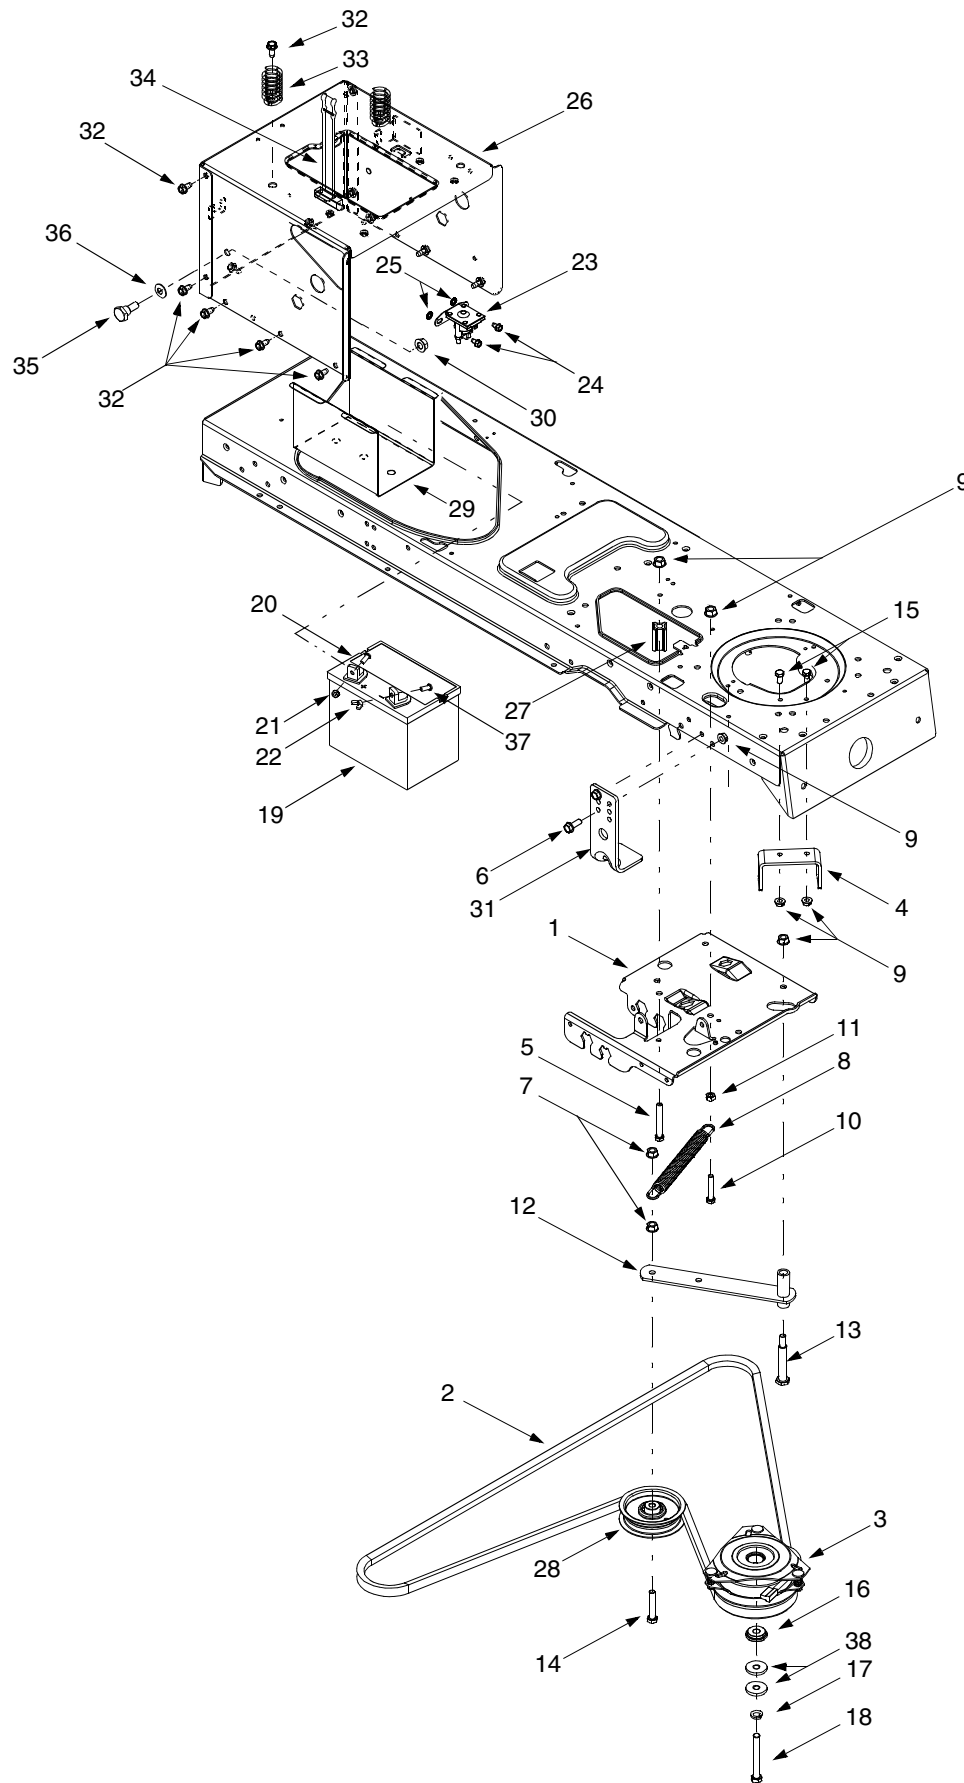


Models V809H & Y809P

REF. NO.	PART NO.	DESCRIPTION
1	783-0653D	Steering Support Bracket
2	754-0476	PTO Belt (Model V809H)
	754-0475	PTO Belt (Model Y809P)
3	717-1709	Electric PTO Clutch
4	783-1003	Electric Clutch Anti-rotation Bracket
5	710-0859	Hex Cap Screw, 3/8-16 x 2.5
6	710-1238	Hex Head Washer Screw, 5/16-18 x .875
7	712-0431	Flange Lock Nut, 3/8-16
8	732-0978	Extension Spring, .62 x 5.62
9	712-3004A	Flange Lock Nut, 5/16-18
10	710-3180	Hex Cap Screw, 5/16-18 x 1.75
11	712-3010	Hex Nut, 5/16-18
12	683-0294	Idler Bracket Assembly
13	738-3056	Shoulder Screw, 1/2 x 2.5
14	710-3144	Hex Cap Screw, 3/8-16 x 2.0
15	710-3025	Hex Cap Screw, 5/16-18 x .625
16	738-0785	Shoulder Spacer, 1.38 x .445 x .36
17	736-0171	Lock Washer, 7/16
18	710-3157	Hex Cap Screw, 7/16-20 x 3.25 (Grade 5)
19	725-1706	12-volt Battery, 270 CCA
20	710-0751	Hex Cap Screw, 1/4-20 x .62
21	712-0271	Hex Sems Nut, 1/4-20
22	712-3087	Wing Nut, 1/4-20
23	725-1426	Solenoid, 12-Volt, 100 Amp
24	710-0599	Self Tapping Screw, 1/4-20 x .5
25	736-0222	Lock Washer, 1/4
26	783-1033A	Hitch Plate
27	748-0415A	Spacer, 3/8 x 1.54
28	756-0627B	Idler Pulley, 3.5
29	783-0349	Battery Tray
30	712-0459	Flange Lock Nut, 7/16-20
31	783-0891B	Deck Stop
32	710-0604A	Self Tapping Screw, 5/16-18 x .625
33	732-3080	Compression Spring, 1.28 x 3.5
34	723-0444	Battery Strap
35	738-1020	Shoulder Screw, .625 x .5, 7/16-20
36	736-0407	Bell Washer, .45 x 1.0 x .062
37	738-1132	Shoulder Screw, 1/4-20, .25 x .15
38	736-0322	Flat Washer, .45 x 1.25 x .164

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Powder Black, the part number to order would be 700-xxxx-0637.
 MTD Red: 0638
 Oyster Gray: 0662
 Powder Black: 0637


Model V809H

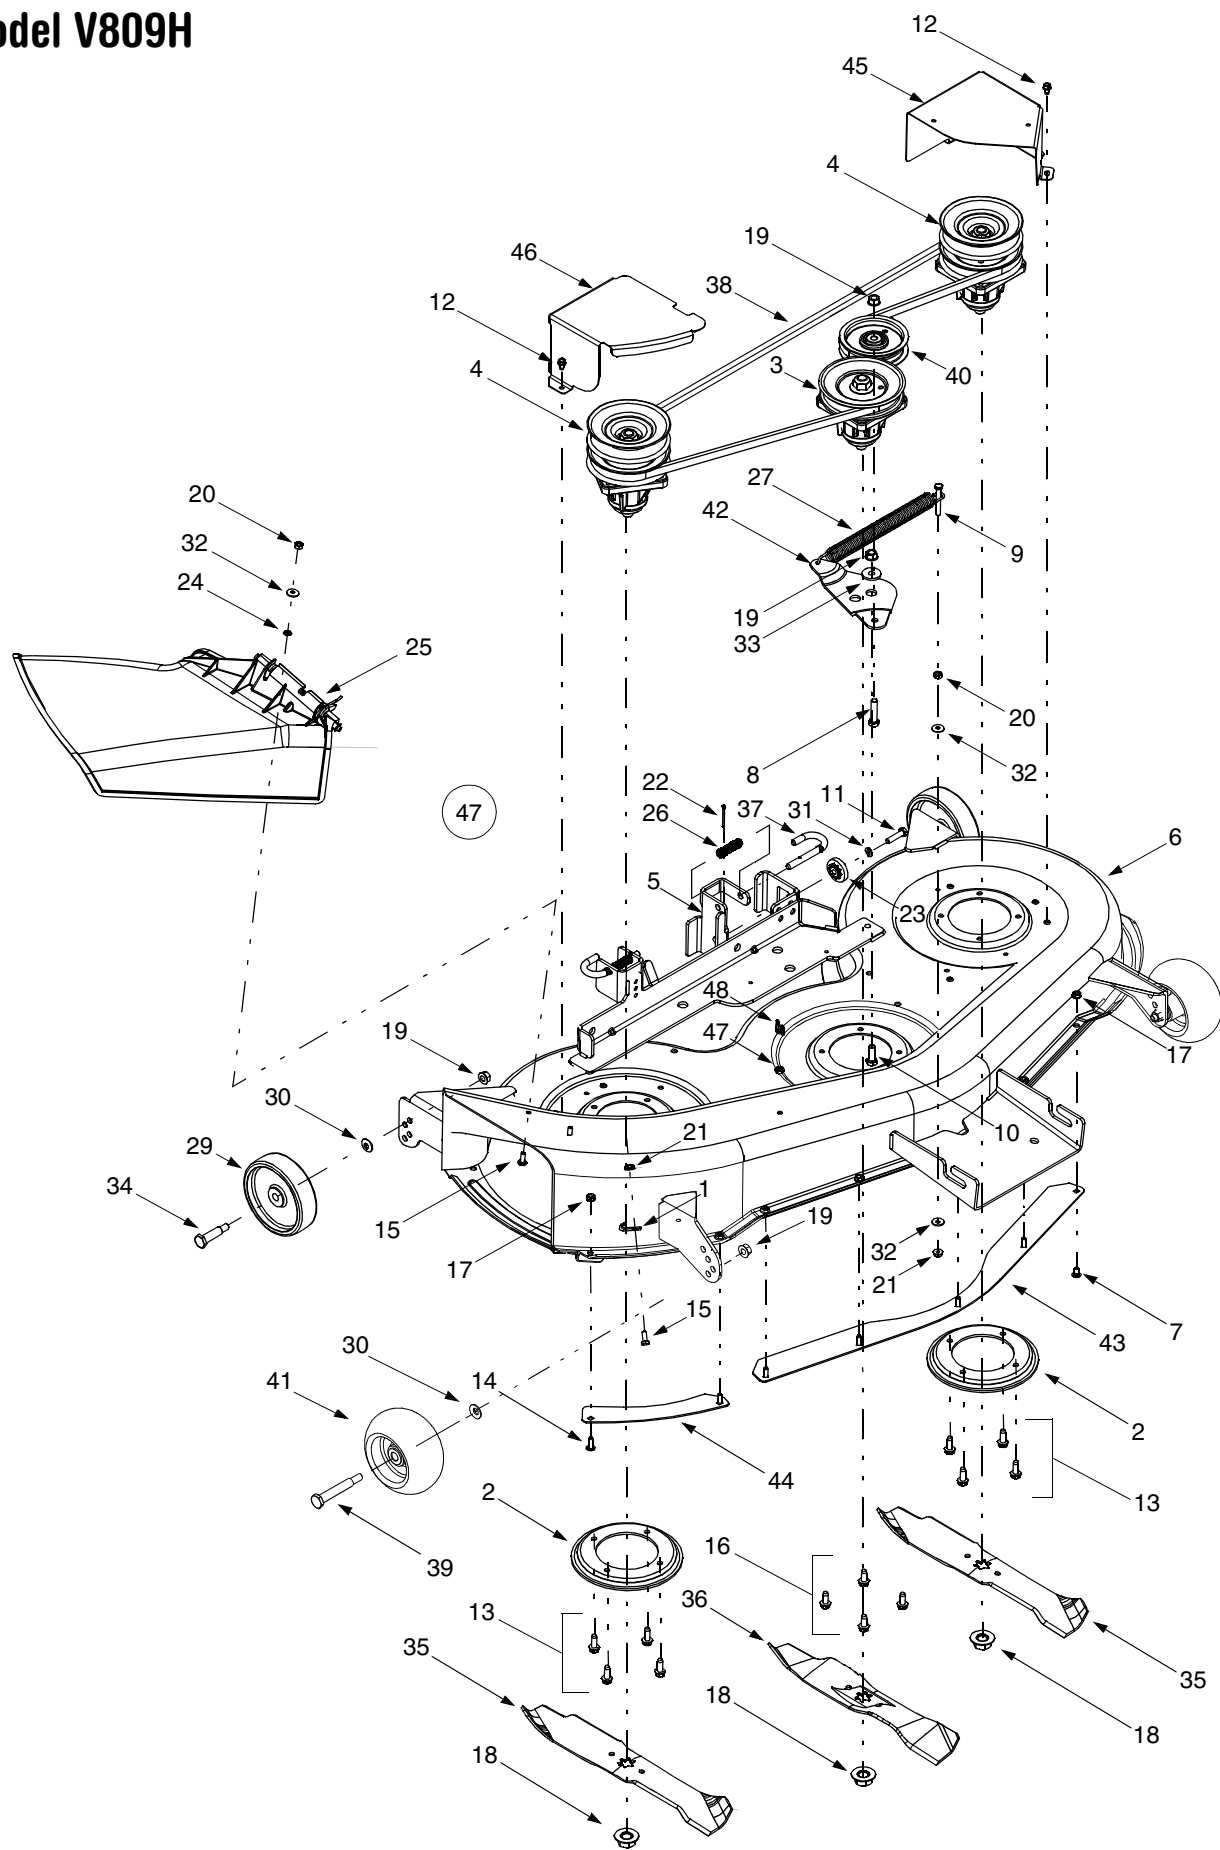

REF. NO.	PART NO.	DESCRIPTION
1	16606	Retainer Hook
2	17982	Spindle Reinforcement Plate
3	618-0240A	Spindle Assembly, 5.0 Dia.
	756-1187	Pulley Only
4	618-0241	Double Pulley Spindle Assembly
	756-0603	Double Pulley Only
5	683-0254	Deck Adjustment Bracket Assembly
6	683-0199C	46-inch Deck Shell
7	710-0167	Carriage Screw, 1/4-20 x .50
8	710-0344	Hex Cap Screw, 3/8-16 x 1.5
9	710-0501	Hex Cap Screw, 1/4-20 x 2.0
10	710-0514	Hex Cap Screw, 3/8-16 x 1.0
11	710-0528	Hex Cap Screw, 5/8-18 x 1.25
12	710-0599	Self-tapping Screw, 1/4-20 x .5
13	710-0650	Self-tapping Screw, 15/16-18 x .875
14	710-0703	Hex Screw, 1/4-20 x .75
15	710-0751	Hex Cap Screw, 1/4-20 x .62
16	710-1260A	Self-tapping Screw, 5/16-18 x .75
17	712-0271	Hex Sems Nut, 1/4-20
18	712-0417A	Hex Flange Nut, 5/8-18
19	712-0431	Flange Lock Nut, 3/8-16
20	712-3006	Hex Nut, 1/4-20
21	712-3027	Hex Flange Lock Nut, 1/4-20
22	714-0470	Cotter Pin, 1/8 x 1.25
23	717-1553A	Deck Adjustment Gear
24	726-0233	Push Nut. .25 x .5
25	731-1032B	Side Discharge Chute Assembly
26	732-0306	Compression Spring, .406 x .531 x 1.75
27	732-0594A	Extension Spring, .91 x 7.3
28	710-0578	Screw, 1/4-20 x 1.5
29	734-0973	Deck Wheel, 5 x 1.38
30	736-0105	Bell Washer, .401 x .87 x .063
31	736-0119	Lock Washer, 5/16
32	736-0270	Bell Washer, .265 x .75 x .062
33	738-0347	Shoulder Spacer, .625 x 1.16
34	738-0373	Shoulder Screw
35	742-0611	Three-in-one Blade, Star Center, 16.28"
36	742-0612	Three-in-one Blade, Star Center, 14.88"
37	747-1116	Deck Release Pin
38	754-0349	Deck Belt, Poly
39	738-3056	Shoulder Screw, 1/2-2.5
40	756-0627B	Idler Pulley, 3.5
41	734-3058B	Deck Wheel, 5.0
42	783-0139A	Idler Bracket
43	783-0141	Center Deck Skirt
44	783-0142	RH Deck Skirt
45	783-0747	LH Belt Cover
46	783-0805A	RH Belt Cover
47	753-0875	46-inch Deck Assembly Complete

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Model Y809P

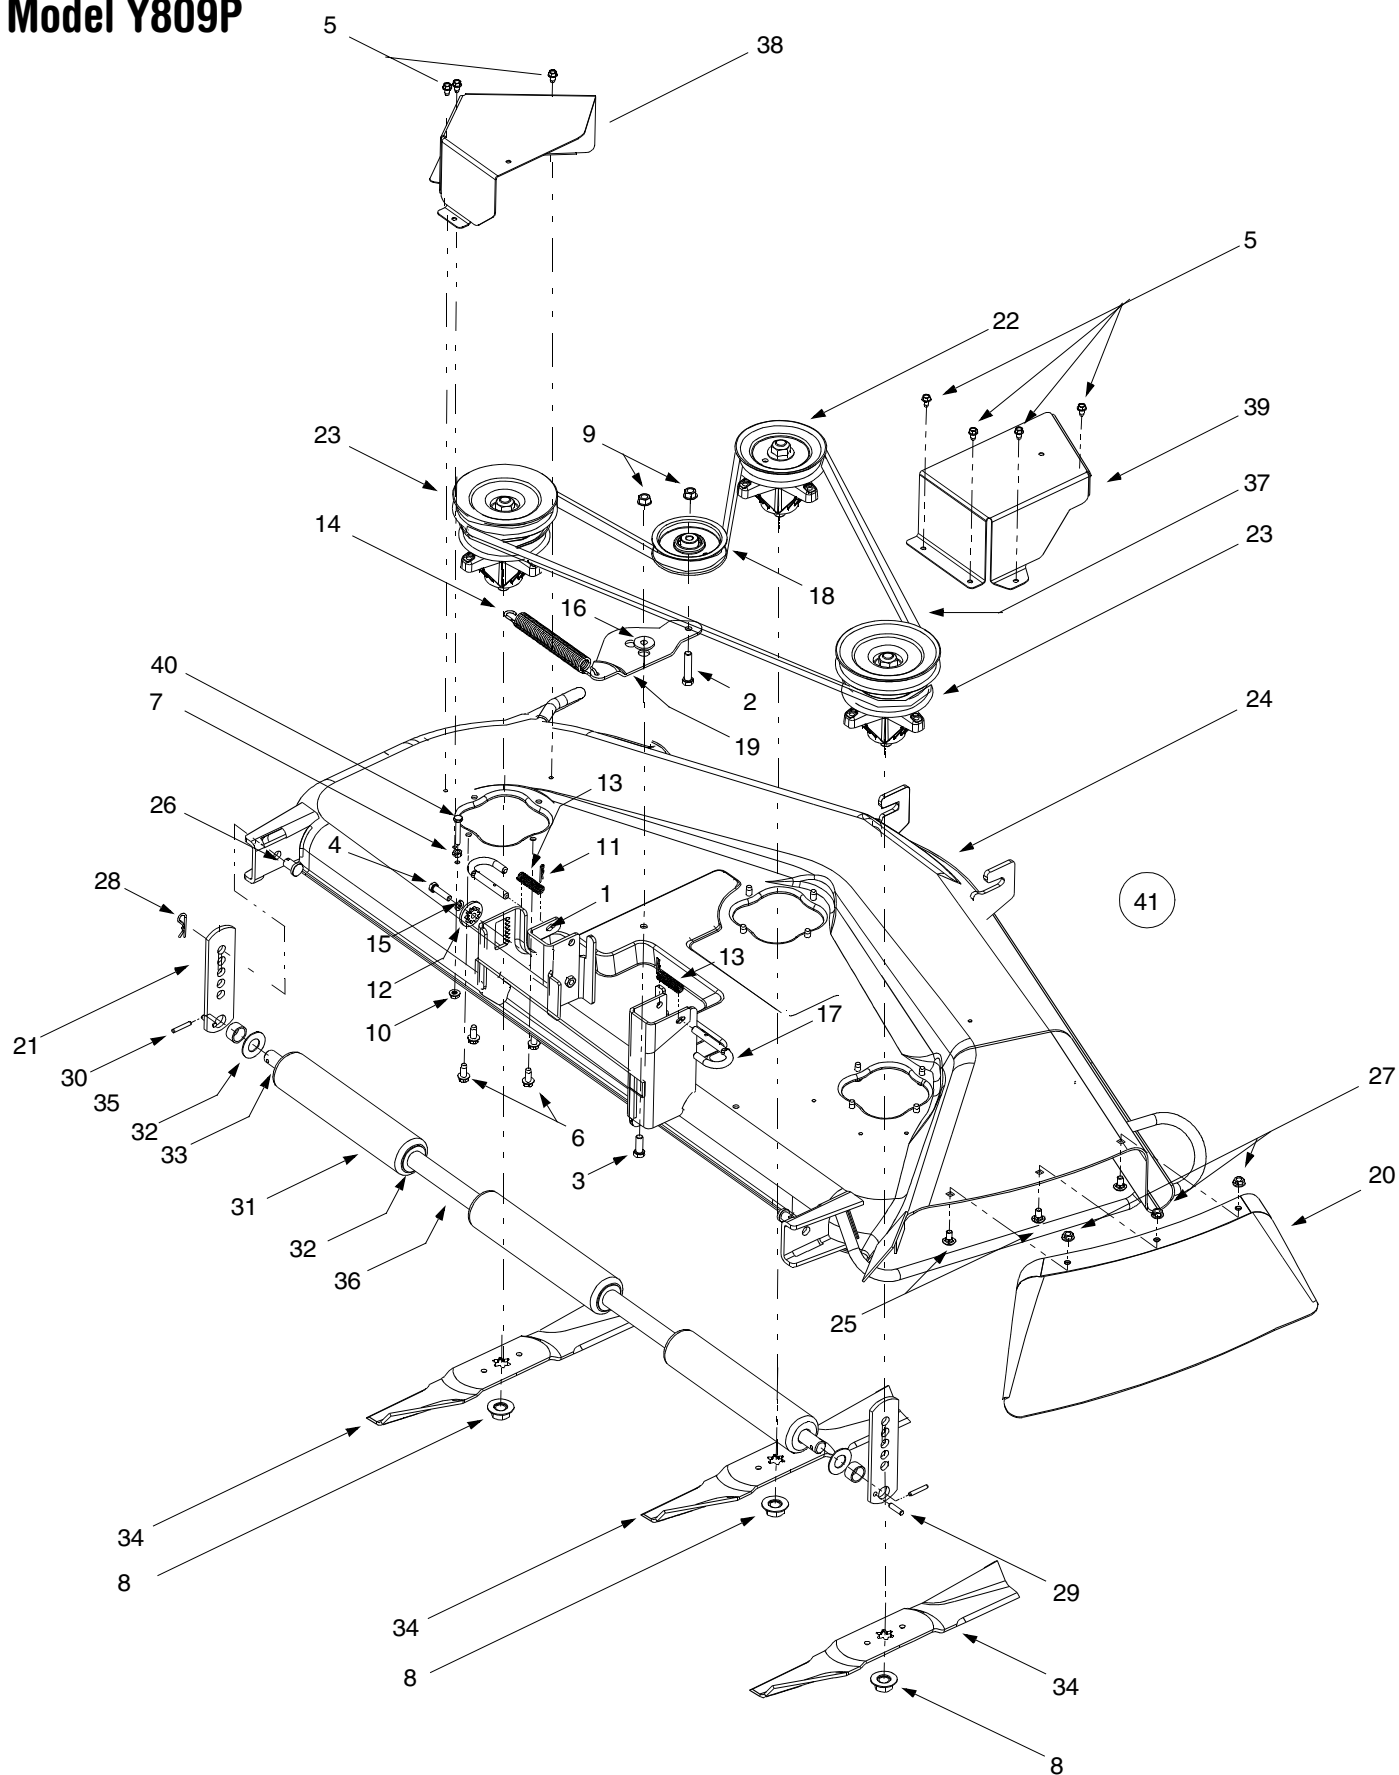

REF. NO.	PART NO.	DESCRIPTION
1	710-0167	Carriage Screw, 1/4-20 x .5
2	710-0347	Hex Cap Screw, 3/8-16 x 1.75
3	710-0514	Hex Cap Screw, 3/8-16 x 1.0
4	710-0528	Hex Cap Screw, 5/16-18 x 1.25
5	710-0599	Self Tapping Screw, 1/4-20 x .5
6	710-1260A	Self Tapping Screw, 5/16-18 x .75
7	712-0291	Center Lock Nut, 1/4-20
8	712-0417A	Hex Flange Nut, 5/8-18
9	712-0431	Flange Lock Nut, 3/8-16
10	712-3027	Hex Flange Lock Nut, 1/4-20
11	714-0104	Internal Cotter Pin, .072 x 1.12
12	717-1553A	Deck Adjustment Gear
13	732-0306	Compression Spring, .406 x .531 x 1.75
14	732-0594A	Extension Spring, .91 x 7.33
15	736-0119	Lock Washer, 5/16
16	738-0347	Shoulder Spacer, .625 x .169
17	747-1116	Deck Release Pin
18	756-0627B	Flat Idler Pulley, 3.5 OD
19	783-0139A	Idler Bracket
20	12649	Chute Guard
21	12650	Height Adjustment Bracket
22	618-0268A	Center Spindle Assembly, 5 Dia.
	756-1187	Pulley Only
23	618-0269	Double Pulley Spindle Assembly
	756-1041	Double Pulley Only
24	683-0196	50-inch Deck Shell
25	710-0260A	Carriage Bolt, 5/16-18 x .62
26	711-0332	Clevis Pin, .50 Dia. x .78
27	712-3004A	Hex Flange Lock Nut, 5/16-18 (Grade 5)
28	714-0145	Click Pin, .092 x 1.64
29	715-0108	Spring Pin, 1/4 Dia. x 1
30	715-0246	Spring Pin, 3/16 x 1.25
31	731-0335	Deck Roller
32	736-0316	Flat Washer, .78 x 1.59 x .06
33	738-0295	Deck Roller Shaft, .75 Dia. x 47.12
34	742-0623	Blade, Star Center, 17.3
35	750-0212	Spacer, .752 x 1.0 x .53
36	750-0288	Spacer, .82 x 1.0 x 5.75
37	754-0291A	Deck Belt
38	783-0746	Belt Cover, L.H.
39	783-0793	Belt Cover, R.H.
40	710-3288	Hex Cap Screw, 1/4-20 x 1.62
41	753-0877	50-inch Deck Assembly Complete

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.