

WARNING
All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.


Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530016386	Screw	24.	530019264	Seal-Crankcase	47.	530012553	Cylinder
2.	530058799	Assy-Shroud/H'shield	25.	530032125	Bearing-Inner	48.	530015953	Screw
3.	530071486	O-Ring-C'case (kit)	26.	530015934	Screw	49.	530071486	Gasket-Muffler (kit)
4.	530012571	Assy-Crankshaft	27.	530071486	Seal-Cylinder (kit)	50.	530071682	Kit-Muffler (incl. # 49,51,52,53)
5.	530071681	Assy-C/case-C/shaft (Incl. #4,6 & 22)	28.	530071785	Kit-Piston/Rod Assy. (Incl. 29 & 30)	51.	530016338	Bolt-Muffler
6.	530015941	Ring-Retainer-C'shaft	29.	530069945	Assy-Connecting Rod	52.	530071544	Kit-Spark Arrestor
7.	530071487	Assy-Flywheel	30.	530071476	Kit-Piston (Incl. 31 & 32)	53.	530015241	Screw
8.	530015828	Washer-Flat	31.	530015162	Retainer-Piston Pin	54.	530095992	Assy-Pick-up
9.	530055729	Spacer-Flywheel	32.	530012472	Ring-Piston	55.	530069247	Kit-Fuel Line(small)
10.	530015496	Screw	33.	530071486	Gasket-Carb. Adapt.(kit)	56.	530069216	Kit-Fuel Line(large)
11.	530055681	Plate-Baffle	34.	530057634	Adapter-Carburetor	57.	530023877	Fitting-Fuel Line
12.	530015882	Screw	35.	530016309	Screw	58.	530016103	Clip-Retainer
13.	530069353	Kit-Starter Pulley (Incl.# 12)	36.	530071633	Kit-Carburetor Ass'y. (C1U-W13)	59.	530071486	Kit-Gasket (Incl. #3,27,33,44,49)
14.	545037401	Assy-Fan Housing	37.	530071718	Kit-Choke Lever			
15.	530027569	Handle-Starter	38.	530055680	Air Box			
16.	530069232	Kit-Rope	39.	530016429	Screw			
17.	530019182	Grommet-Ignition Module	40.	530047932	Air Filter Foam			
18.	530016386	Screw-(f/hsg to shrd)	41.	530055679	Air Filter Cover			
19.	530042085	Spring-Starter	42.	530015957	Screw			
20.	530016357	Screw	43.	530015158	Washer			
21.	530054137	Ignition Module	44.	530071486	Gasket-Carburetor(kit)			
22.	530012510	Assy-Crankcase (Incl. 23,24,25)	45.	530058756	Assy-Throttle Cable	545137501		Operator Manual
23.	530055728	Bearing-Outer	46.	952030249	Spark Plug(RCJ-6Y)			

✓ = NEW PART NUMBER FOR THIS IPL * = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
● = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.



WARNING

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

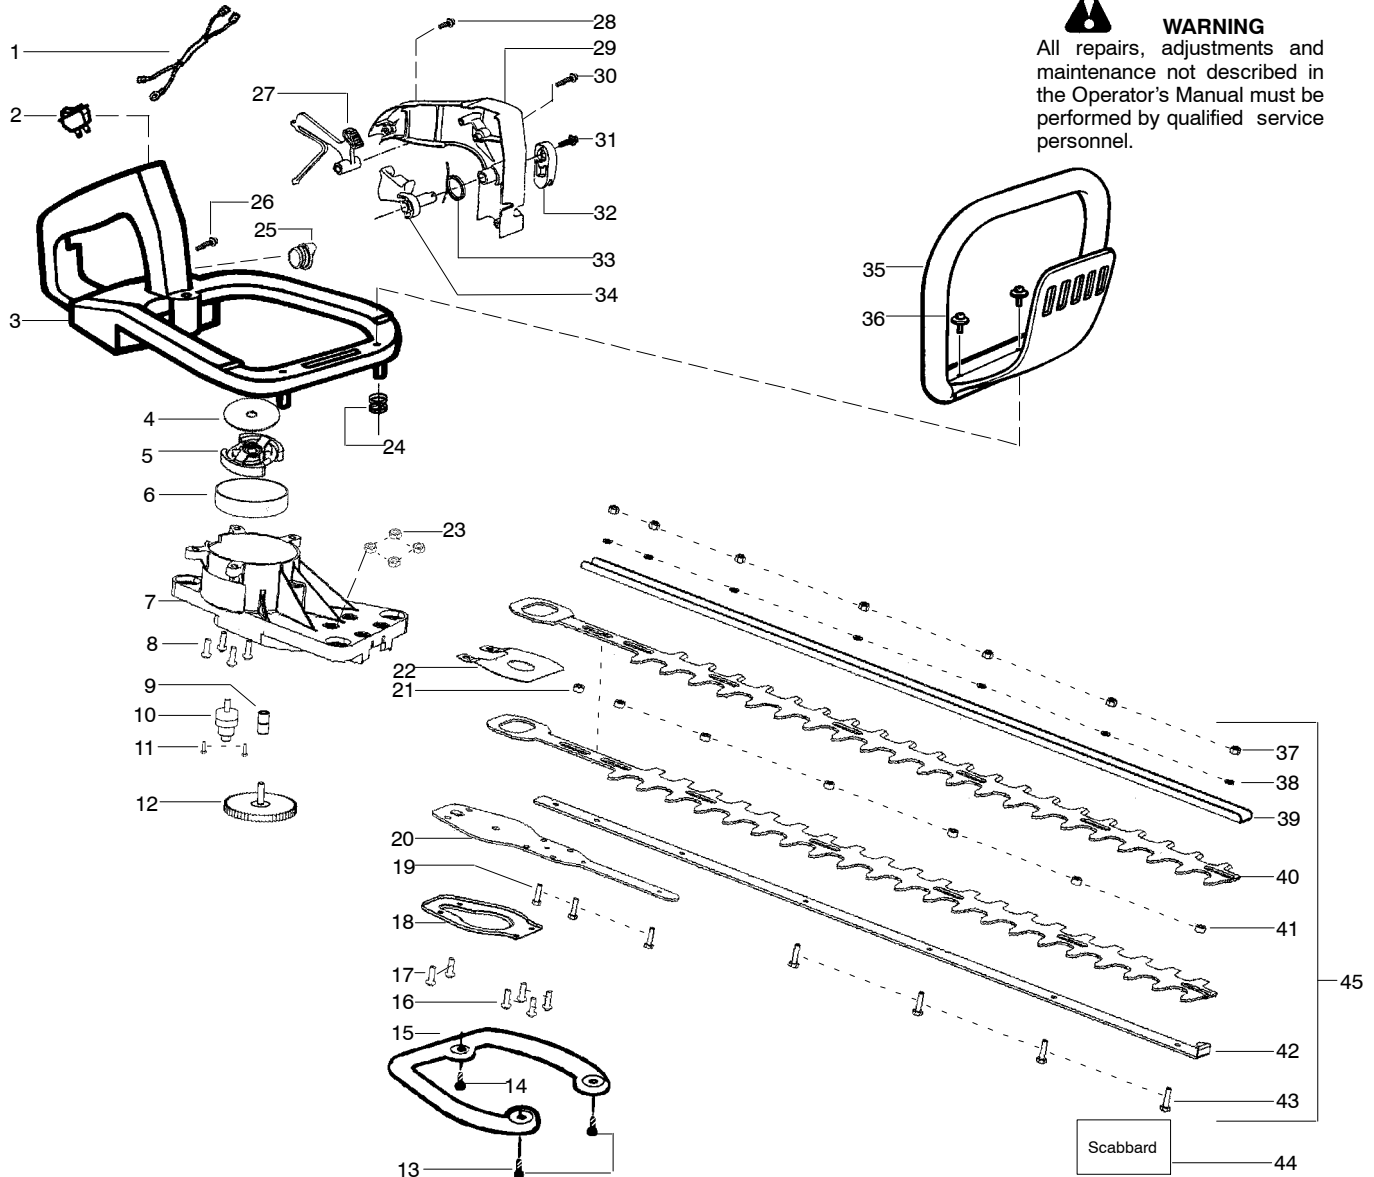

Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530054133	Assy-Leadwire/Switch (Incl.#2)	25.	530014871	Assy-Fuel Cap
2.	530029954	Switch-Ignition	26.	530016406	Screw
3.	530071656	Assy-Rear Handle & Tank	27.	530053900	Lockout-Throttle
4.	530015611	Washer-Clutch	28.	530015934	Screw
5.	530071803	Kit-Clutch Assy.	29.	545008001	Kit-Handle Cover
6.	530150583	Assy-Drum	30.	530015940	Screw
7.	530071994	Assy-Gear Box (incl.# 9,10,11,16,17)	31.	530015775	Screw
8.	530015886	Screw	32.	530057818	Lever-Trigger
9.	530016013	Bearing-Gear	33.	530036123	Spring-Trigger
10.	530096258	Assy-Pinion	34.	530053884	Trigger
11.	530015805	Screw	35.	530094992	Handle-Front
12.	530096338	Assy-Gear	36.	530015955	Screw
13.	530015934	Screw	37.	530016478	Nut (Qty. 7)
14.	530015849	Screw	38.	545053101	Lockwasher (Qty. 7)
15.	530036046	Plate-Isolator	39.	530044954	Bar-Top
16.	530016472	Screw	40.	530096334	Blade-reciprocating (Qty. 2)
17.	530015940	Screw	41.	530150580	Spacer (Qty. 6)
18.	530029916	Cover-Gear Box Plate	42.	530044953	Bar-Bottom
19.	530016476	Screw	43.	530016477	Screw (Qty. 4)
20.	530150582	Plate-Bearing	44.	530031193	Scabbard-Blade
21.	545047301	Spacer (Qty. 1)	45.	545006010	Kit-Blade Assy. (Incl. 19,20,21,37,38,39,40,41,42,43)
22.	545047401	Spacer-Plate			
23.	545009101	Nut			
24.	530029946	Spring			

✓ = NEW PART NUMBER FOR THIS IPL

★ = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)